
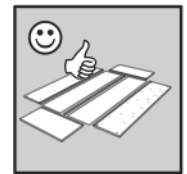
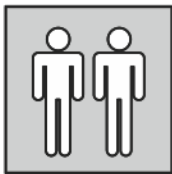


Artikel.-Nr.:

4008-BH P1

Montageanleitung.-Nr.:

MA1-00835

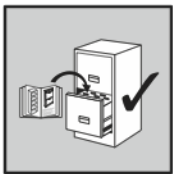














L = 20 mm




Das Ersatzteil-Anforderungsformular finden Sie auf
The replacement parts requisition form you find on
<https://www.maeusbacher.de/ersatzteile/>

Colli 1/2


BT1-00926

B01-239		B02-100		B02-107	
1x	SW 3	6x	6x55	10x	8x70
B10-105		B10-110		B10-115	
8x		8x		16x	M6 12x10
B10-95		B05-273		B10-101	
4x	6,3x19	1x		8x	M6x6 SW3
B05-130		B10-85		B10-90	
2x		2x		12x	
B10-80					
2x					

Z99-00693 2x
760 x 26

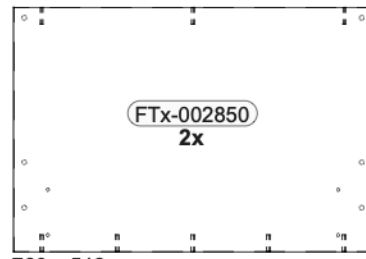


760 x 518

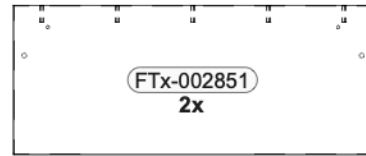


760 x 316




Colli 2/2

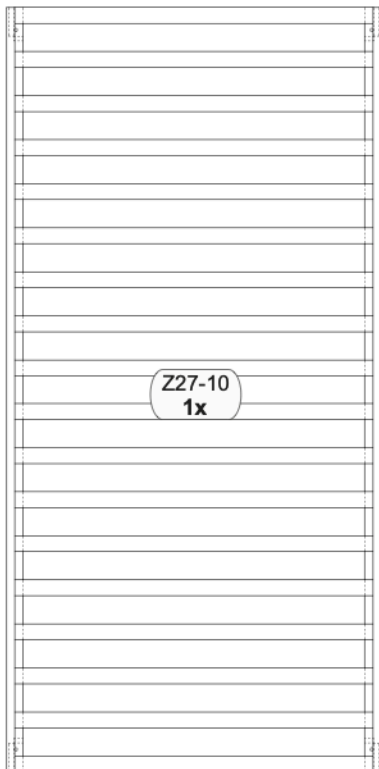

1388 x 680

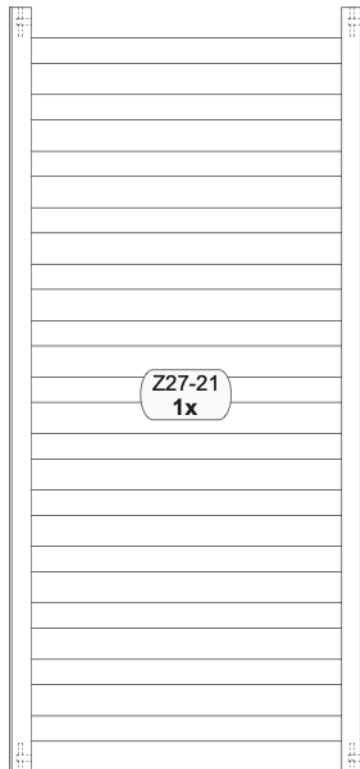


1388 x 642


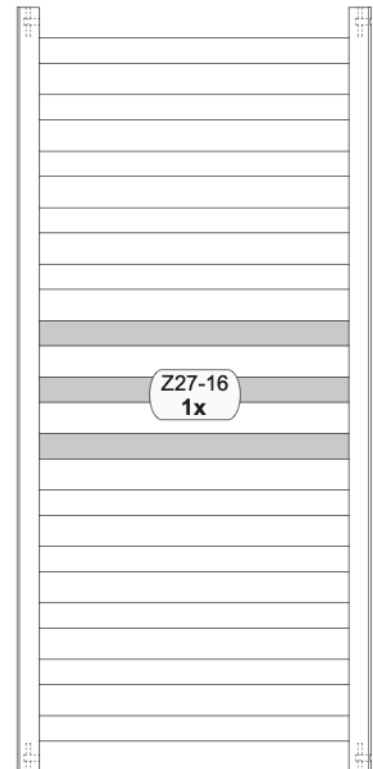


1388 x 642






1

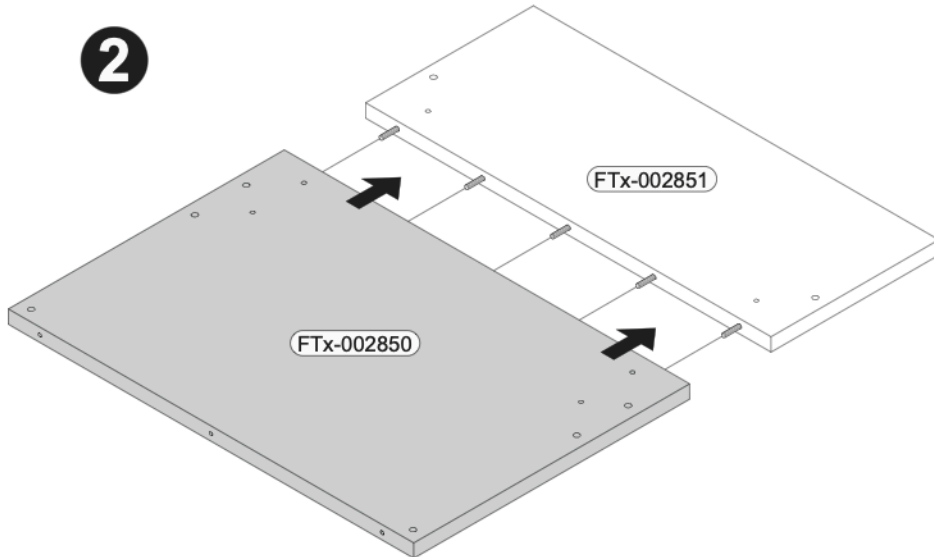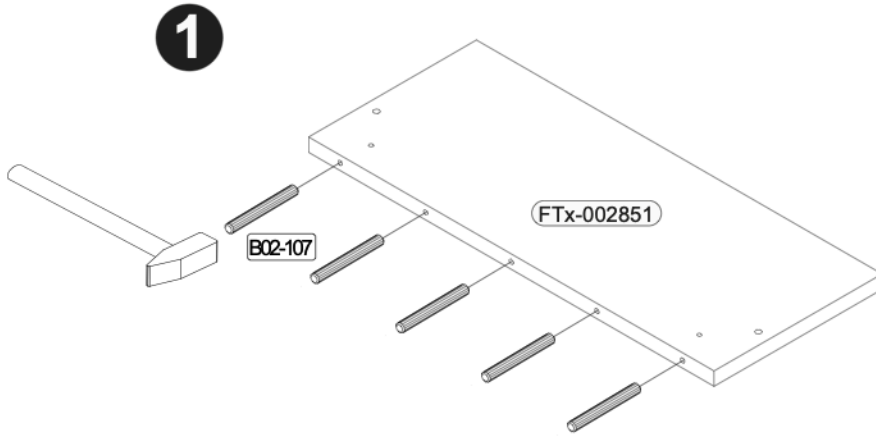

2x




2


		B10-115		B10-90		B10-110	
		16x	M6 12x10	12x		8x	

2x

1

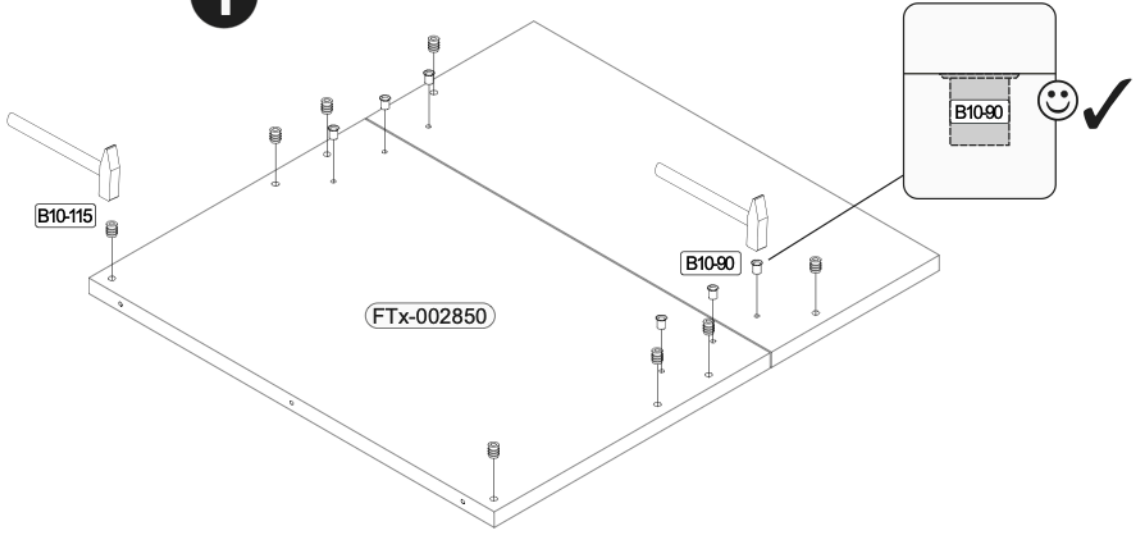


2


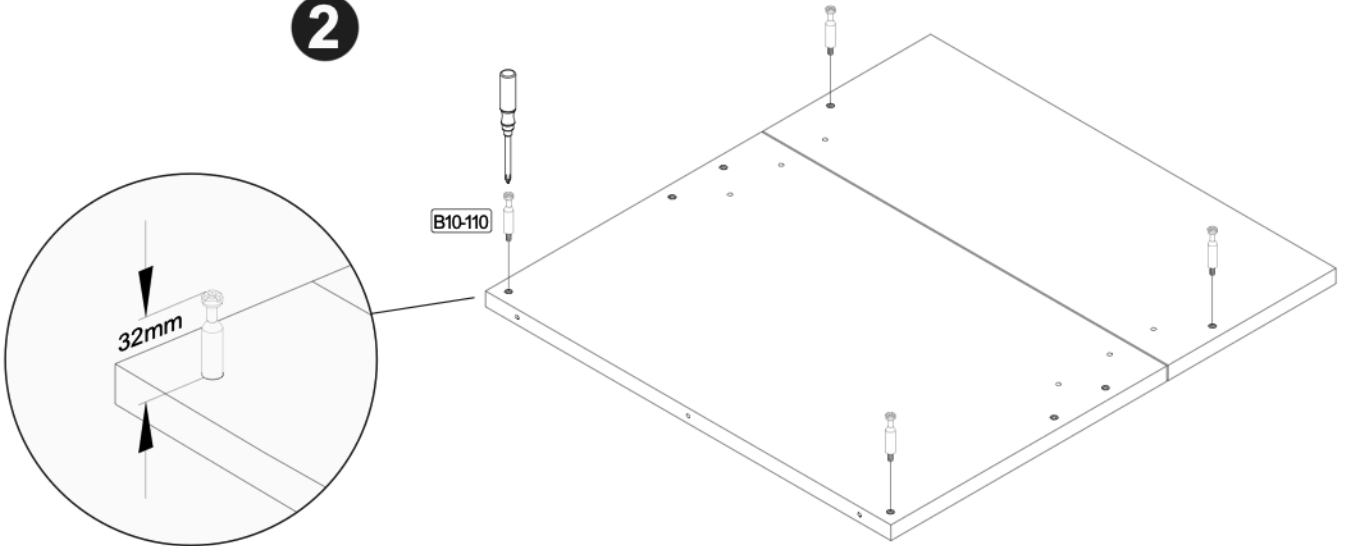


3



	B10-95		B10-105		B10-80		B10-85	
	4x	6,3x19	8x		2x		2x	

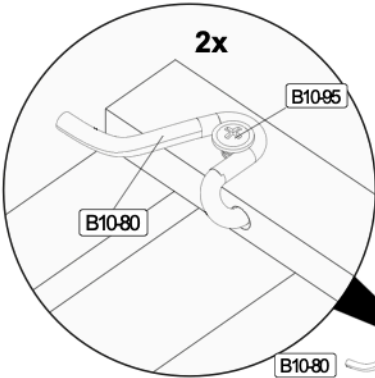


1

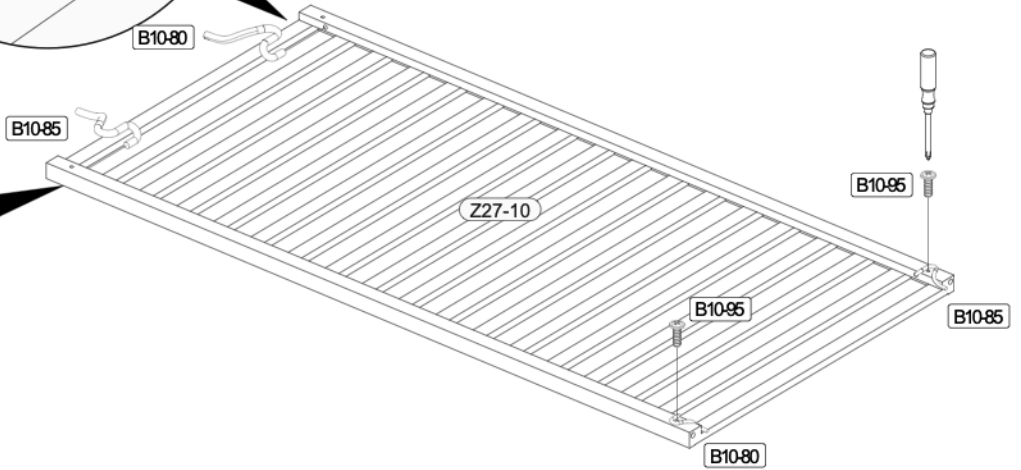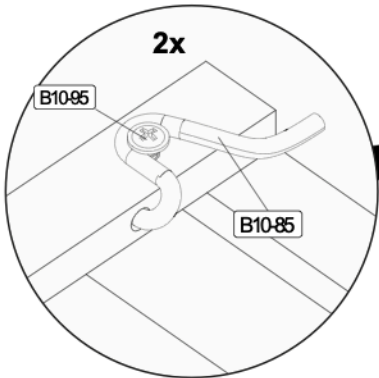

2


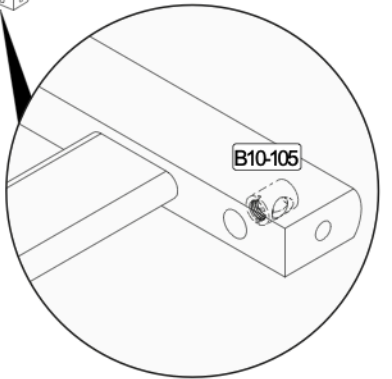
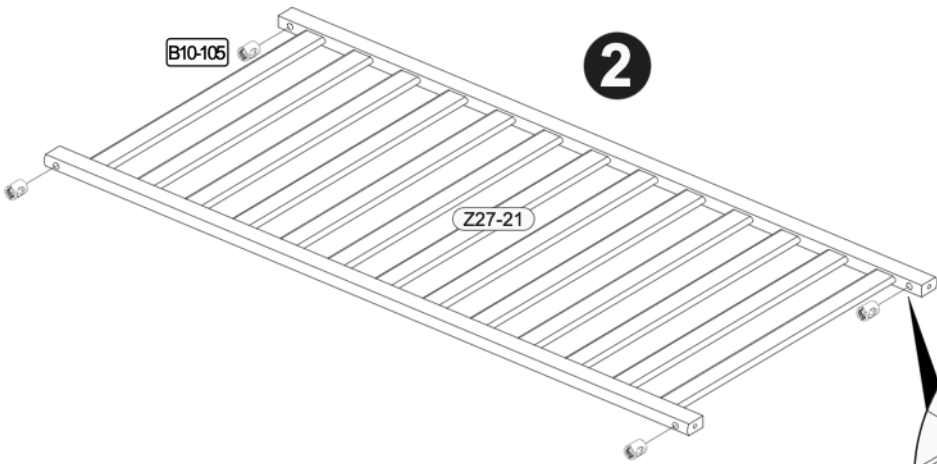


3

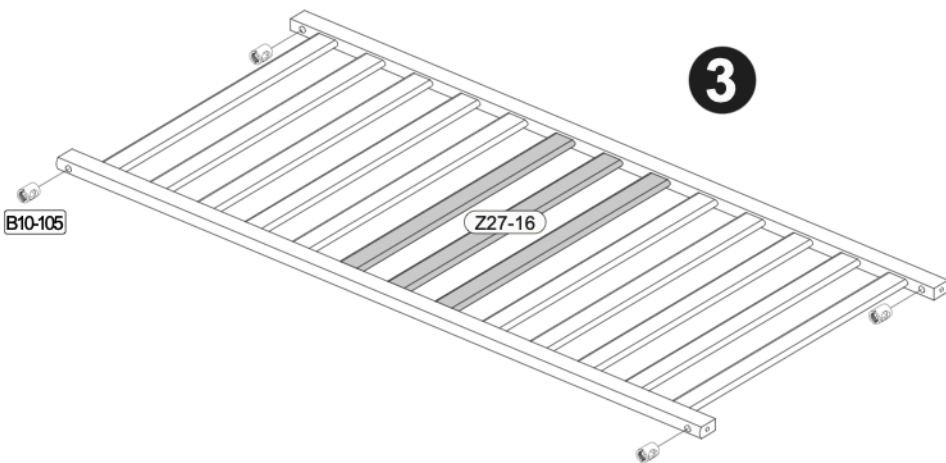




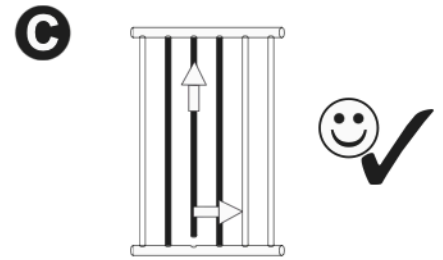
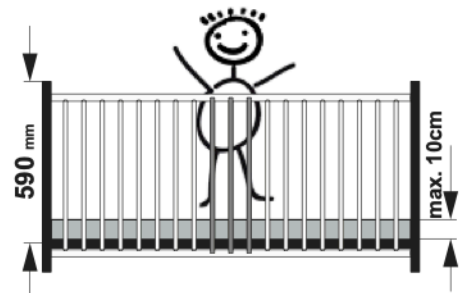
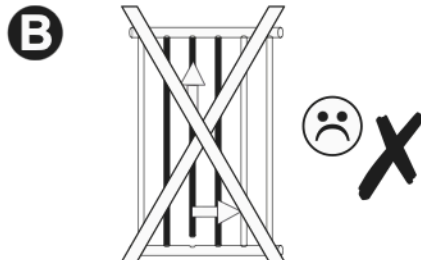
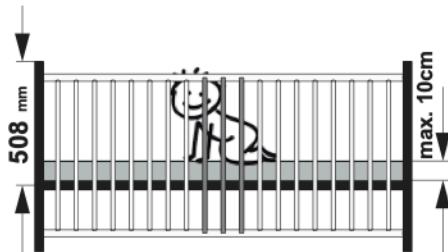
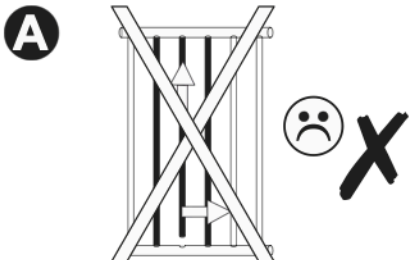
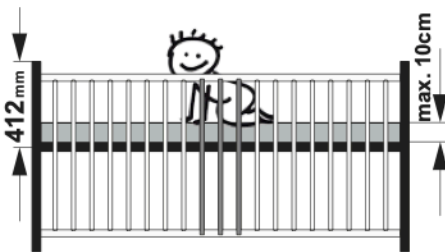
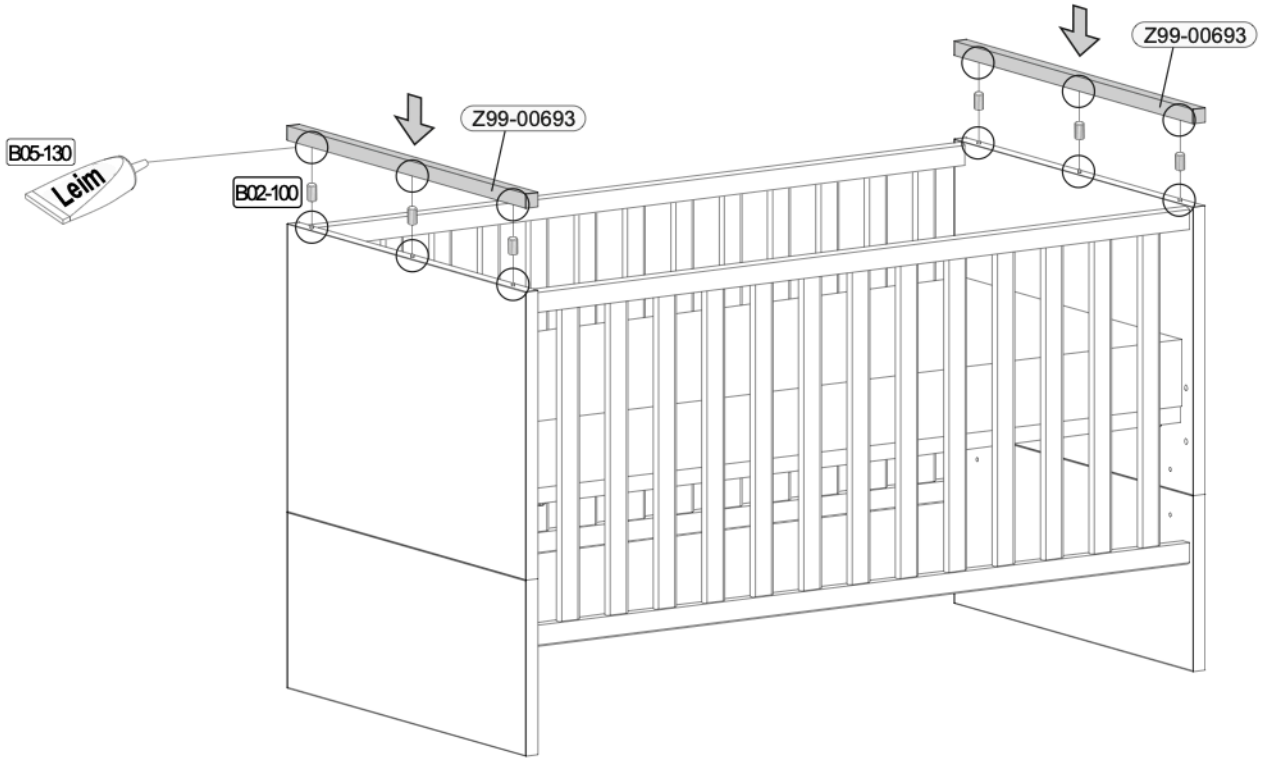
4

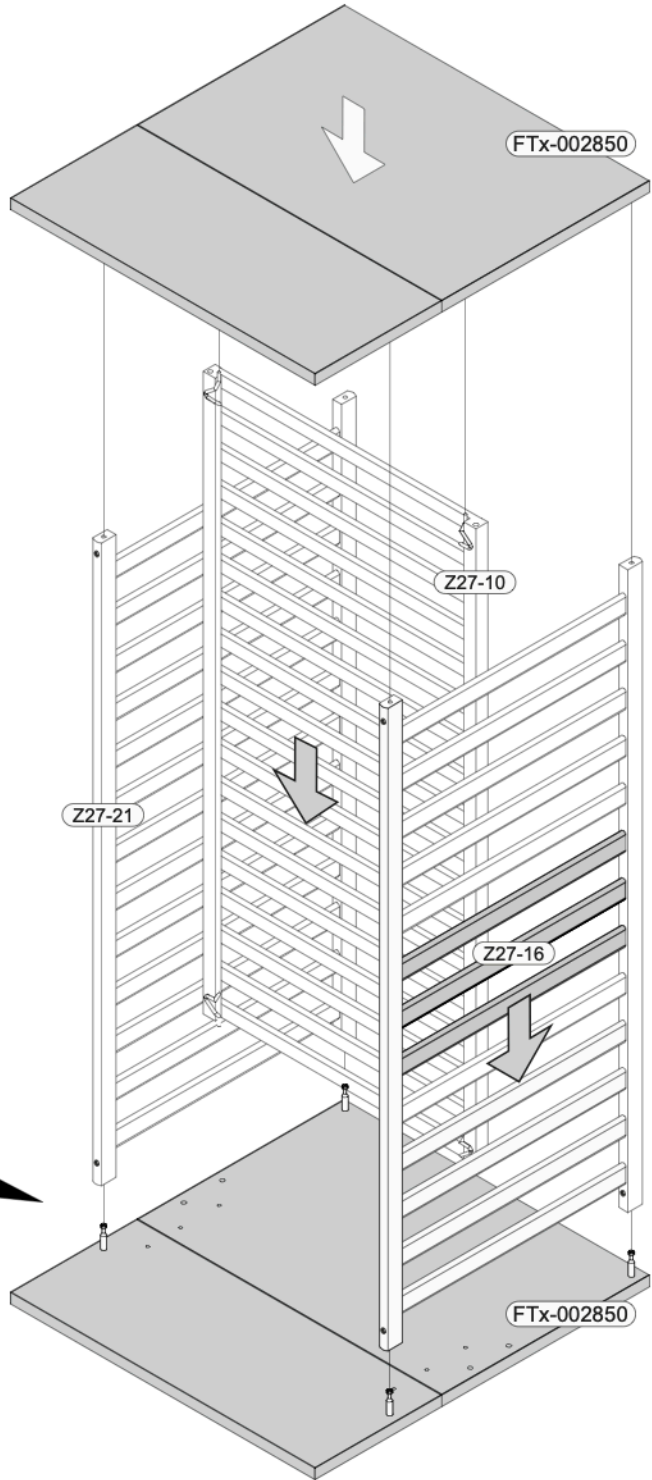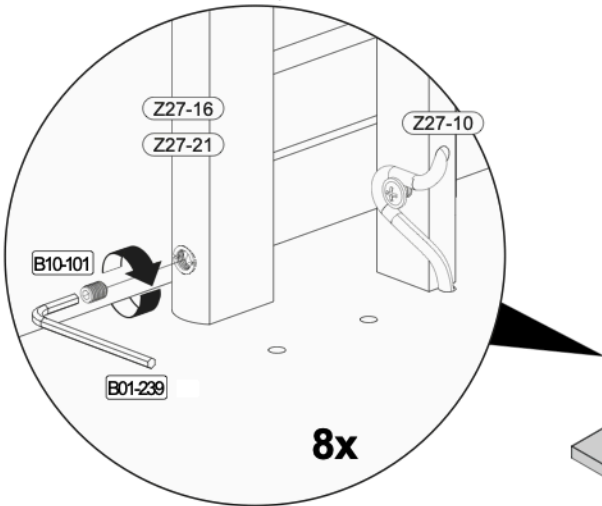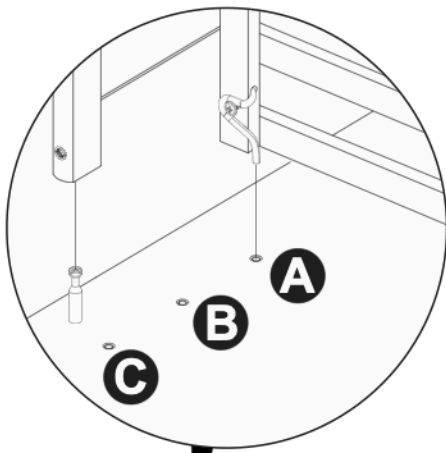	B10-101		B01-239	
8x		M6x6 SW3	1x	SW 3




5

	B05-130		B02-100	
	2x		6x	6x55



6

	B05-273	
	1x	

