


3001205


Adelaide Steel Cabinet w.
Rippled Glass Door
Black-Double Door



Ø5*12mm


① x34

spare:2



Ø6*30mm


② x2



Ø12*0.8mm

③ x2


spare:2



Ø4*6mm

④ x2


spare:2




Ø9*0.8mm

⑤ x2

spare:2




⑥ x2




⑦ x4

spare:2




⑧ x4



Ø8*38mm

⑨ x2



Ø4*38mm

⑩ x2

(1) - Attach (A) to (E) as below shown.




Make sure the holes are
nearest to outside otherwise
will affect door assembling.

The plastic foot cover face down



(2) - Attach ⑧ to (E) as below shown.

(3) - Attach (B) to (A) & (E) as below shown.



(4) - Attach (F) to (A) & (B) & (E) as below shown.

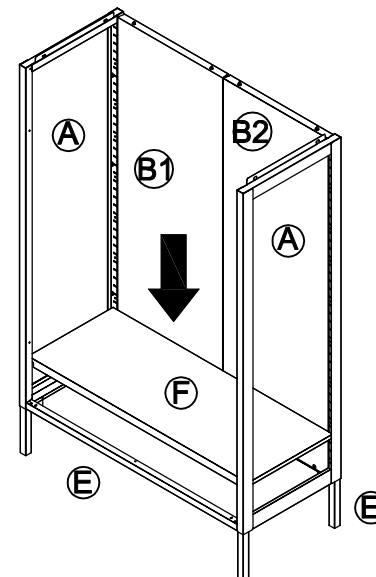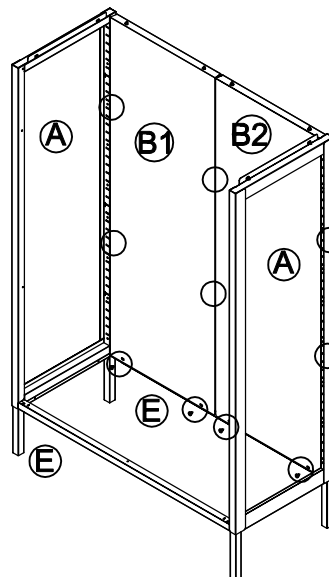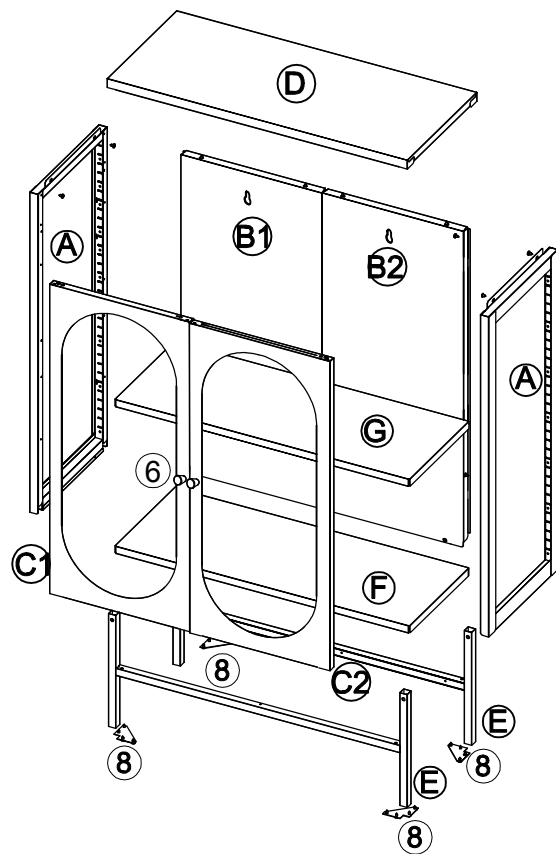






(5) - Attach (D) to (A) as below shown.

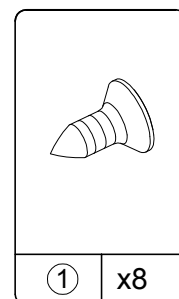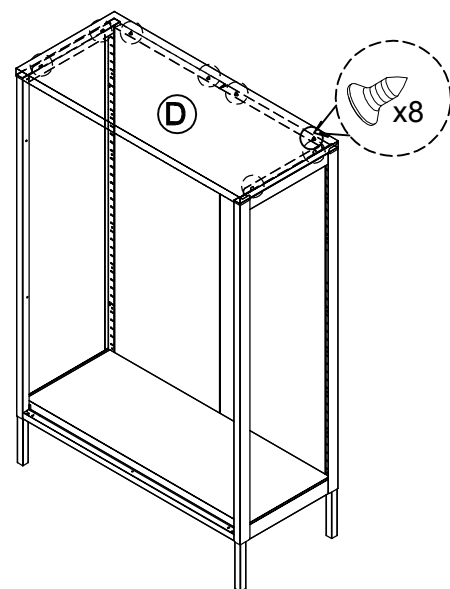





(6) - Attach (G) to pre-assembled unit as below shown.

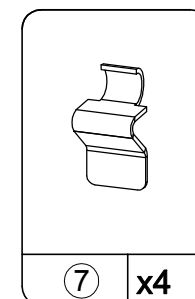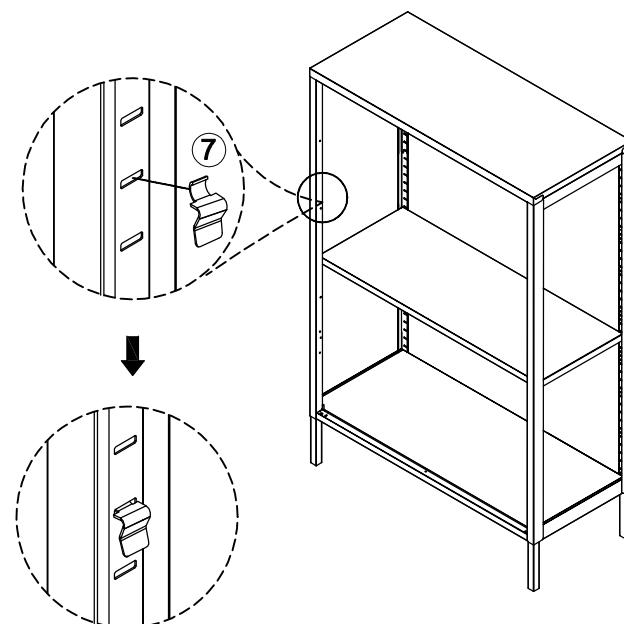


(7) - Attach (6) to (C) as below shown.

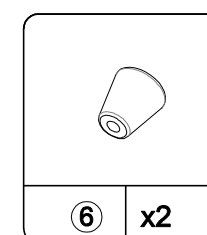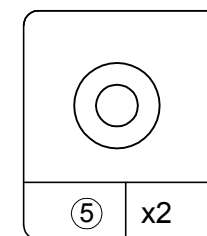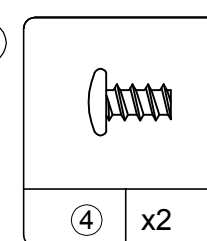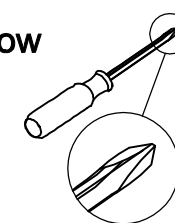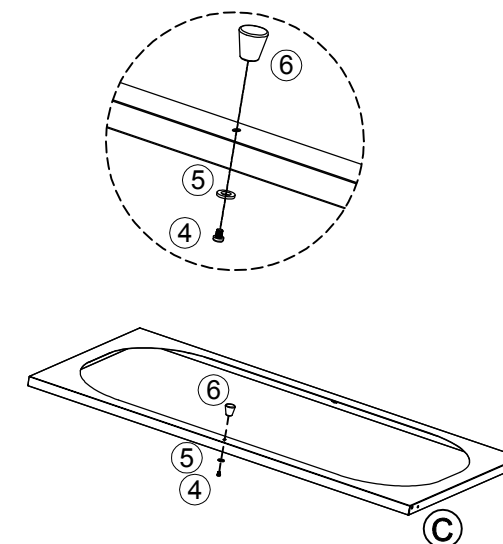




(8) - Attach (2) & (3) to pre-assembled unit as below shown.

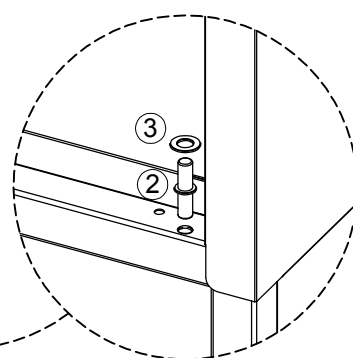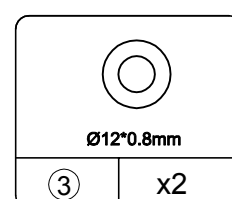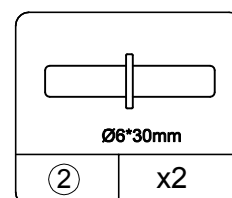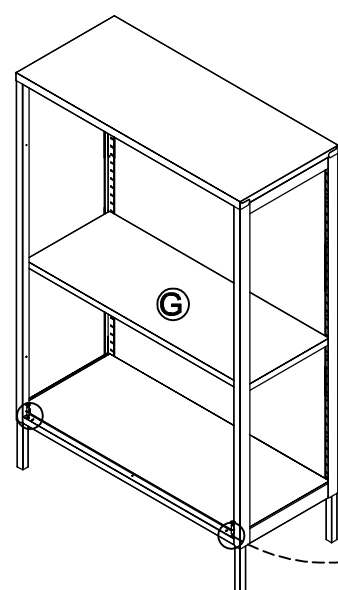

(9) - Attach (C) to pre-assembled unit as below shown.

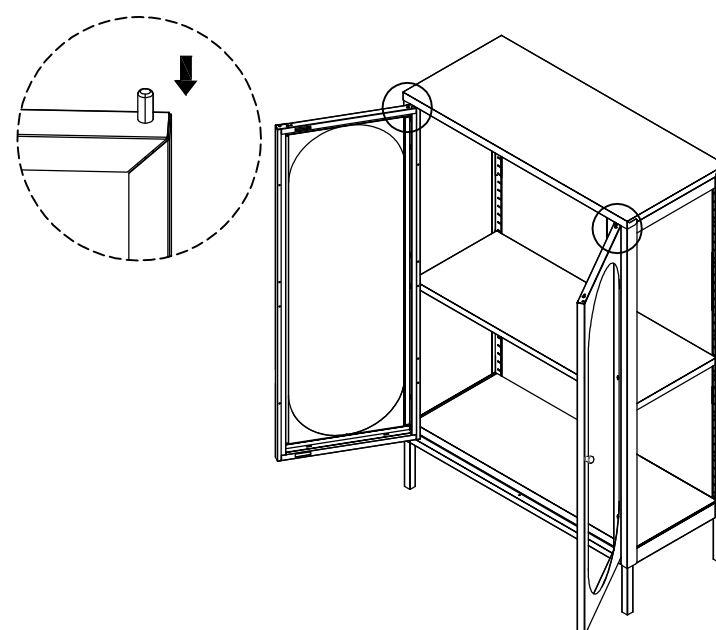

(10)

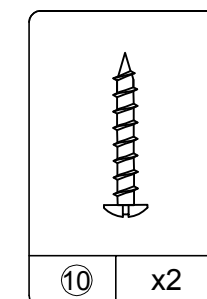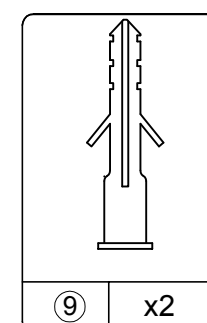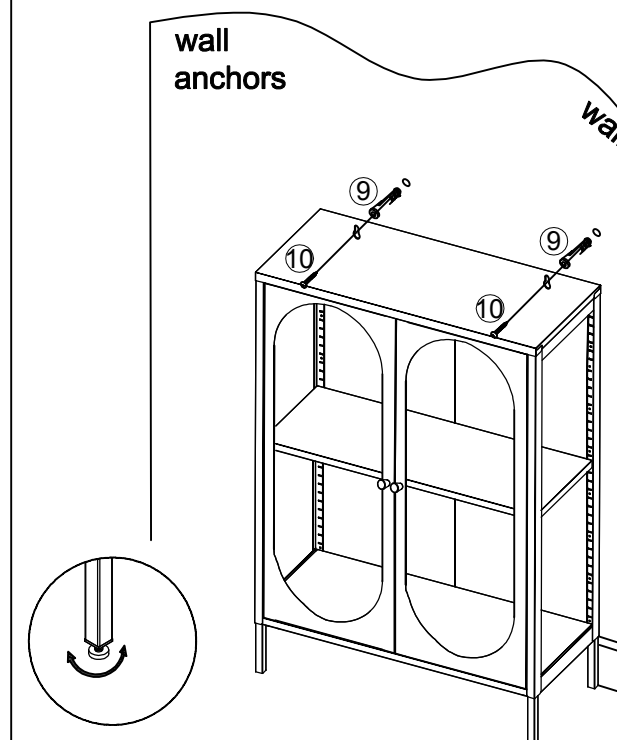

Gaps may appear between the top of the doors and the frame if the item is not on level ground; use the plastic foot cover to level.