
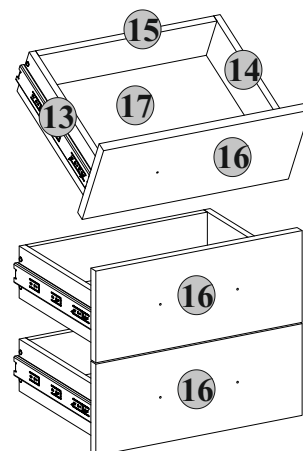
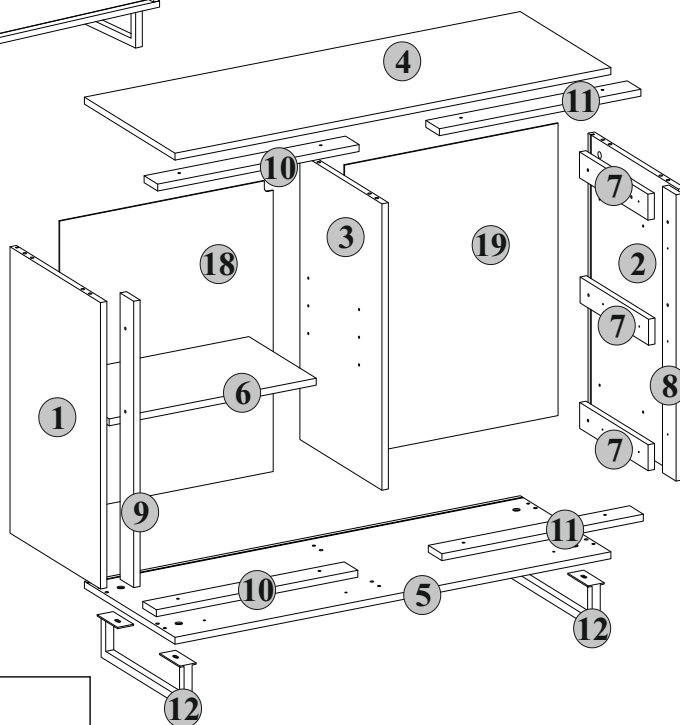
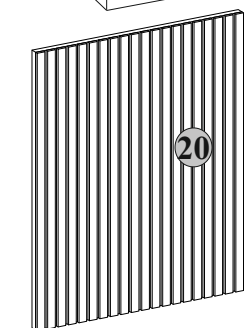
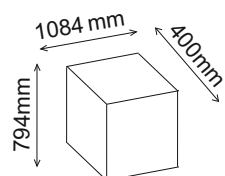
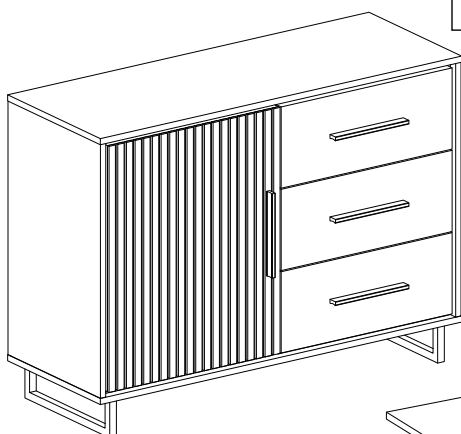



“3410”

versionsnummer: 02.08.2023


Naturholz kann sich werkstoffbedingt verziehen. Durch das Montieren ziehen sich Teile wieder plan.




B5

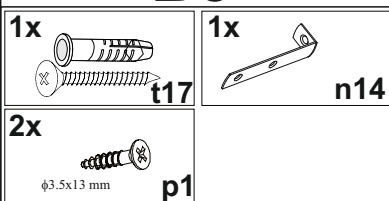


B1

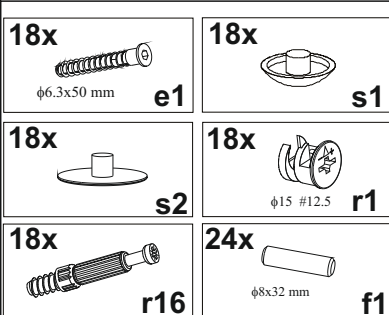



B2

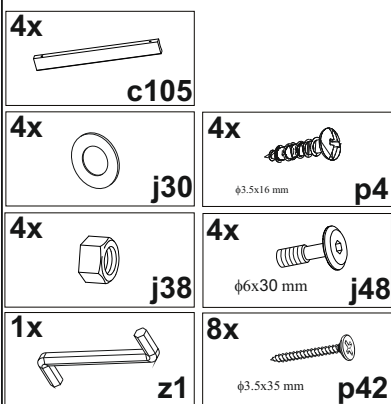










B3

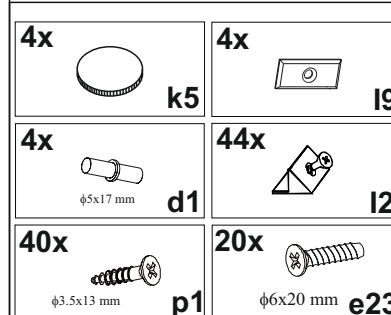

B4


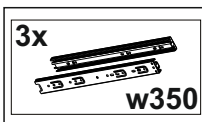
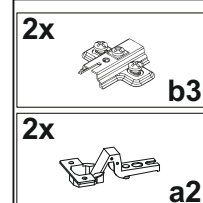


1

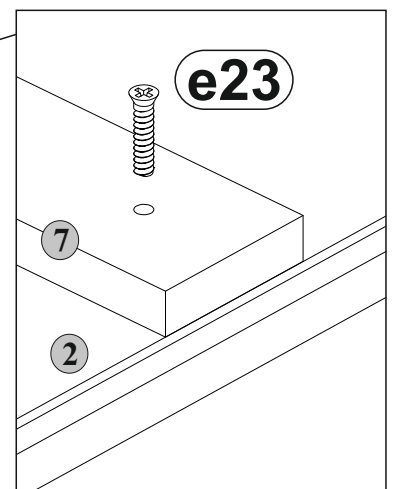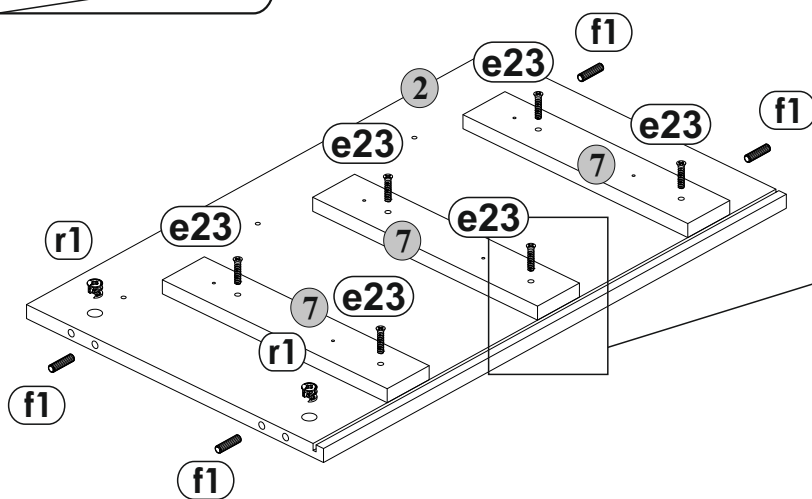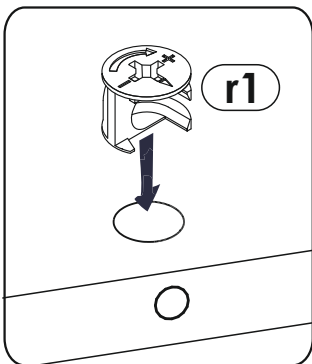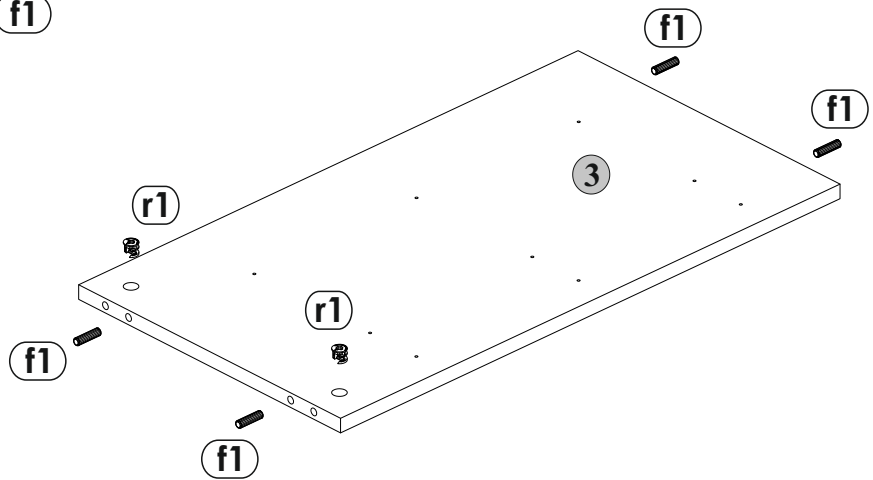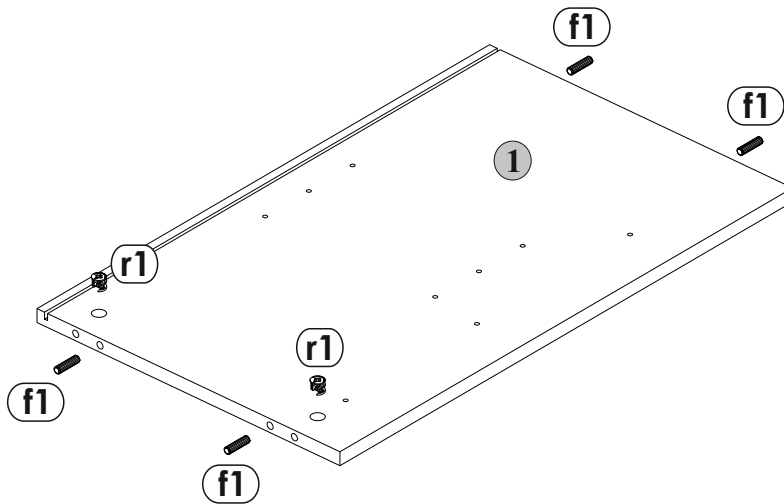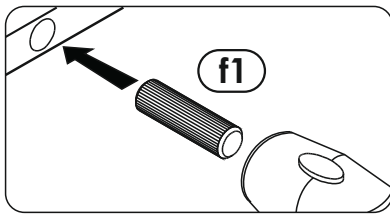


2


3

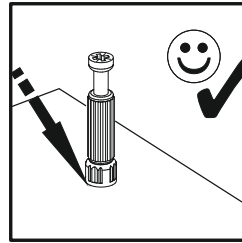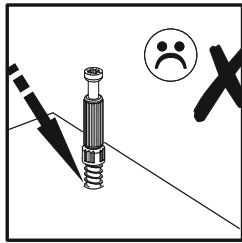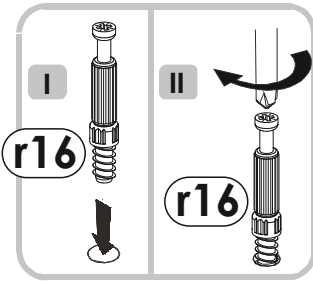

6x
r16

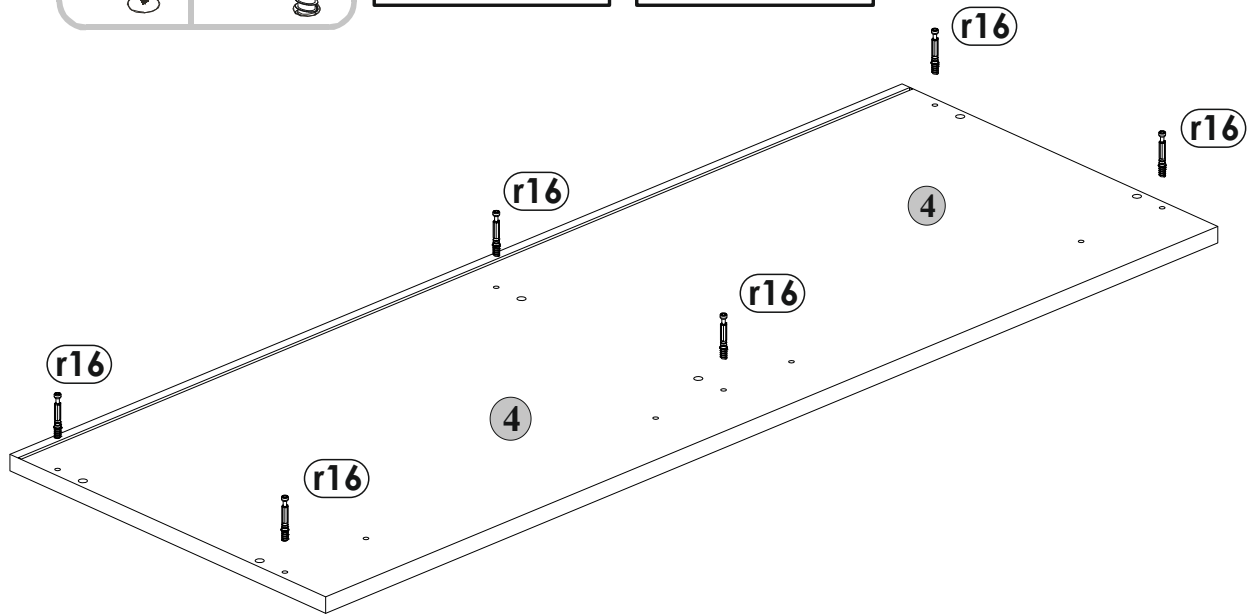

4

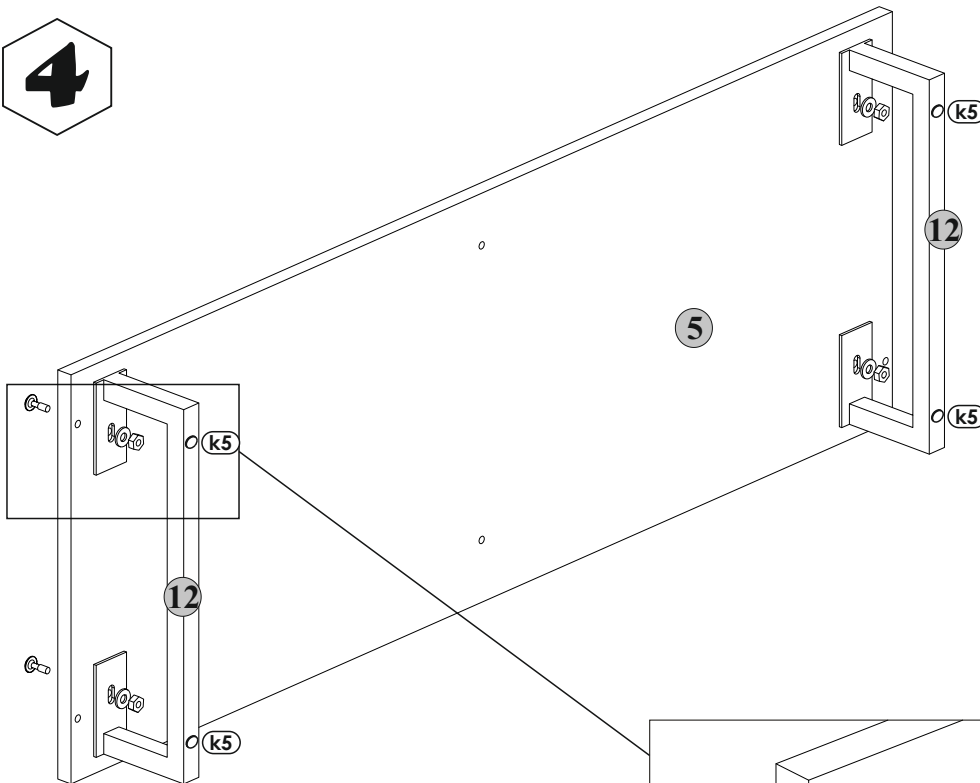


4x
j48

4x
j30

4x
j38

4x
k5

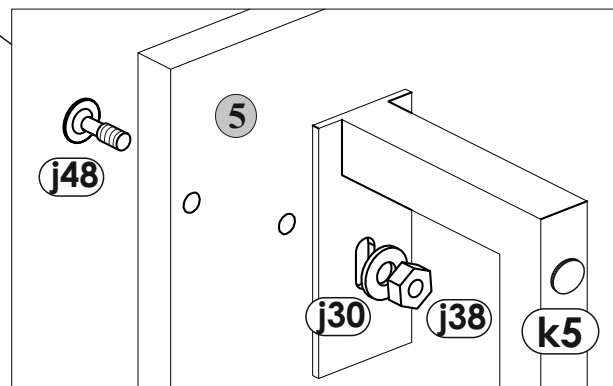


3

5

2x
b3




4x
e2
 $\phi 6.3 \times 13 \text{ mm}$

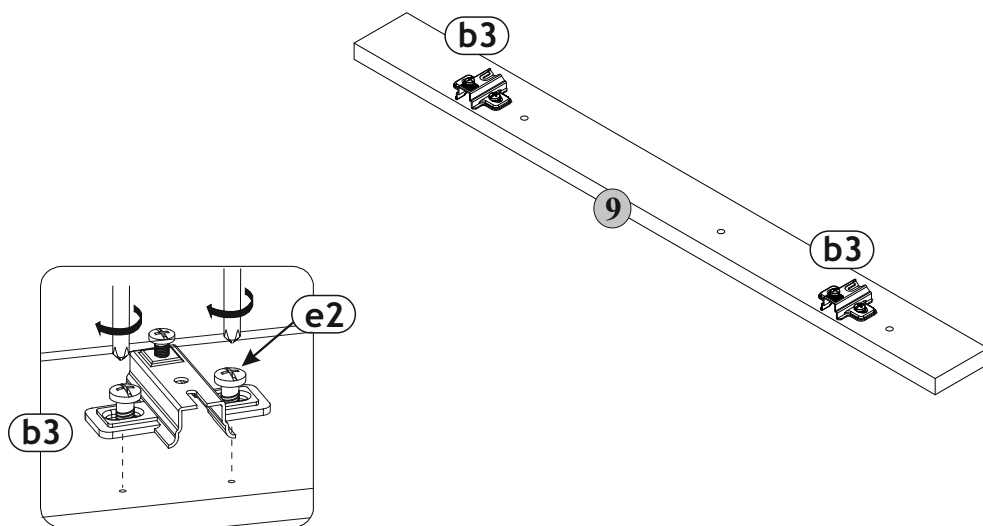

6


2x
a2

4x
p1
 $\phi 3.5 \times 16 \text{ mm}$

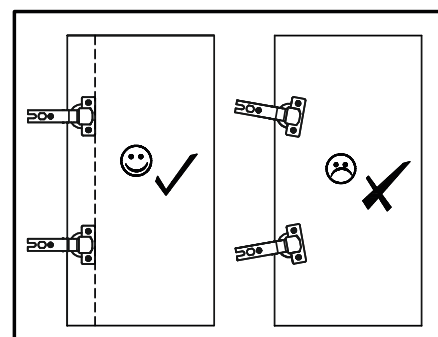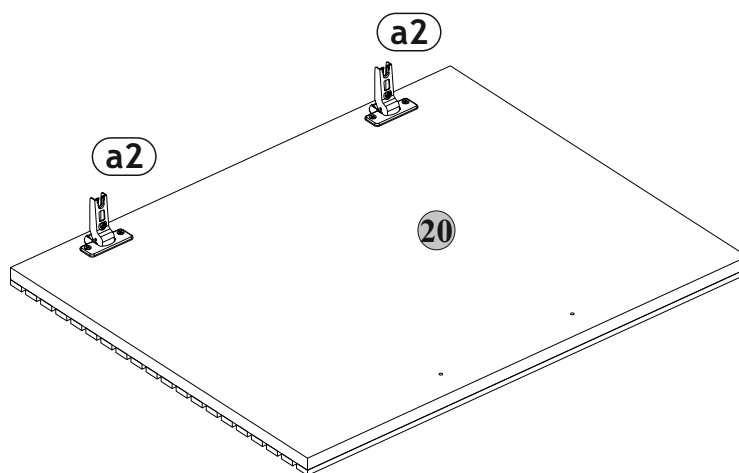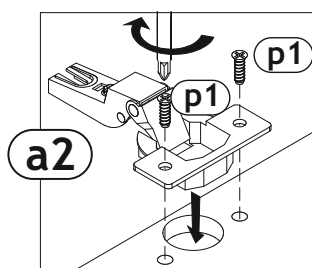


4

7


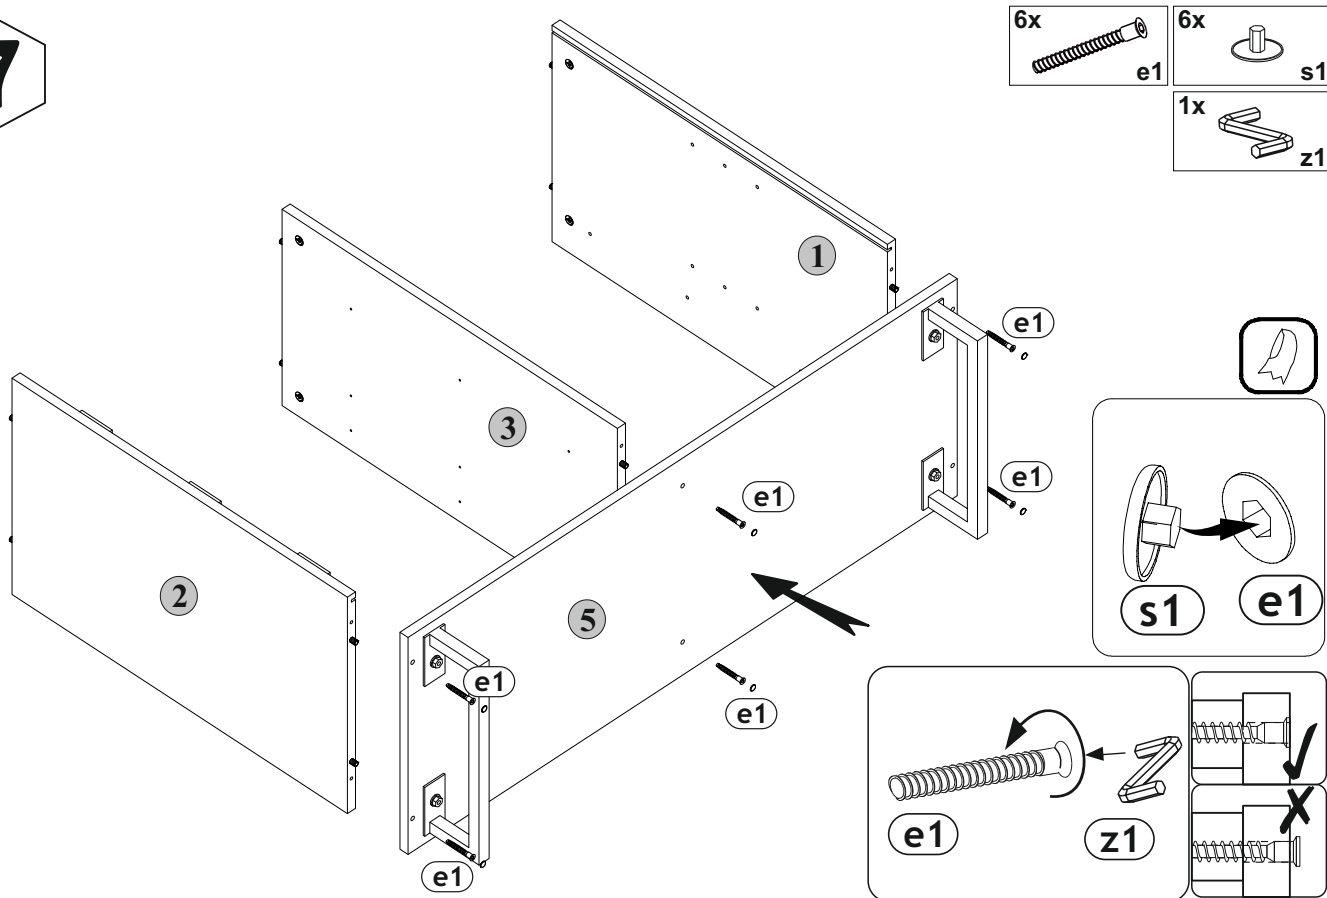


8




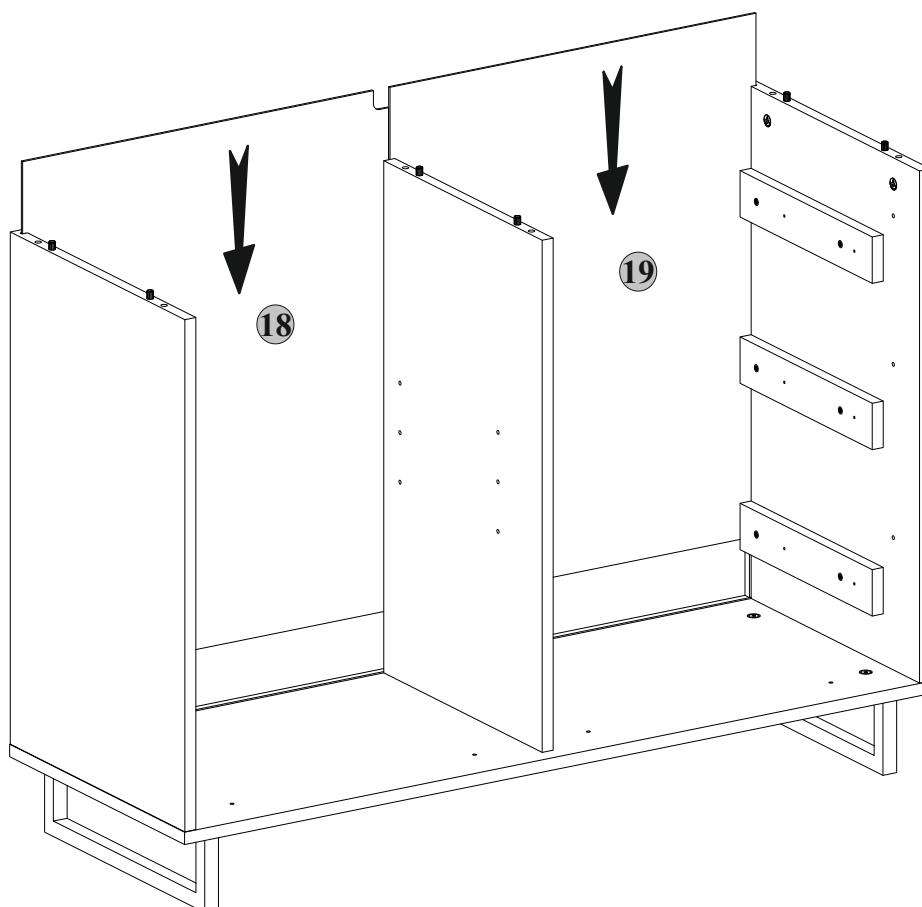


5




9

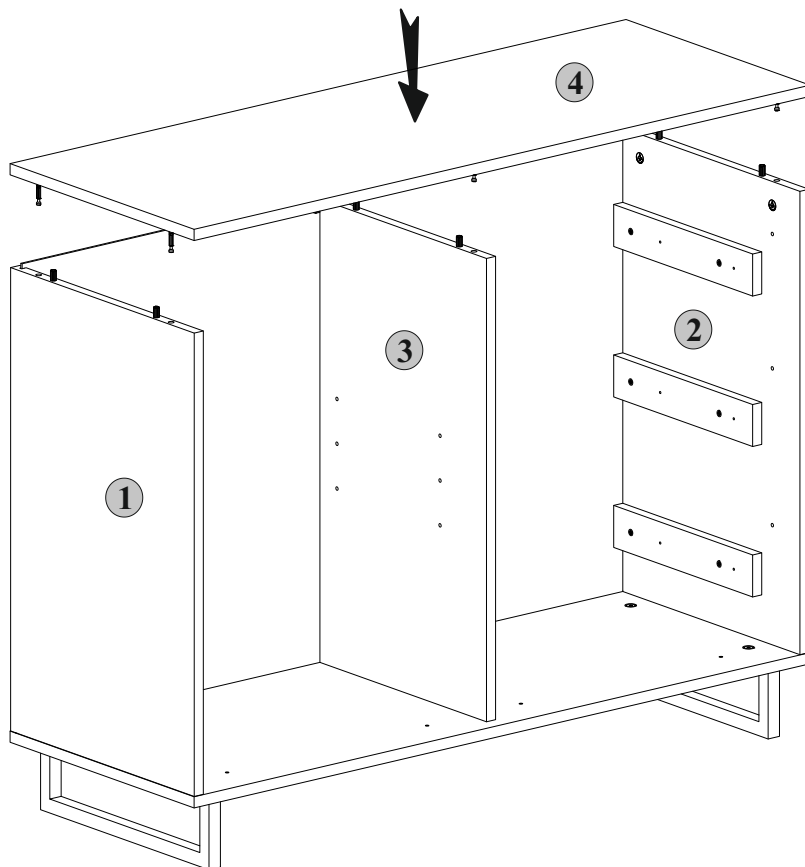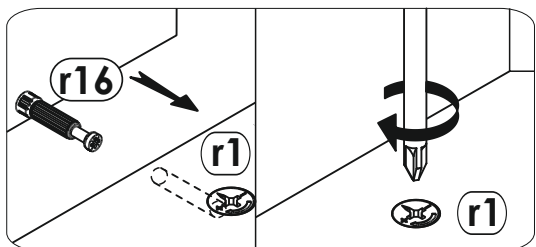

10

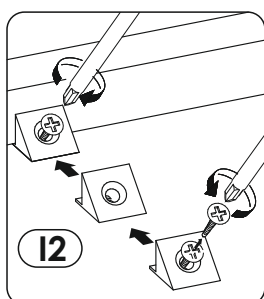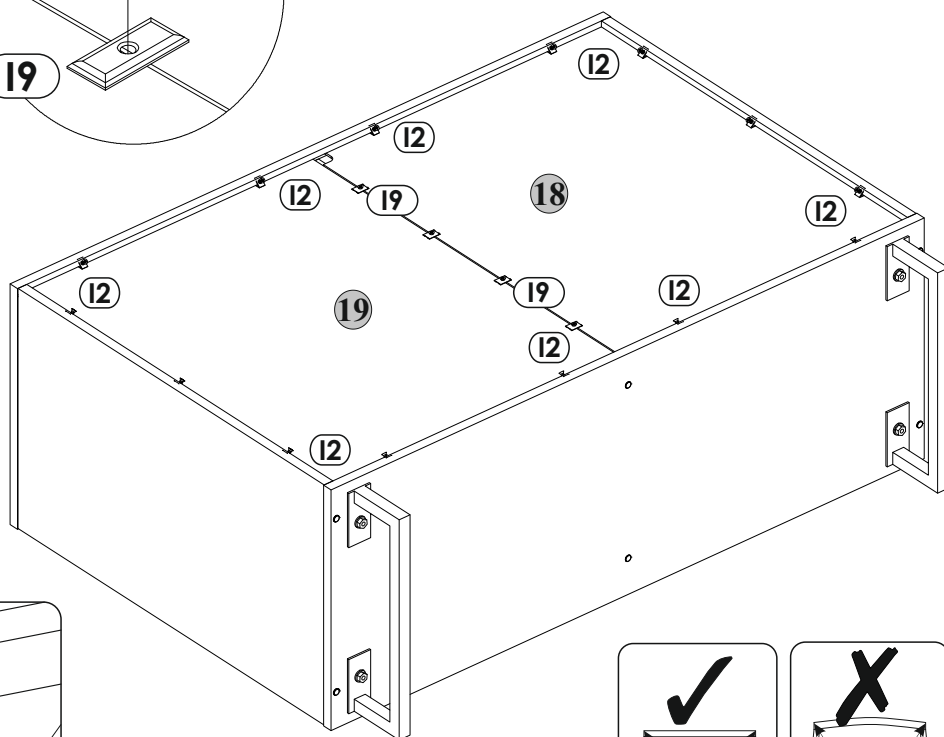
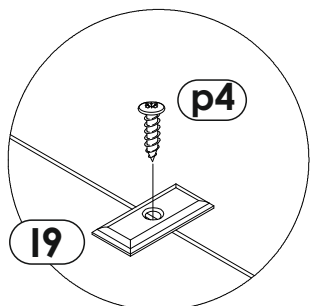


6

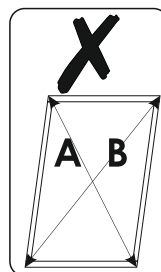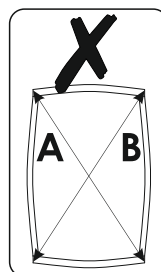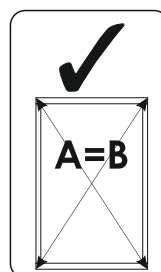



11

6x
e23
φ6x20 mm

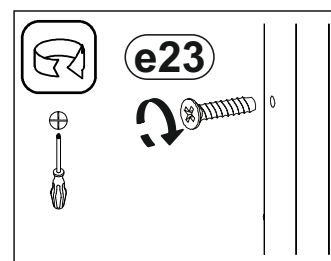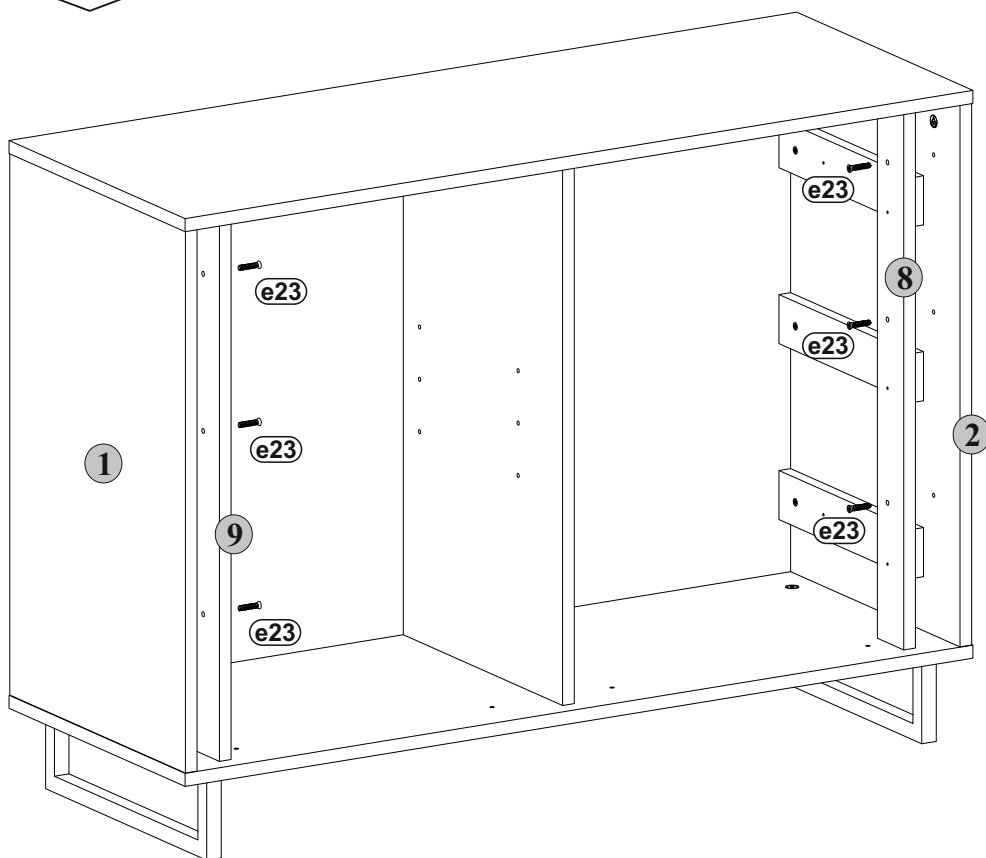

















12

8x
e23
φ6x20 mm

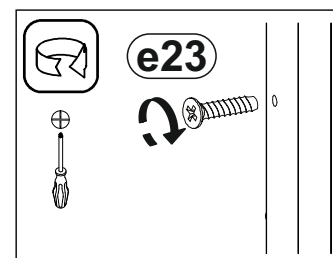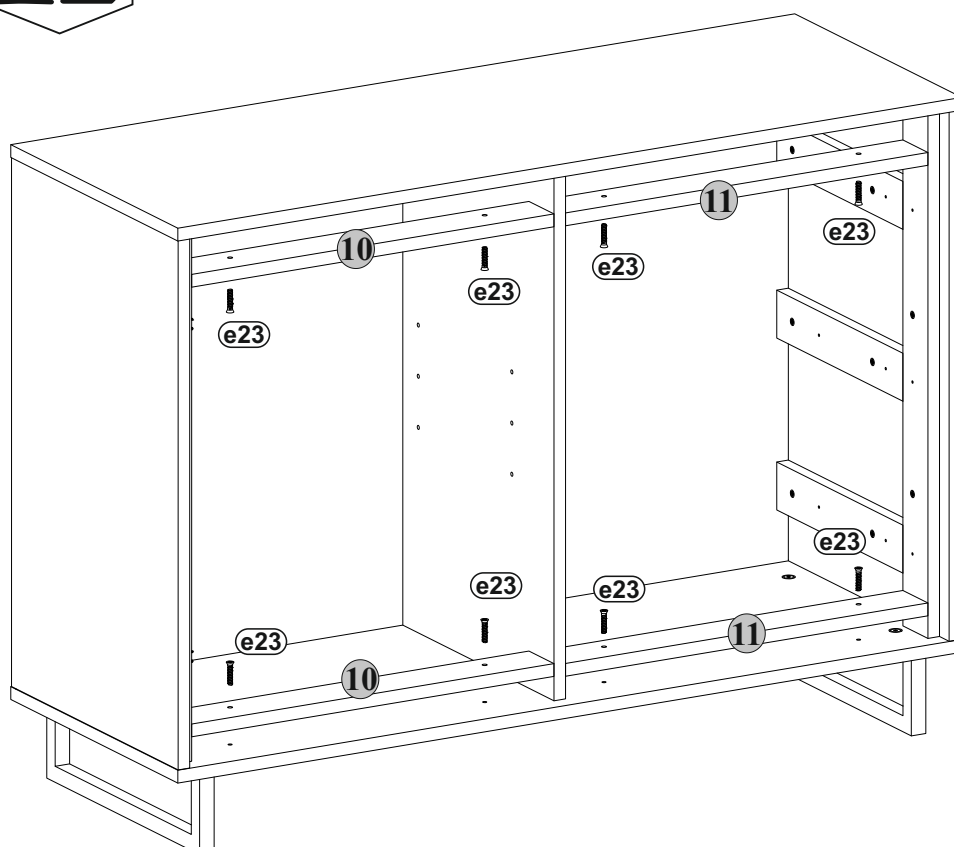


7

13

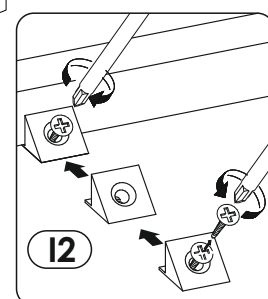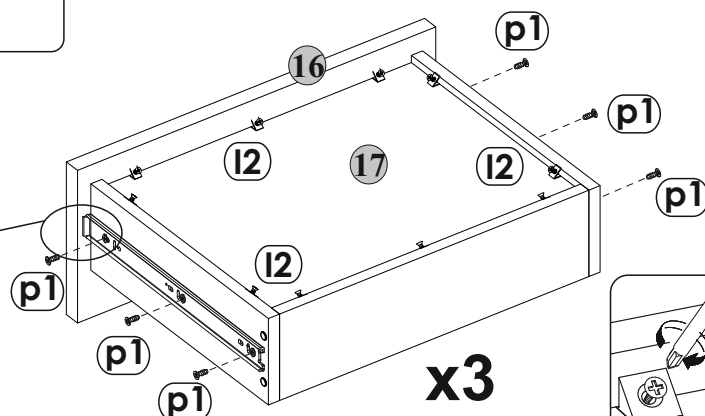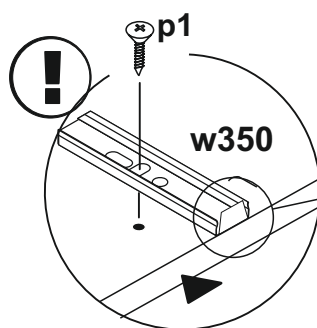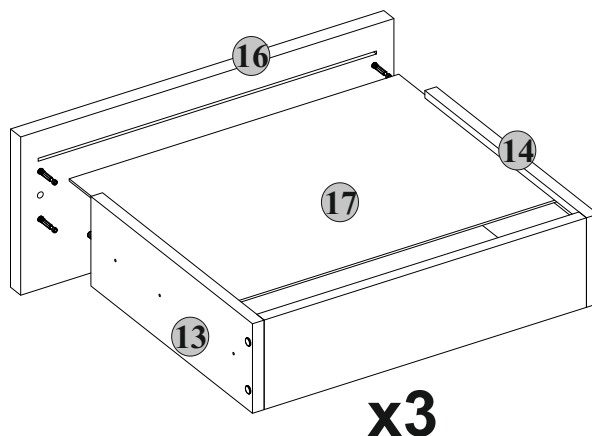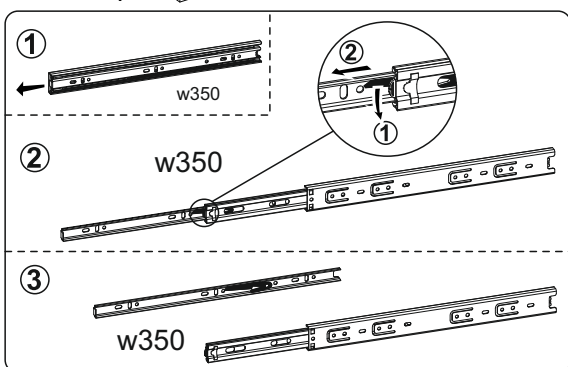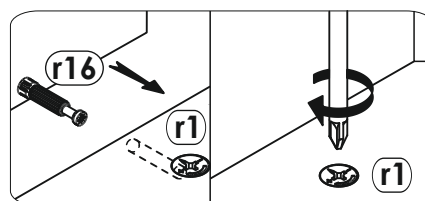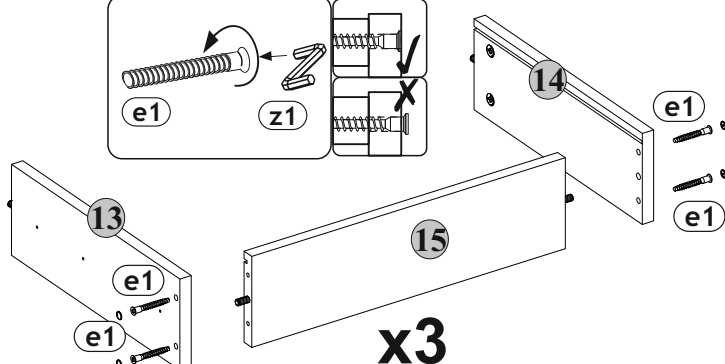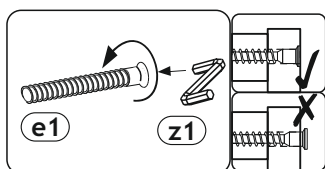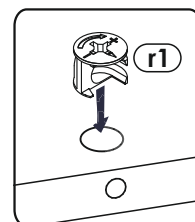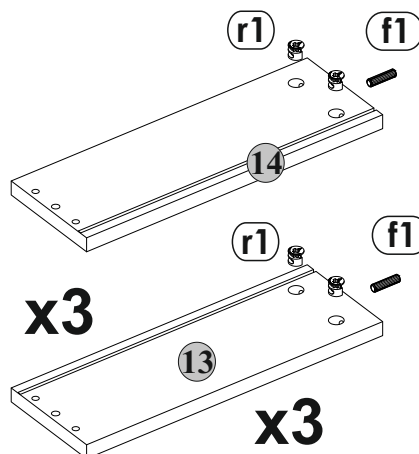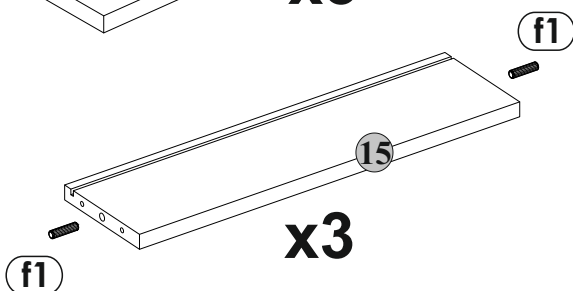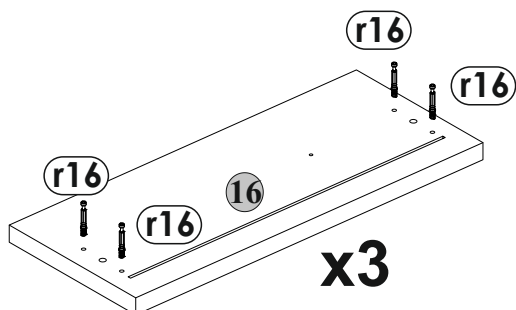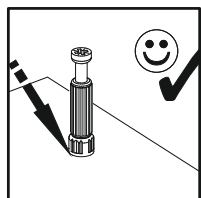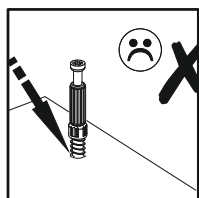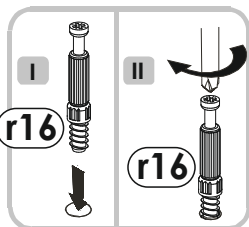

8

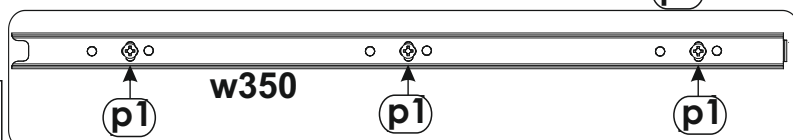

I4

4x
p42

2x
c105










1x
t17

1x
n14

2x
p1
φ3.5x16 mm


3x
w350

18x
p1
φ3.5x13 mm

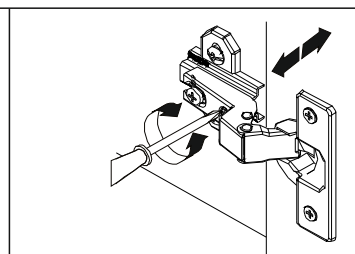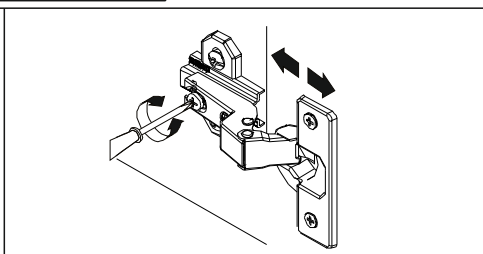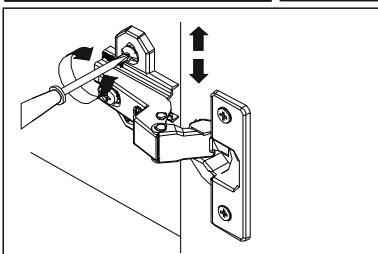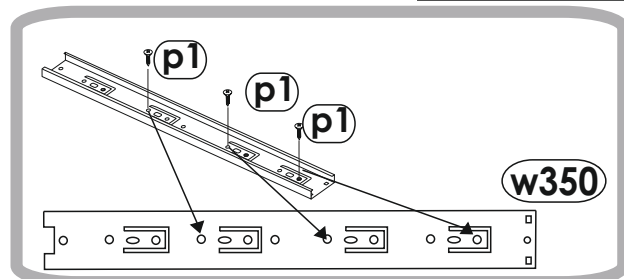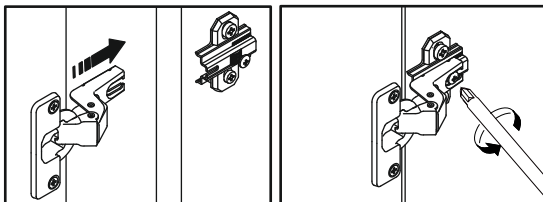
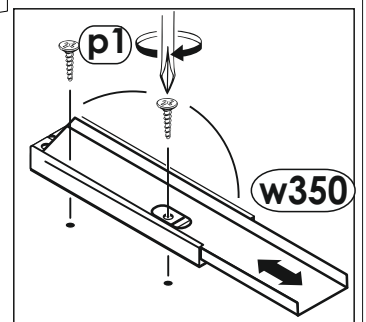
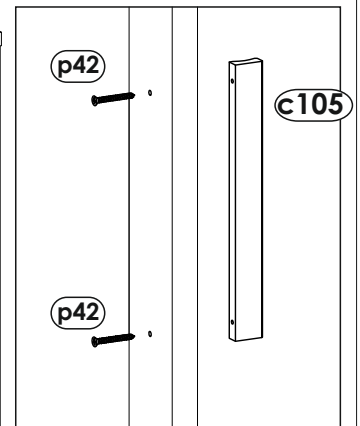
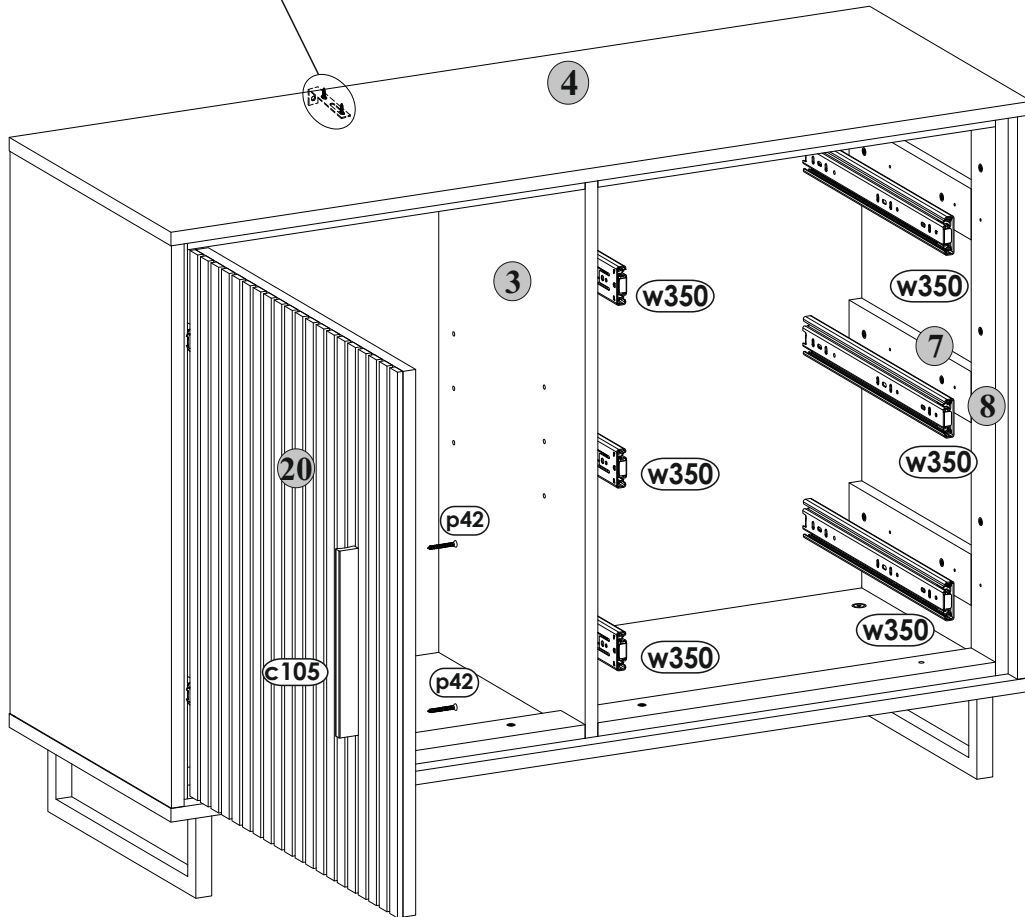
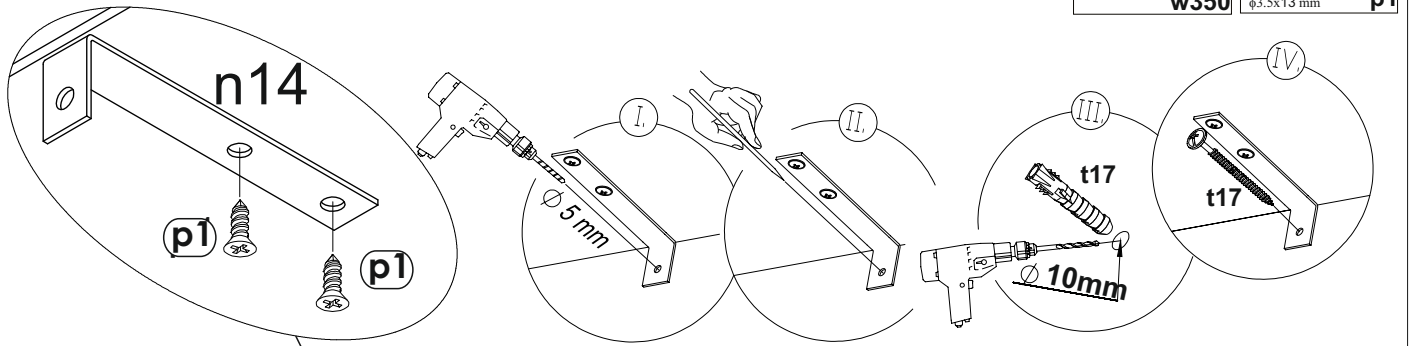


9

15

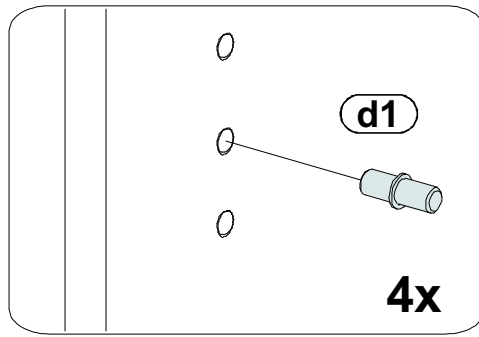

4x  φ5x17 mm d1	18x  s2
4x  p42	2x  c105

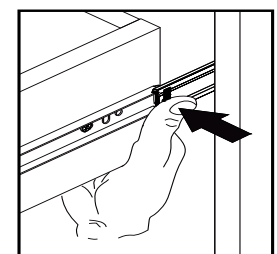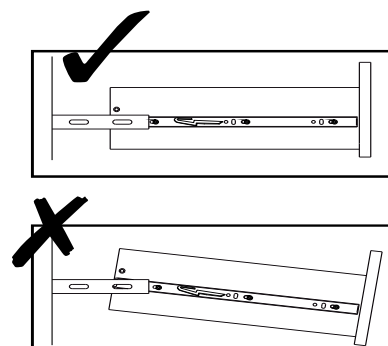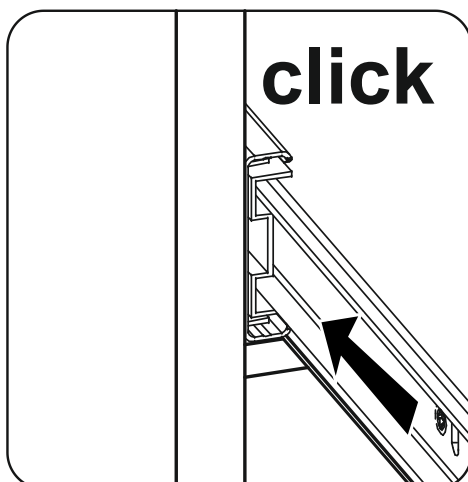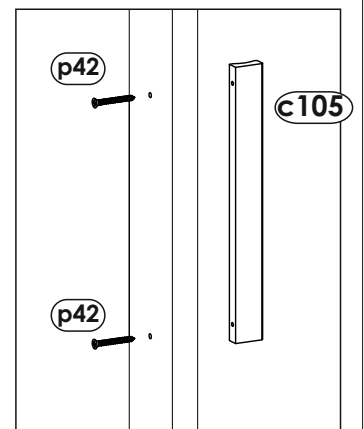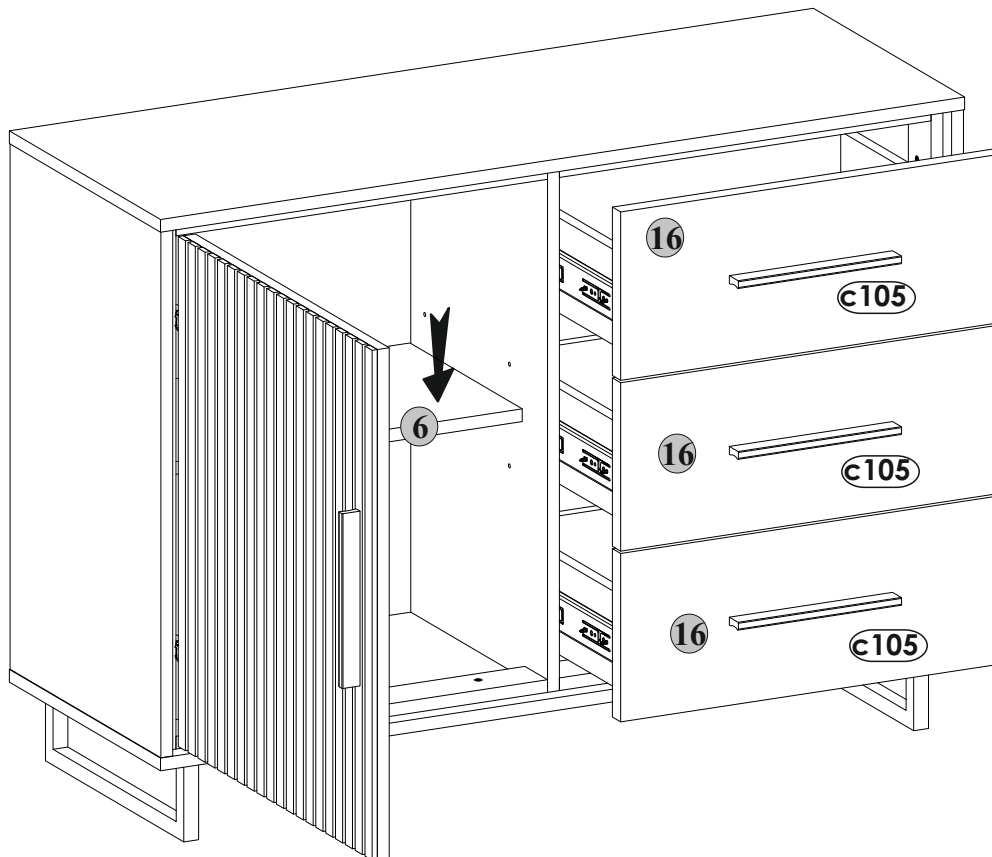

10