

20 MIN



2 X




(D) AUFBAUANLEITUNG  
(NL) HANDLEIDING VOOR DE MONTAGE  
(TR) MONTAJ TALIMATI  
(RO) INSTRUCTIUNI DE ASAMBLARE  
(F) INSTRUCTION D'ASSEMBLAGE  
(CZ) POKYNY K MONTÁŽI  
(BG) ИНСТРУКЦИИ ЗА МОНТАЖ  
(HR) UPUTSTVA ZA MONTAŽU

(GB) ASSEMBLY INSTRUCTIONS  
(PL) INSTRUKCJA MONTAŻU  
(RU) Инструкция по монтажу  
(I) PROCEDURA DI ASSEMBLAGGIO  
(SK) POKYNY K MONTÁŽI  
(HU) ÖSSZESZERELÉSI ÚTMUTATÓ  
(SLO) NAVODILA ZA MONTAŽO  
(S) MONTERINGSANVISNING  
(LT) DIEGIMO INSTRUKCIJOS  
(E) INSTRUCCIONES DE MONTAJE


MODEL

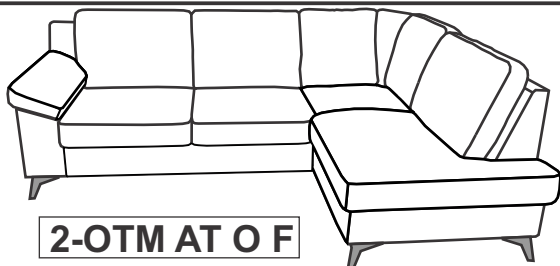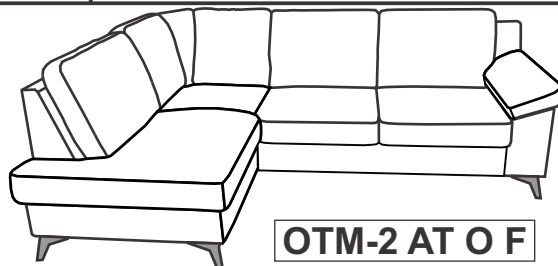**BOOM****2-OTM AT O F****OTM-2 AT O F**




1/3



hardware bag/sachet matériel/zubehörbeutel/  
sachetti materiale/bolsa de materiales/worek materiałowy



pre-assembled/ pre assemble/ vormontiert/ premontato/ wstępnie/ zamontowane

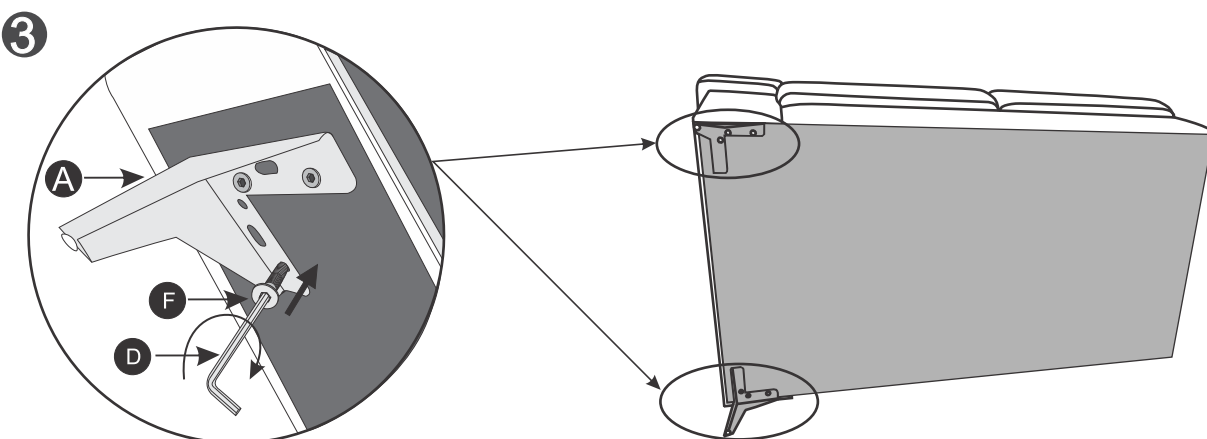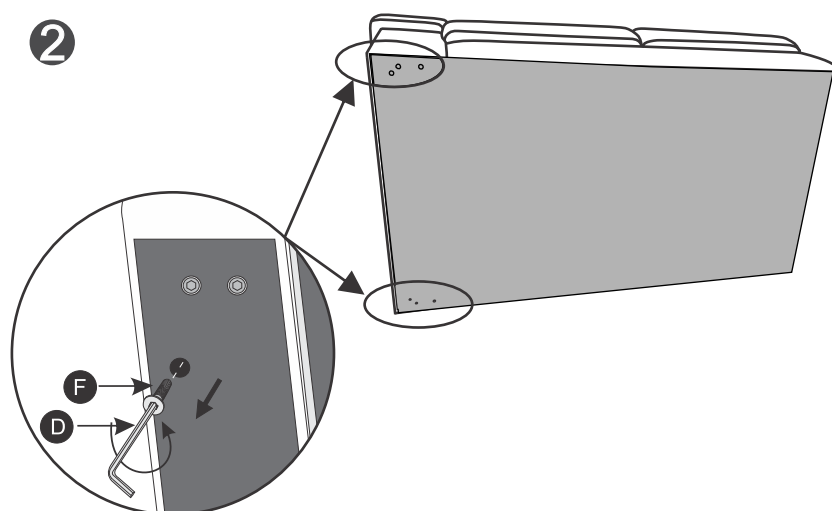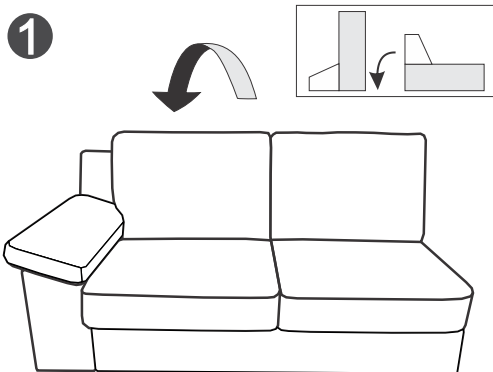

LE TRI  
+ FACILE



BAC  
DE  
TRI

20 MIN



2 X



(D) AUFBAUANLEITUNG  
(NL) HANDLEIDING VOOR DE MONTAGE  
(TR) MONTAJ TALIMATI  
(RO) INSTRUCTIUNI DE ASAMBLARE  
(F) INSTRUCTION D'ASSEMBLAGE  
(CZ) POKYNY K MONTÁŽI  
(BG) ИНСТРУКЦИИ ЗА МОНТАЖ  
(HR) UPUTSTVA ZA MONTAŽU



(GB) ASSEMBLY INSTRUCTIONS  
(PL) INSTRUKCJA MONTAŻU  
(RU) Инструкция по монтажу  
(I) PROCEDURA DI ASSEMBLAGGIO  
(SK) POKYNY K MONTÁŽI  
(HU) ÖSSZESZERELÉSI ÚTMUTATÓ  
(SLO) NAVODILA ZA MONTAŽO  
(S) MONTERINGSANVISNING  
(LT) DIEGIMO INSTRUKCIJOS  
(E) INSTRUCCIONES DE MONTAJE

MODEL

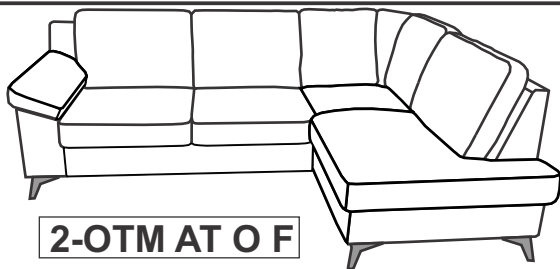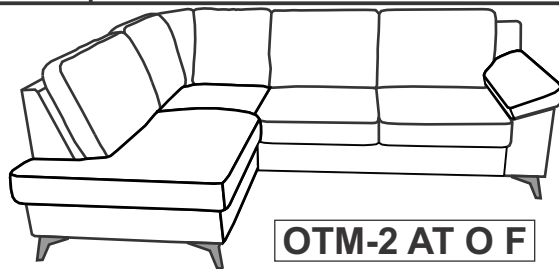
**BOOM****2-OTM AT O F****OTM-2 AT O F**

2/3




4

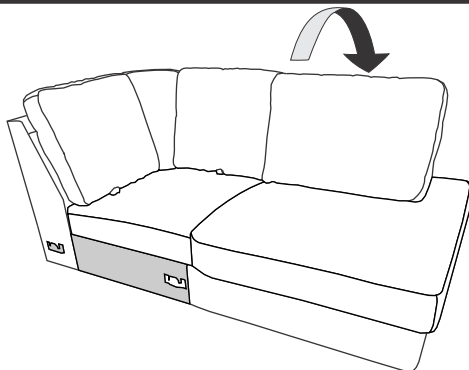

5

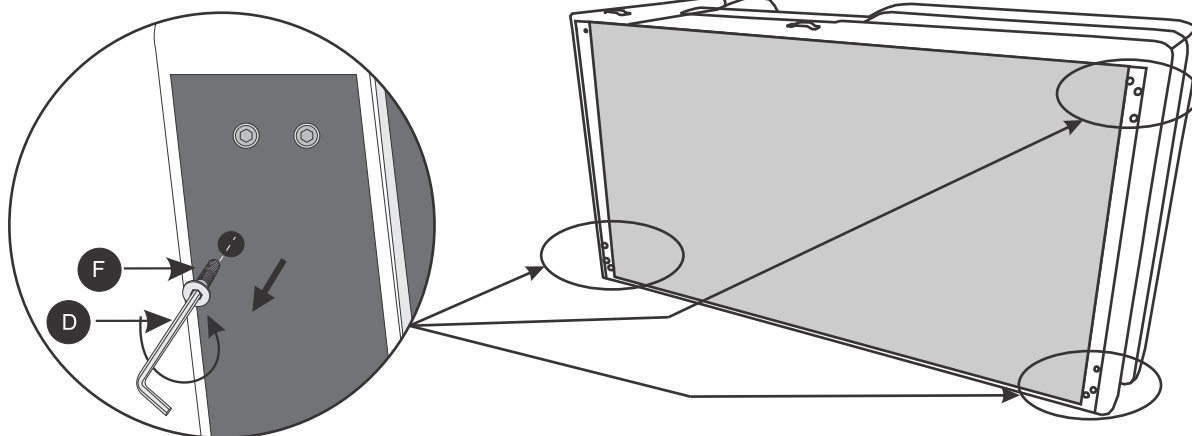

6

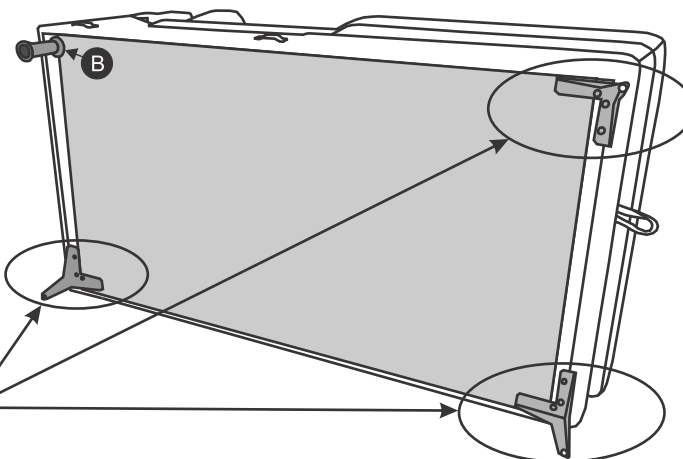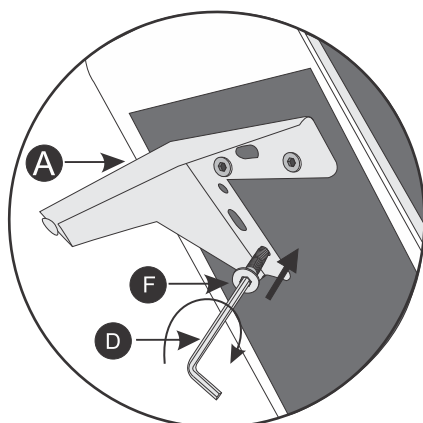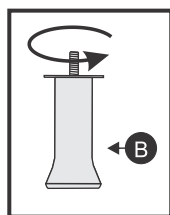LE TRI  
+ FACILEBAC  
DE  
TRI

20 MIN



2 X



(D) AUFBAUANLEITUNG  
(NL) HANDLEIDING VOOR DE MONTAGE  
(TR) MONTAJ TALIMATI  
(RO) INSTRUCTIUNI DE ASAMBLARE  
(F) INSTRUCTION D'ASSEMBLAGE  
(CZ) POKYNY K MONTÁŽI  
(BG) ИНСТРУКЦИИ ЗА МОНТАЖ  
(HR) UPUTSTVA ZA MONTAŽU








(GB) ASSEMBLY INSTRUCTIONS  
(PL) INSTRUKCJA MONTAŻU  
(RU) Инструкция по монтажу  
(I) PROCEDURA DI ASSEMBLAGGIO  
(SK) POKYNY K MONTÁŽI  
(HU) ÖSSZESZERELÉSI ÚTMUTATÓ  
(SLO) NAVODILA ZA MONTAŽO  
(S) MONTERINGSANVISNING  
(LT) DIEGIMO INSTRUKCIJOS  
(E) INSTRUCCIONES DE MONTAJE

MODEL

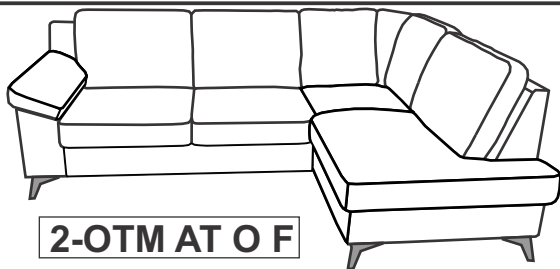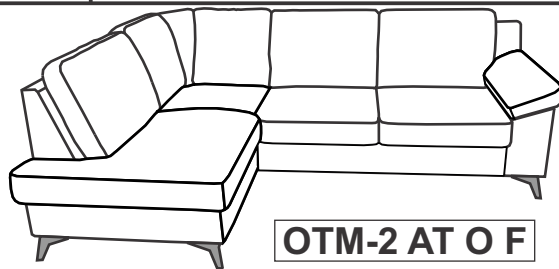
**BOOM****2-OTM AT O F****OTM-2 AT O F**

3/3

7

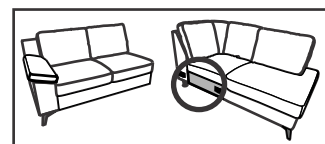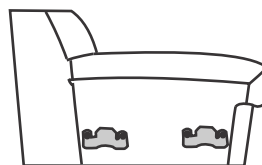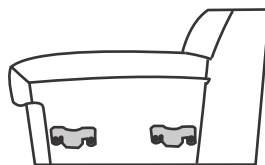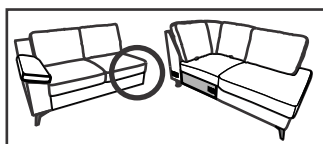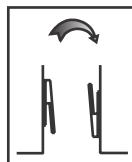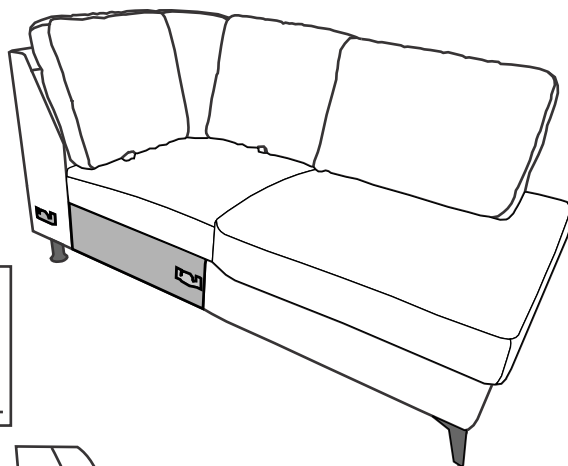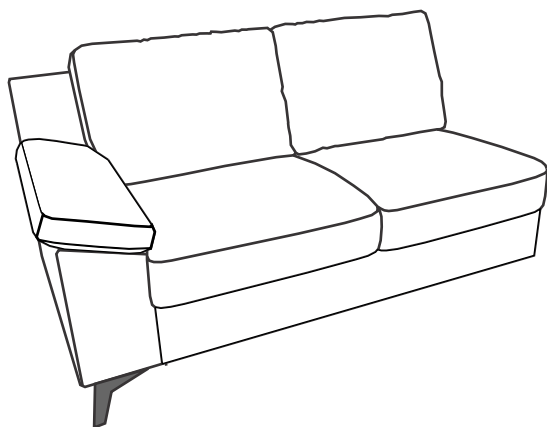

8

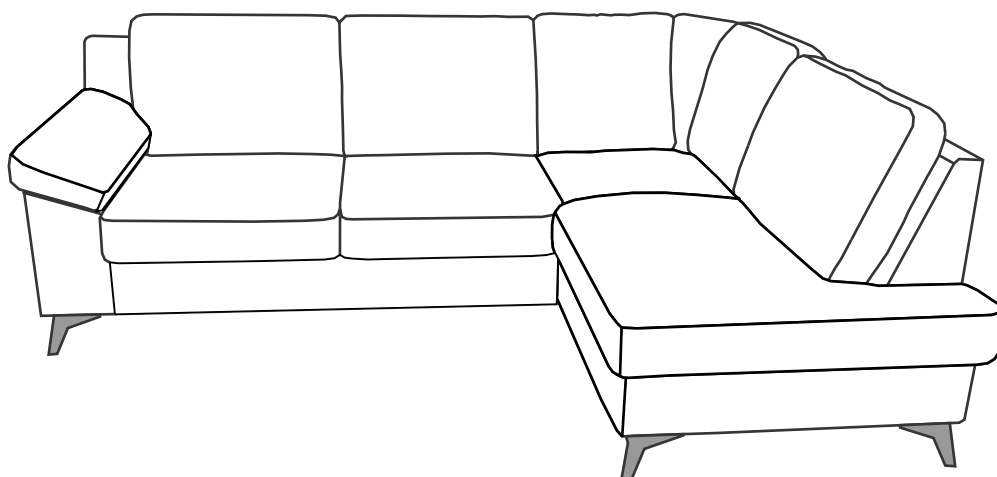

LE TRI  
+ FACILE



BAC  
DE  
TRI