
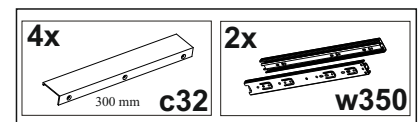
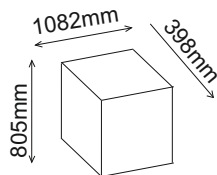
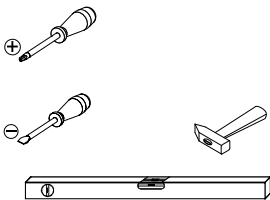
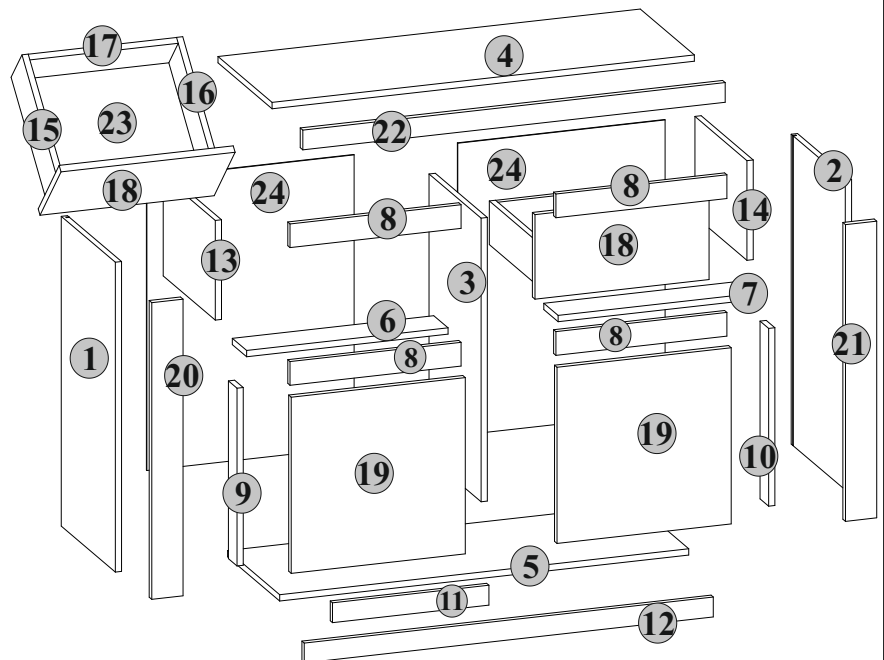
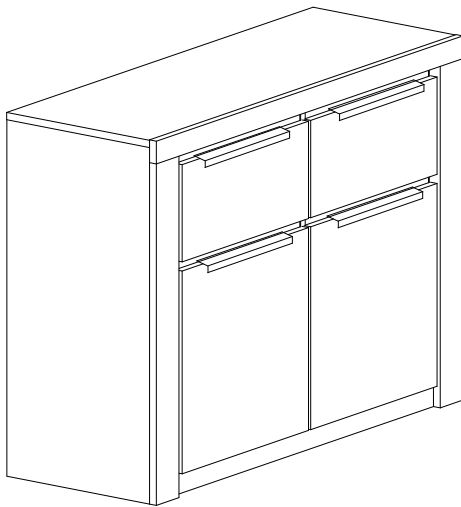




“2564”

versionsnummer: 04.03.2019

Naturholz kann sich werkstoffbedingt verziehen. Durch das Montieren ziehen sich Teile wieder plan.












B1			B2			B3			B4	
8x  l2	62x  φ15 #12.5 r1		1x  y1	8x  φ6.5x50 mm e1		4x  φ4.2x13 mm p38			4x  b1	
62x  s2	8x  k1		44x  φ8x30 mm f1	6x  s1		4x  l9	44x  φ3.5x13 mm p1		4x  a2	
56x  r16	6x  r24		1x  z1	18x  1x16 l1		2x  φ4x30 mm p9	4x  φ2x20 mm p27			
			3x  φ8x50 mm f6			4x  n27	4x  φ6.3x13 mm e3			

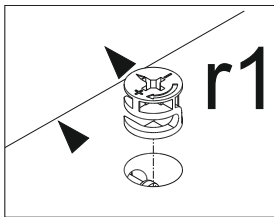



16x
 $\phi 8 \times 30$ mm
f1

24x
r16






22x
 $\phi 15 \#12.5$
r1

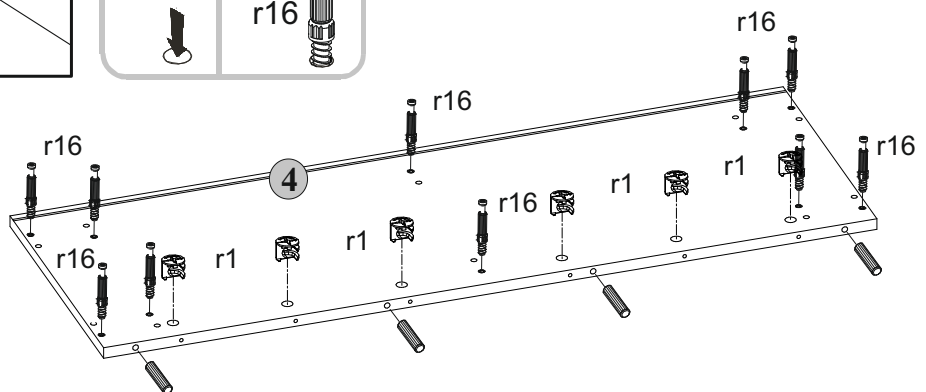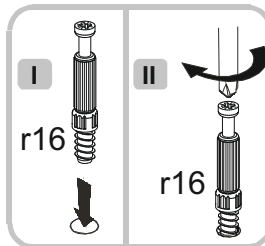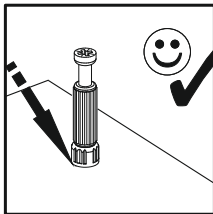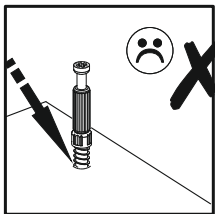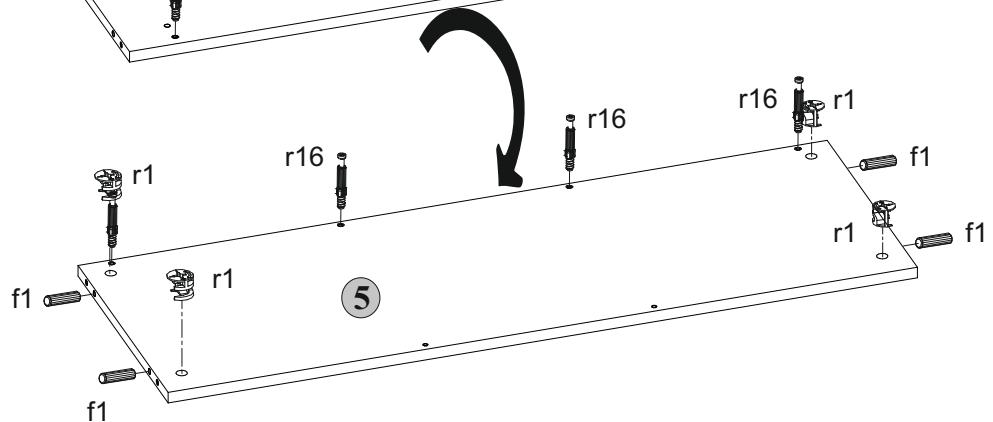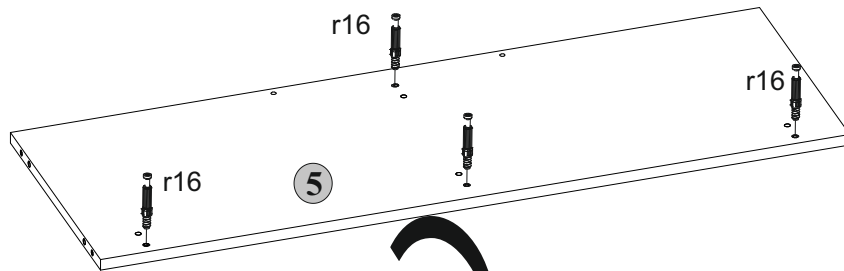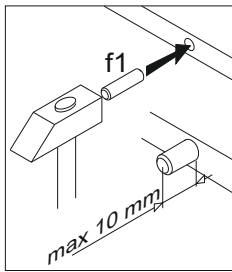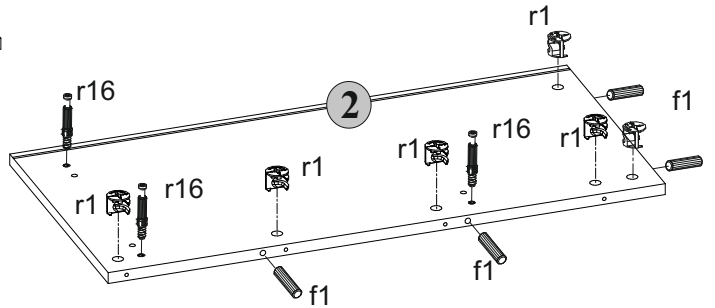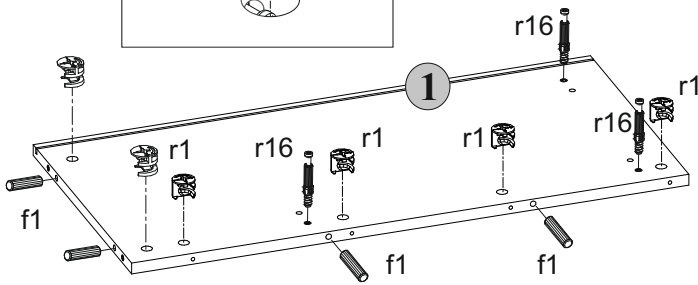

2

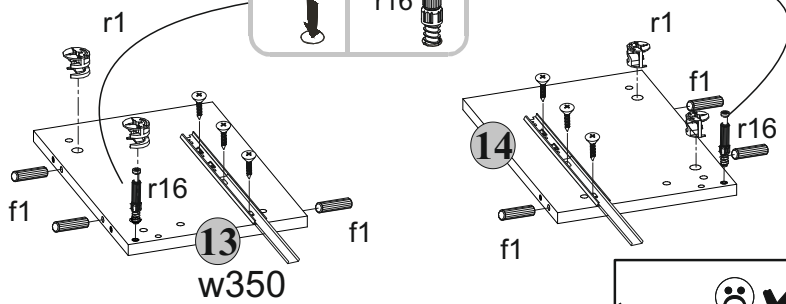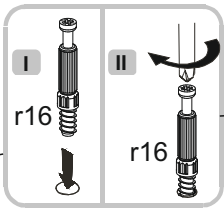


10x $\phi 8 \times 30$ mm f1	8x $\phi 15$ #12.5 r1
12x $\phi 3.5 \times 13$ mm p1	6x r24
2x r16	2x w350

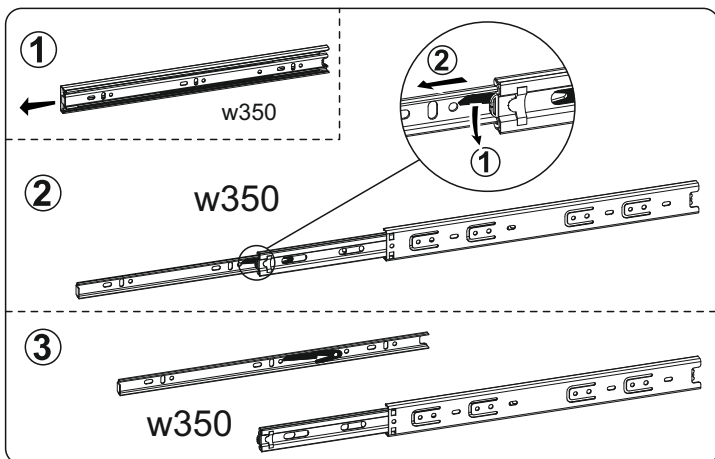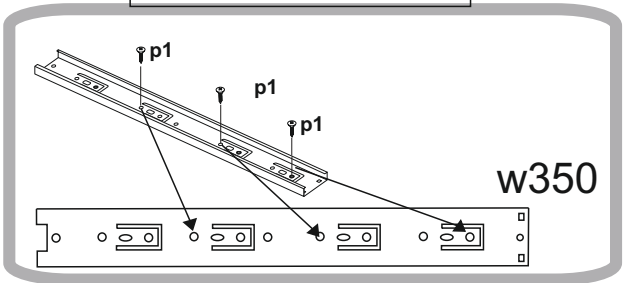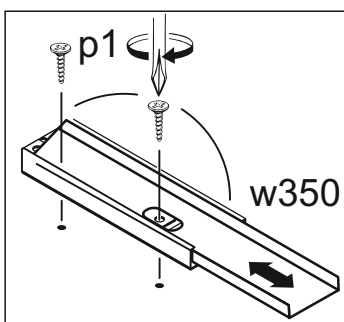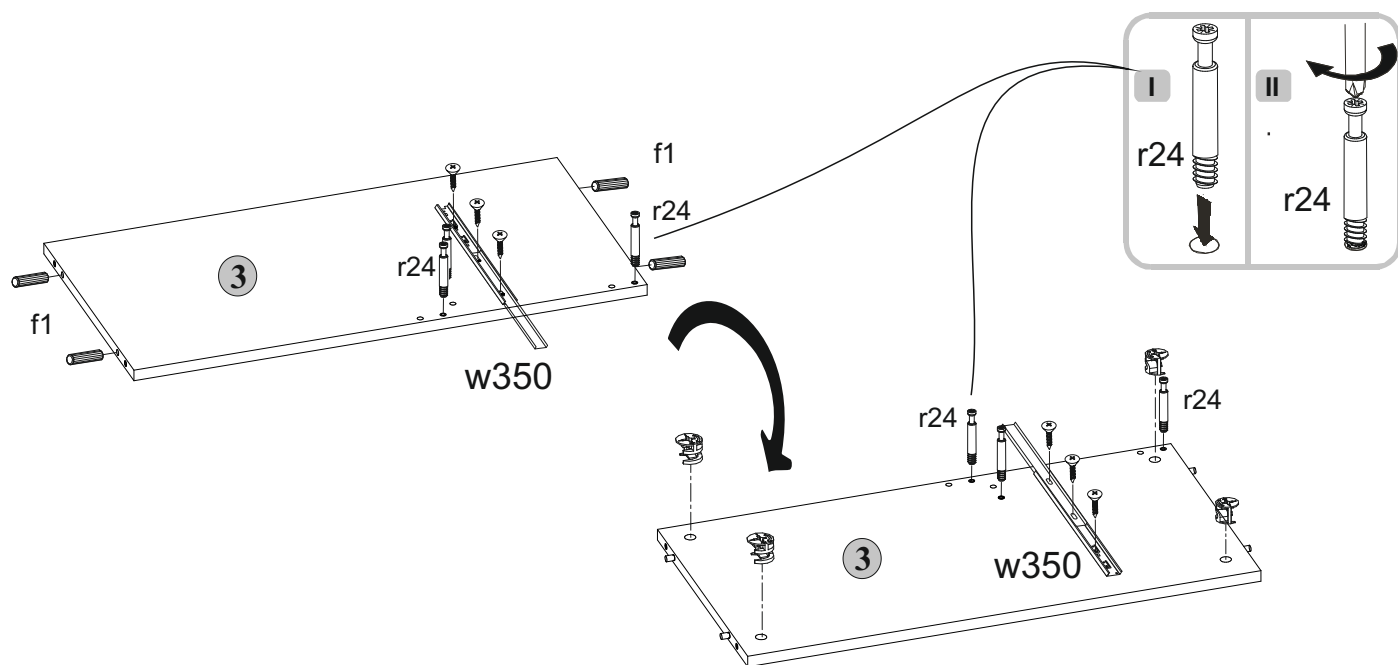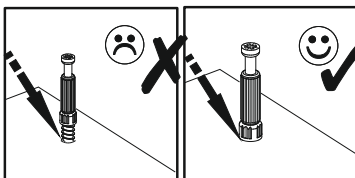

3













3

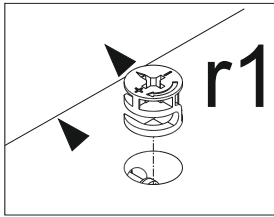

6x
 $\phi 8 \times 30$ mm
f1
















20x
r16

20x
 $\phi 15 \#12.5$
r1

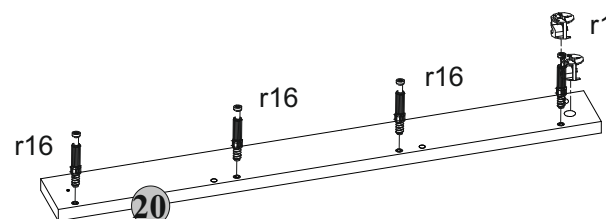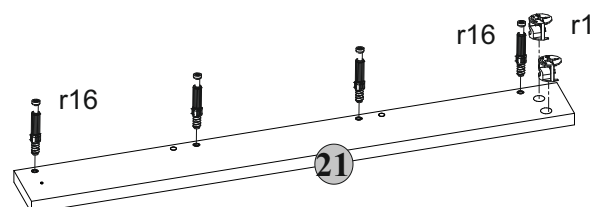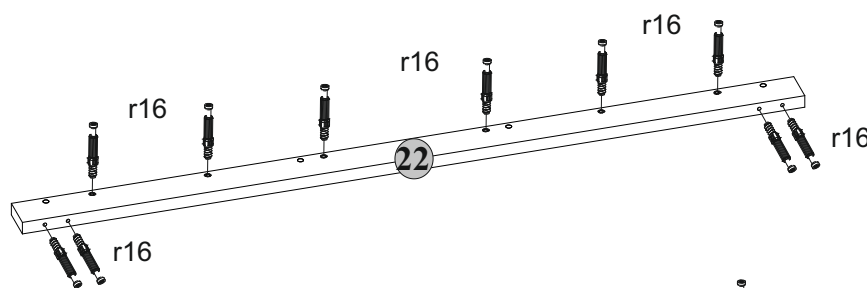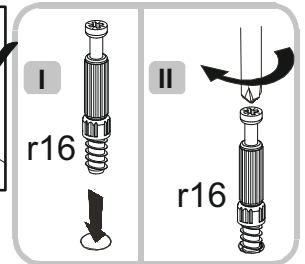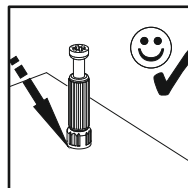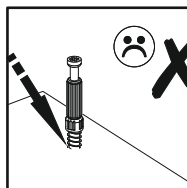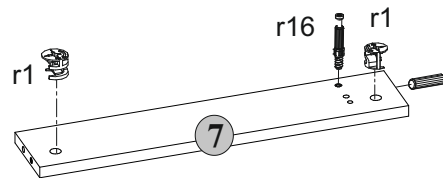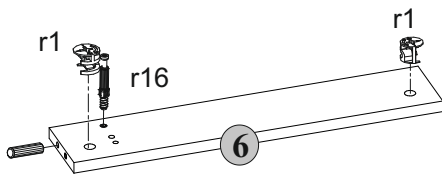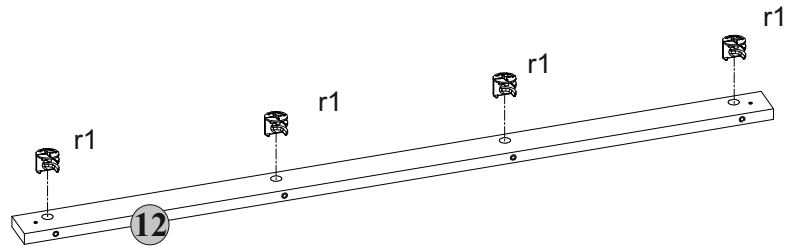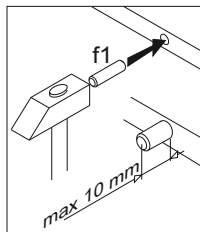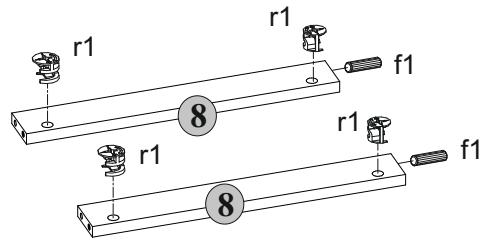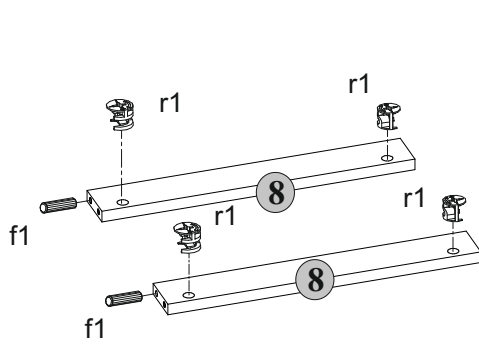

4



4

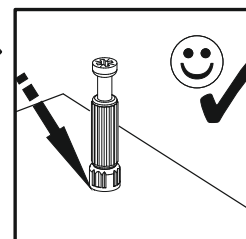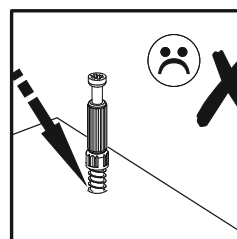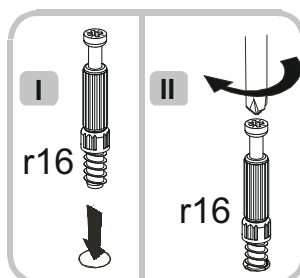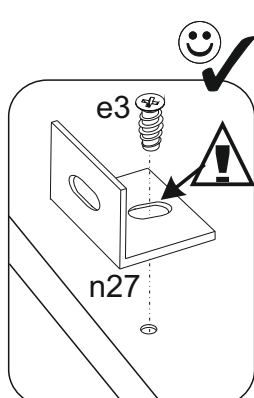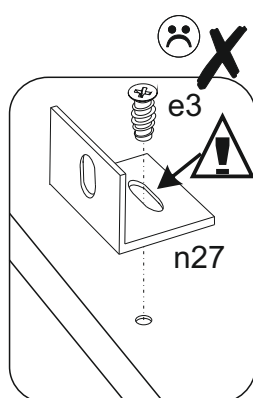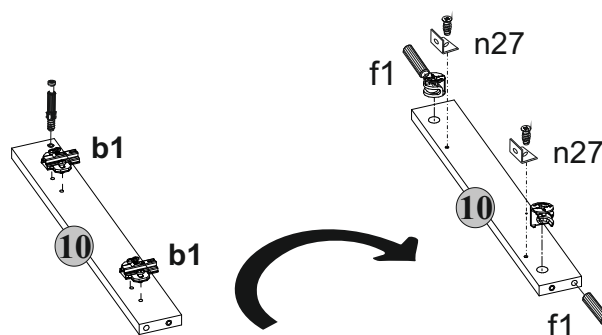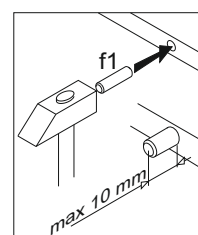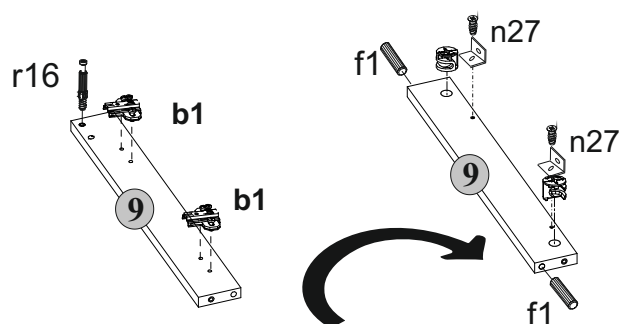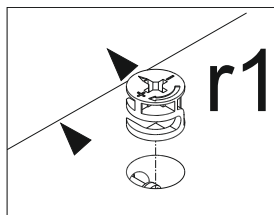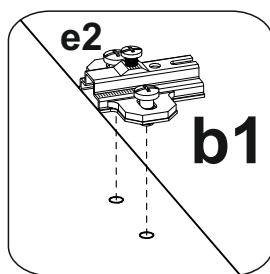



5

5



- 4x  a2
- 8x  p1
φ3.5x13 mm

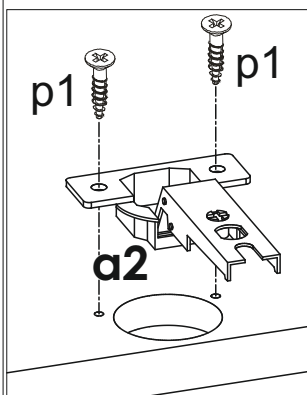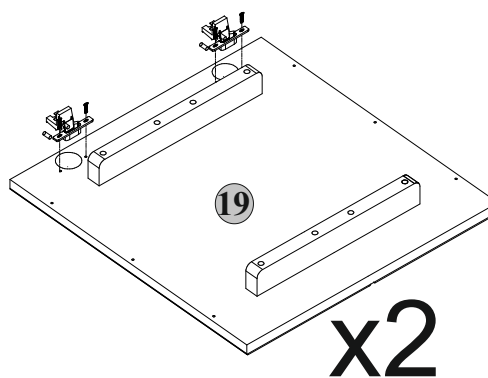







6

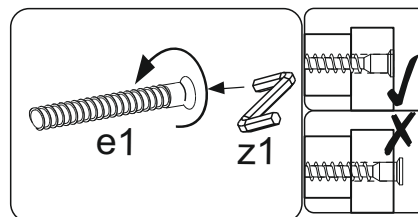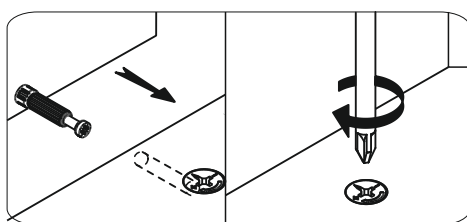


- 2x  e1
φ6.3x50 mm
- 2x  s1


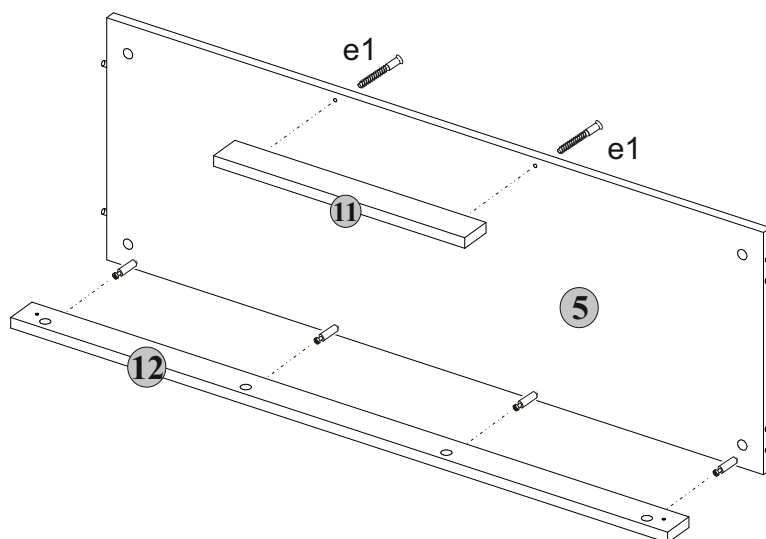
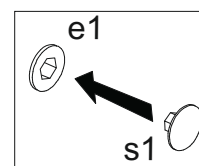


6

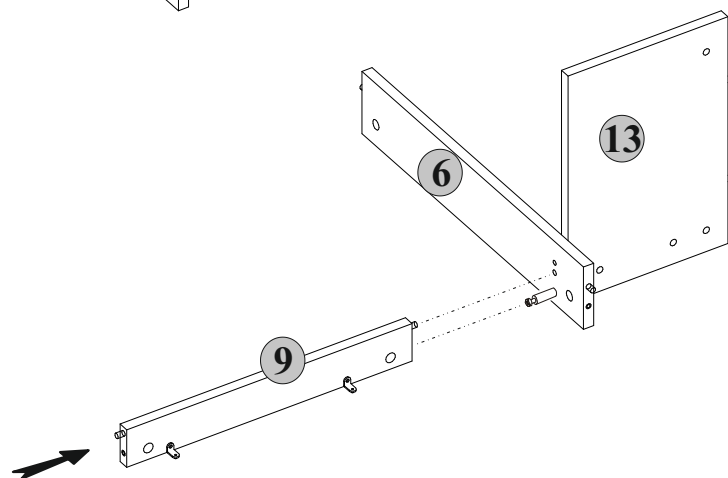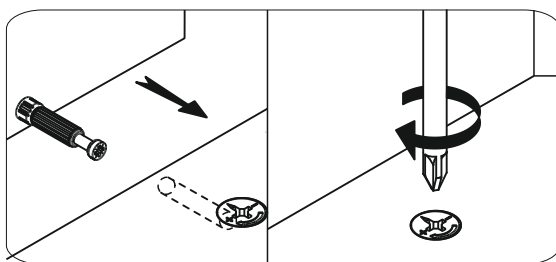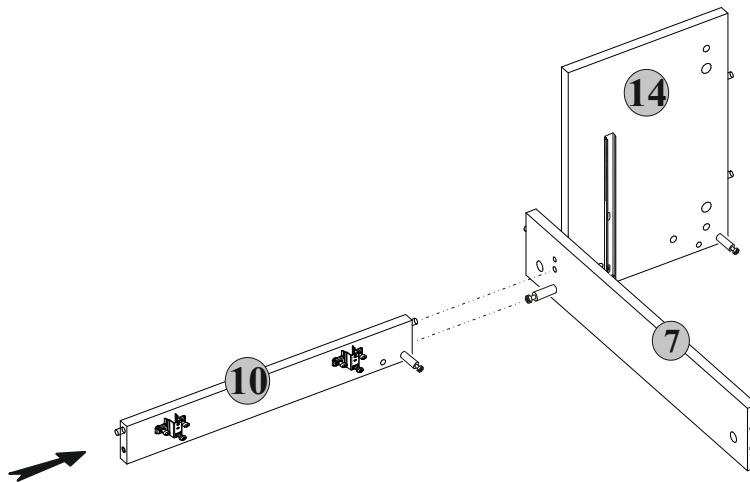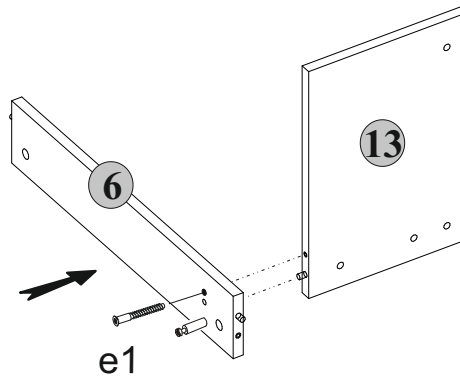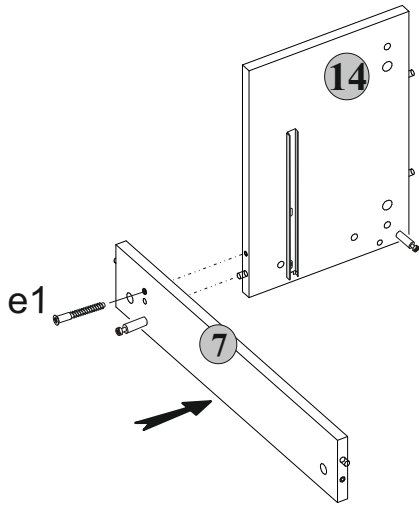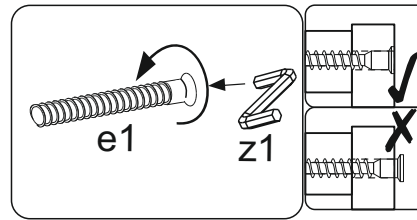


8

3x  f6
 $\phi 8 \times 50$ mm

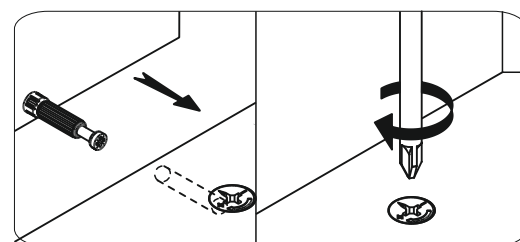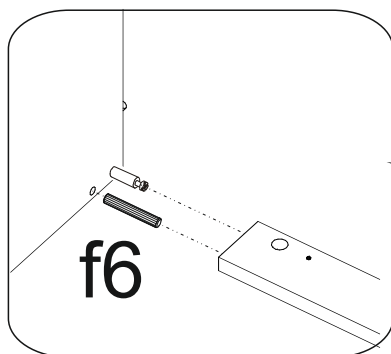
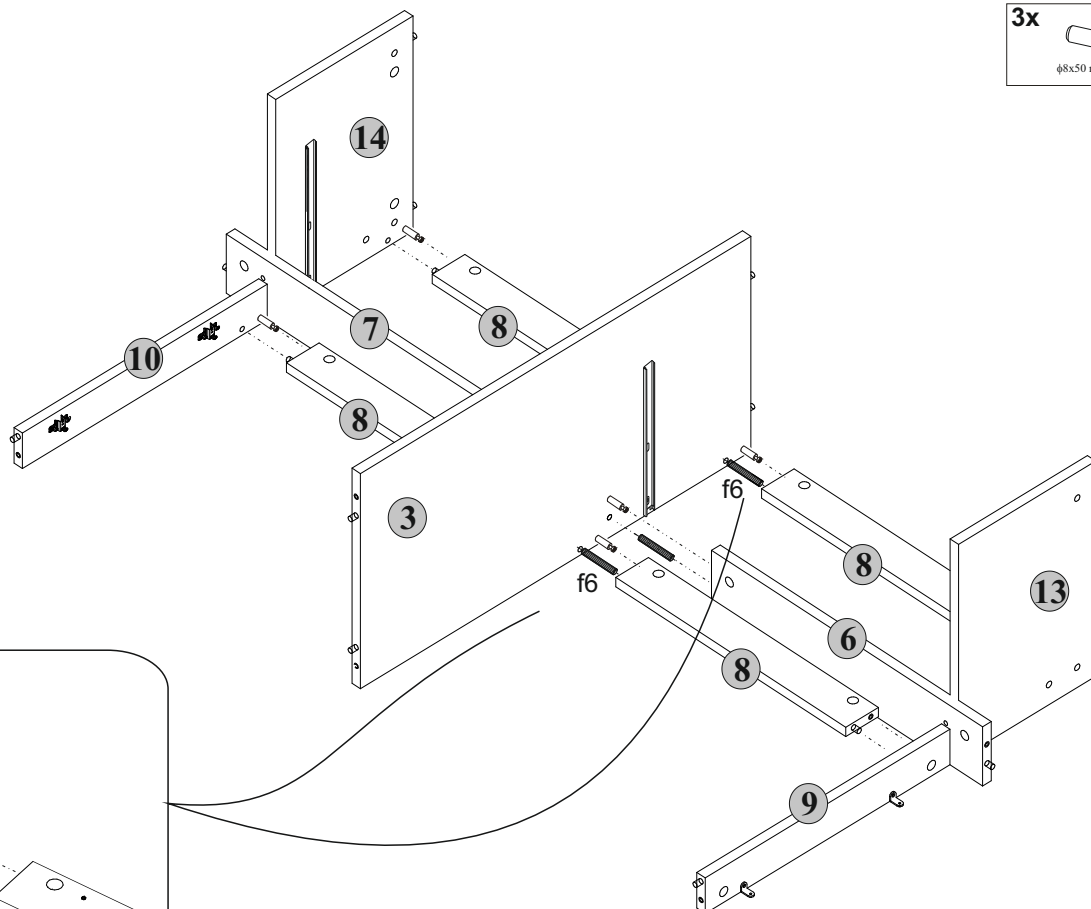


9


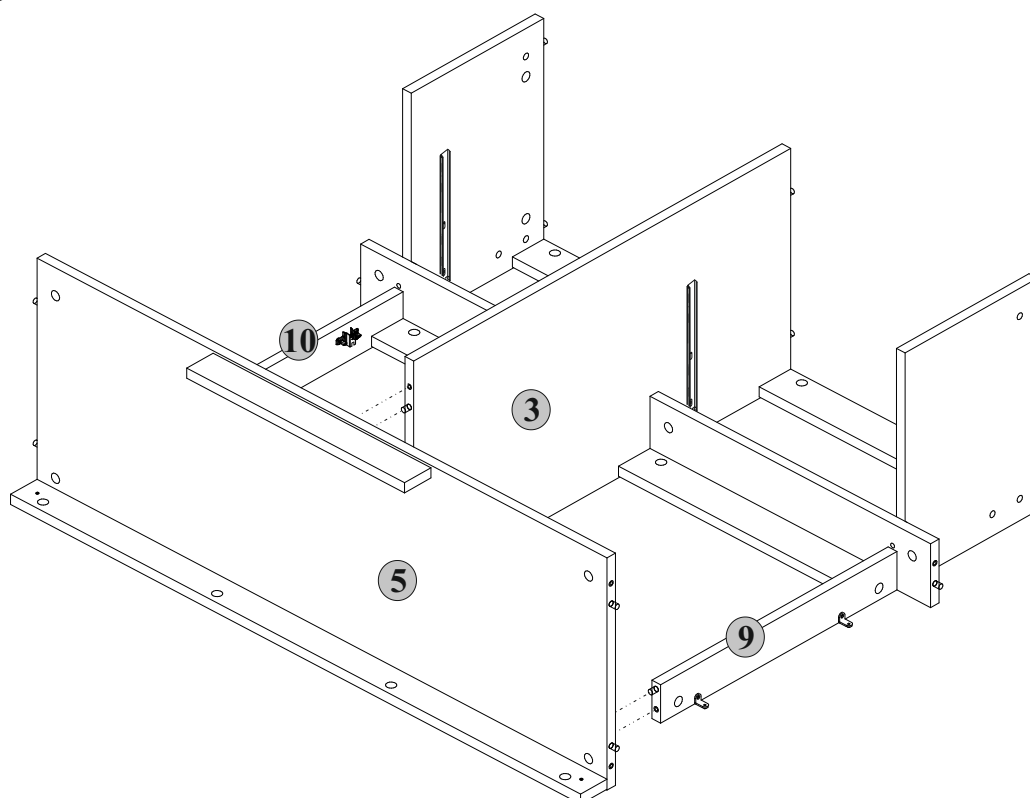


8






10

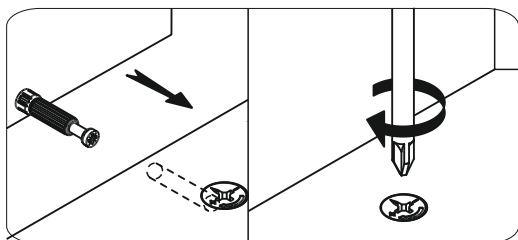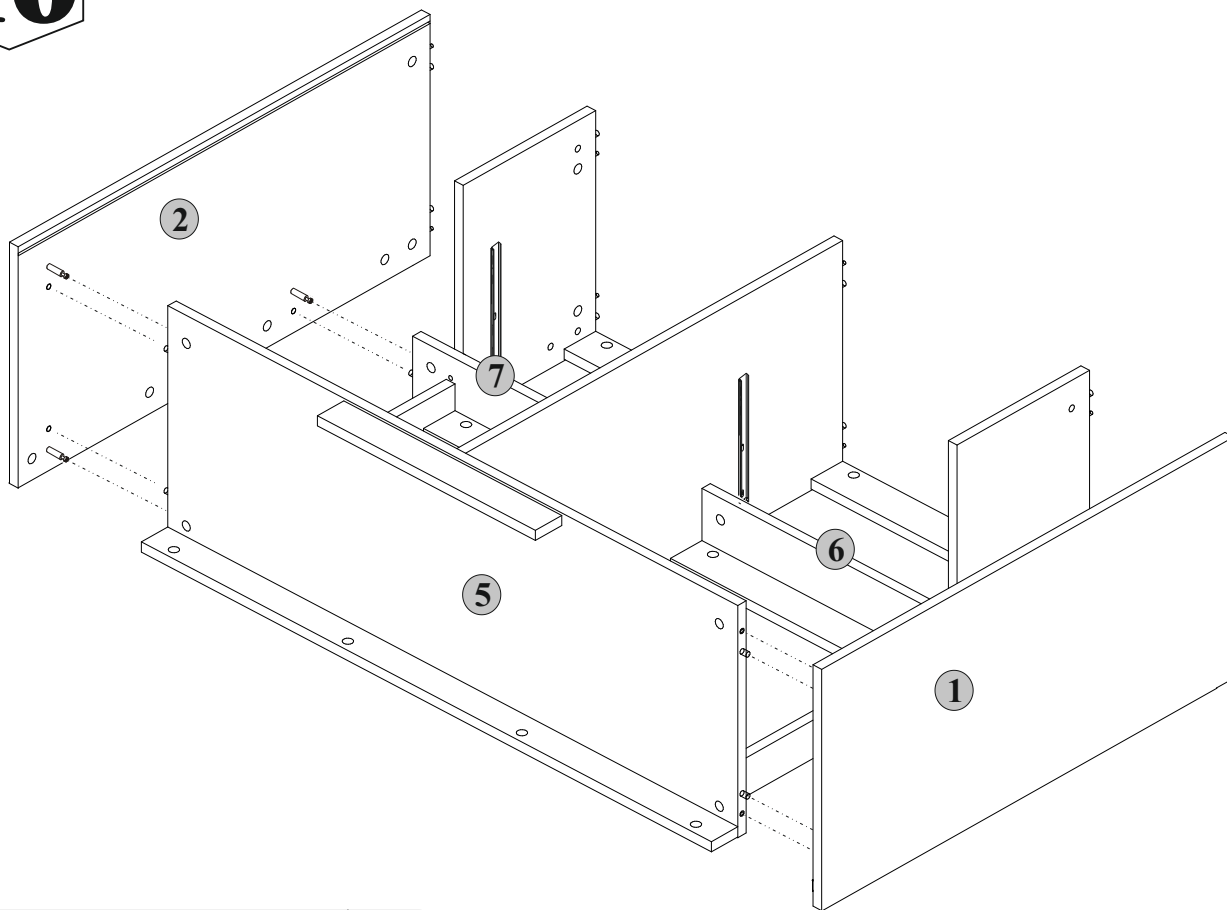

11

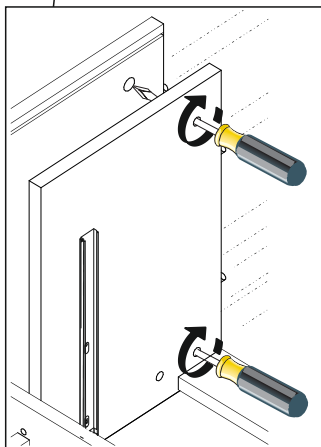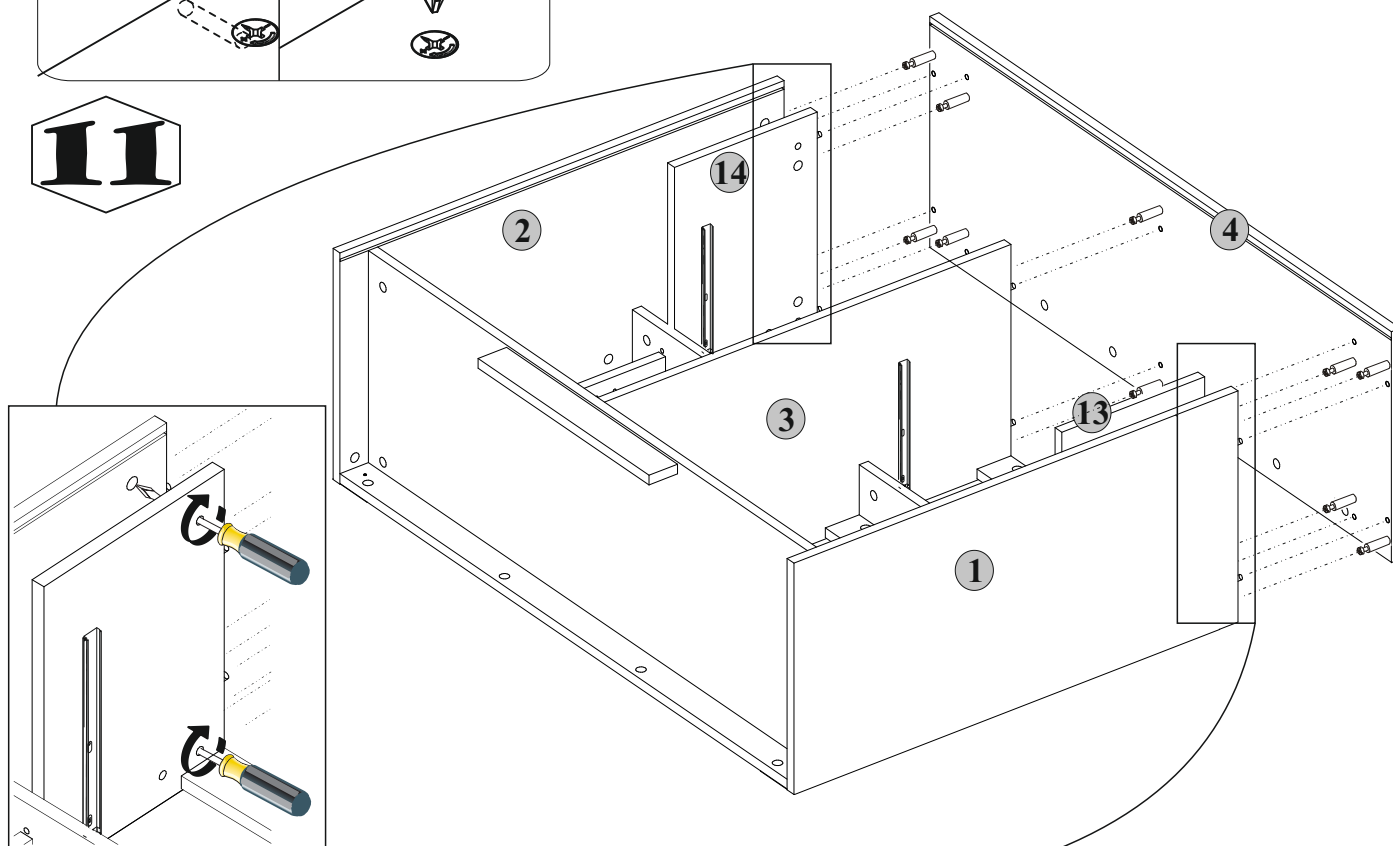

12

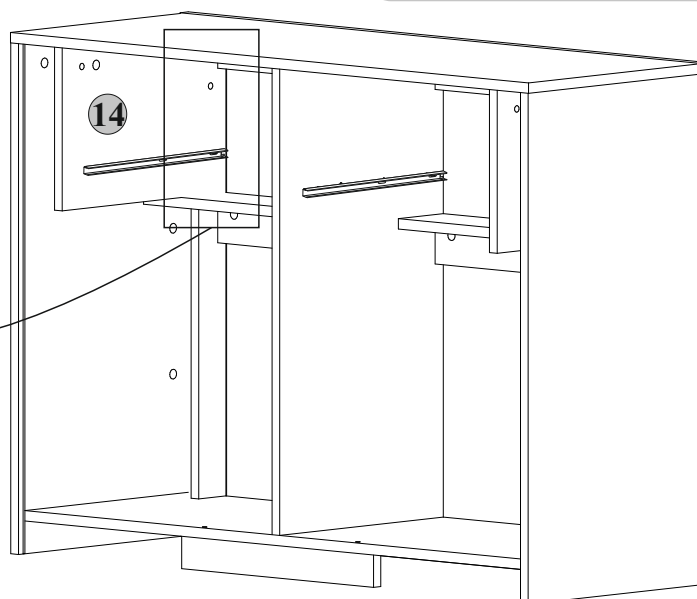
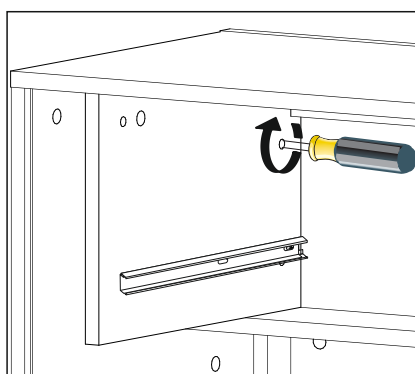
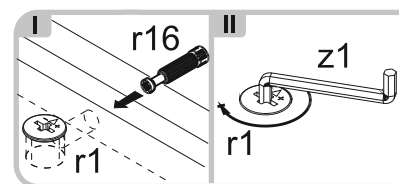
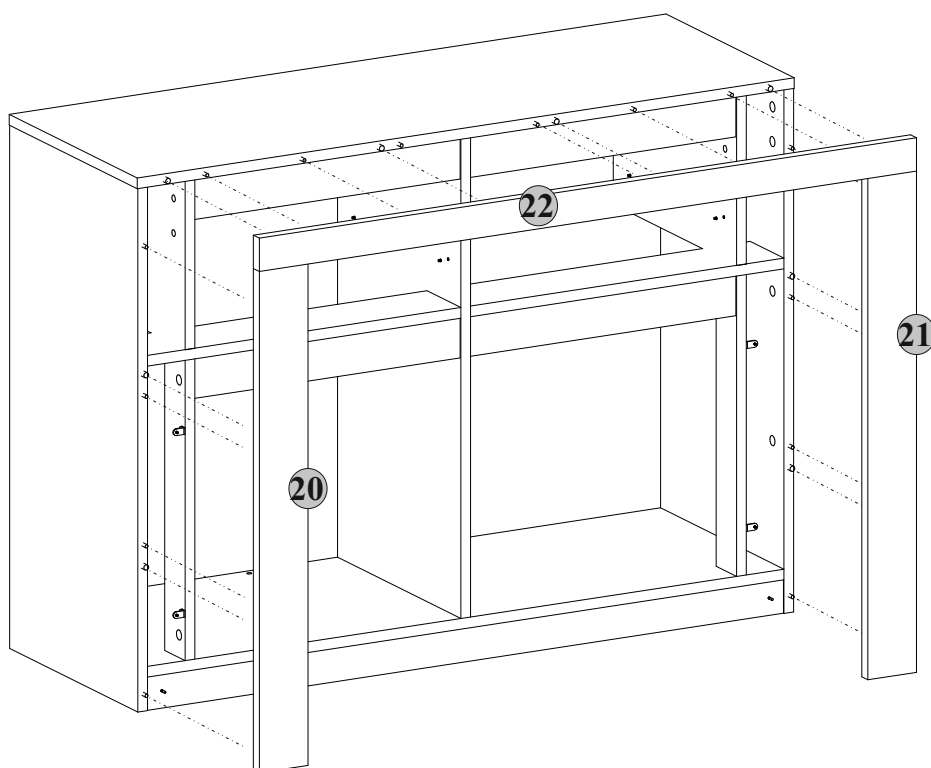
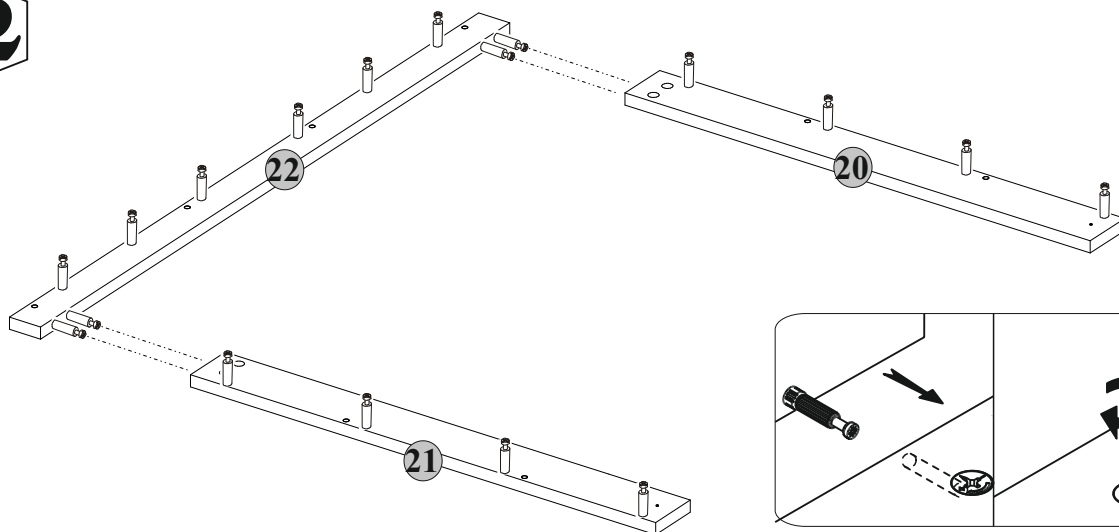


10



13

4x
φ4.2x13 mm
p38

2x
φ4x30 mm
p9

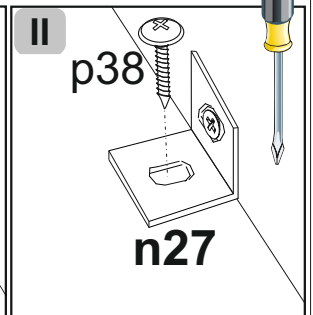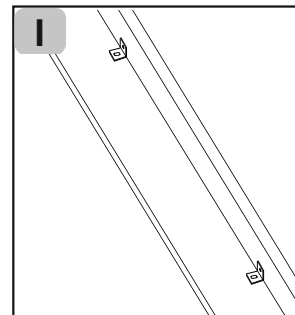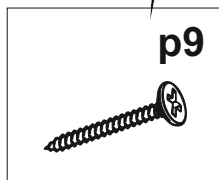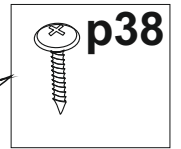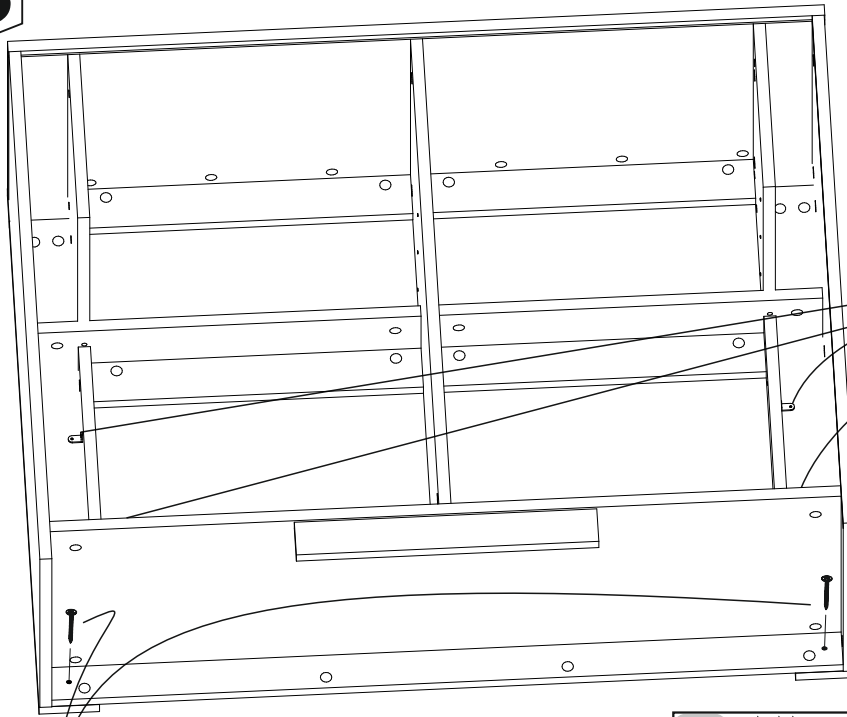

14

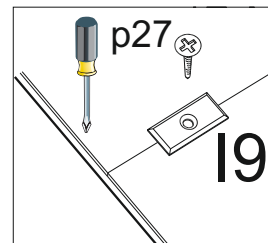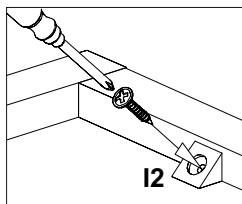




4x
I9

10x
I1

8x
k1



4x
φ2x20 mm
p27

8x
I2

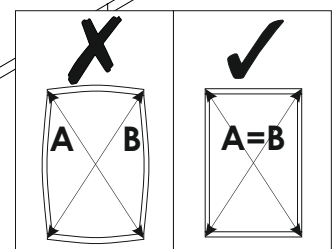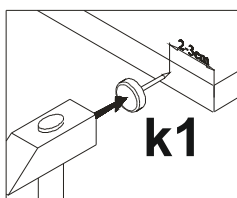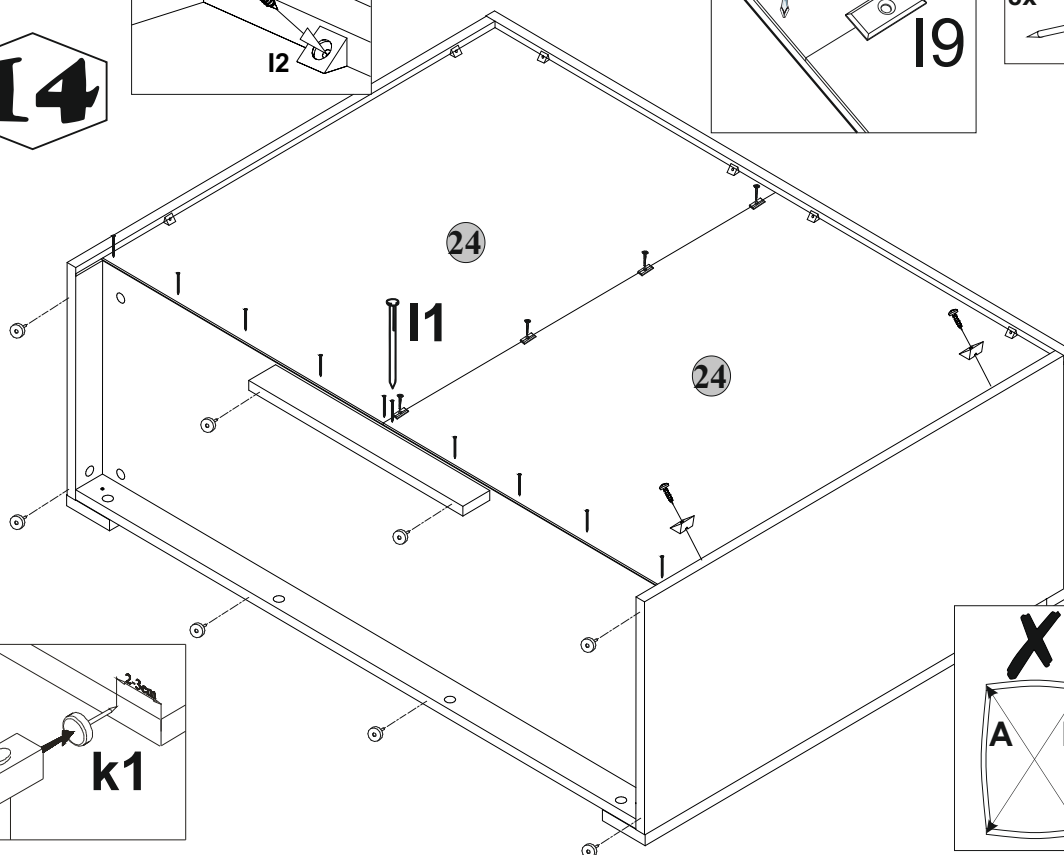

11


15x2

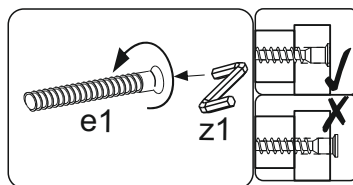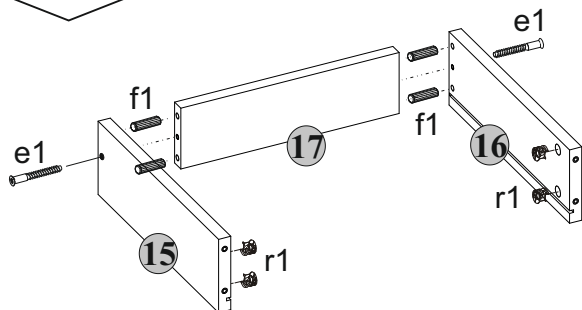


8x  $\phi 8 \times 30$ mm f1

8x  l1

18x  $\phi 3.5 \times 13$ mm p1












8x  r16

8x  $\phi 15$ #12.5 r1

2x  300 mm c32


4x  $\phi 6.3 \times 50$ mm e1

4x  s1

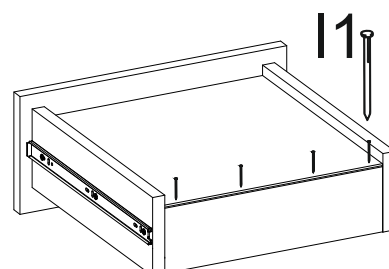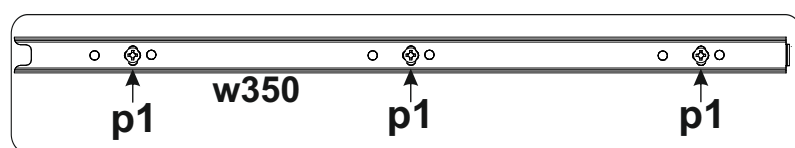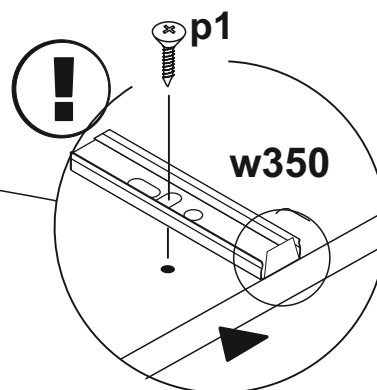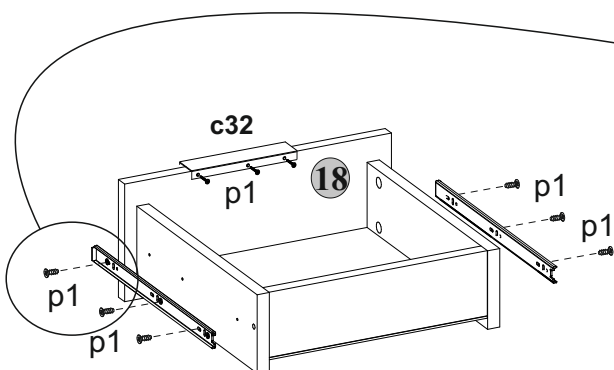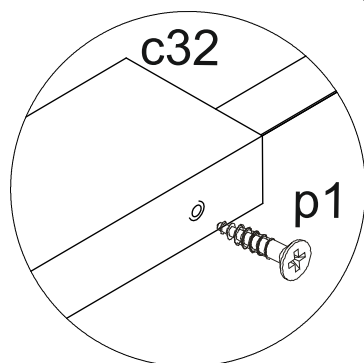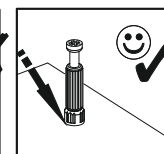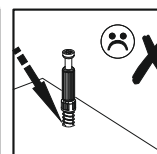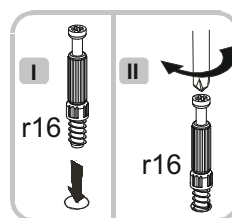
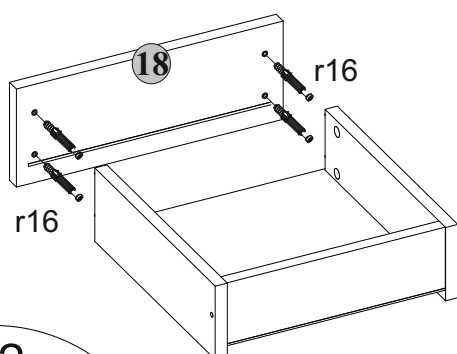
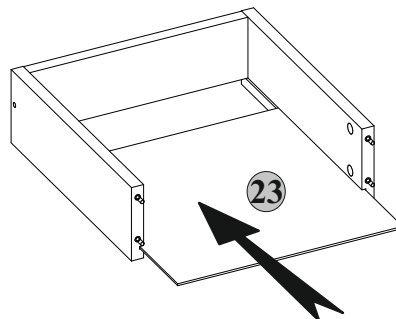
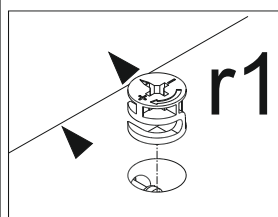


12



16

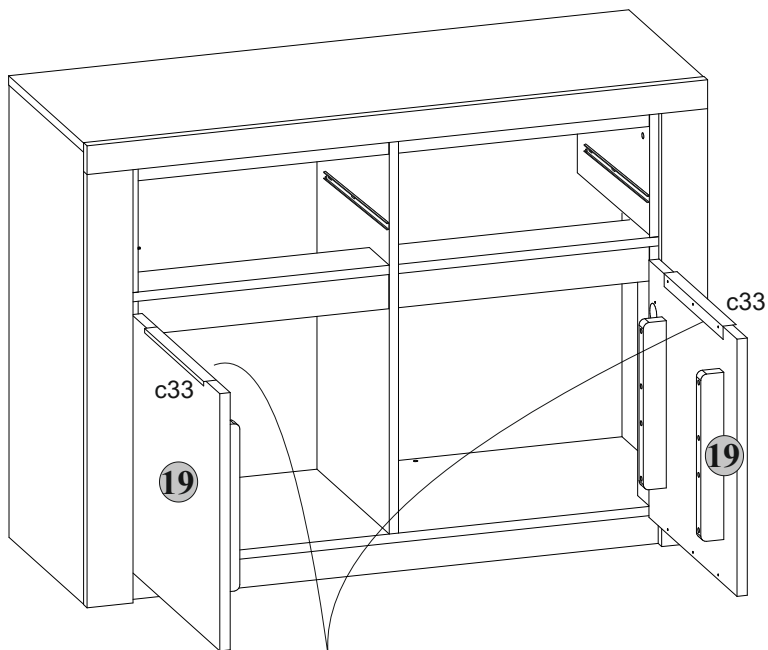

- 62x s2
- 2x 300 mm c32
- 6x $\phi 3.5 \times 13$ mm p1

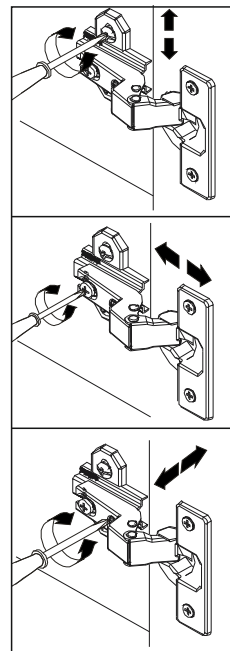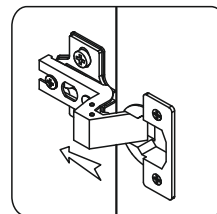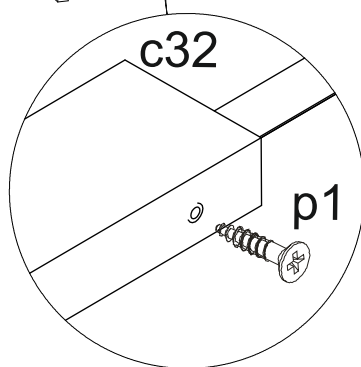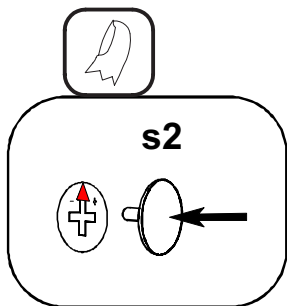

17

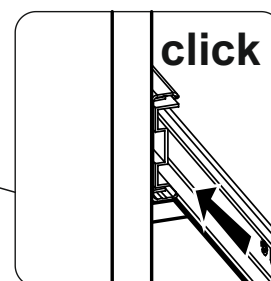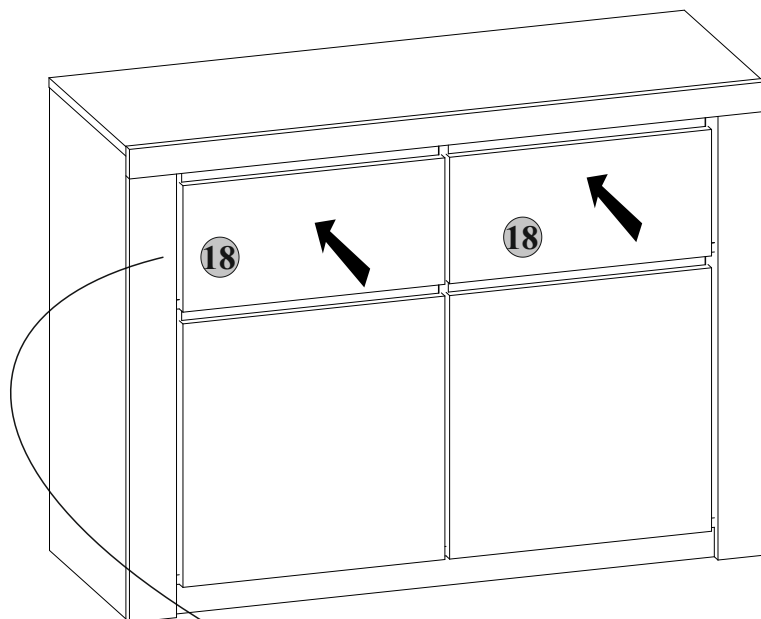

13