


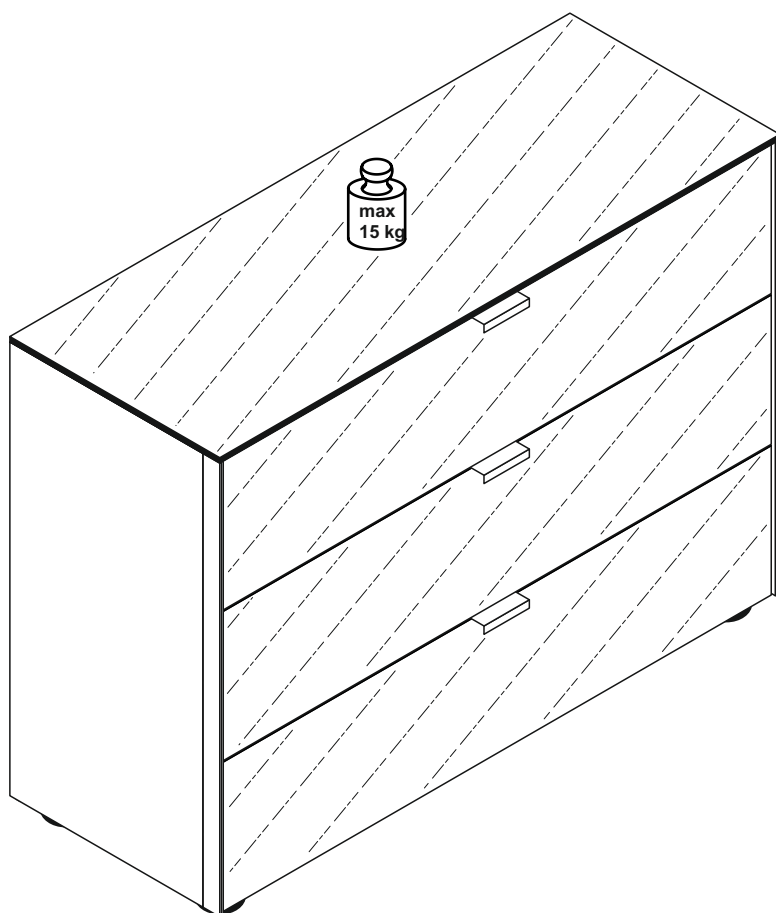

Artikel.-Nr.:

**0772-KO\_021 GL**

Montageanleitung.-Nr.:

**MA1-00372**

| REPC-Nr.: | Service • Assistenza • Dienstverlening • Serwis<br>Servis • Szerviz • Сервисная служба |
|-----------|----------------------------------------------------------------------------------------|
|           |                                                                                        |
|           |                                                                                        |

## Beutel 0772-KO\_021 GL 0-15 Colli 2/3

|                          |                        |                         |                        |                       |
|--------------------------|------------------------|-------------------------|------------------------|-----------------------|
| B01-30<br>48x<br>3x16    | B01-80<br>8x<br>3,5x13 | B01-70<br>4x<br>3x30    | B01-90<br>4x<br>3,5x20 | B01-122<br>4x<br>4x13 |
| B01-200<br>16x<br>6,3x13 | B02-08<br>8x<br>h=10mm | B02-10<br>18x<br>h=12mm | B02-20<br>26x          |                       |



SCAN ME

## Beutel 0772-KO\_021 0-35 Colli 2/3

|              |              |                     |
|--------------|--------------|---------------------|
| B03-07<br>1x | B03-11<br>3x | B03-42<br>3x<br>8er |
|--------------|--------------|---------------------|

## Beutel BT1-00001 Colli 2/3

|               |                                             |
|---------------|---------------------------------------------|
| B05-265<br>1x | set one<br>by Musterring<br>Pflegeanweisung |
|---------------|---------------------------------------------|

## Beutel 0772-KO\_021 0-45 Colli 2/3

|                        |               |               |
|------------------------|---------------|---------------|
| B02-103<br>12x<br>8x30 | B05-130<br>2x | B05-185<br>4x |
| B05-260<br>1x          | B05-280<br>1x | B06-425<br>3x |

## Beutel BT1-00005 Colli 2/3










|                       |               |
|-----------------------|---------------|
| B01-123<br>8x<br>4x15 | B02-173<br>4x |
|-----------------------|---------------|

## Beutel 0772-KO\_021 0-55 Colli 1/3








|                      |
|----------------------|
| B01-36<br>4x<br>4x40 |
|----------------------|




## Colli 1/3

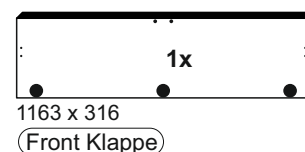

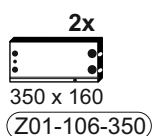
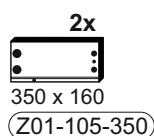
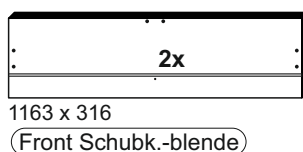
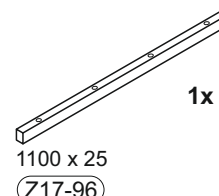
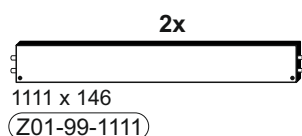
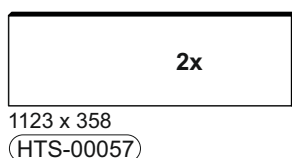


## Colli 2/3

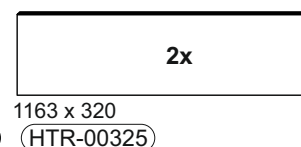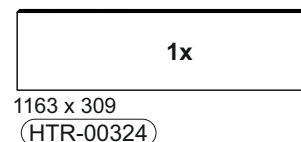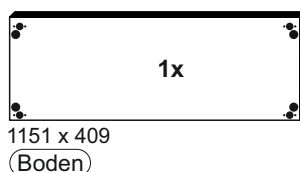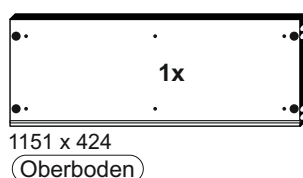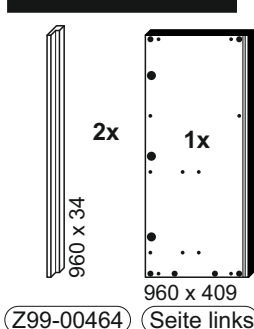

## Colli 3/3

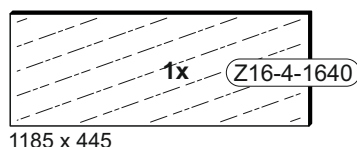

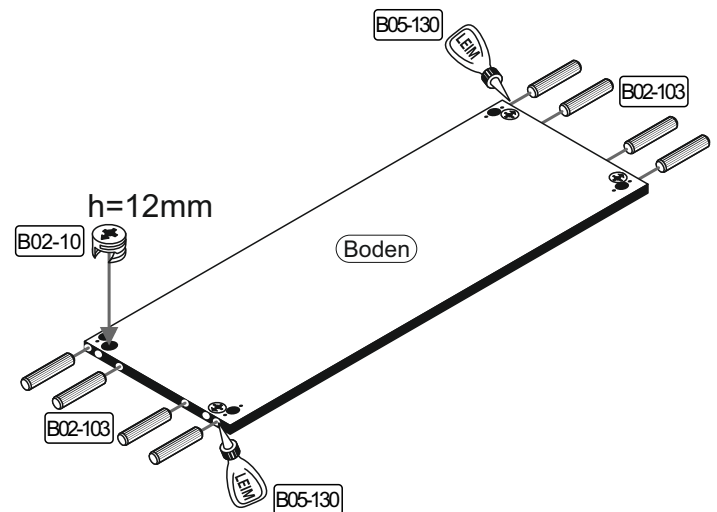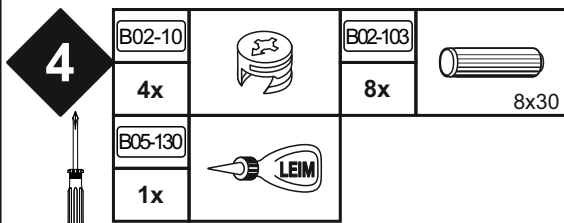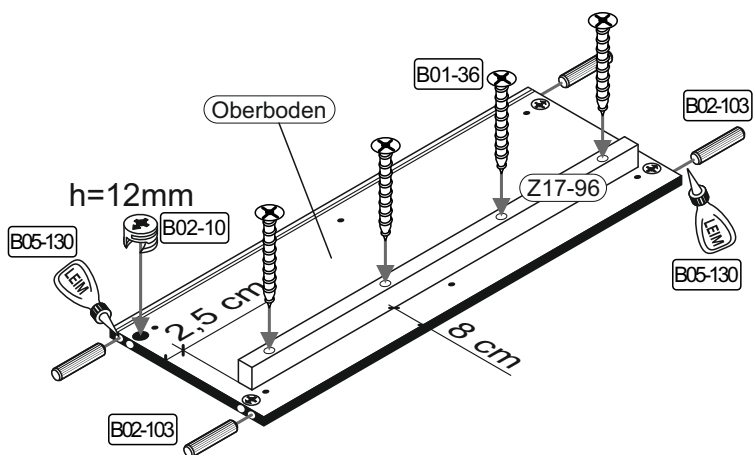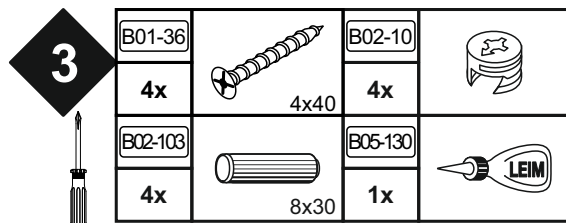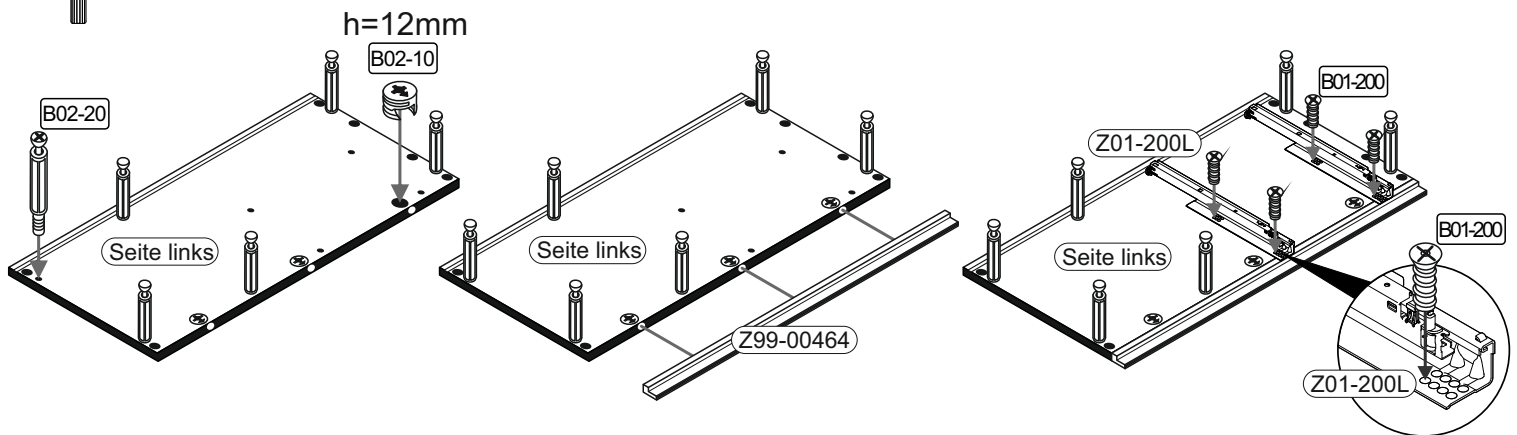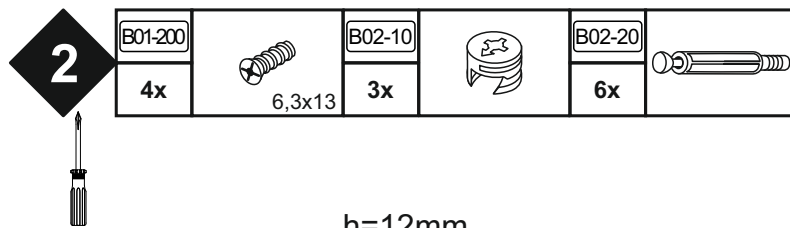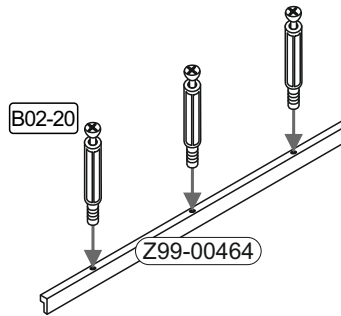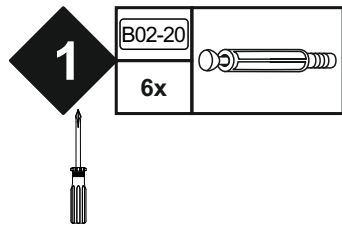

# CHICAGO

5

|        |                                                                                   |        |                                                                                   |
|--------|-----------------------------------------------------------------------------------|--------|-----------------------------------------------------------------------------------|
| B02-10 |  | B03-11 |  |
| 4x     |                                                                                   | 3x     |                                                                                   |

h=12mm


B02-10

Mittelboden

B03-11

Mittelboden

6

|         |                                                                                   |        |                                                                                   |        |                                                                                   |
|---------|-----------------------------------------------------------------------------------|--------|-----------------------------------------------------------------------------------|--------|-----------------------------------------------------------------------------------|
| B01-200 |  | B02-10 |  | B02-20 |  |
| 4x      | 6,3x13                                                                            | 3x     |                                                                                   | 6x     |                                                                                   |

h=12mm

B02-10

Seite rechts

B02-20

Seite rechts

Z99-00464

B01-200

Z01-200R

B01-200

Z01-200R

Seite rechts

7

|        |                                                                                     |         |                                                                                     |
|--------|-------------------------------------------------------------------------------------|---------|-------------------------------------------------------------------------------------|
| B01-80 |  | B01-200 |  |
| 6x     | 3,5x13                                                                              | 2x      | 6,3x13                                                                              |
| B03-42 |  | B06-425 |  |
| 3x     | 8er                                                                                 | 1x      |                                                                                     |

B01-80


B03-42

Front Klappe

B01-200

B06-425

8

|         |                                                                                     |        |                                                                                     |        |                                                                                     |         |                                                                                      |
|---------|-------------------------------------------------------------------------------------|--------|-------------------------------------------------------------------------------------|--------|-------------------------------------------------------------------------------------|---------|--------------------------------------------------------------------------------------|
| B01-200 |  | B02-08 |  | B02-20 |  | B06-425 |  |
| 4x      | 6,3x13                                                                              | 8x     |                                                                                     | 8x     |                                                                                     | 2x      |                                                                                      |

B01-200

B06-425

Front Schubk.-blende

B02-20

B02-08

Z01-105-350

h=10mm







B02-08

Z01-106-350

4


9

|         |                                                                                   |        |                                                                                   |
|---------|-----------------------------------------------------------------------------------|--------|-----------------------------------------------------------------------------------|
| B01-30  |  | B01-70 |  |
| 26x     | 3x16                                                                              | 4x     | 3x30                                                                              |
| B01-122 |  |        |                                                                                   |
| 4x      | 4x13                                                                              |        |                                                                                   |

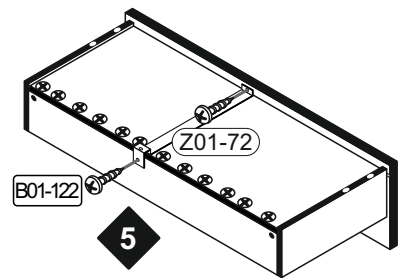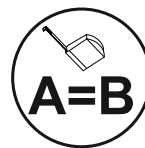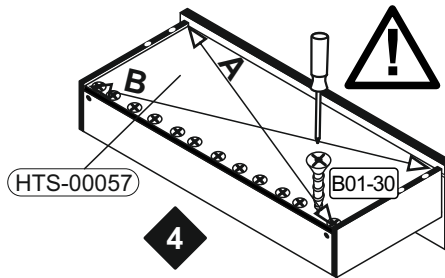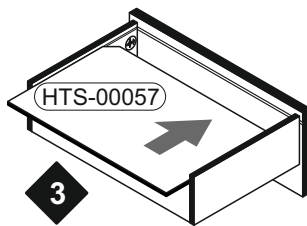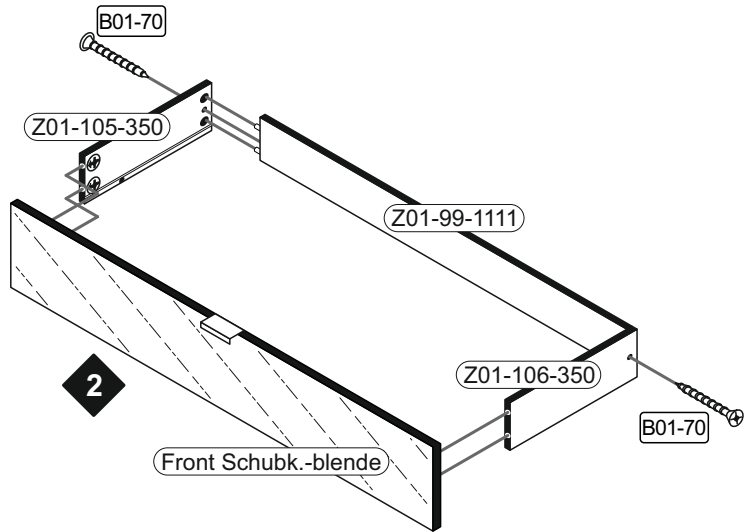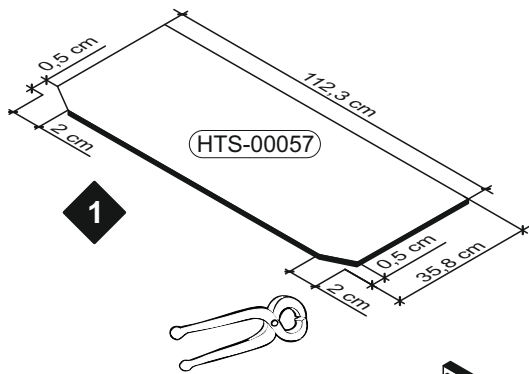

10

|         |                                                                                     |
|---------|-------------------------------------------------------------------------------------|
| B05-130 |  |
| 1x      | LEIM                                                                                |

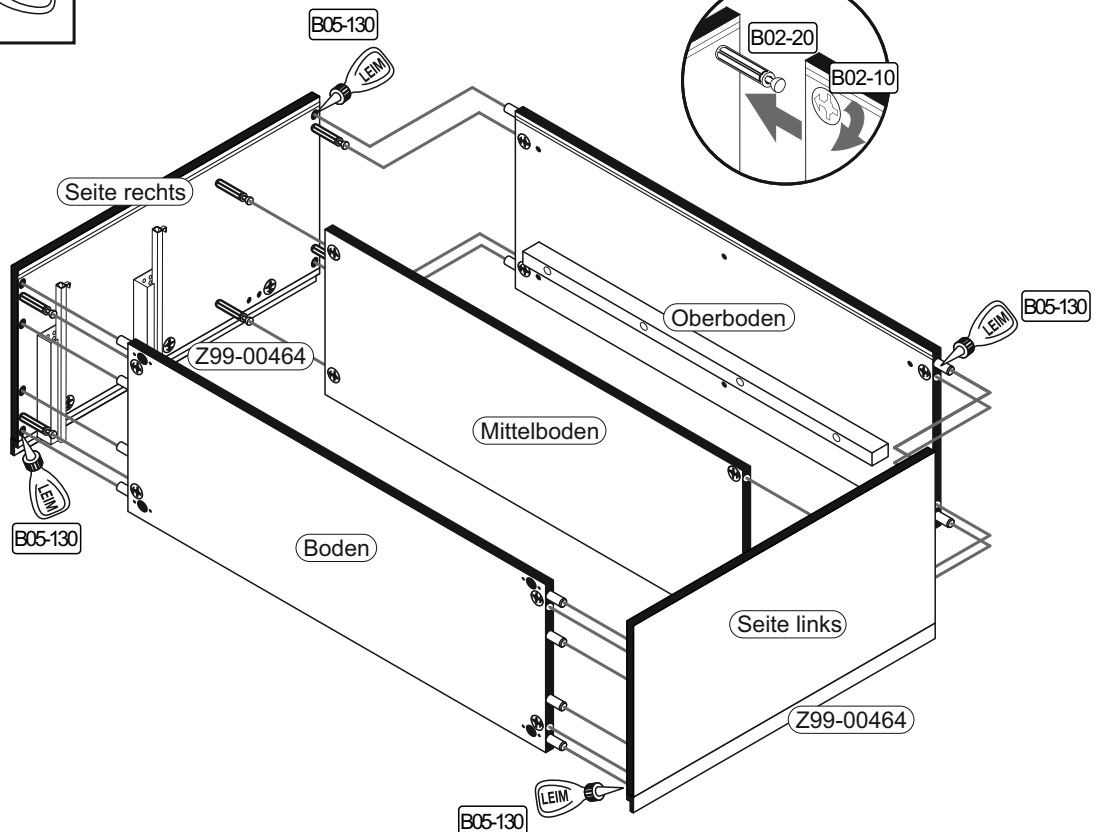

# CHICAGO

11

|         |      |        |        |
|---------|------|--------|--------|
| B01-30  |      | B01-90 |        |
| 22x     | 3x16 | 4x     | 3,5x20 |
| B01-123 |      |        |        |
| 8x      | 4x15 |        |        |
| B05-185 |      |        |        |
| 4x      |      |        |        |
| B02-173 |      |        |        |
| 4x      |      |        |        |

B01-90  
B05-185  
90°

A=B


12

|         |  |
|---------|--|
| B05-280 |  |
| 1x      |  |


Höhenverstellung der Möbelfüße

13



## Einbau des Schubkastens

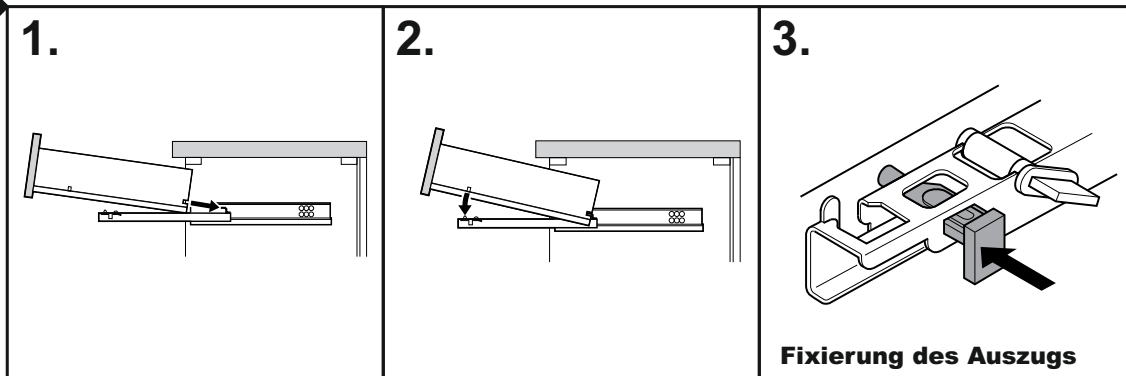

## Ausbau des Schubkastens

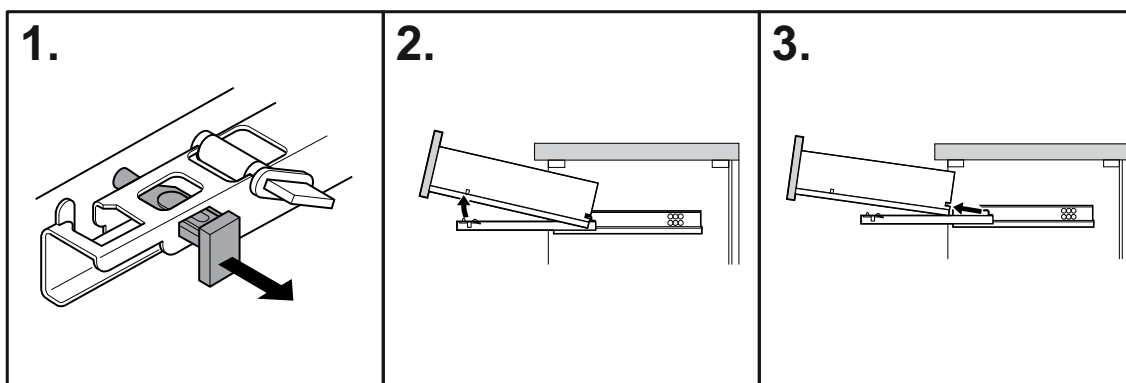

## Höhenverstellung des Schubkastens

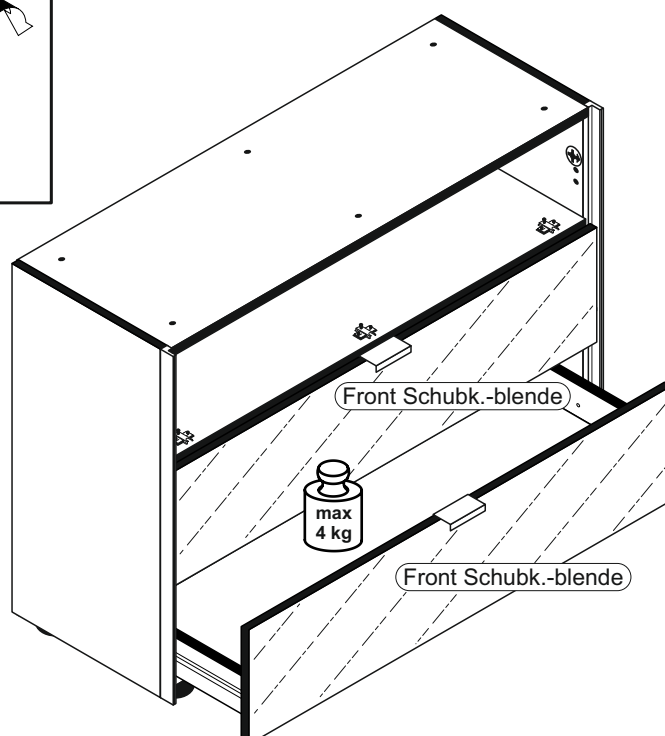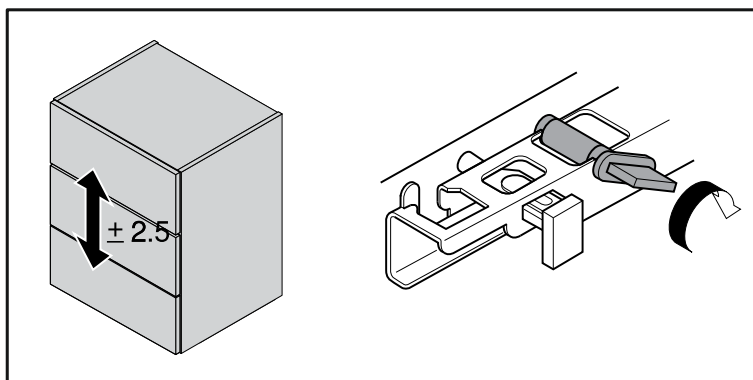

# CHICAGO


14

B05-260


1x

set one



by Musterring

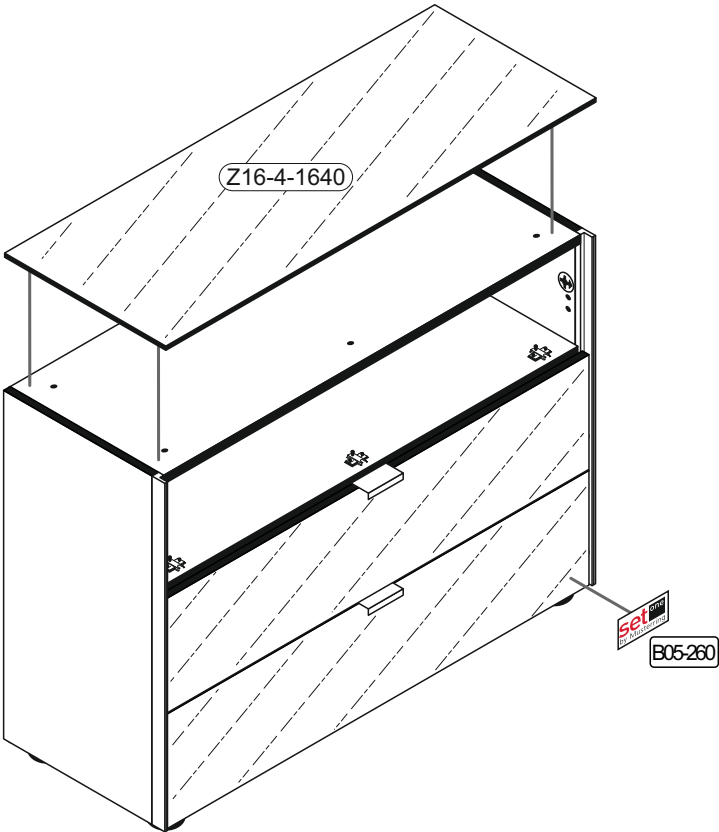





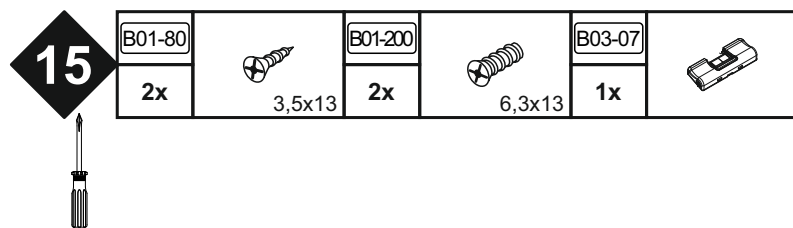

## Stütze unten (Z07-27) überdrehen

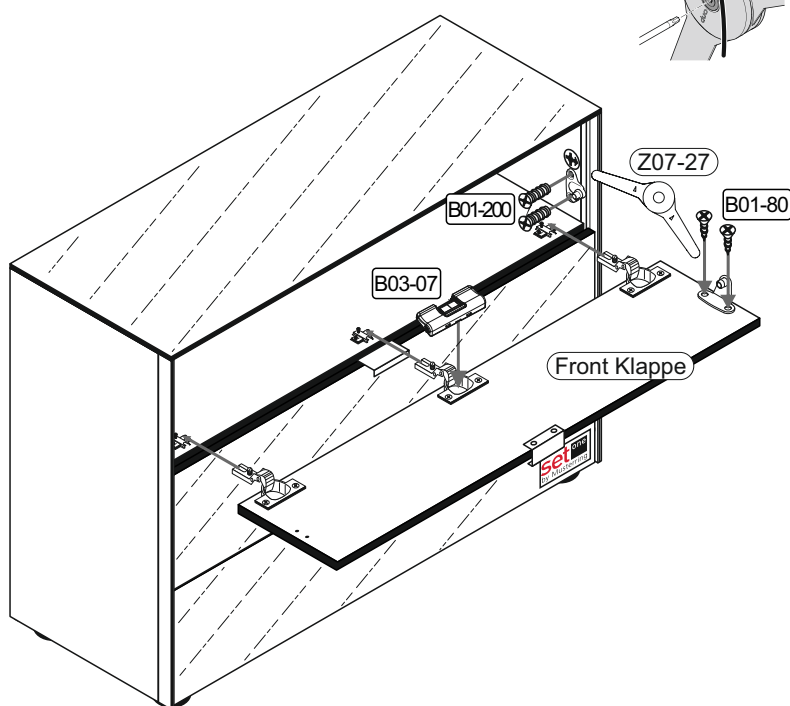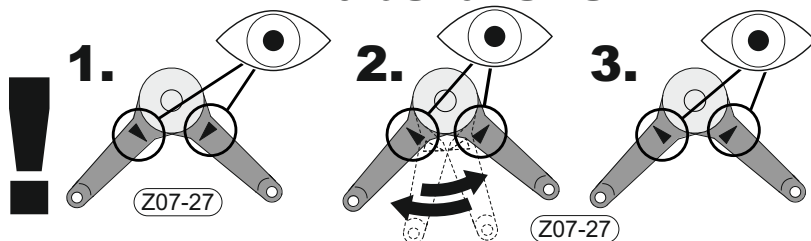

## Montage der Türdämpfung

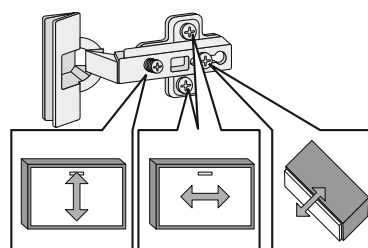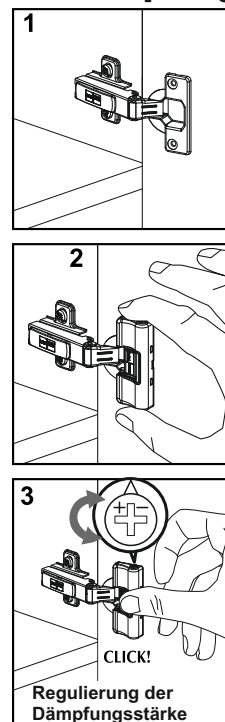

SCAN ME

Türen einstellen (Scharniere justieren)  
Adjusting the doors (adjusting the hinges)  
Régler les portes (ajuster les charnières)  
Sistemare le porte (regolare le cerniere)  
Deuren instellen (scharnieren afstellen)  
Nastawić drzwi (wyregulować zawiasy)  
Výrovnejte dvířka (seříd'te závěsy)  
Nastavenie dverí (nastavenie závesov)  
Állítsa be az ajtókat (állítsa be a zsanérokot)  
Reglare usi (ajustare balamale)  
Kapıların ayarlanması (menteselerin seviye ayarı)  
Регулировка дверей (регулировка шарнира)