

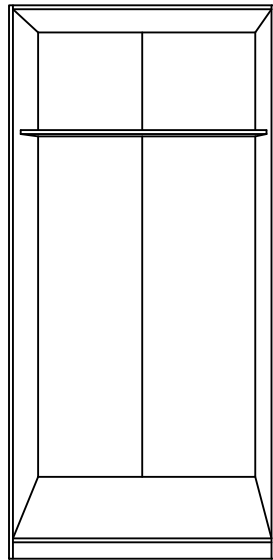





1089

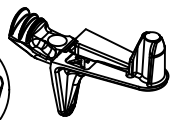



1

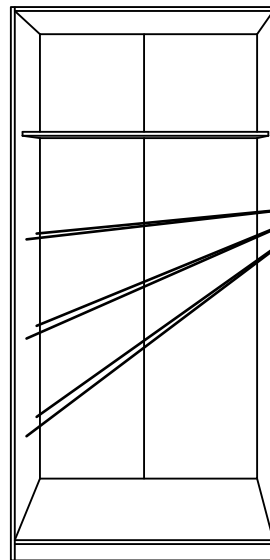


1089

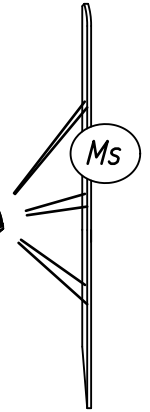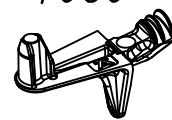

2

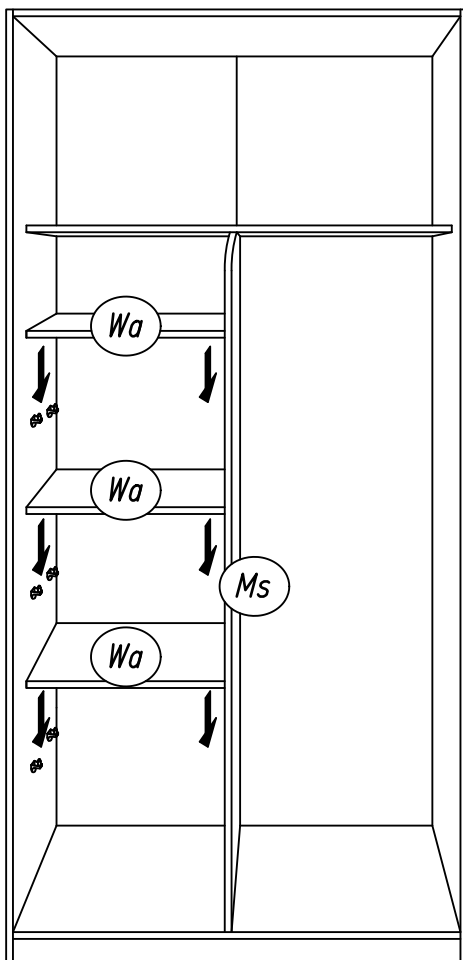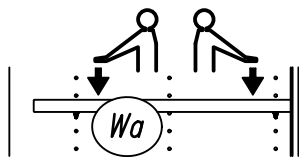




3

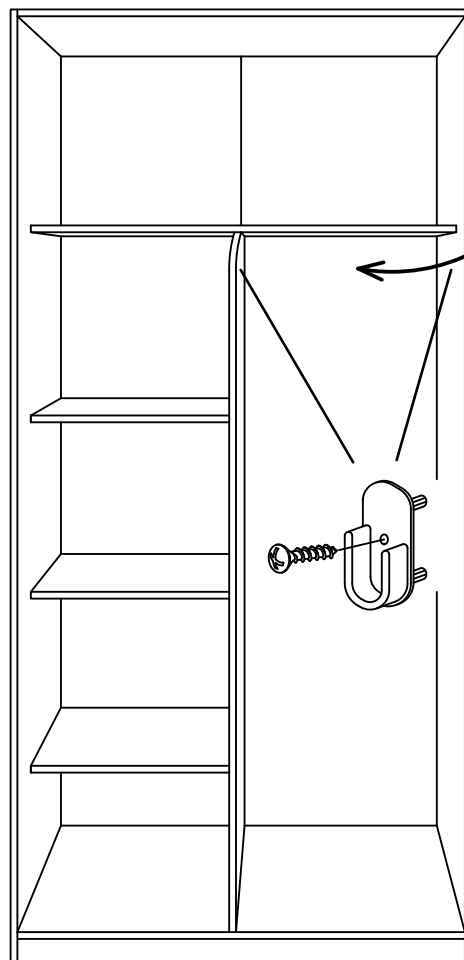



1.

M0850_04





rauch

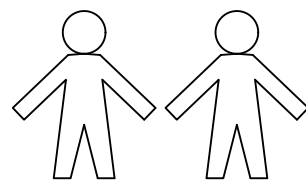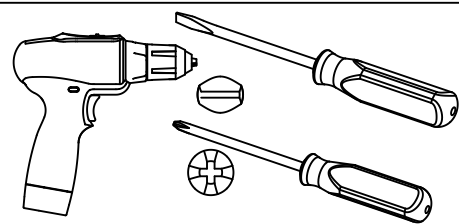





Ø5mm

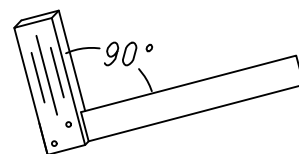









Typ I

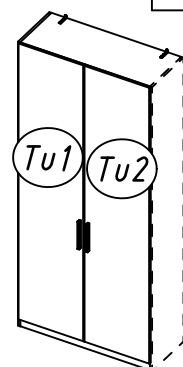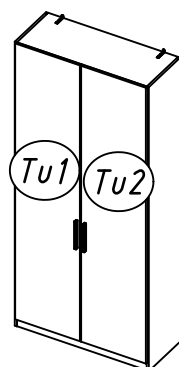

Typ II







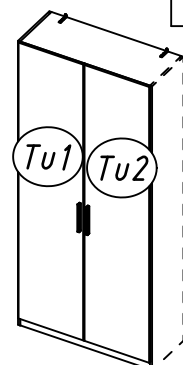
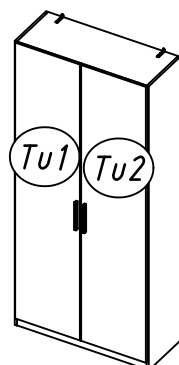


2.

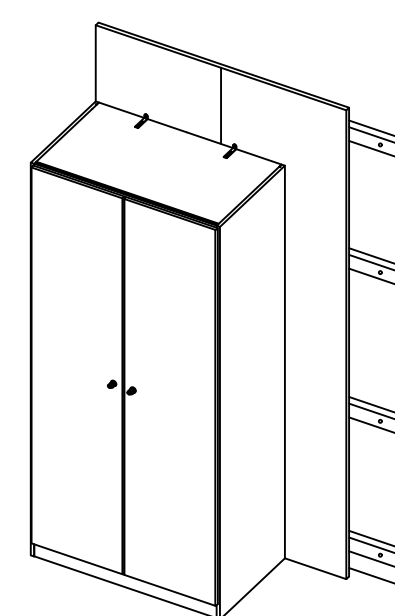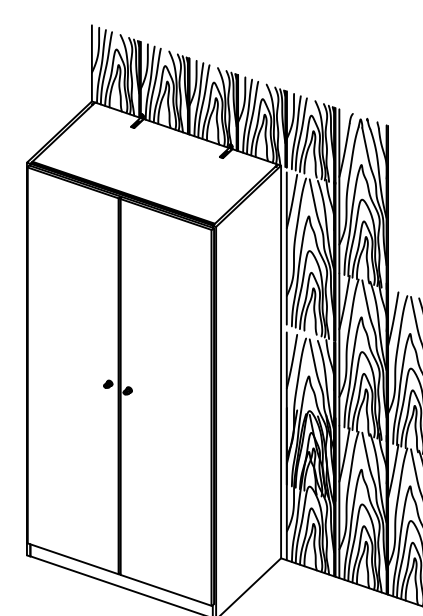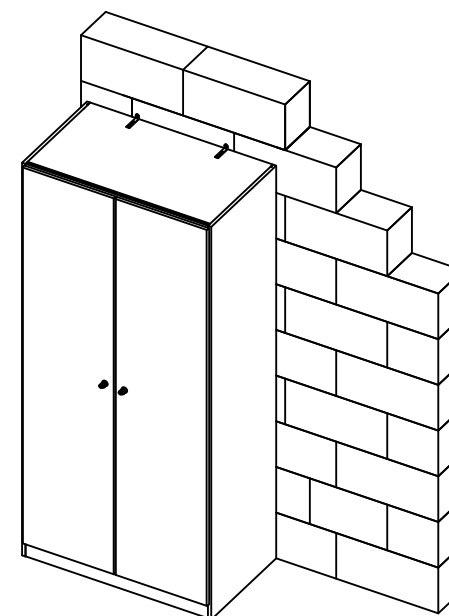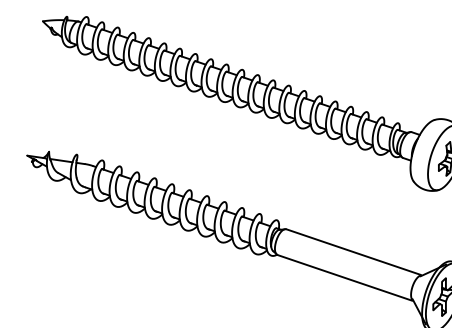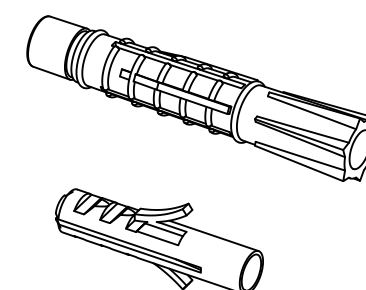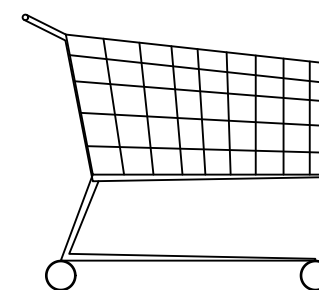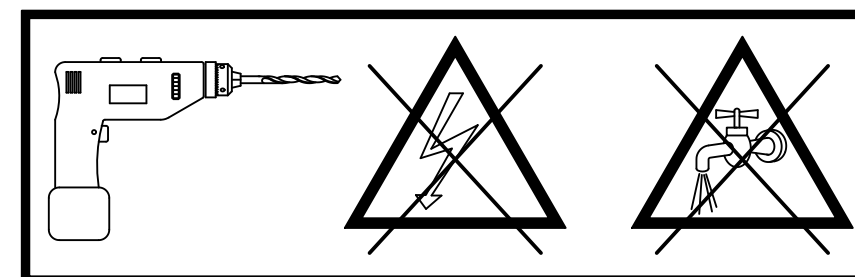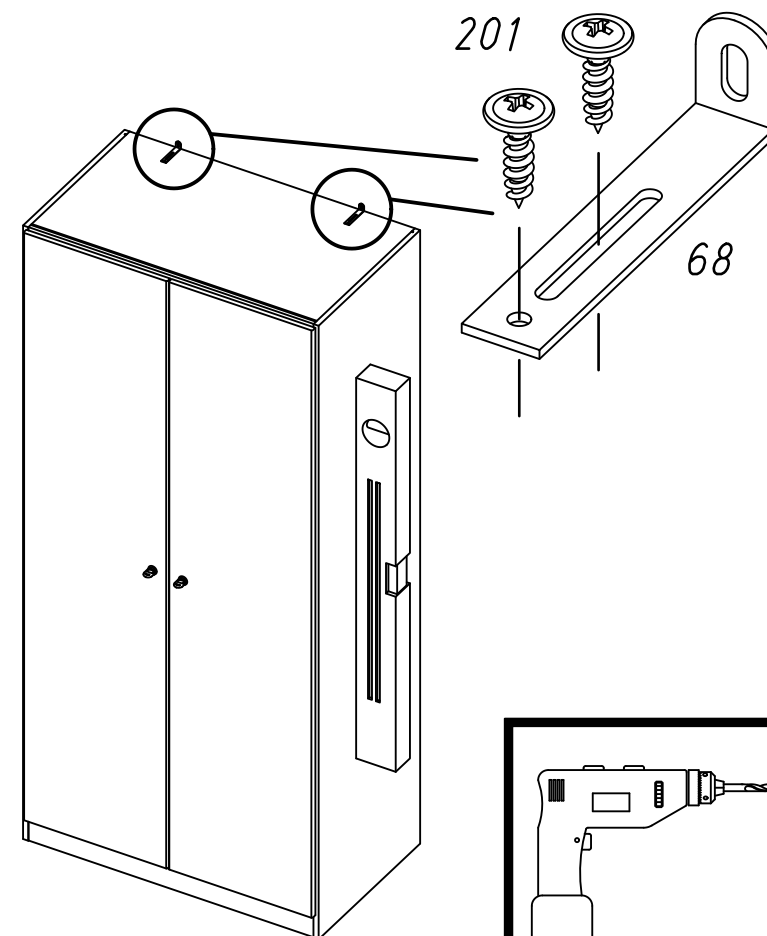

Typ I

Typ II

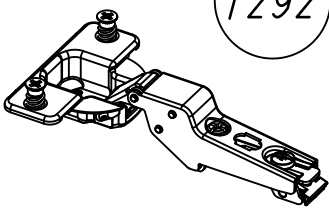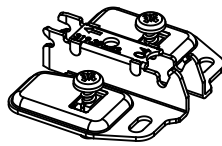12  55x16x6	29 	47 	201  4x15	205  3,5x15	1292 
1291 	621  4x13	779  6,5x12	1085 	1086 	1089 

De1

Wa1

Rw1

Bo1

Se1

Ms

De2


Wa2

Rw2

Bo2

Se2

Ks



0

20

40

60


80

100 mm


M0850


1

8x 1085



4x 1086





Typ I

Typ II

Se1

1085

1085

Se2

1085

1085

Ms

1086

1086

0

20

40

60

80

100 mm


M0850

5.

2



2x

47



2x

779



Typ I
Typ II

Se1

2.

1.

Bo

1.

Se1

Rw1

Bo

47 2.

779

2.

De

1.

Se1

Rw1

Bo


M0850

6.

3



2x

47



2x

779



Typ I

Typ II

De

Rw1

Bo

Se2

Ms

Rw

Bo

2.

47

779

Se2

Rw1

Ms



M0850

7.

4




4x

1089

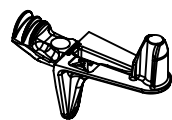

Typ I

Typ II

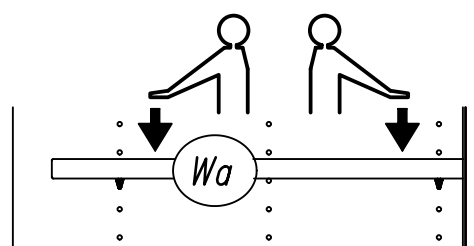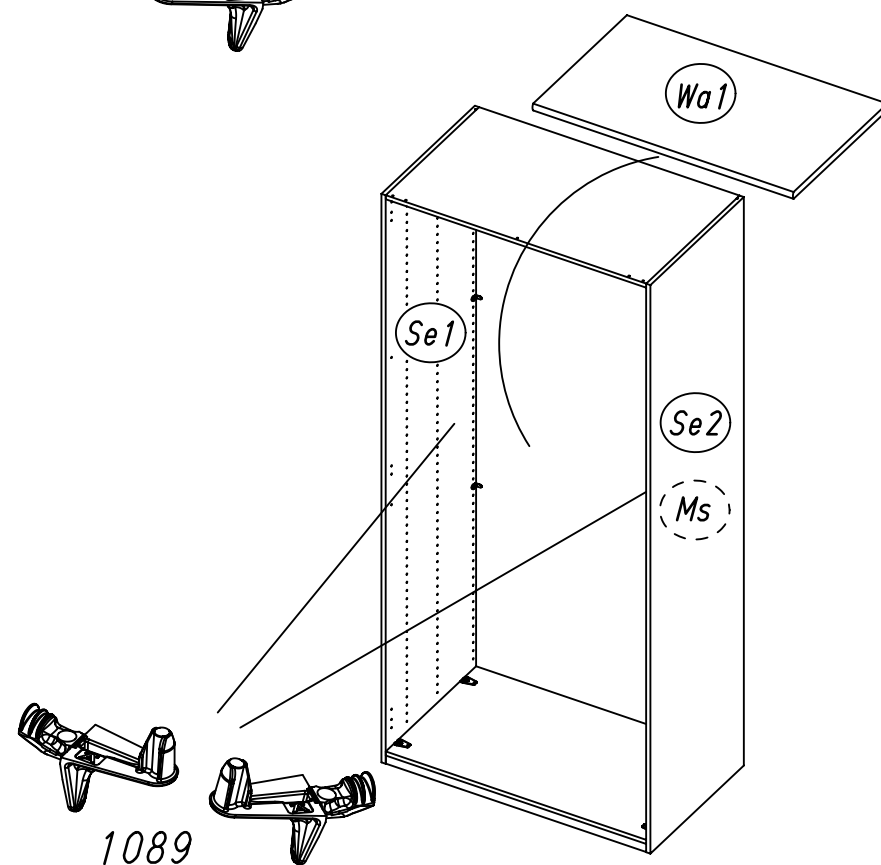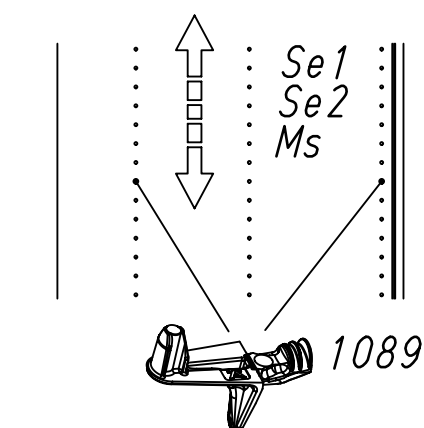


M0850

8.

5


2x

205






2x

29




Typ II

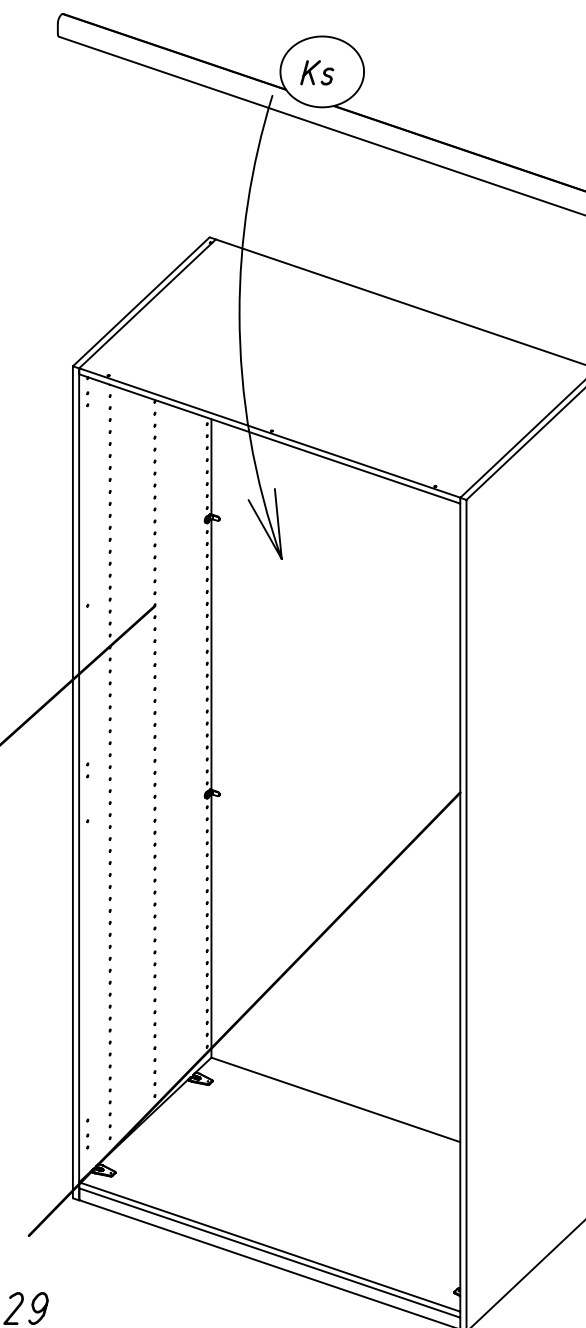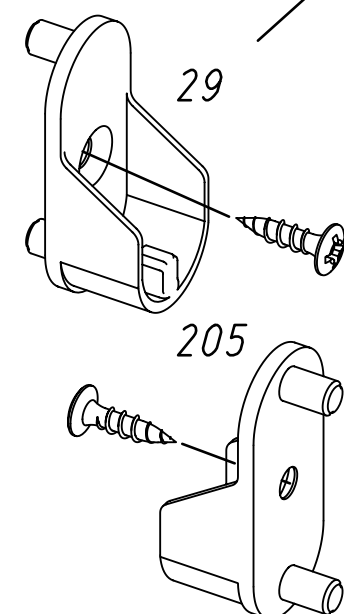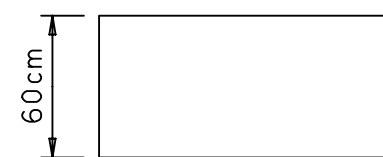


M0850

6

1292

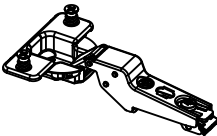







Typ I

Typ II

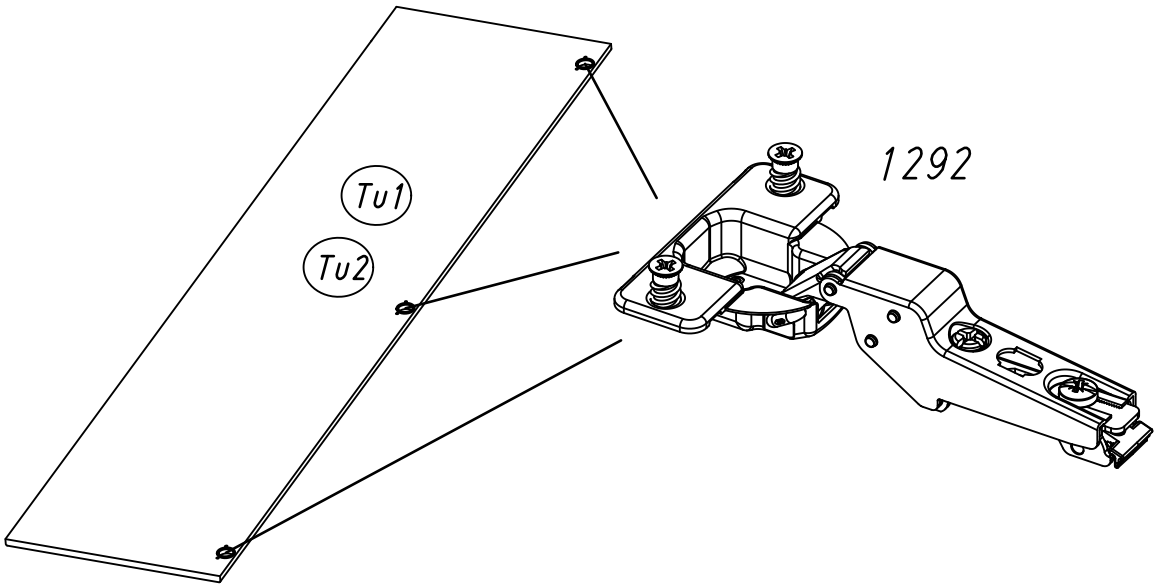


7


1291

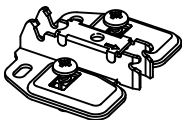







Typ I

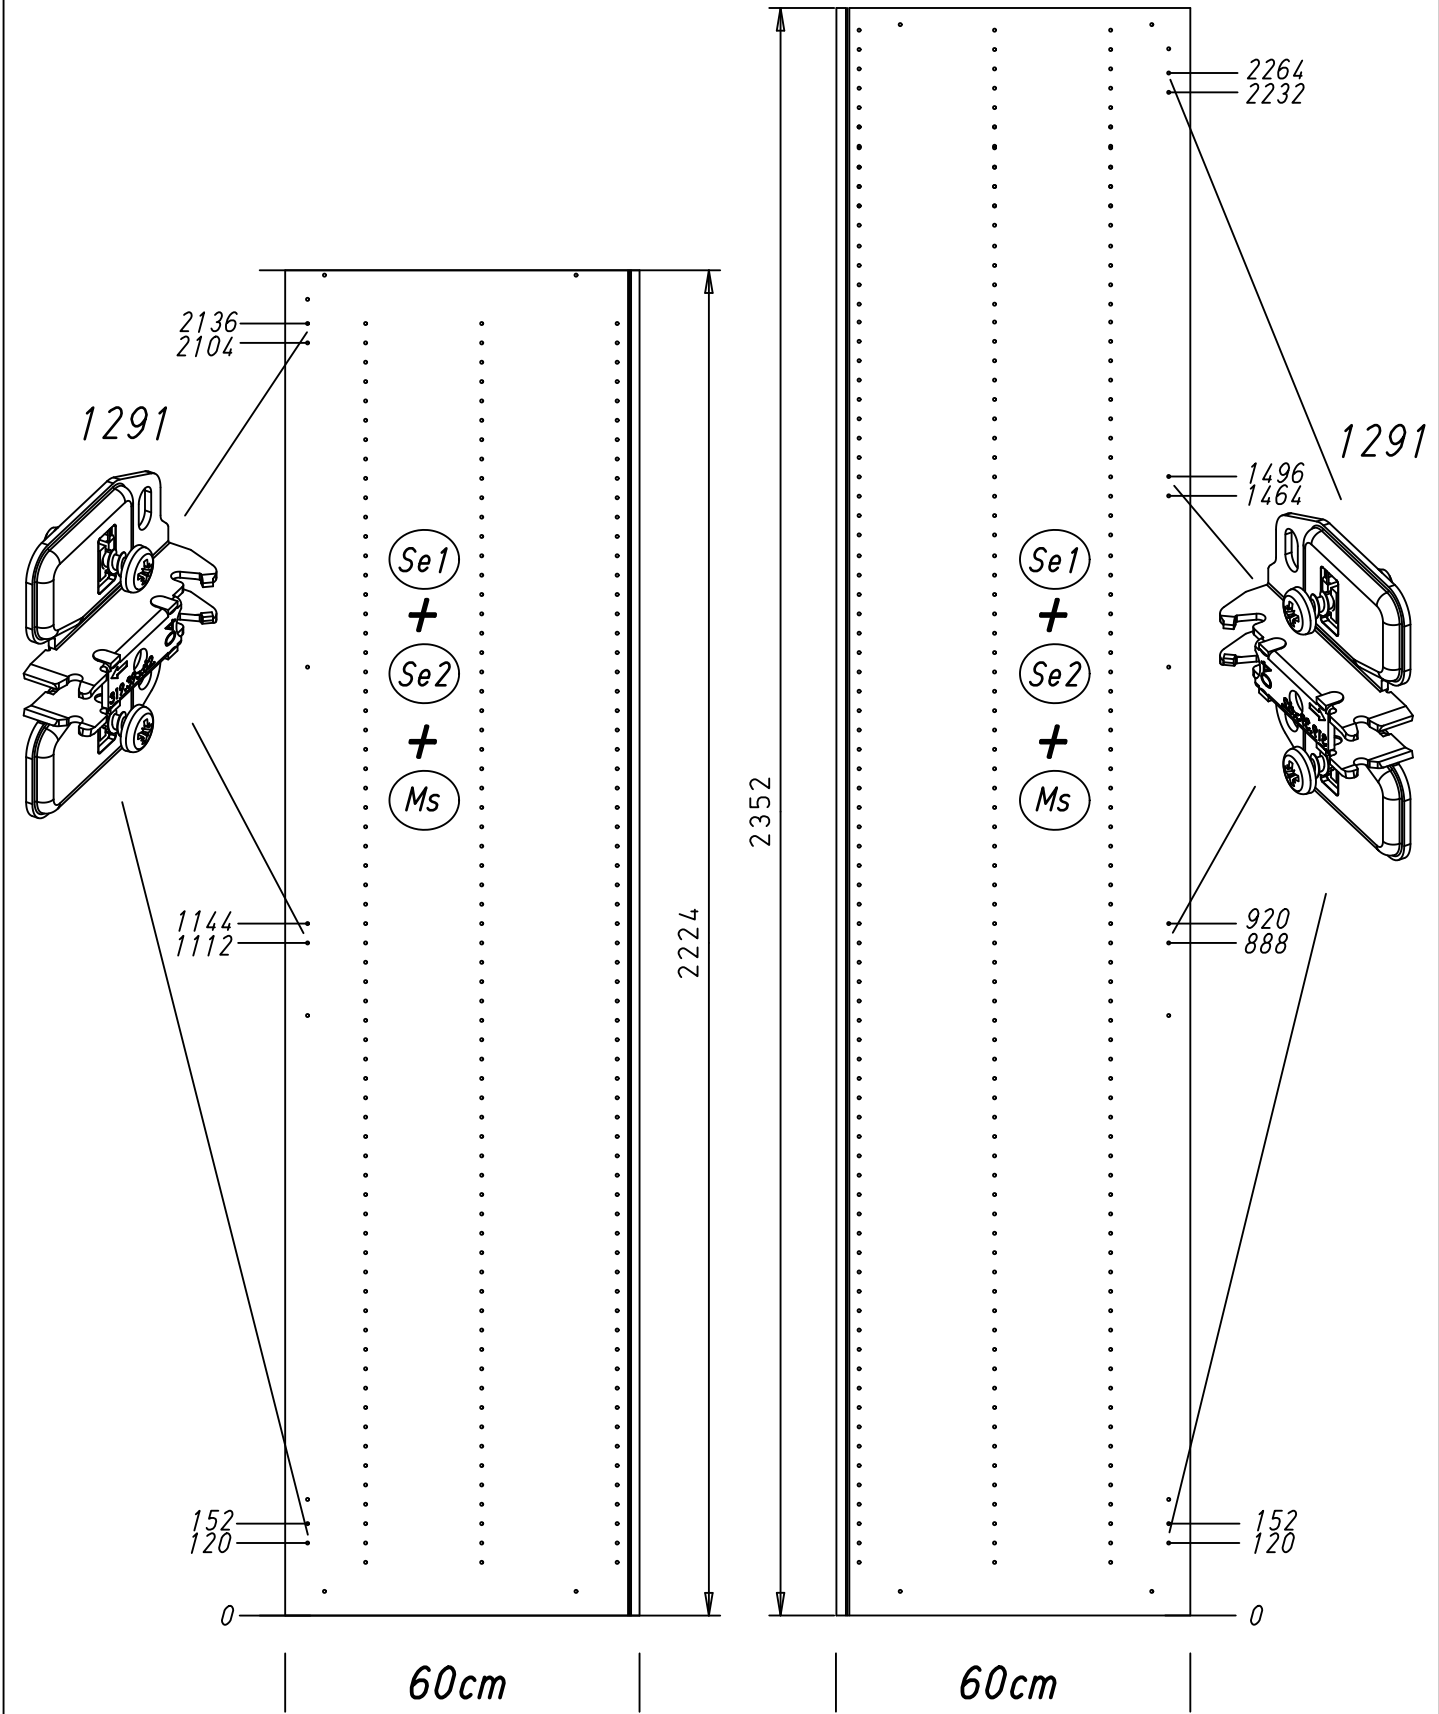


11.

7

1291

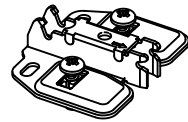

Typ II

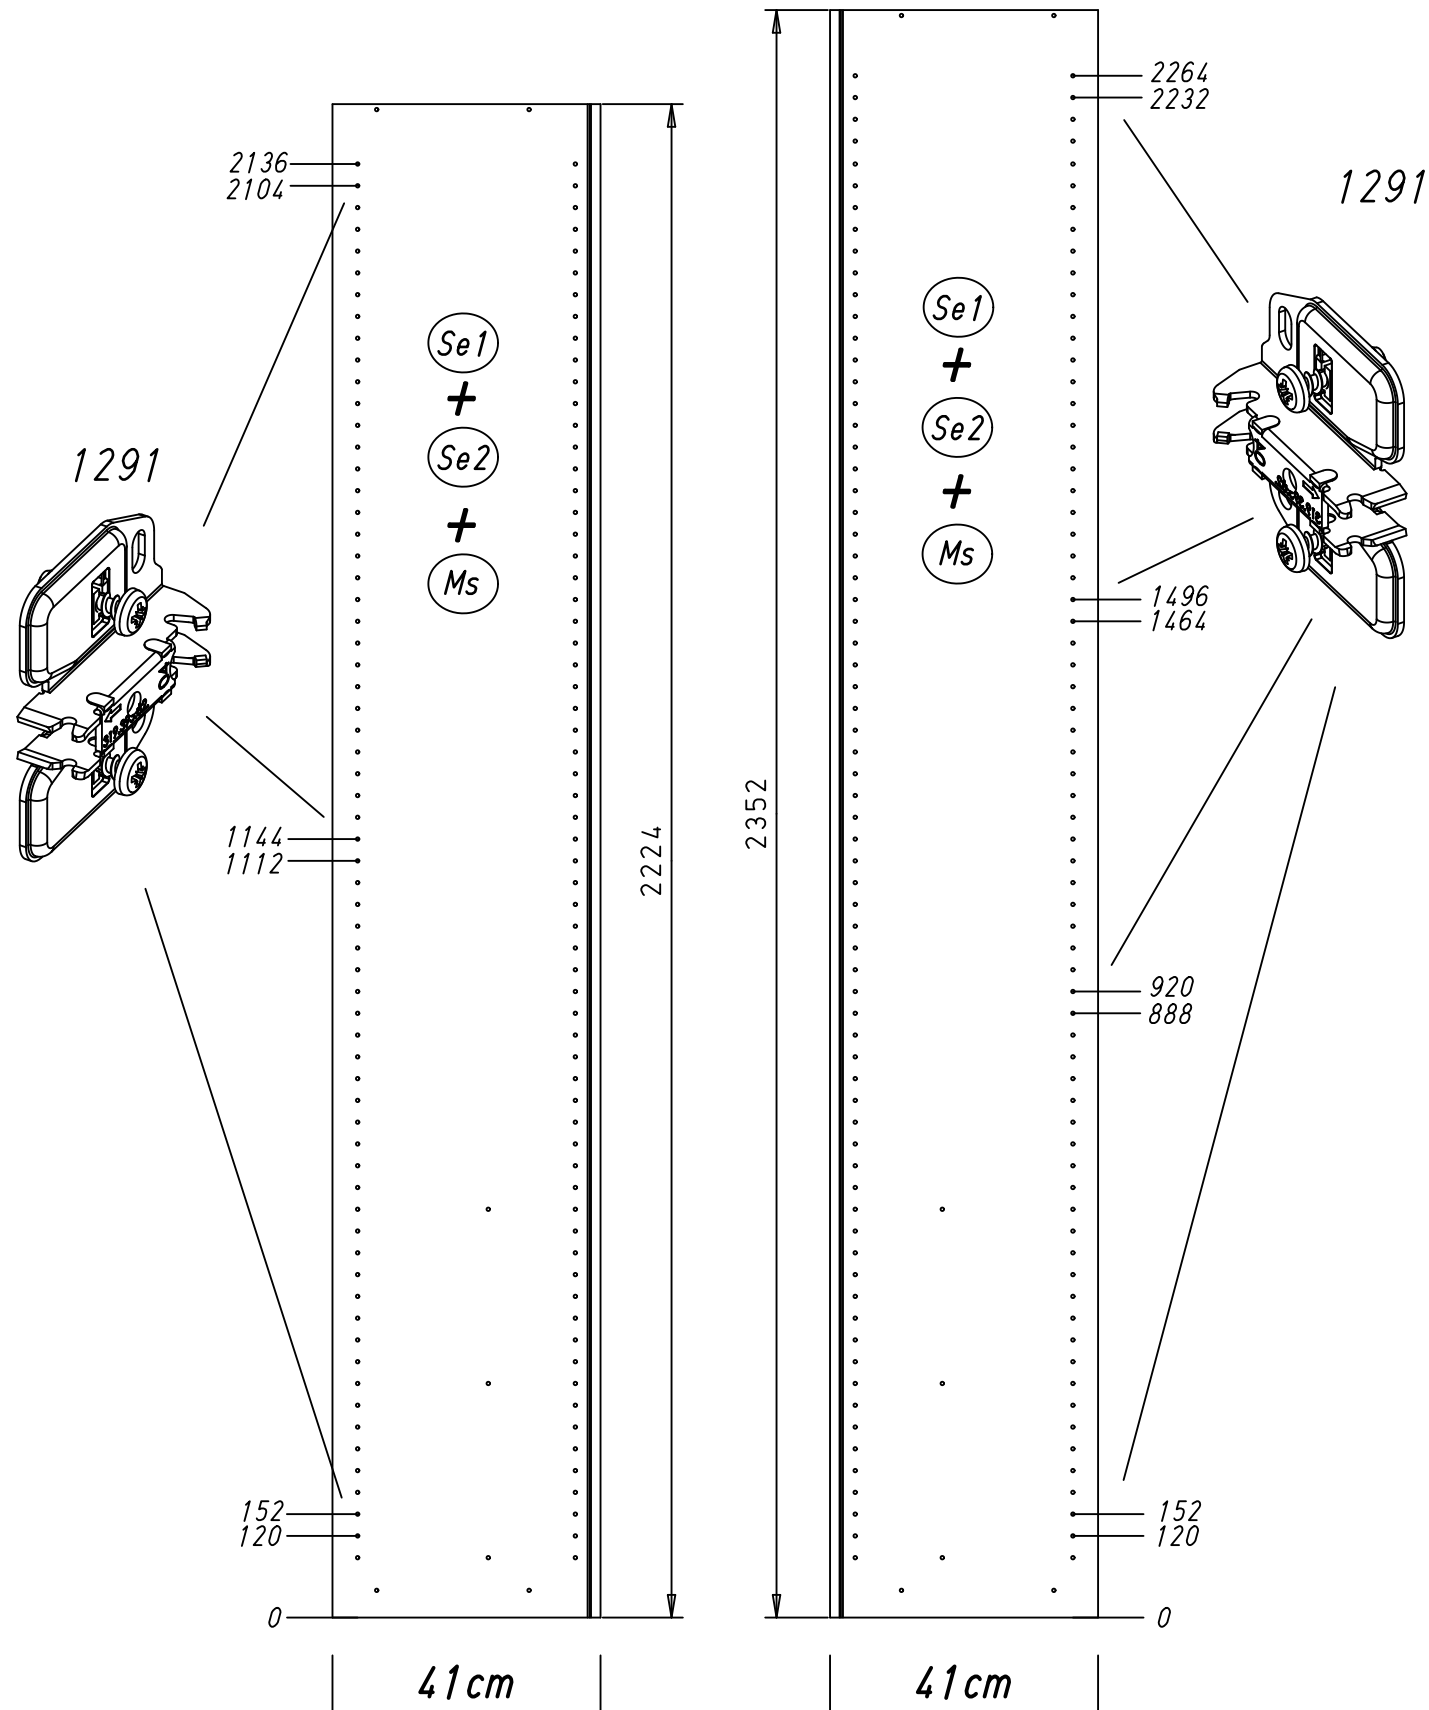



M0850

12.

8

Typ I

Typ II

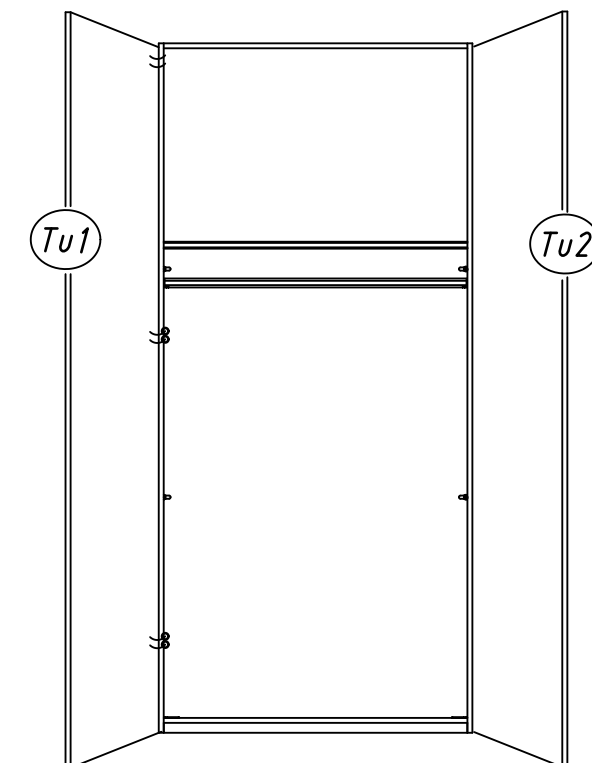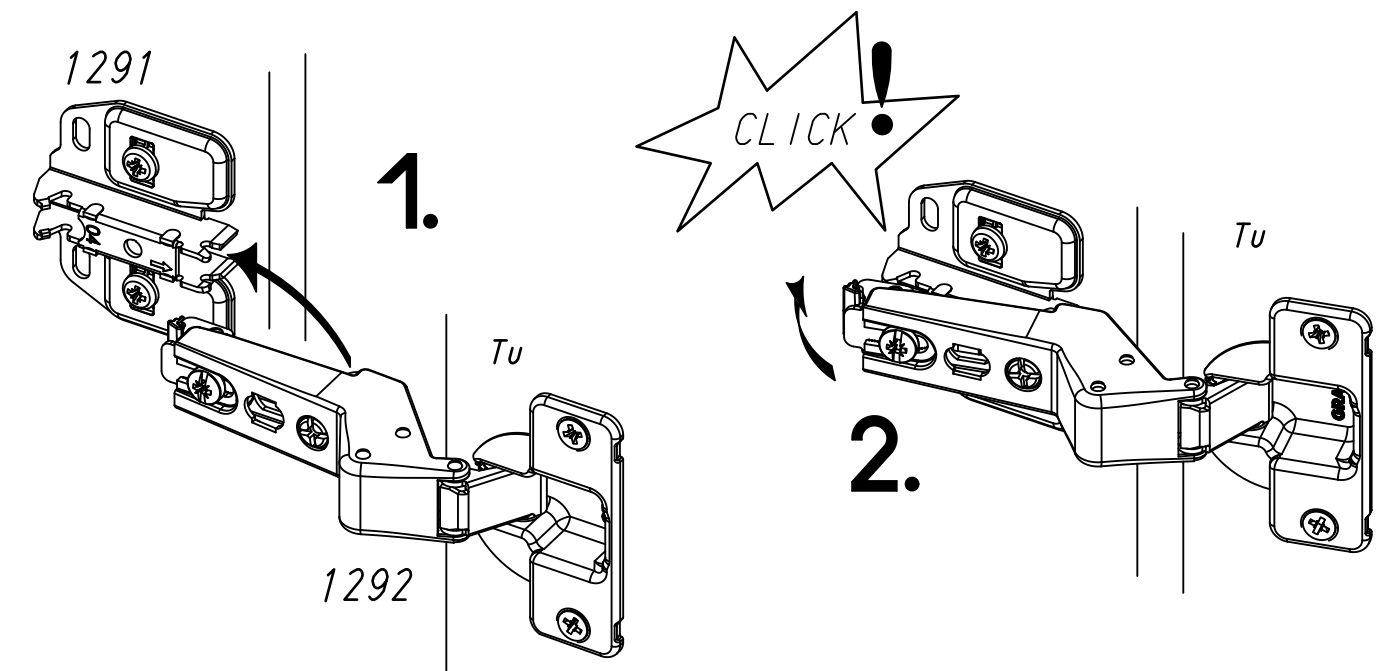



M0850

13.

9



2x

12



Typ I

Typ II

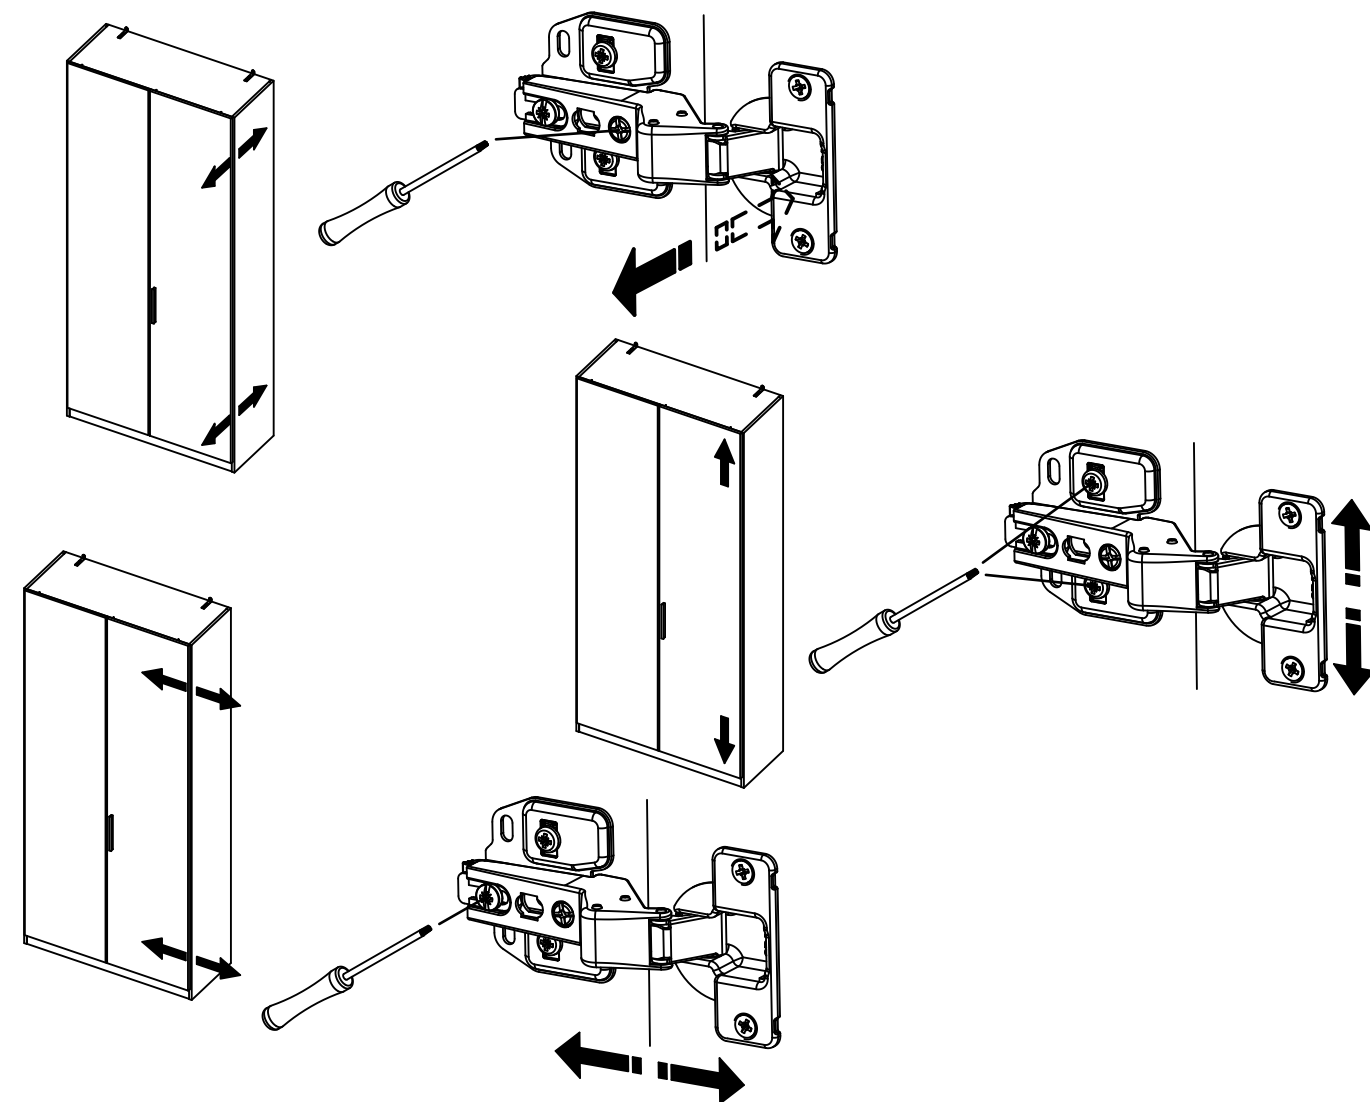
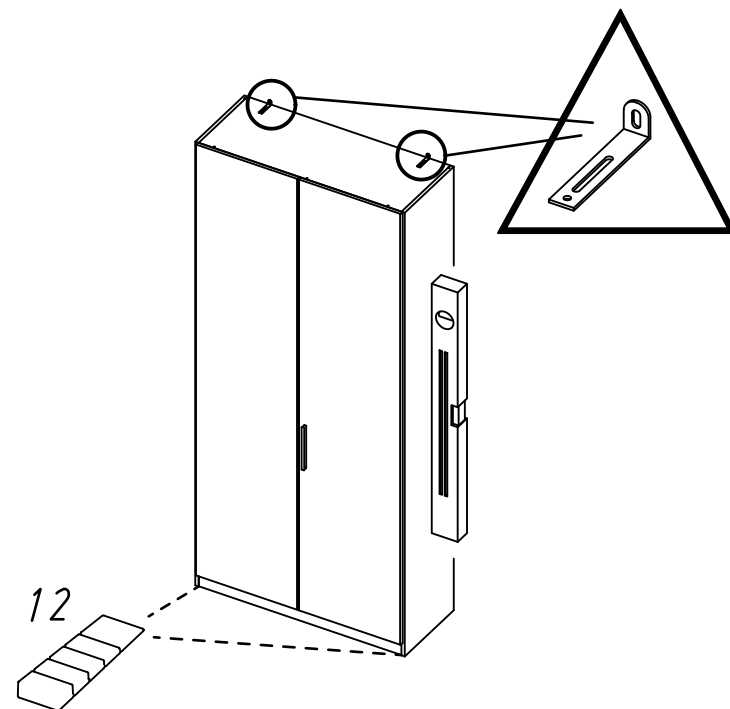


M0850

14.



10

621



Typ I

Typ II

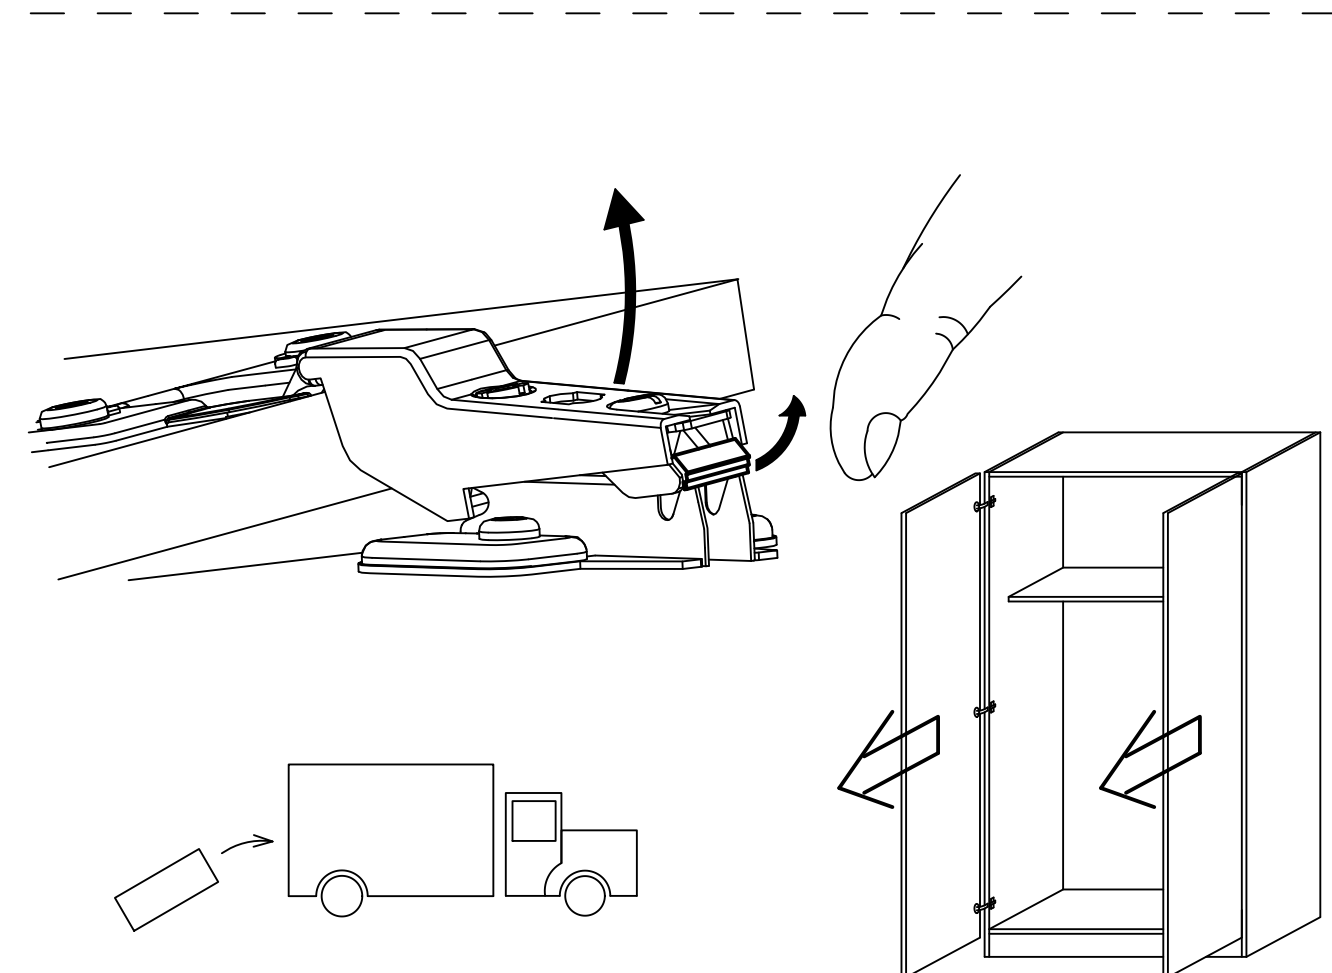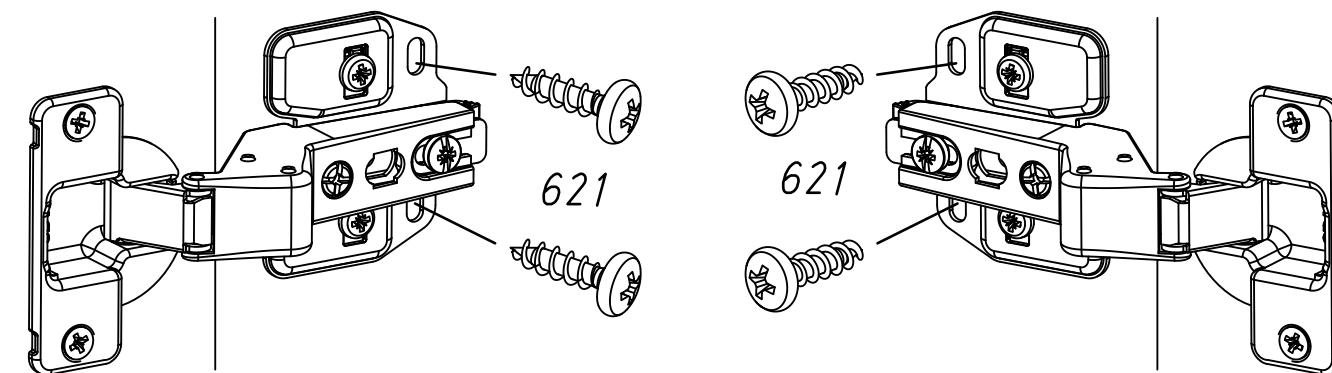


M0850

15.

11





201

4x15



214

4,5x35

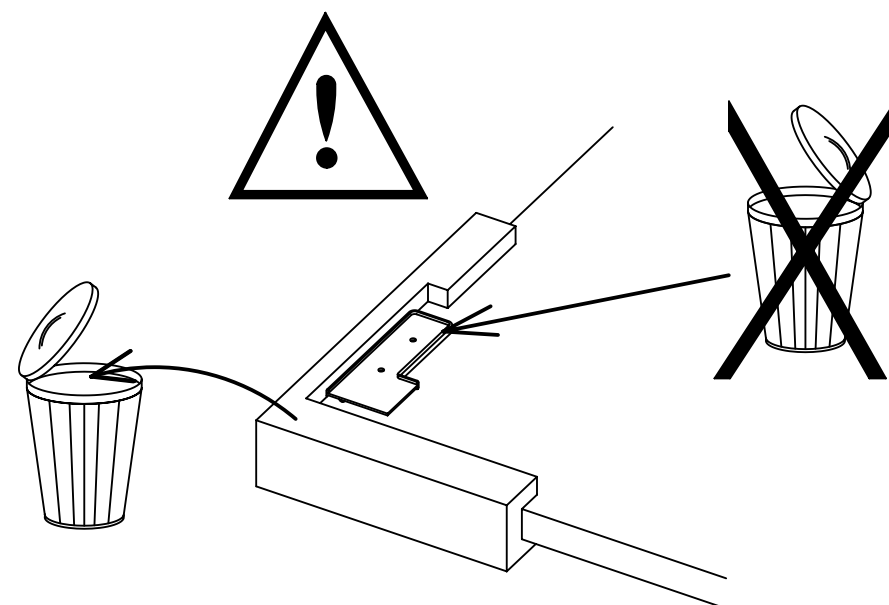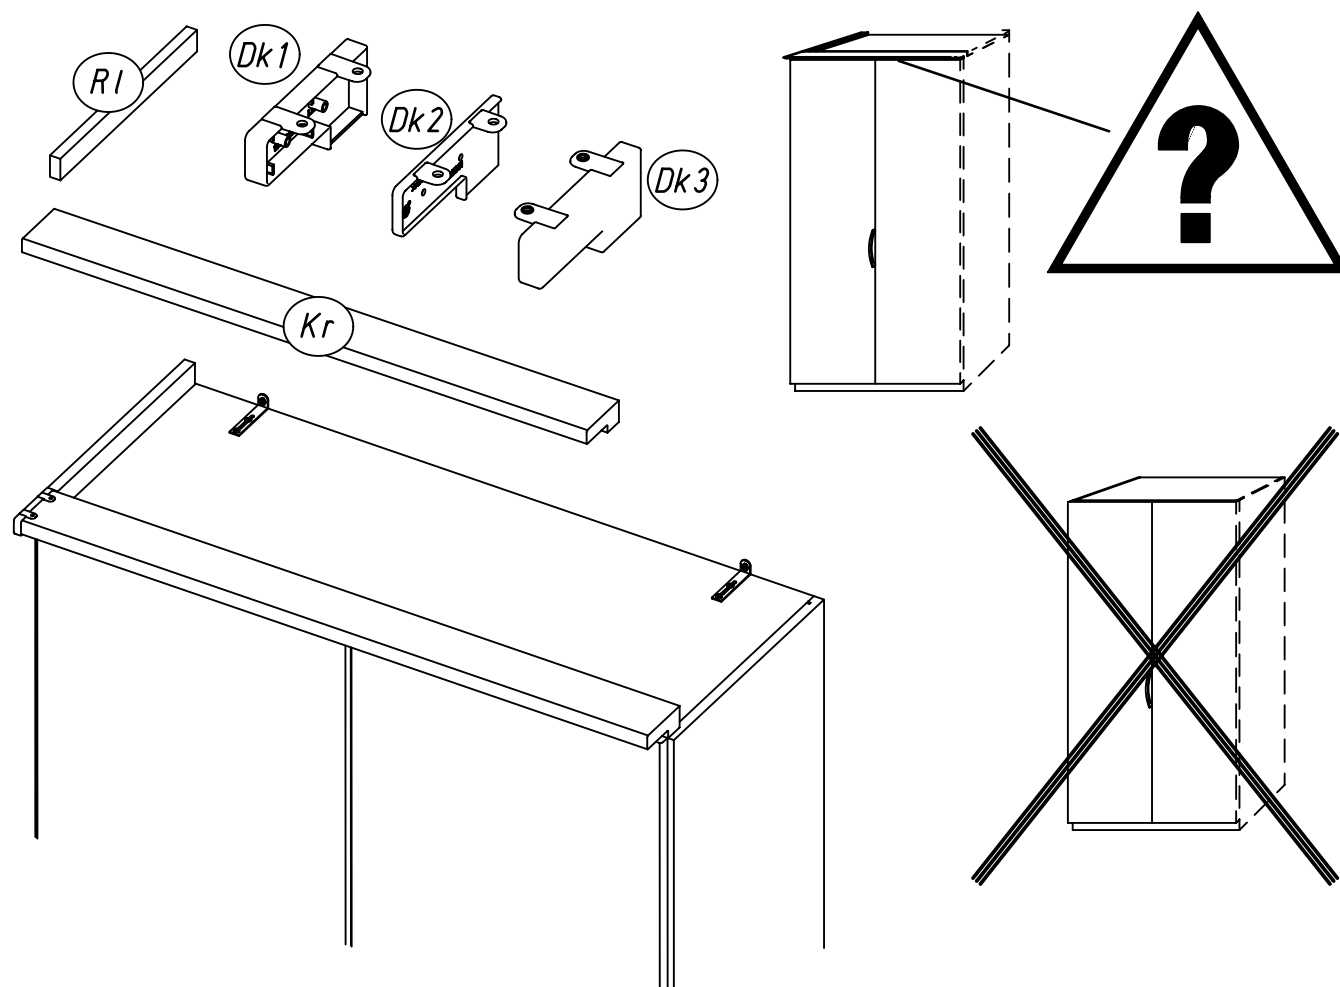

M0850

16.

12





4 x

201



3 x

214

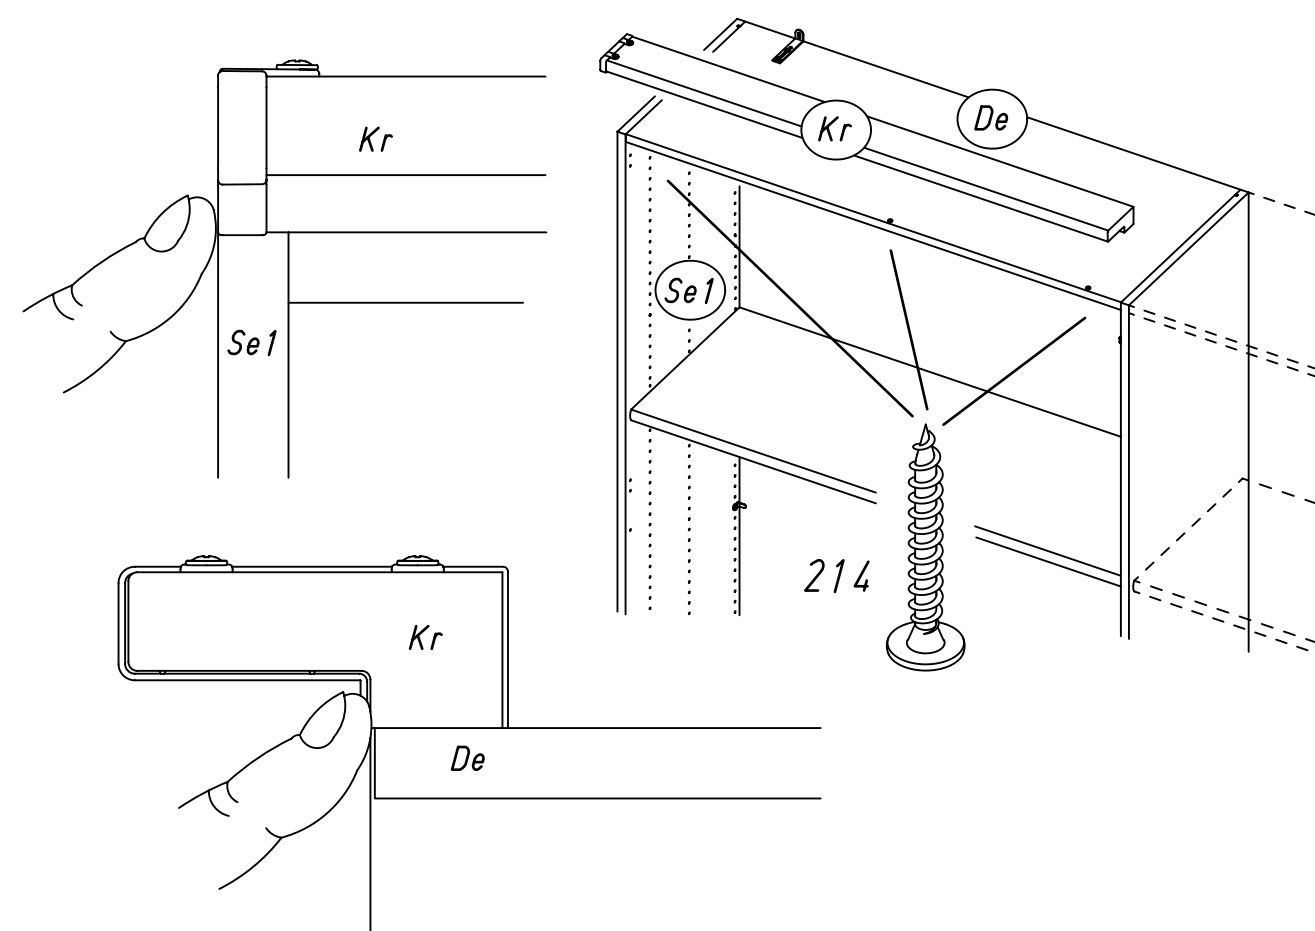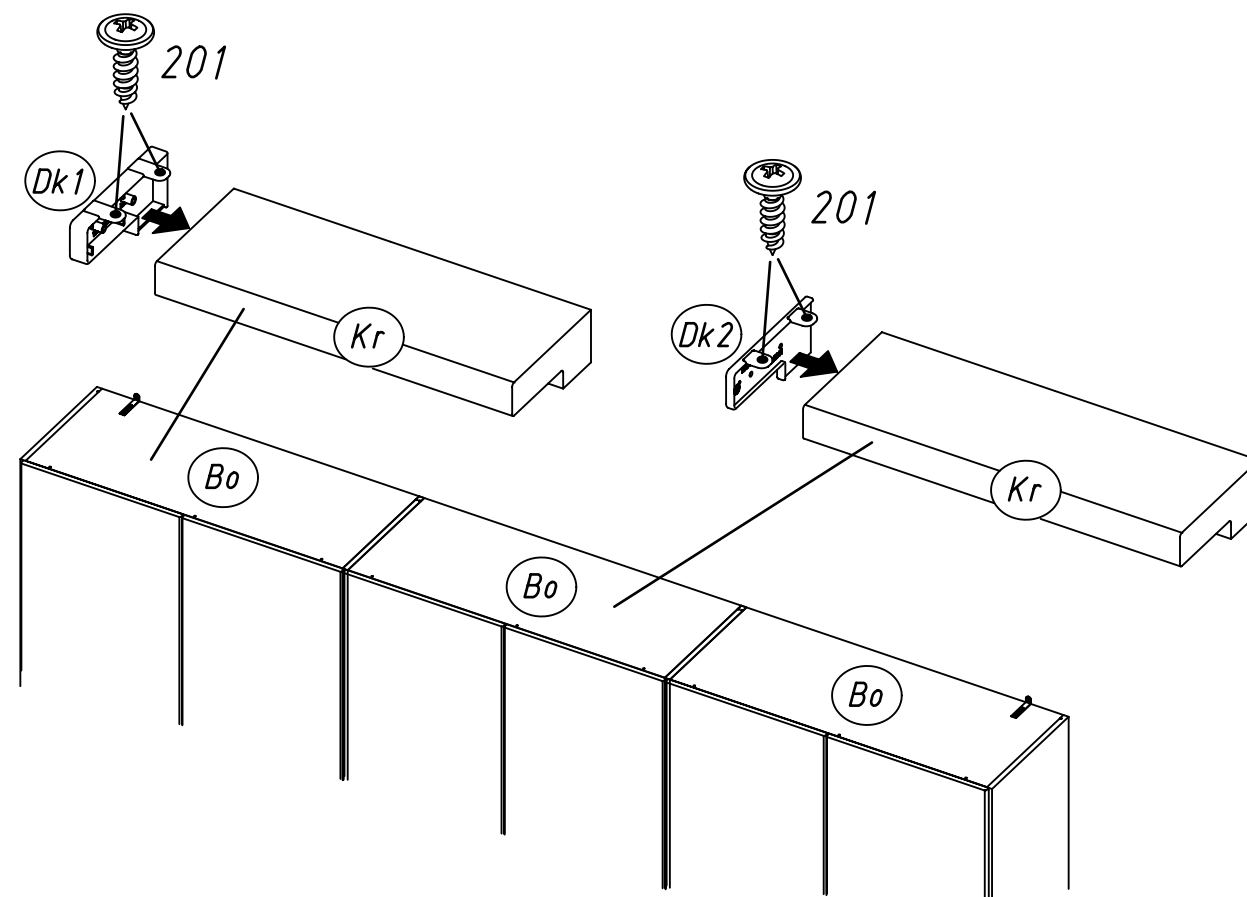

M0850

17.

13





4 x

201



3 x

214

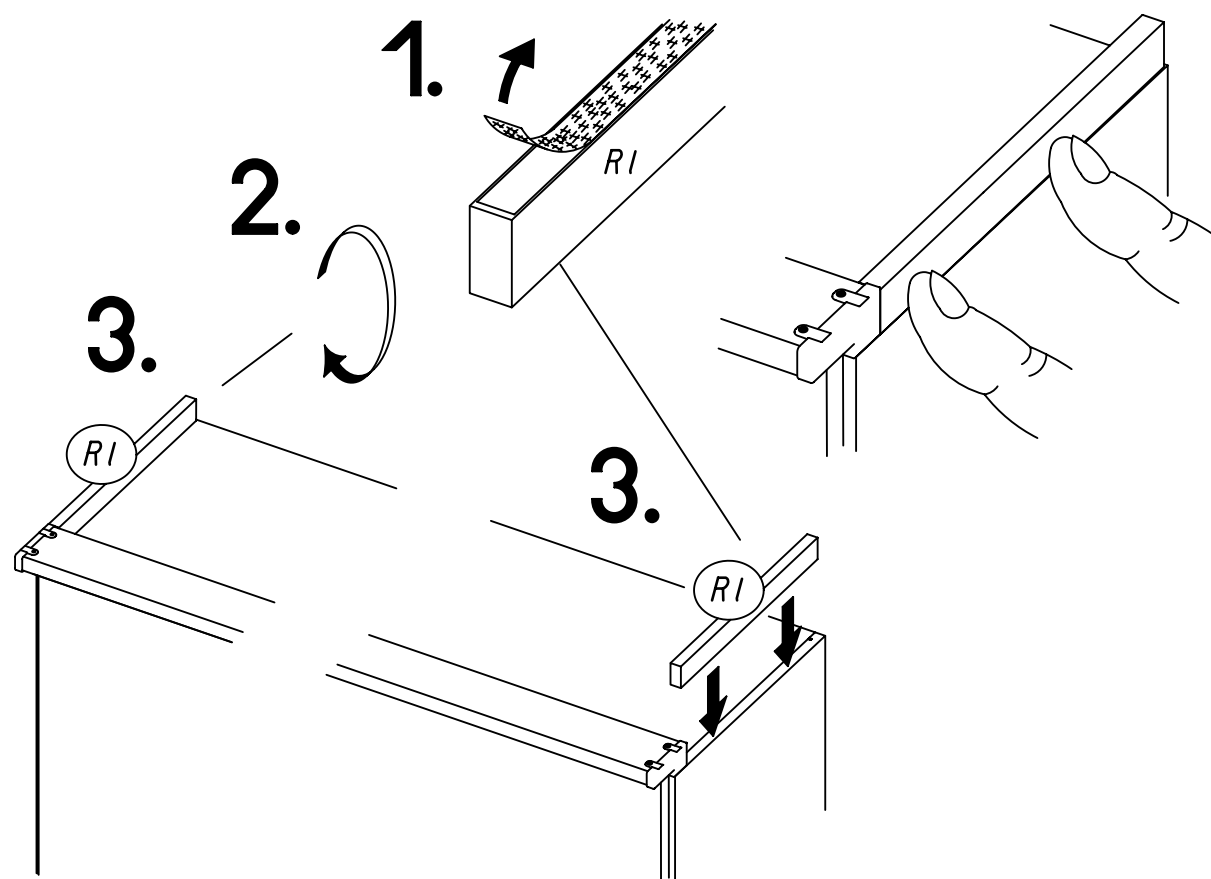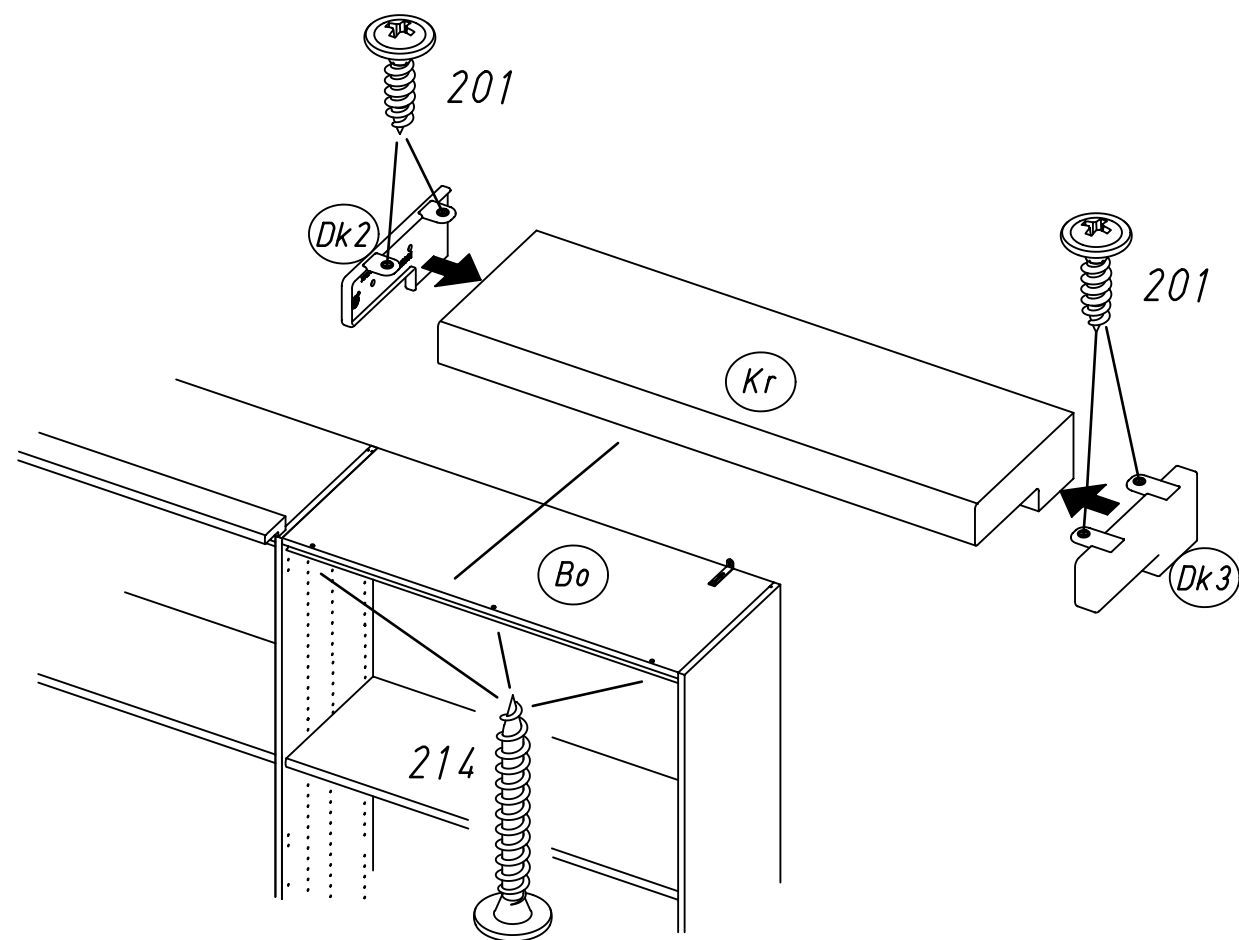


M0850



18.

14

1.

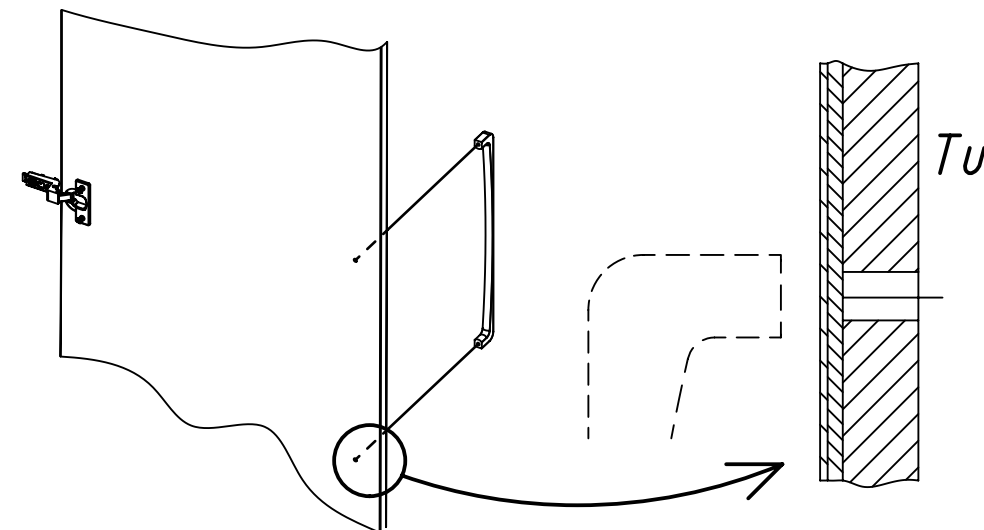

2.




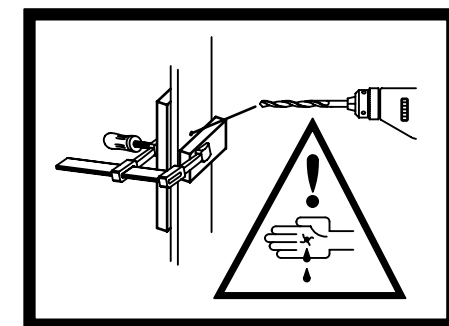
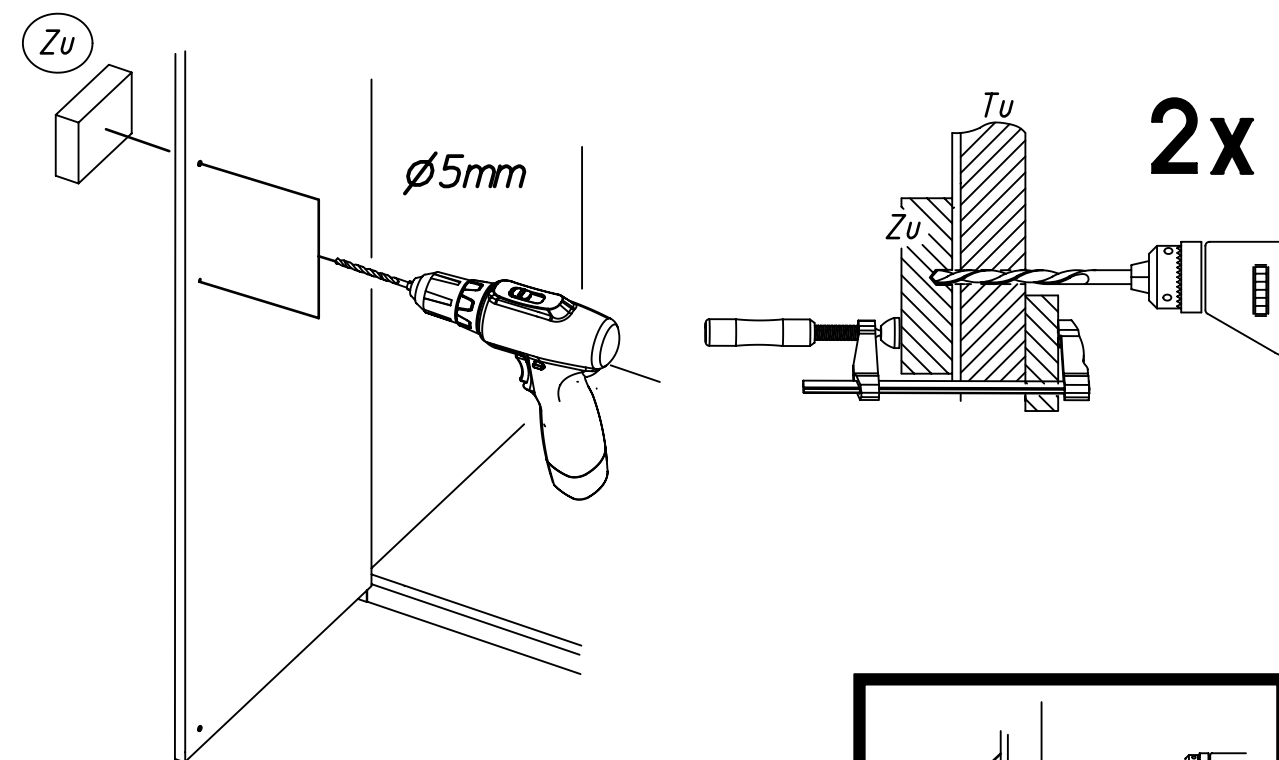


M0850



1.

M0851_06






rauch

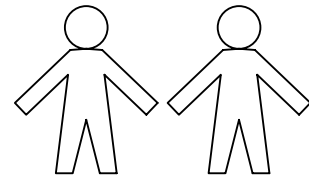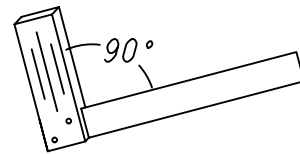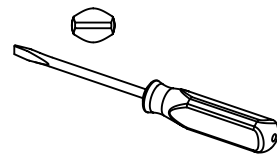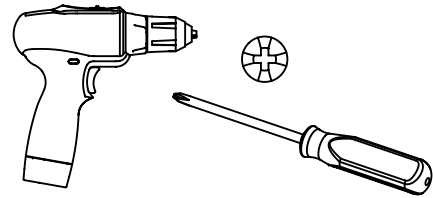





ø5mm

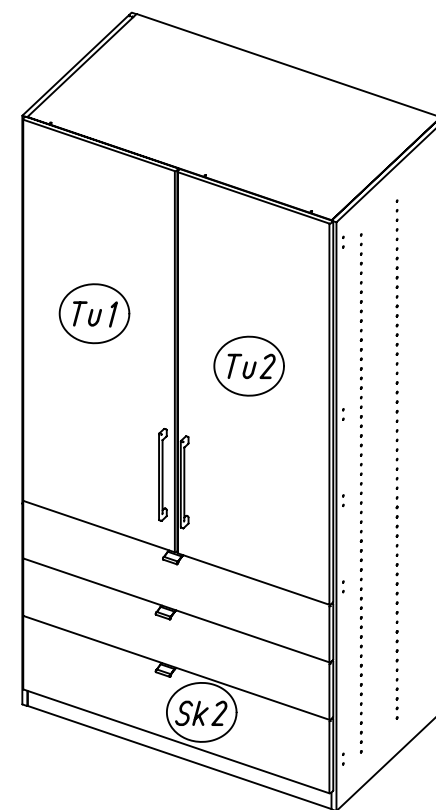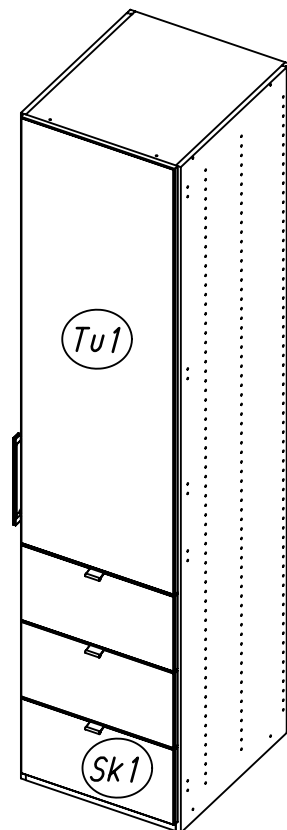


2.

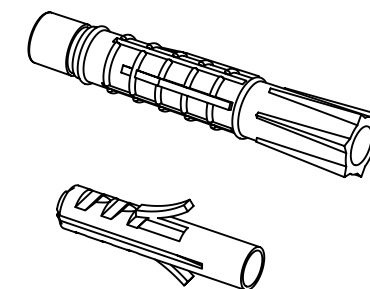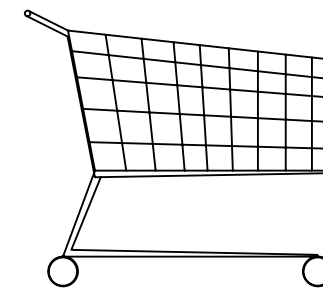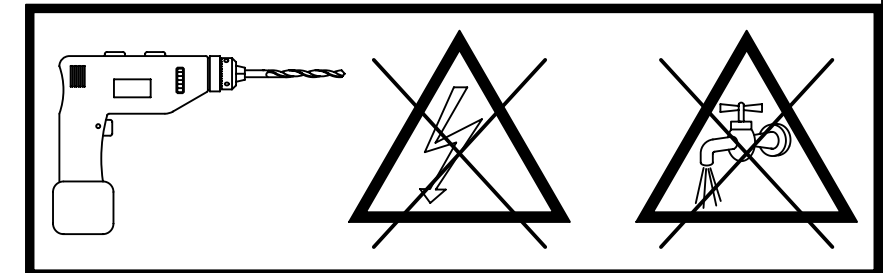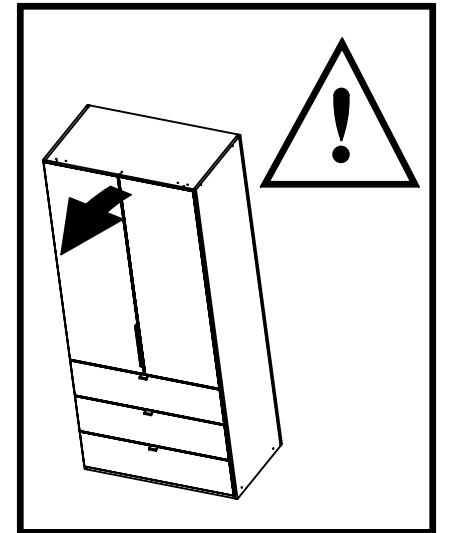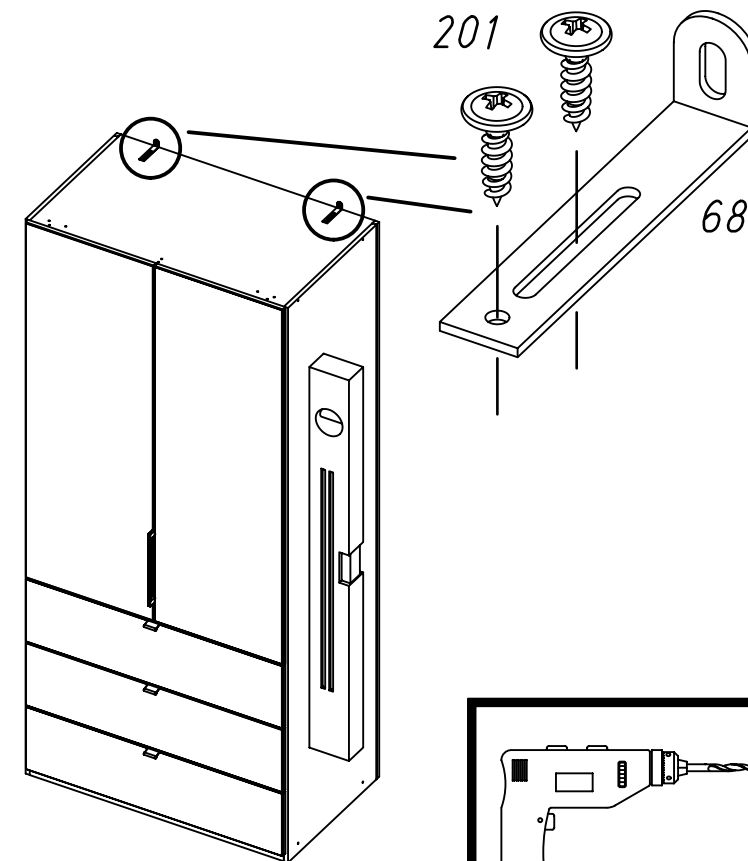

?

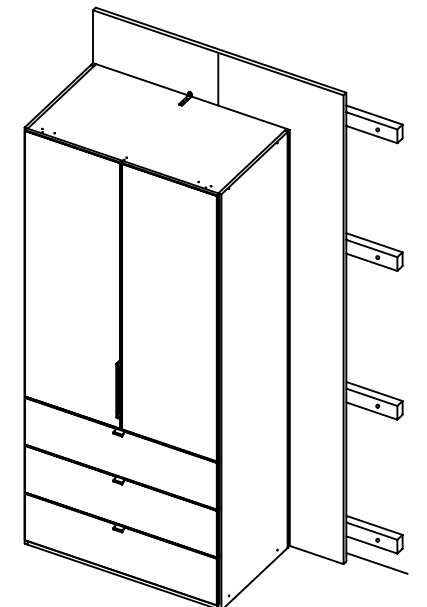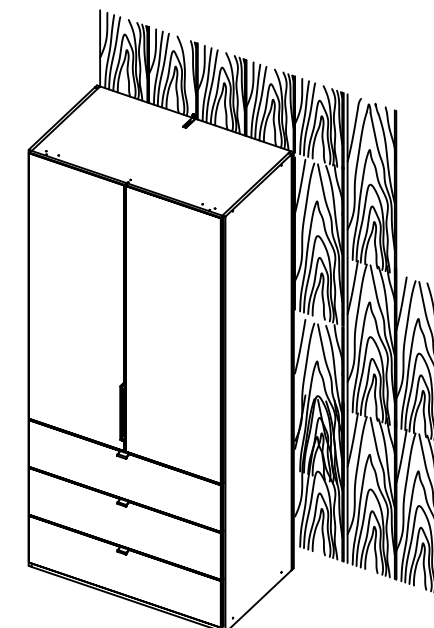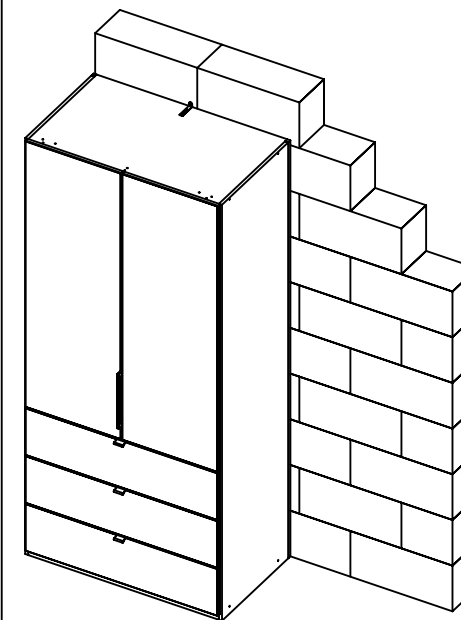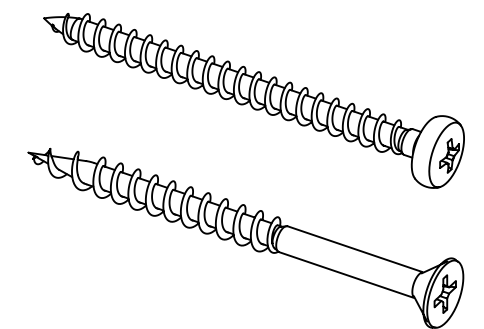


3.

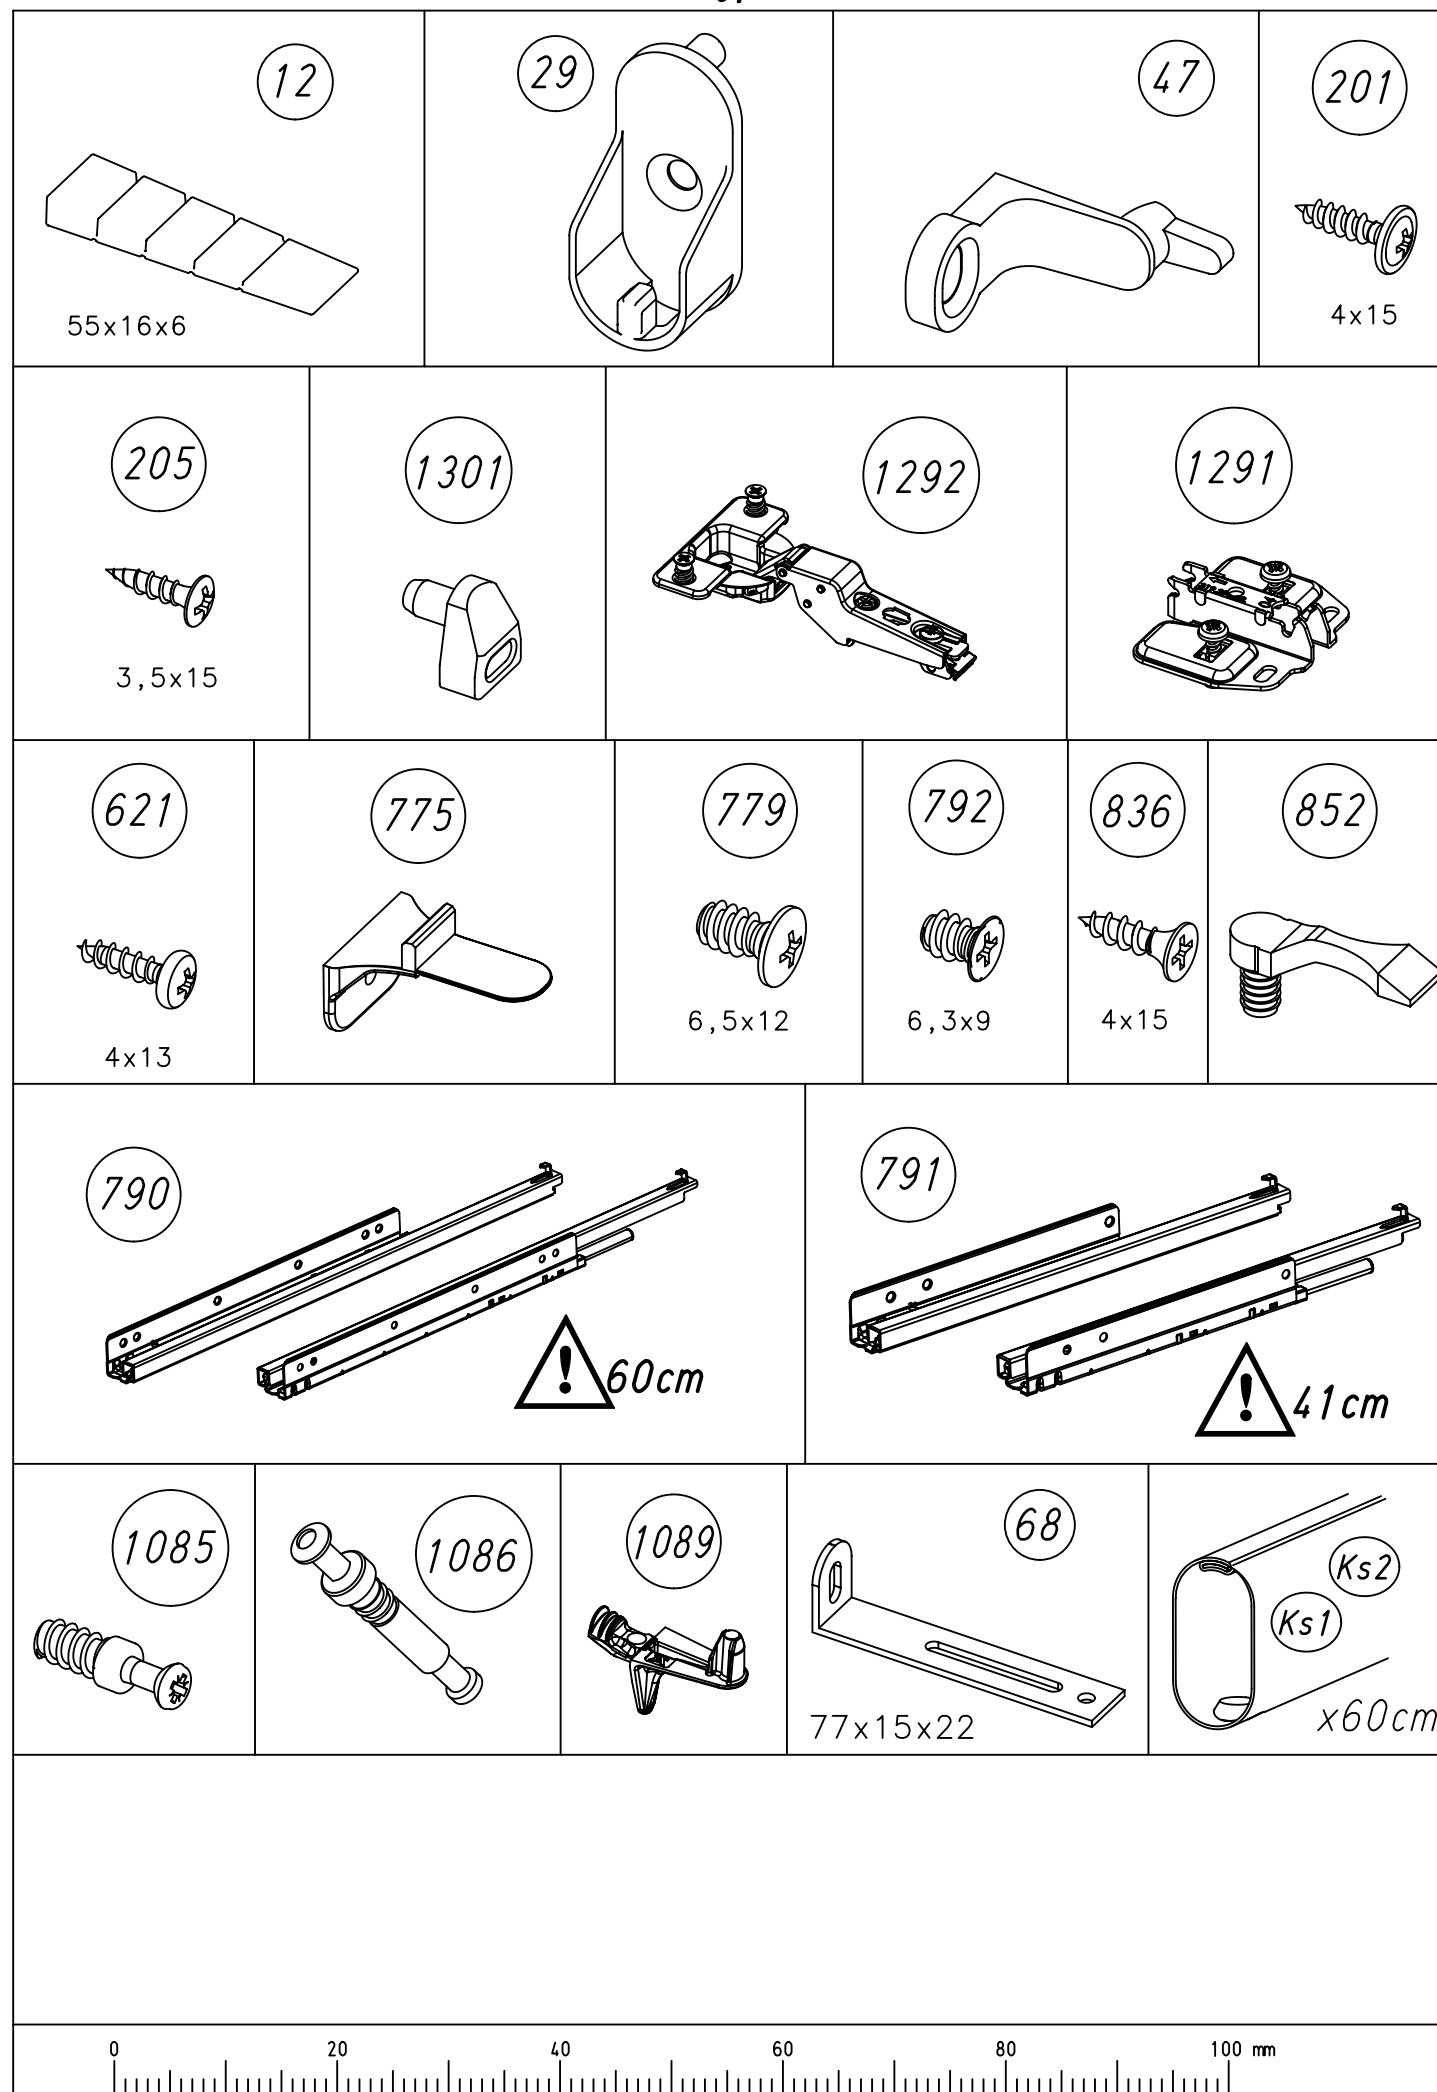

M0851

4.

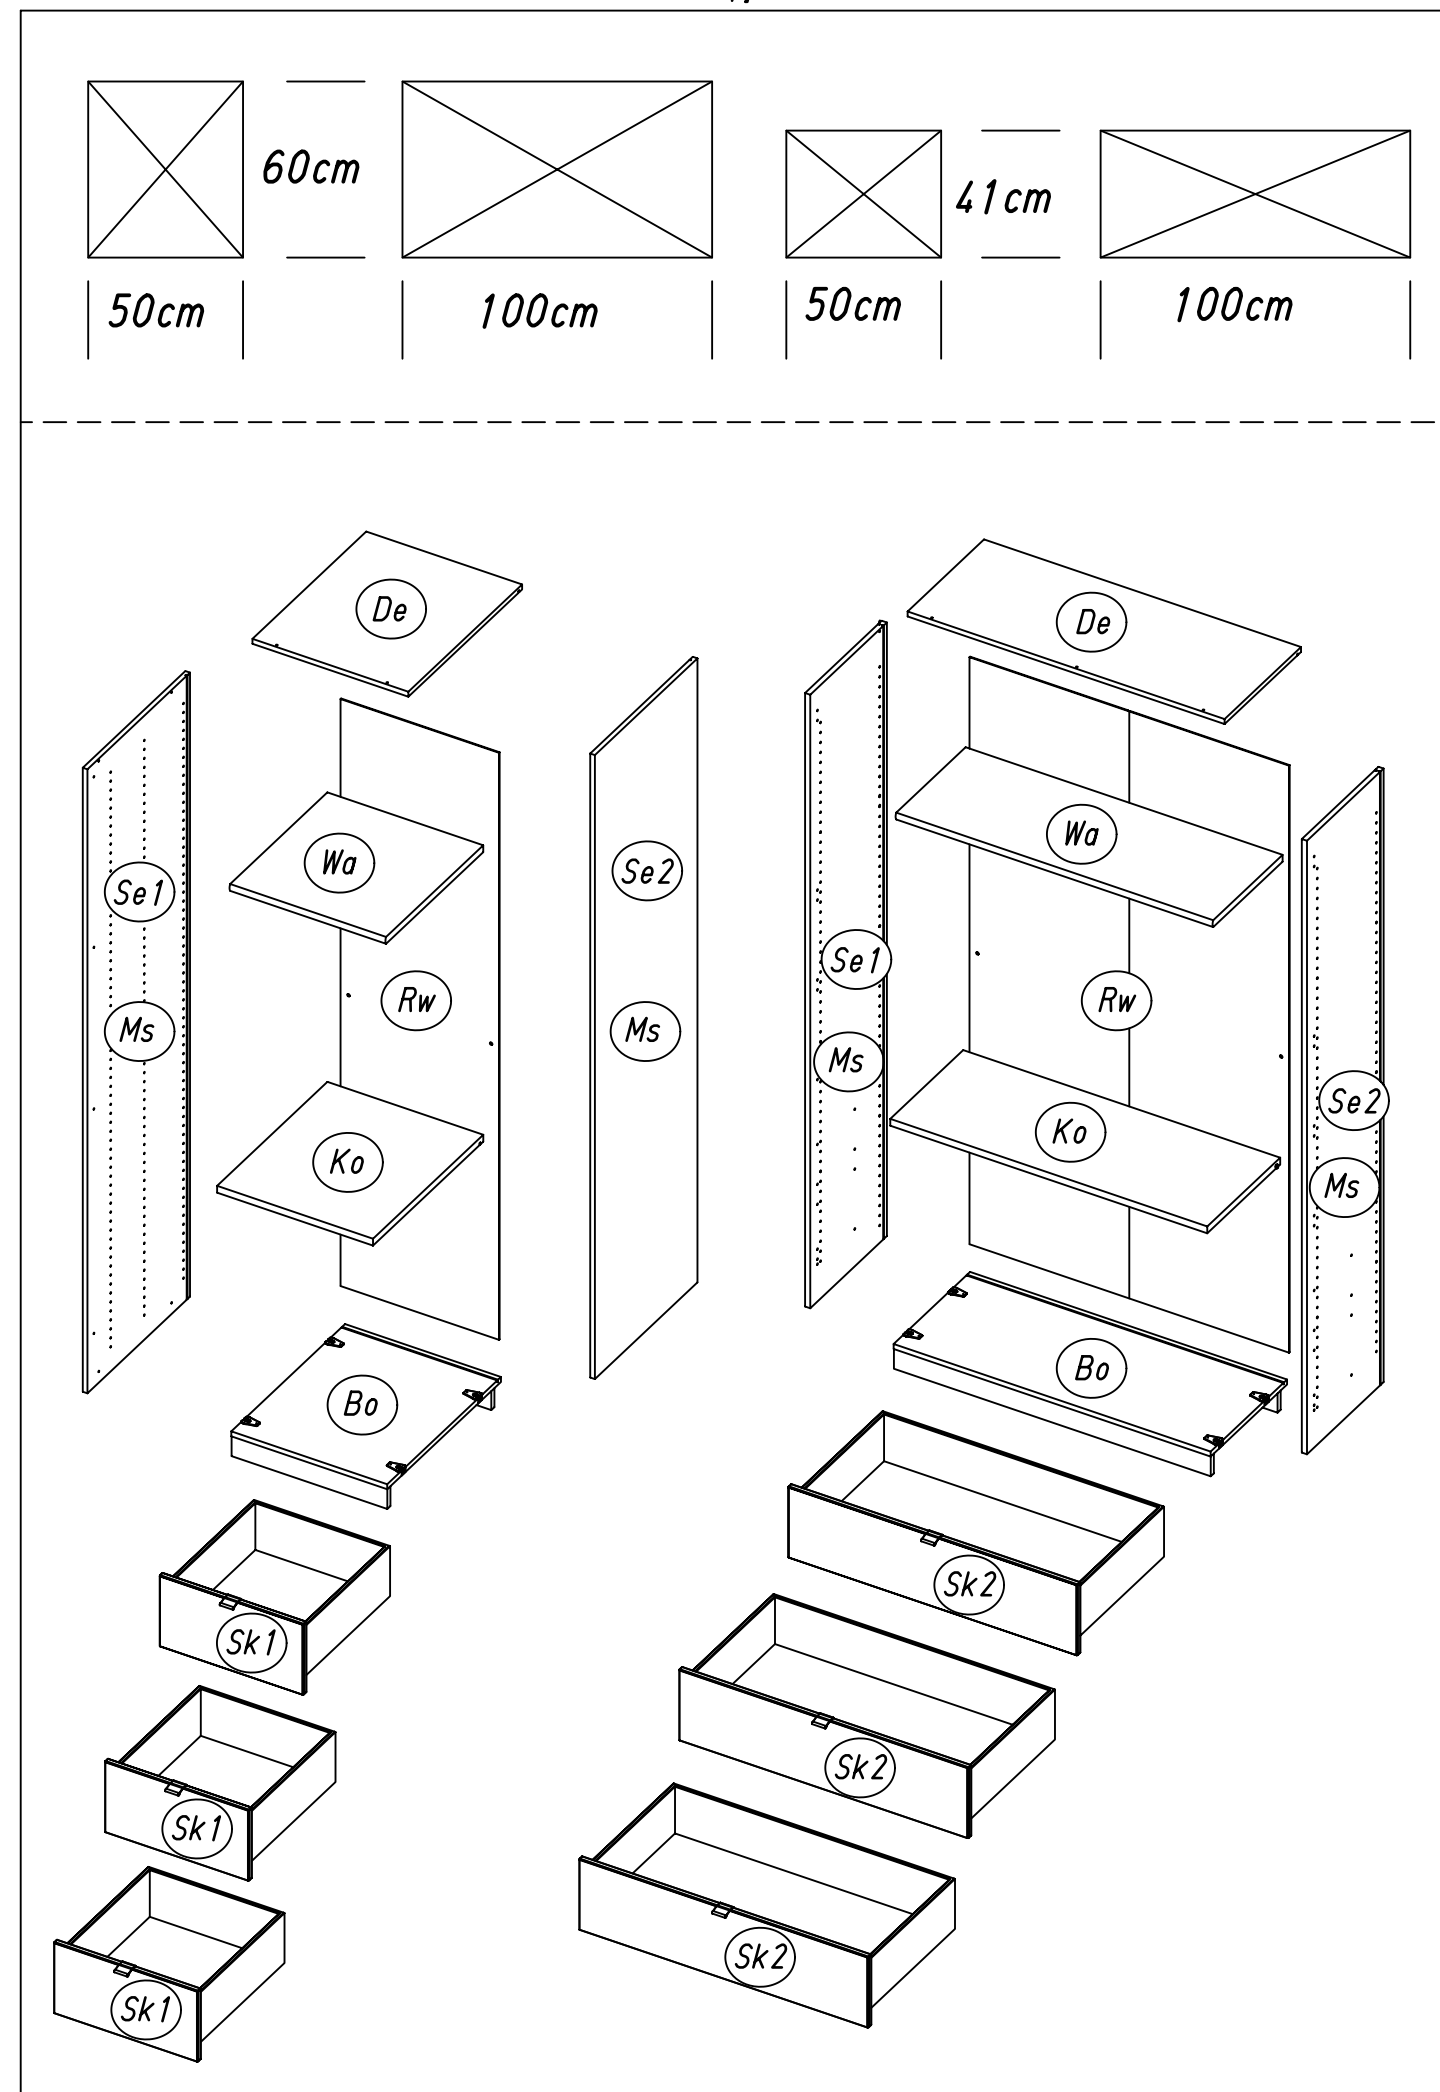


M0851

5.

1




8x

1085



4x

1086

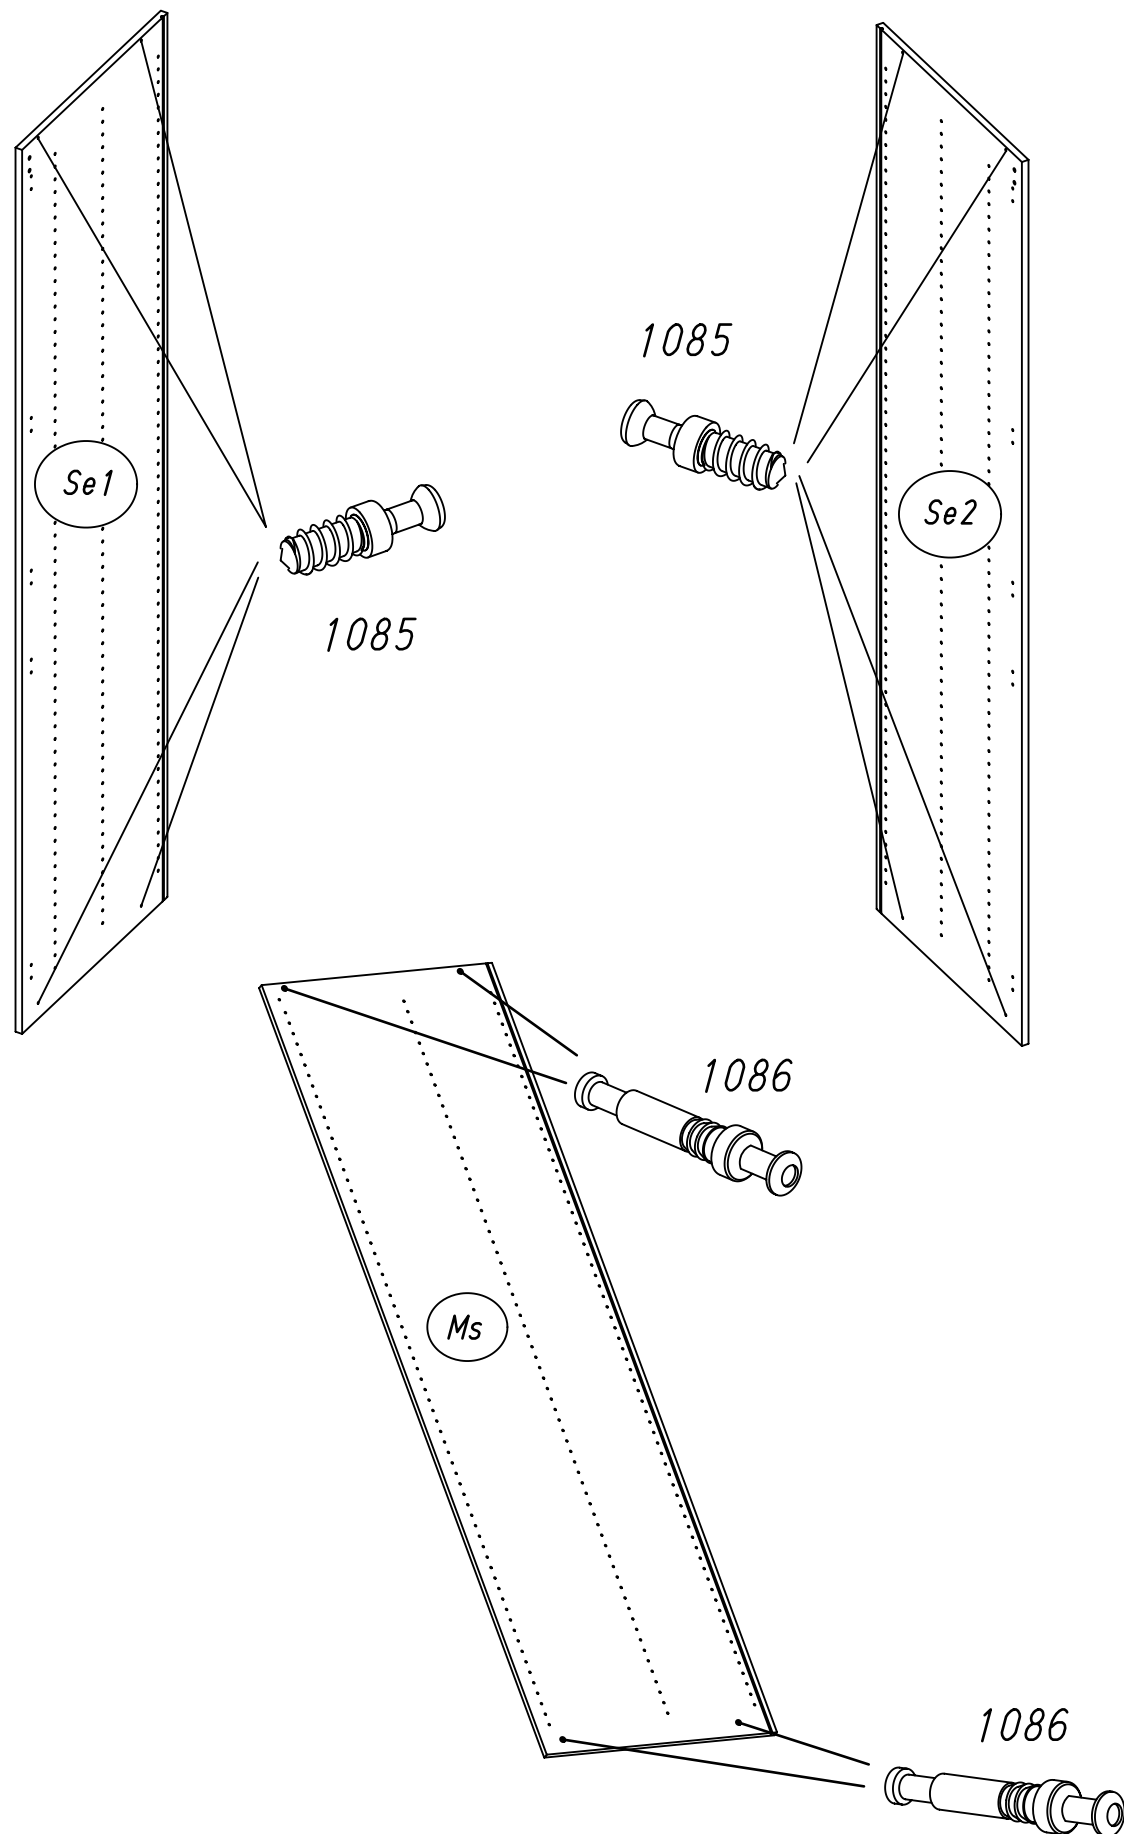


M0851

6.

2




2x

47

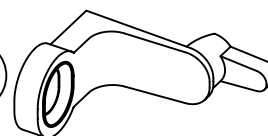

2x

779

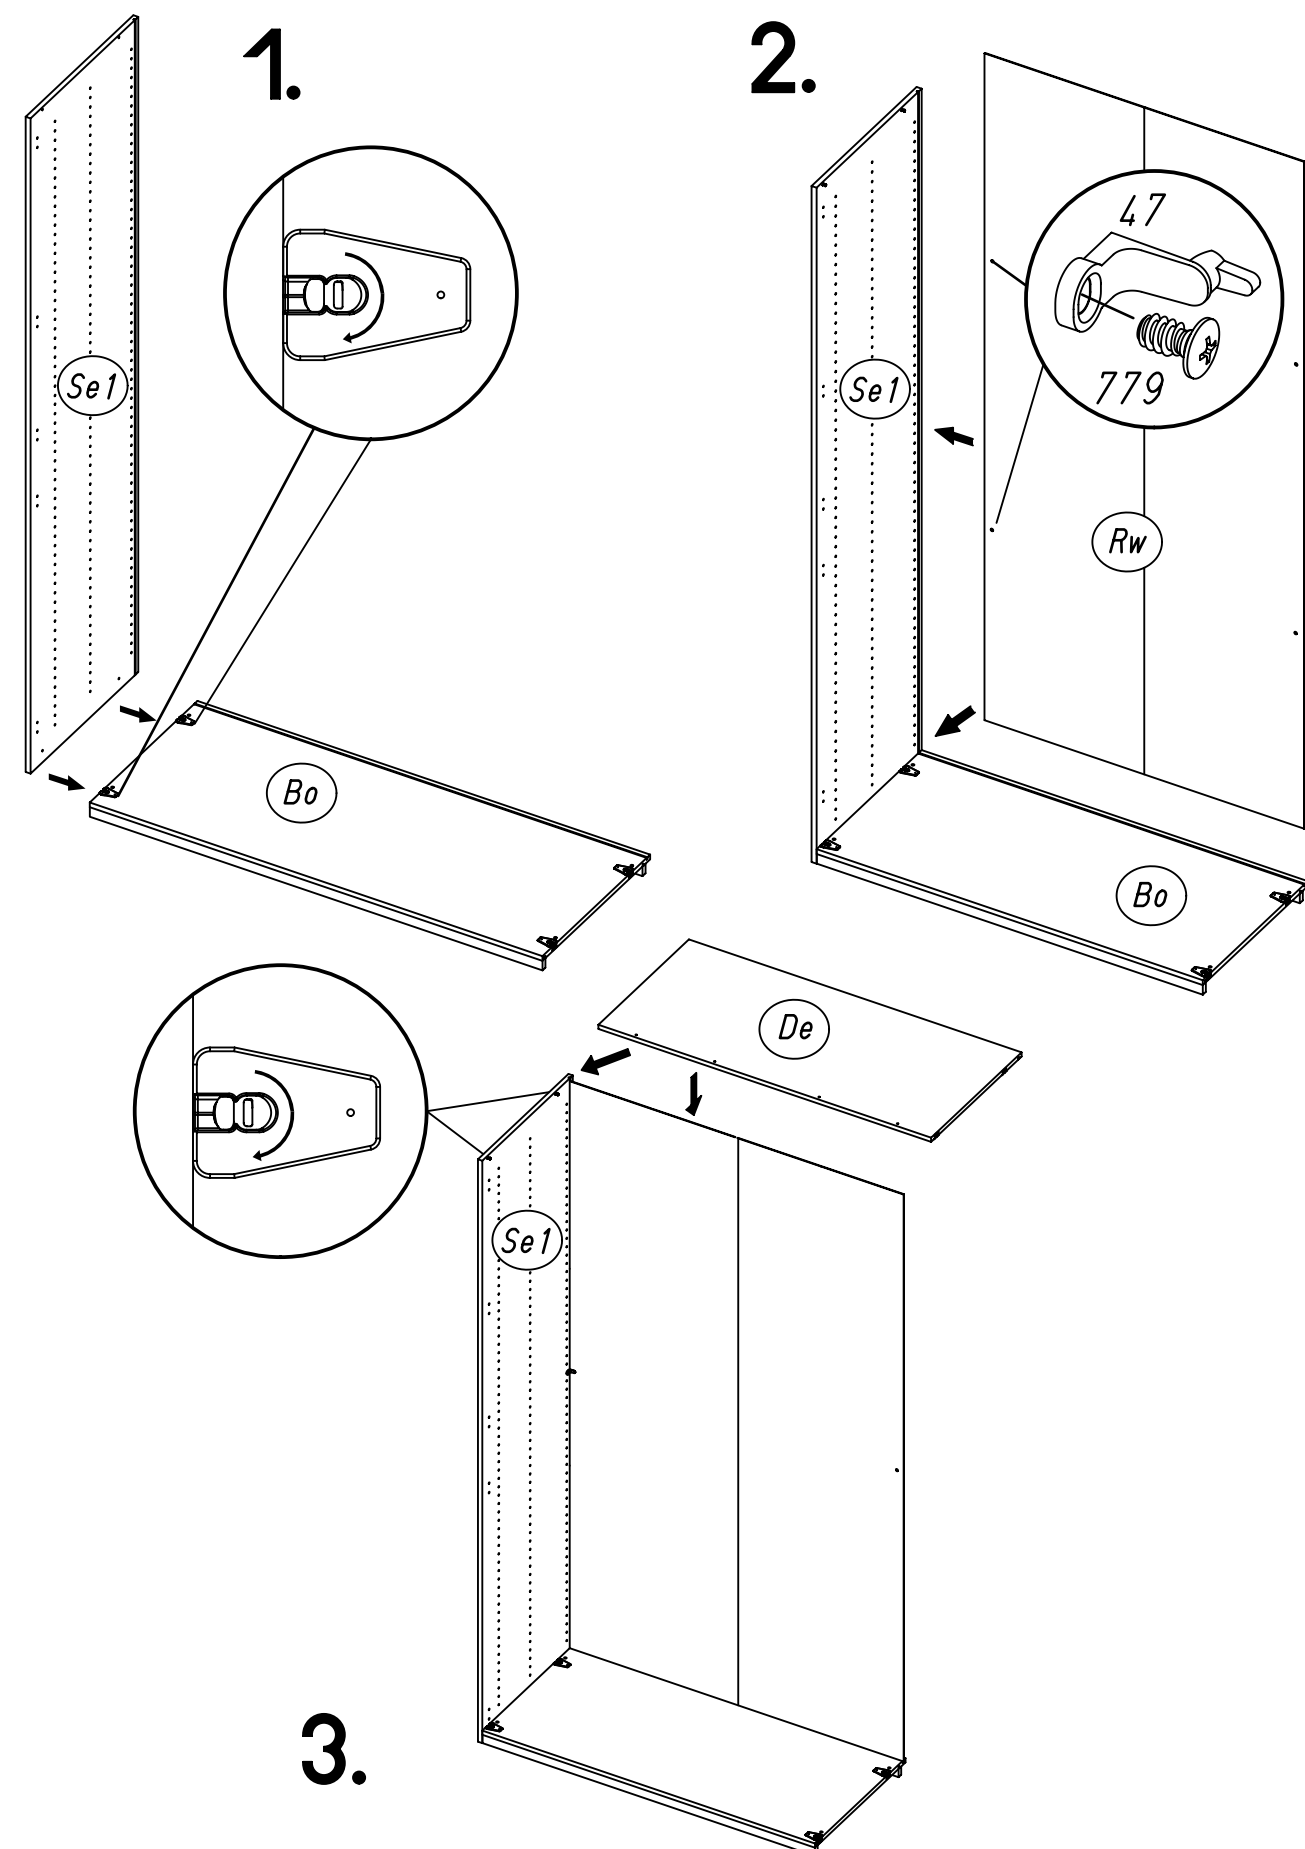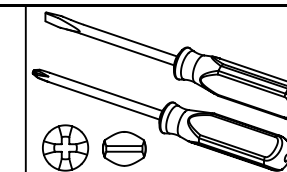


M0851

7.

3





2x

47

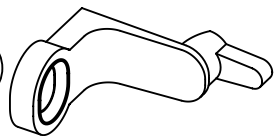

2x

779

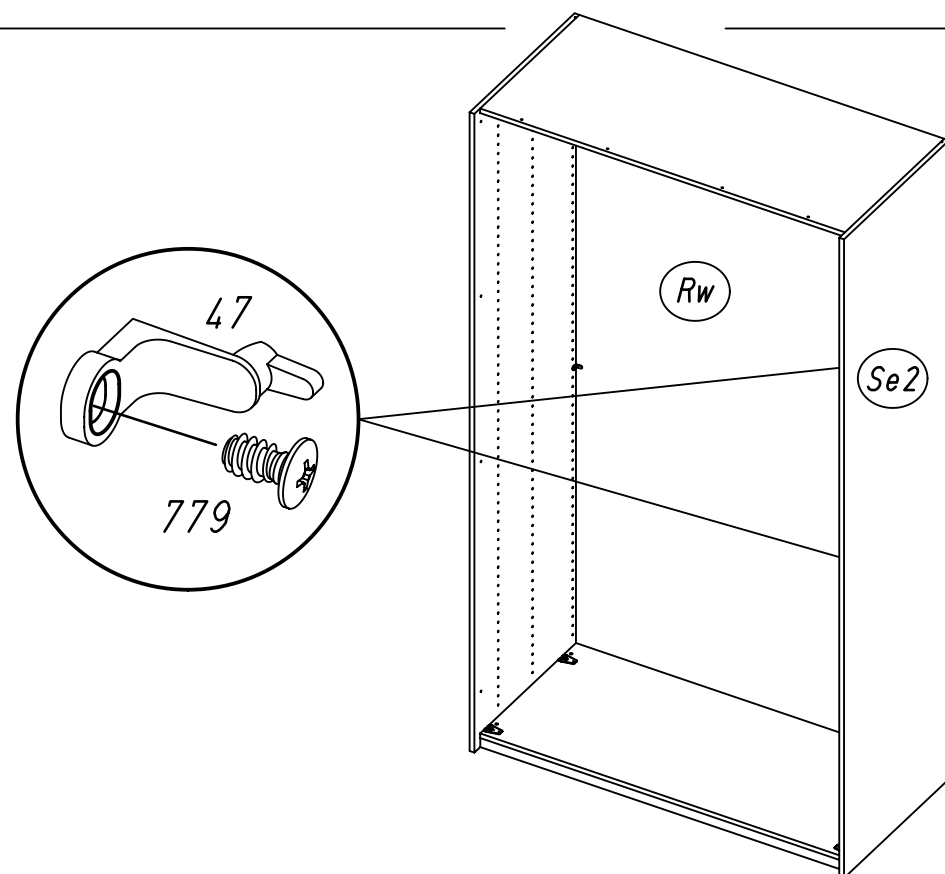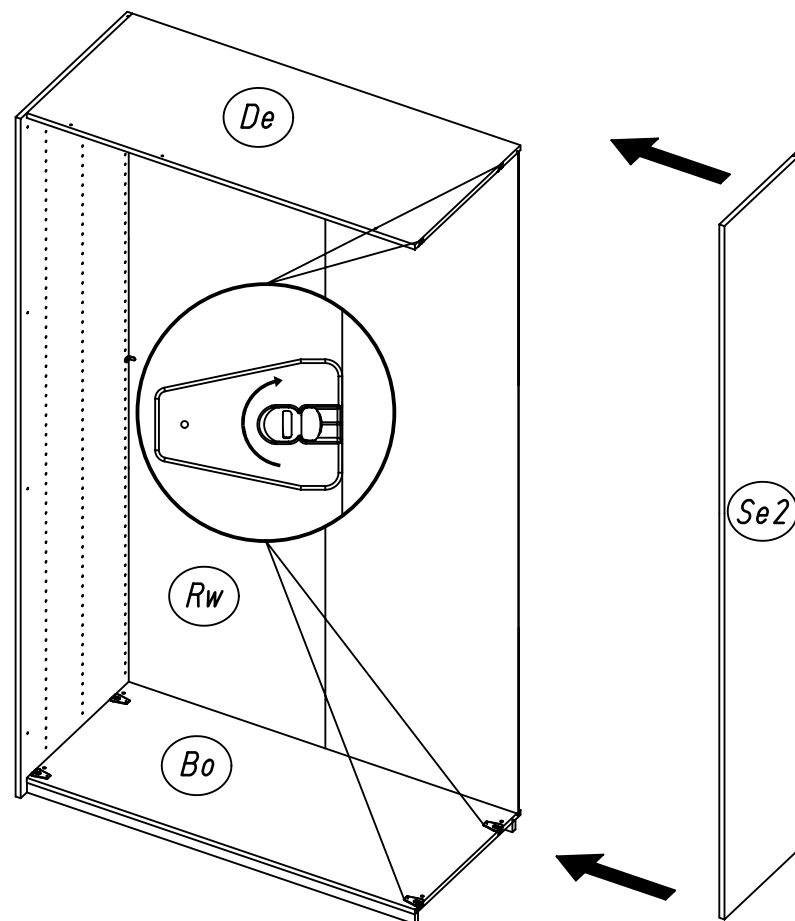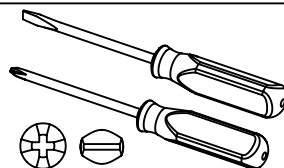

M0851

8.

4






12x

836



12x

792

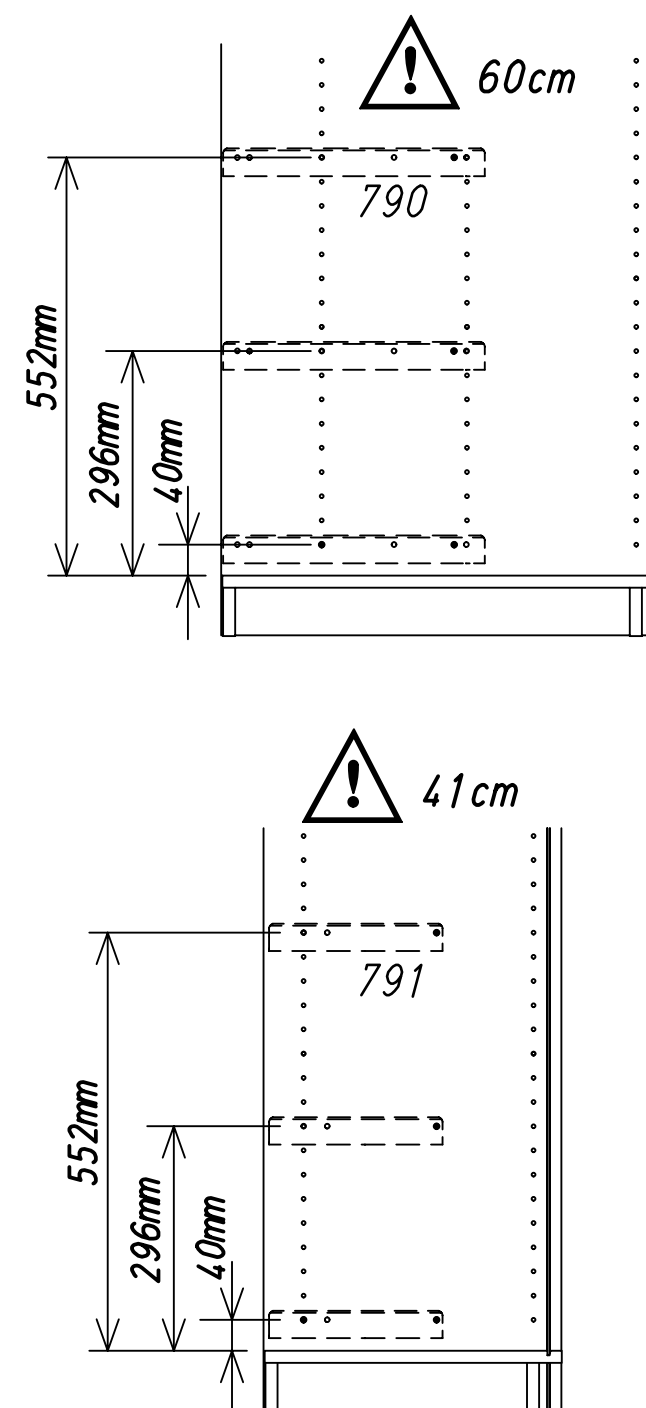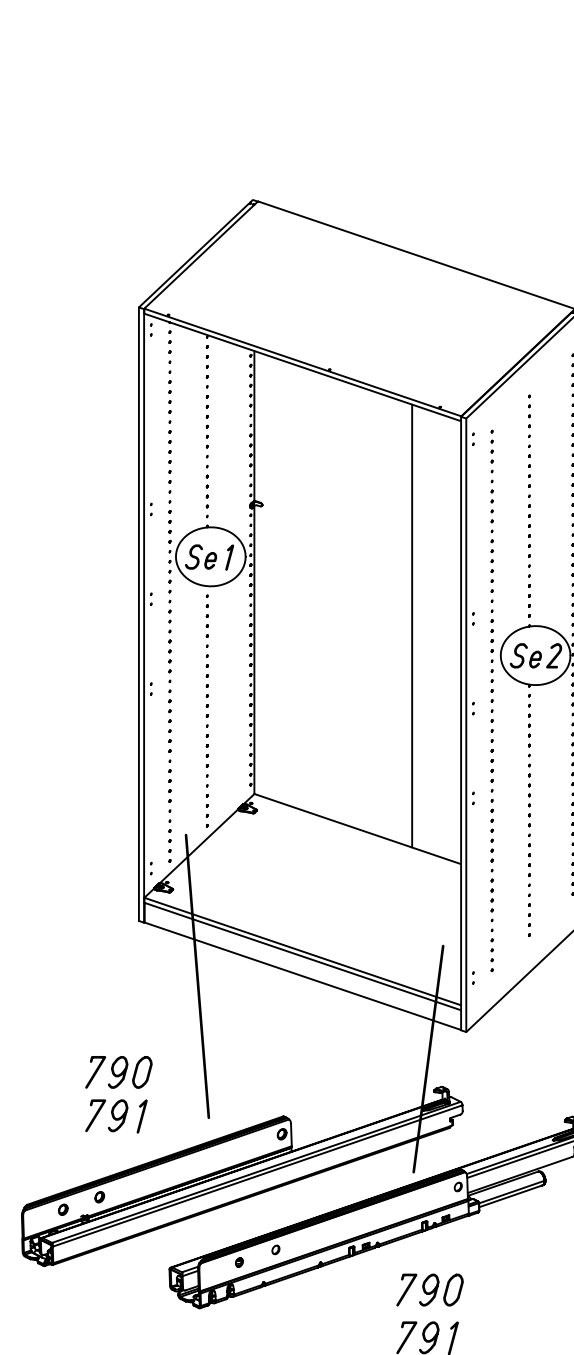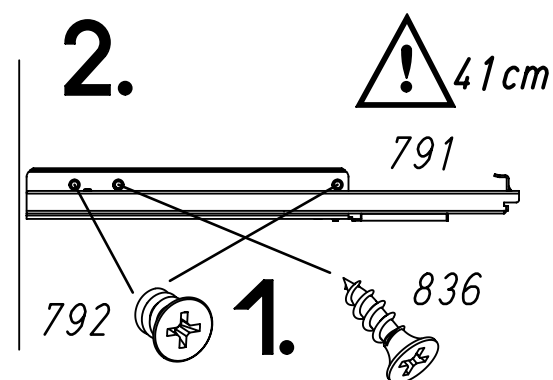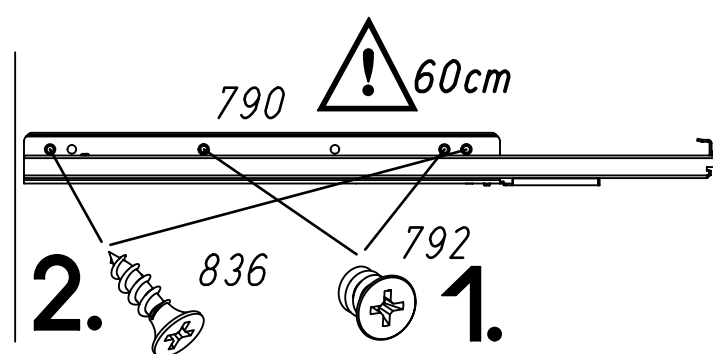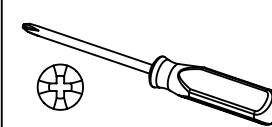





M0851

9.

5

4x


1089

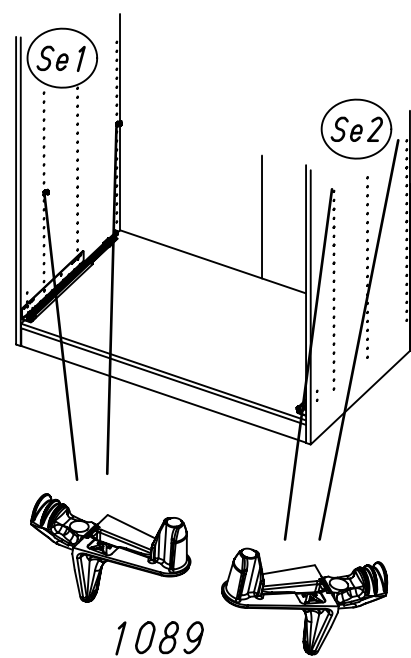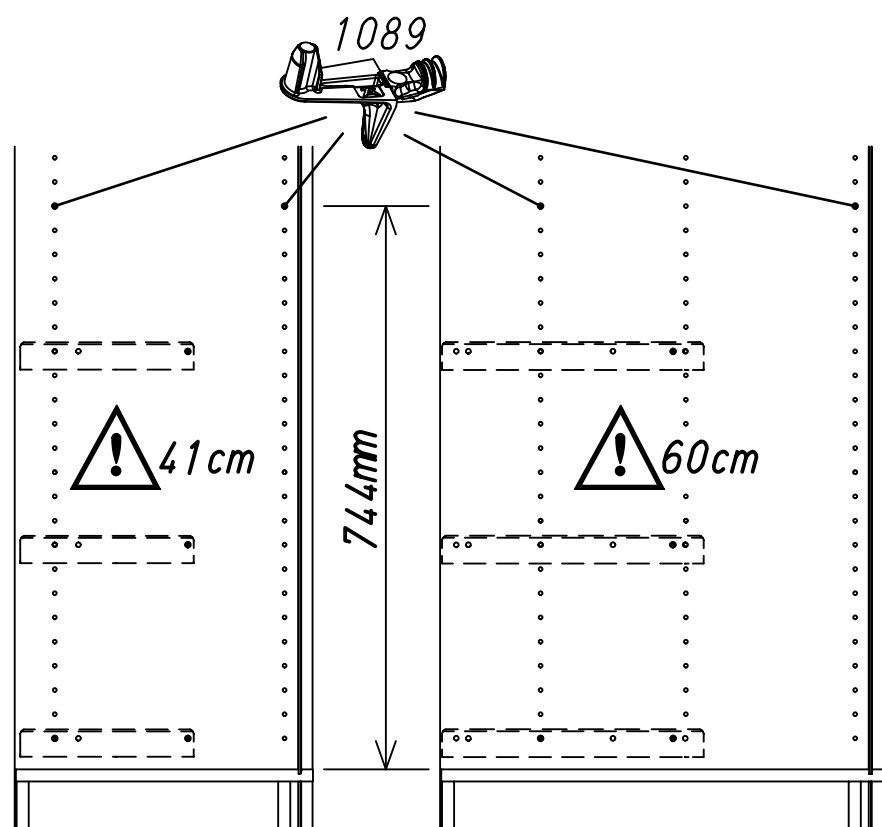

M0851

10.

6

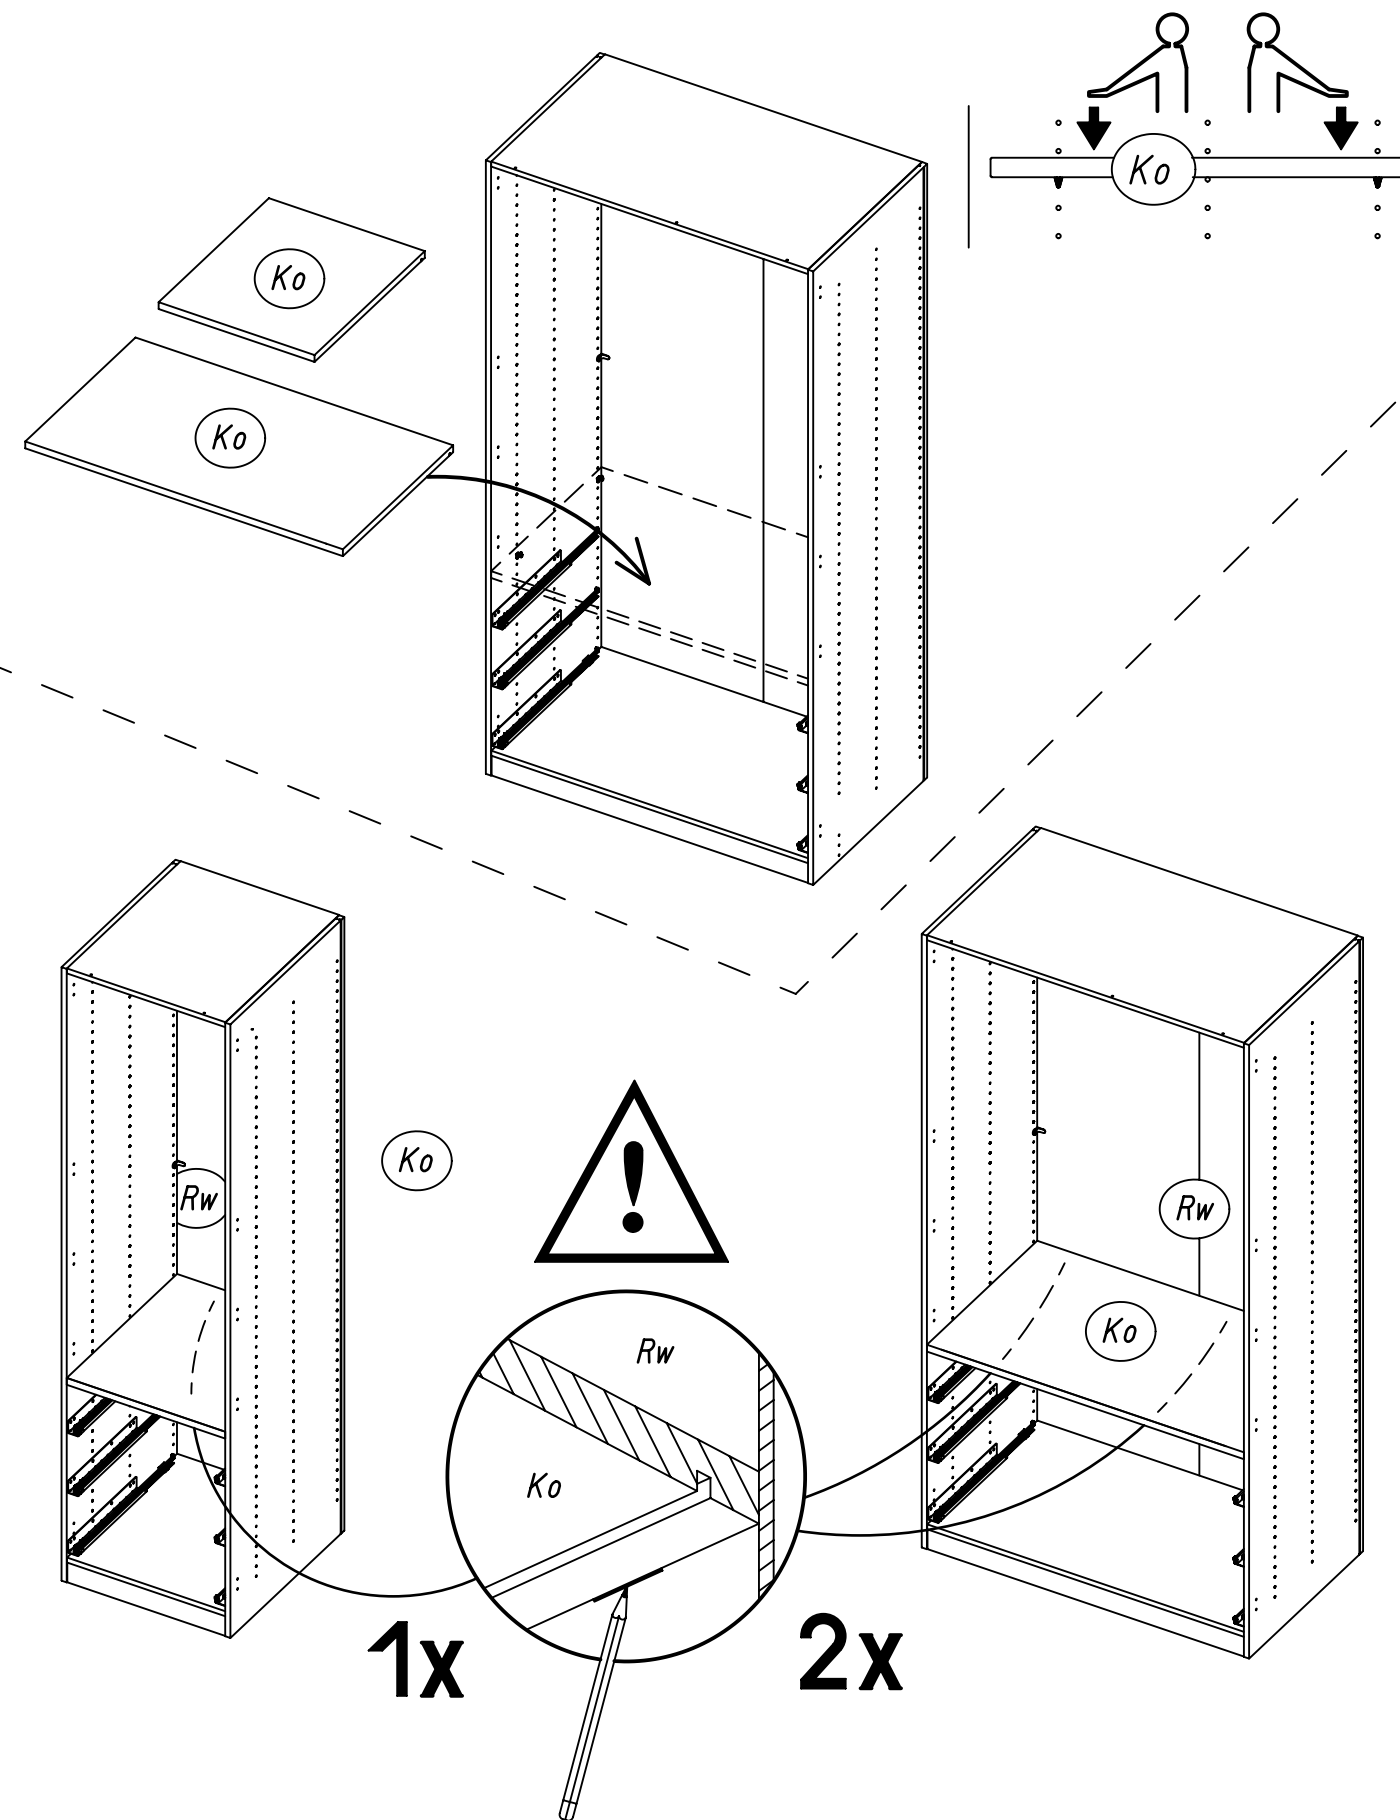

M0851

11.

7




2x

201




2x


775

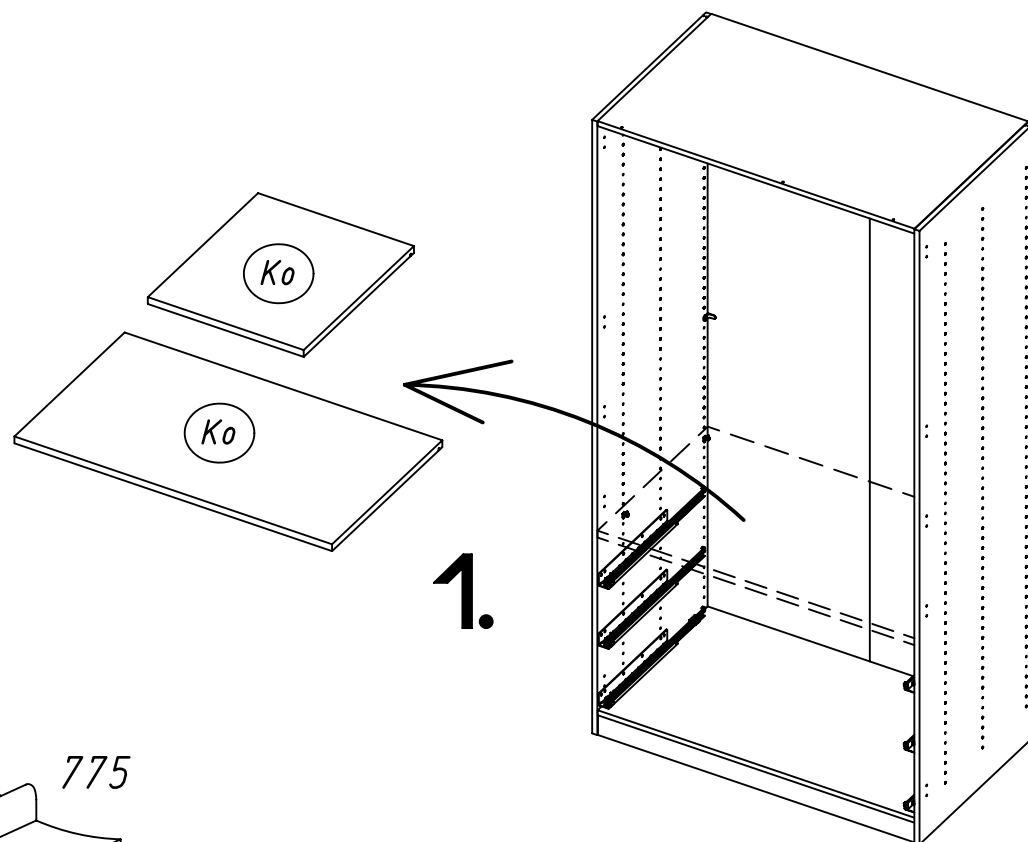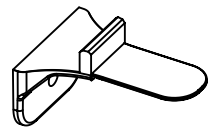

1.

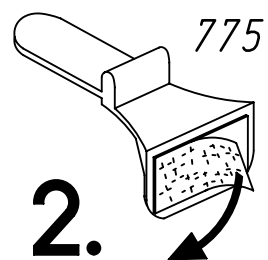


2.

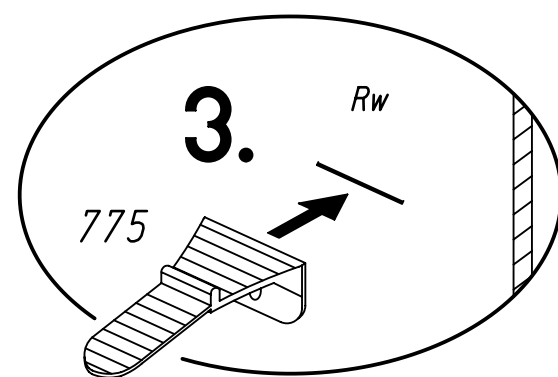

3.

Rw

775

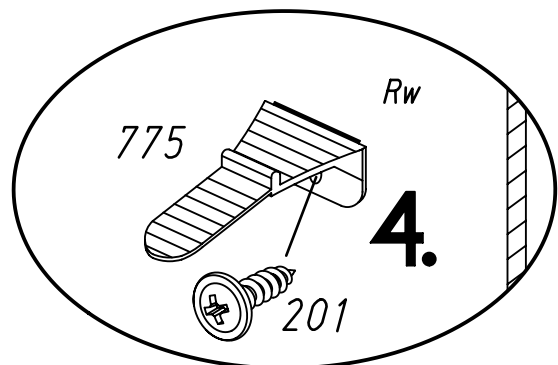

4.

775

201



M0851

12.

8

2x


1301

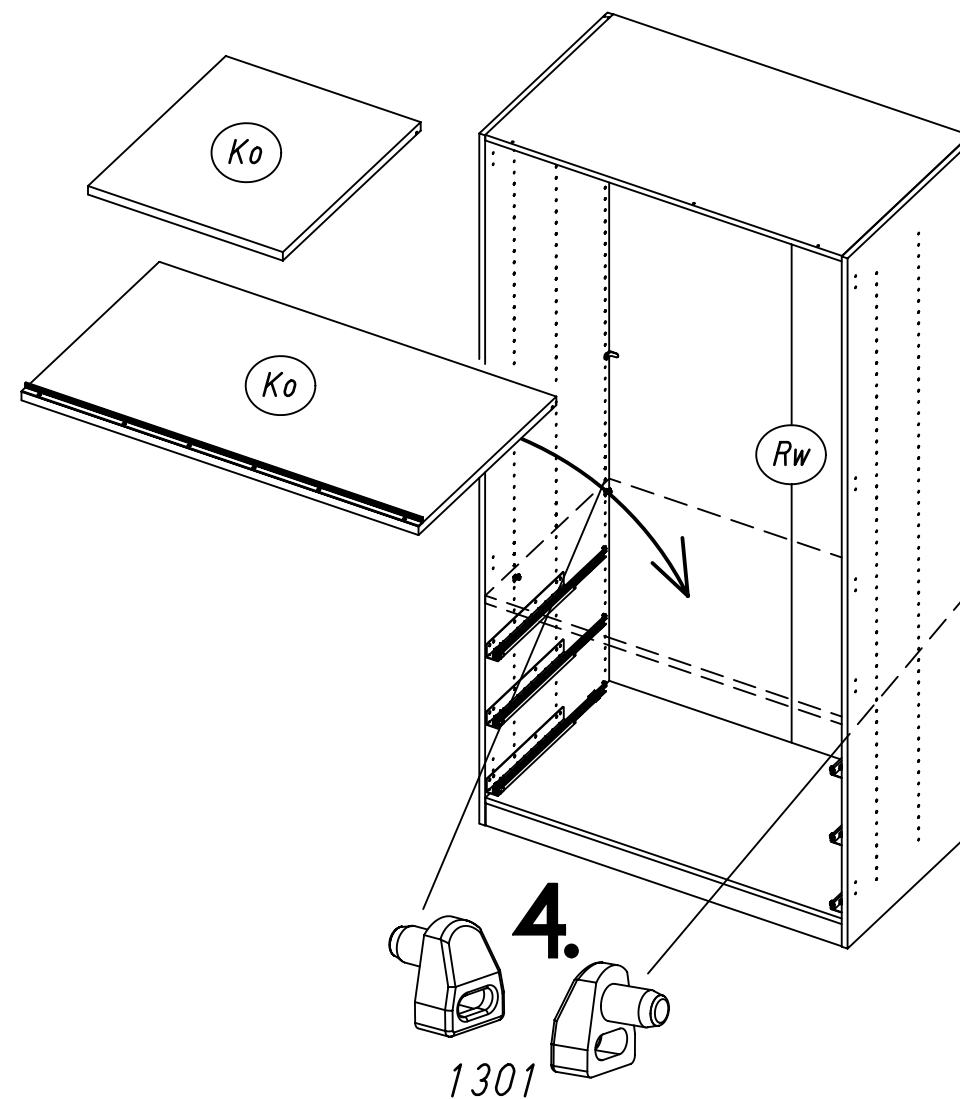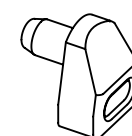

4.

1301

2.

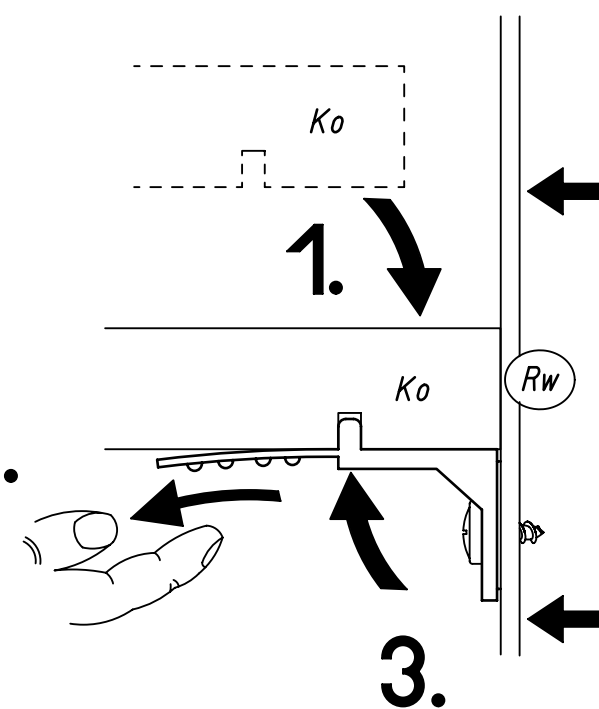

1.

*Ko**Rw*


3.

M0851

13.

9







2x 205



2x 29



4x 1089

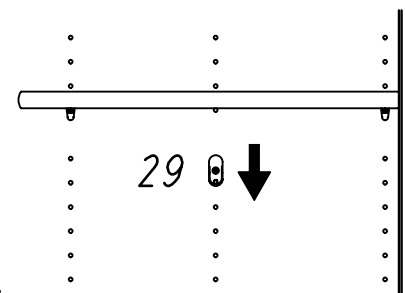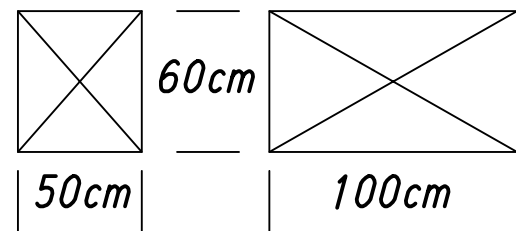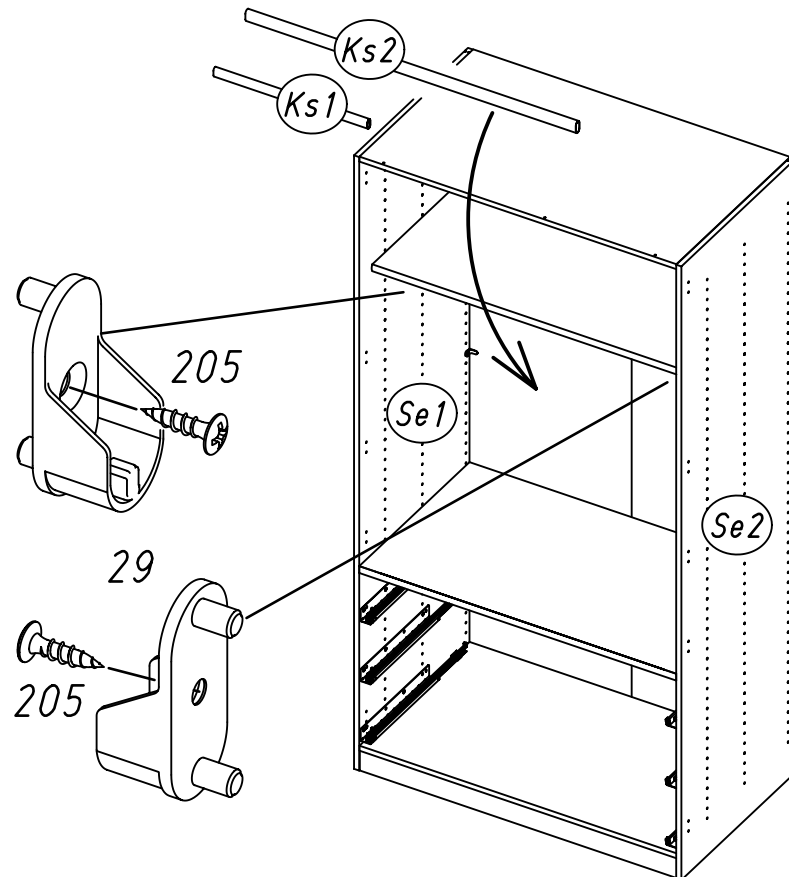
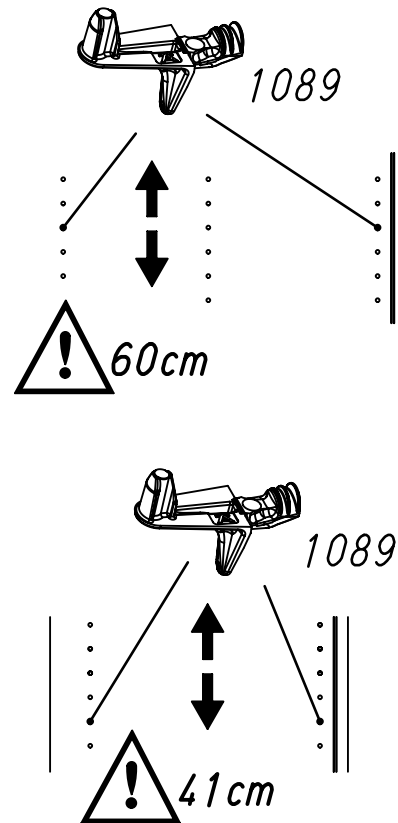
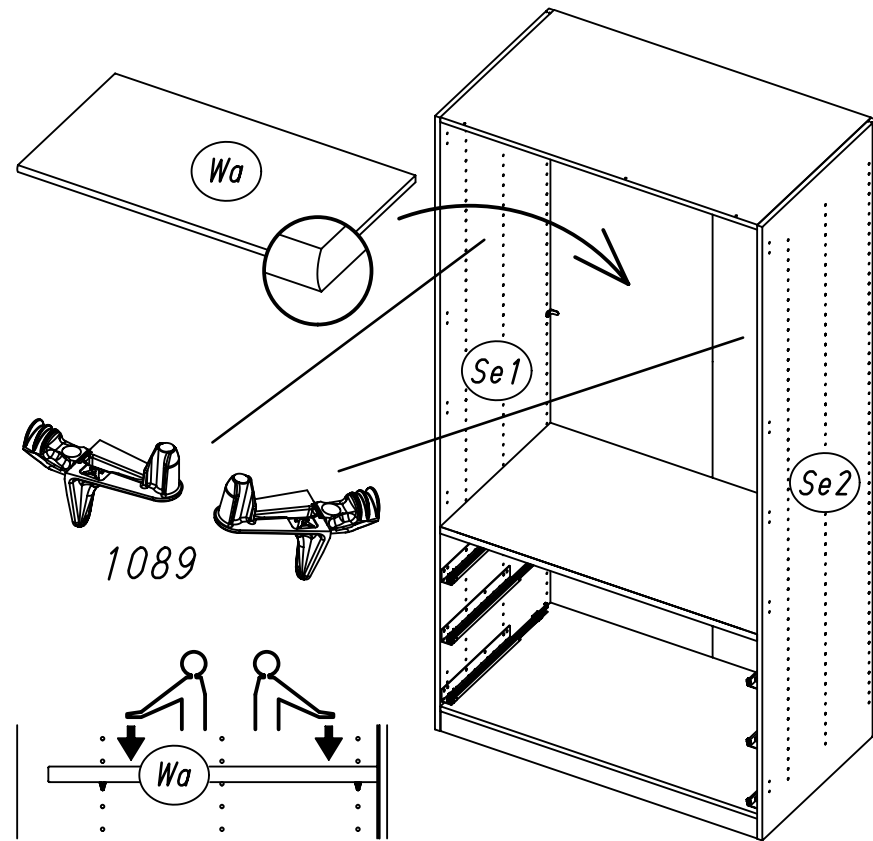


M0851


14.

10

6x 852

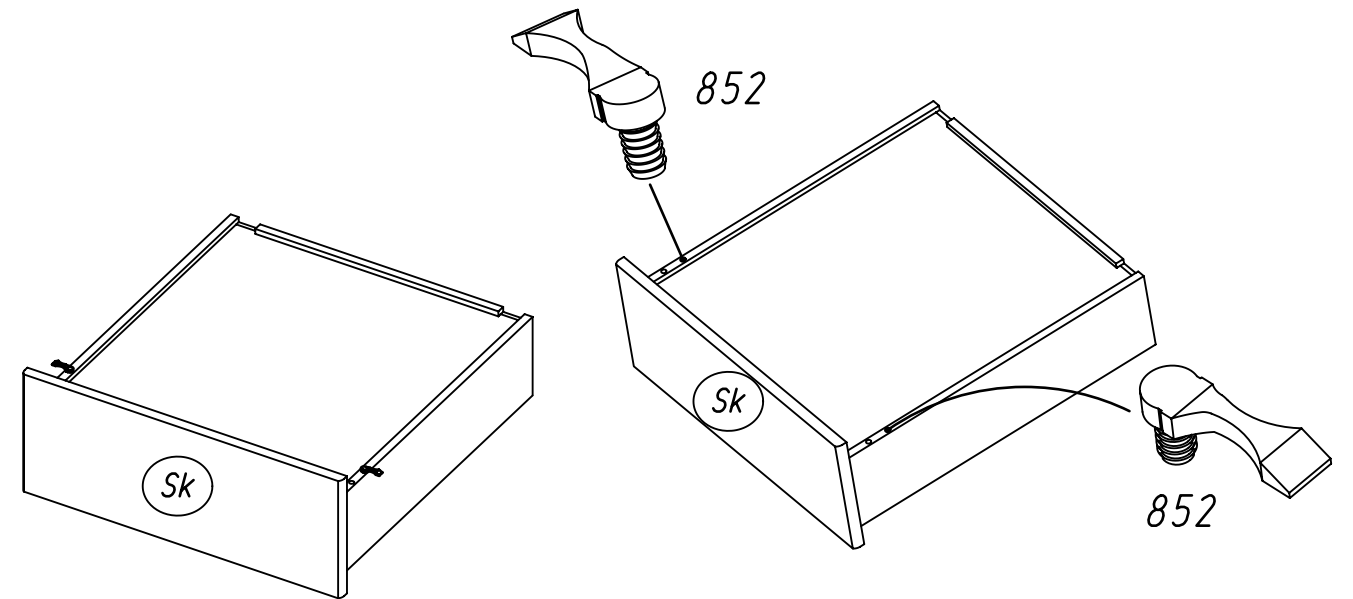



11

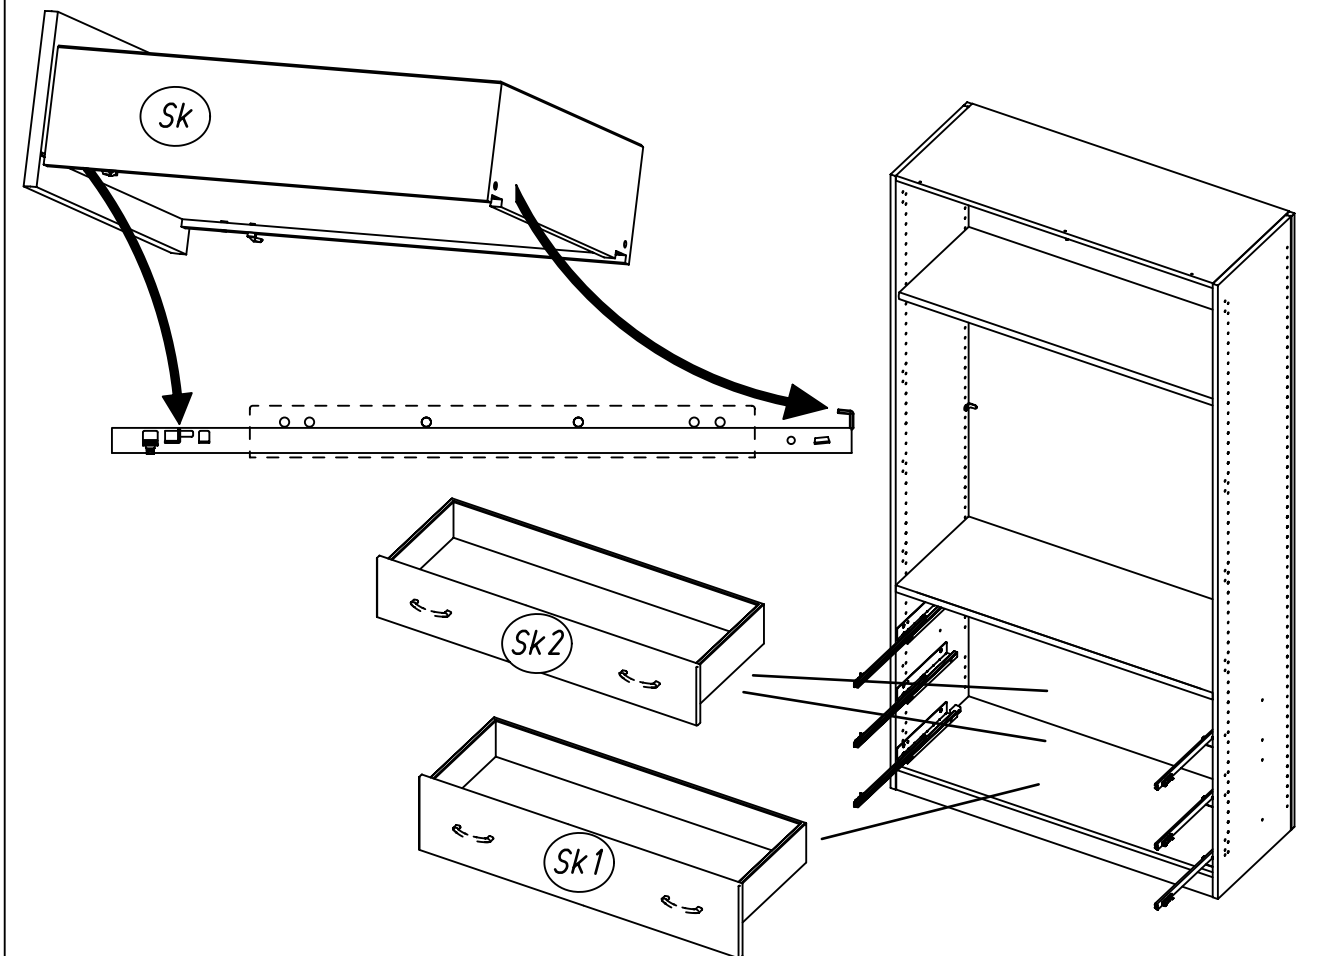


M0851

12

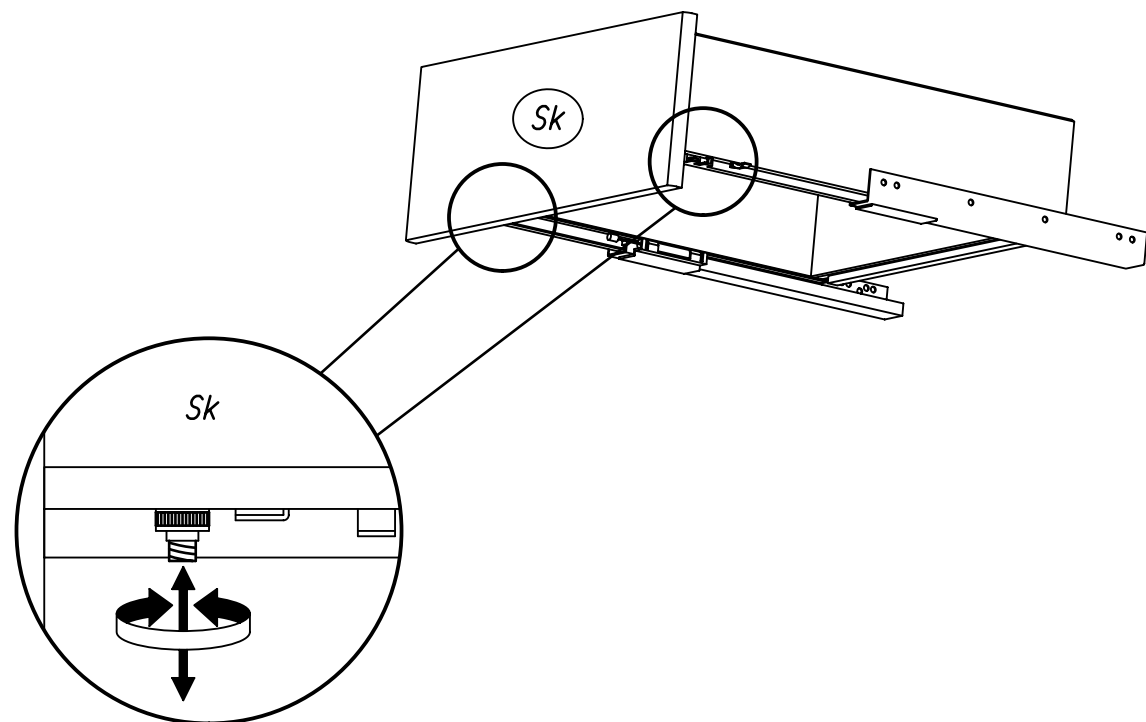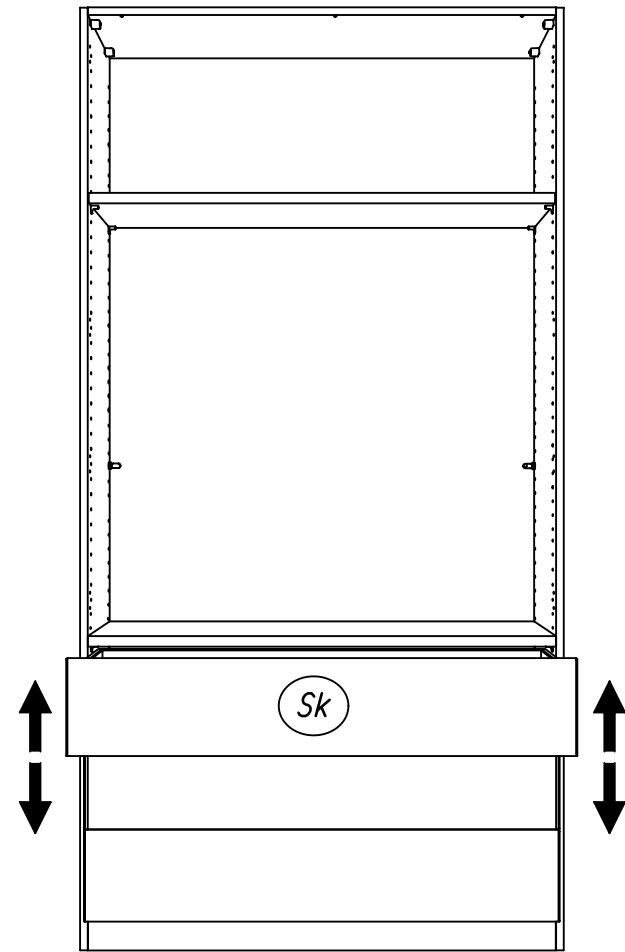



13

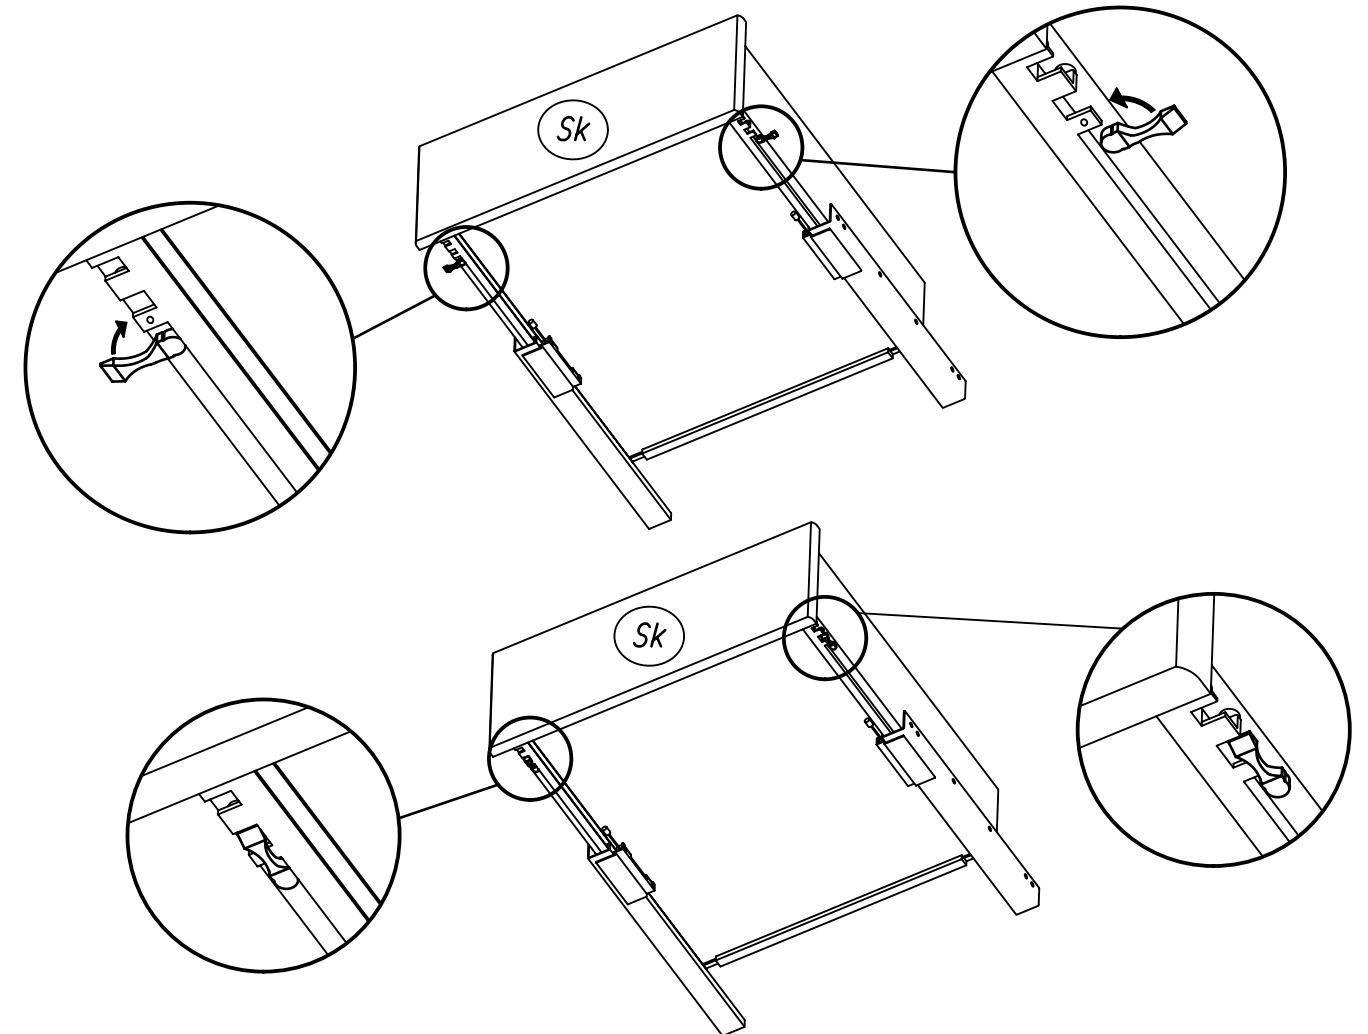

14


6x 1292





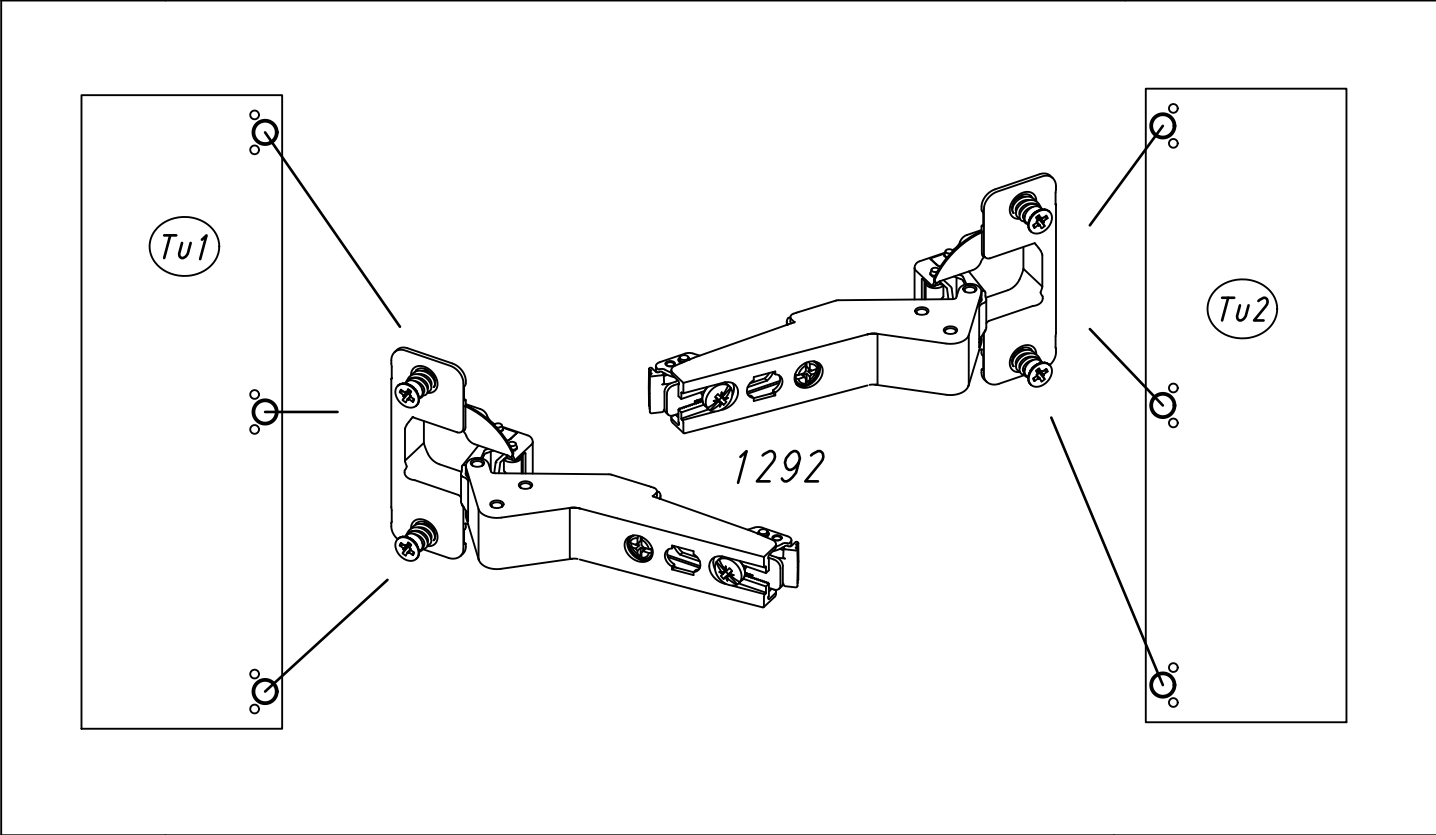




15

6x 1291










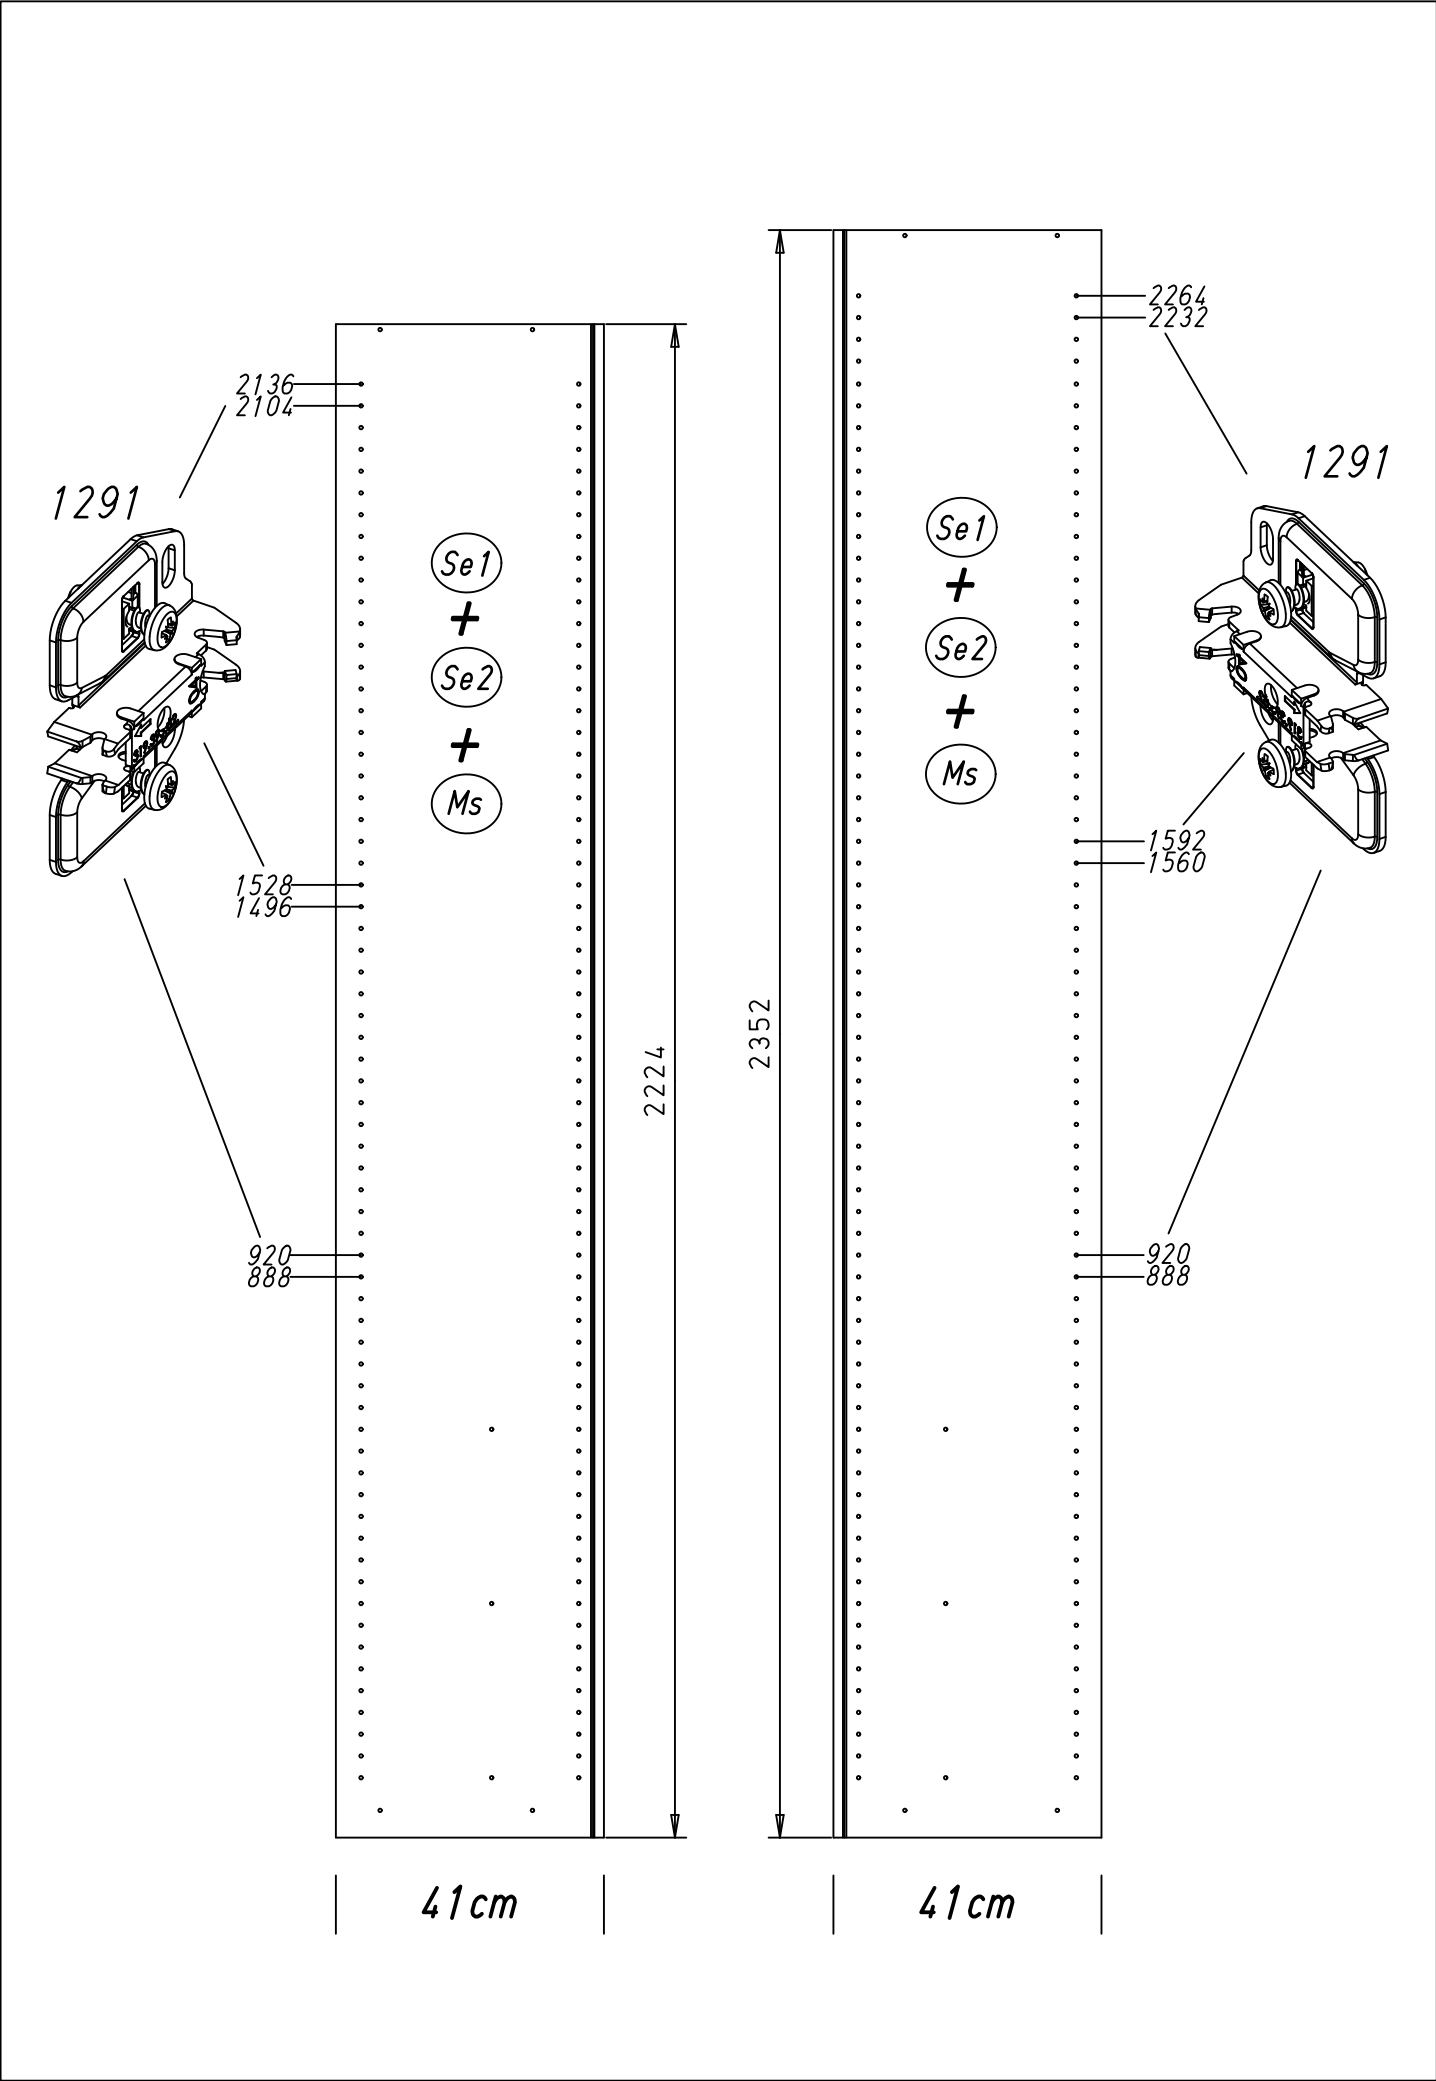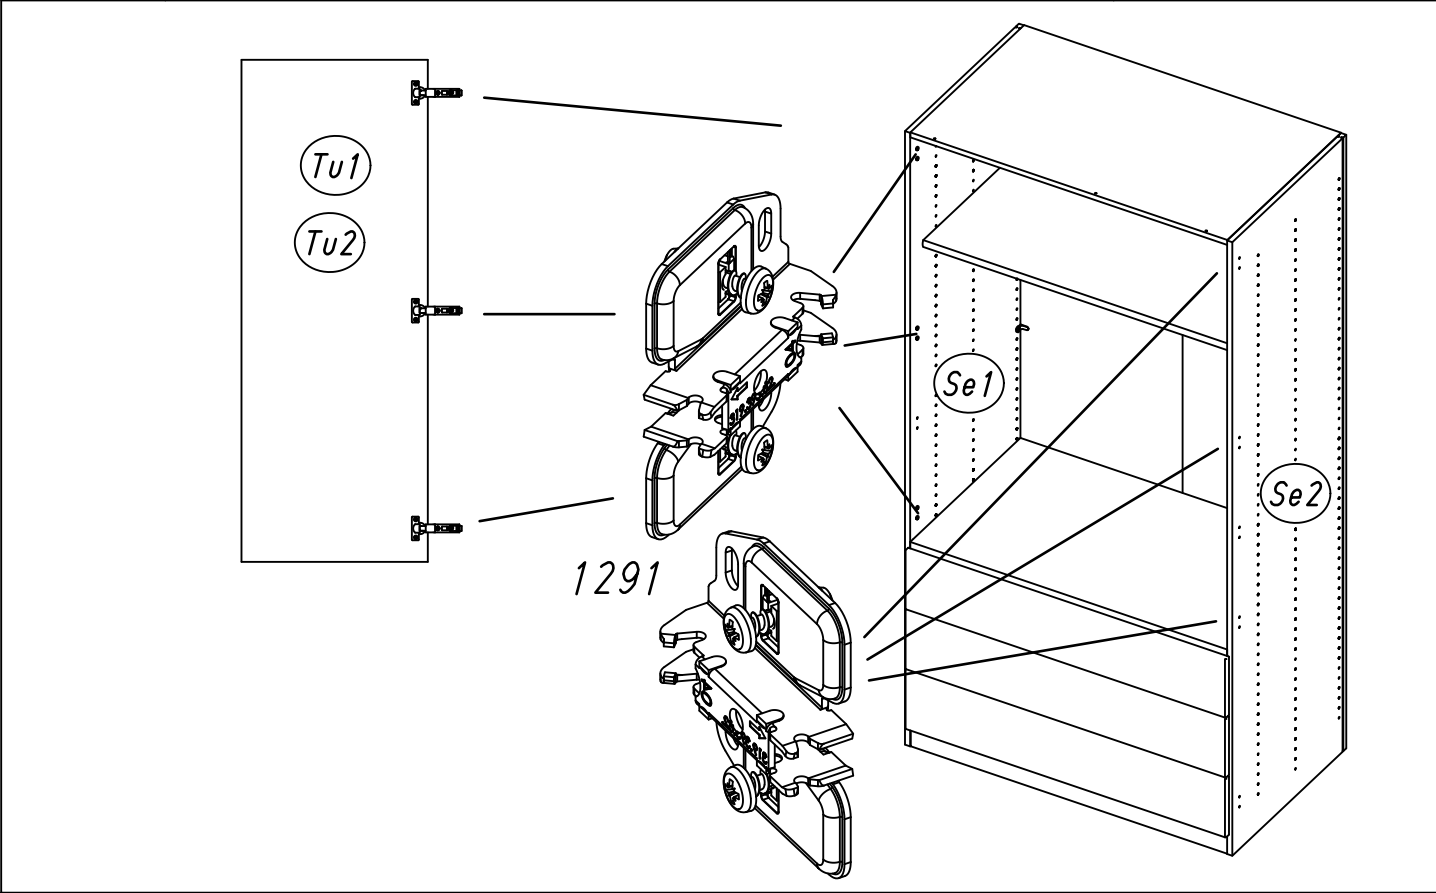

16

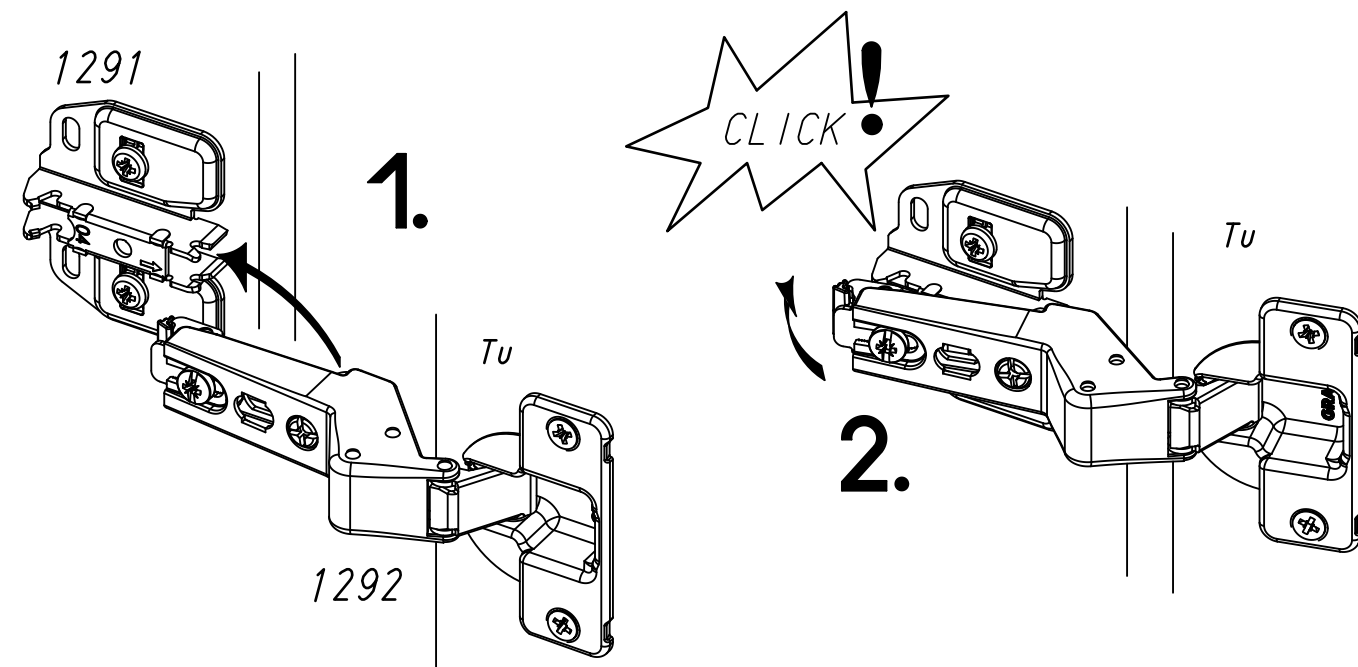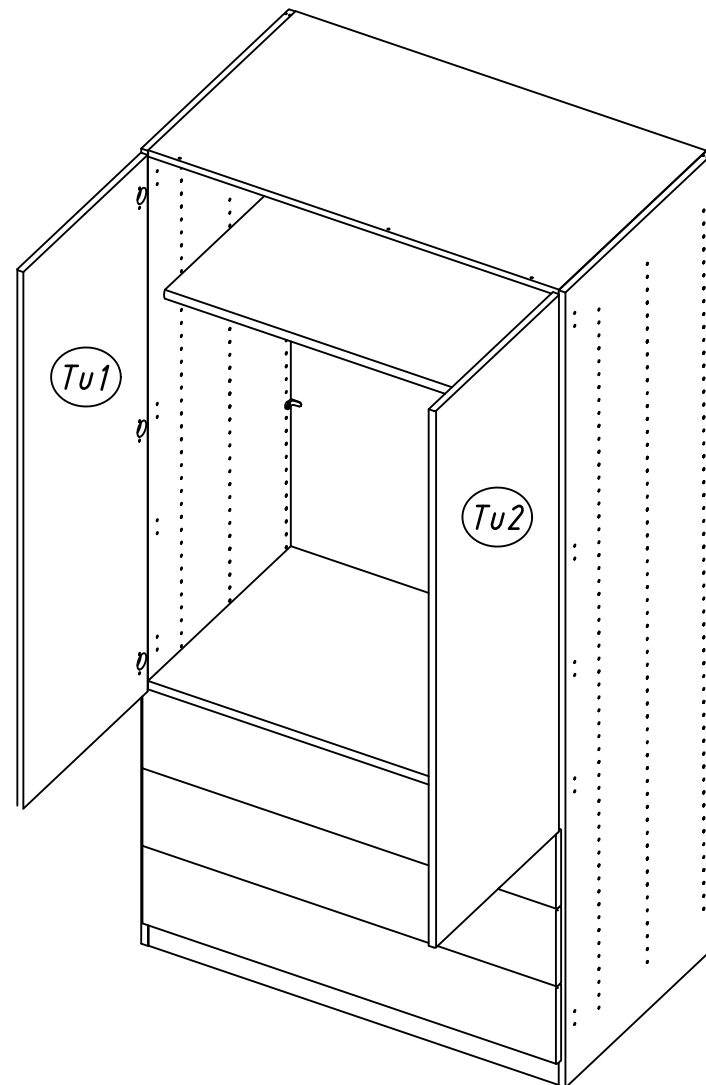

17

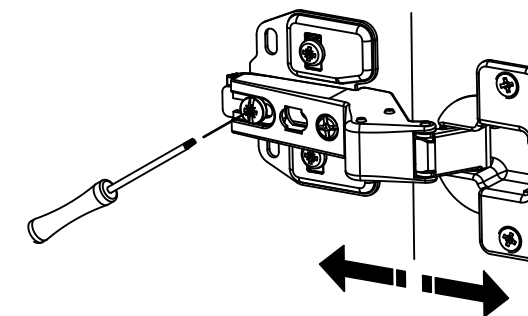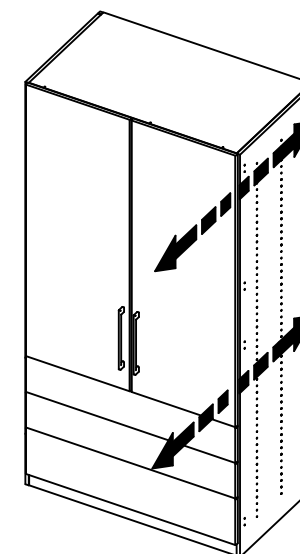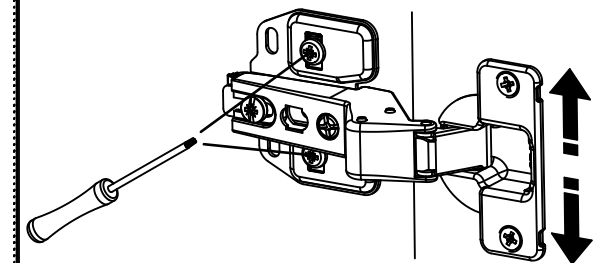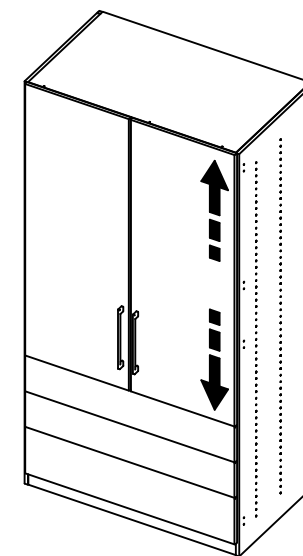
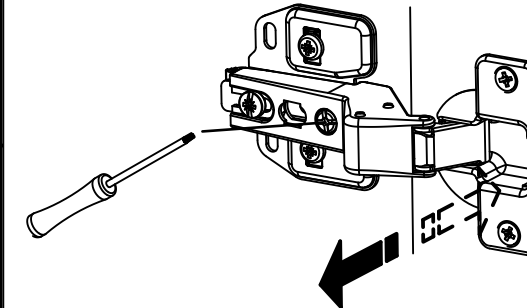
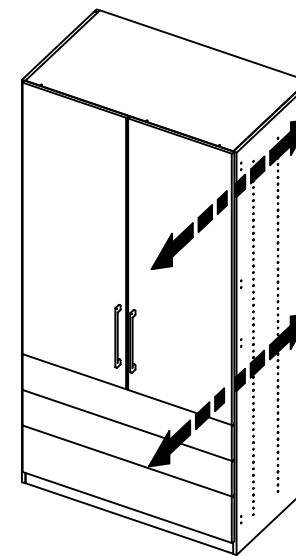



21.

18

2 x

12

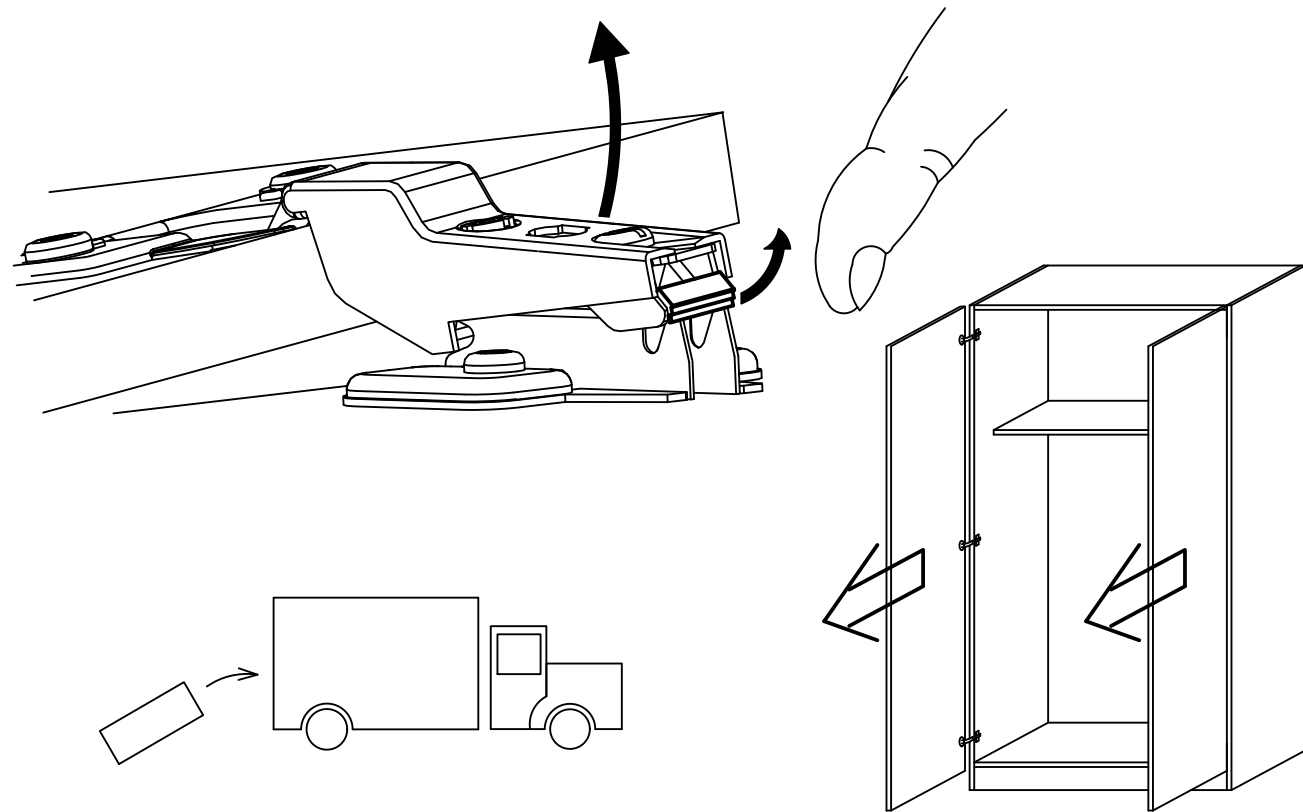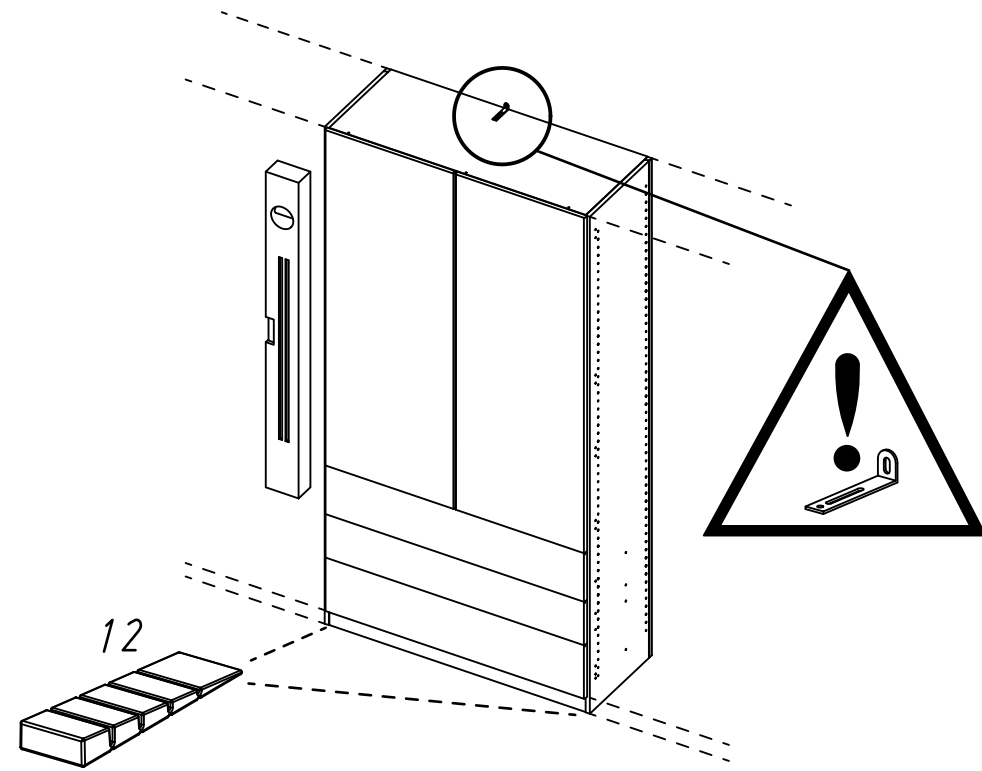





M0851

22.

19

12 x




621

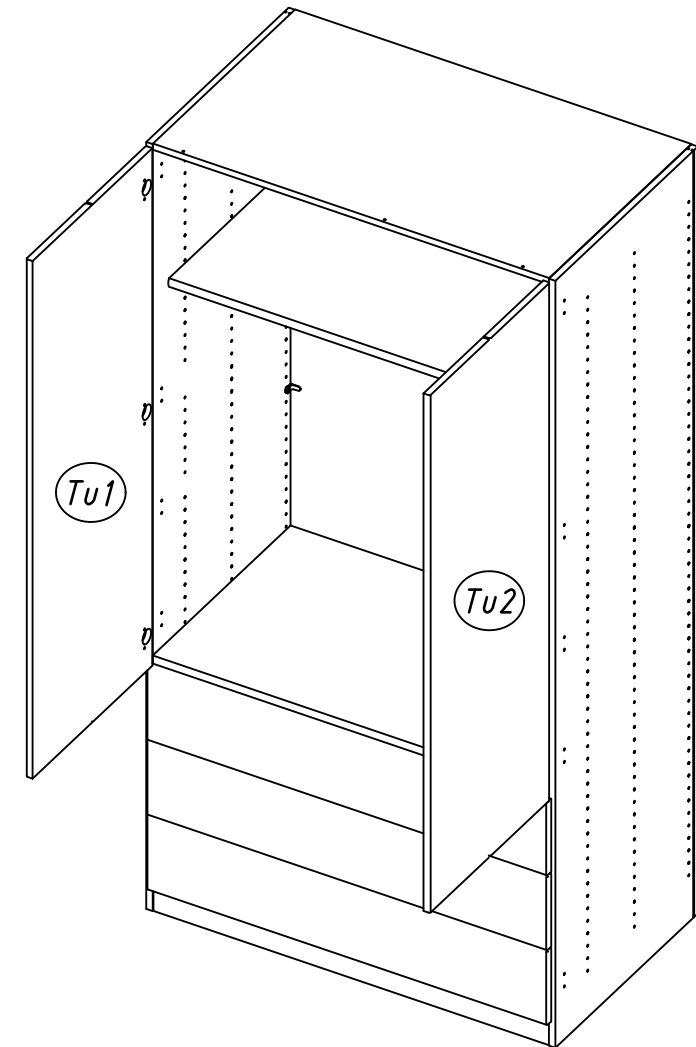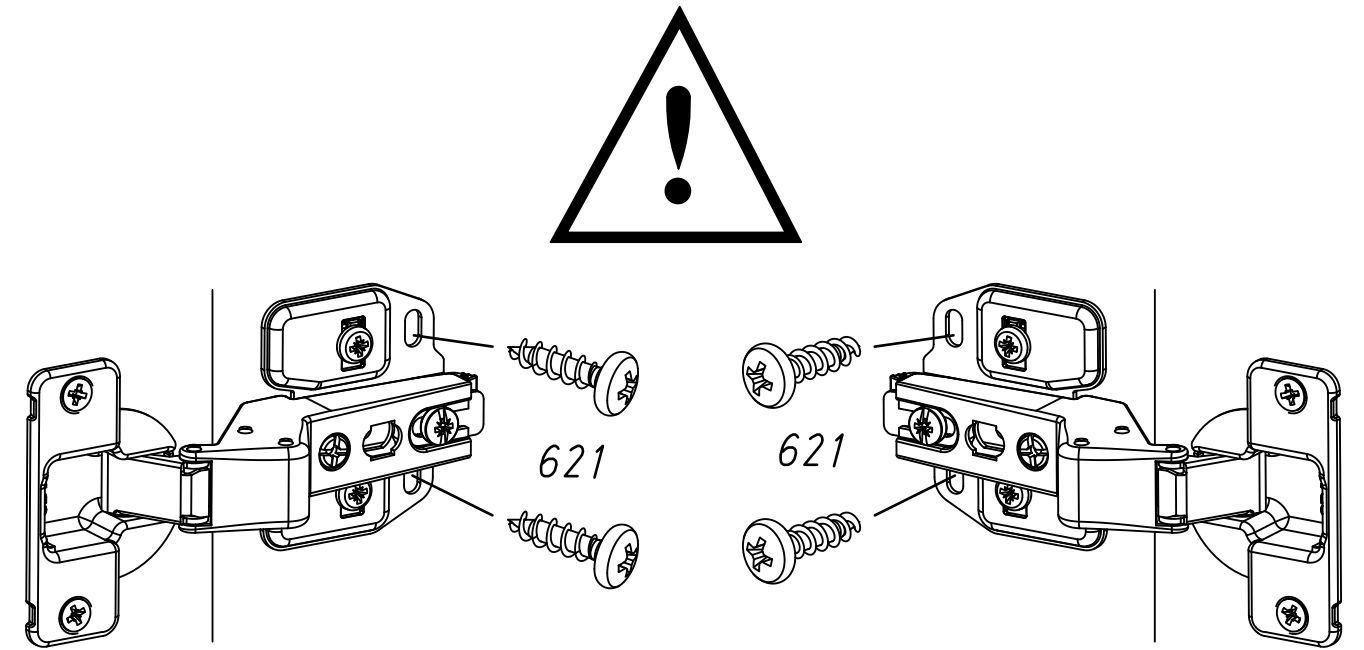


M0851

23.

20

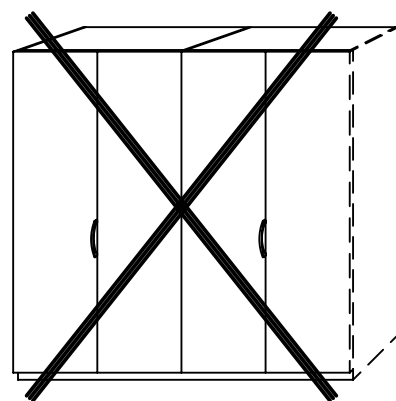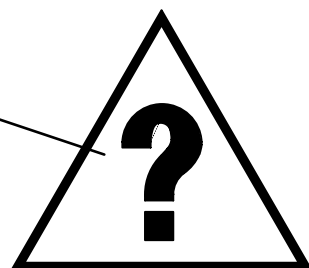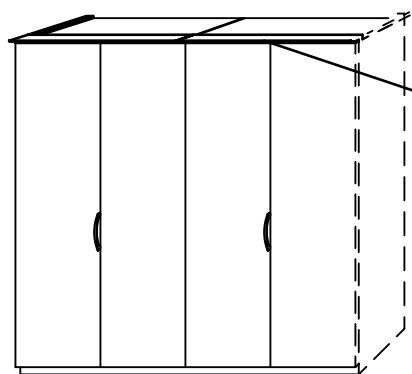


201




4x15

214

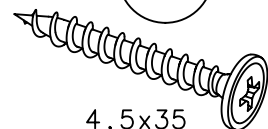


4,5x35




423




424



425

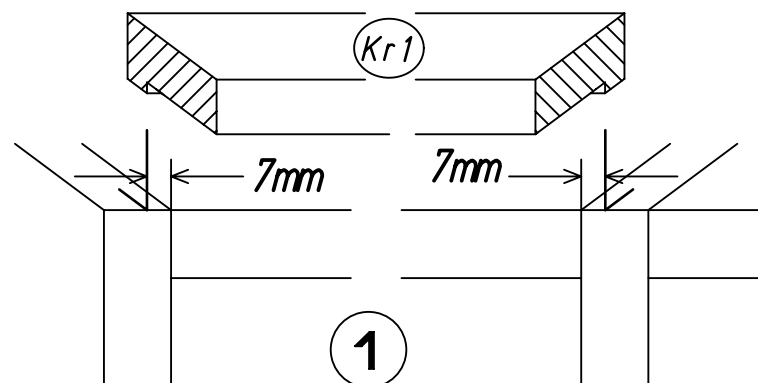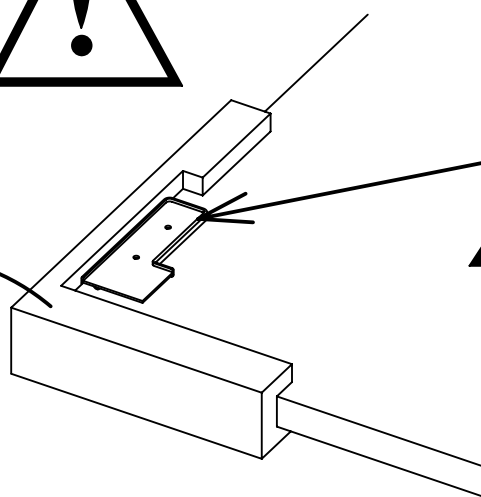

1

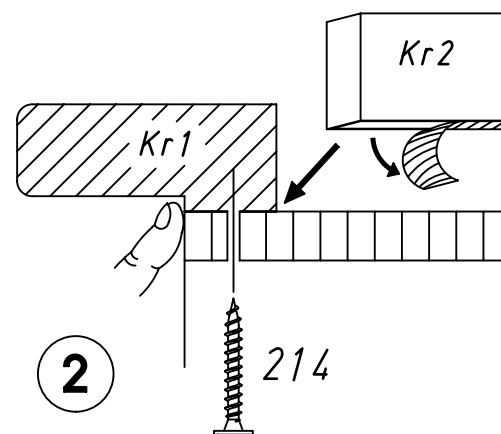

2


M0851

24.

21


4 x

201





1 x

423



1 x



425

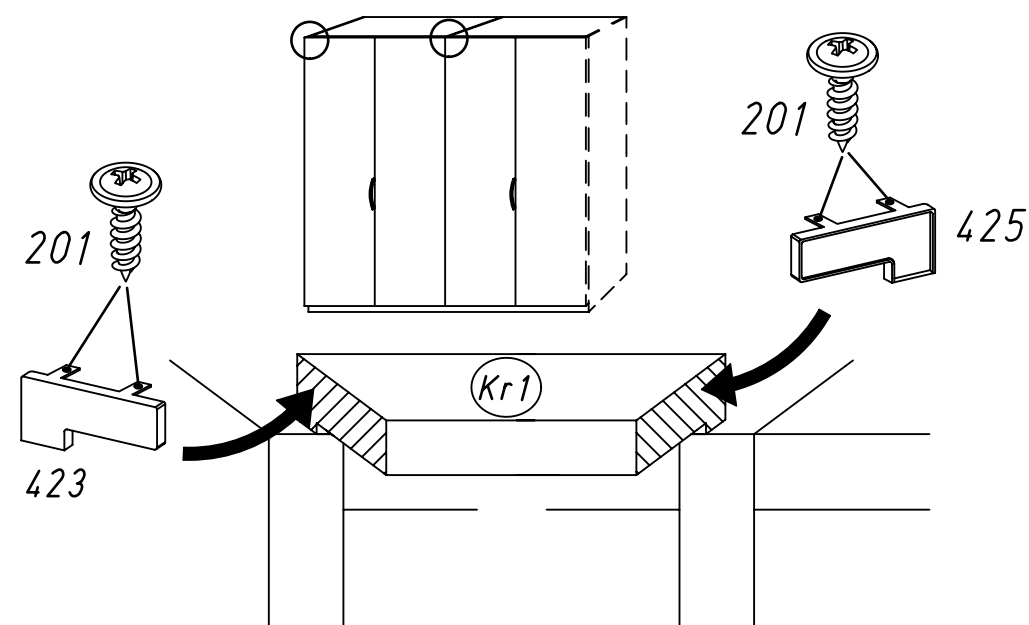

Kr2

Kr1


Kr2

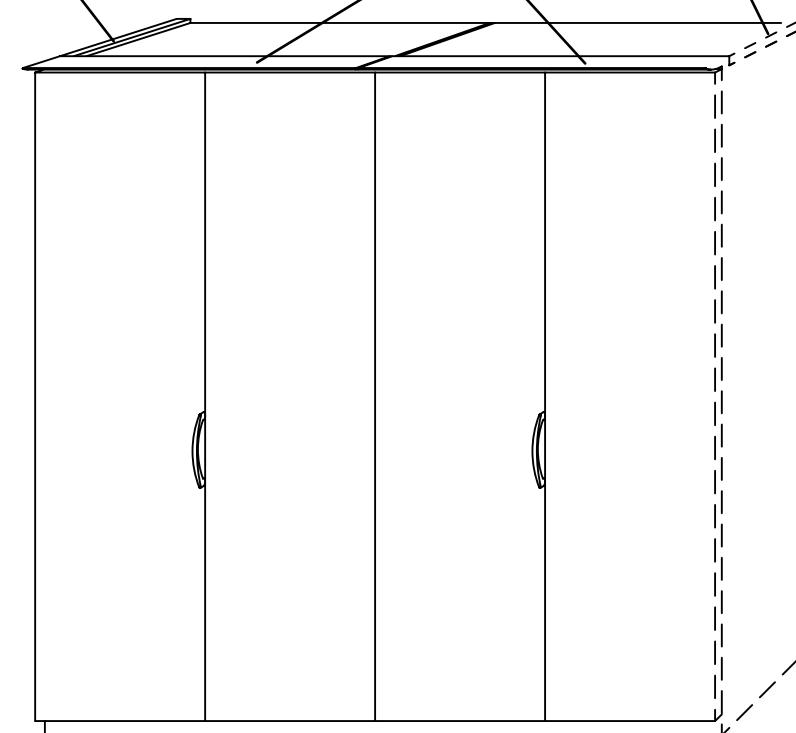


M0851

22

1.

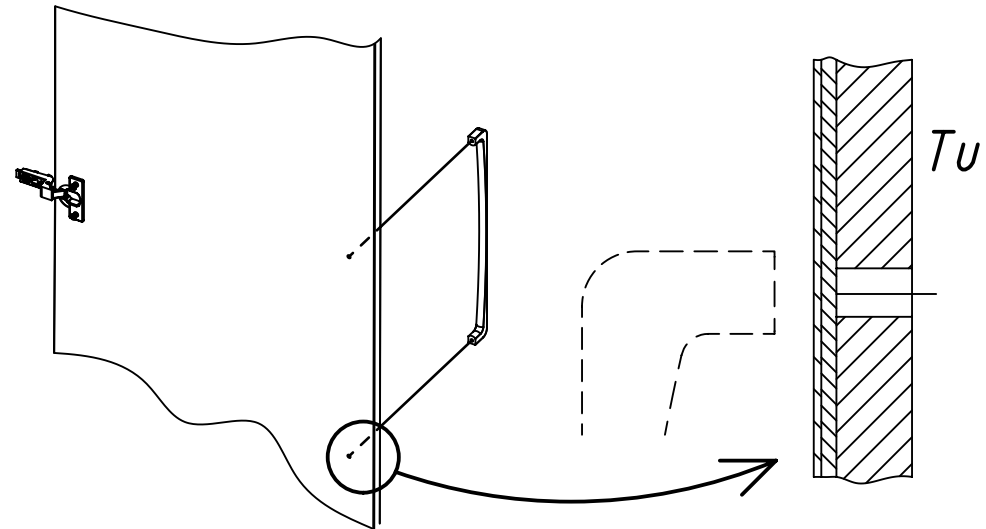


2.

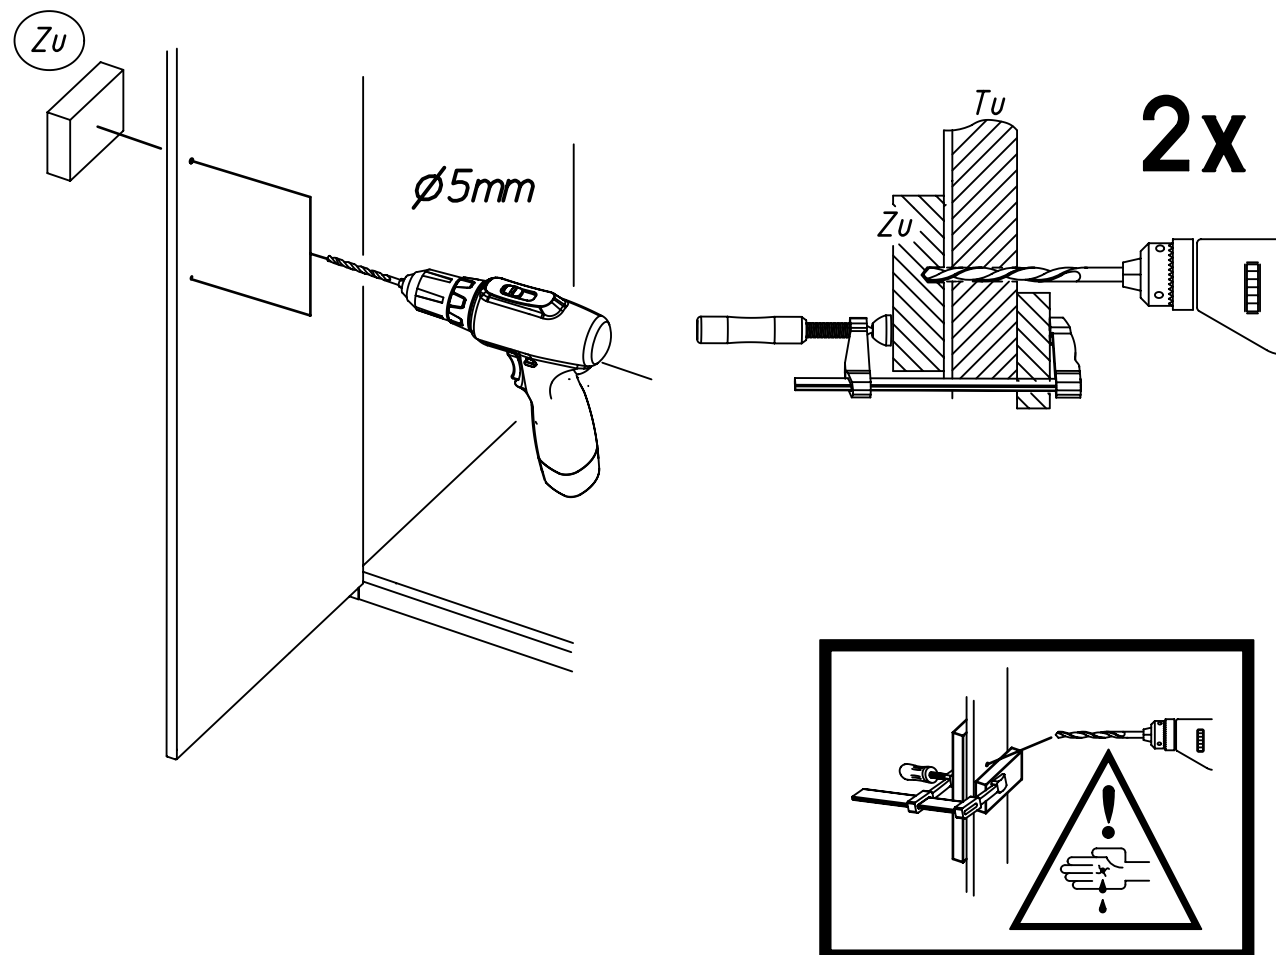



Montageanleitung / Mounting Instruction – Nexis für Nexis Bänder / Nexis for Nexis hinges

Zuerst Türeinrichtungen vornehmen / Make door adjustments first



1

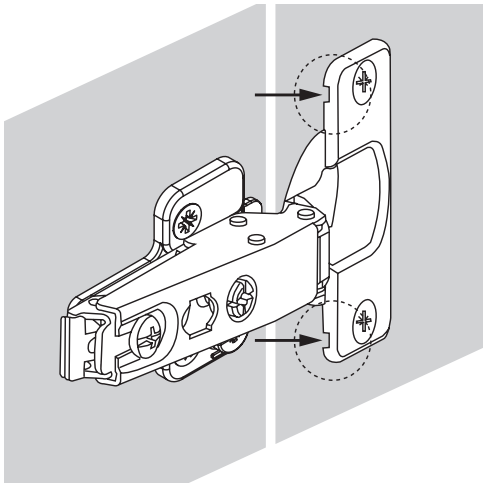



2

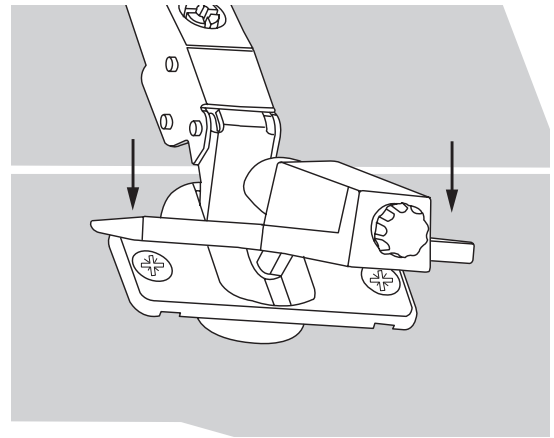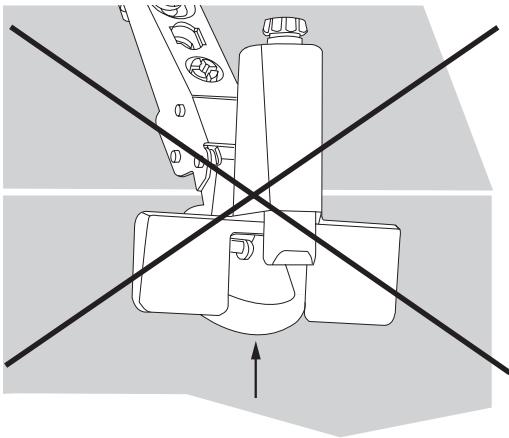

3

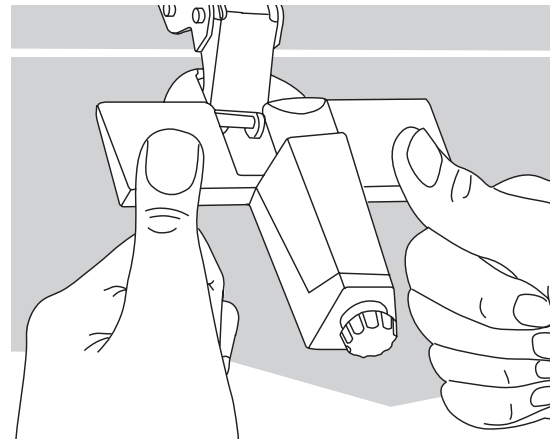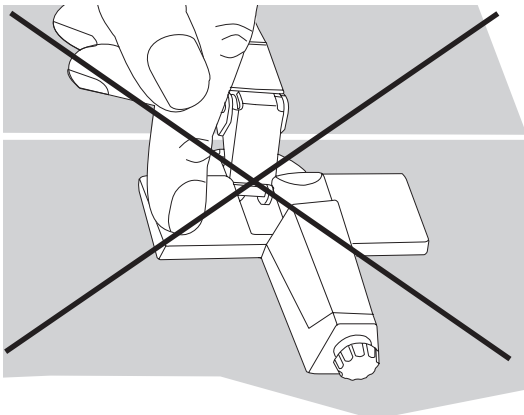

4

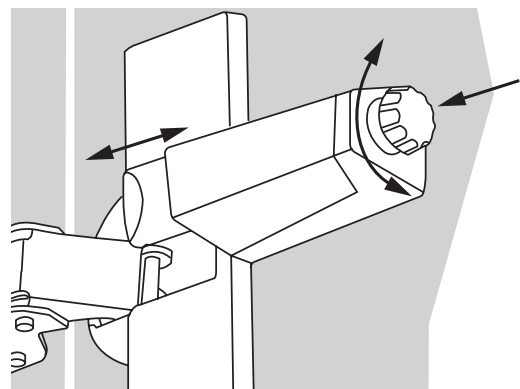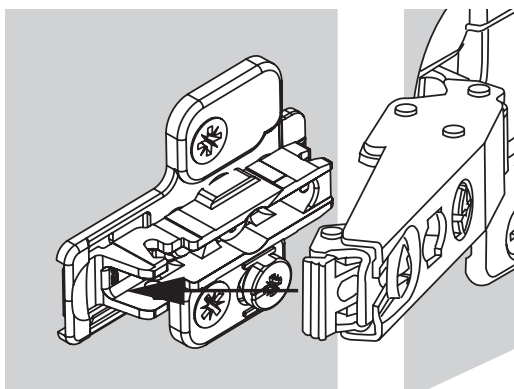

Demontage / Dismounting

