

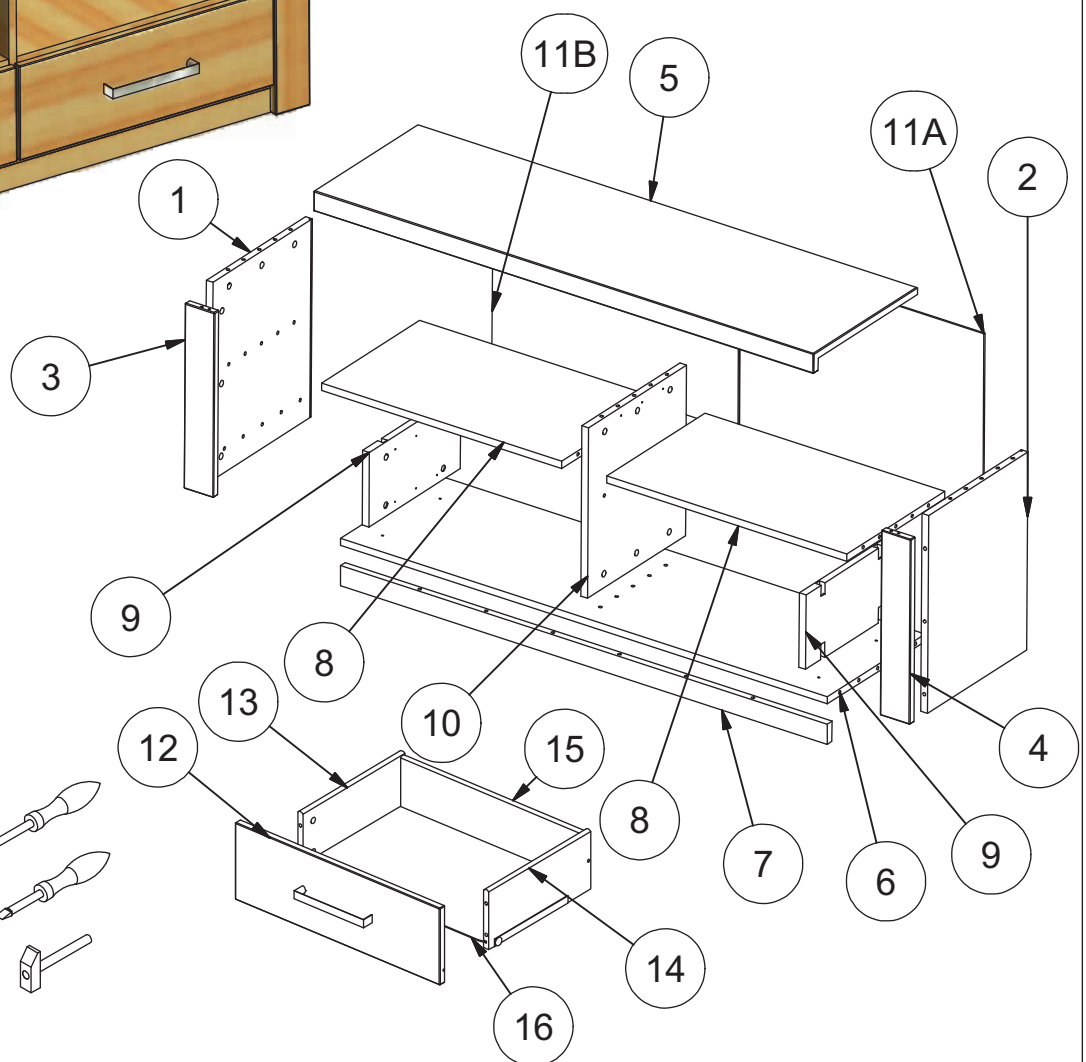


"6337"

versionsnummer:

06.2015


Naturholz kann sich werkstoffbedingt verziehen. Durch das Montieren ziehen sich Teile wieder plan.

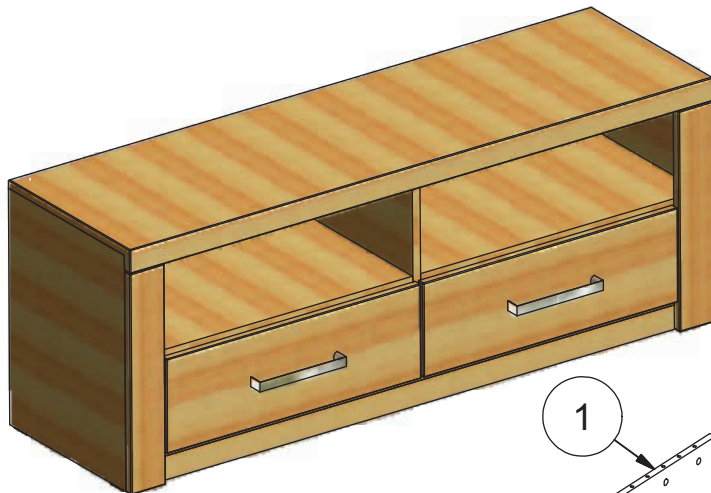



x2



60'

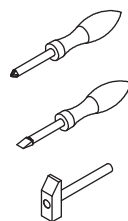


A  Ø 8x30 24	B  56	S  Ø 8x50 2	D  56	D1  6/6		G  M 4x30 2	H  80	
	J  Ø 5x13 20		R  M 4x22 4	M  2	L  Ø 7x50 4		O  4	N  4

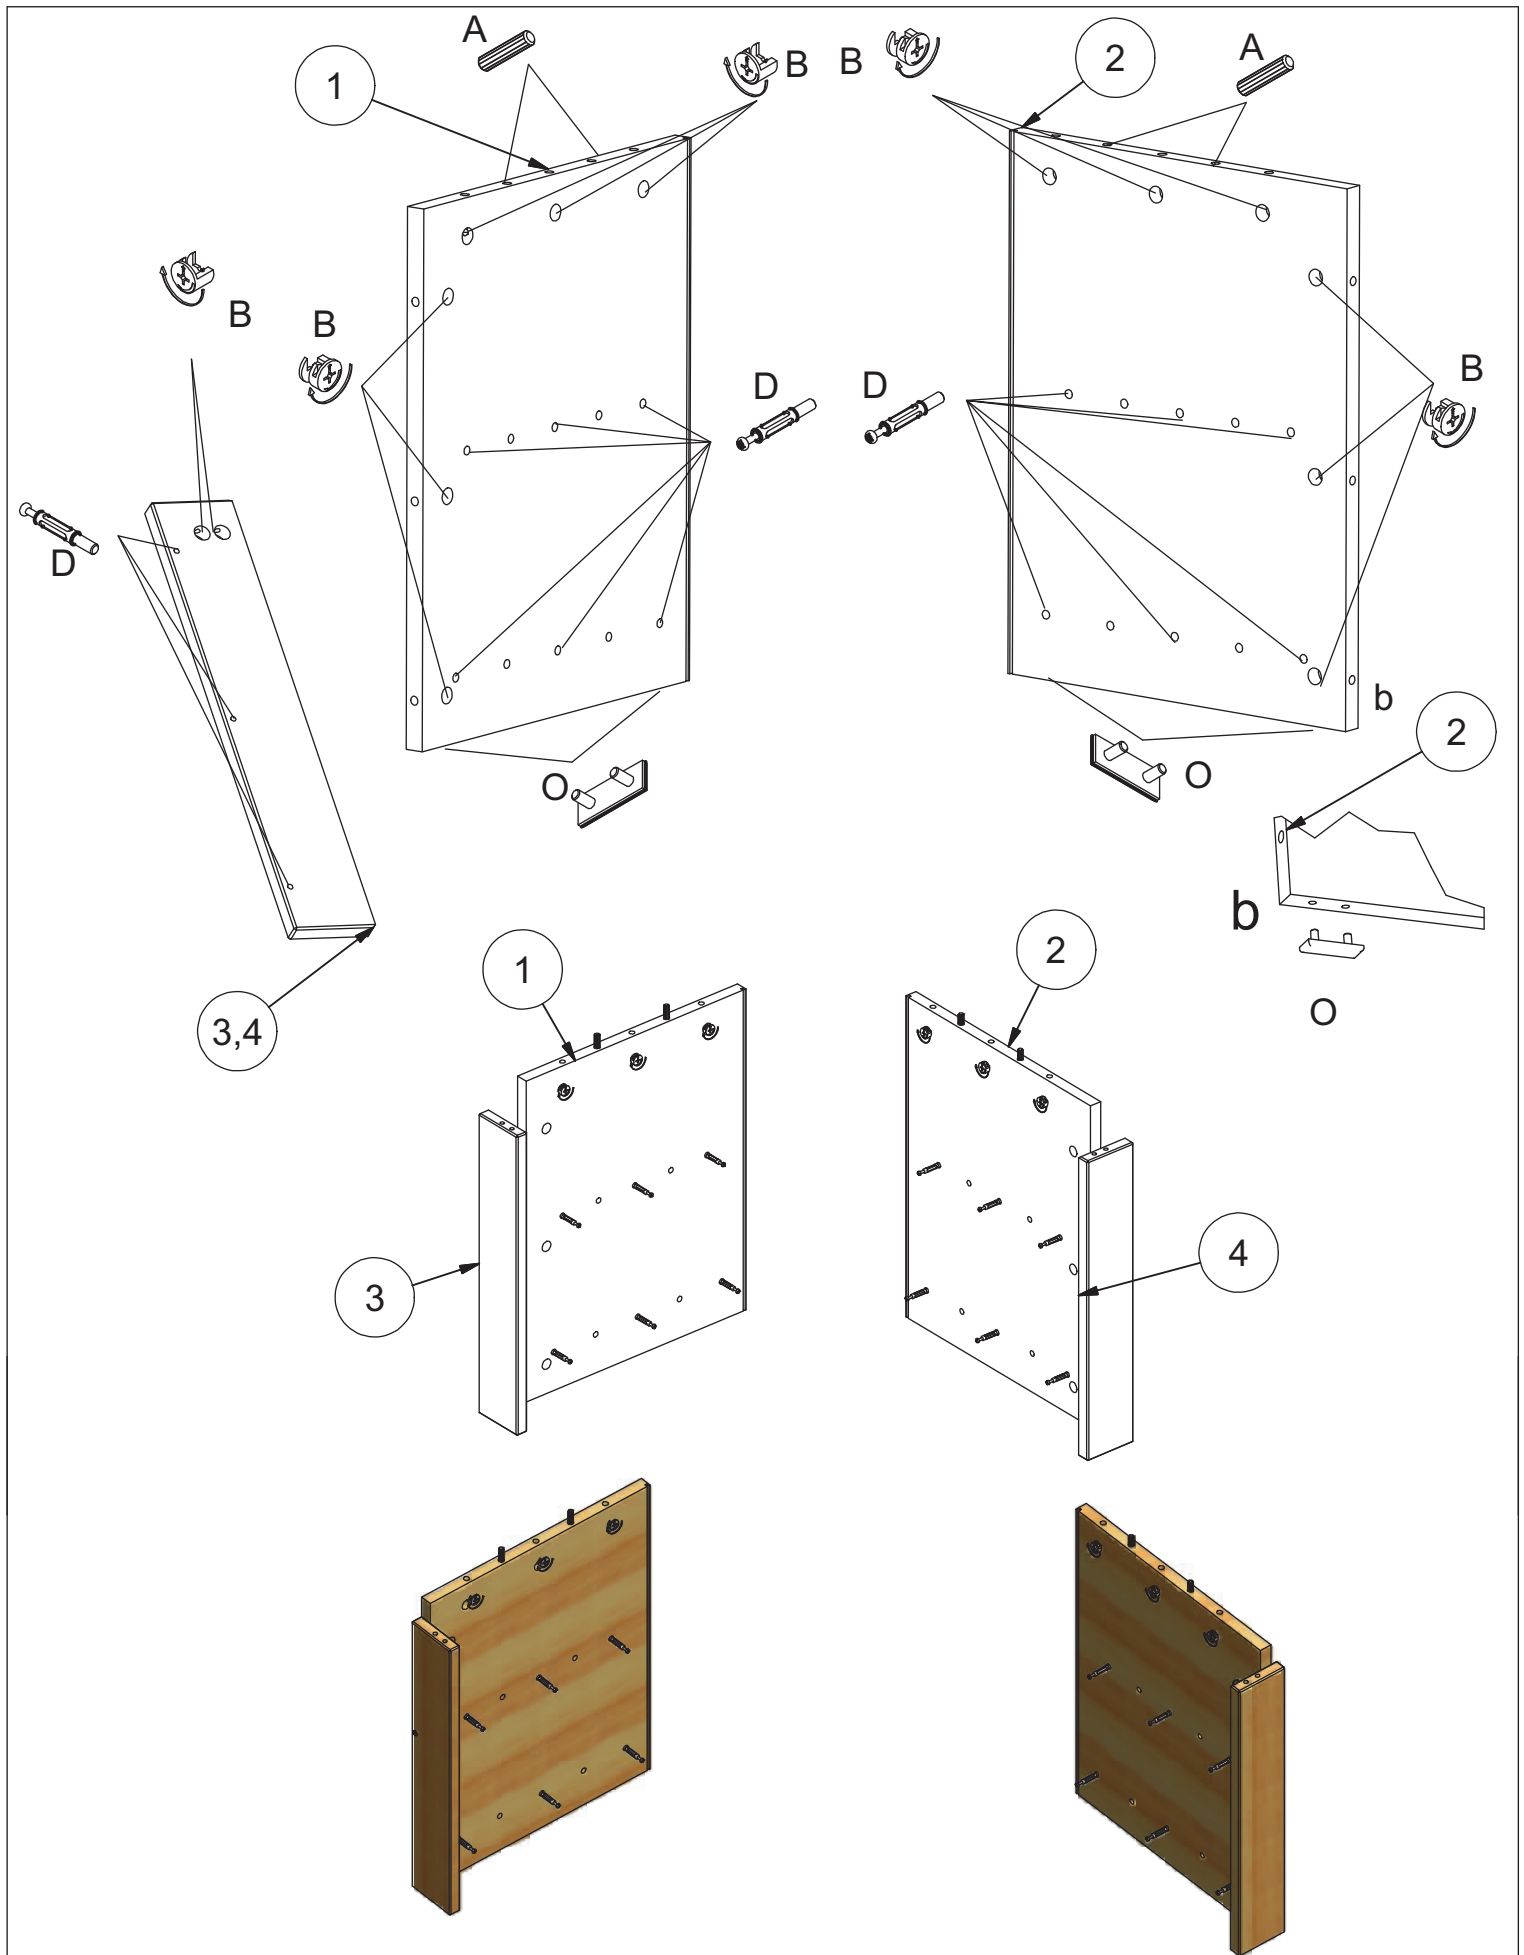


I

A	B	D	O
 Ø 8x30 4	 16	 18	 4

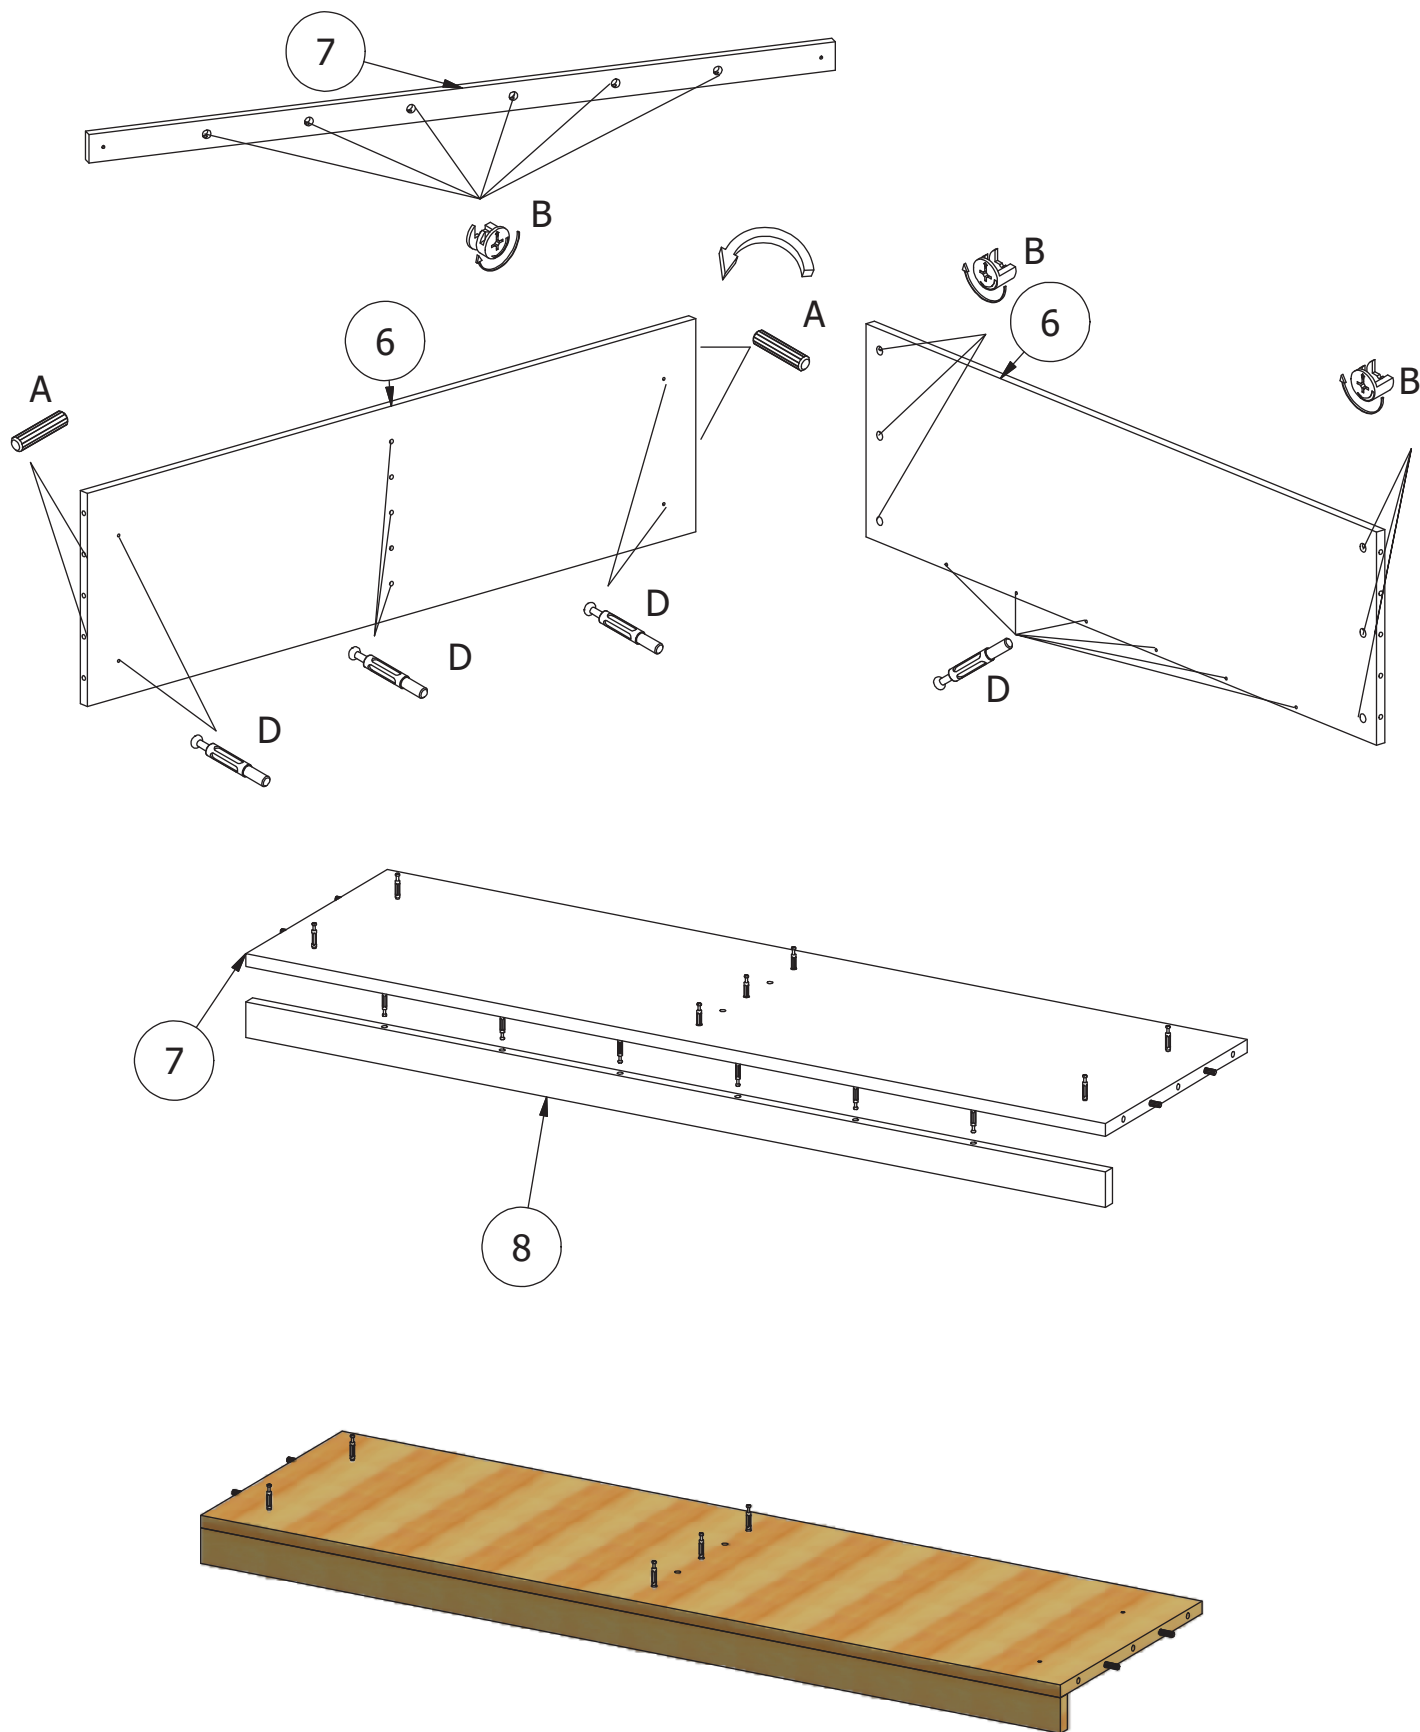



II

A	B	D
		
Ø5x30 4	12	13


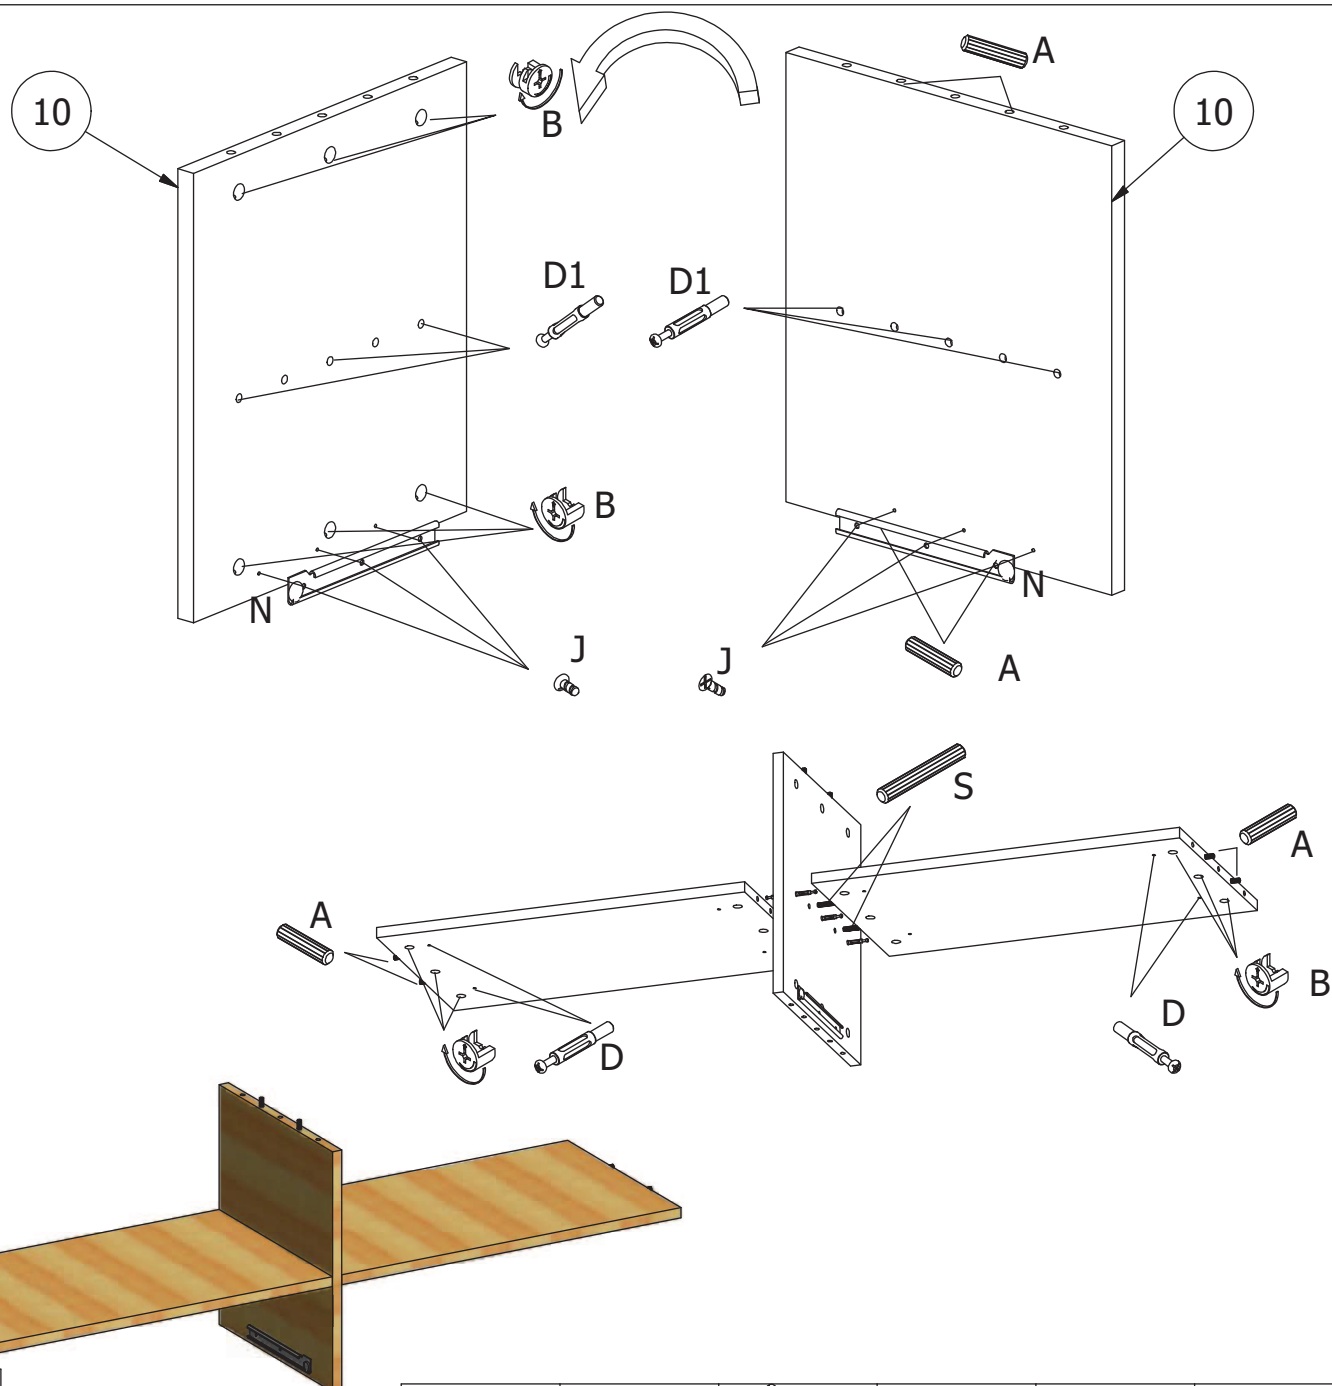


III


D	A	D1	B	J	S
					
4	8	6/6	12	6	2

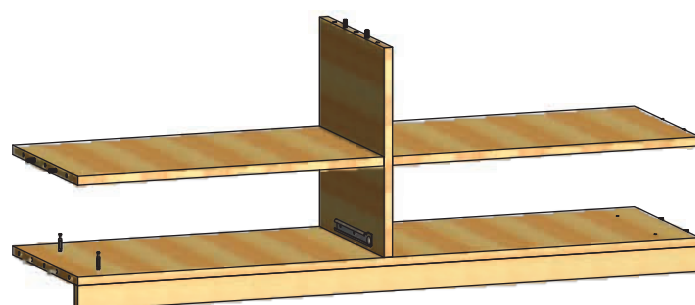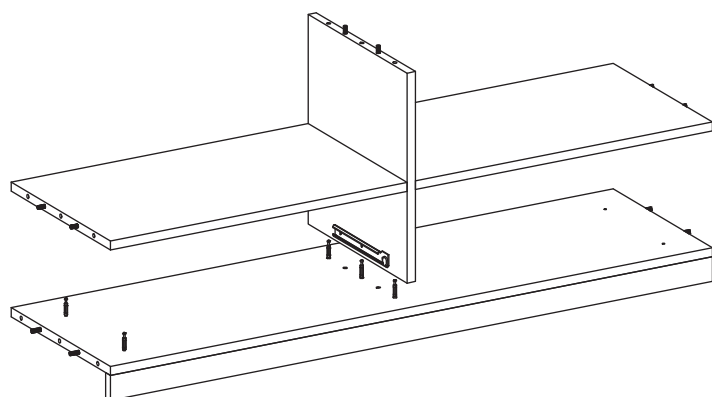

IV

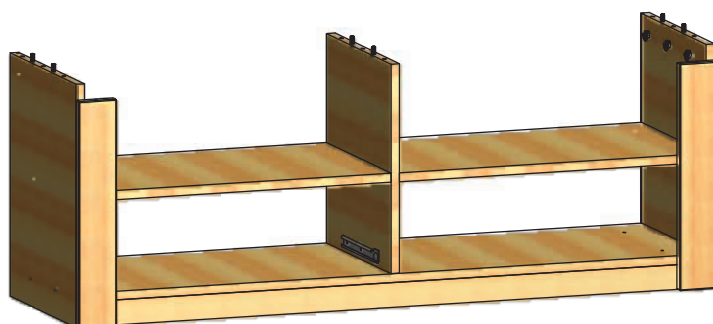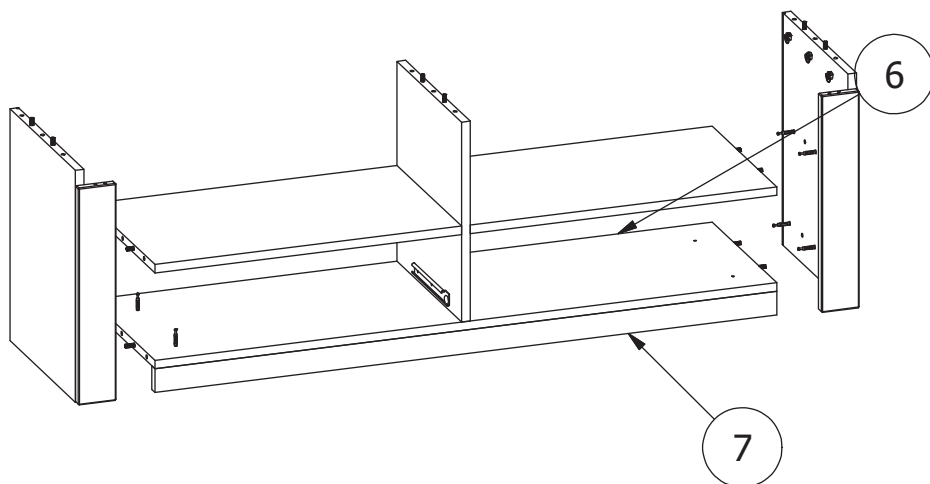

V

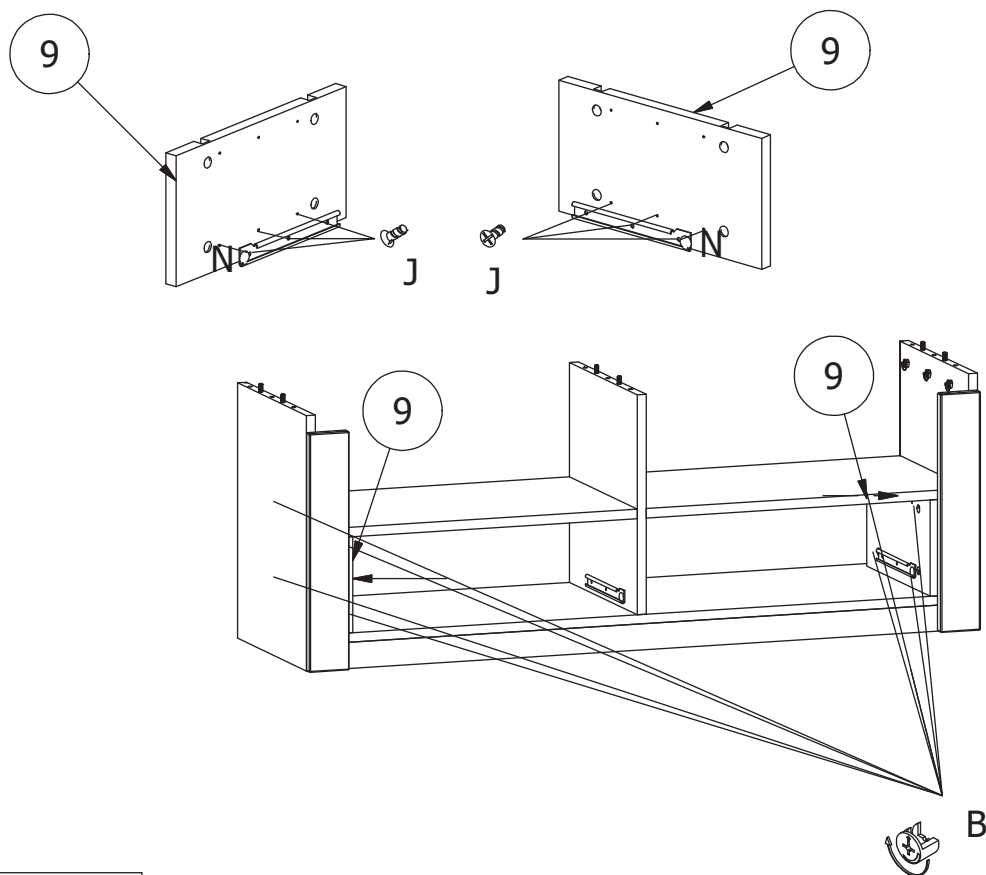

VI




J	B	N
		
Ø5x13 6	8	2

VII

G M4x30 2	D 13
----------------------------	--------------------



VIII

A Ø8x30 8	B 8	D 8	L Ø7x50 4	M 2	R M4x22 4	J Ø5x13 8	N 4
----------------------------	-------------------	-------------------	----------------------------	-------------------	----------------------------	----------------------------	-------------------

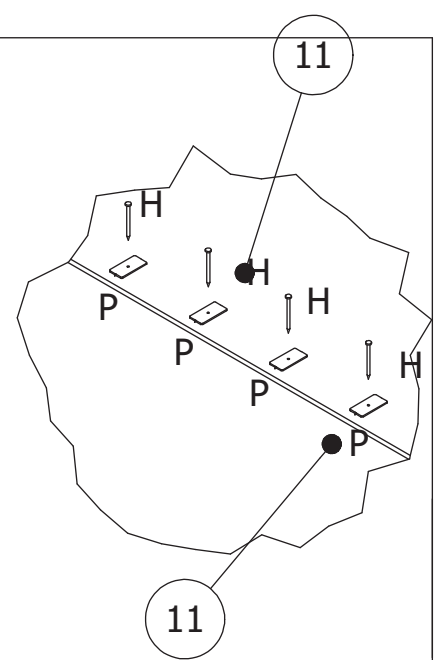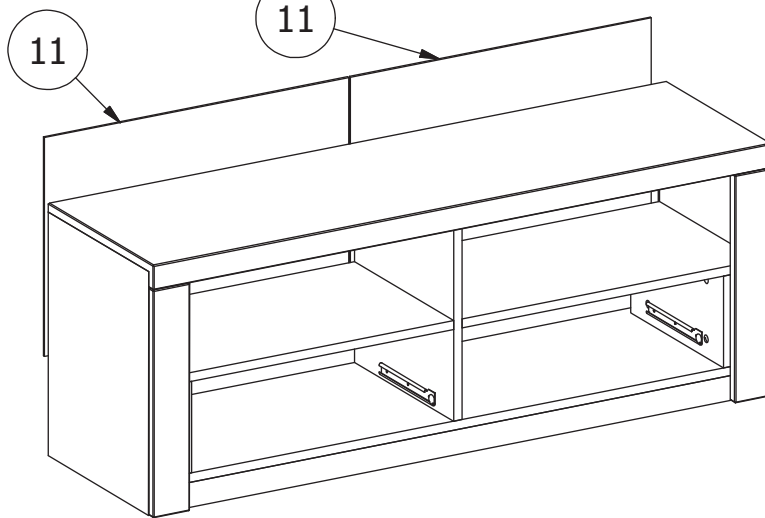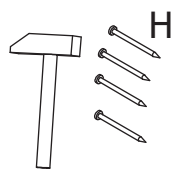

VIII

P	H
	
5	80

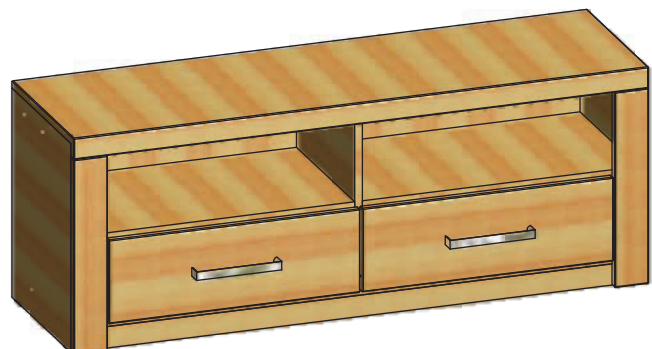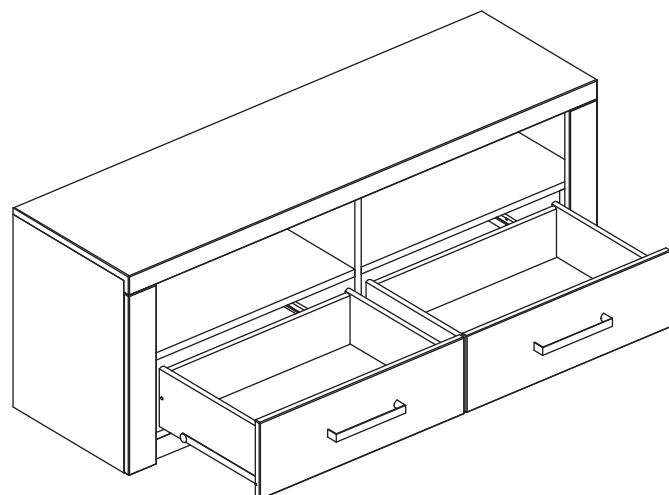

IX