

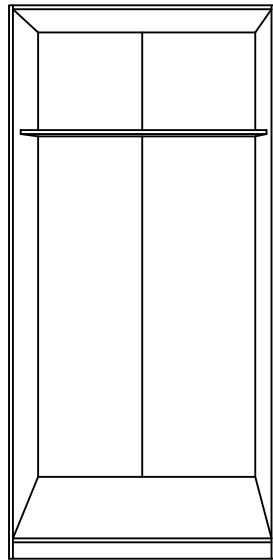





1089

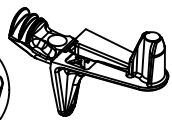



1

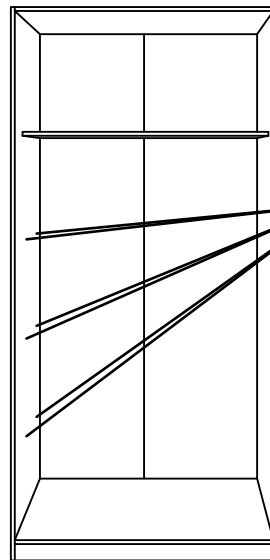


1089

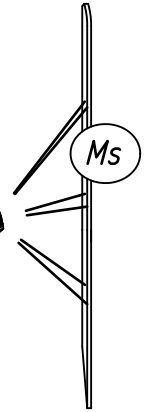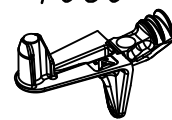

2

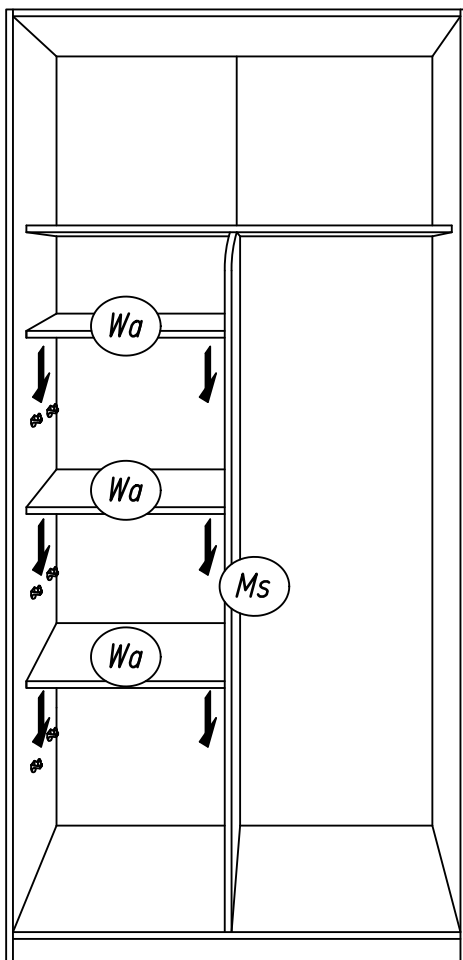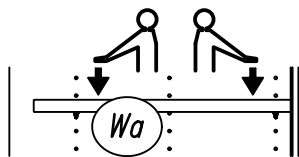




3

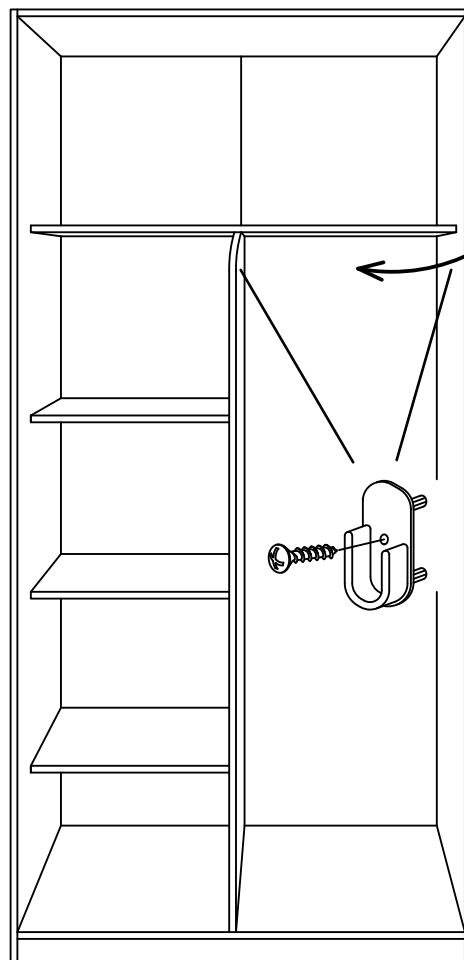

1.









MD106_03

rauch

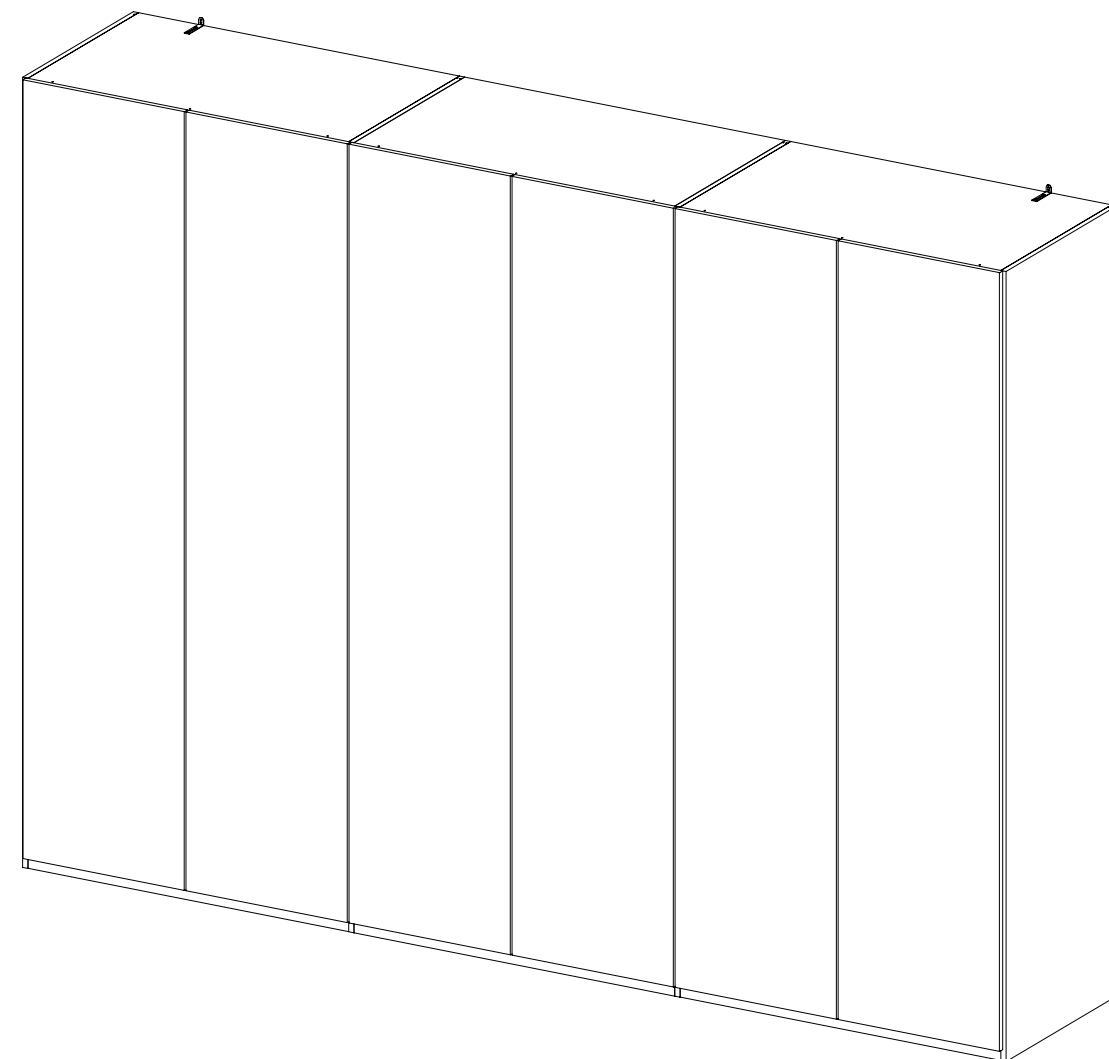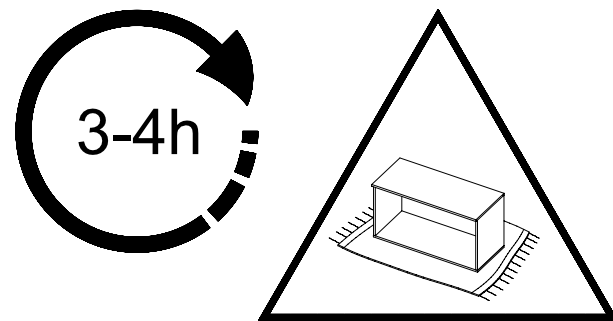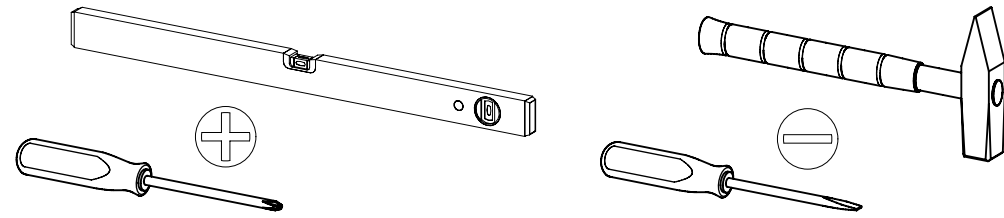







MD106

2.

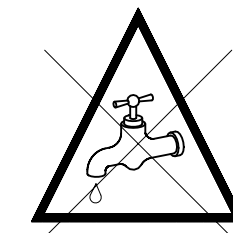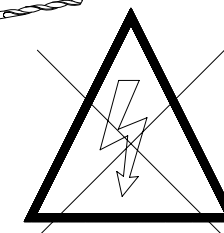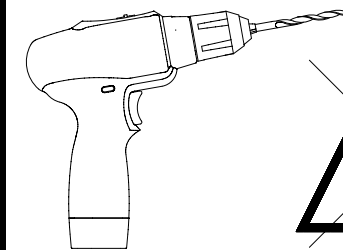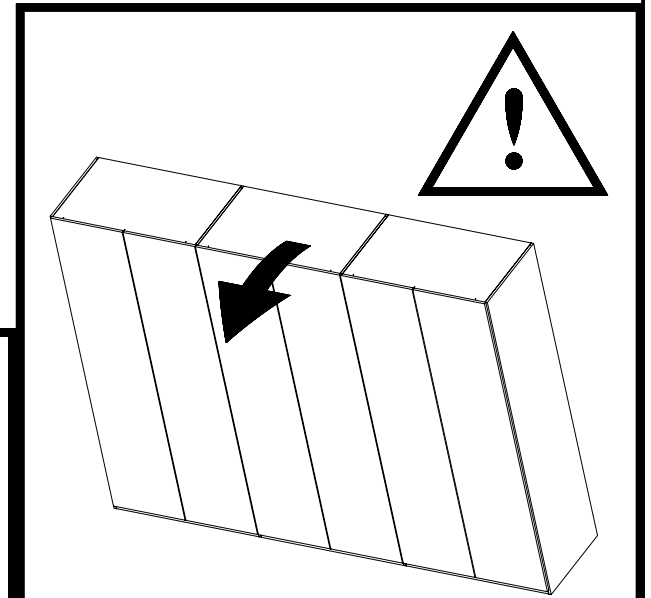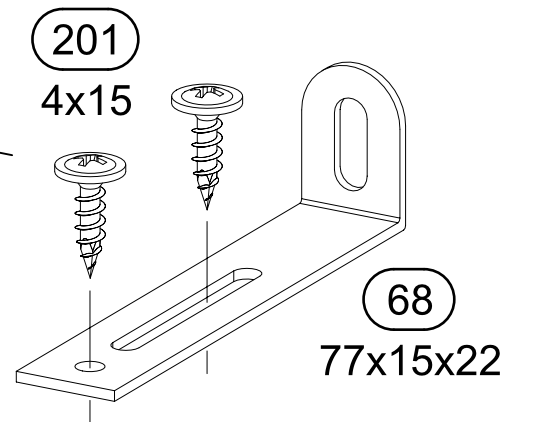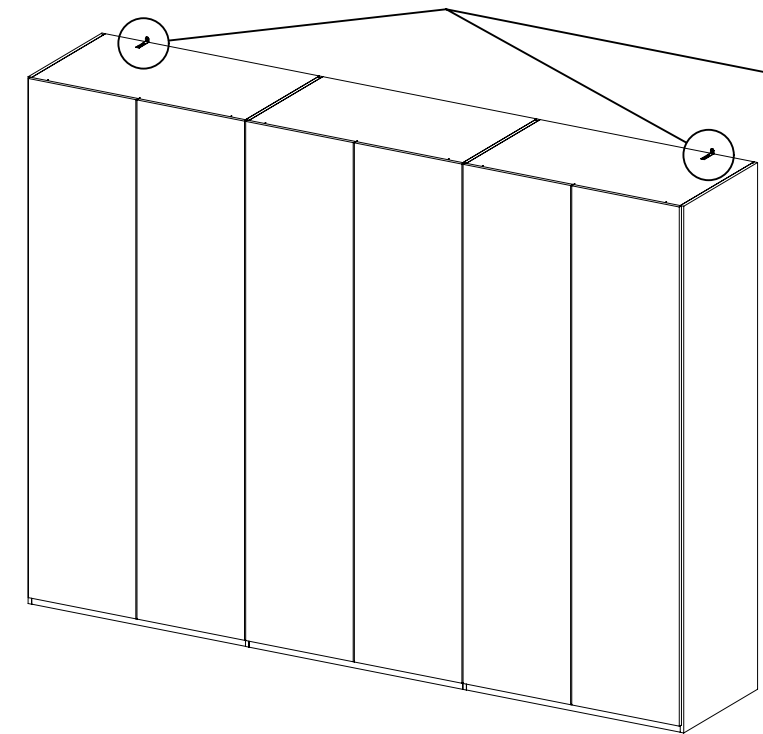


?

ØXmm

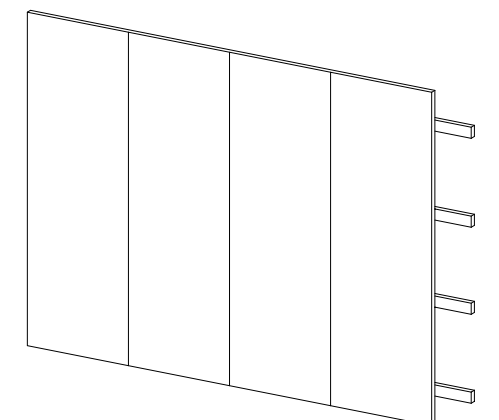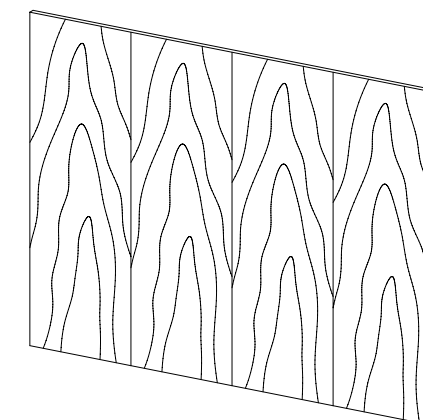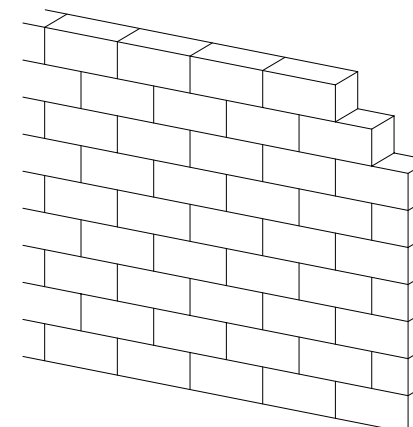


MD106

3.












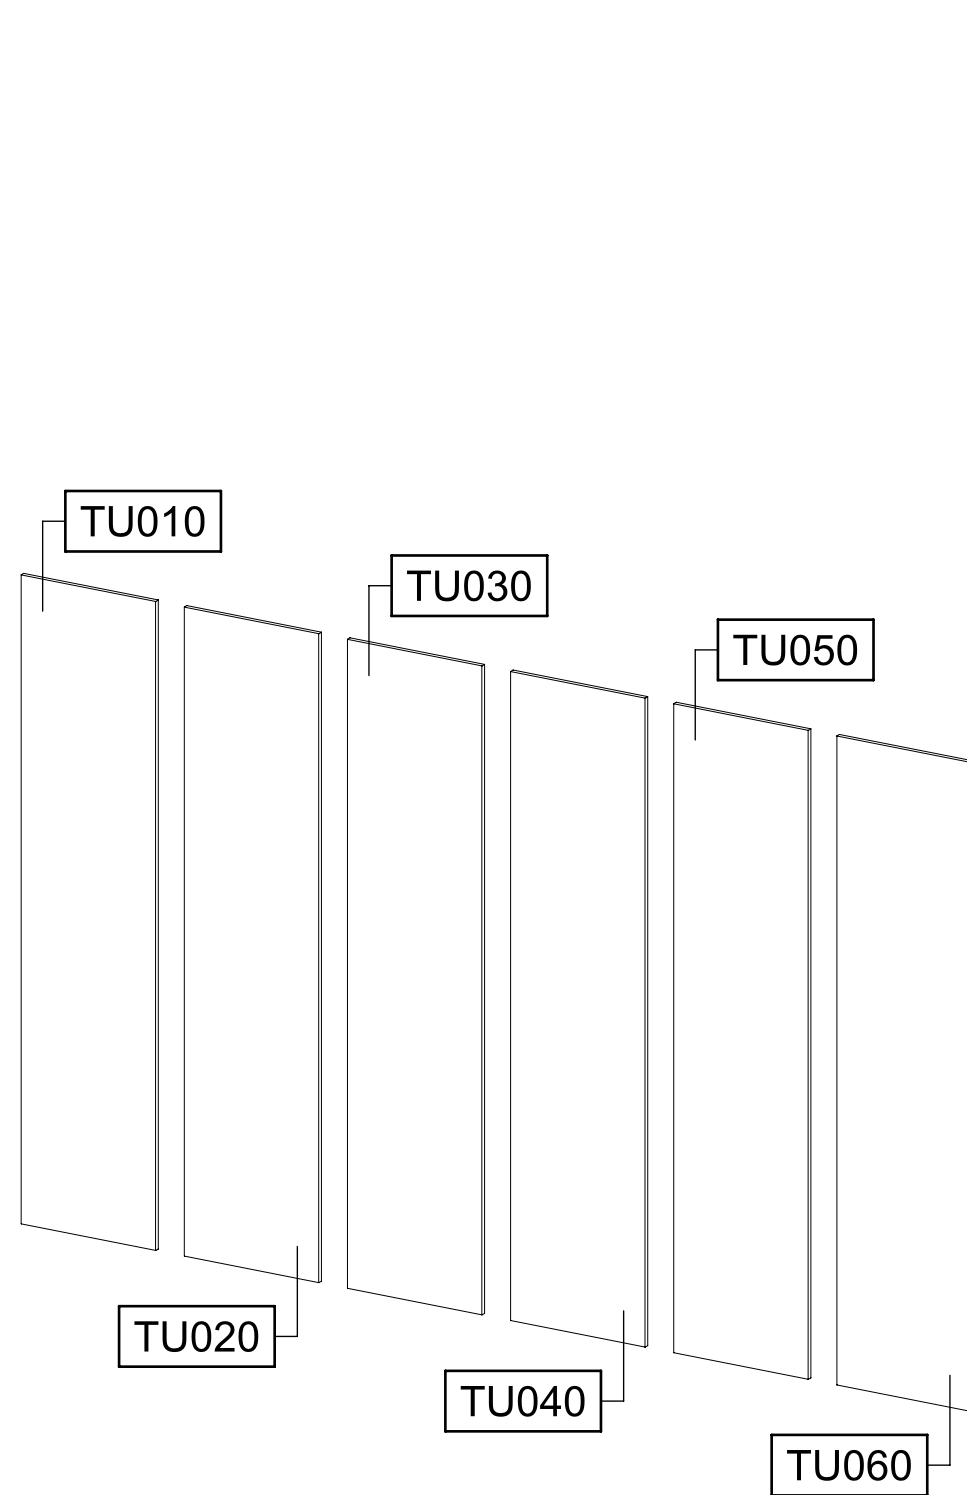



MD106

4.

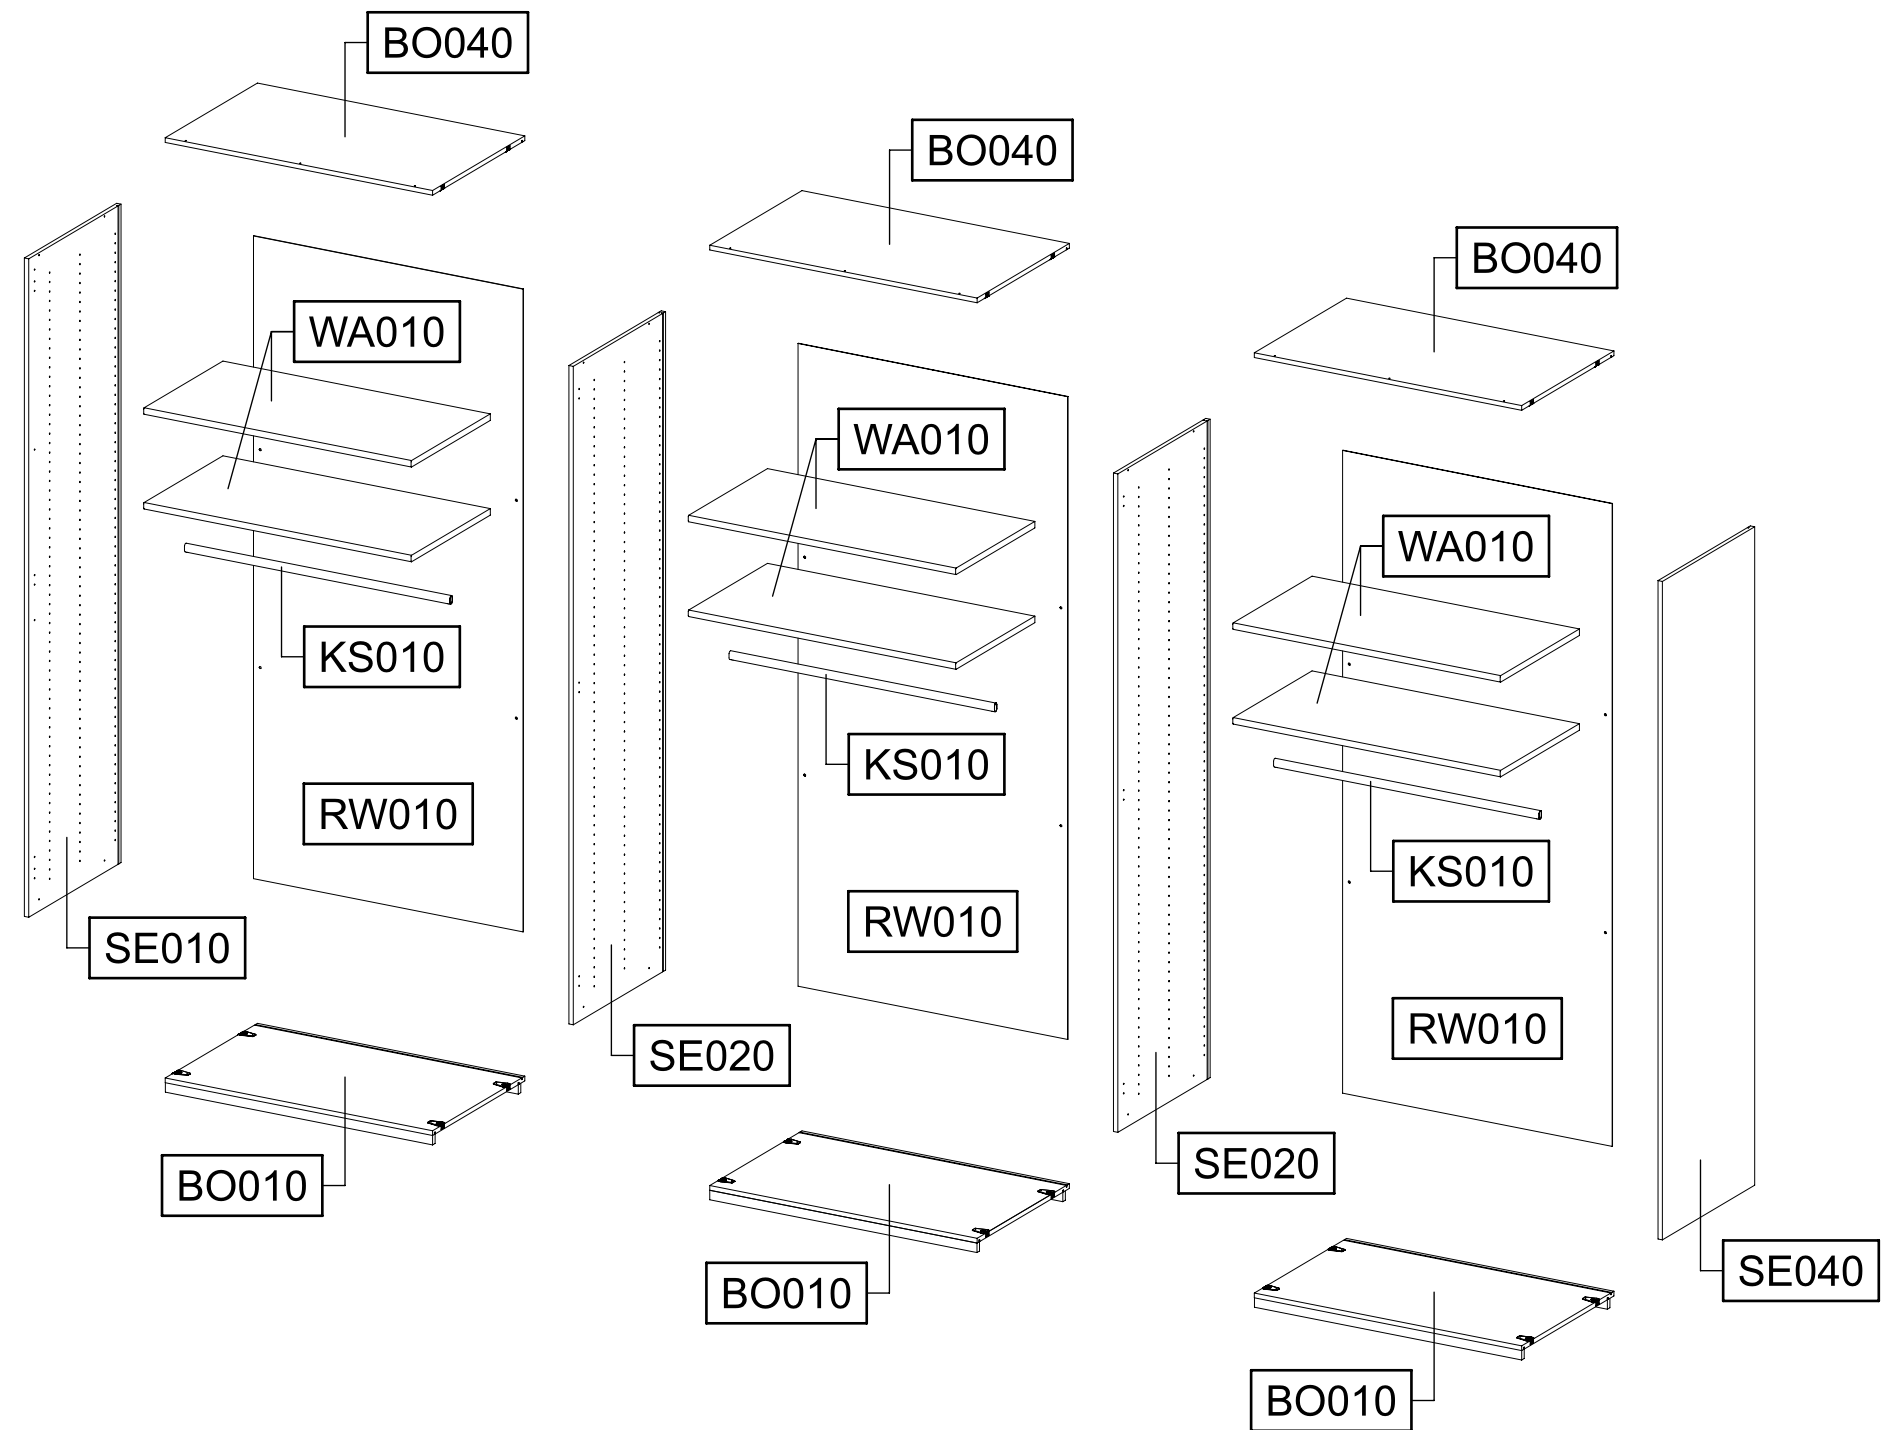


MD106

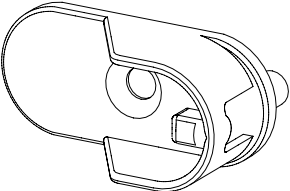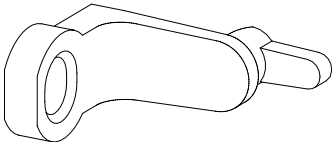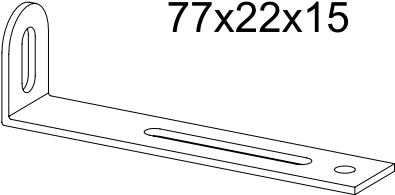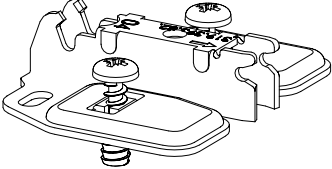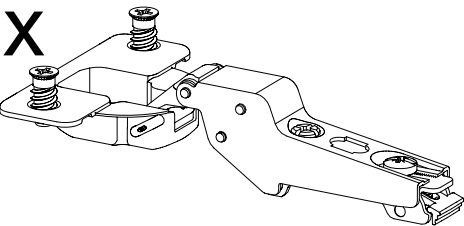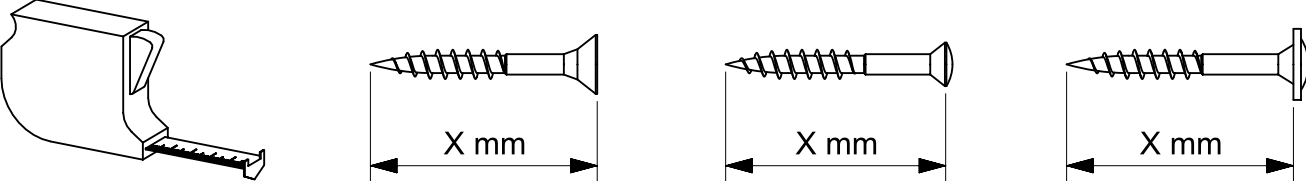
8x 55x16x6,2 12 	6x 29 
12x 47 	2x 77x22x15 68 
4x 4x15 201 	6x 3,5x15 205 
36-48x 4x13 621 	12x 6,5x12 779 
8x 1085 	8x 1086 
24x 1089 	18-24x 1291 
18-24x 1292 	
	


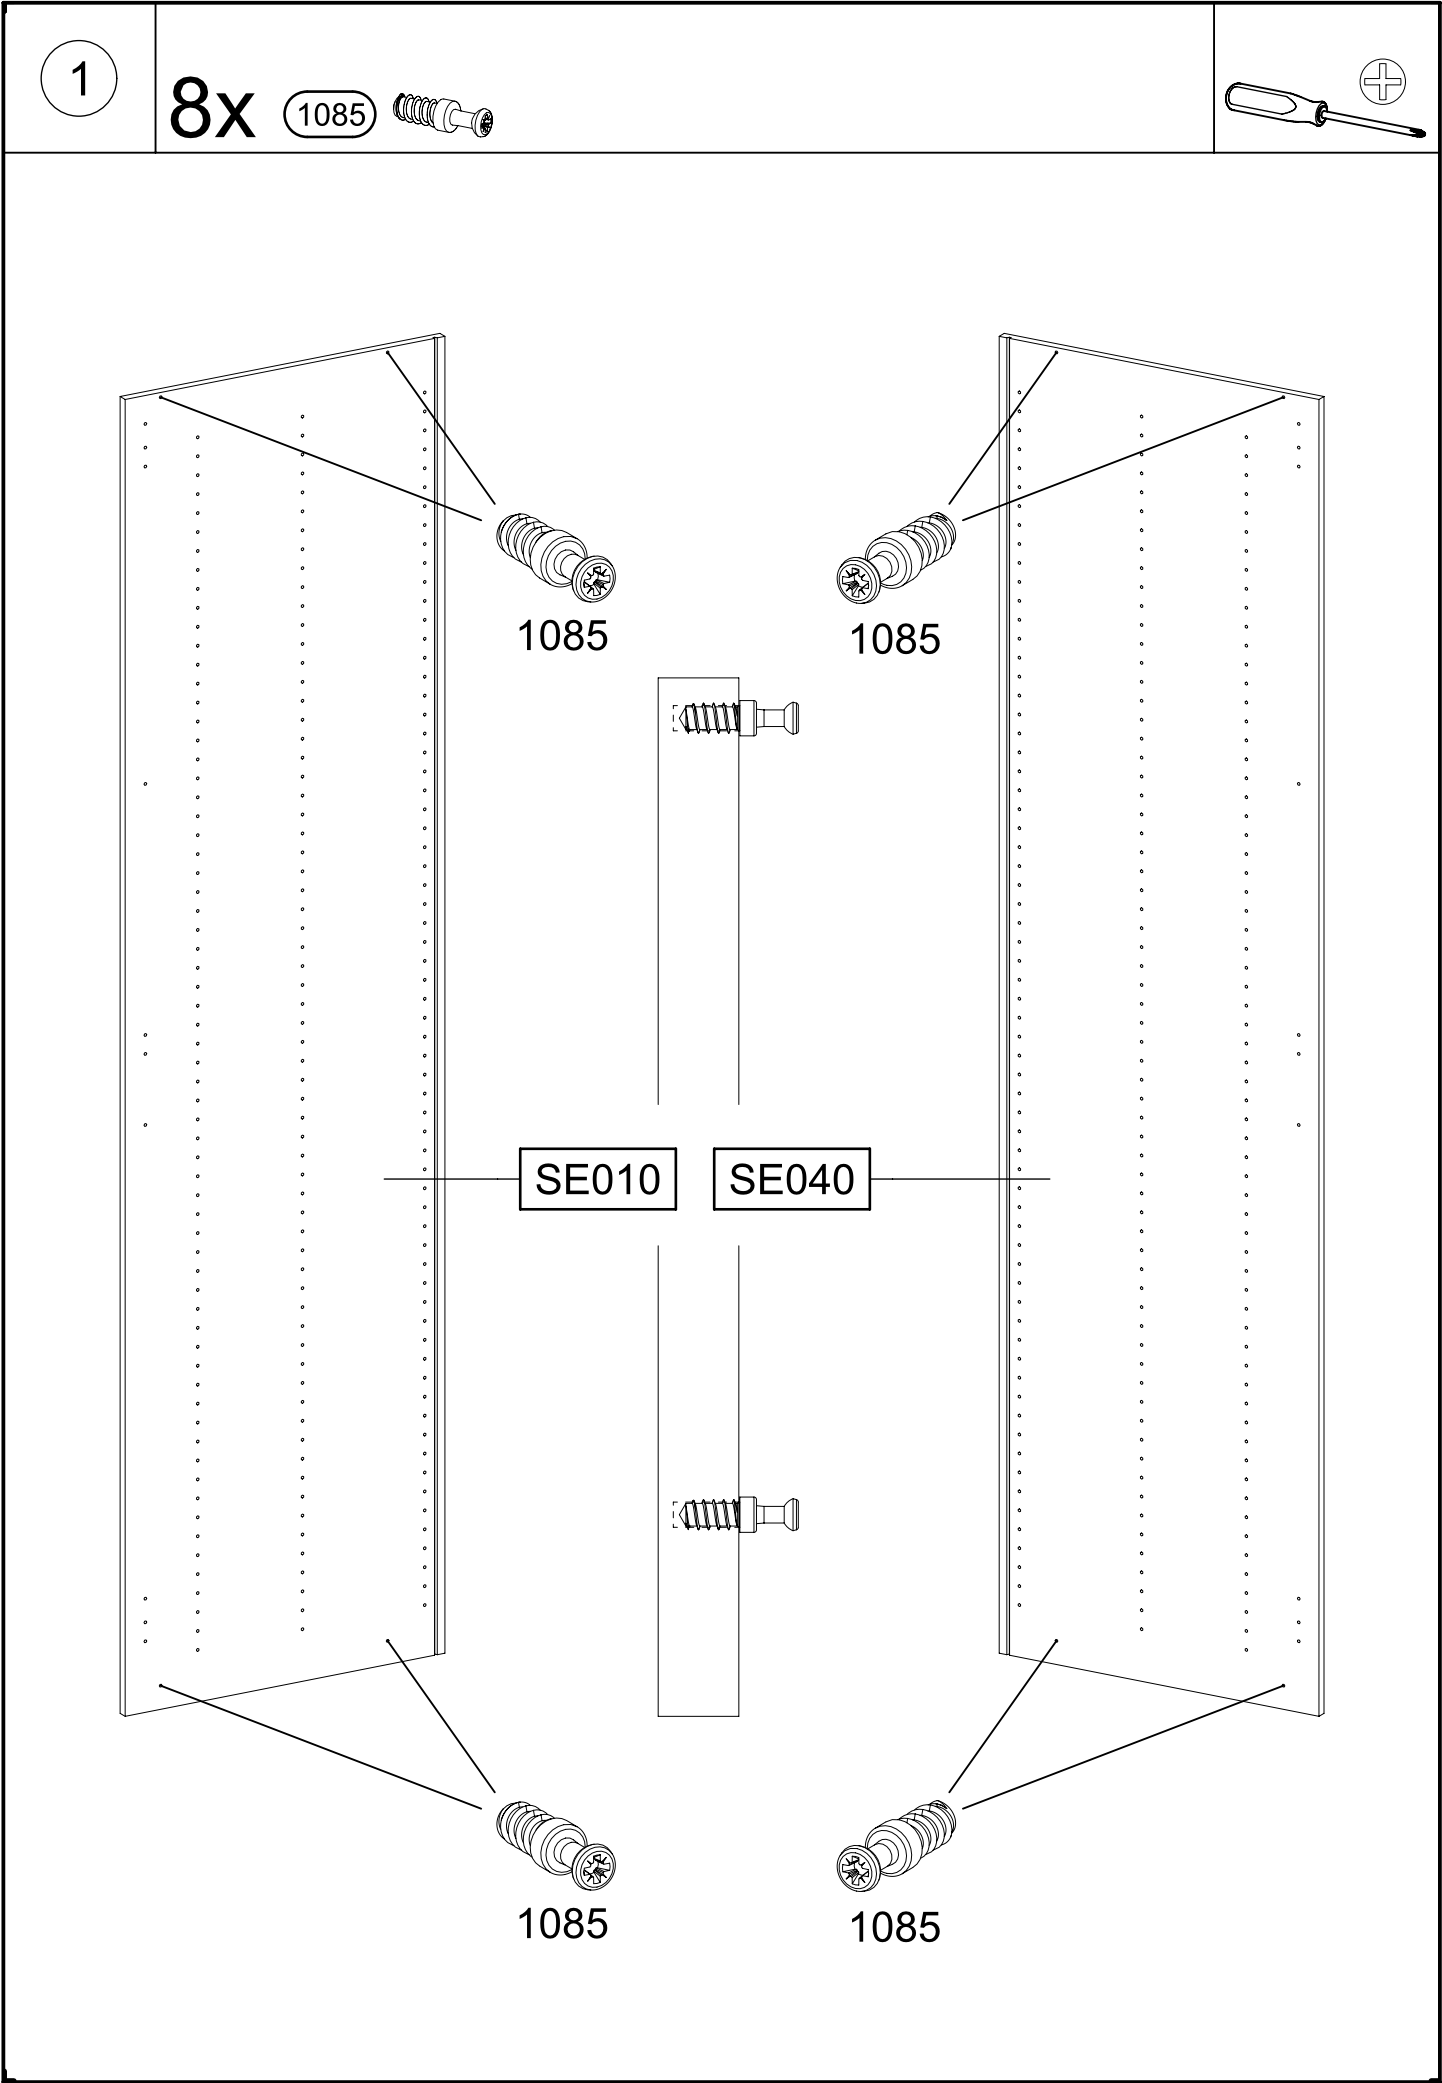




7.


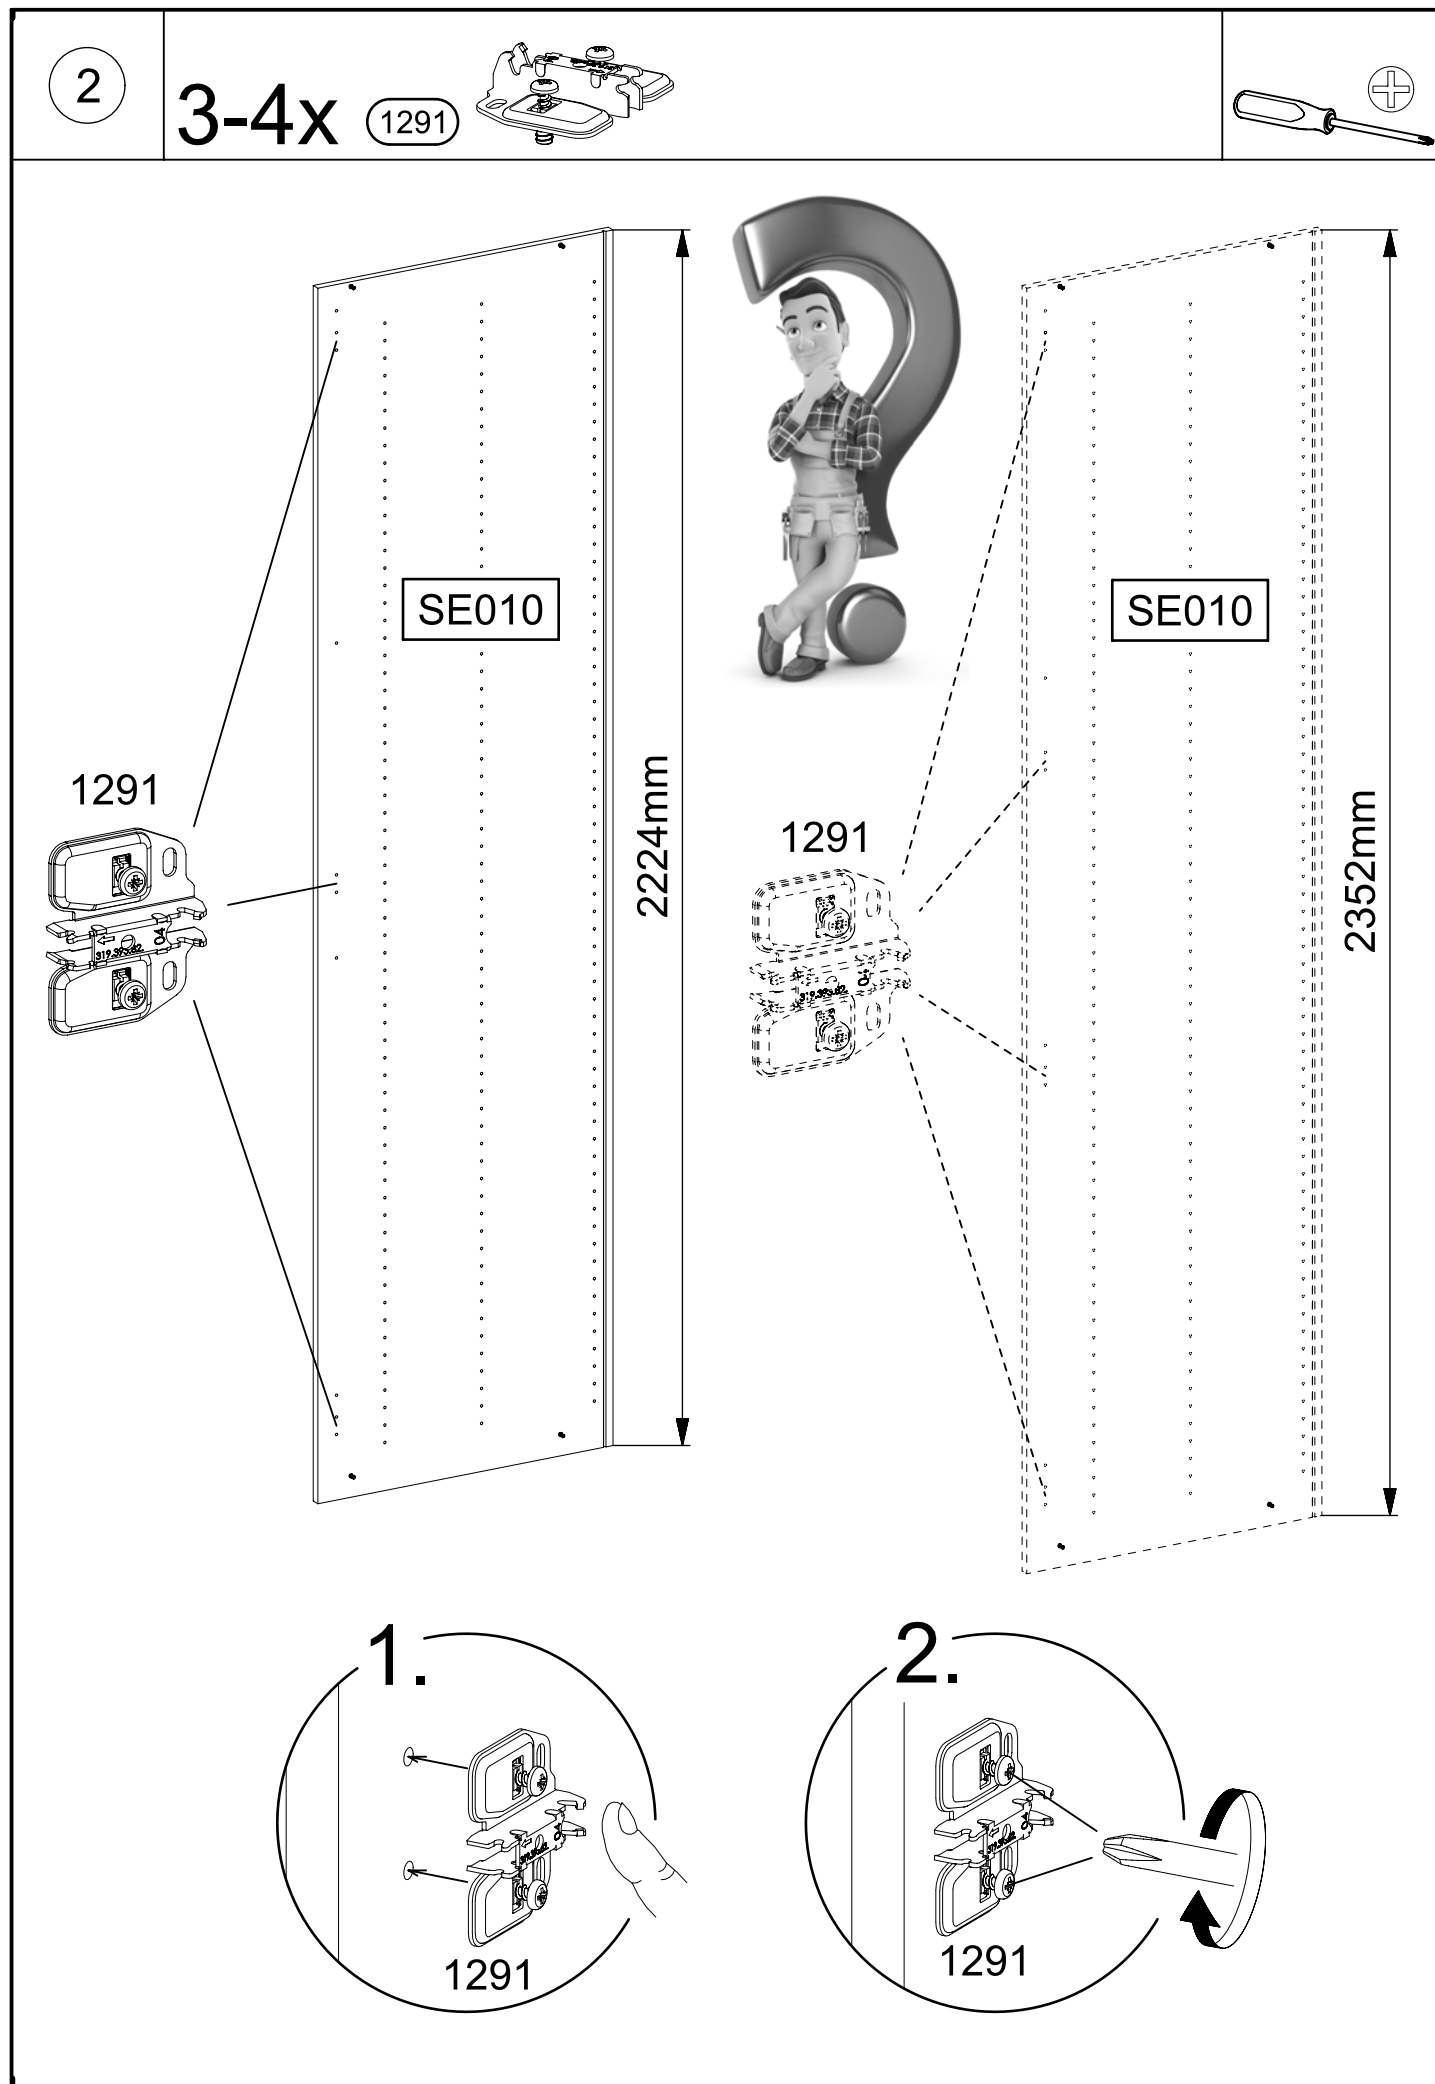




8.


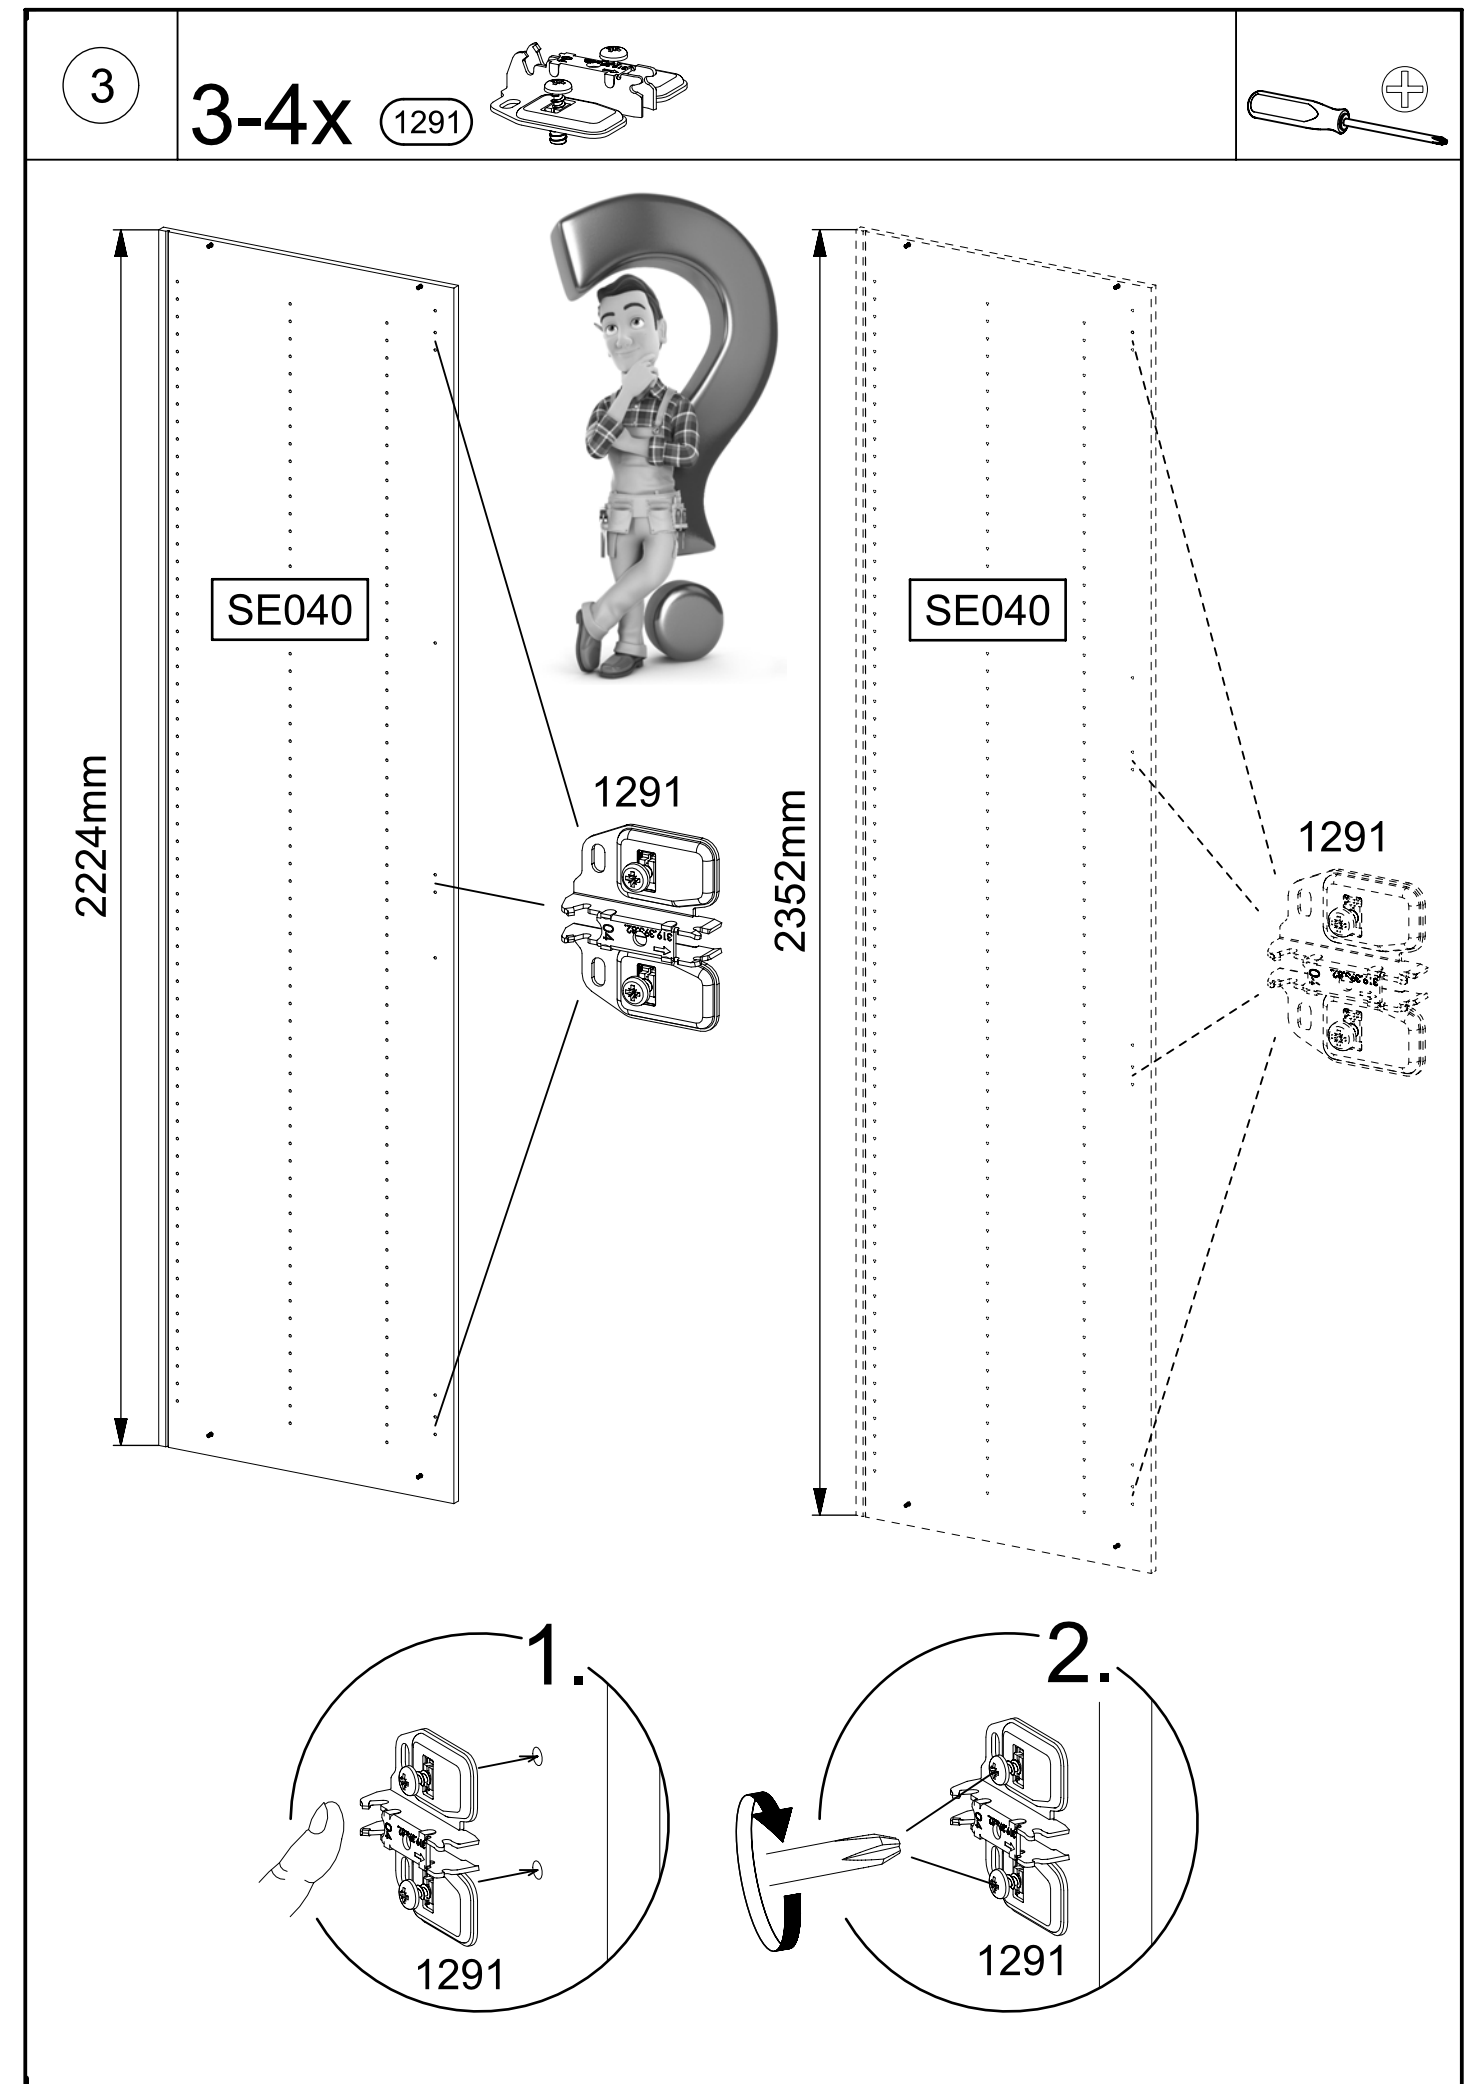


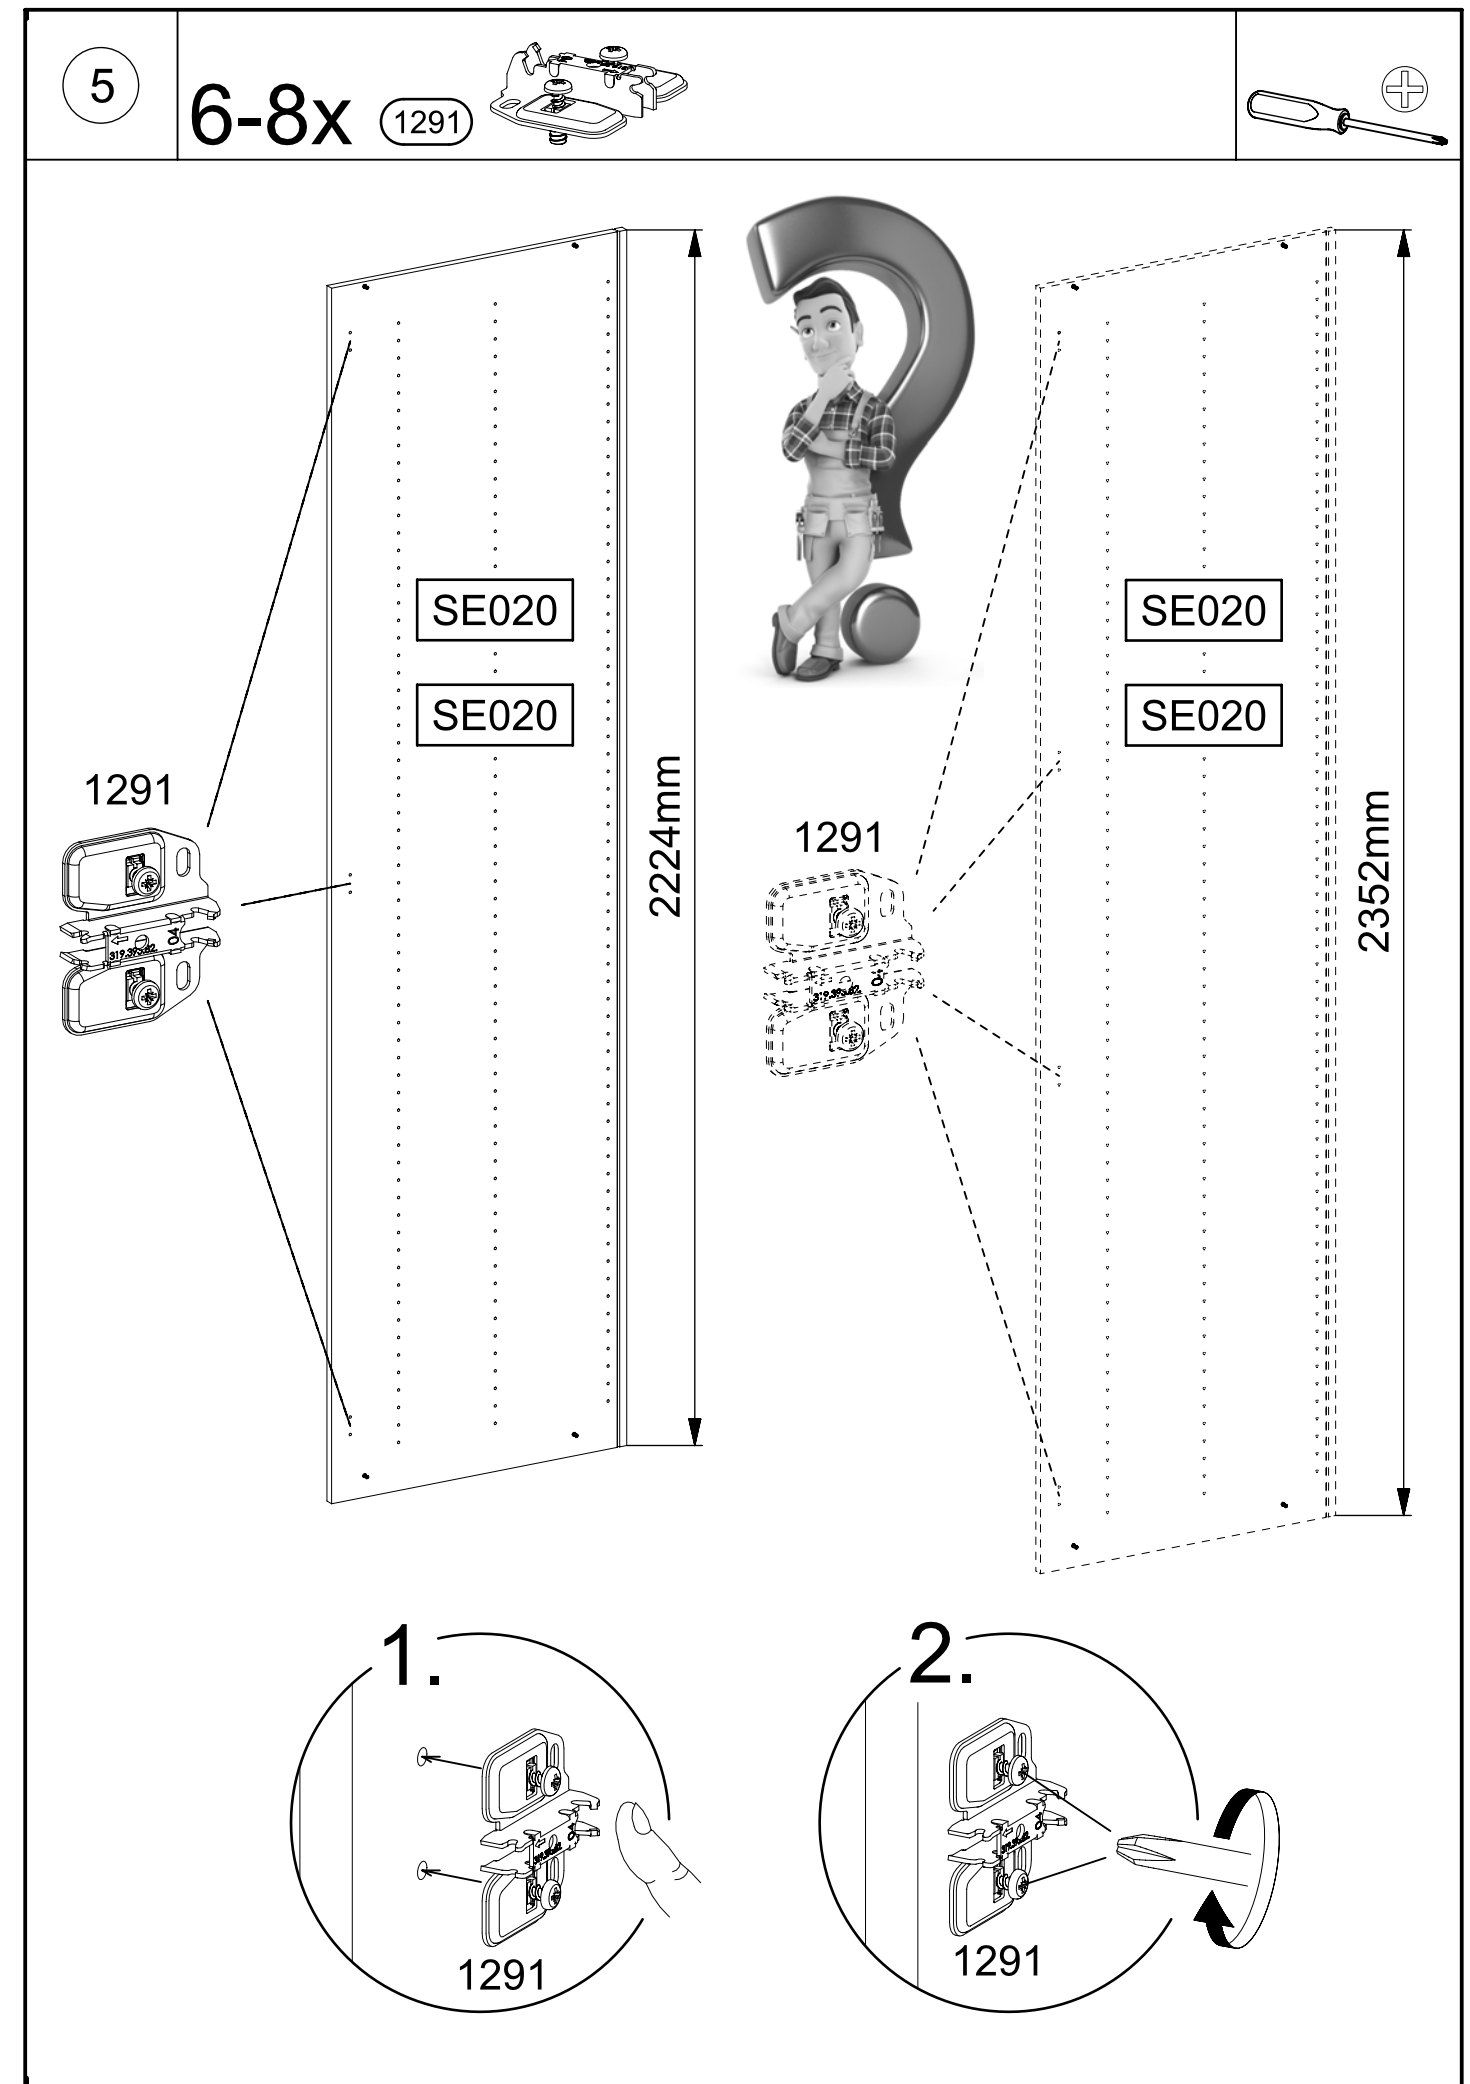
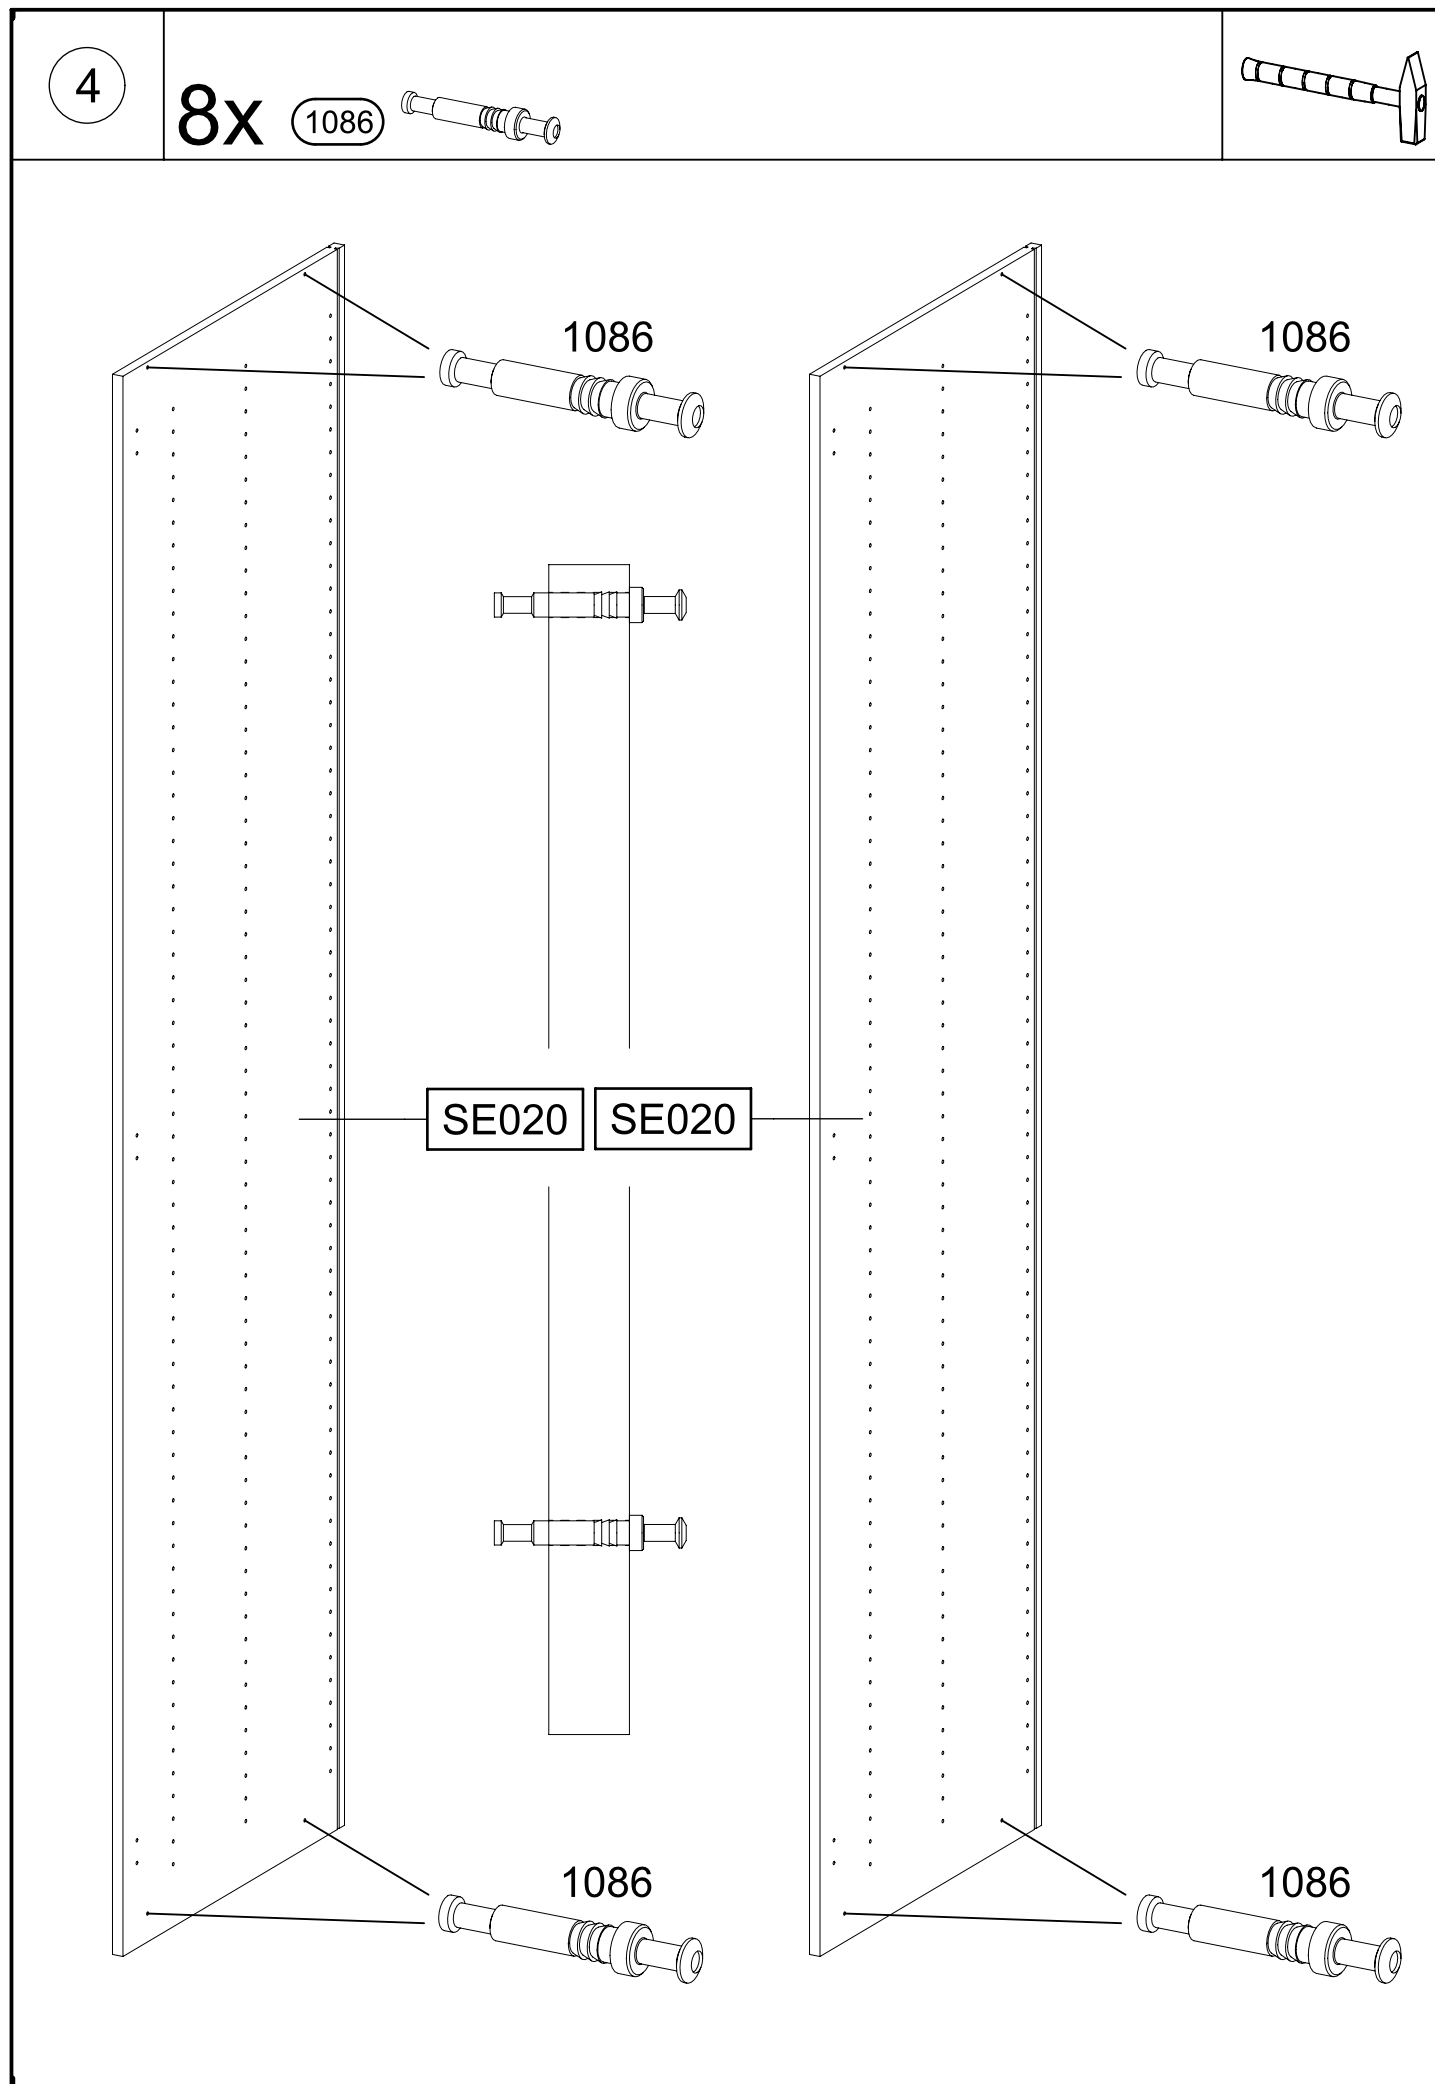


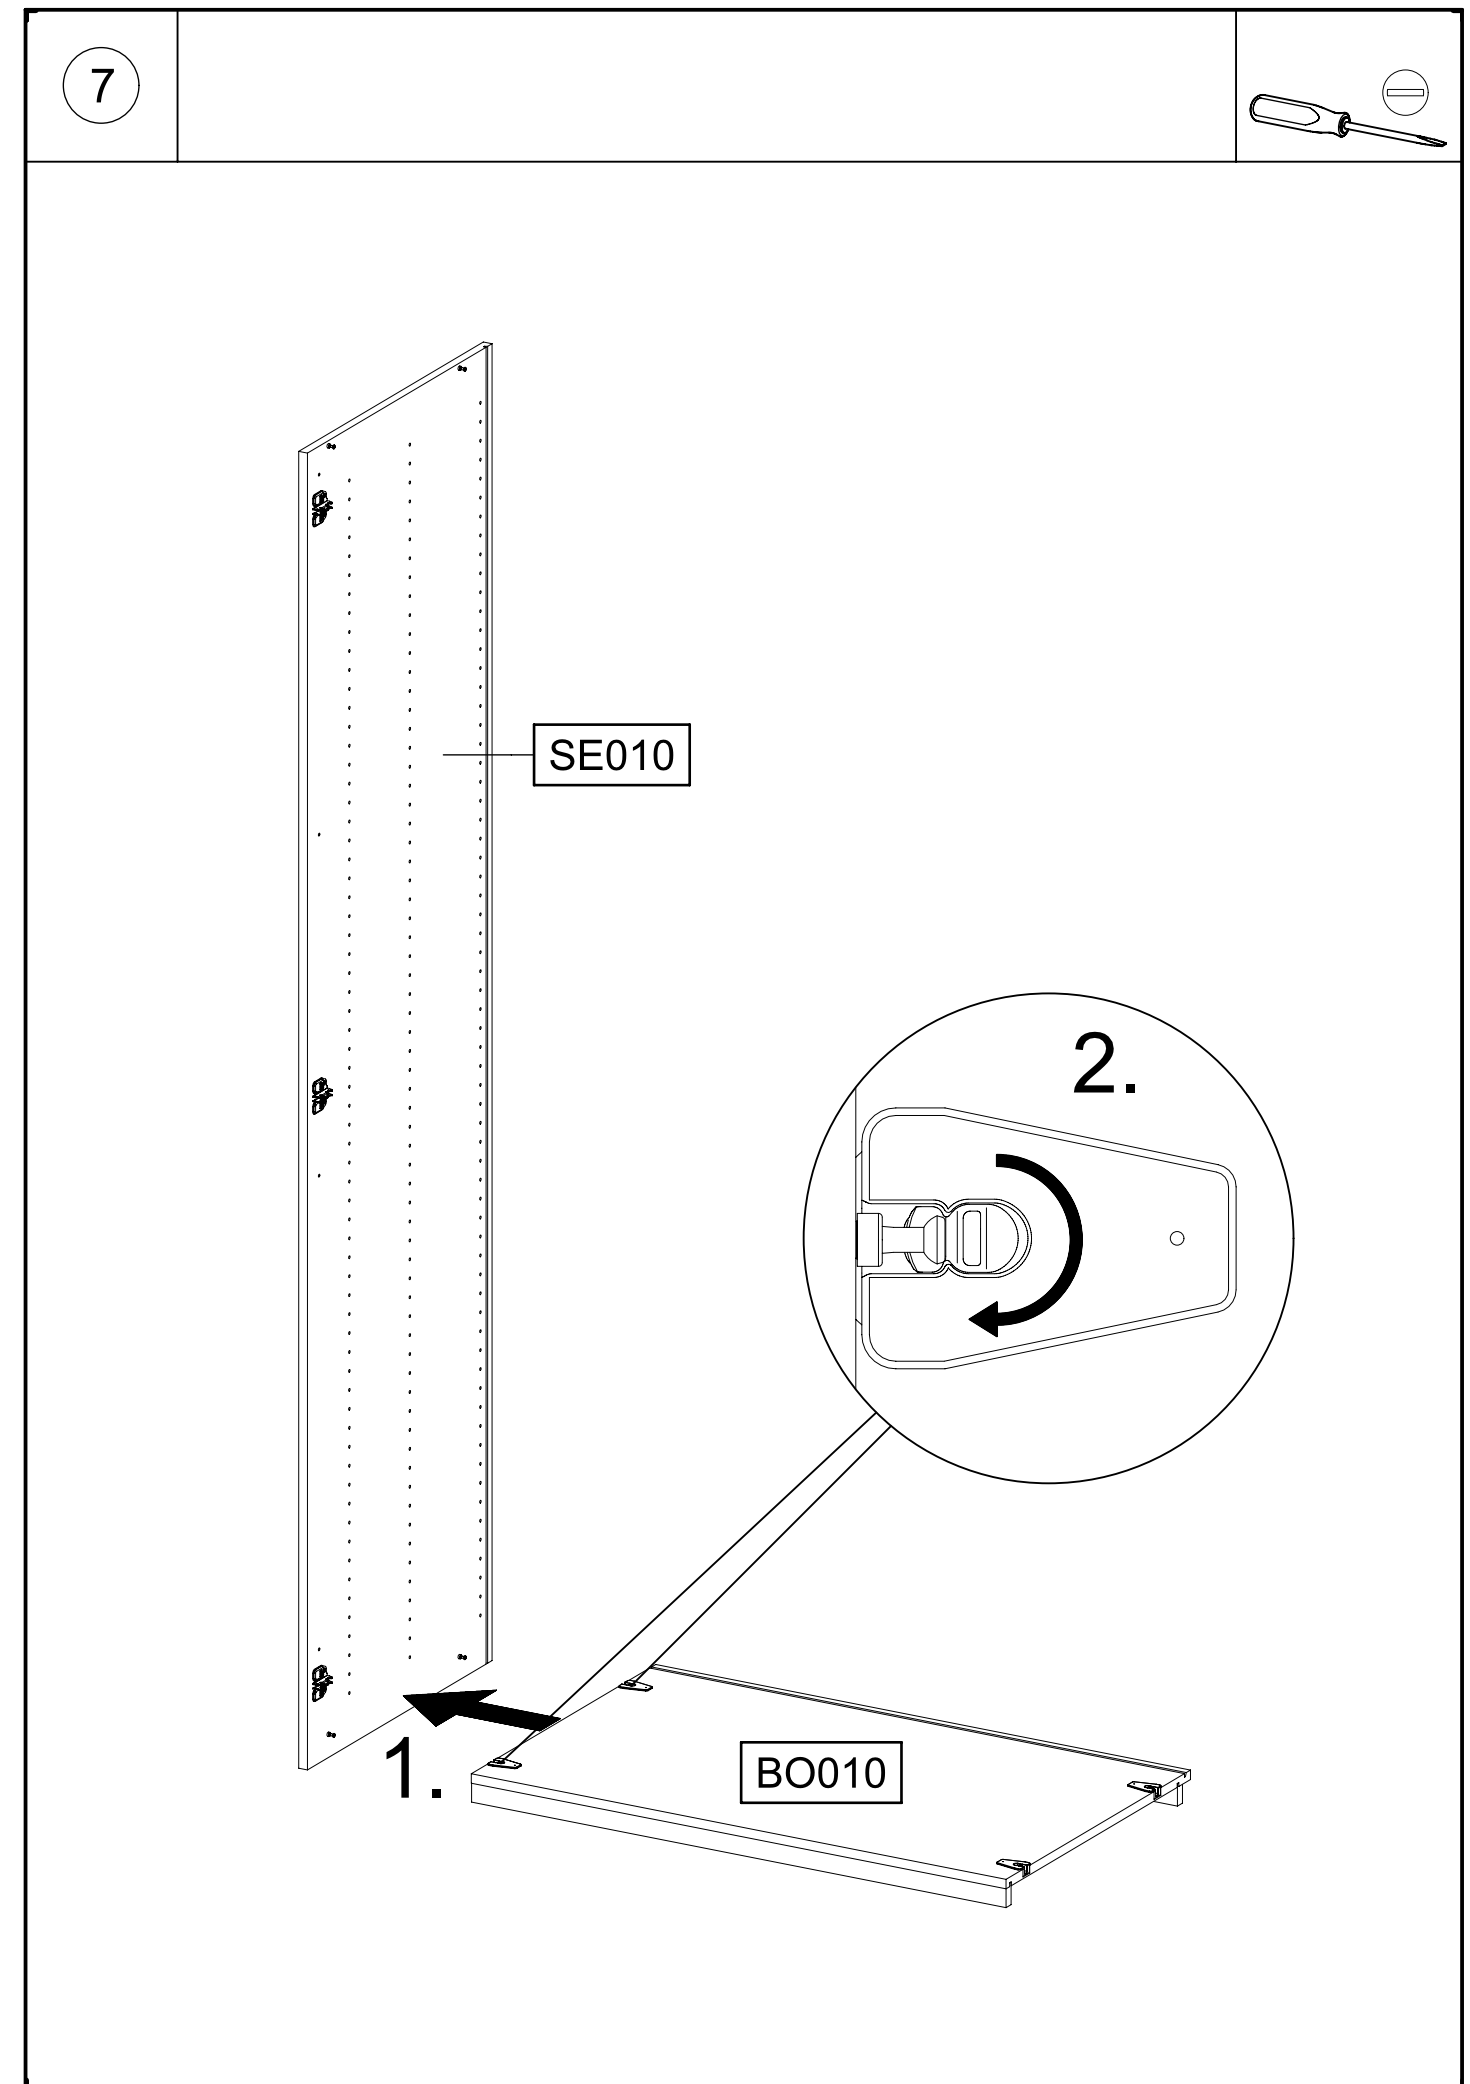
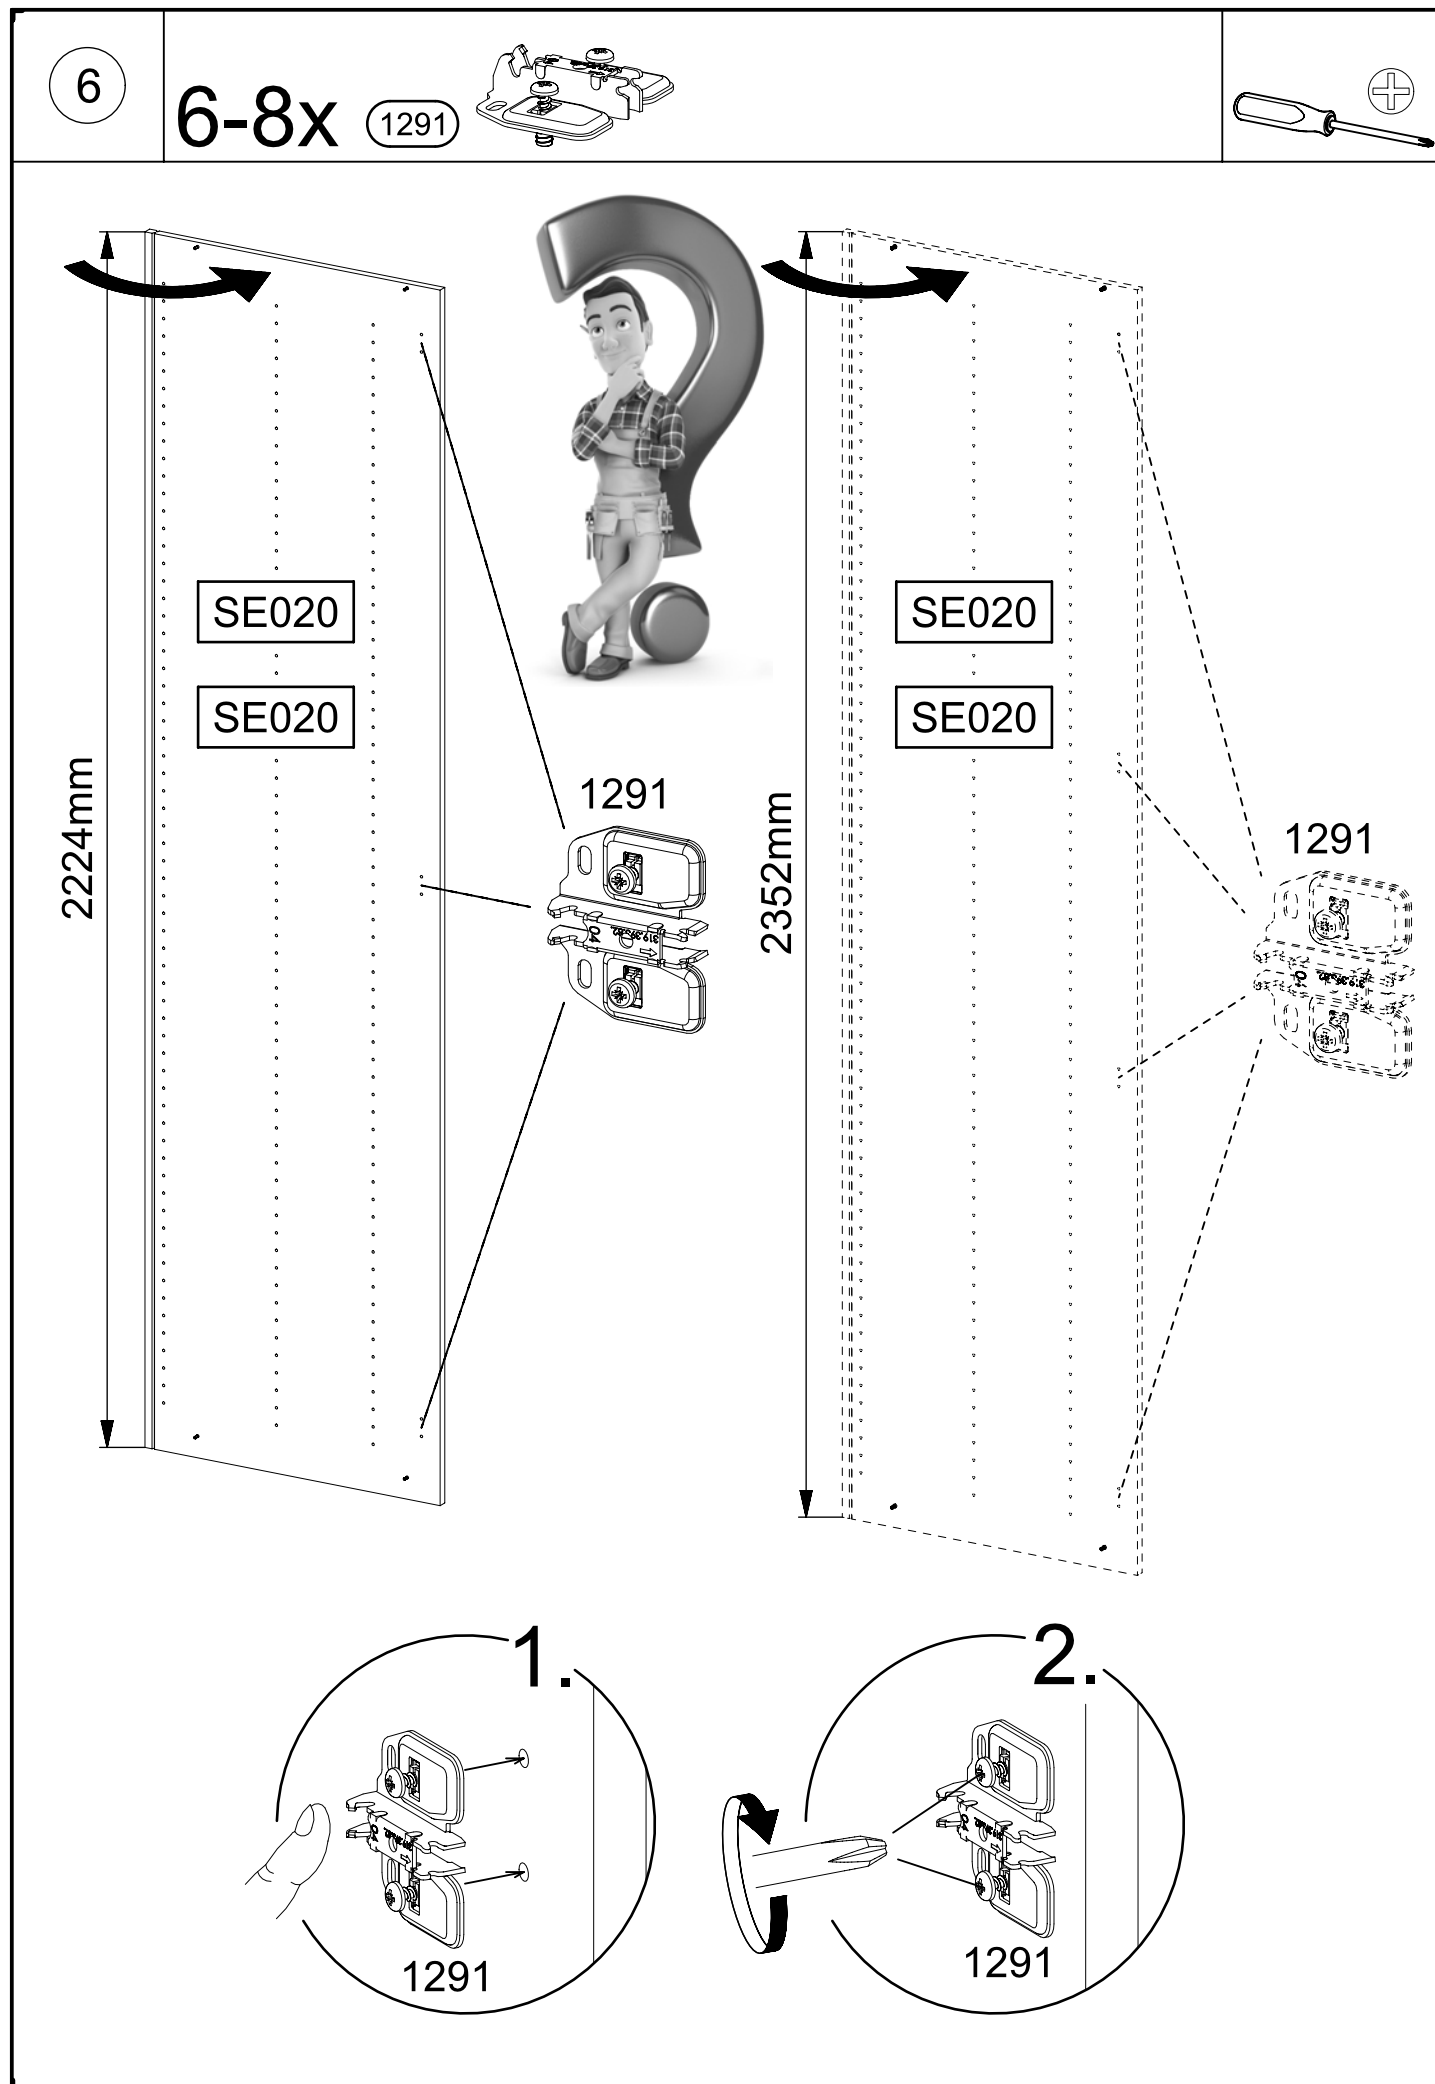


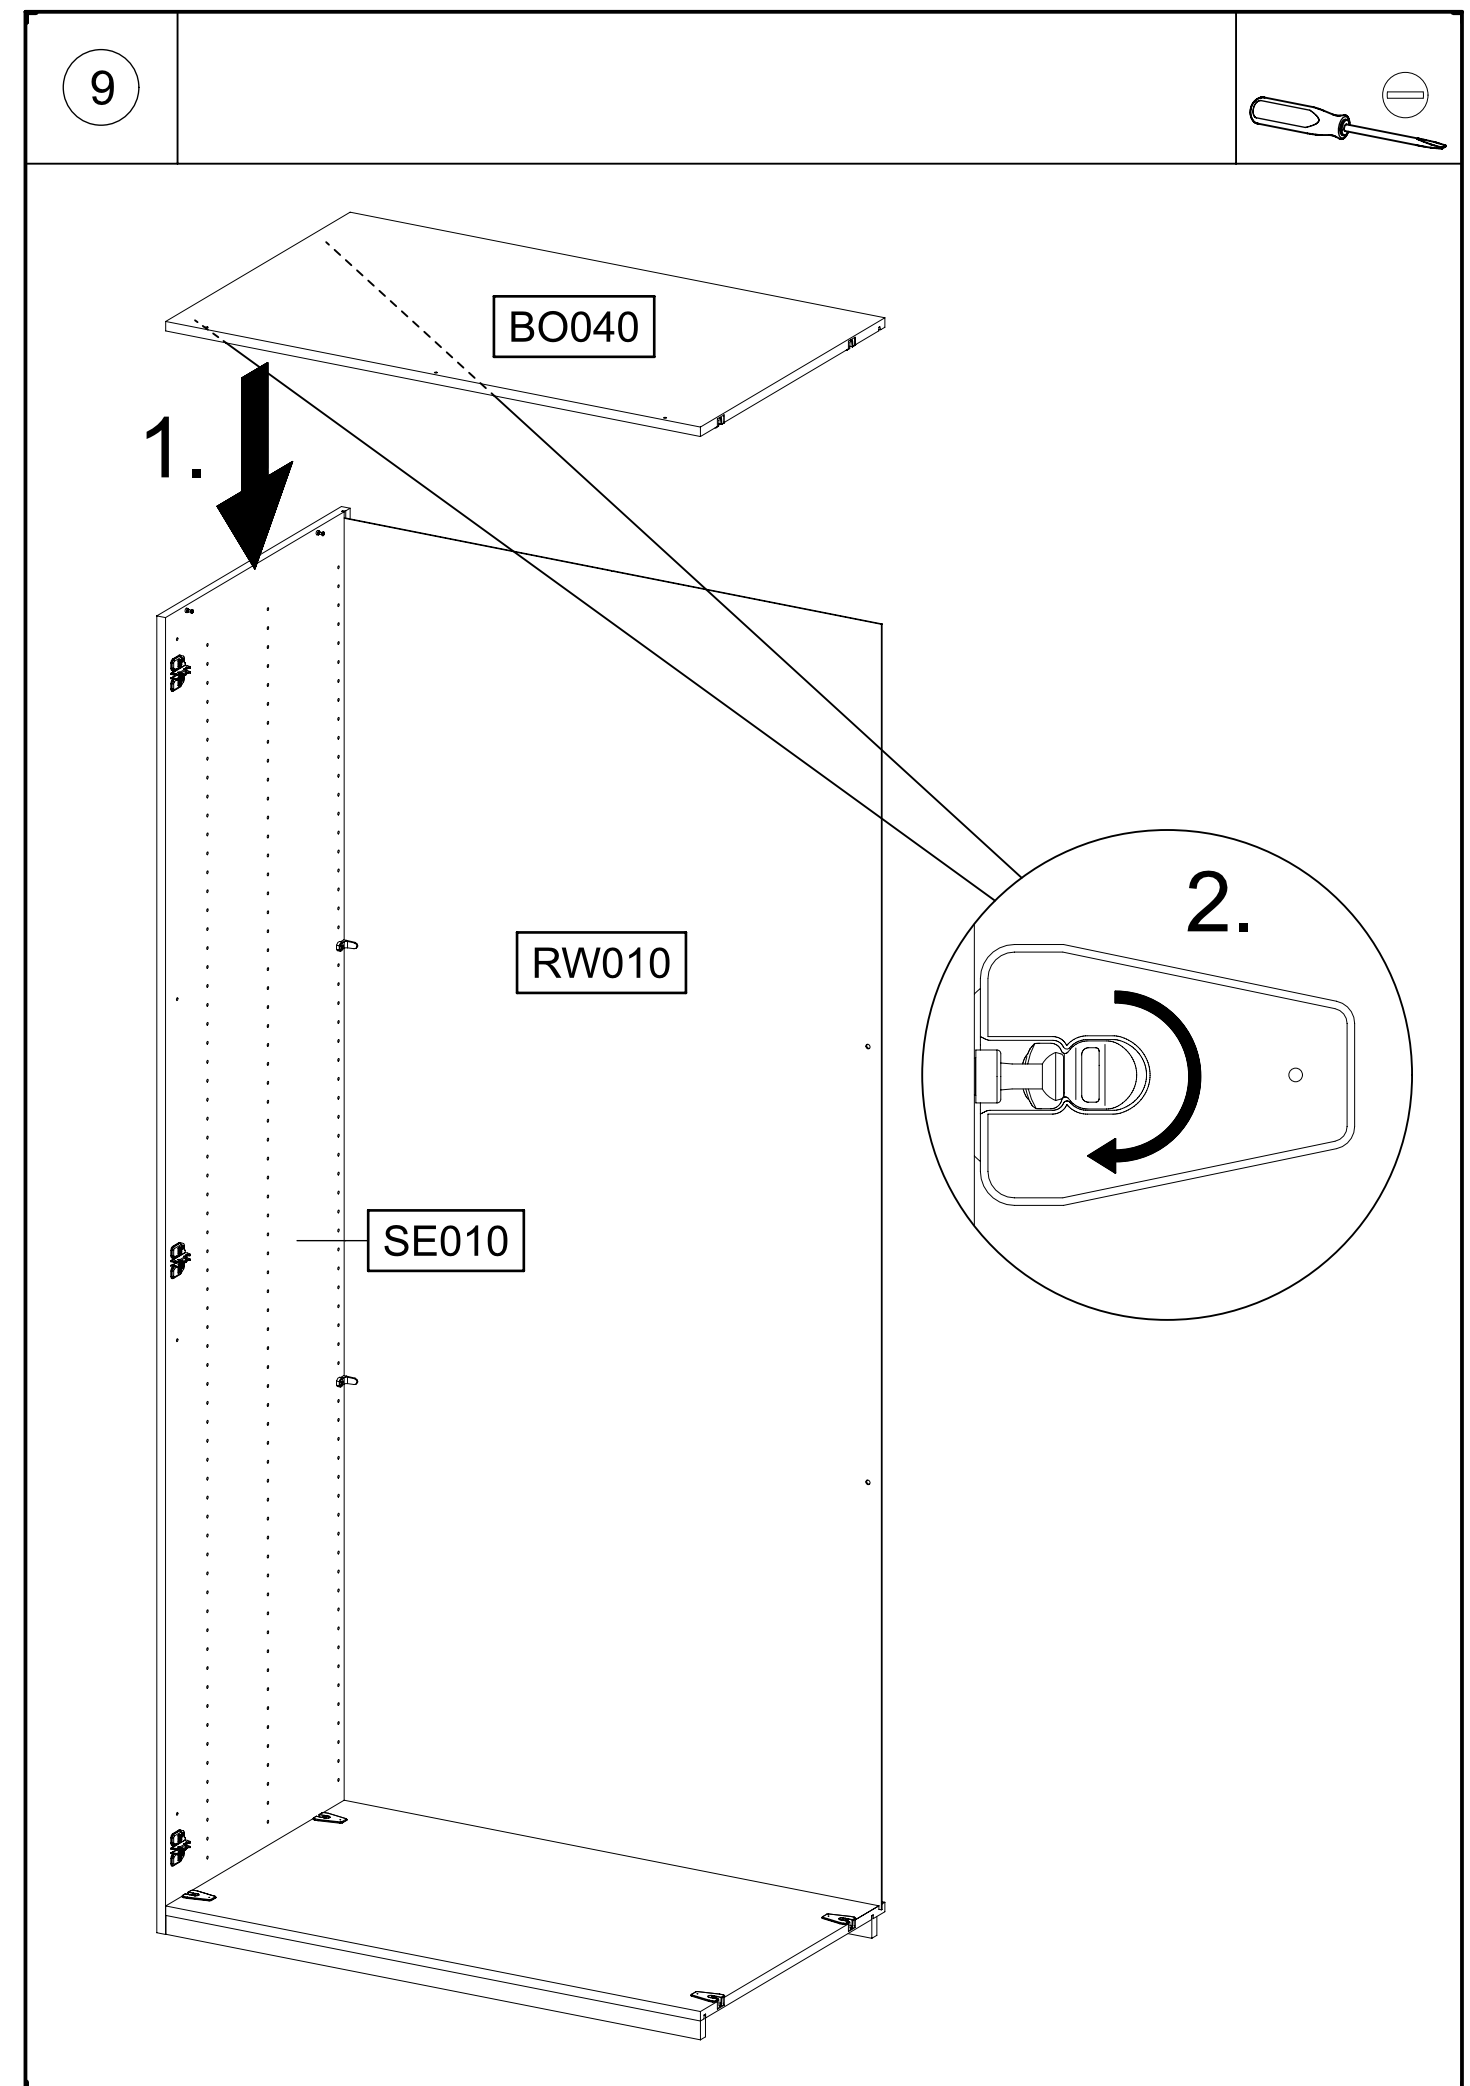
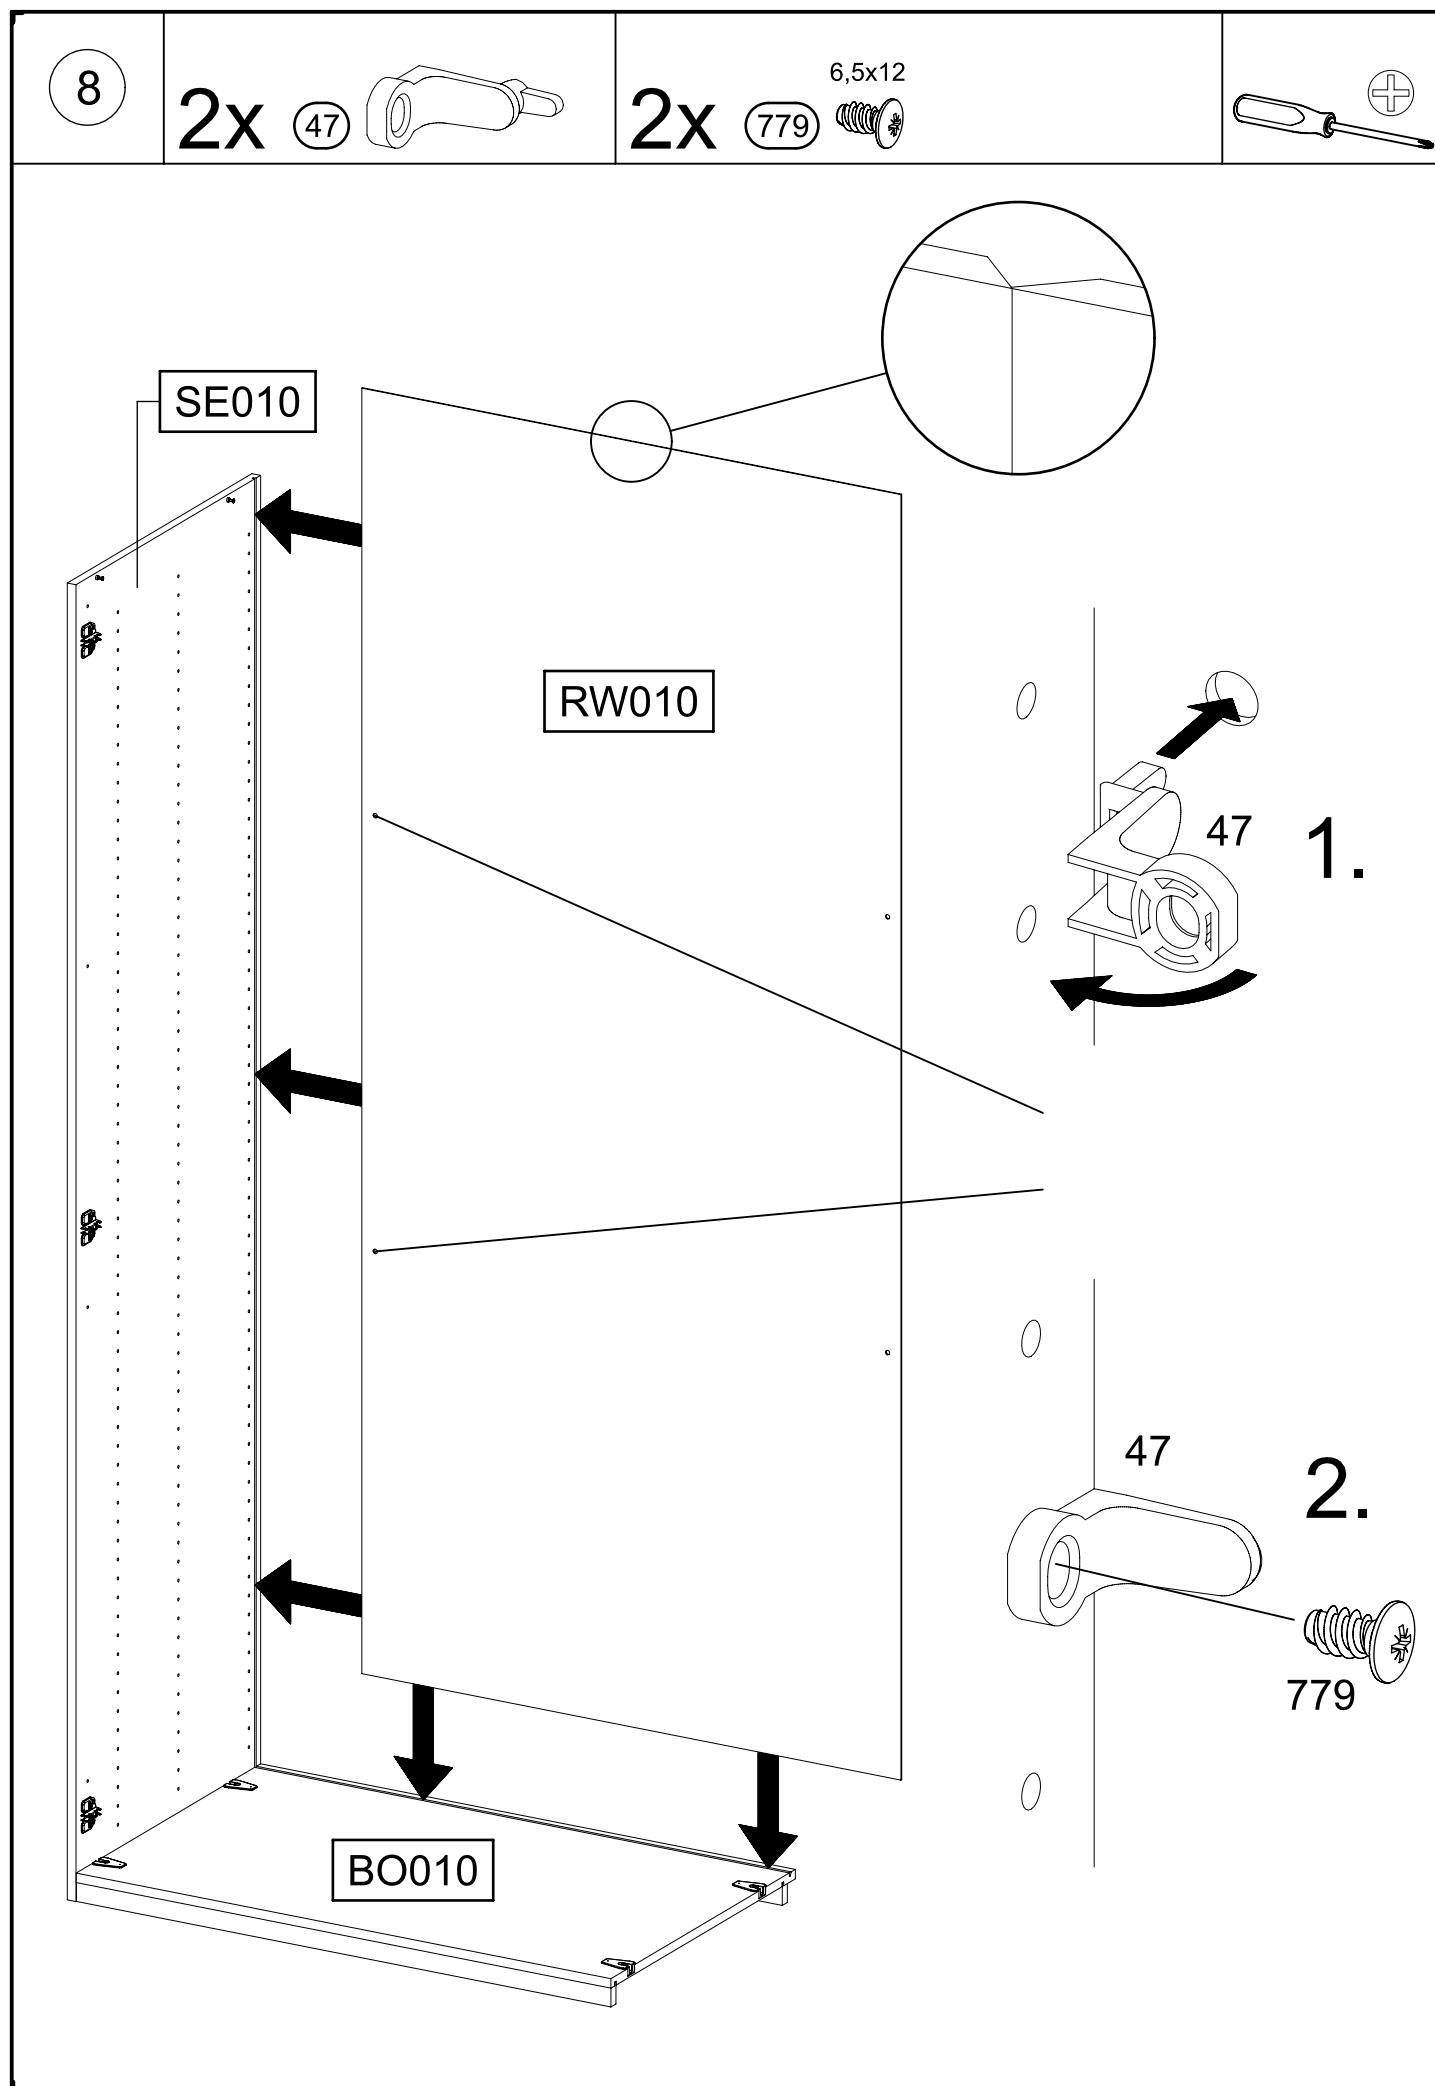


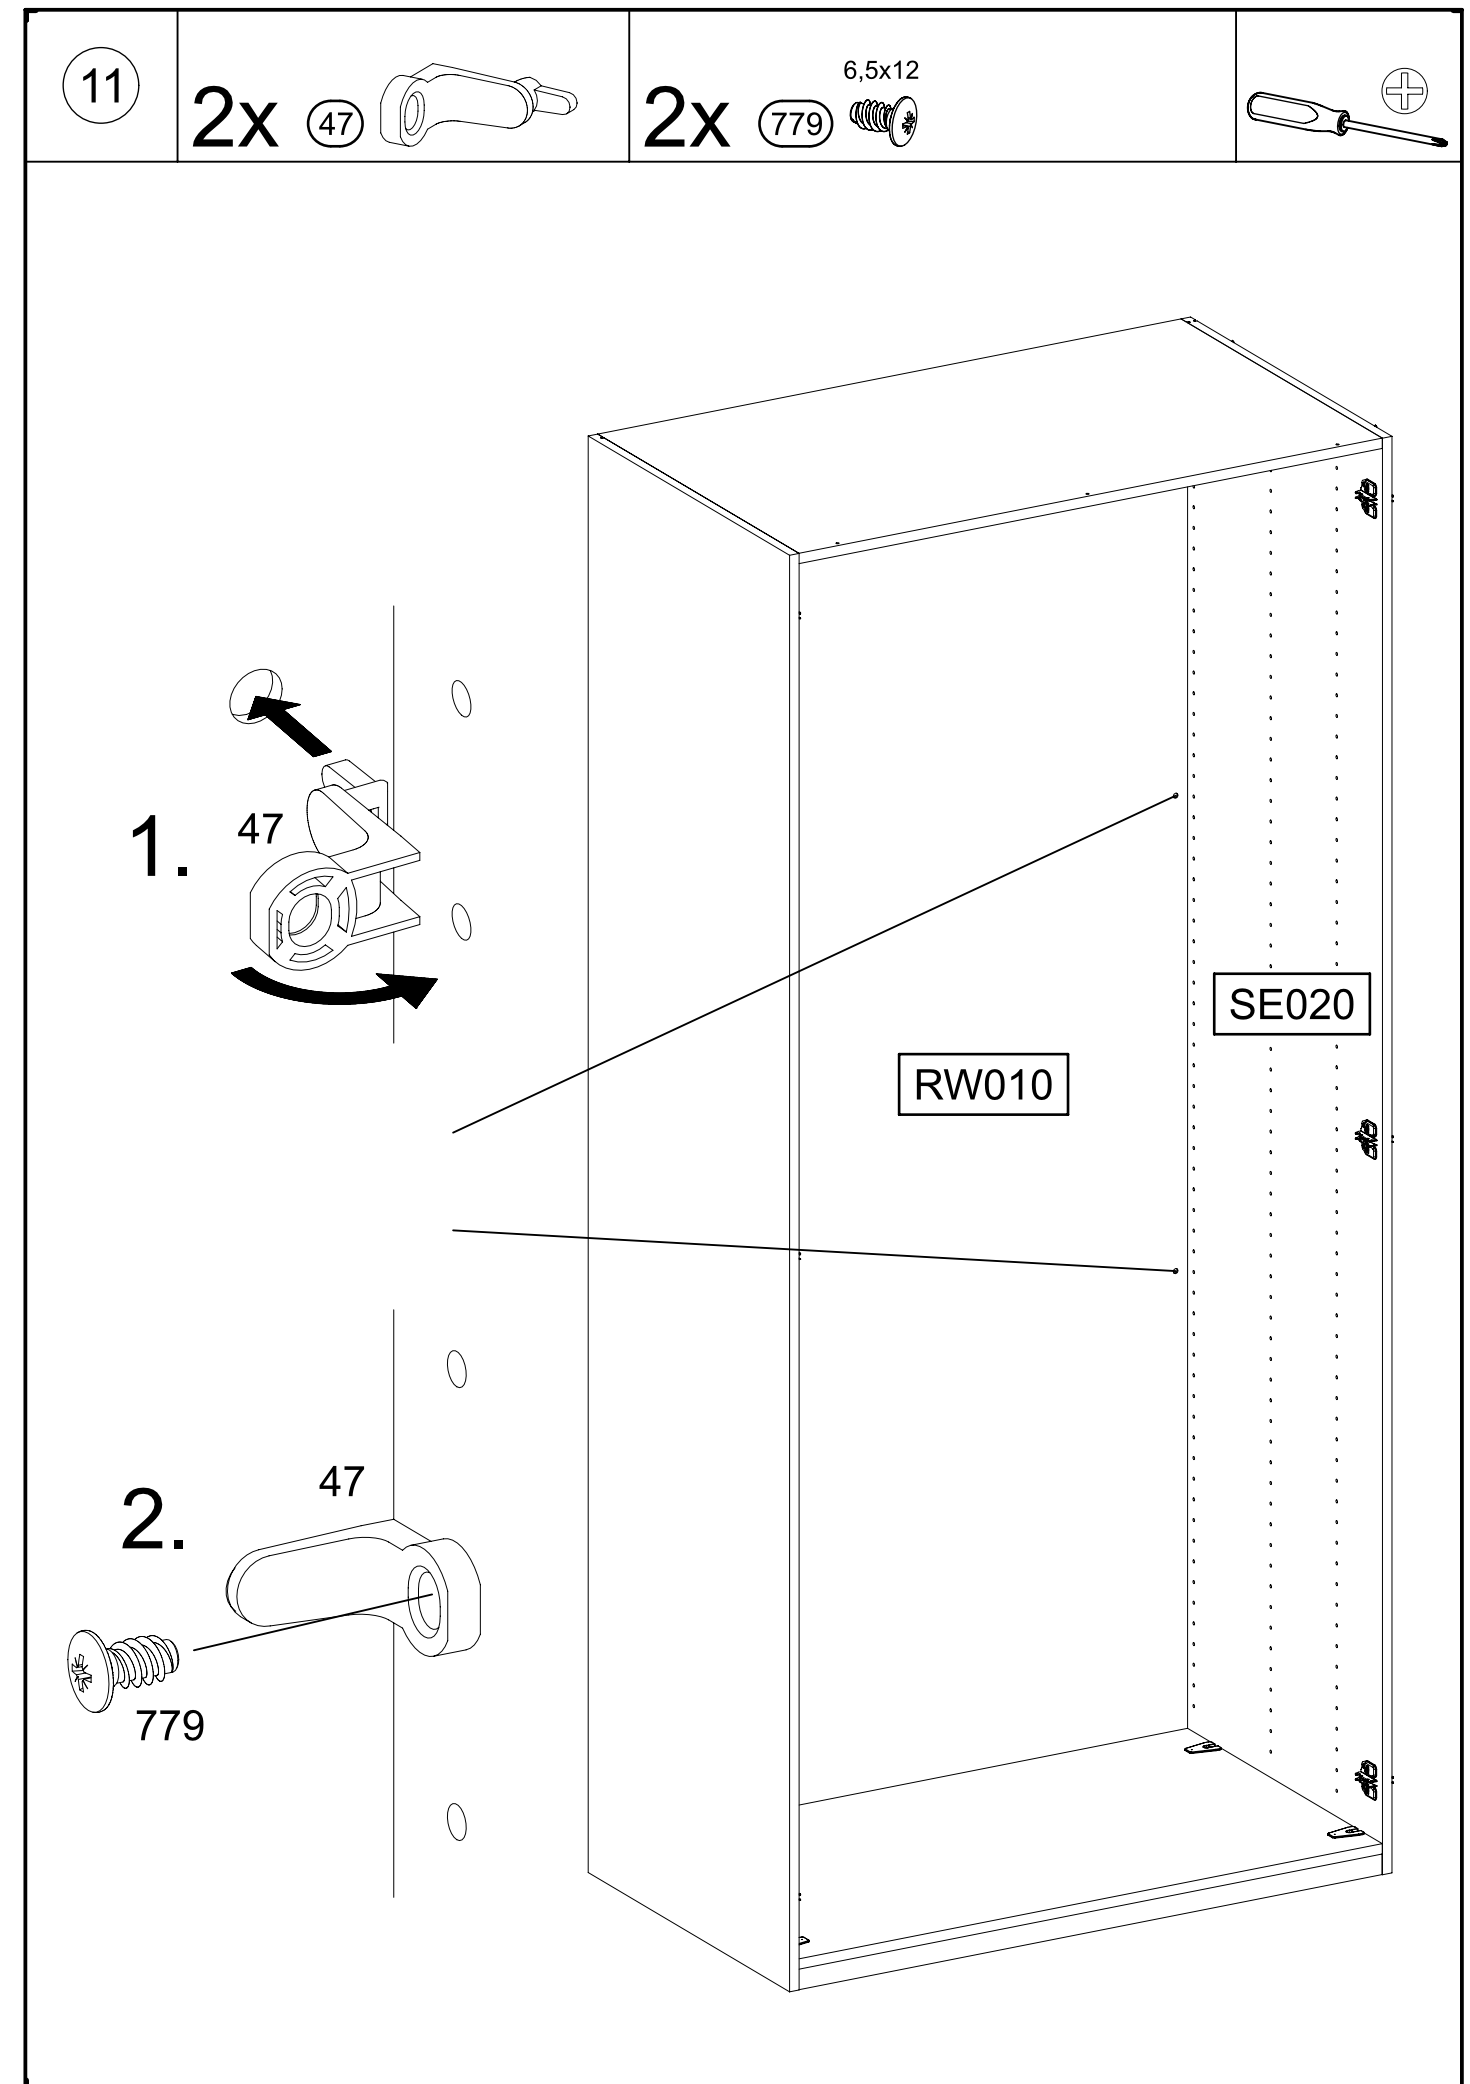
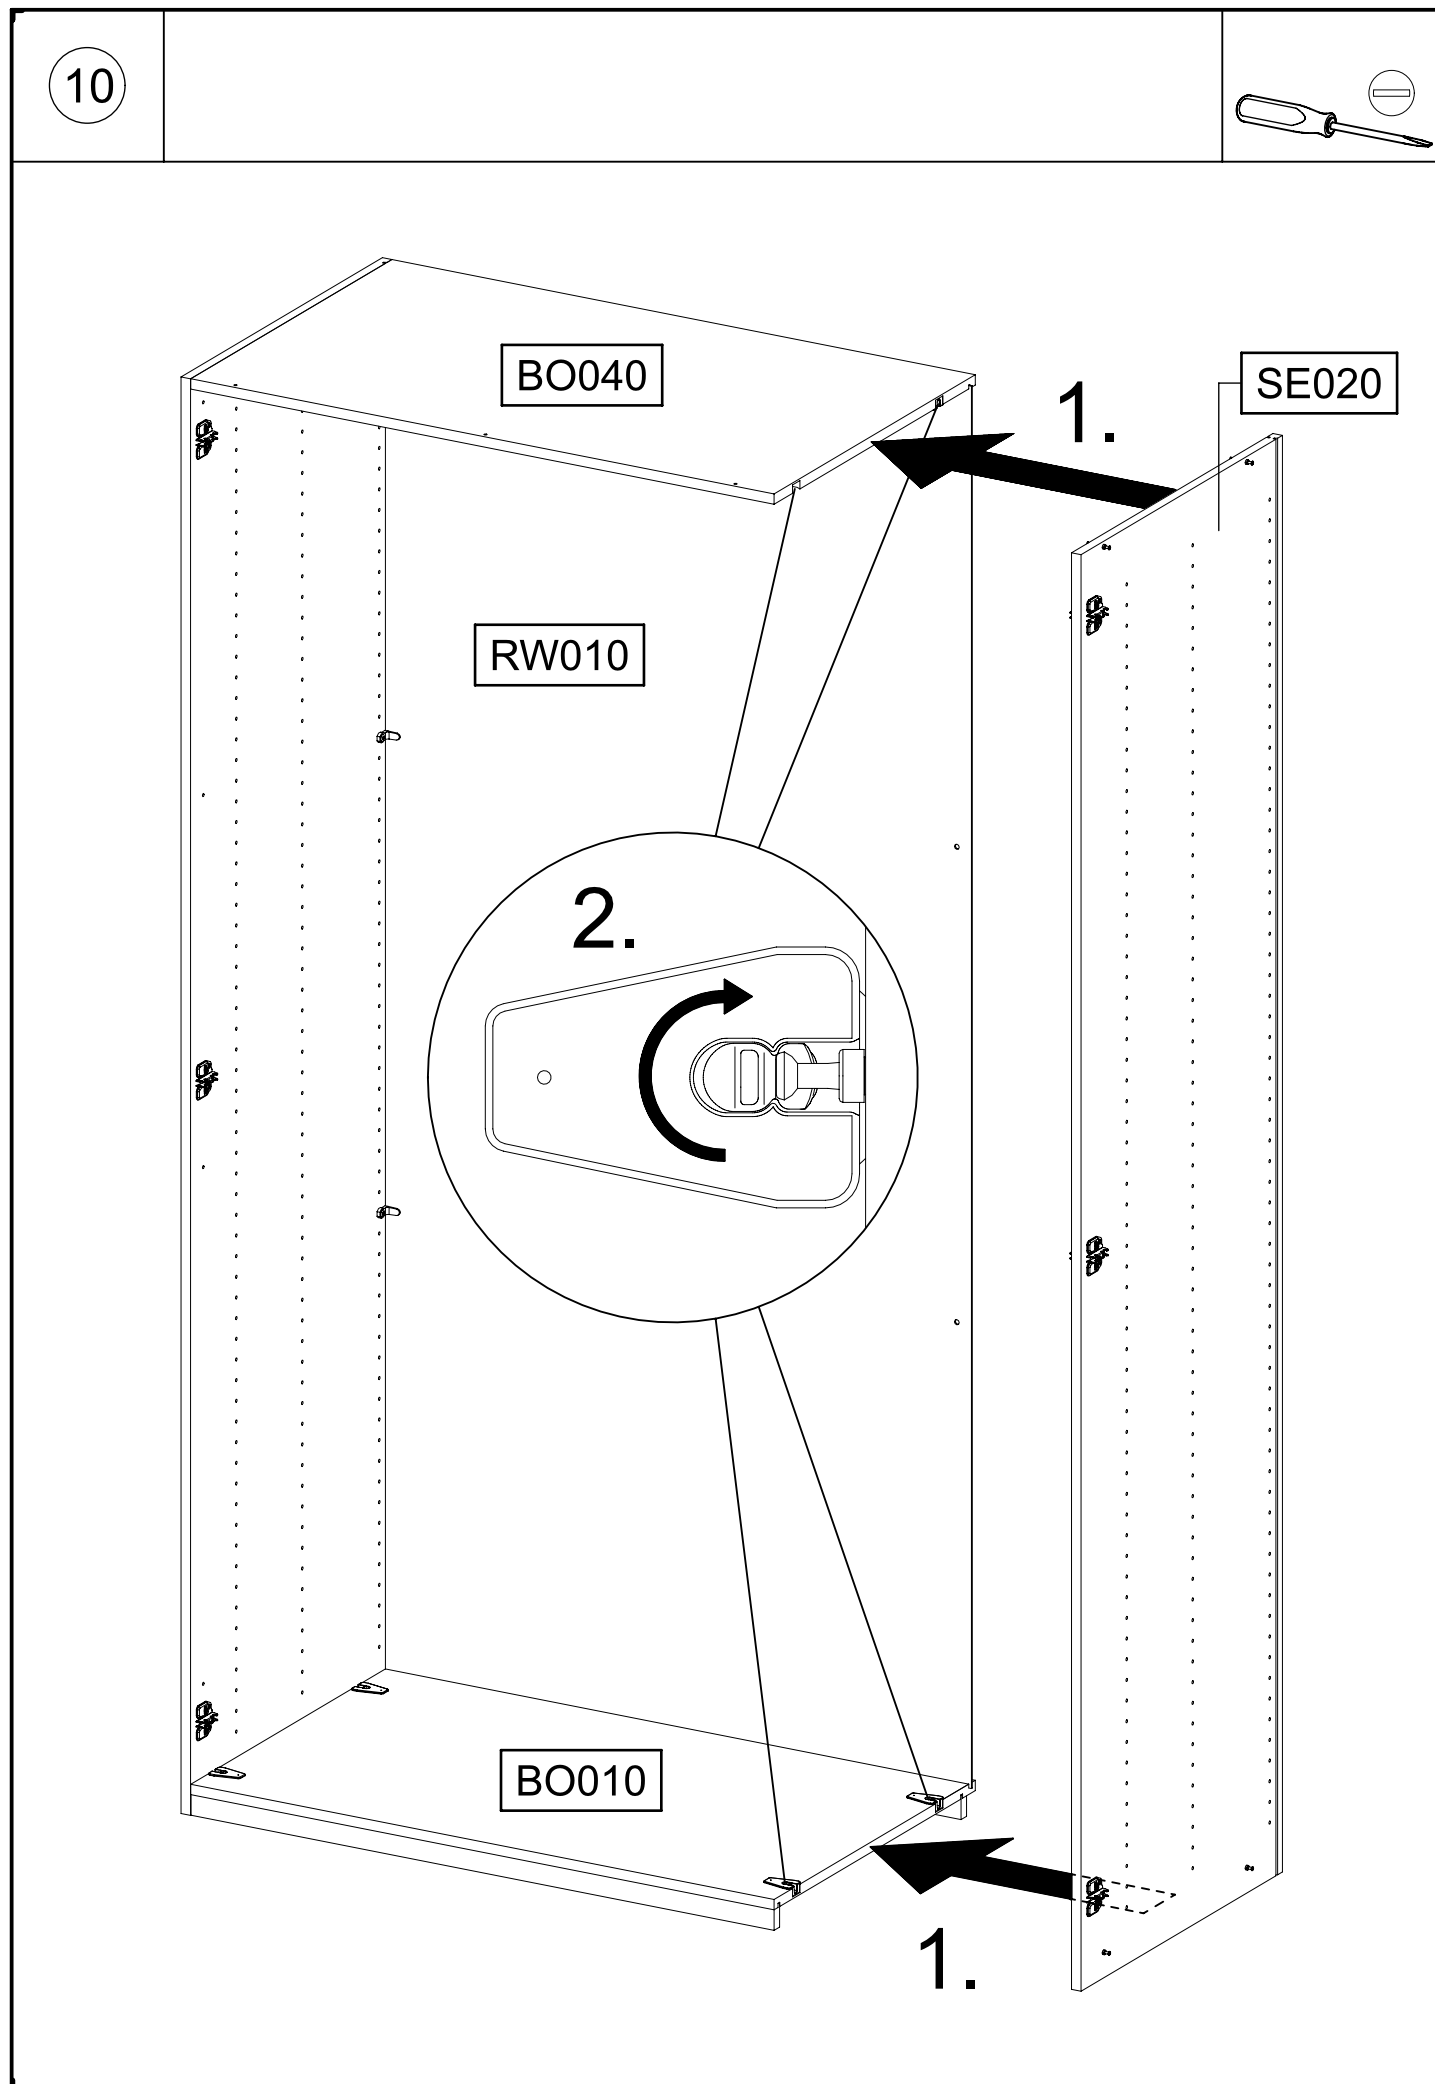


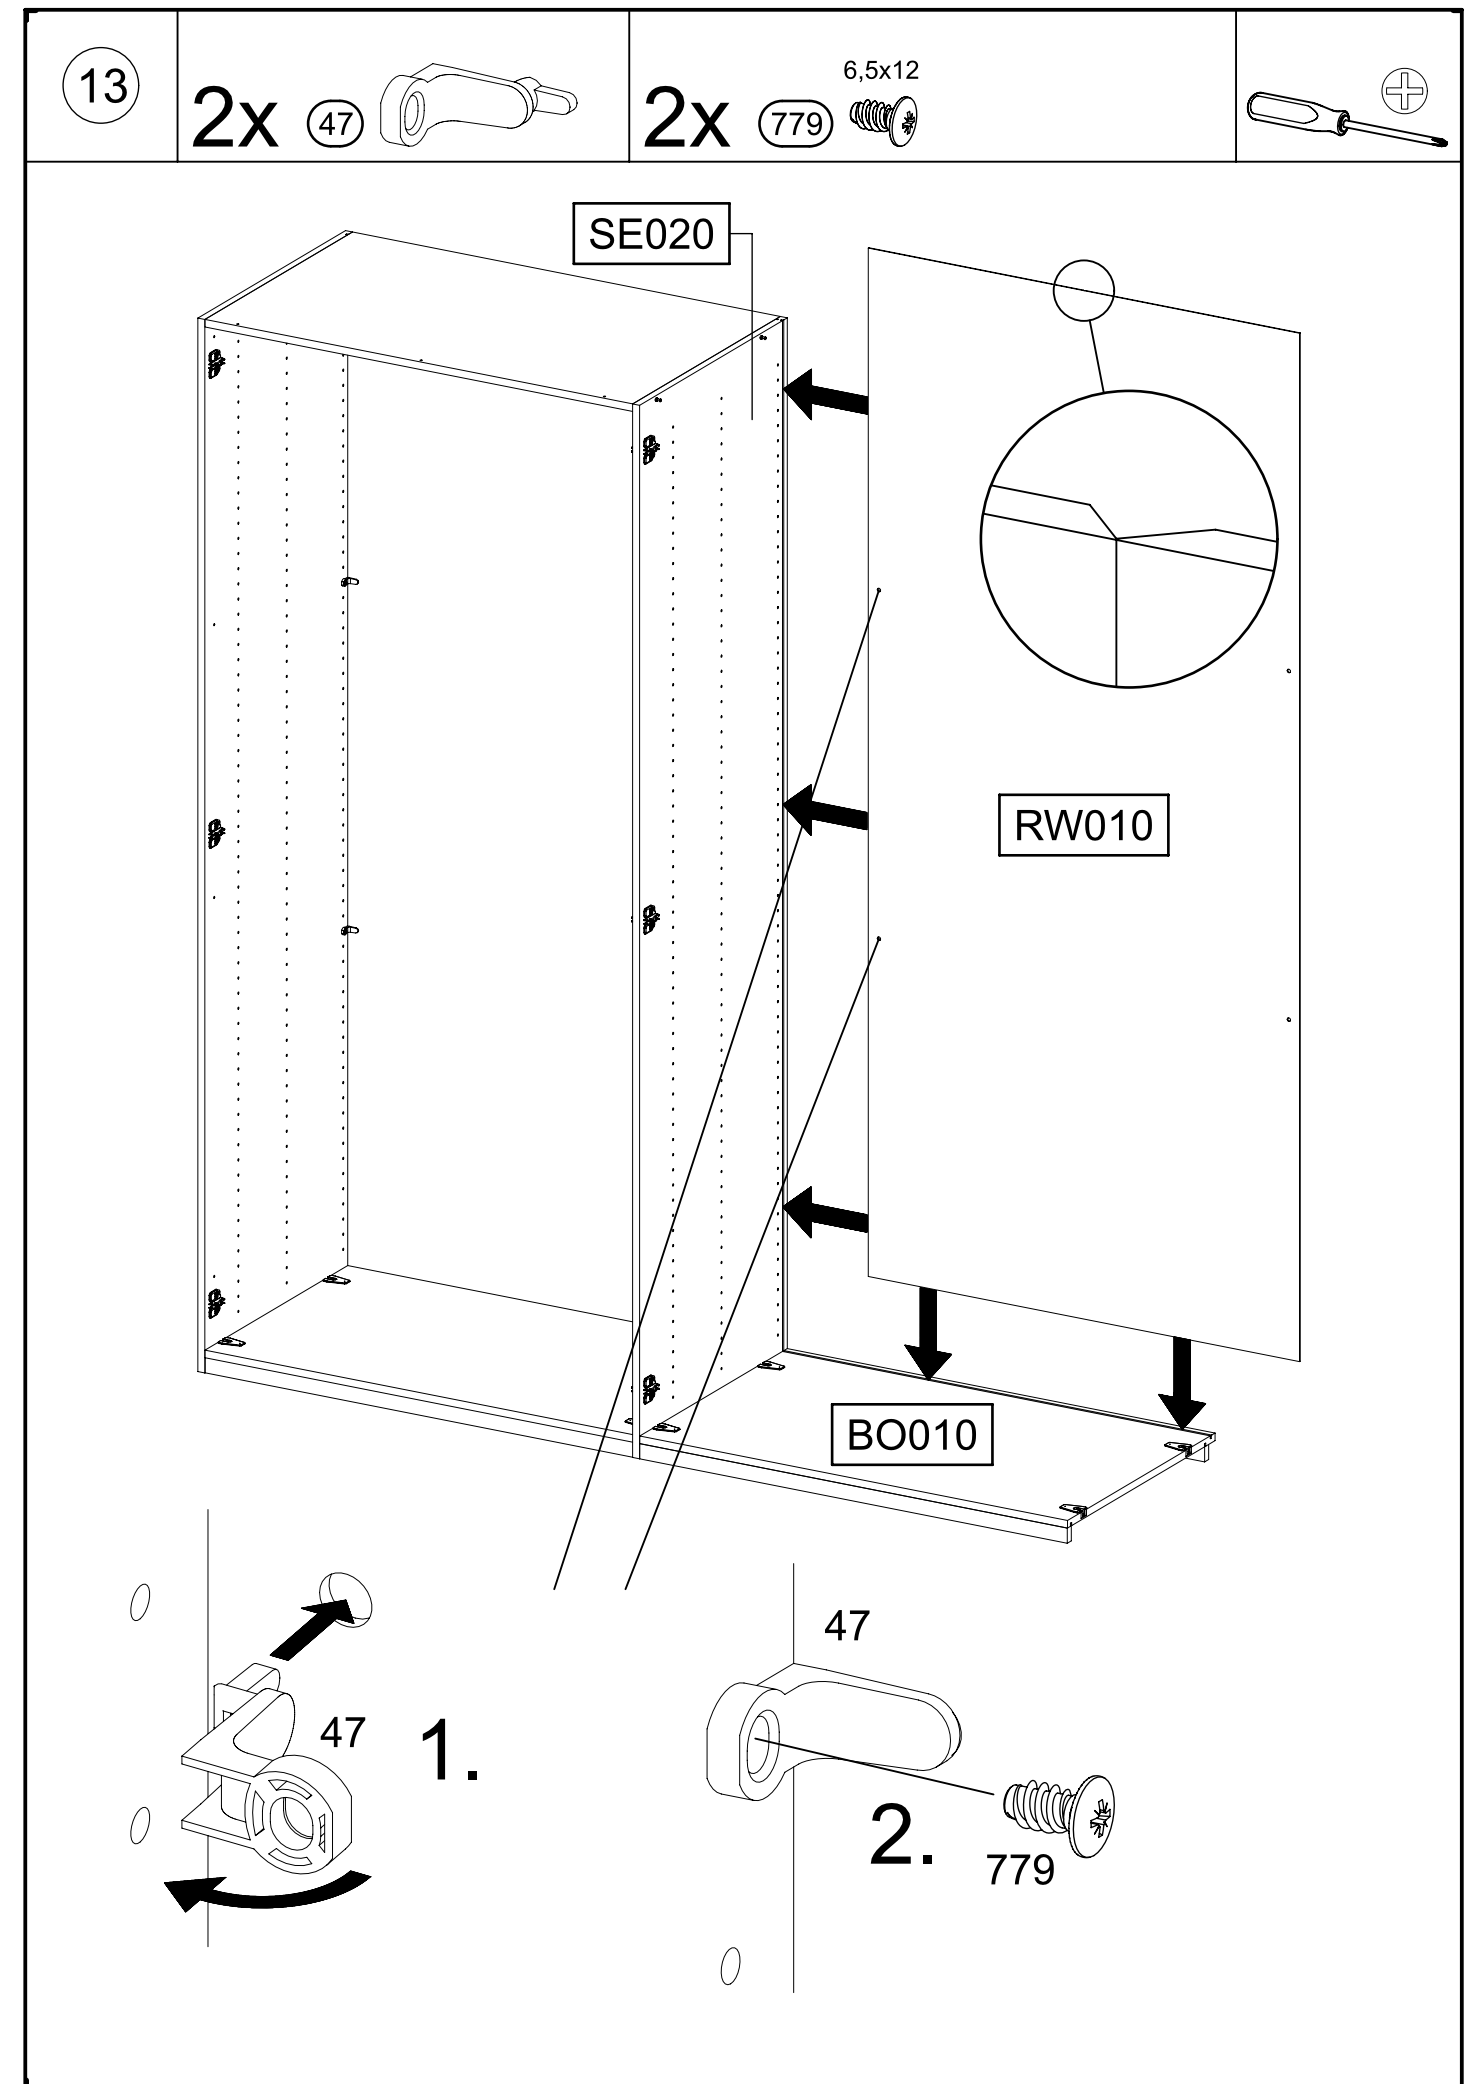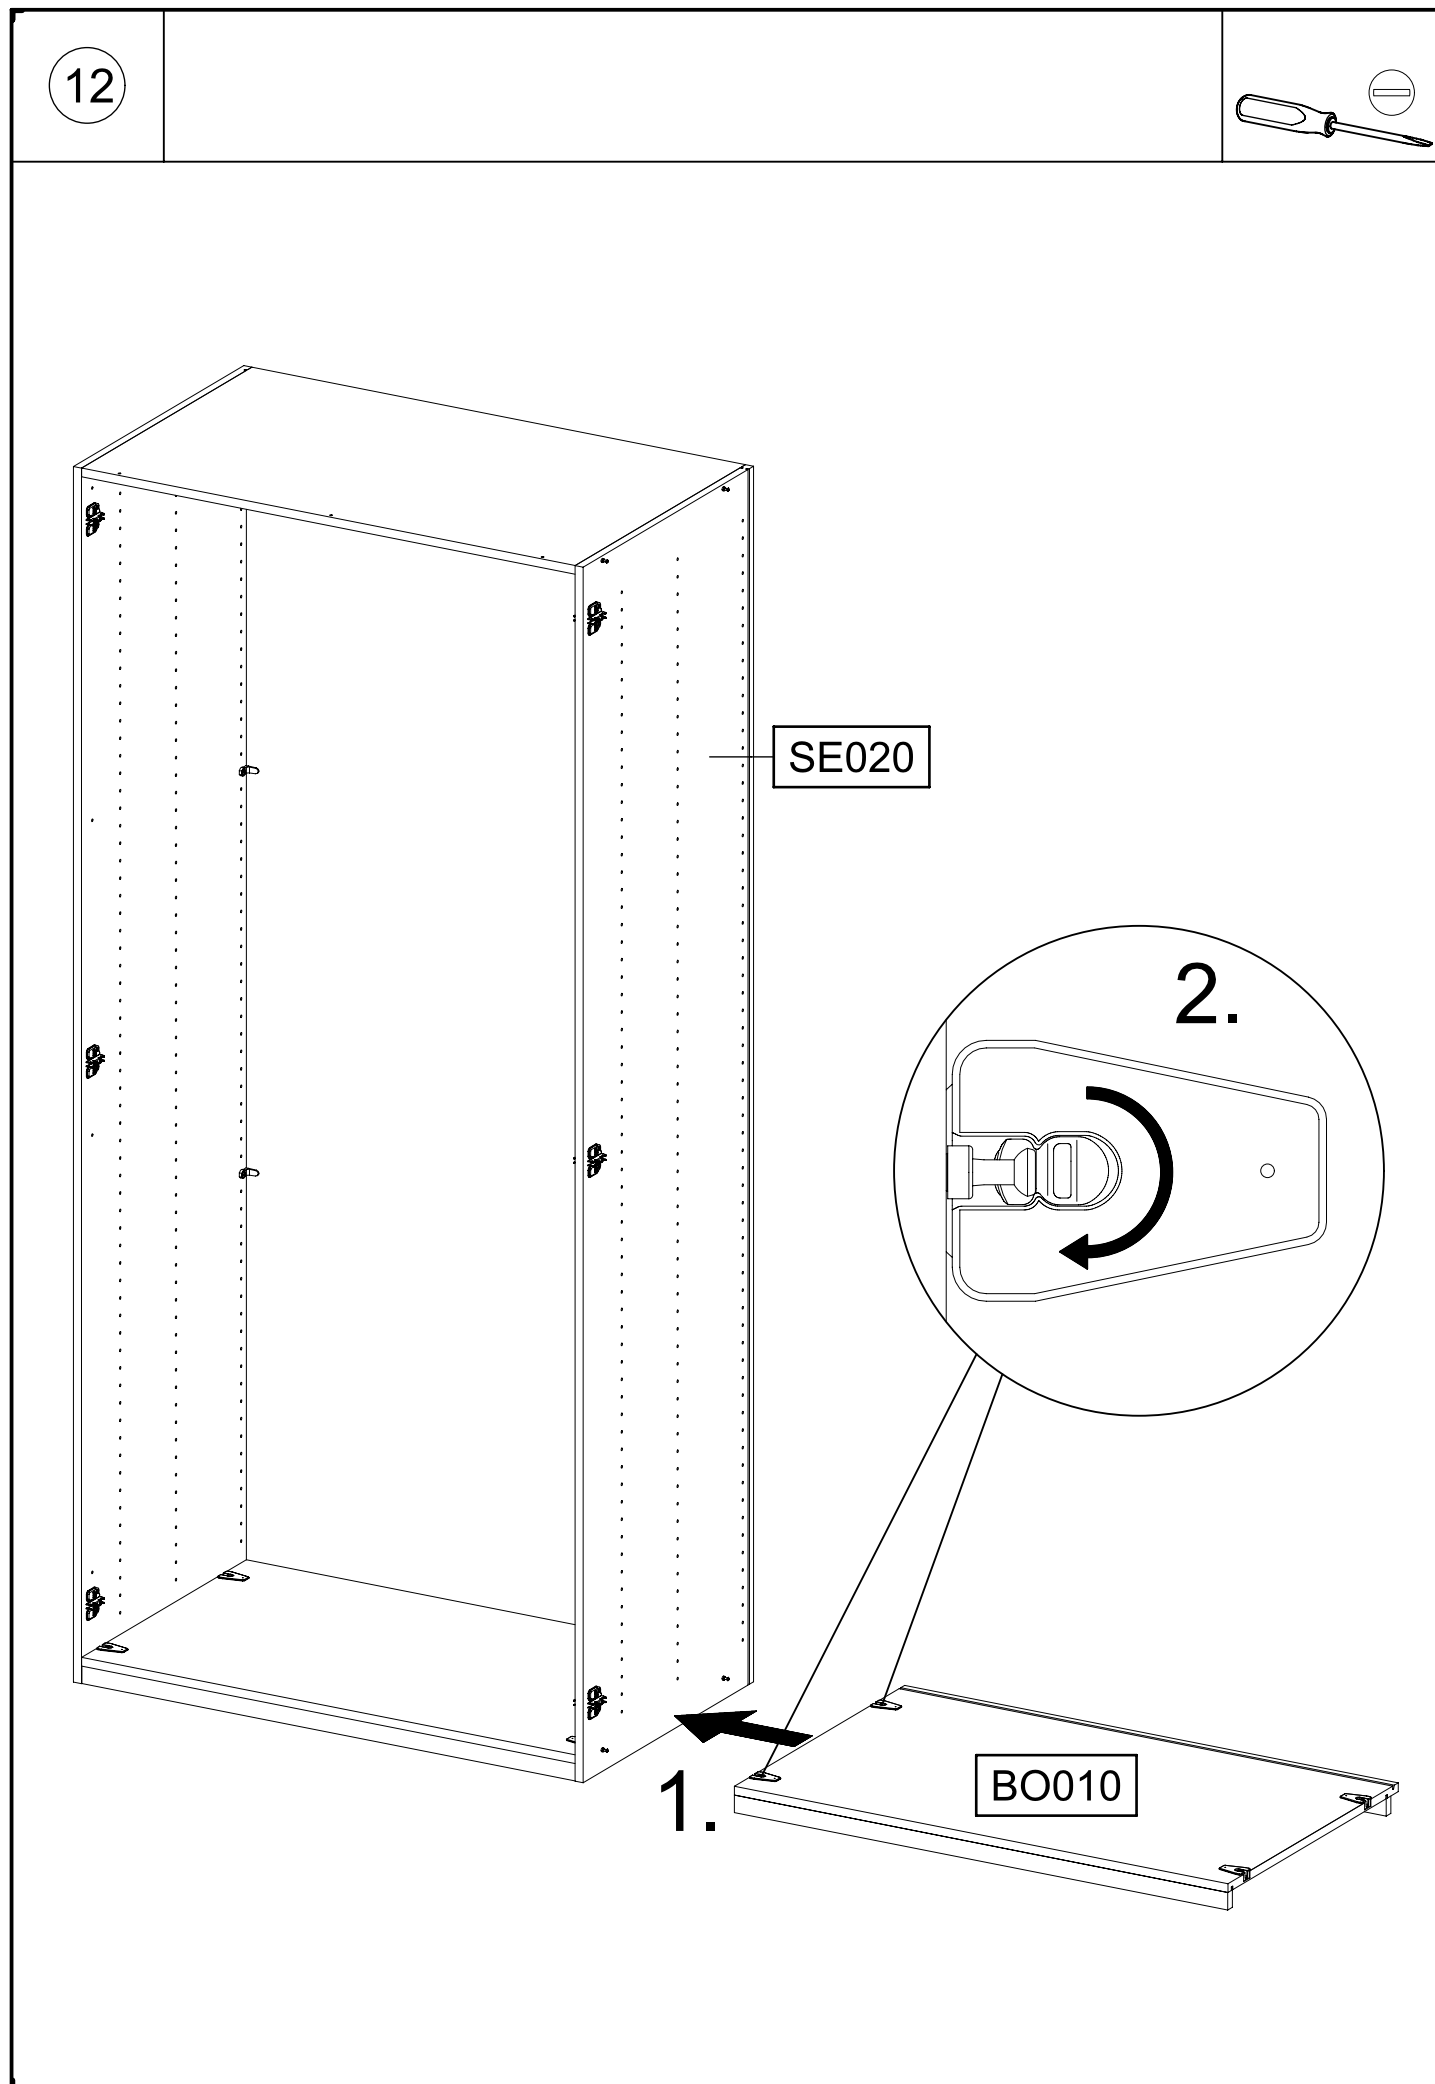

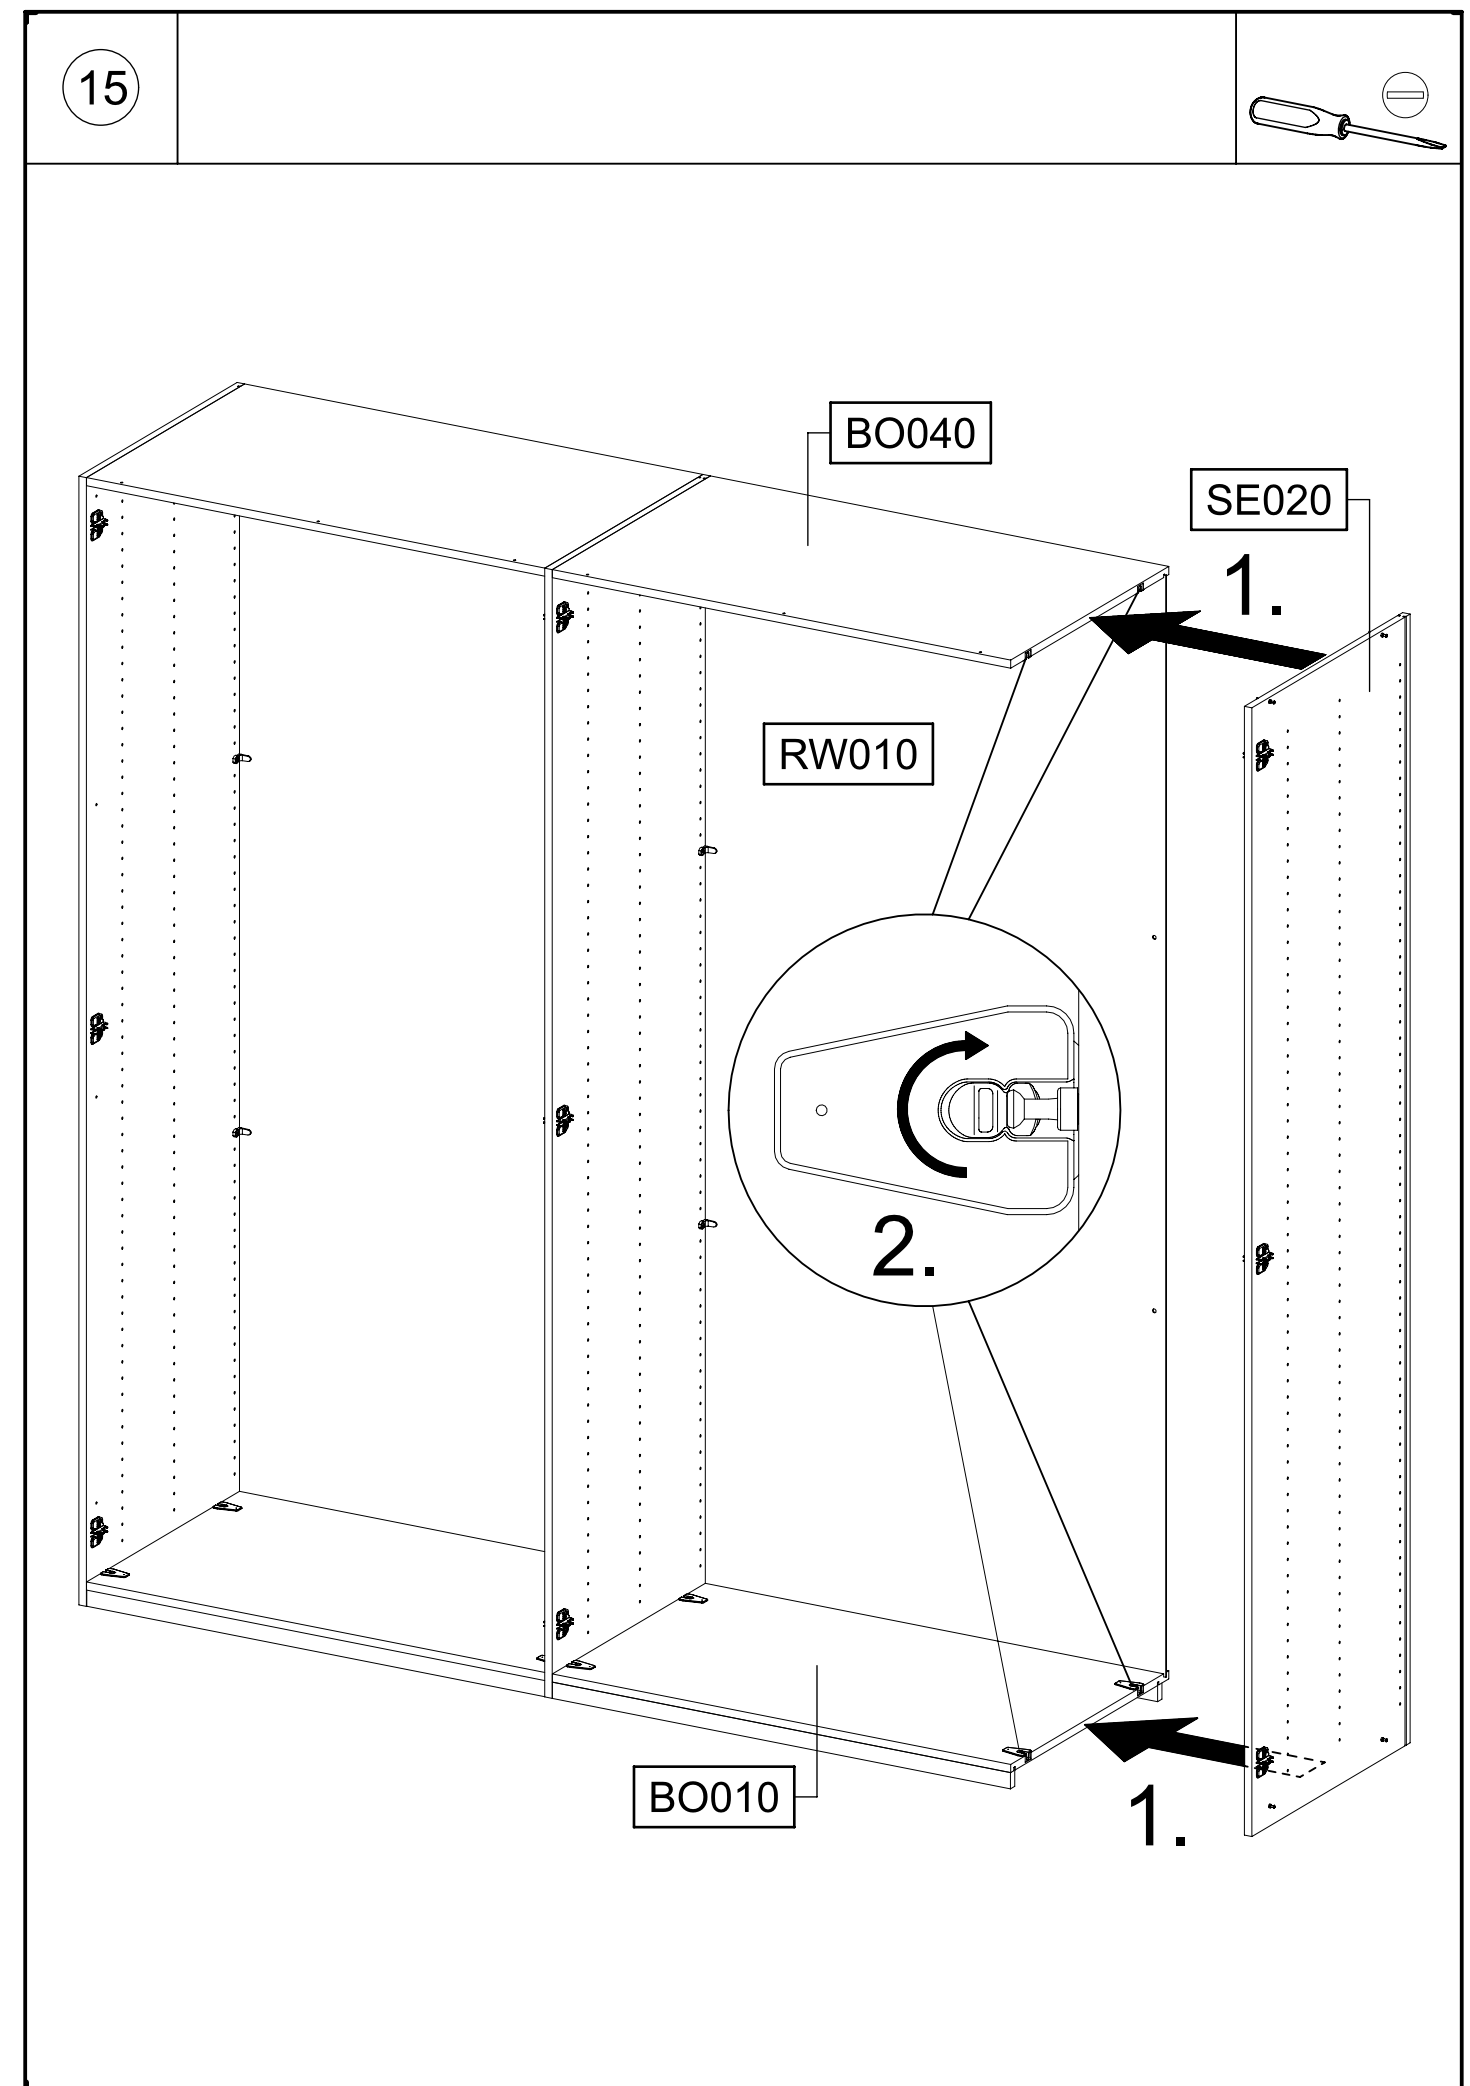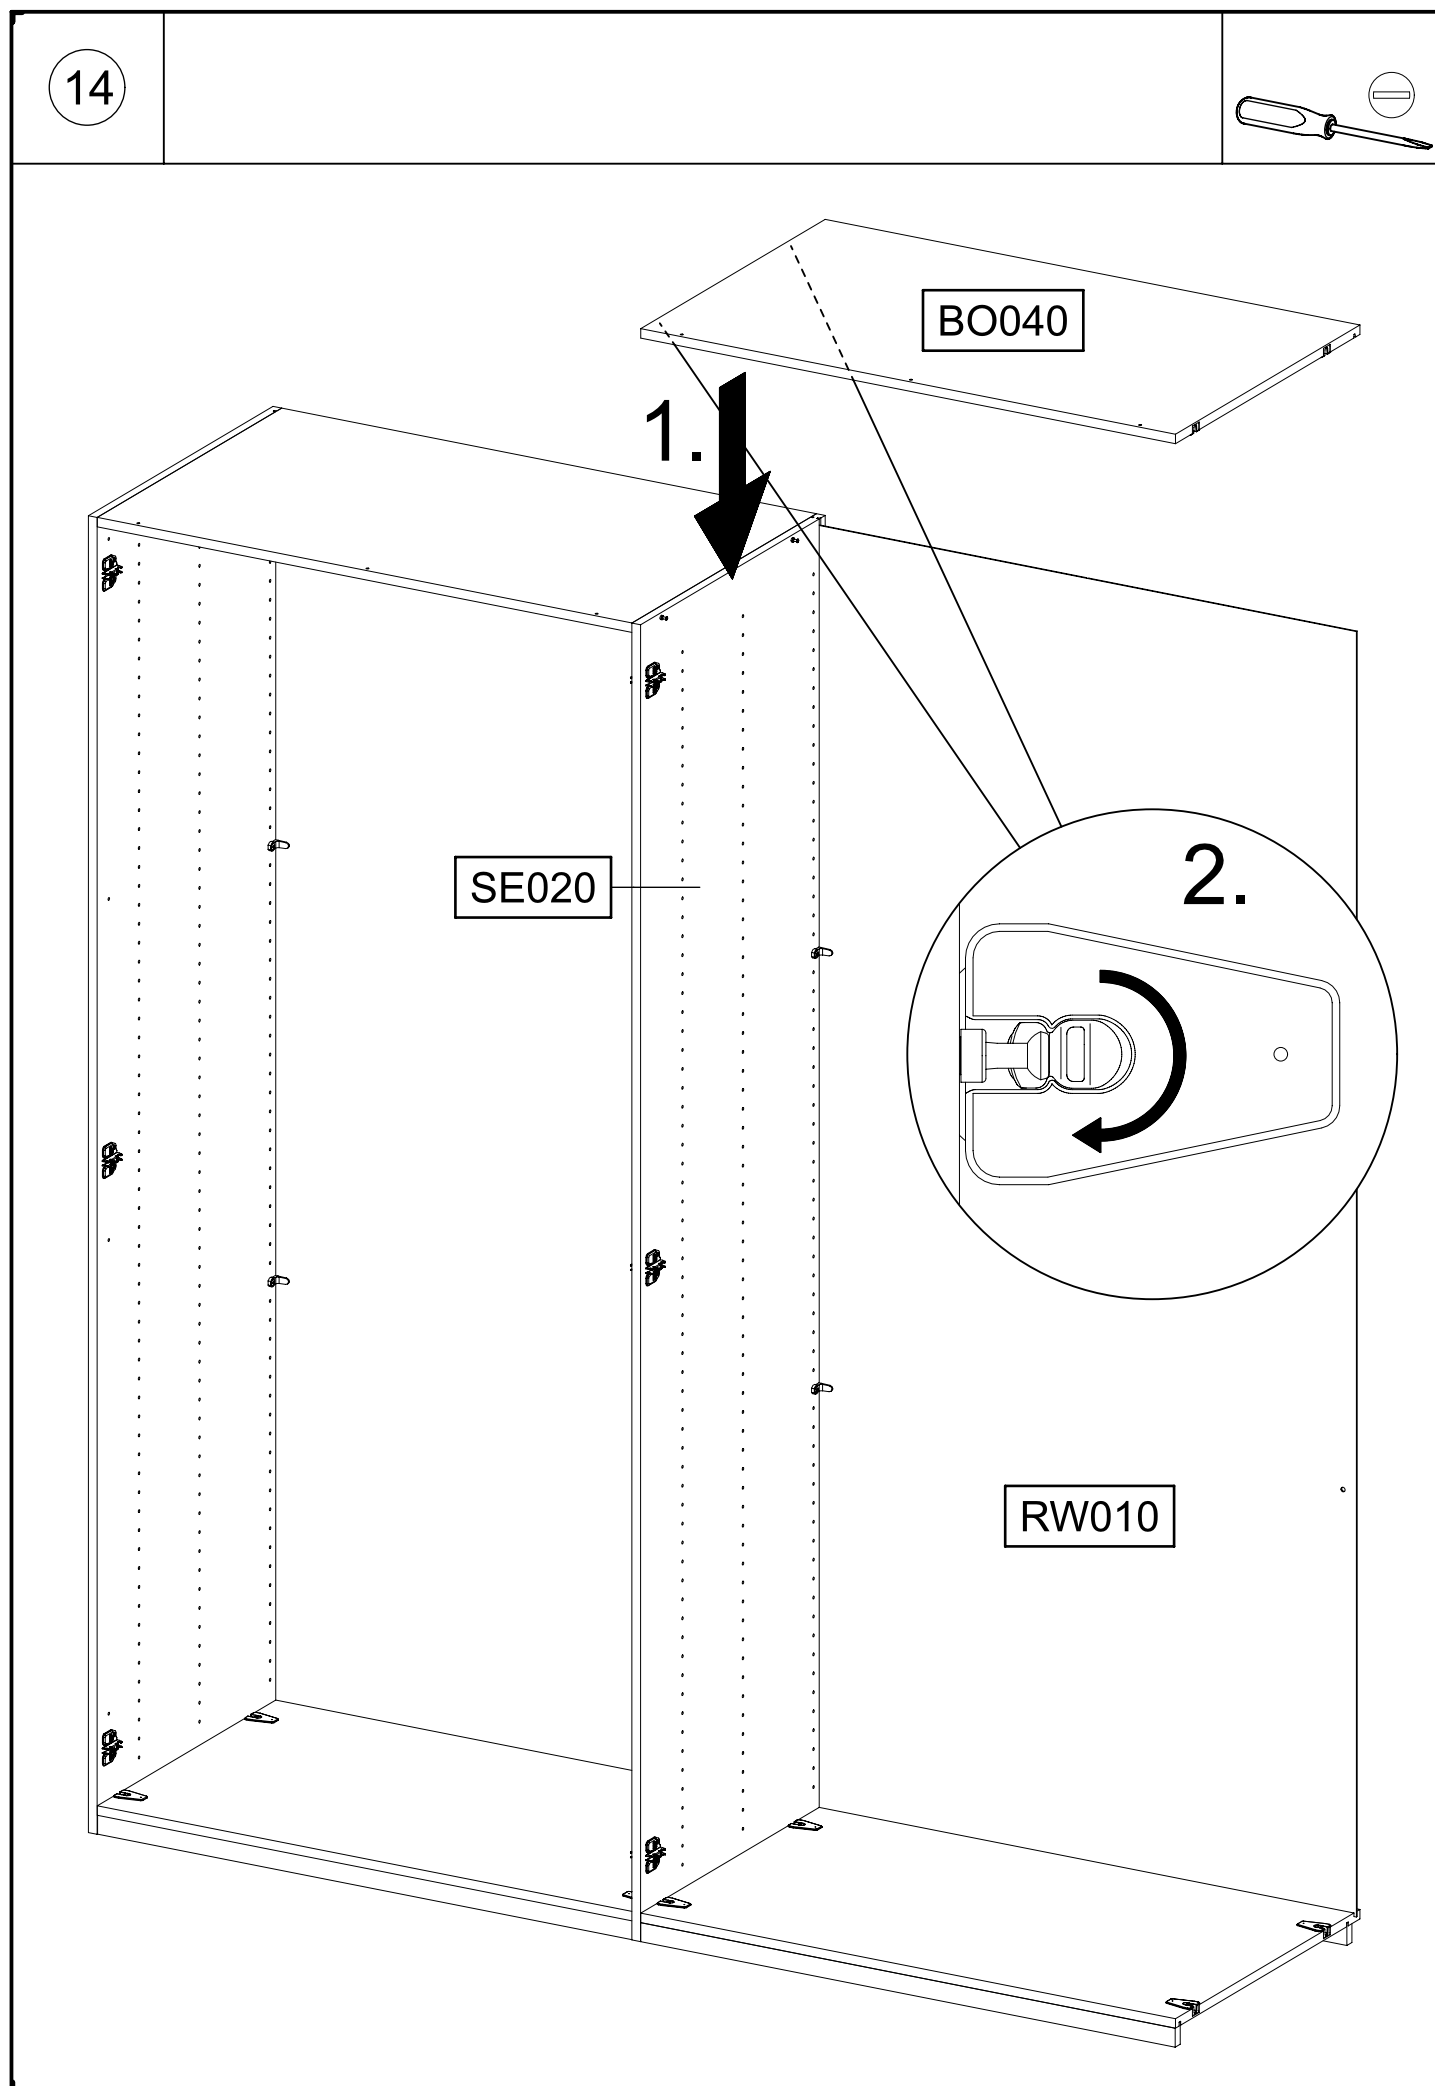

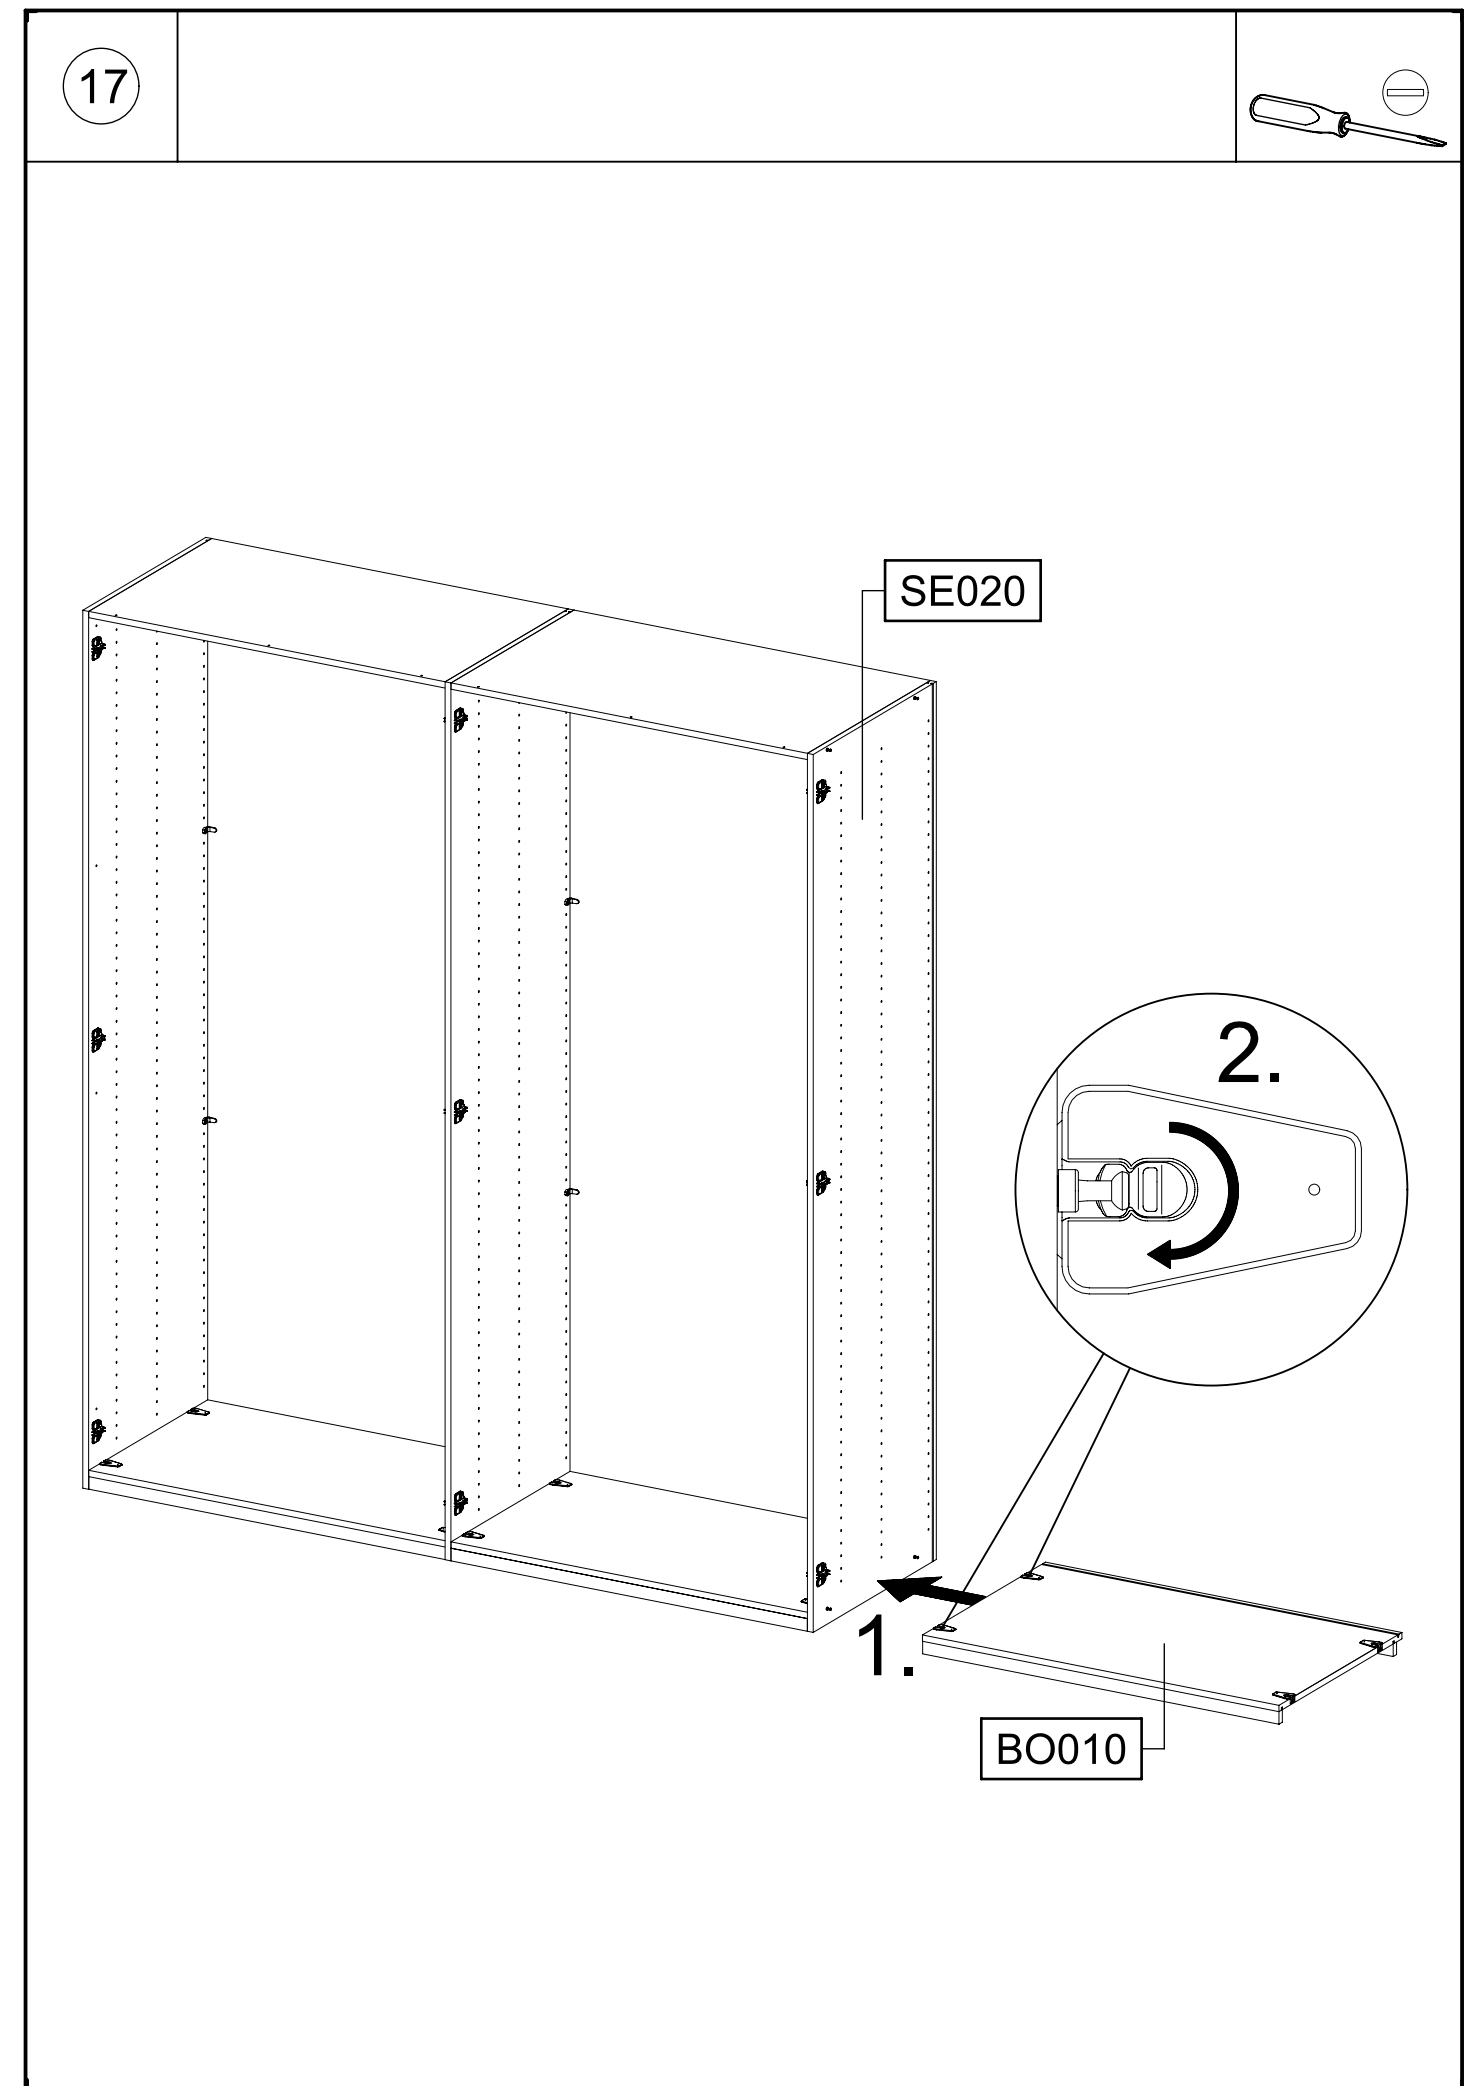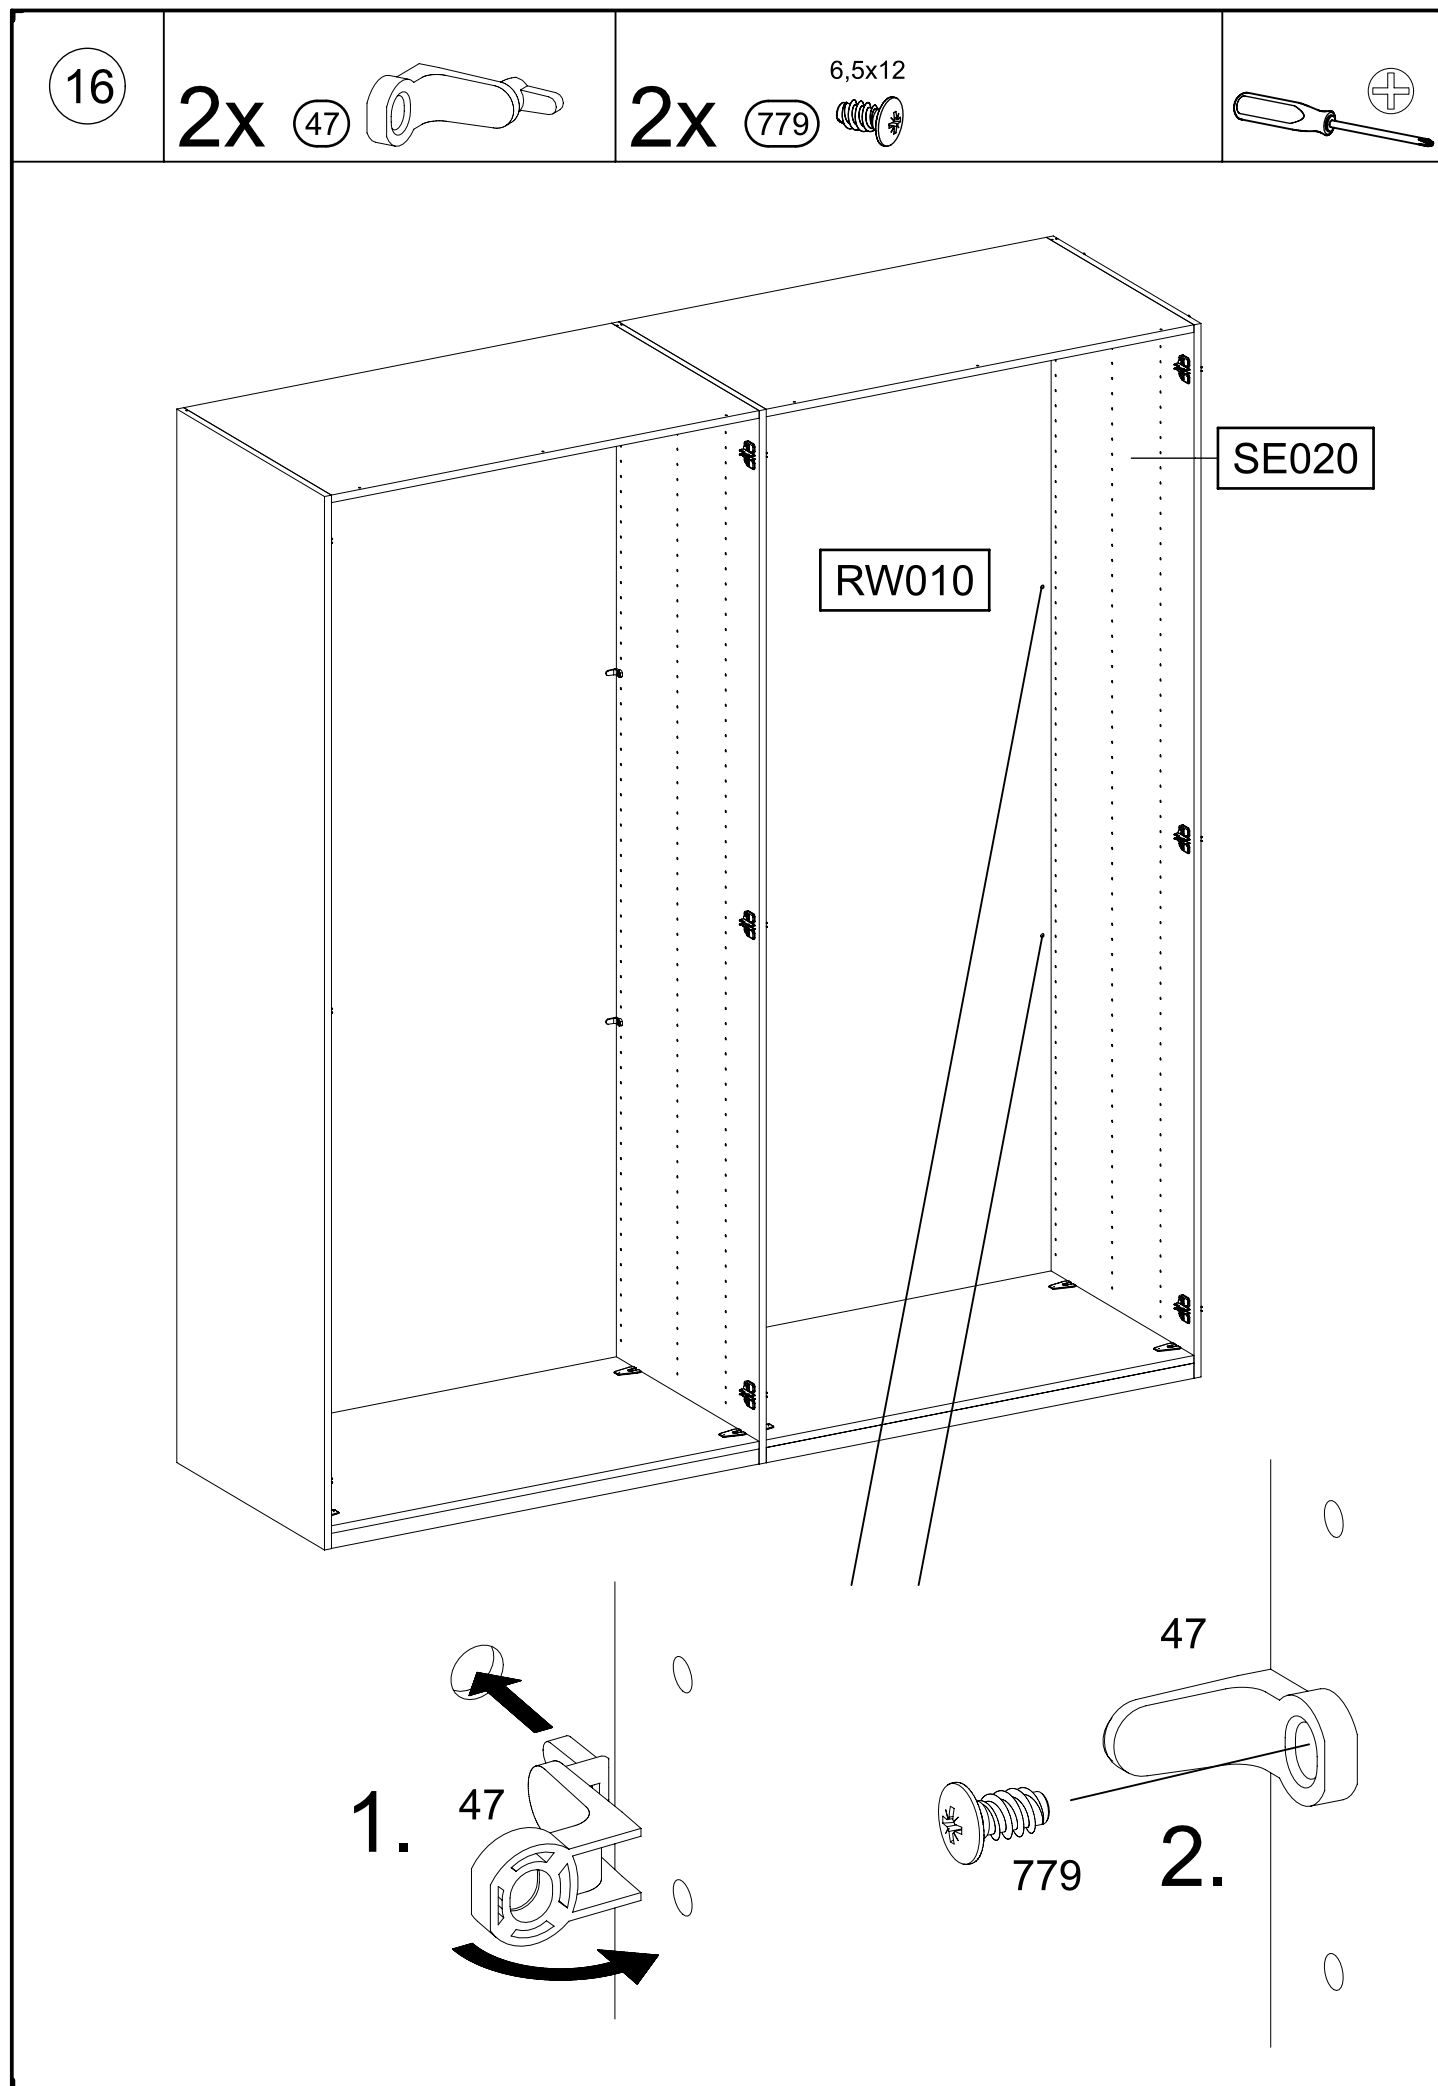


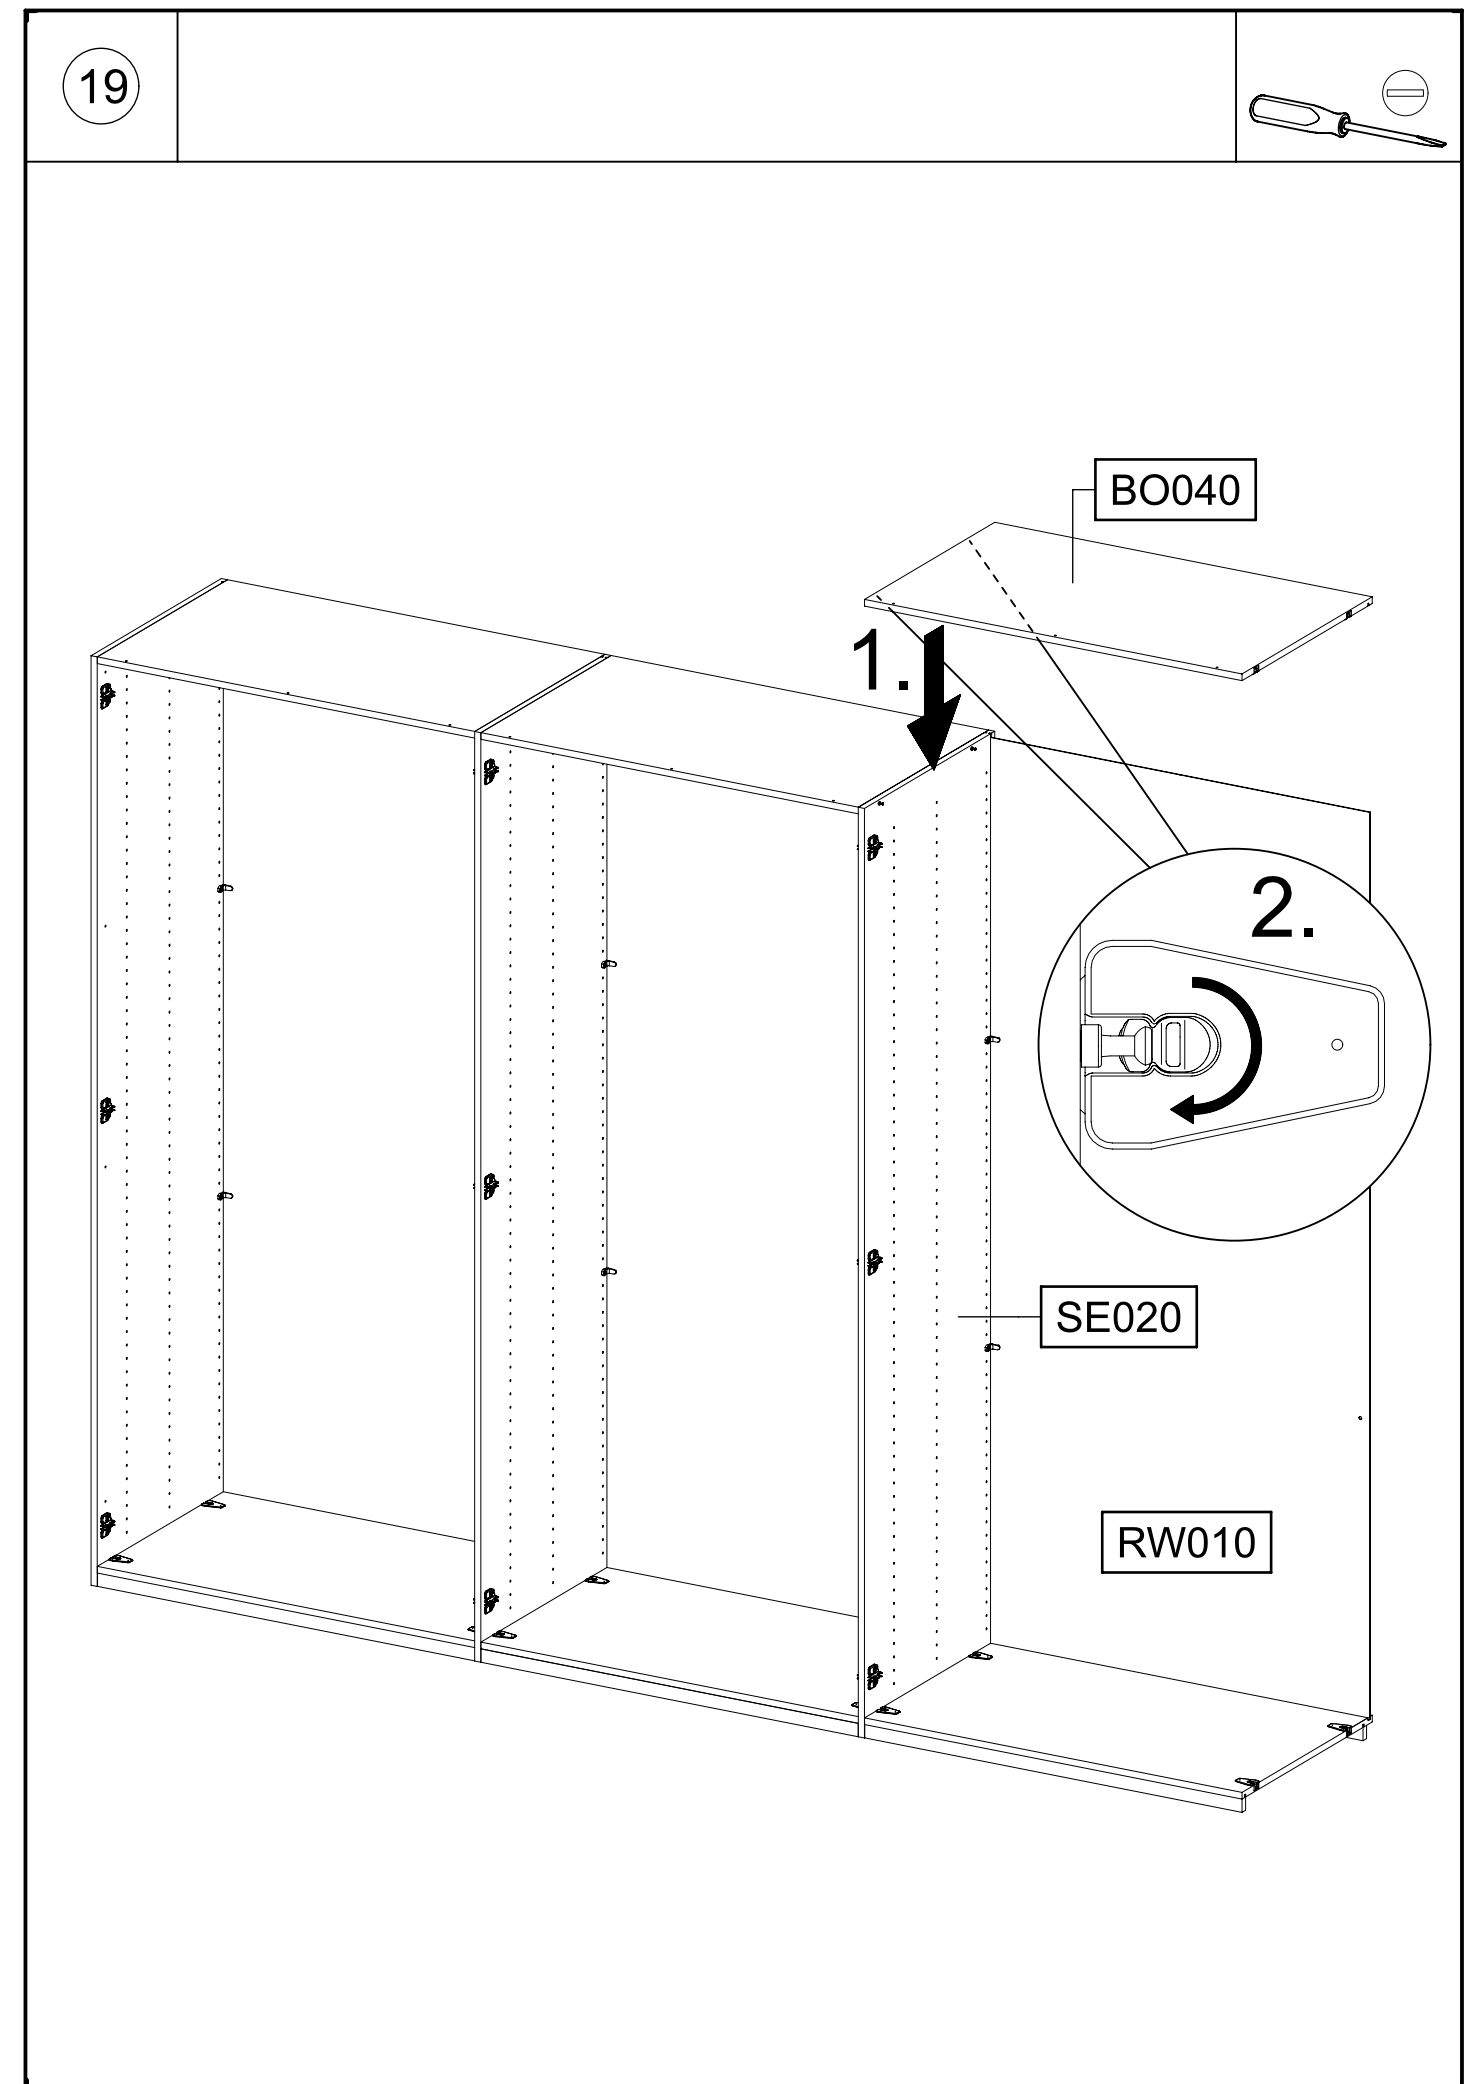
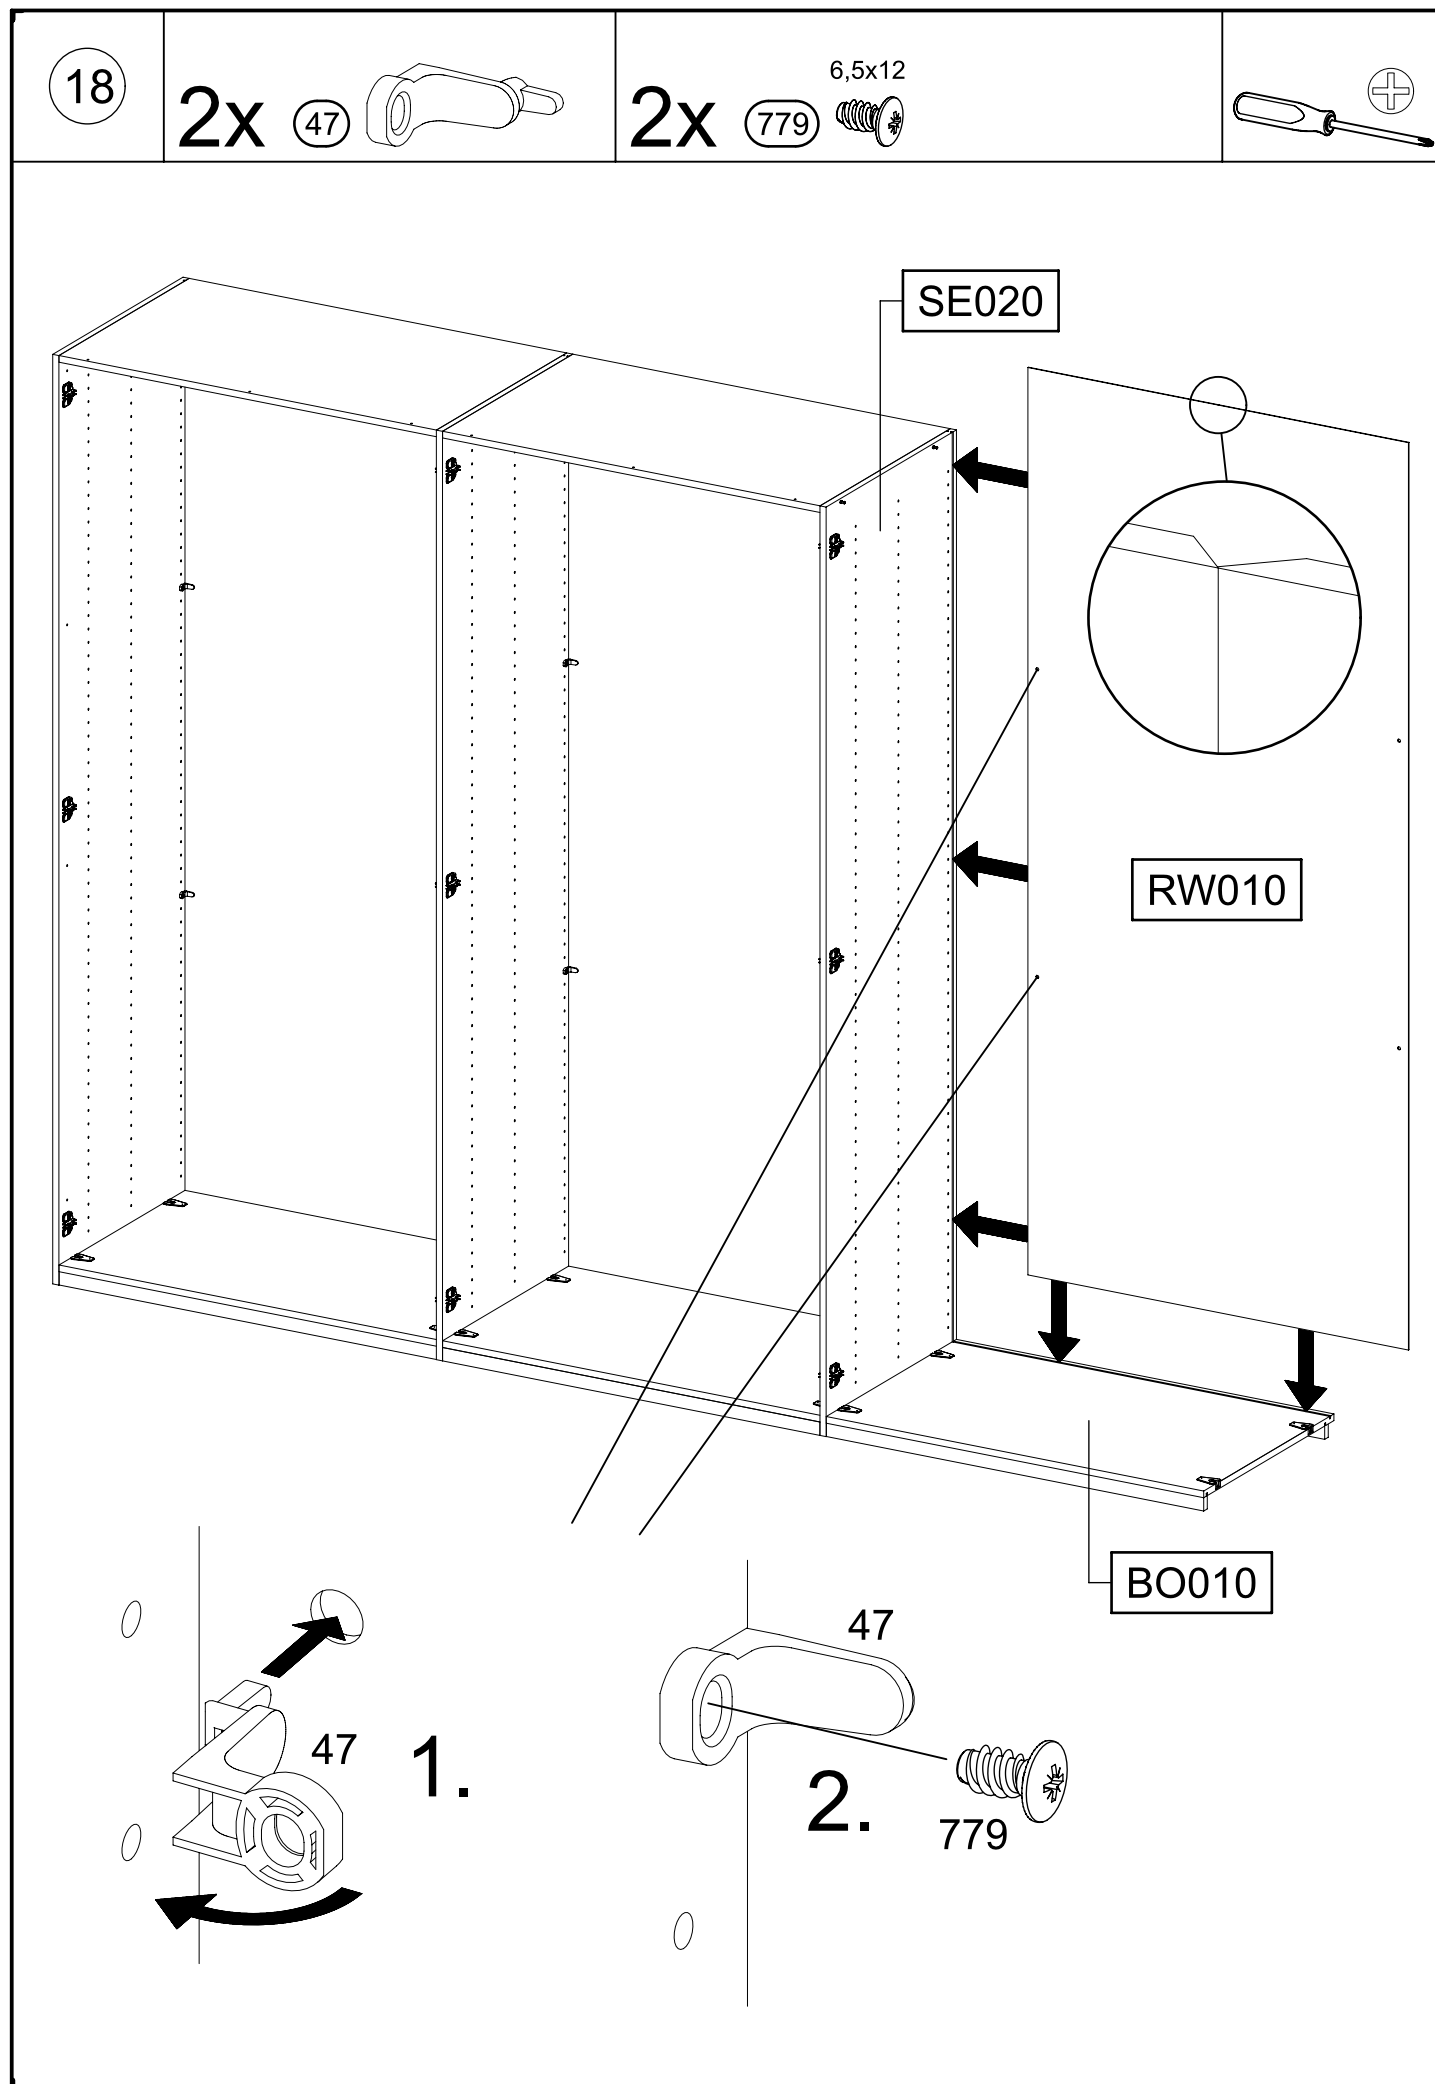


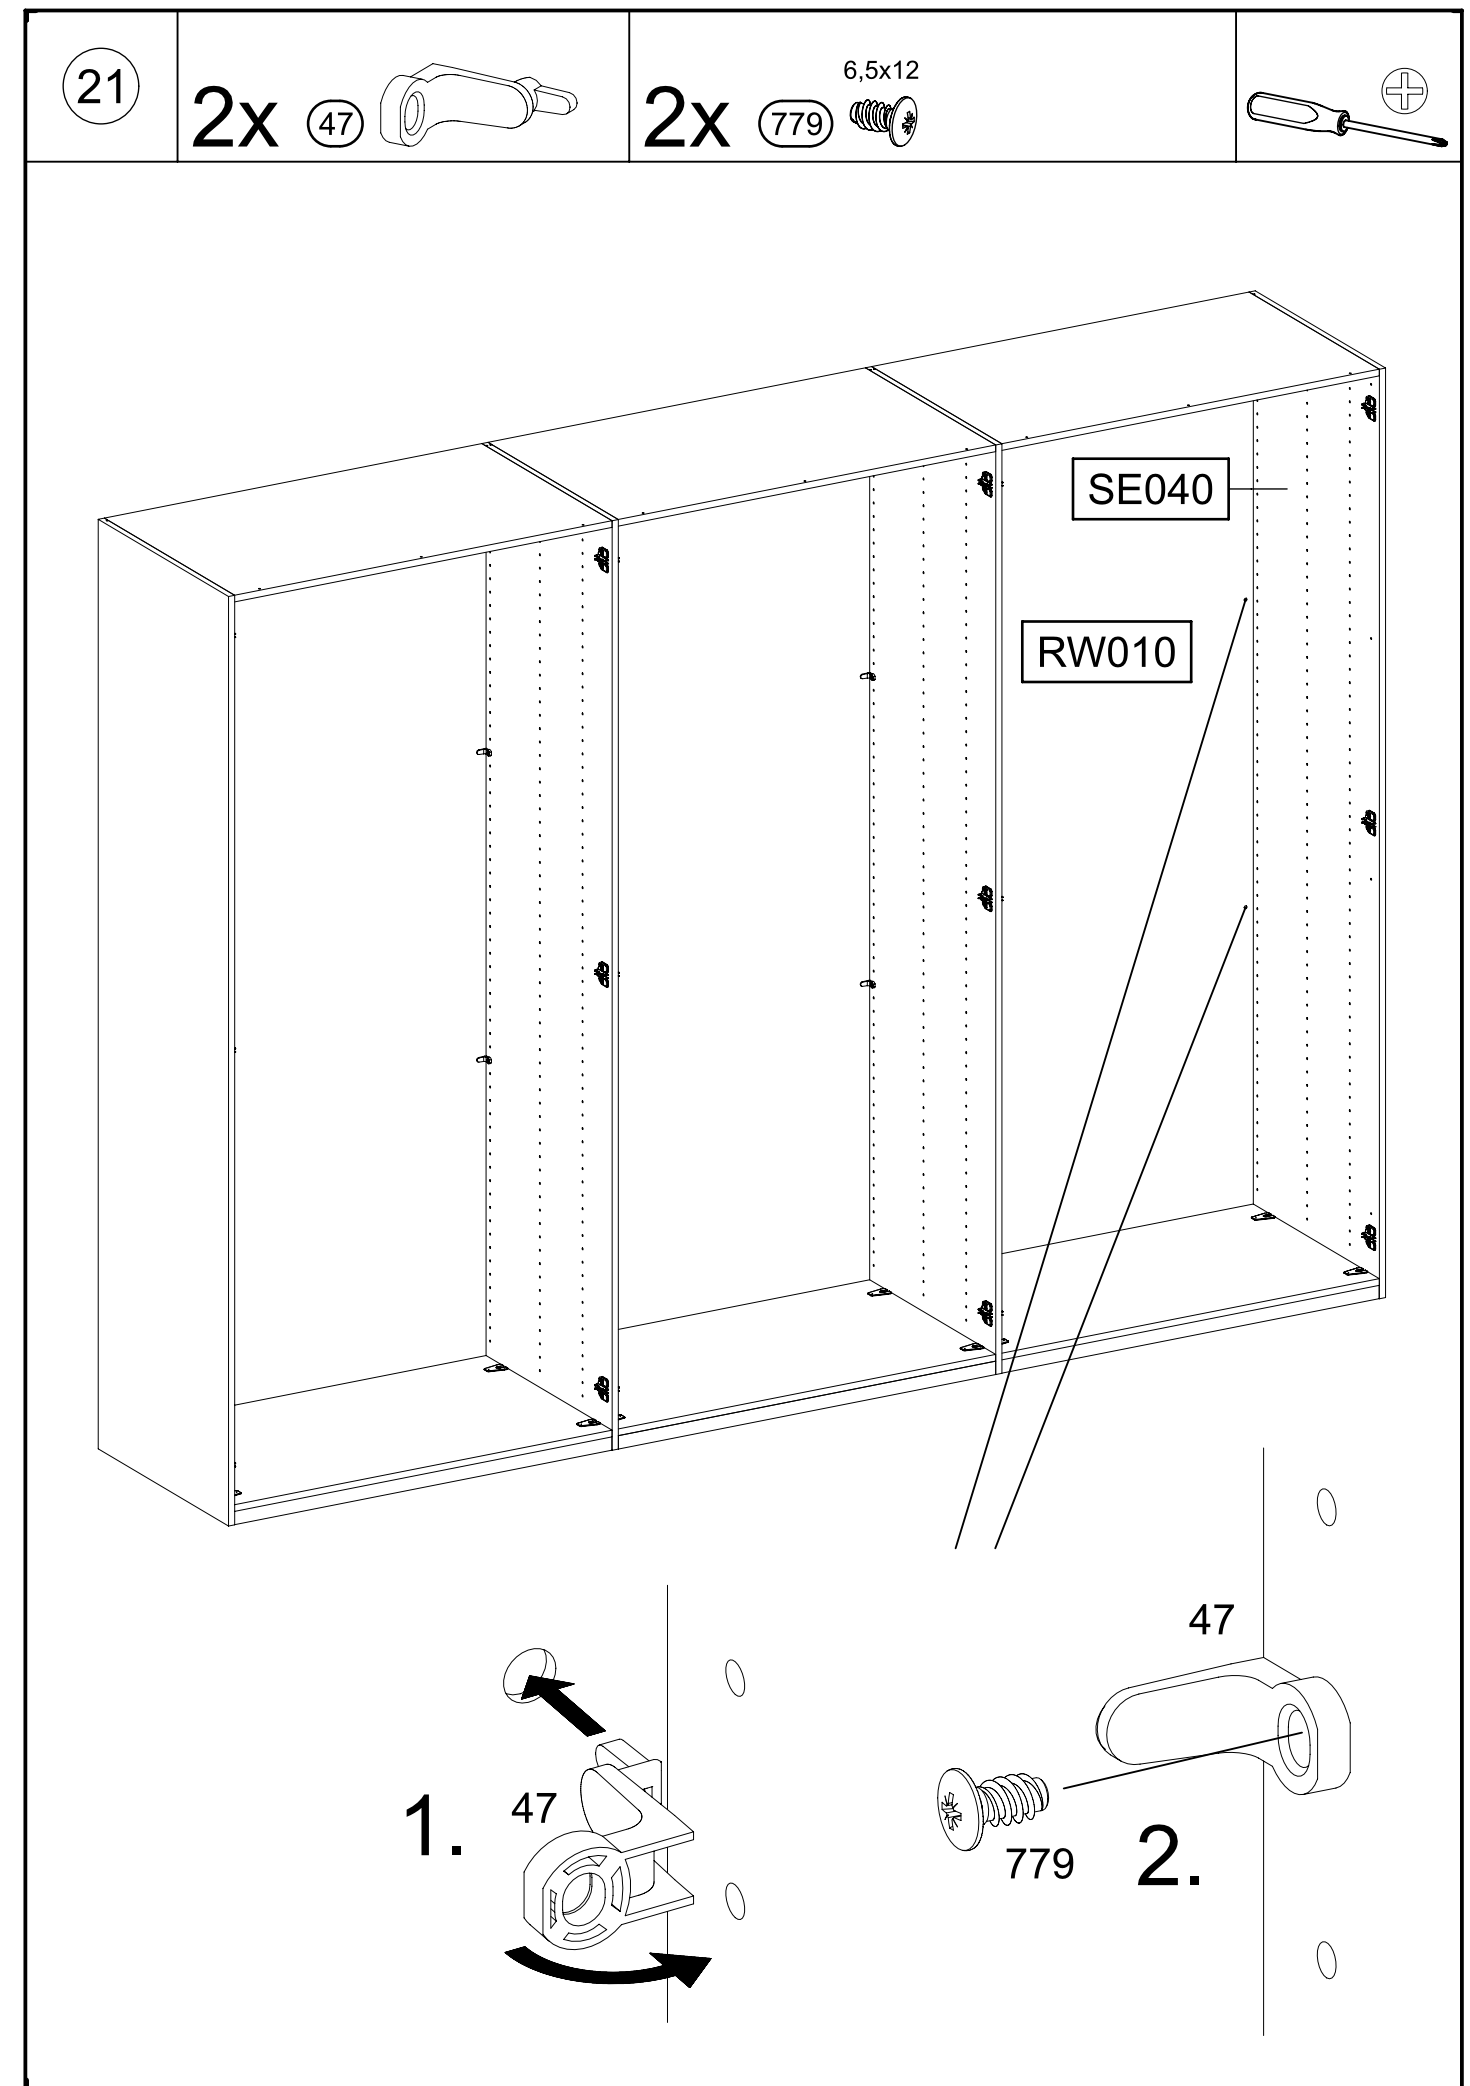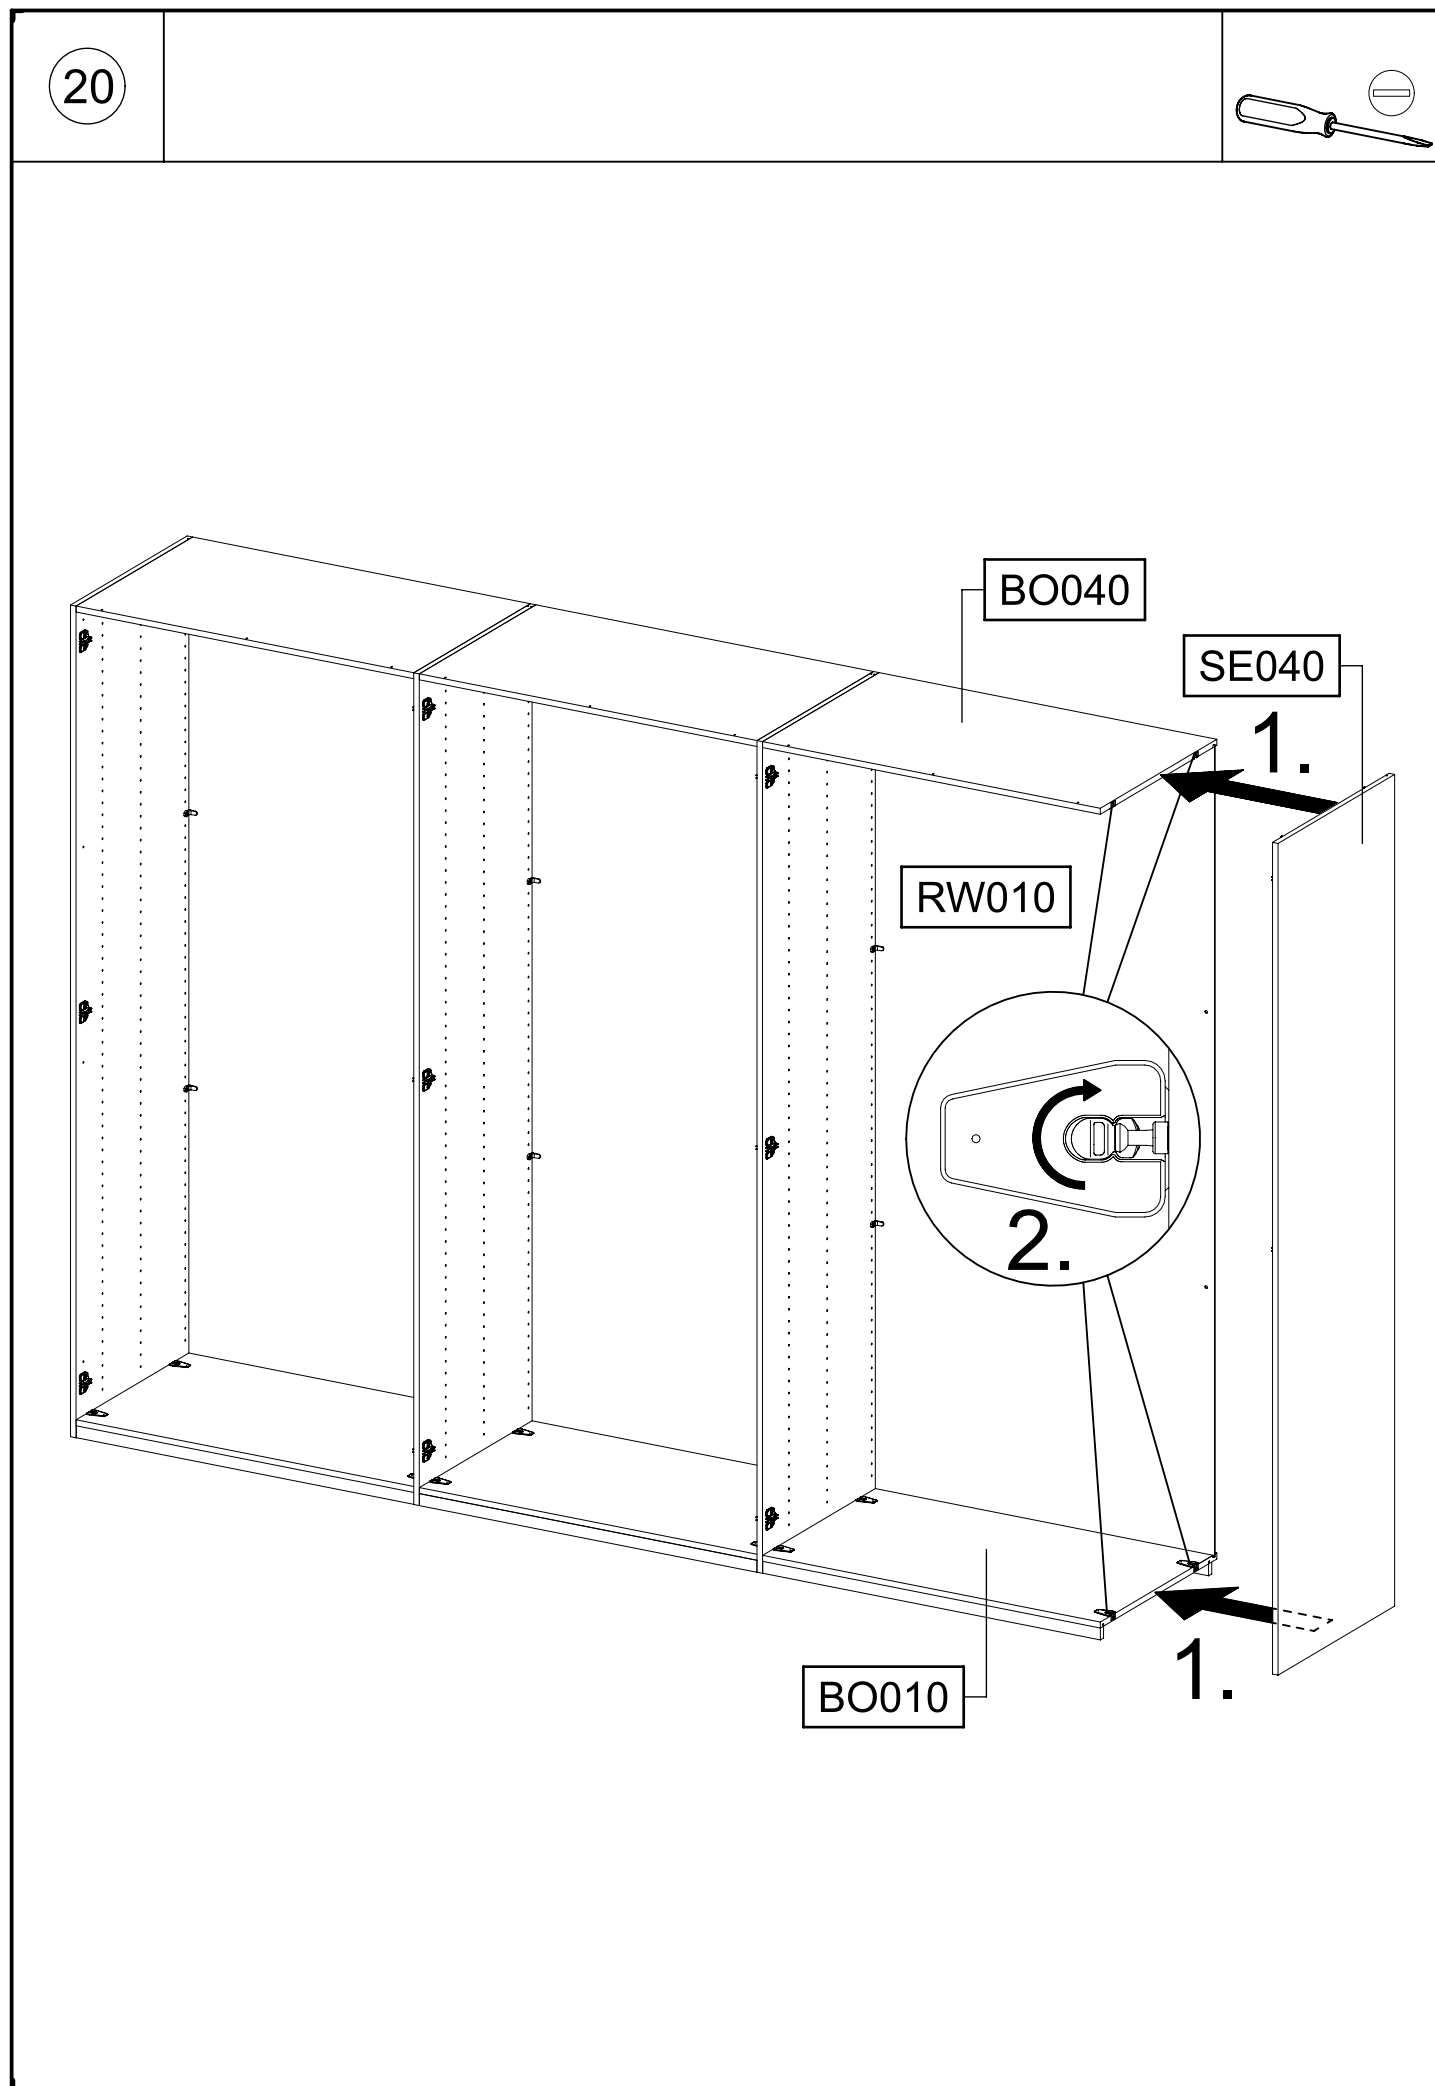

22

24x


1089

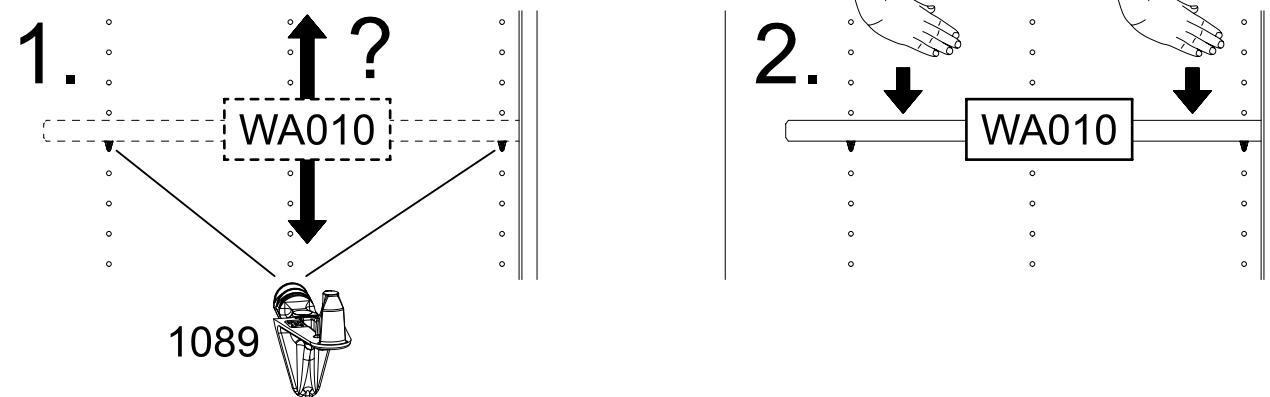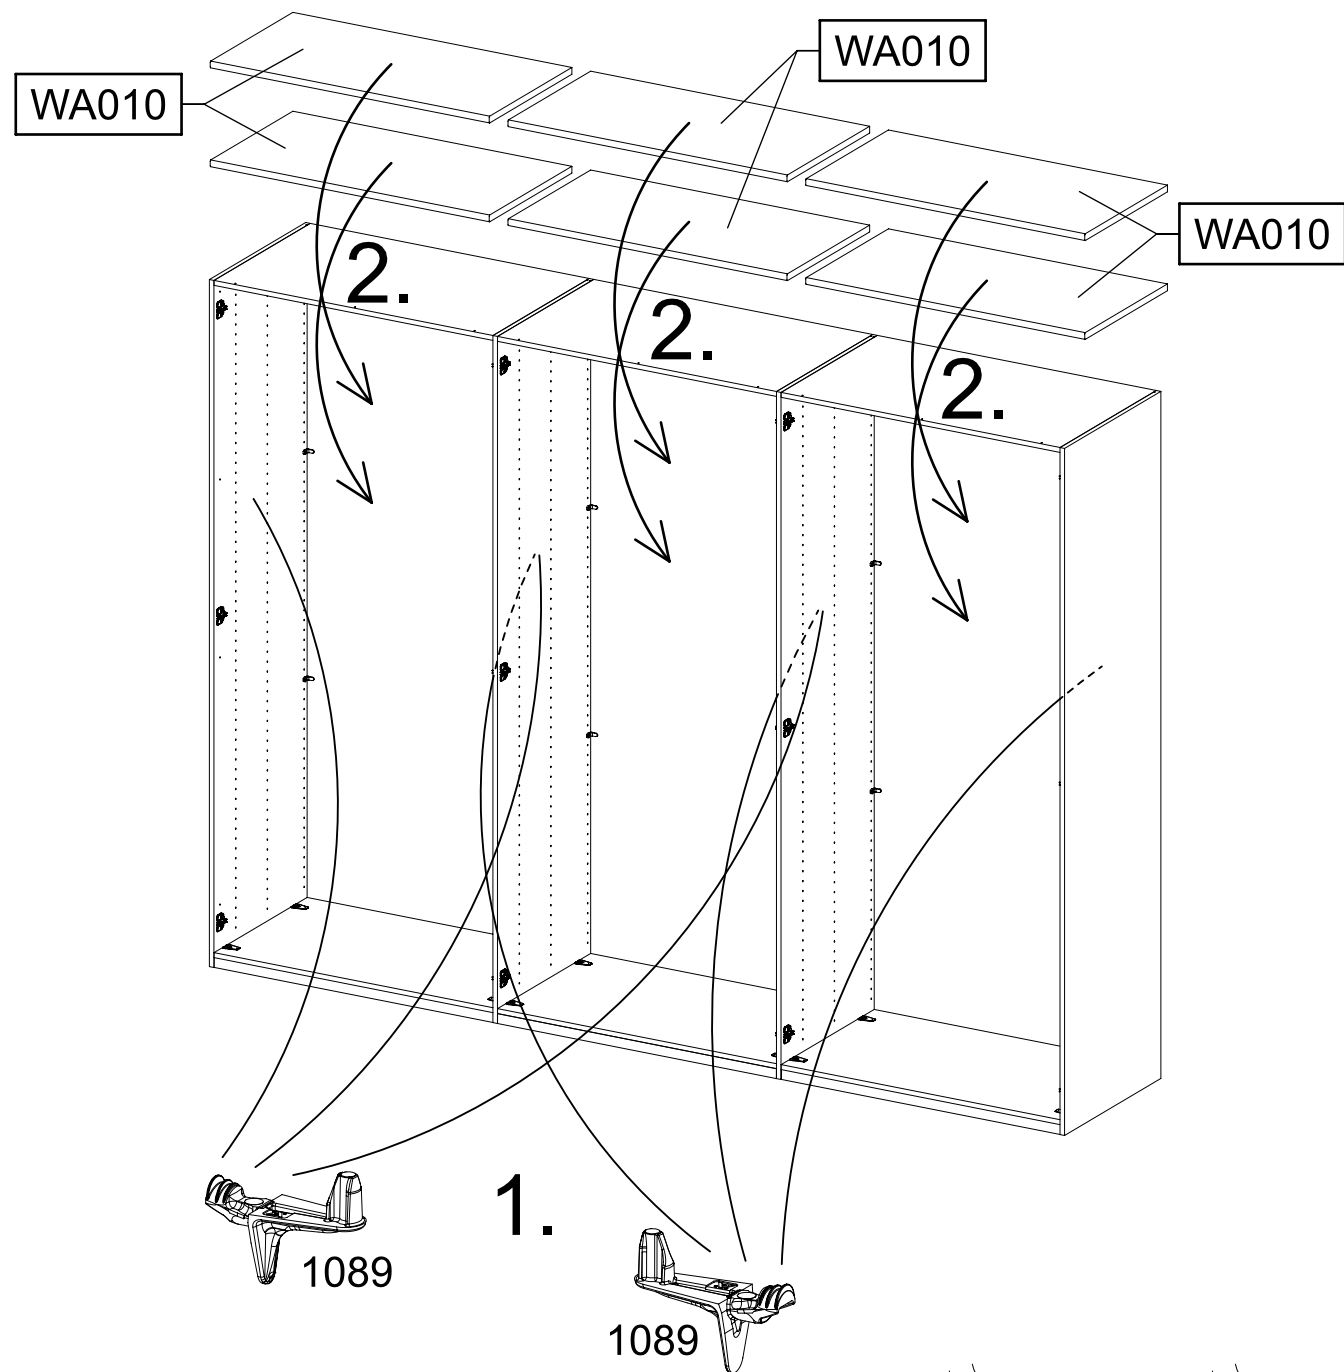

23

6x




29

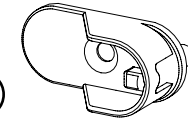

6x






205

3,5x15

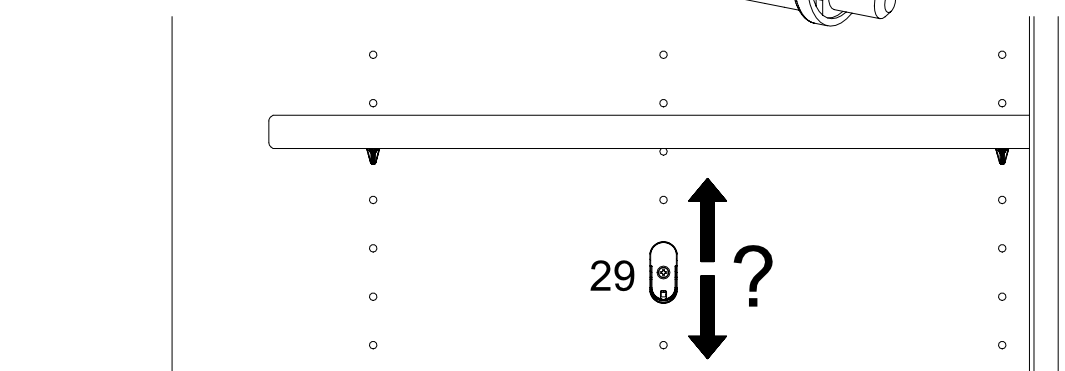
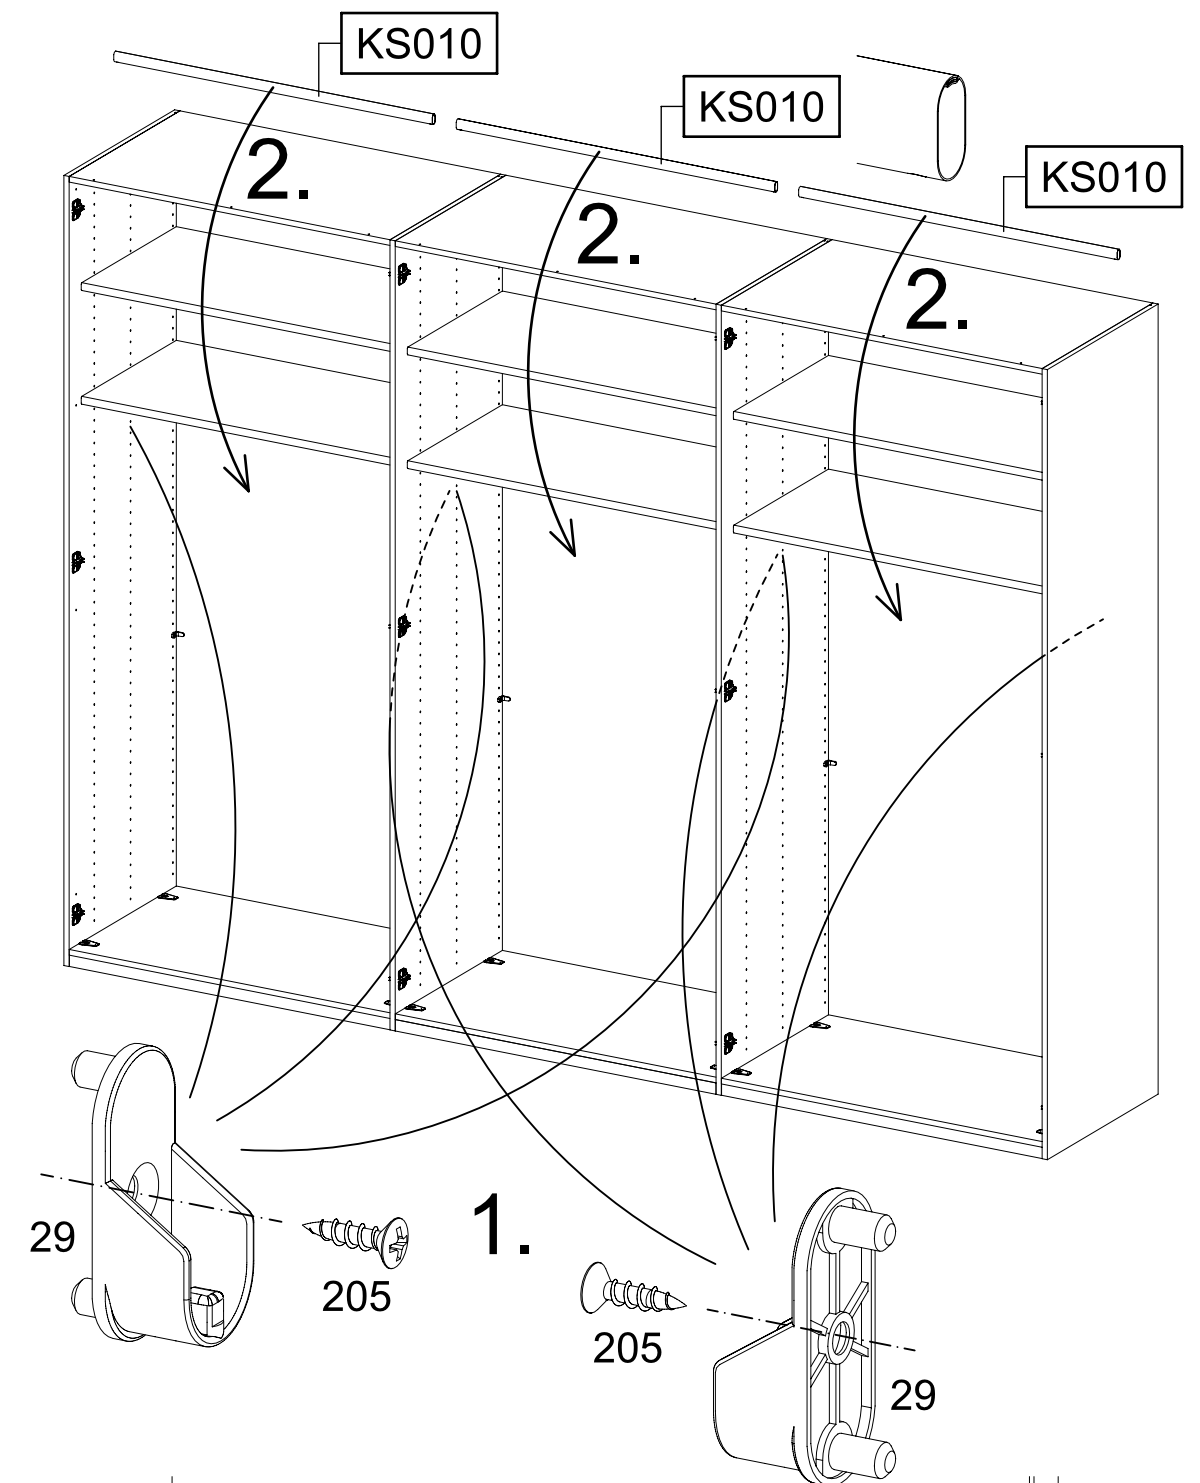



24

18-24x (1292)

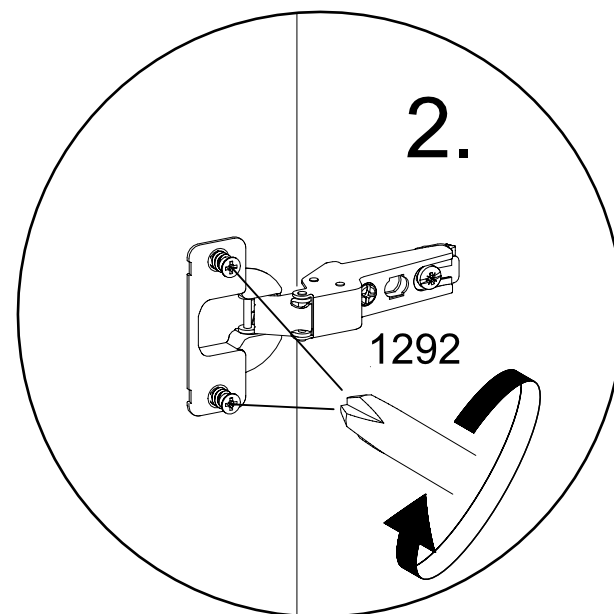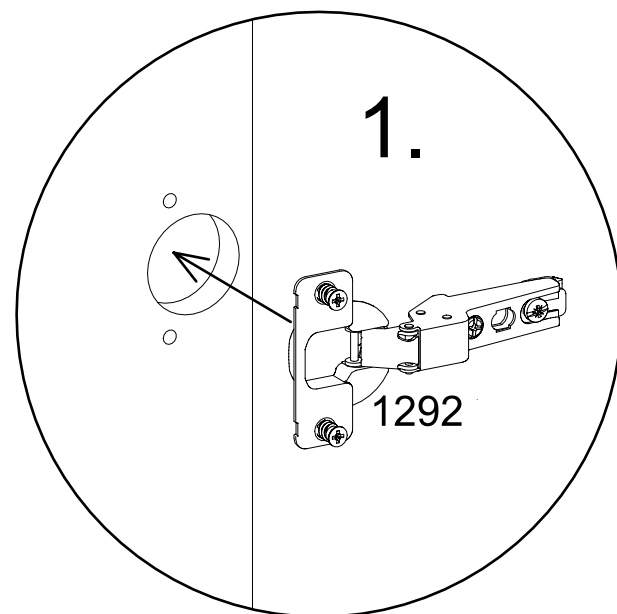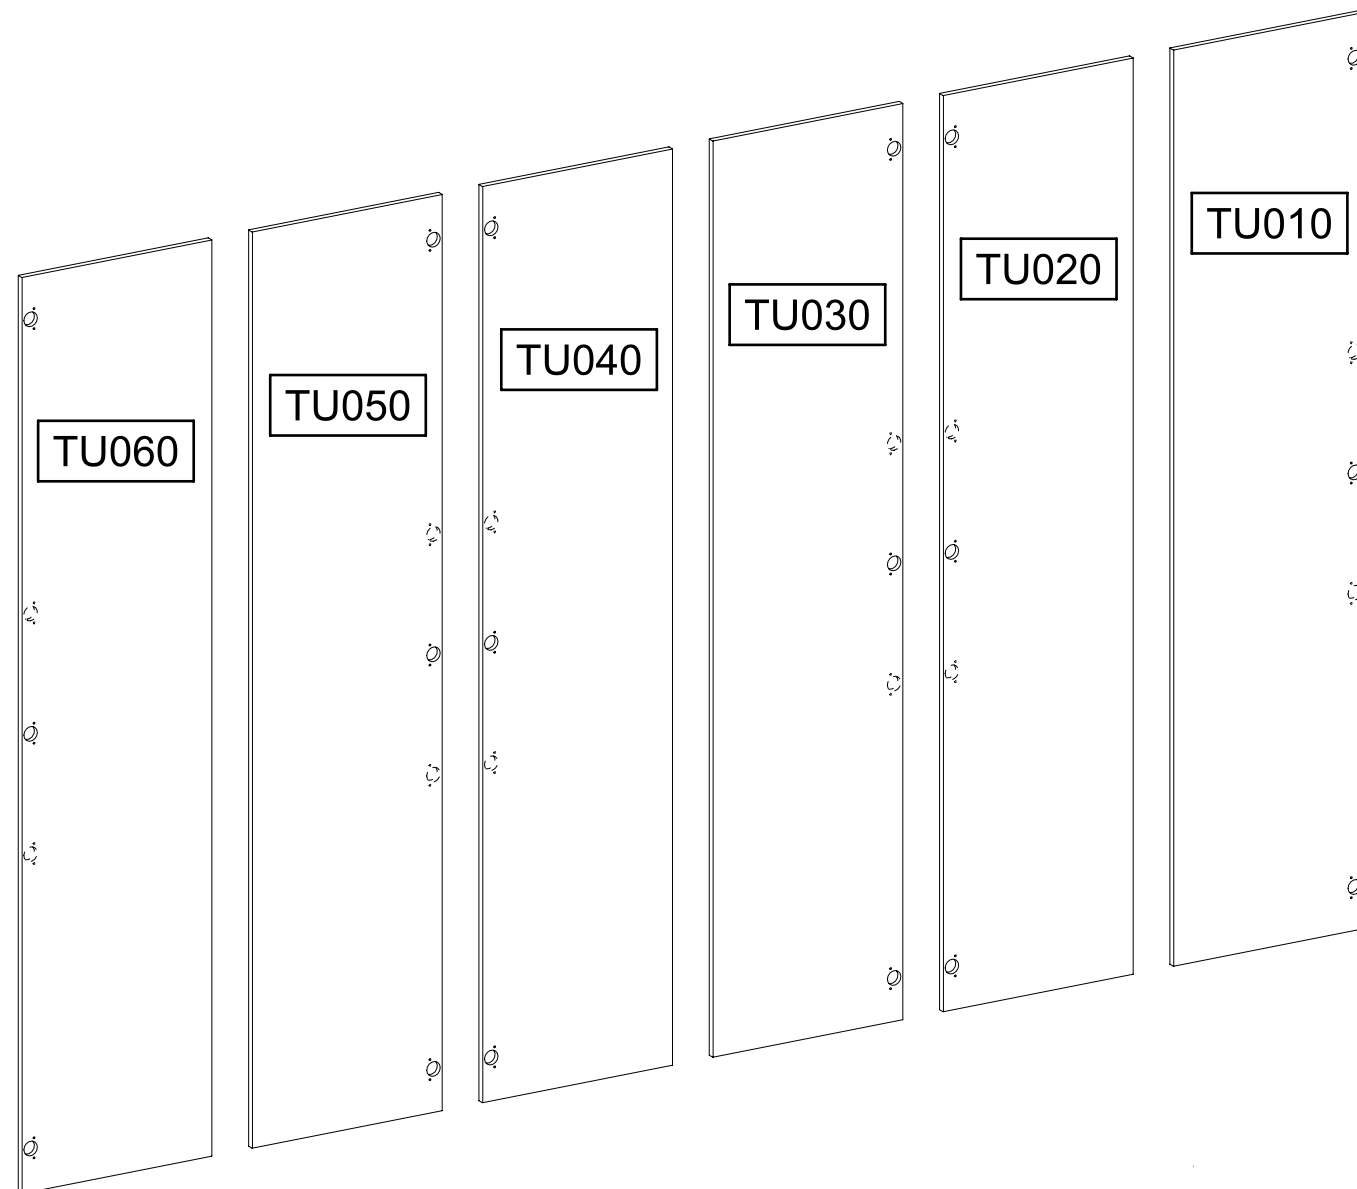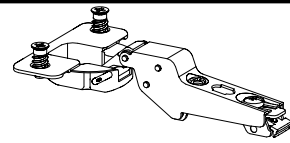

25

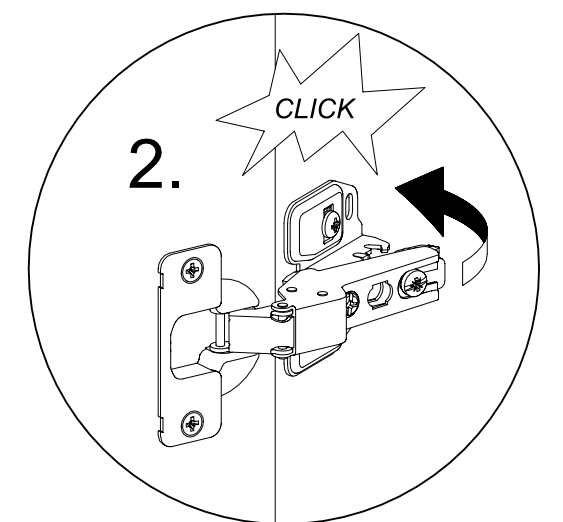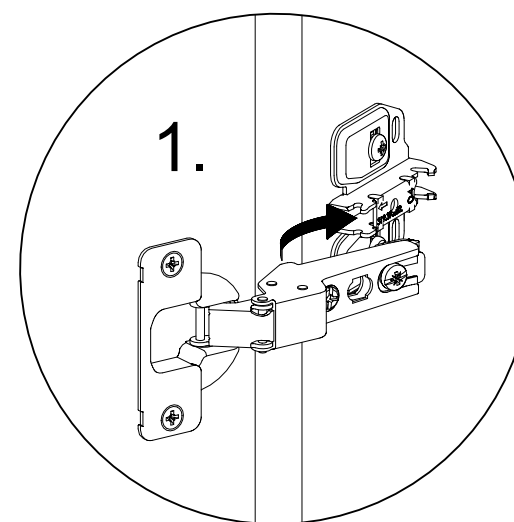
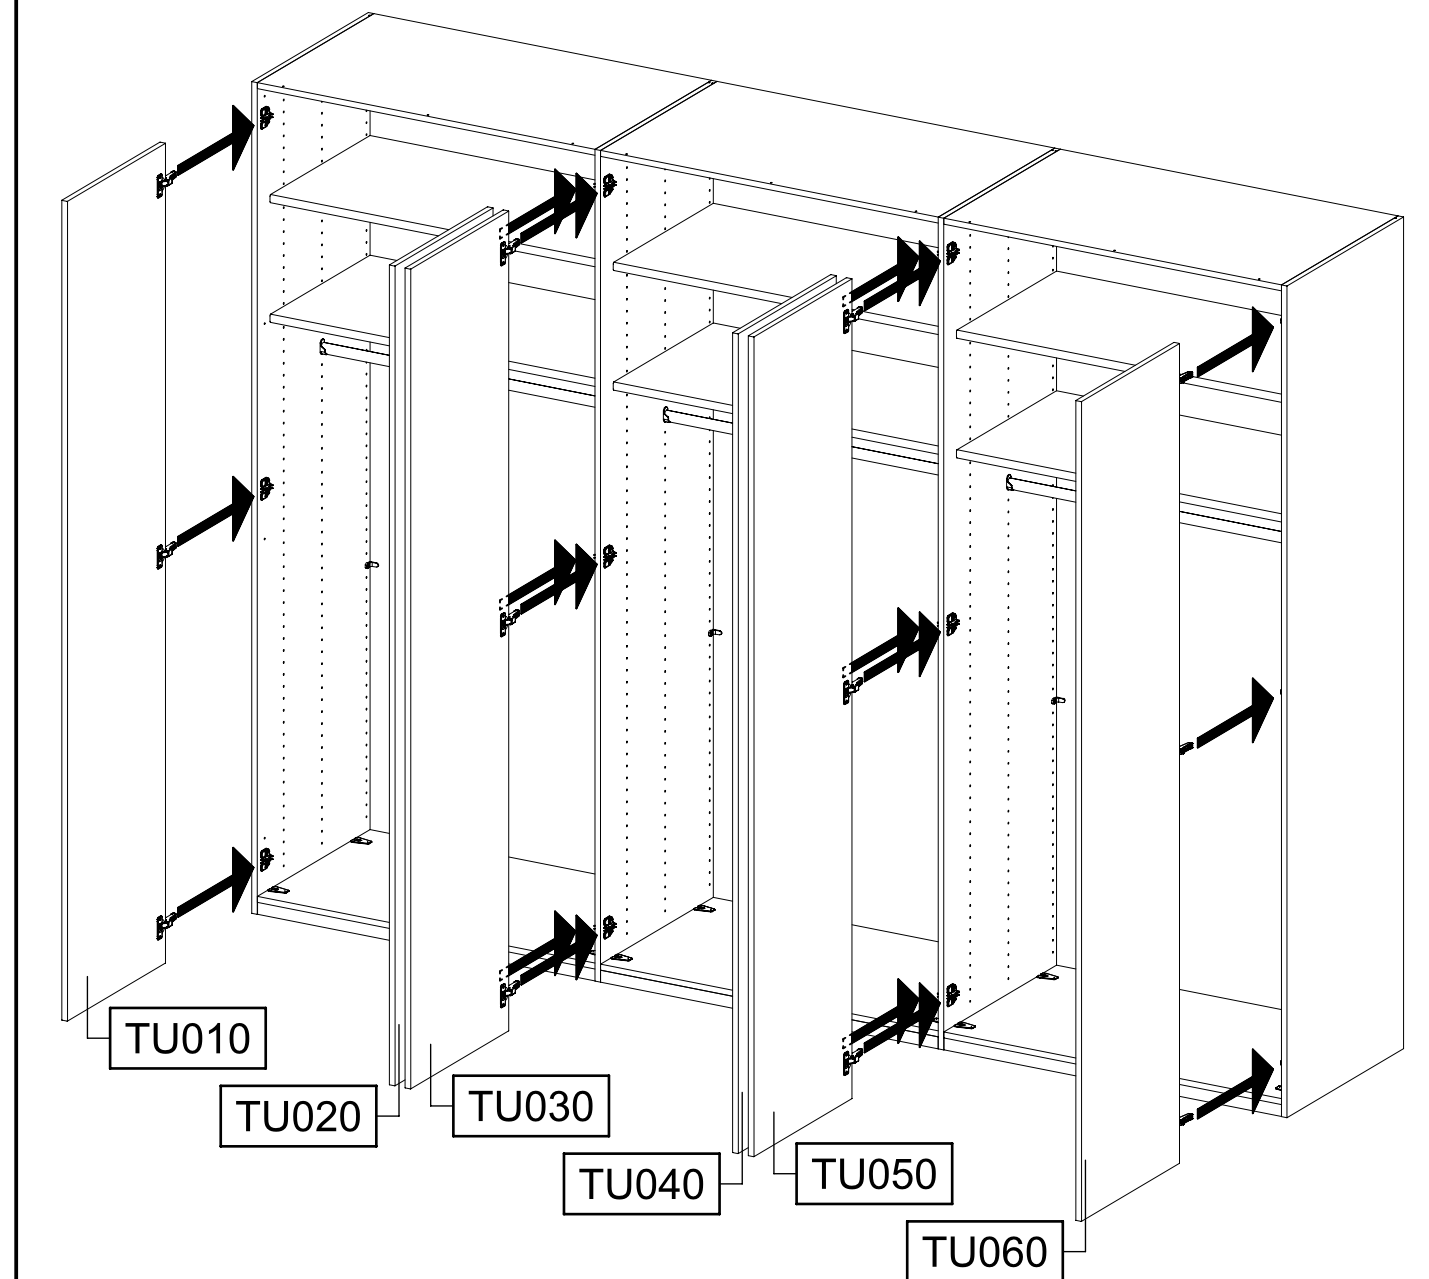


26


0-8x

12








55x16x6,2

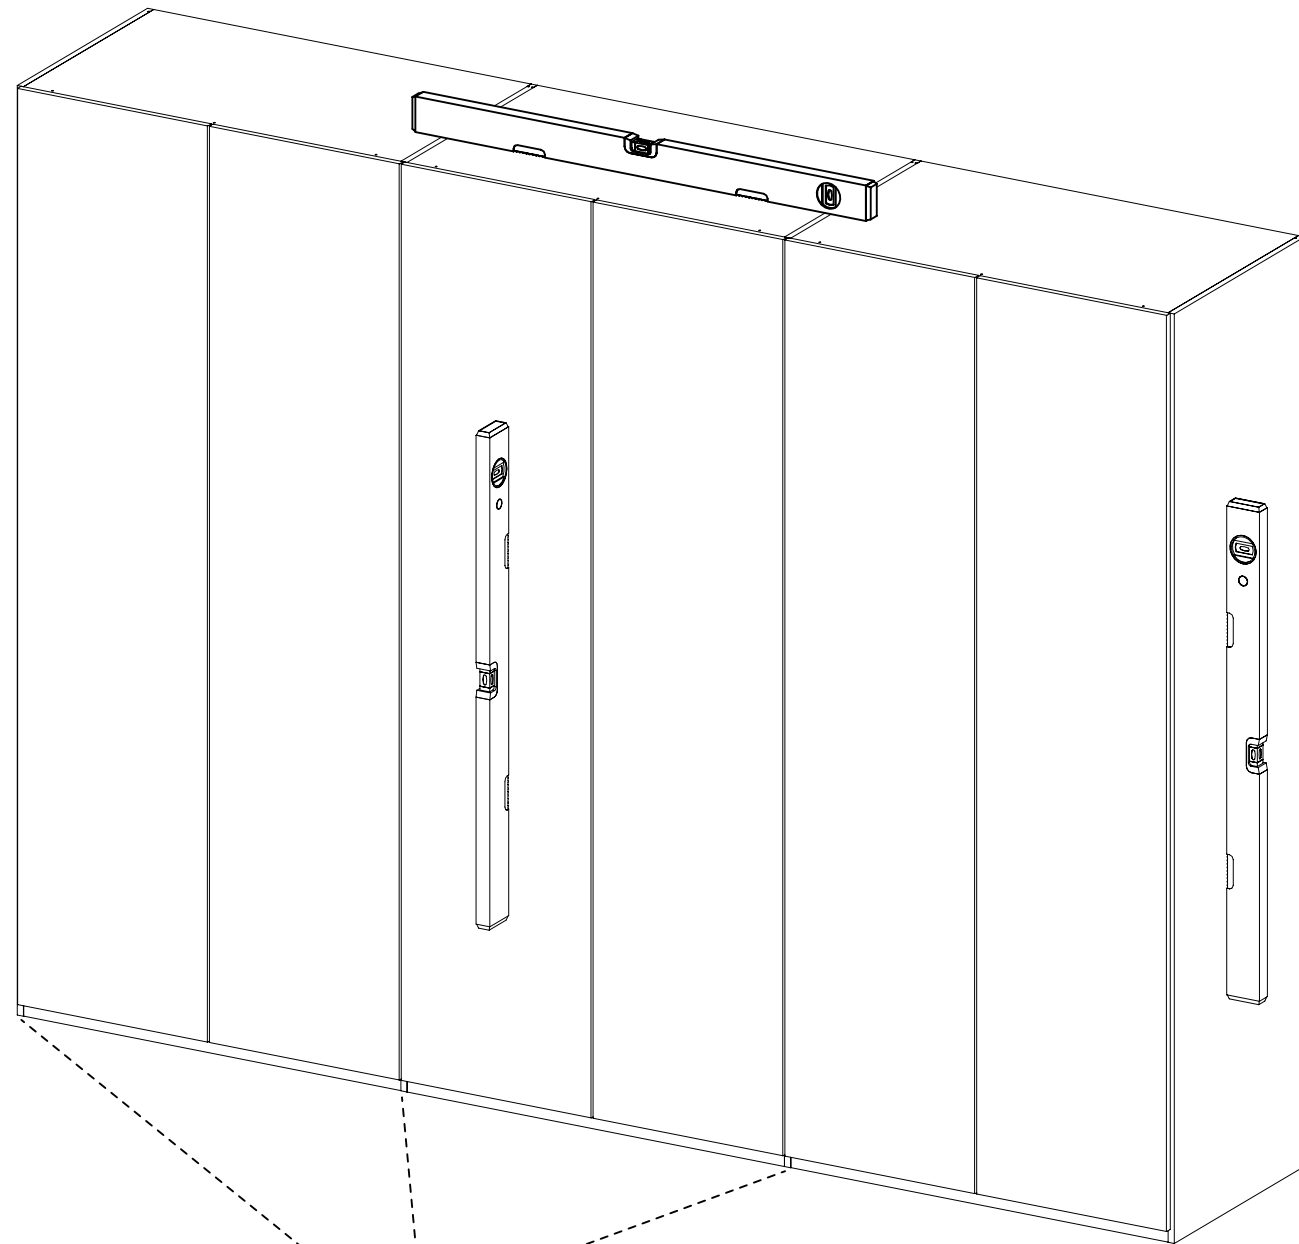

12

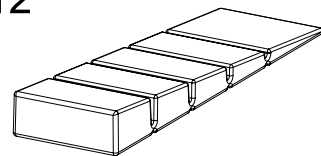

27

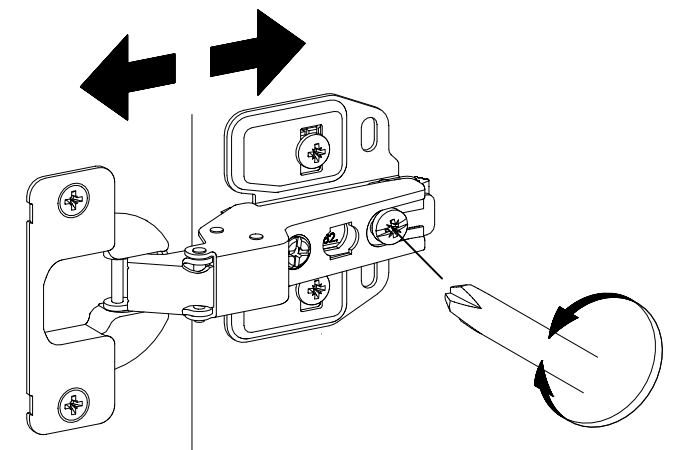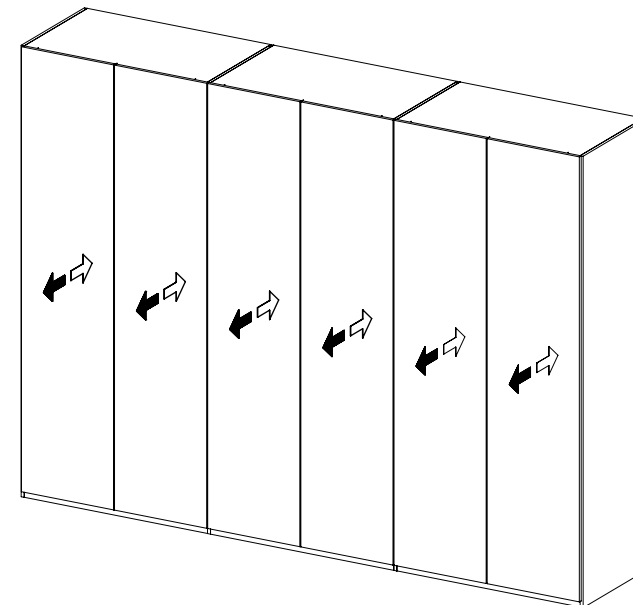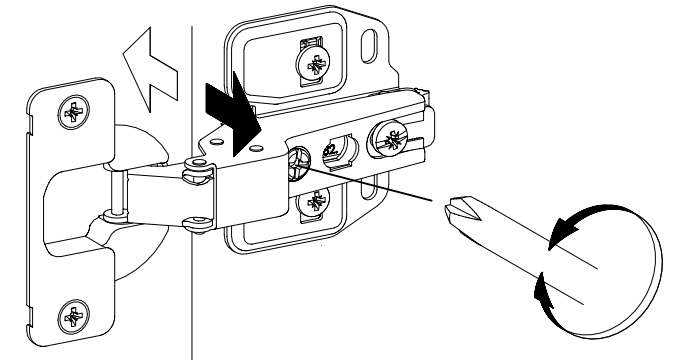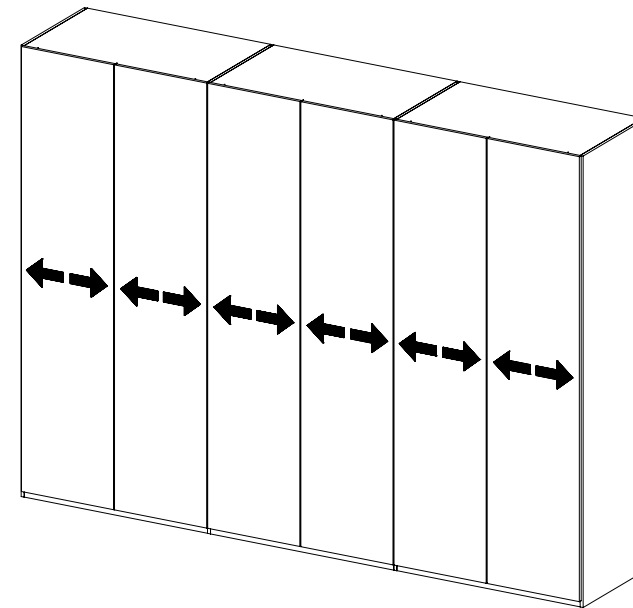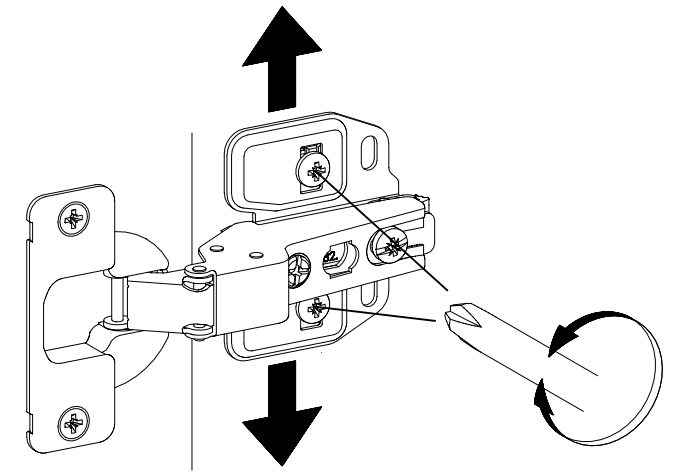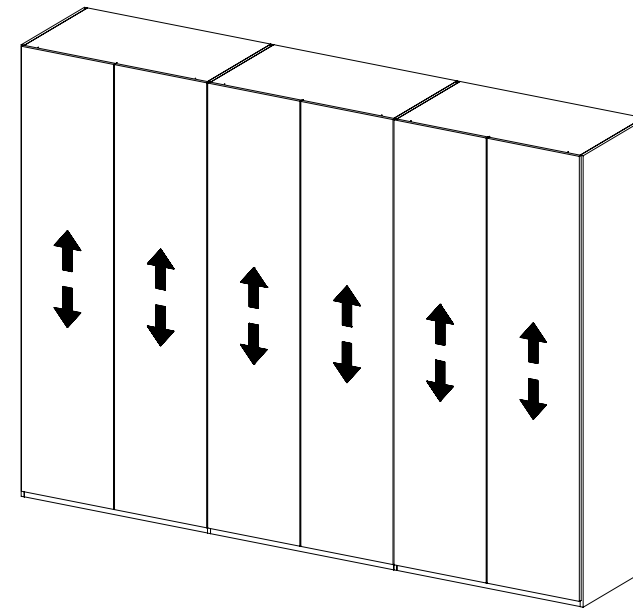


28


36-48x

621

4x13




1291

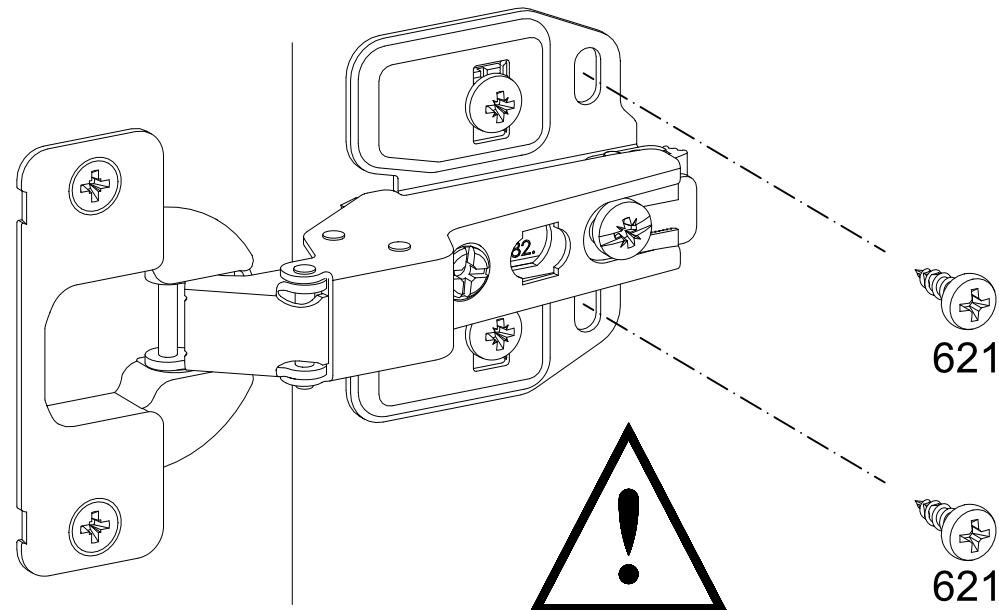

29

2x

68



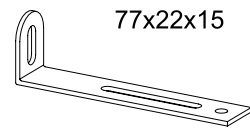





77x22x15

4x

201

4x15

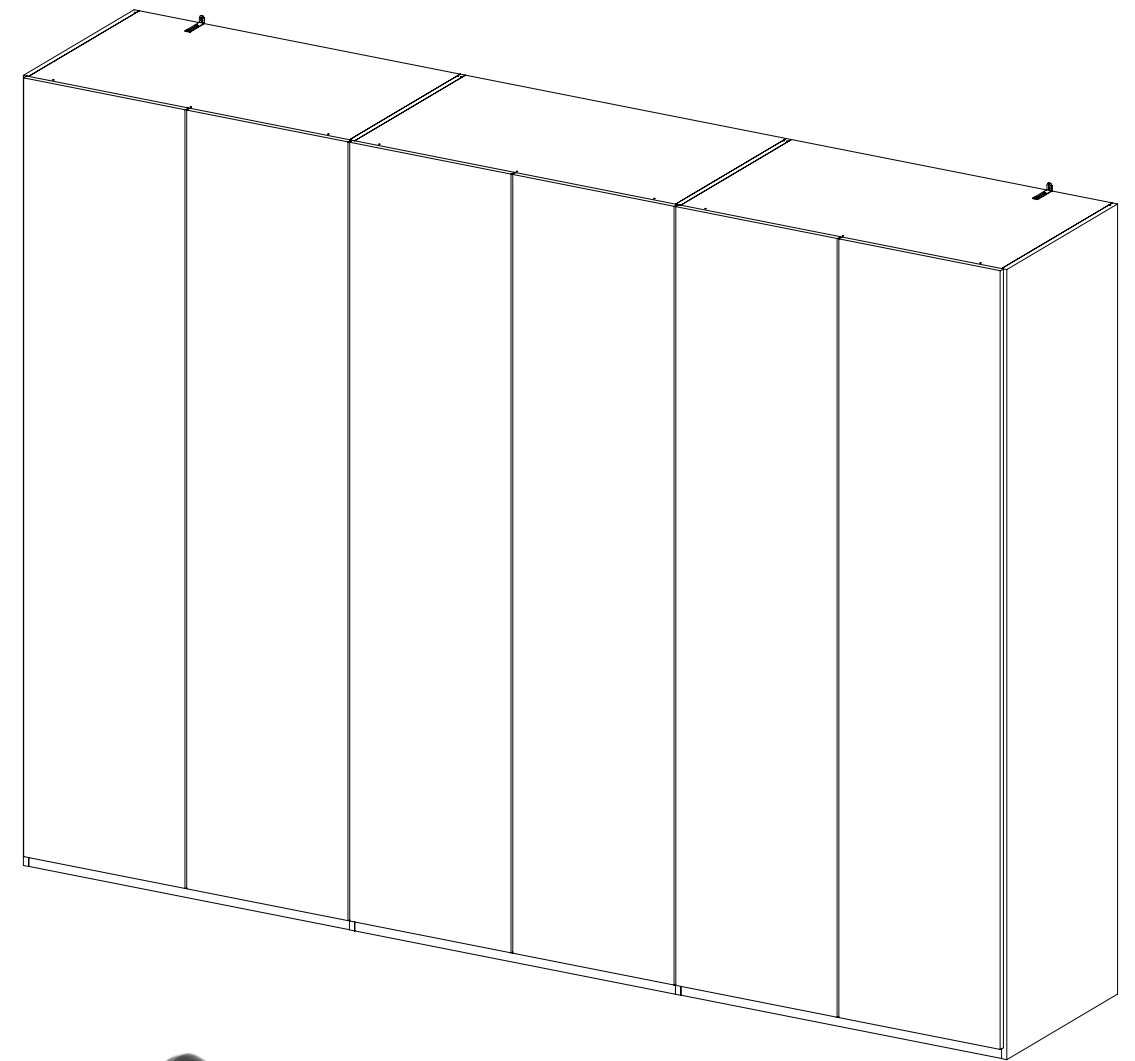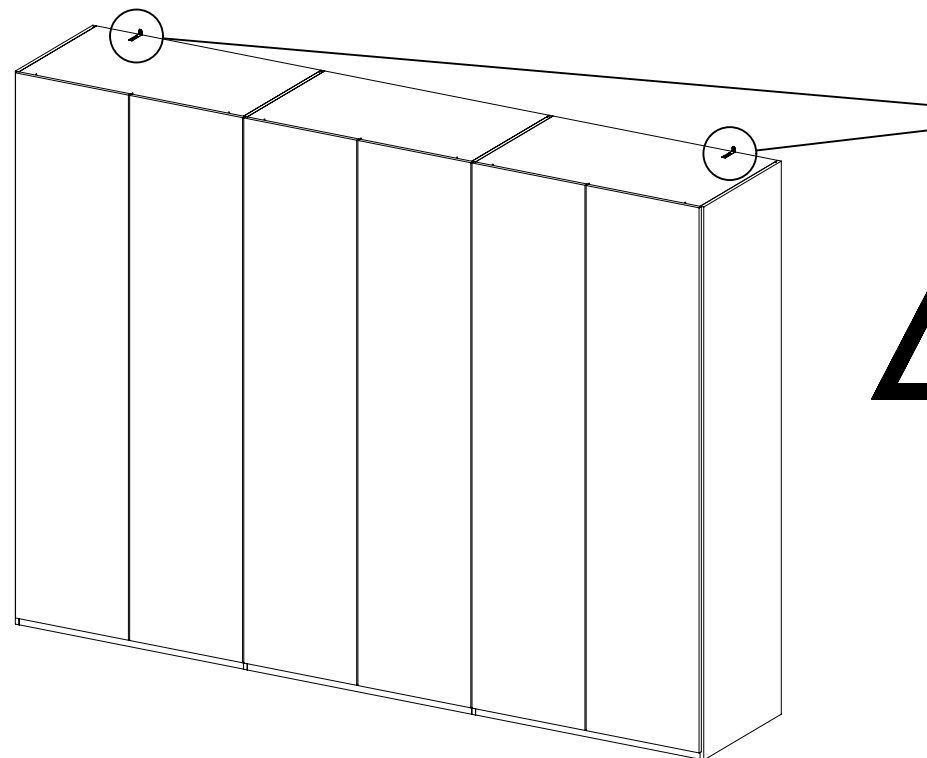



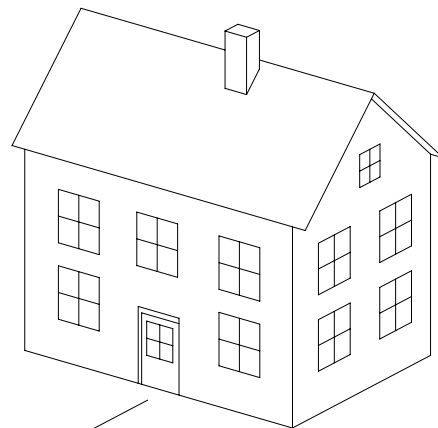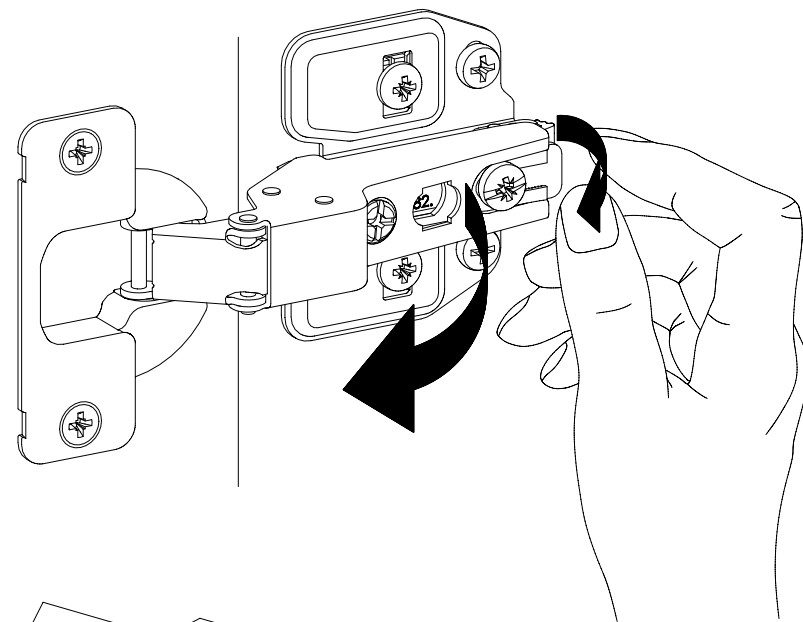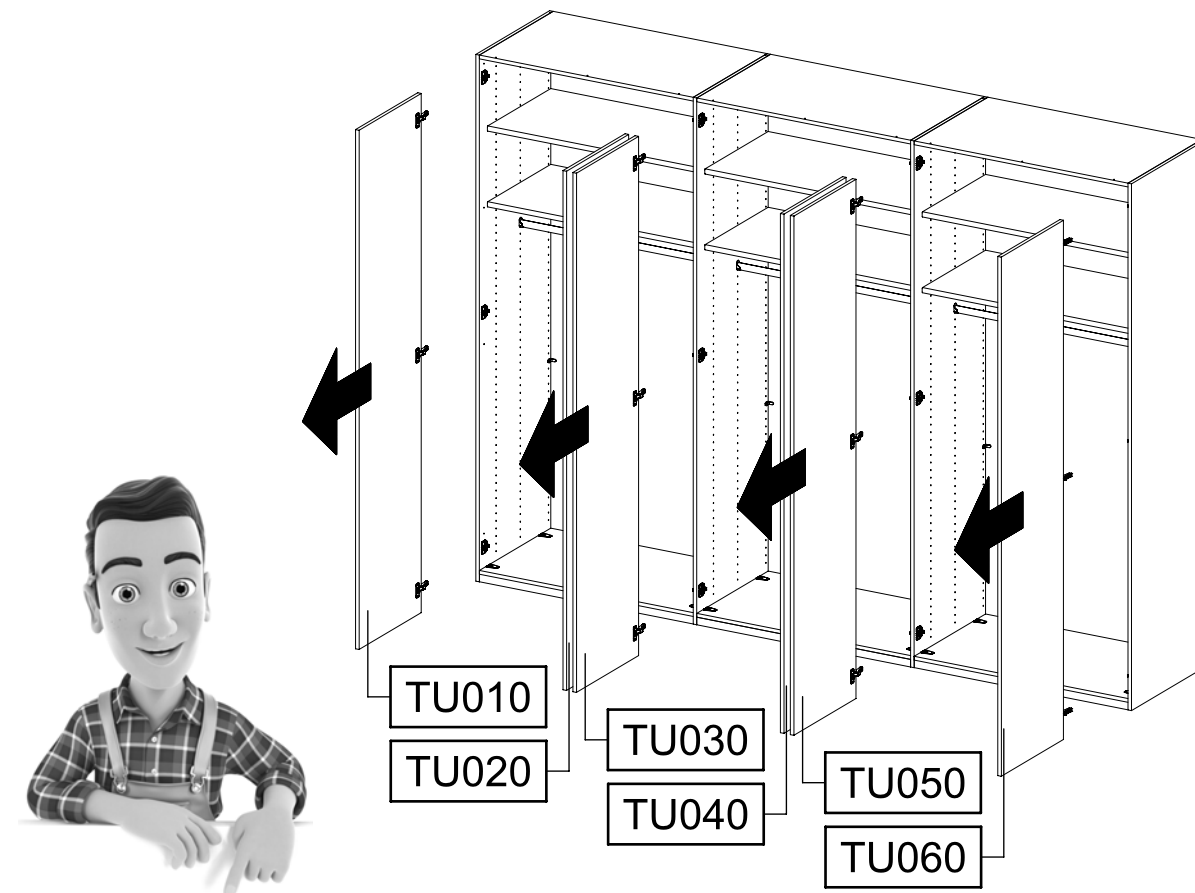

1.

ME190_02


rauch

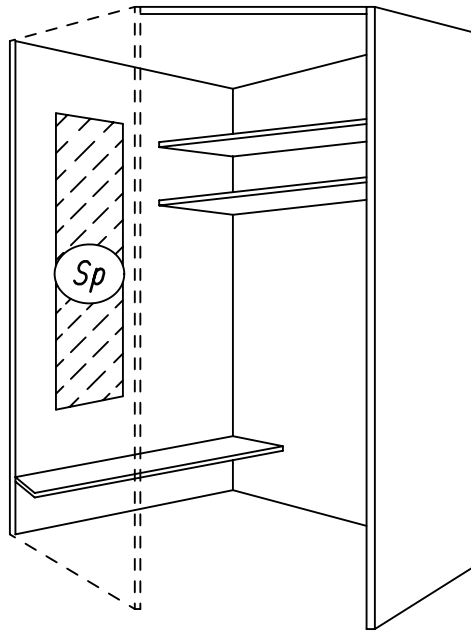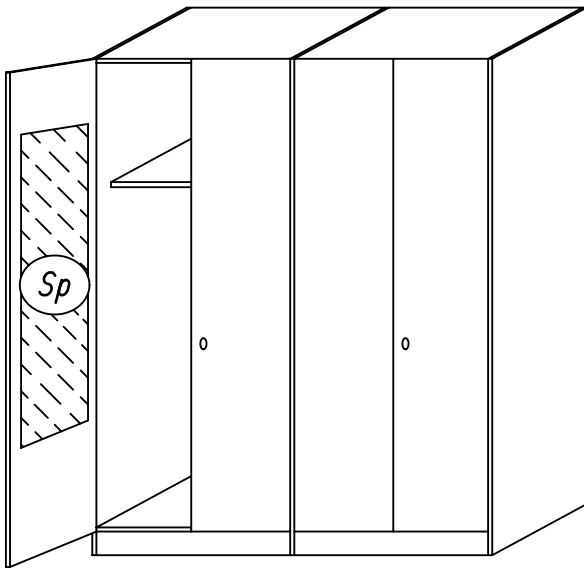

637




492




3x15


1

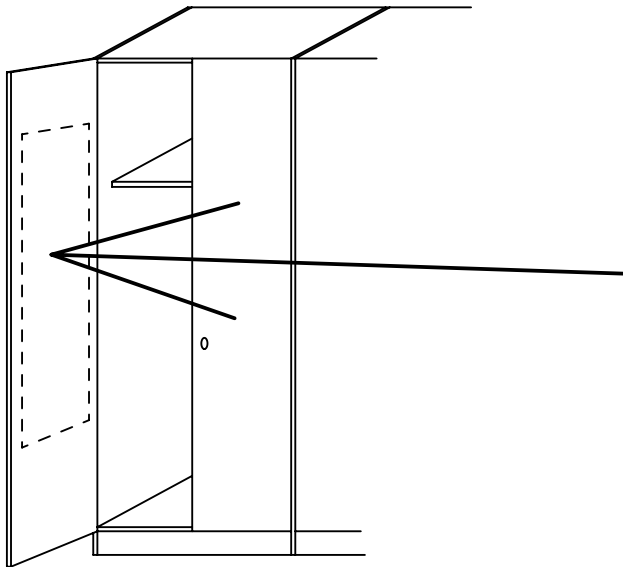



2

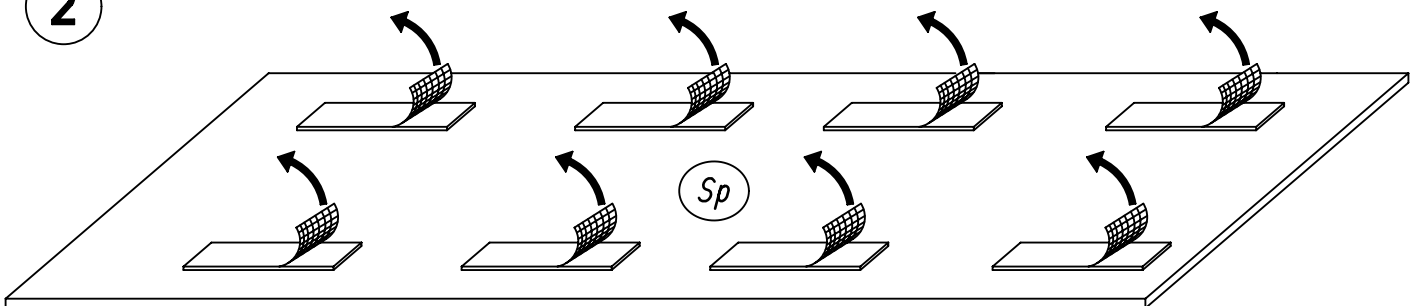

3



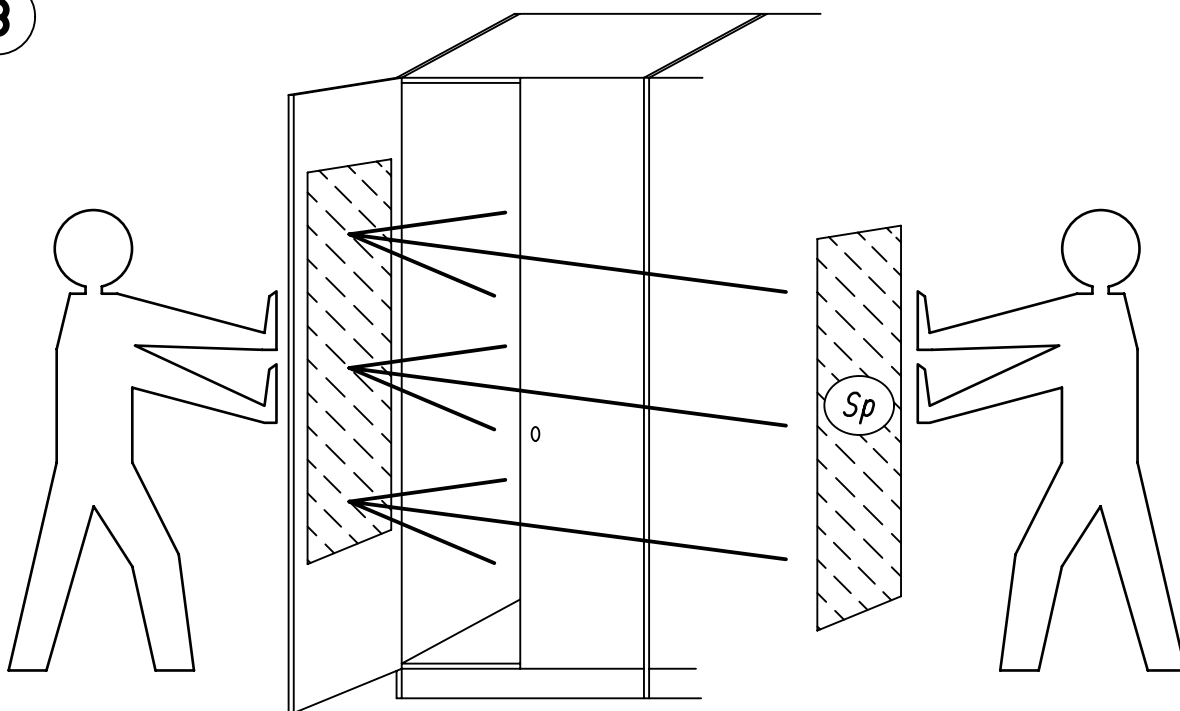


4


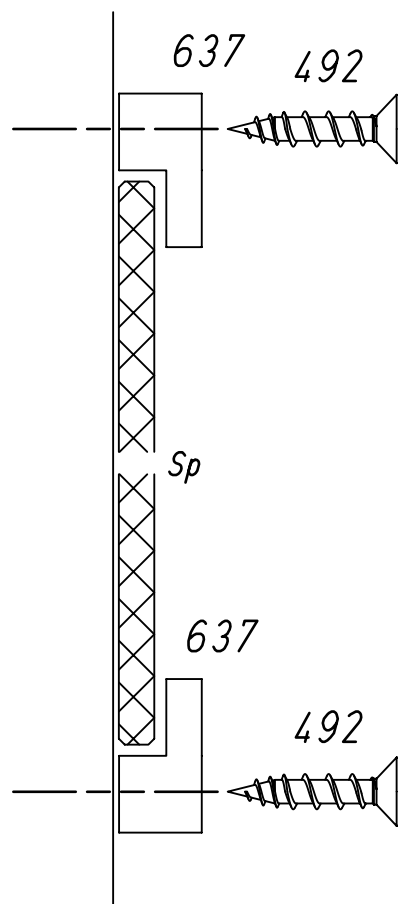
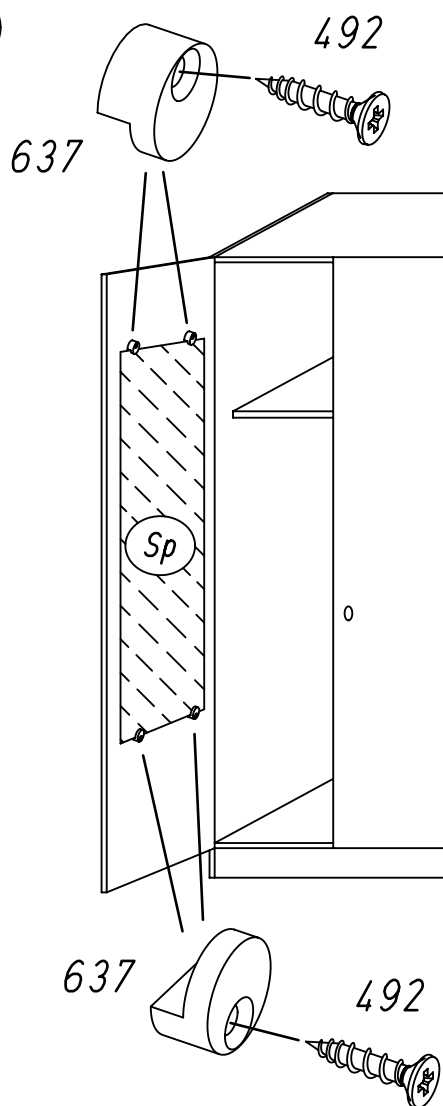


1.
ME 4 4 2

rauch

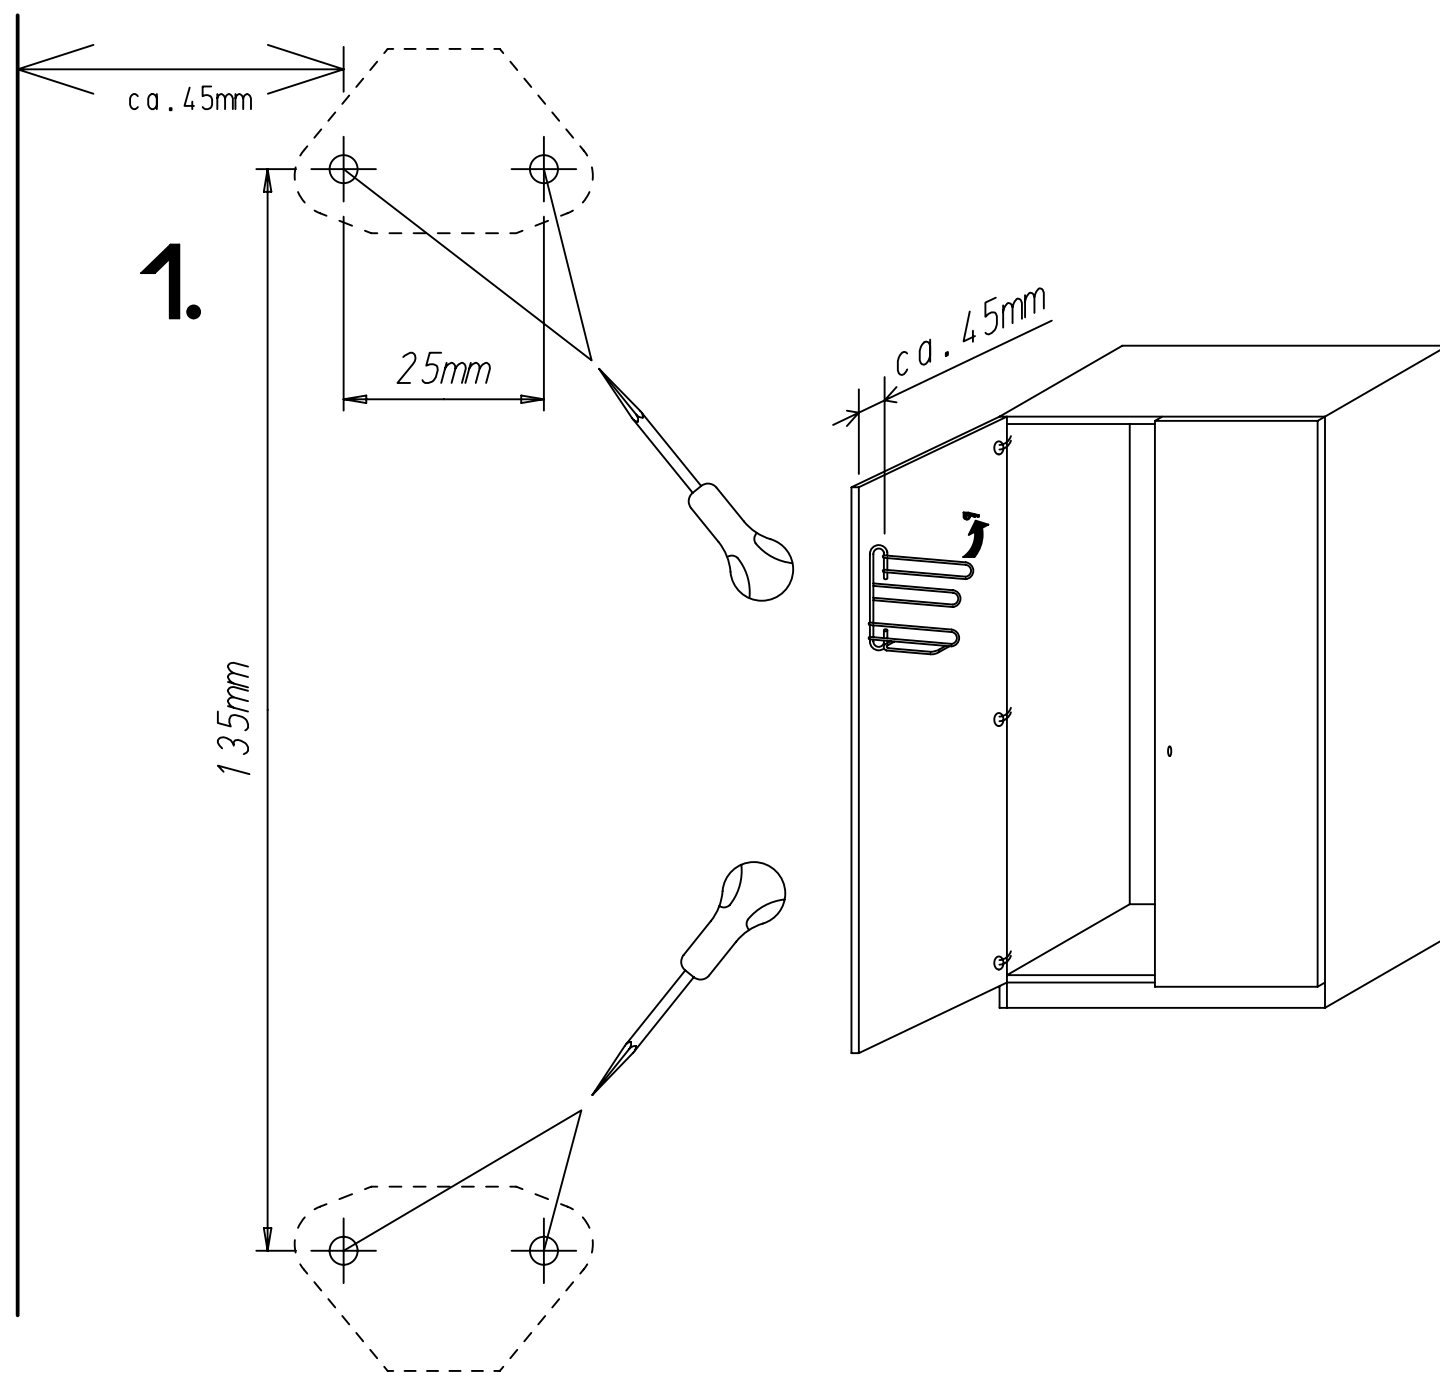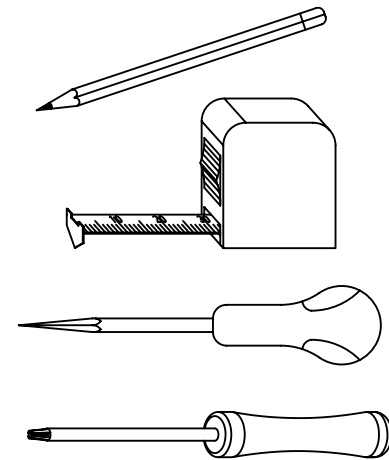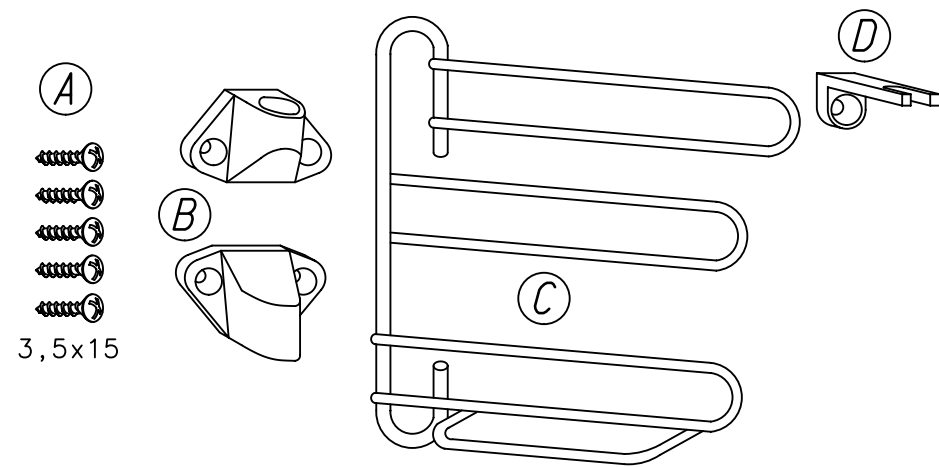

2.

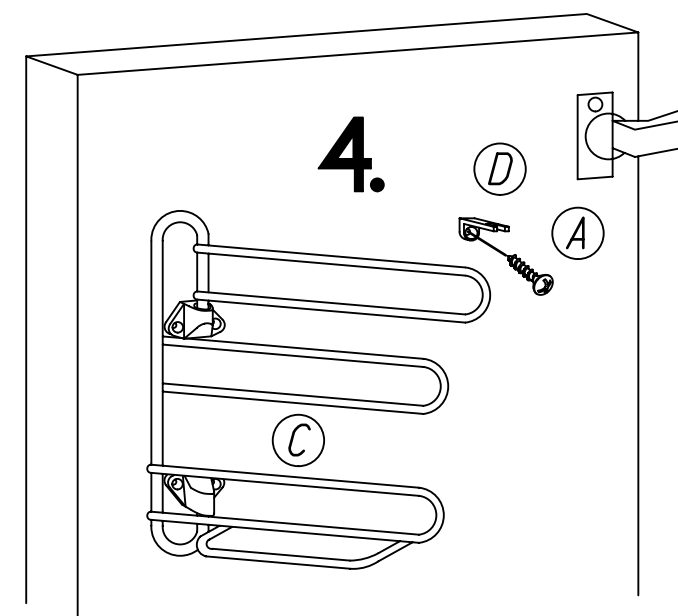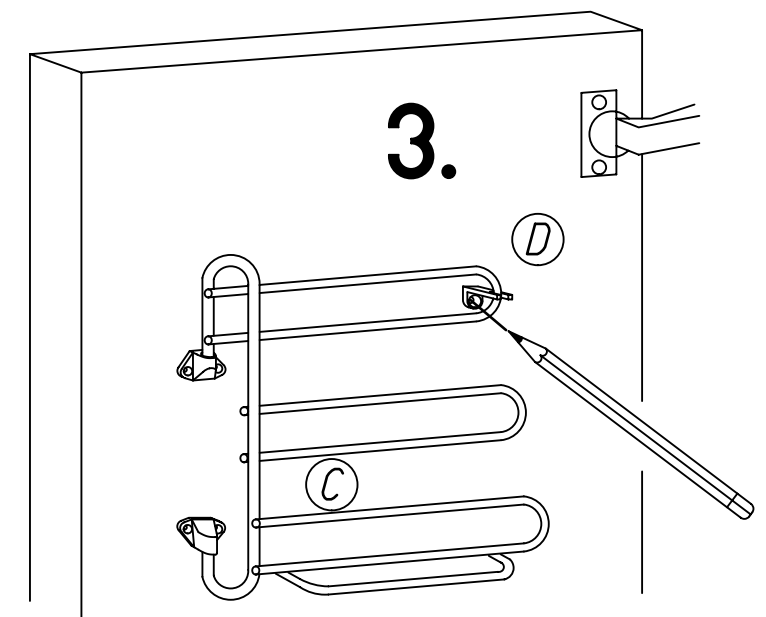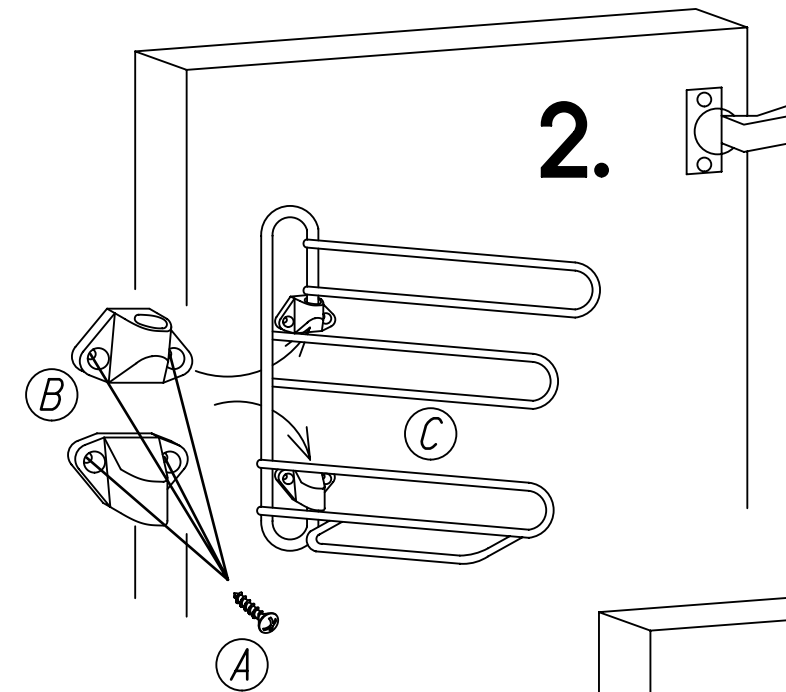

1.

MZ081_01

rauch

Kn

1

1.

Typ I

Typ II

2.



4x

70mm


70mm

2.



2

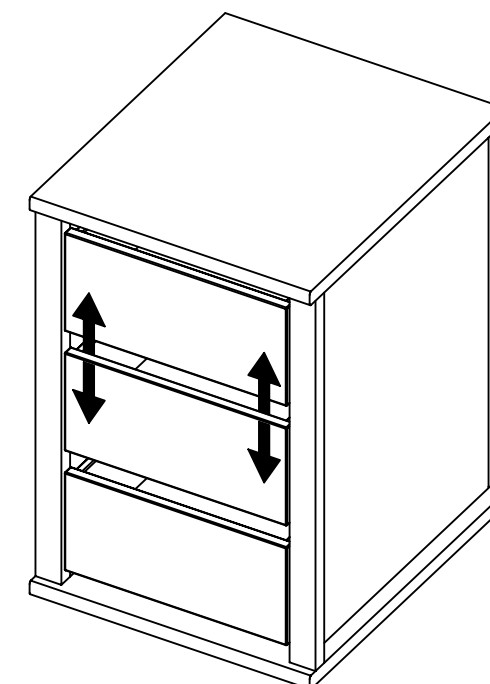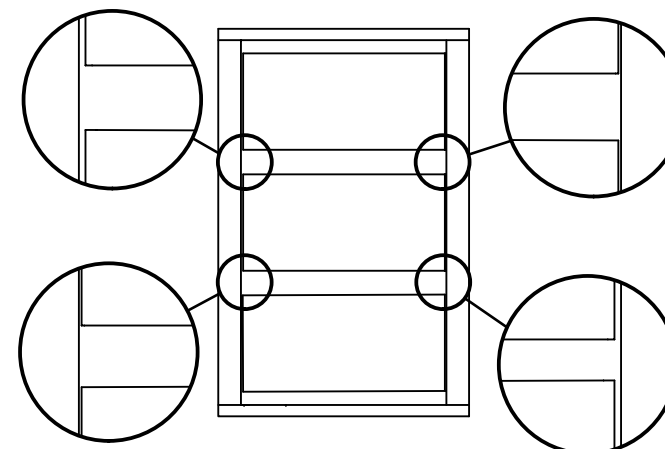

1.

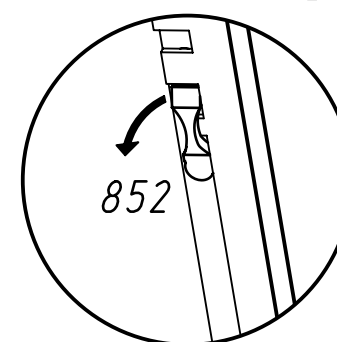


852

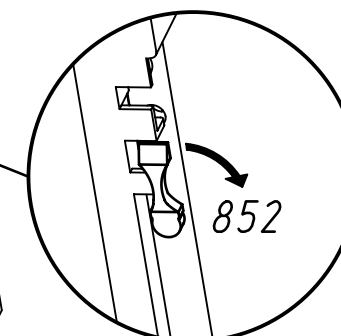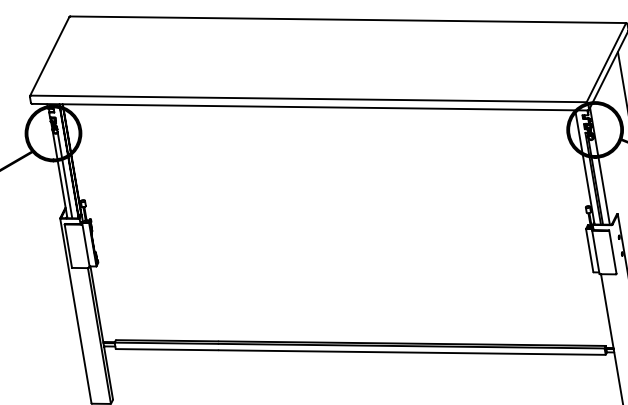


852


2.

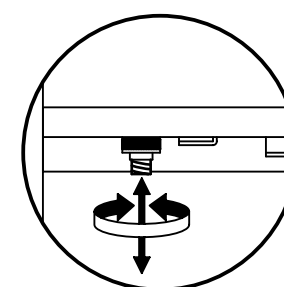



Sk

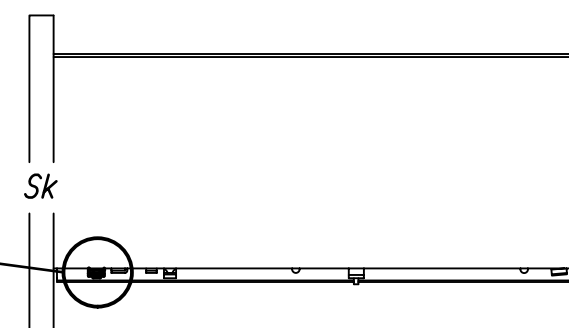

3.

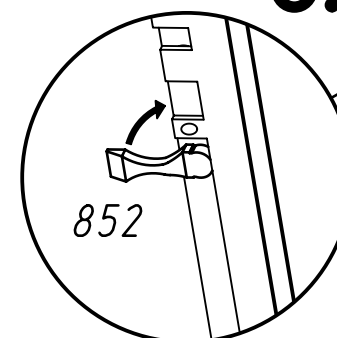

852

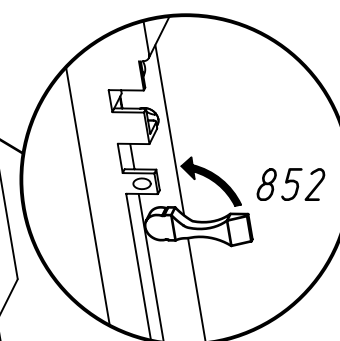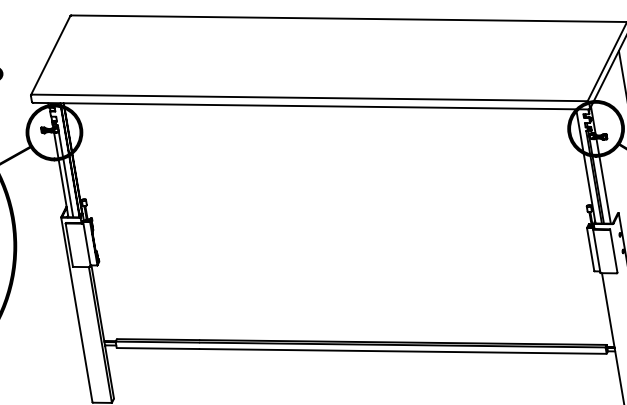


852

MZ081



Montageanleitung / Mounting Instruction – Nexis für Nexis Bänder / Nexis for Nexis hinges

Zuerst Türeinrichtungen vornehmen / Make door adjustments first



1

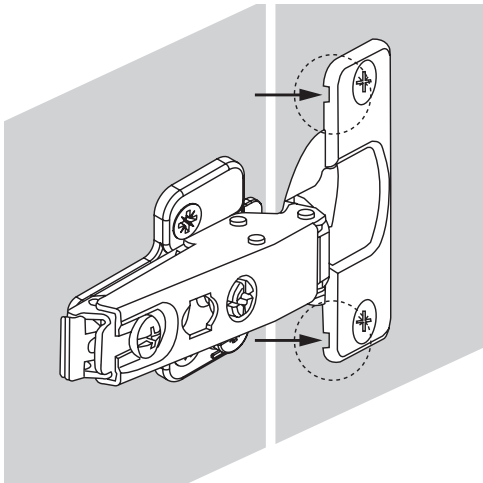



2

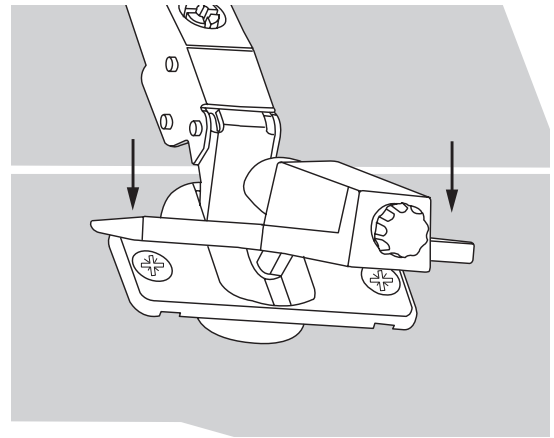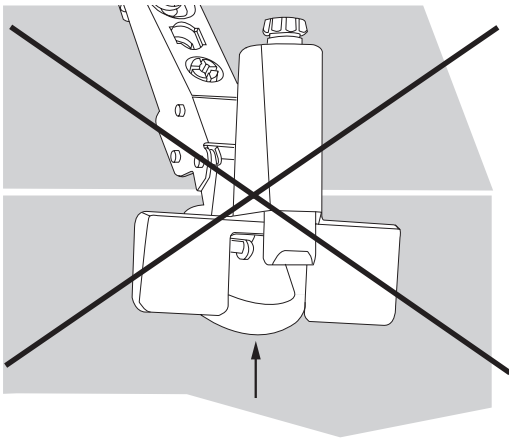

3

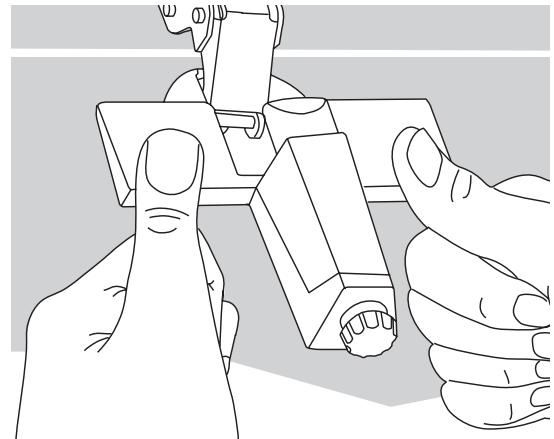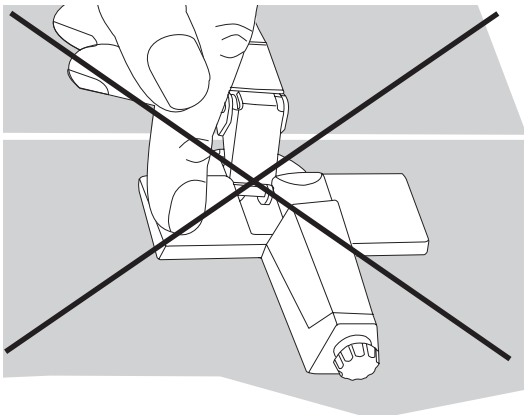

4

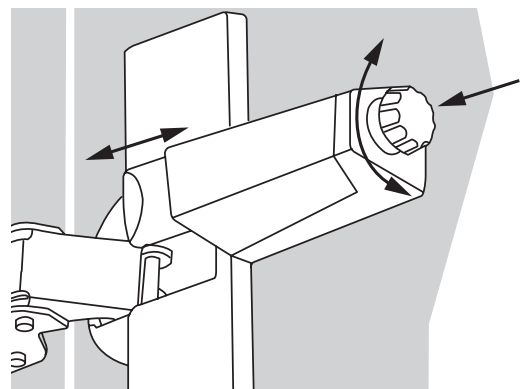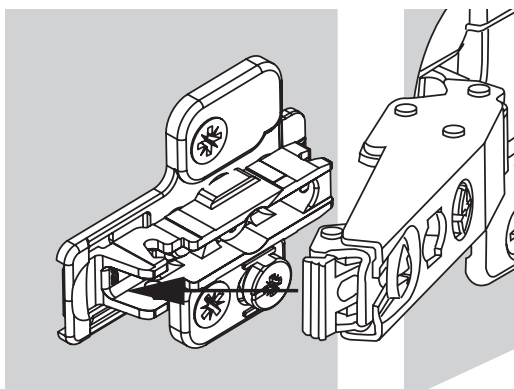

Demontage / Dismounting

