


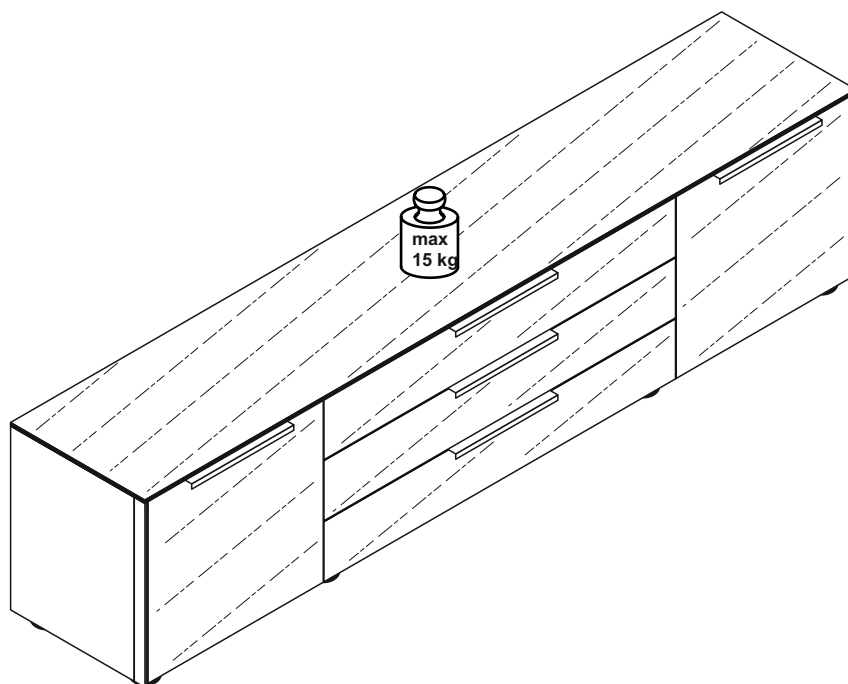

Versandtaschen
Colli 3/3



Artikel.-Nr.:


0771-LB_23

Montageanleitung.-Nr.:

MA1-00362

REPC-Nr.:	Service • Assistenza • Dienstverlening • Serwis Servis • Szerviz • Сервисная служба

0771-LB_23 GL 0-15

B01-10 4x	 6,3x50	B01-30 73x	 3x16	B01-70 6x	 3x30	B01-80 8x	 3,5x13
B01-90 4x	 3,5x20	B01-122 6x	 4x13	B01-200 22x	 6,3x13	B02-08 12x	 h=10mm
B02-10 16x	 h=12mm	B02-20 28x	 4x13	B02-103 12x	 8x30	B02-160 8x	



SCAN ME


0771-LB_23 0-25

B03-07 2x		B03-11 4x		B03-42 4x	 8er
--------------	---	--------------	---	--------------	---

BT1-00005


B01-123 16x	 4x15	B02-173 8x		
----------------	---	---------------	---	---

0771-LB_23 0-45


B05-01 8x		B05-130 2x	 LEIM	B05-185 4x		B05-280 1x		B06-423 5x	
--------------	---	---------------	--	---------------	---	---------------	---	---------------	---

0771-LB_23 0-55


B01-36 4x	 4x40
--------------	--




Colli 1/3




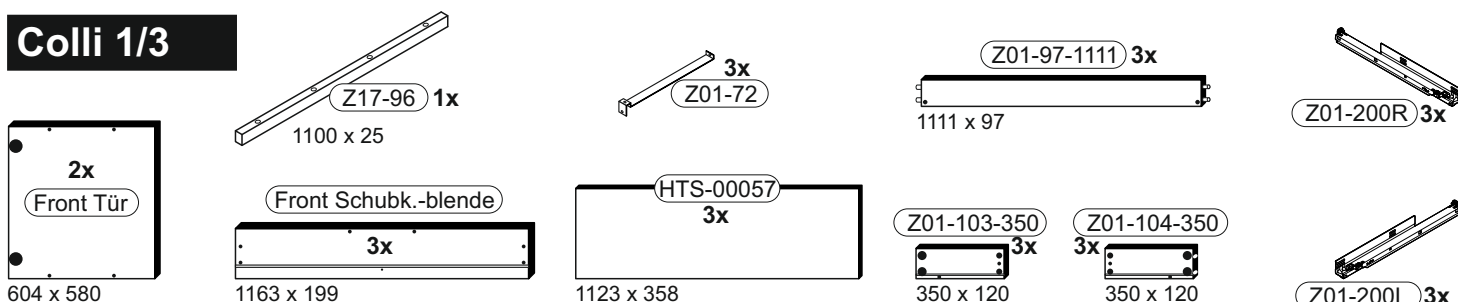


Colli 2/3

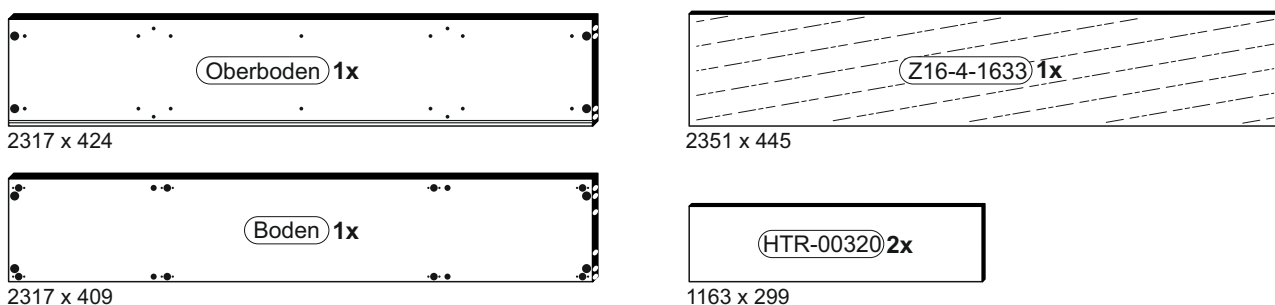

Colli 3/3

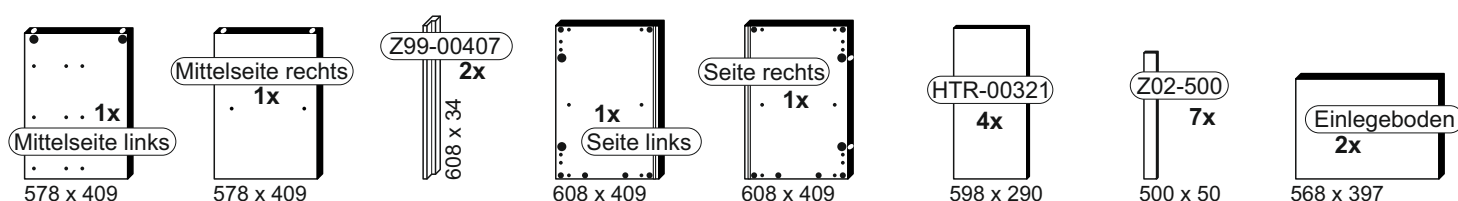

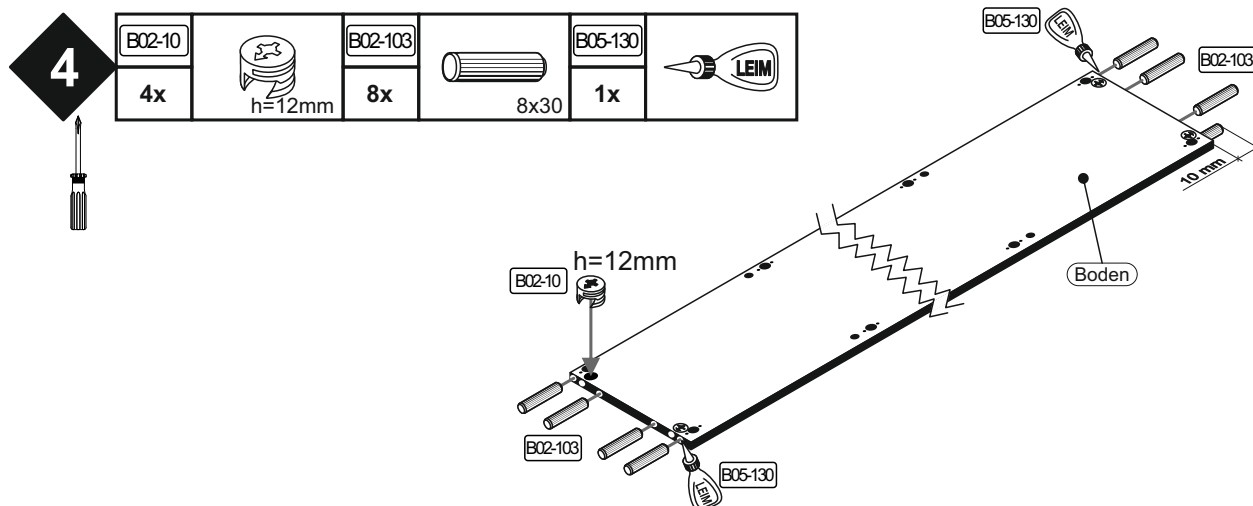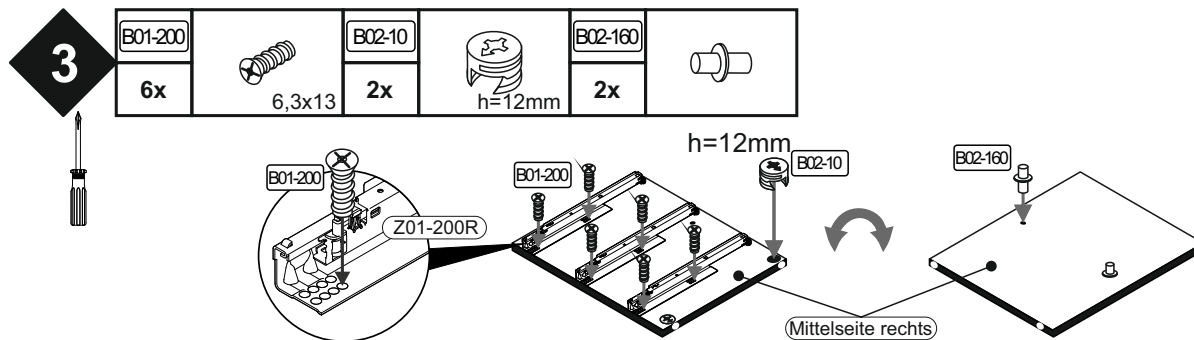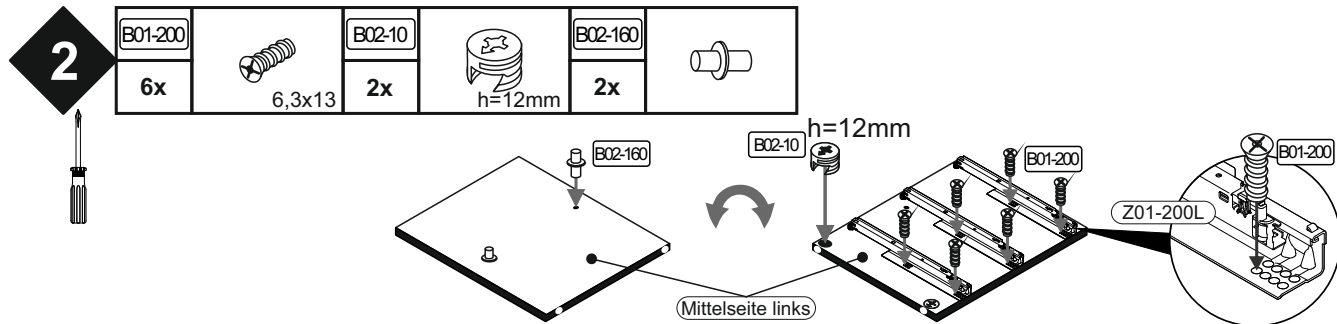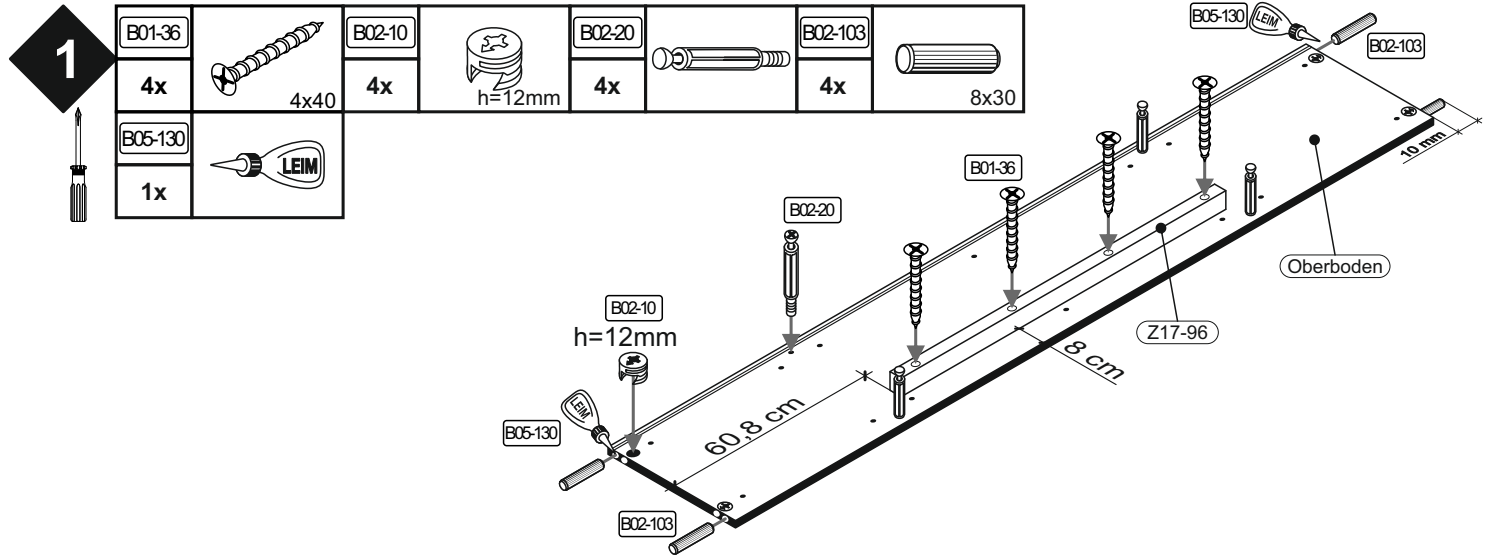

CHICAGO


5

B02-20

4x





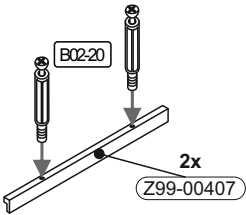

6

B02-10

2x



h=12mm

B02-20

4x

B03-11

2x


B02-160

2x







1

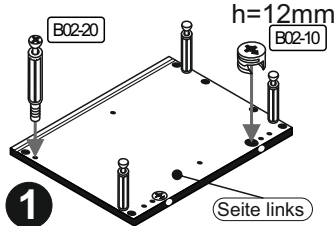

2

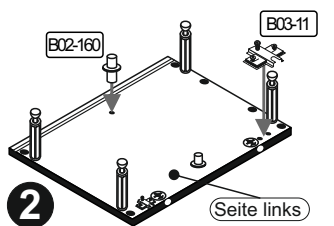

3

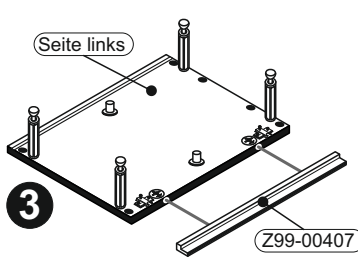

7

B02-10

2x



h=12mm

B02-20

4x

B03-11

2x


B02-160

2x







1

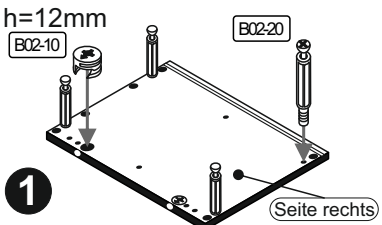

2

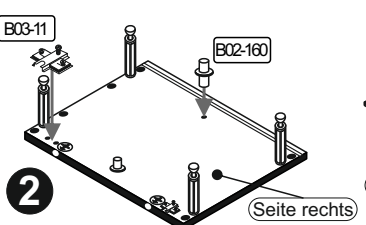

3

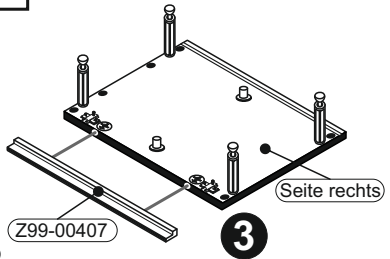

8

B01-80

8x



3,5x13


B03-42

4x



8er



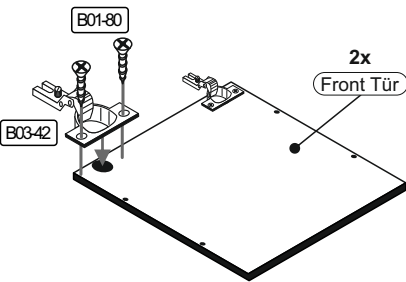

9

B01-200

6x



6,3x13

B02-08

12x




h=10mm

B02-20


12x

B06-423


3x





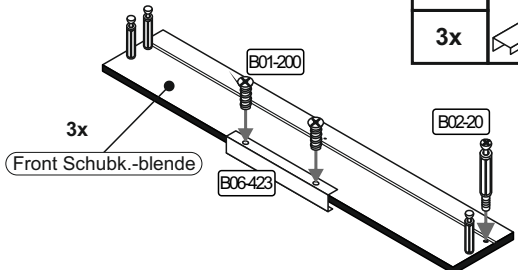

3x

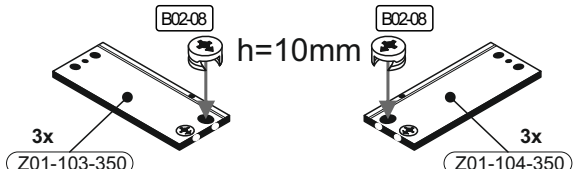


4

10




B01-30		B01-70	
39x	3x16	6x	3x30
B01-122			
6x	4x13		

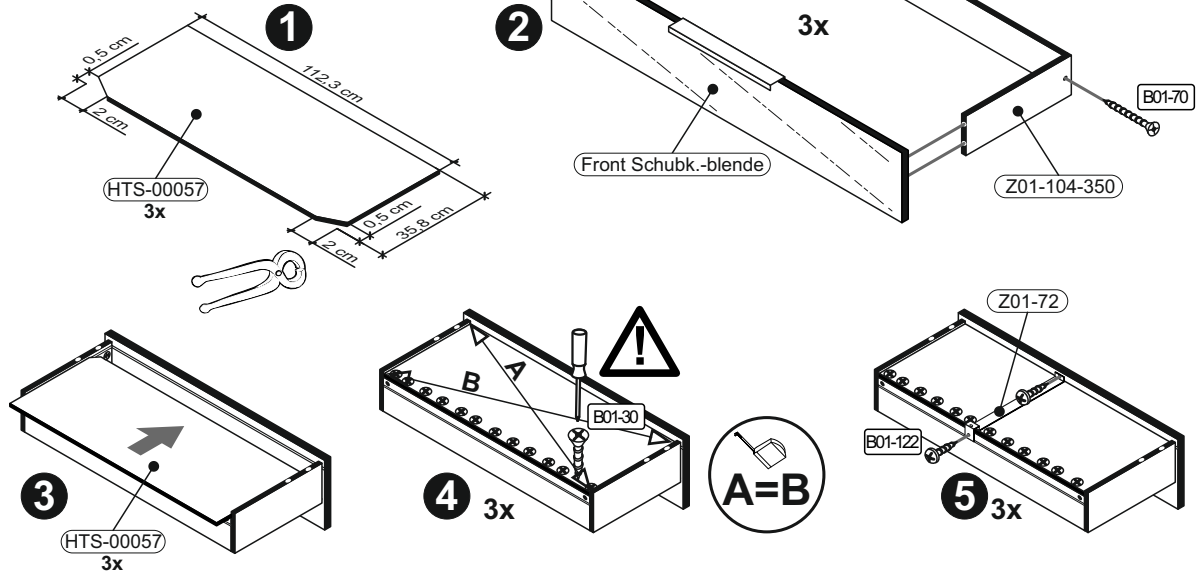



11





B01-10		B05-130	
4x	6,3x50	1x	
			LEIM

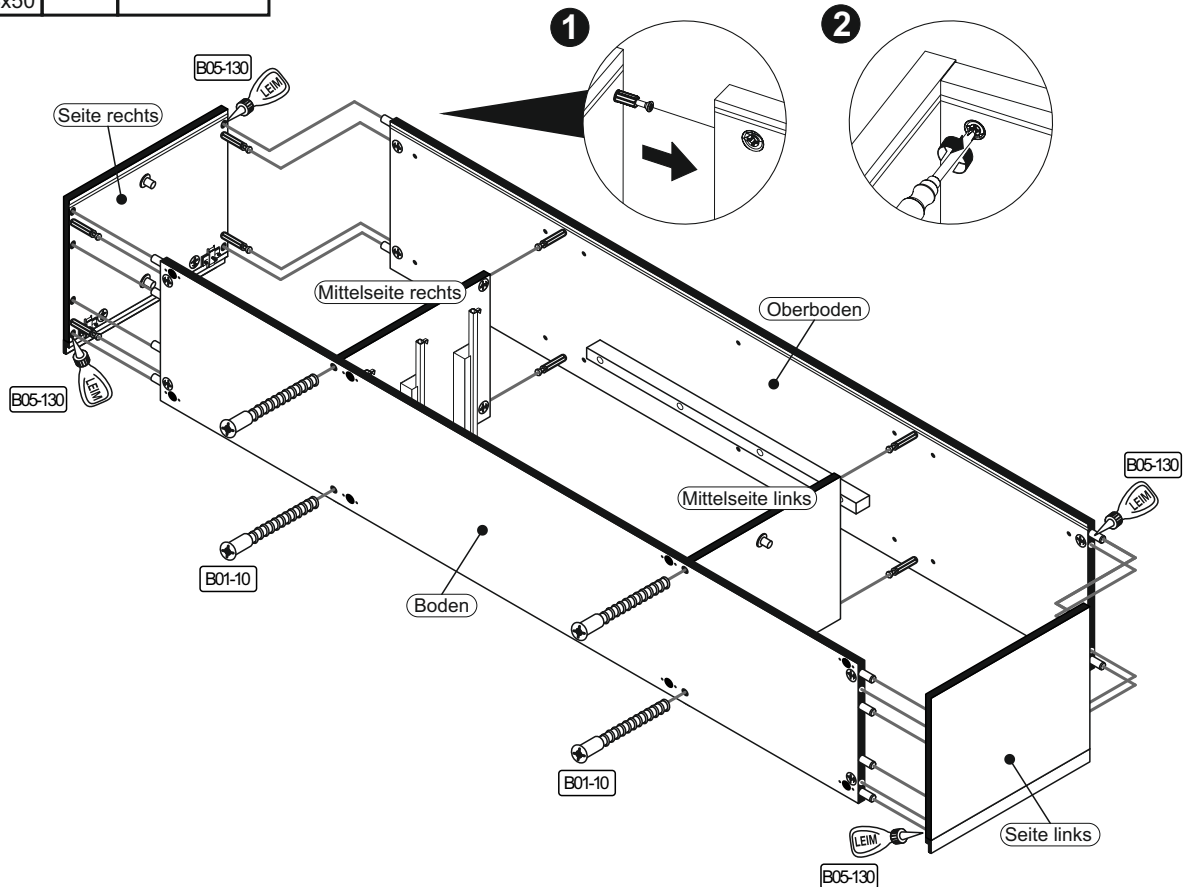

CHICAGO

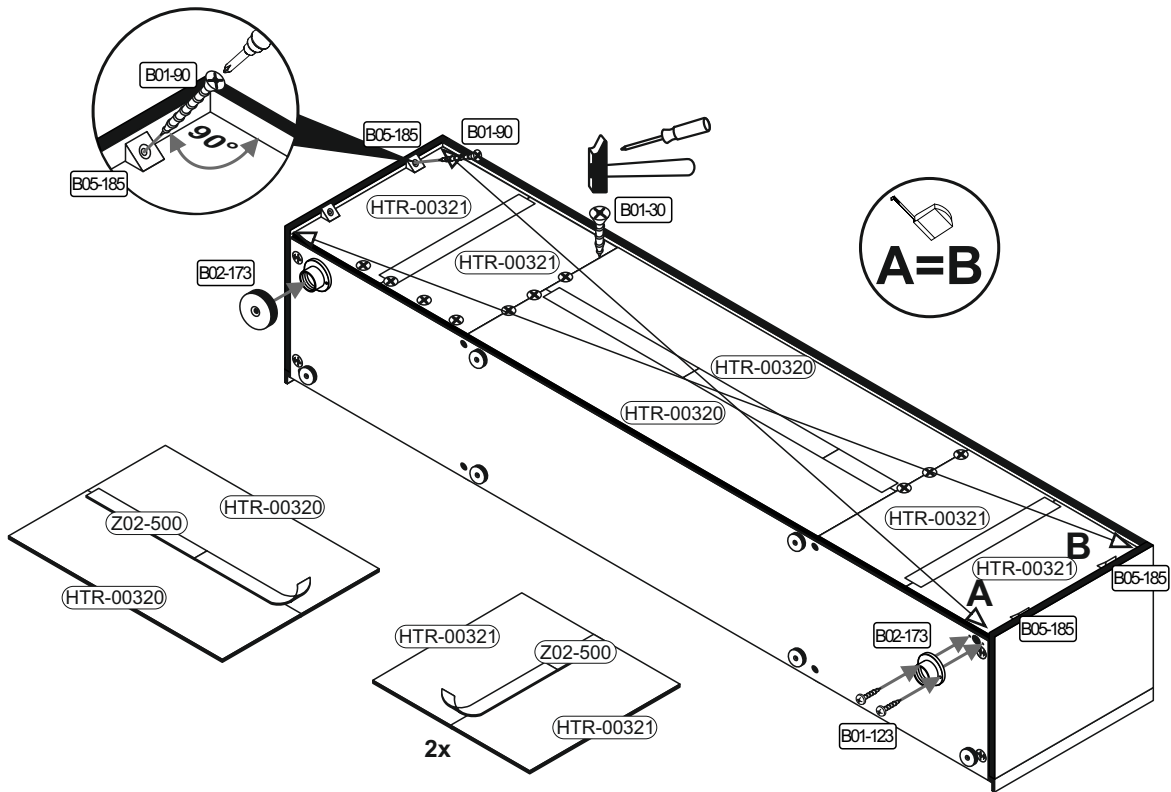


13

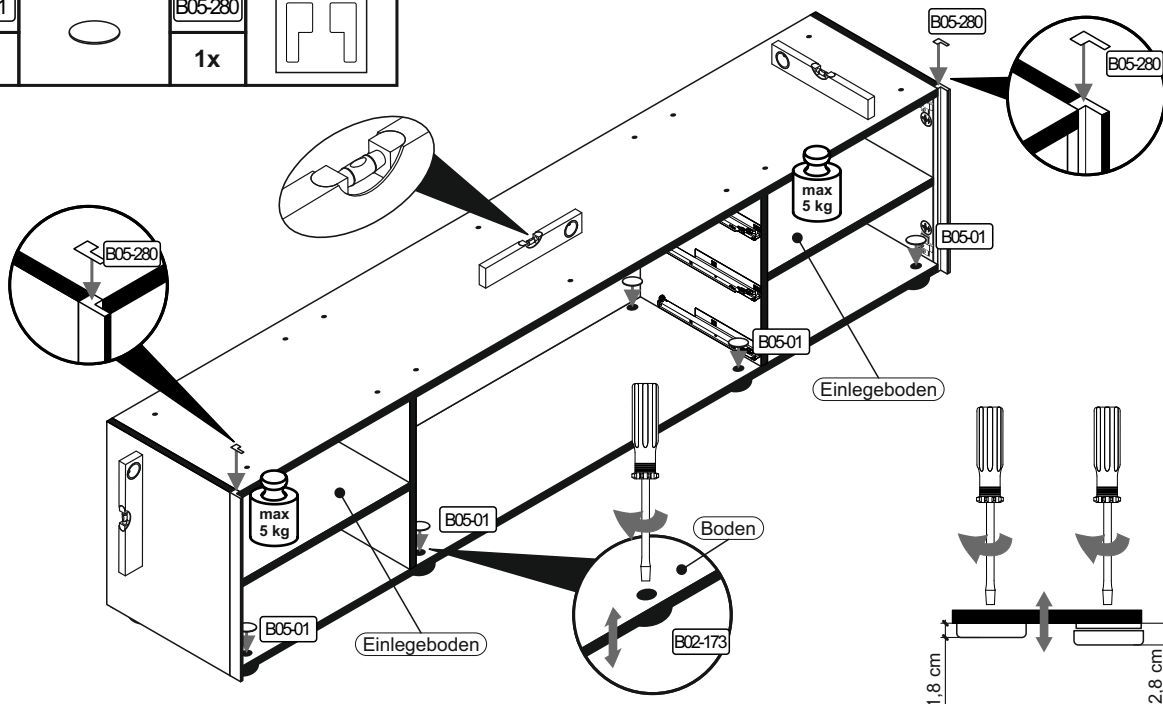


Höhenverstellung der Möbelfüße

14



Einbau des Schubkastens

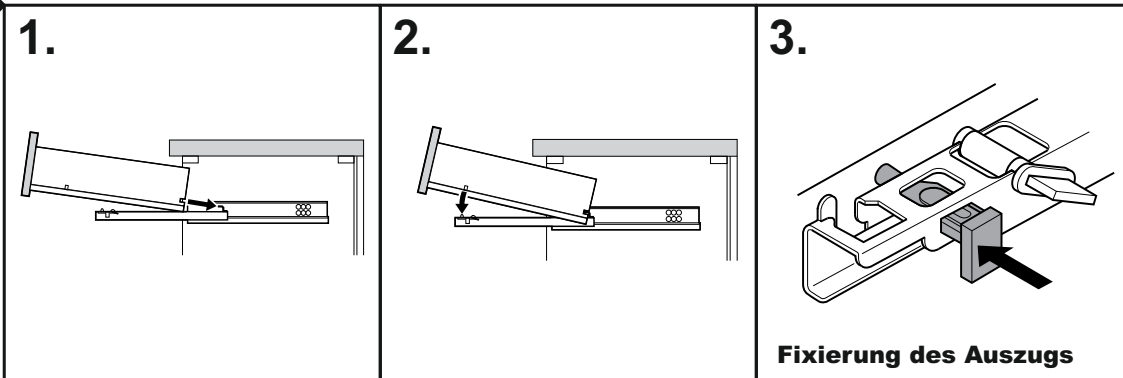


Ausbau des Schubkastens

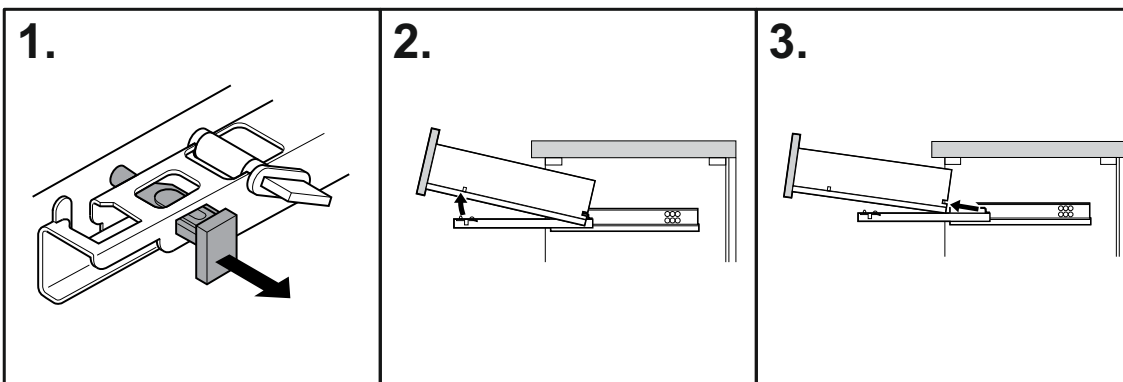





Höhenverstellung des Schubkastens

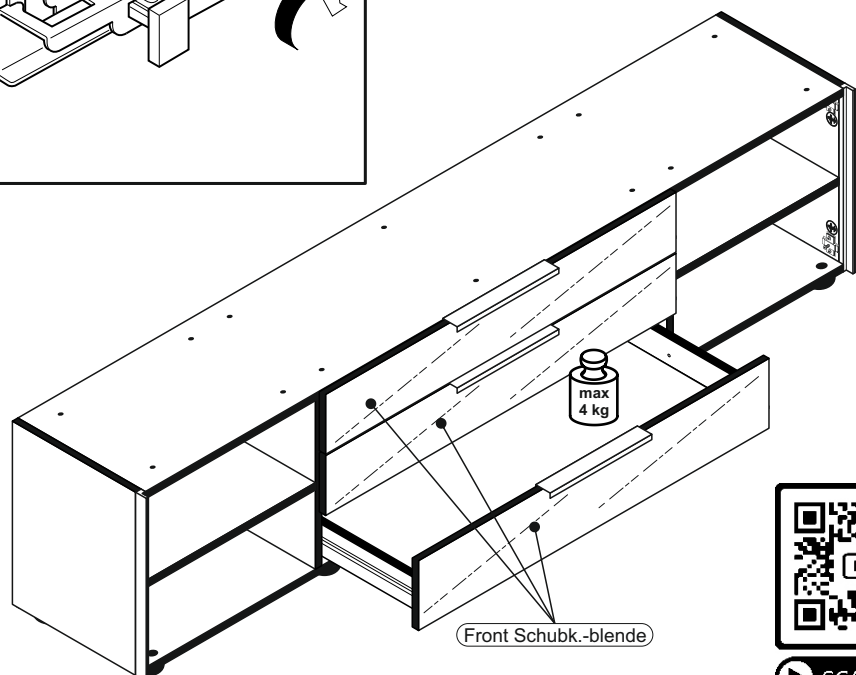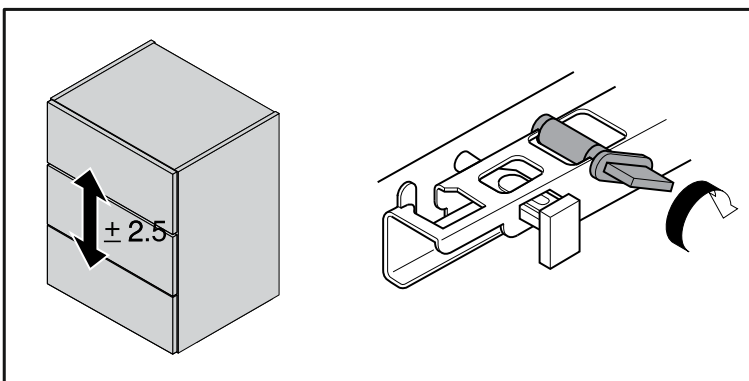

SCAN ME

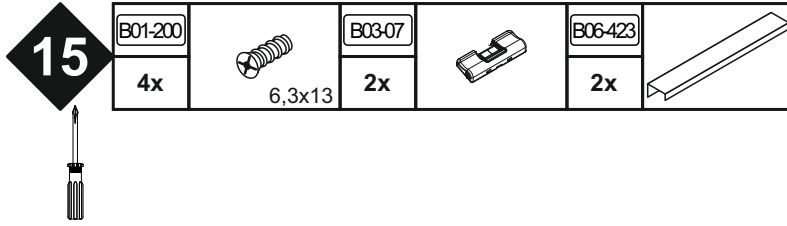

Montage der Tüрдämpfung

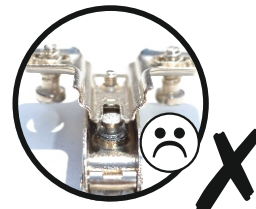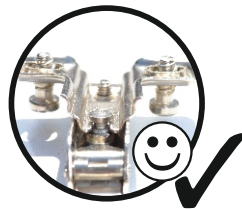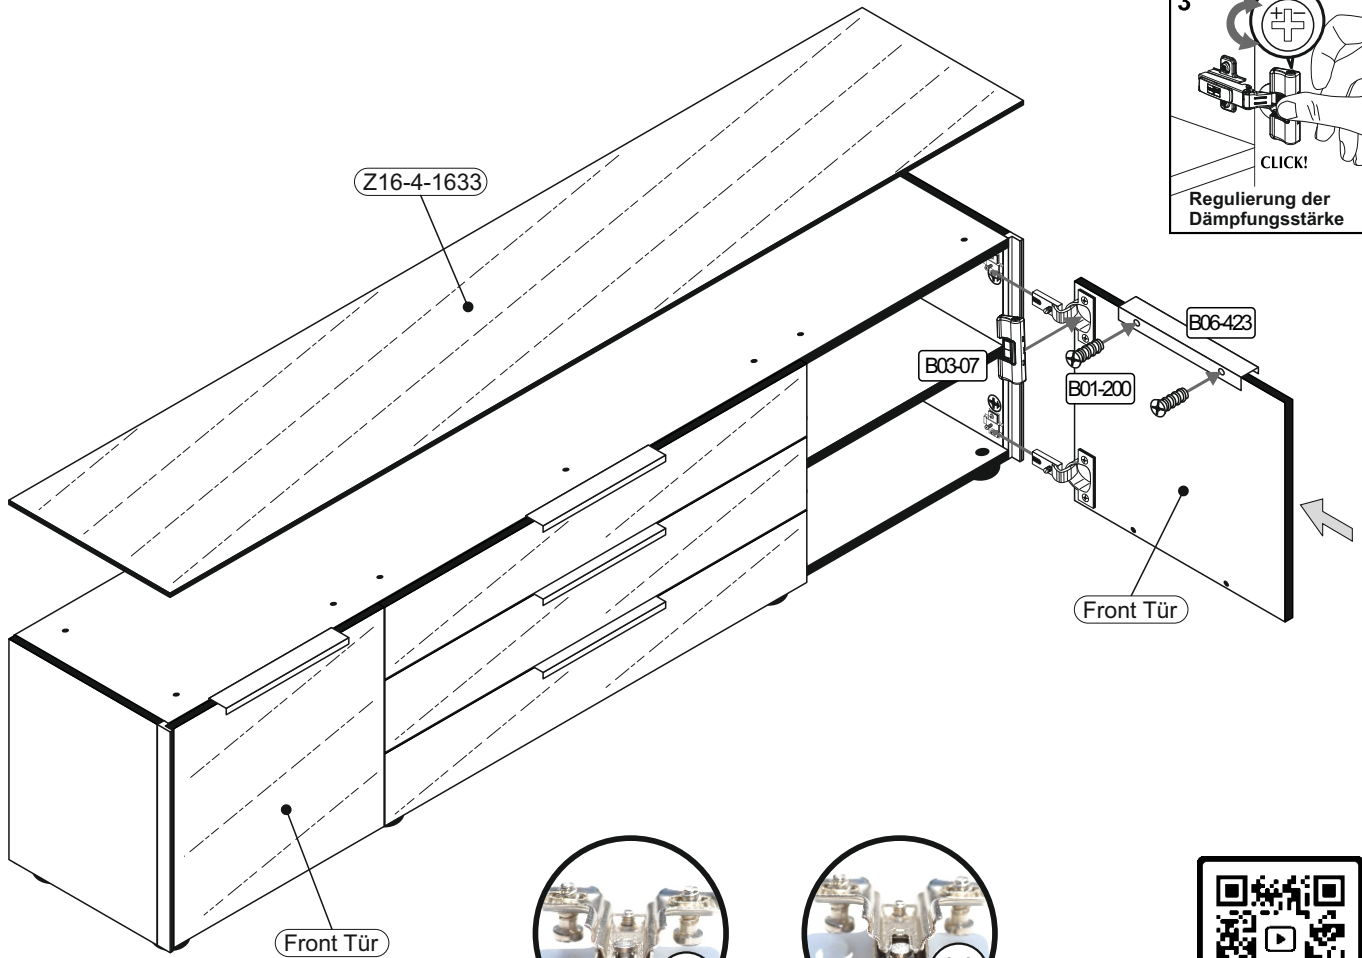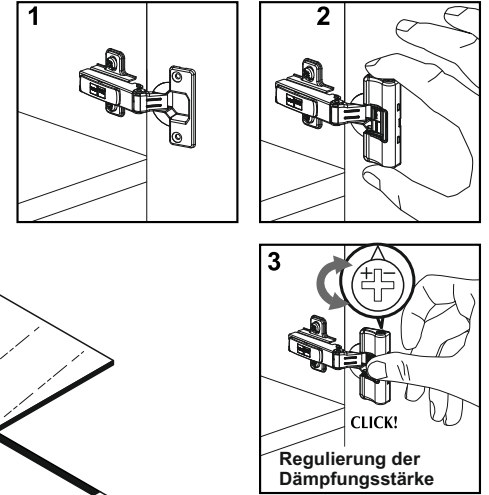

SCAN ME

Türen einstellen (Scharniere justieren)
Adjusting the doors (adjusting the hinges)
Régler les portes (ajuster les charnières)
Sistemare le porte (regolare le cerniere)
Deuren instellen (scharnieren afstellen)
Nastawić drzwi (wyregulować zawiasy)
Vyrovnejte dvířka (seřid'te závěsy)
Nastavenie dverí (nastavenie závesov)
Állítsa be az ajtókat (állítsa be a zsanérokot)
Reglare uși (ajustare balamale)
Kapıların ayarlanması (menteşelerin seviye ayarı)
Регулировка дверей (регулировка шарнира)

