
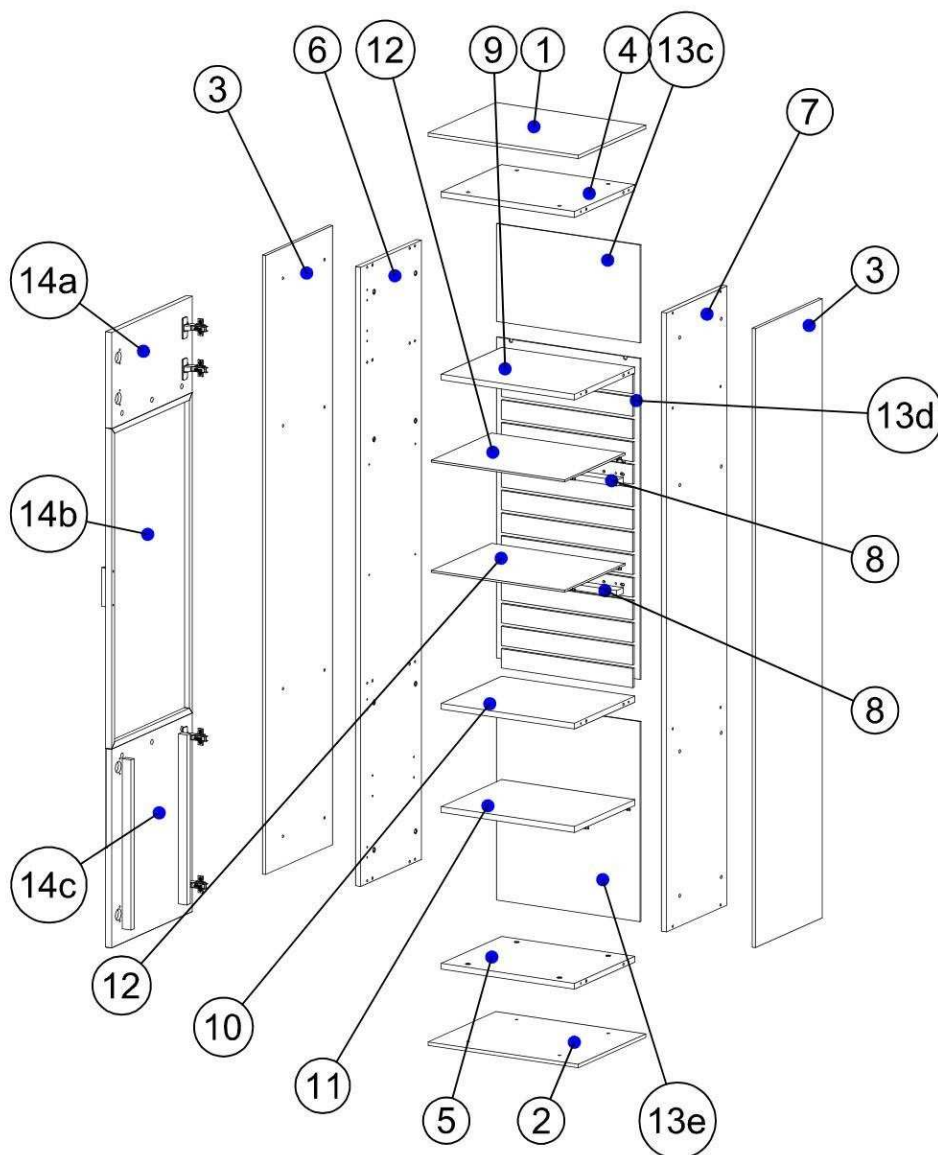
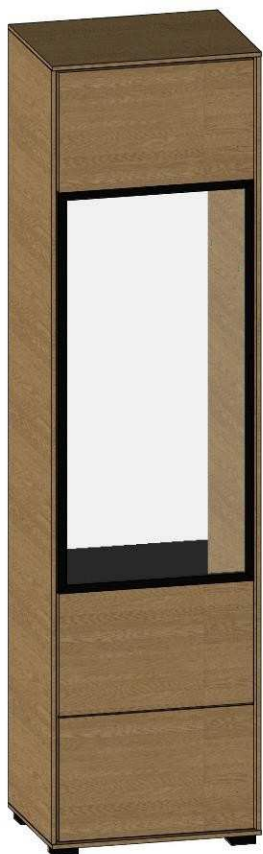


2647


versionsnummer:

11.2023





Naturholz kann sich werkstoffbedingt verziehen. Durch das Montieren ziehen sich Teile wieder plan.




B 6	D 6	Z1 6	M1 M4x25 2	U 1	X 4
A1 Ø 8x20 4	E 4	F 4	C1 Ø 8x30 8	R 3 LED	I2 4
A Ø 8x30 16	C Ø 8x20 6	L Ø 6,4x50 16	M 1	N 2	V 4
J Ø 5x13 8	L Ø 6,4x50 16	M 1	N 2	V 4	R1 1
			Filz 4	P 8	Z 24


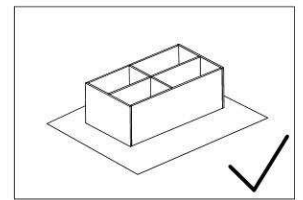


x2




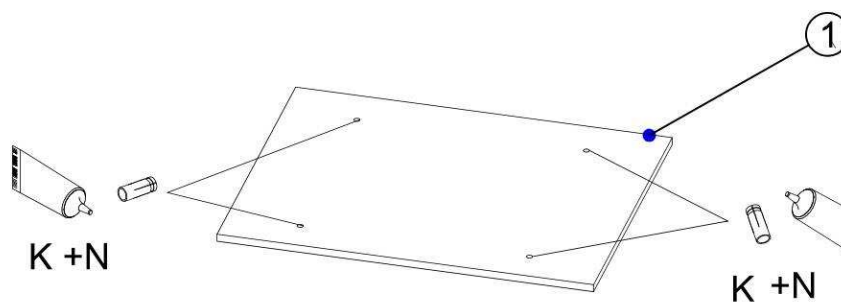
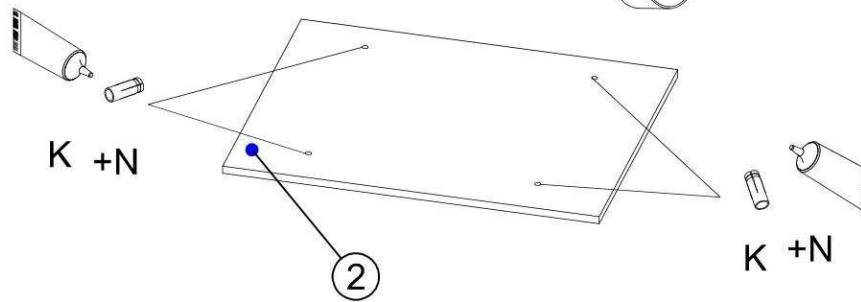
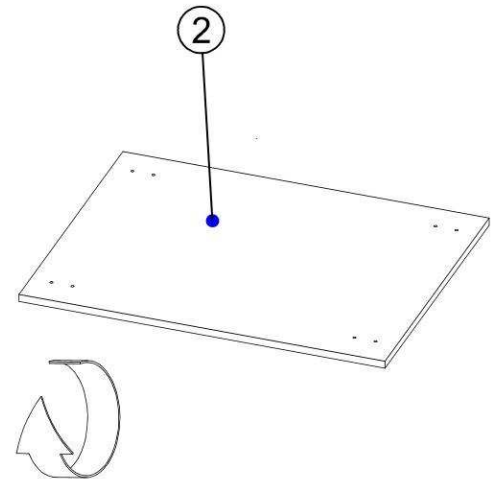
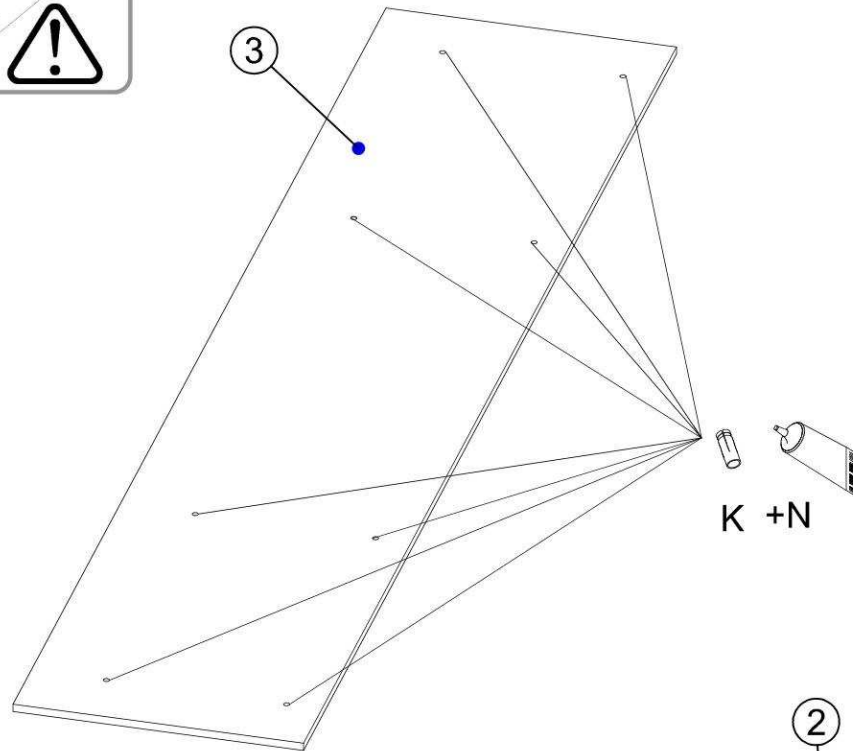


I


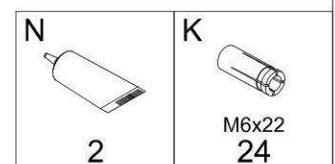


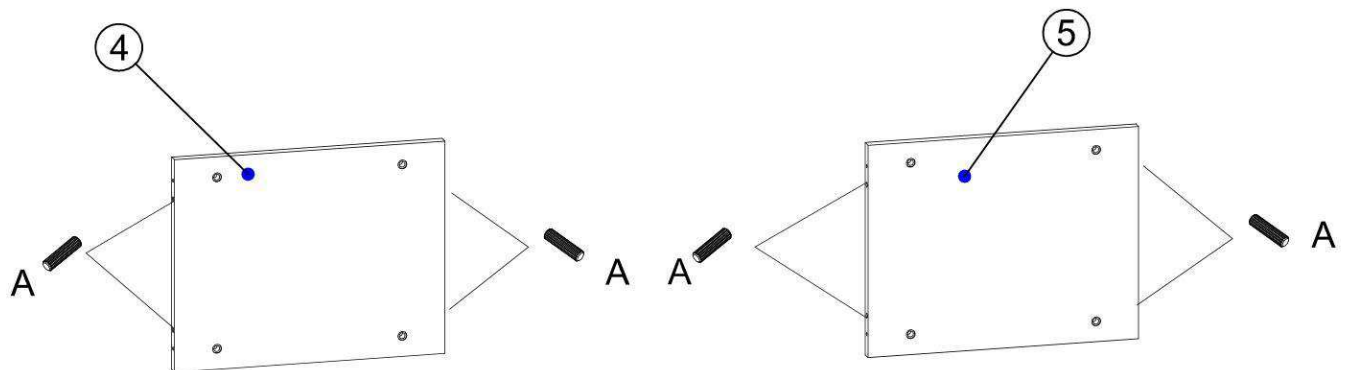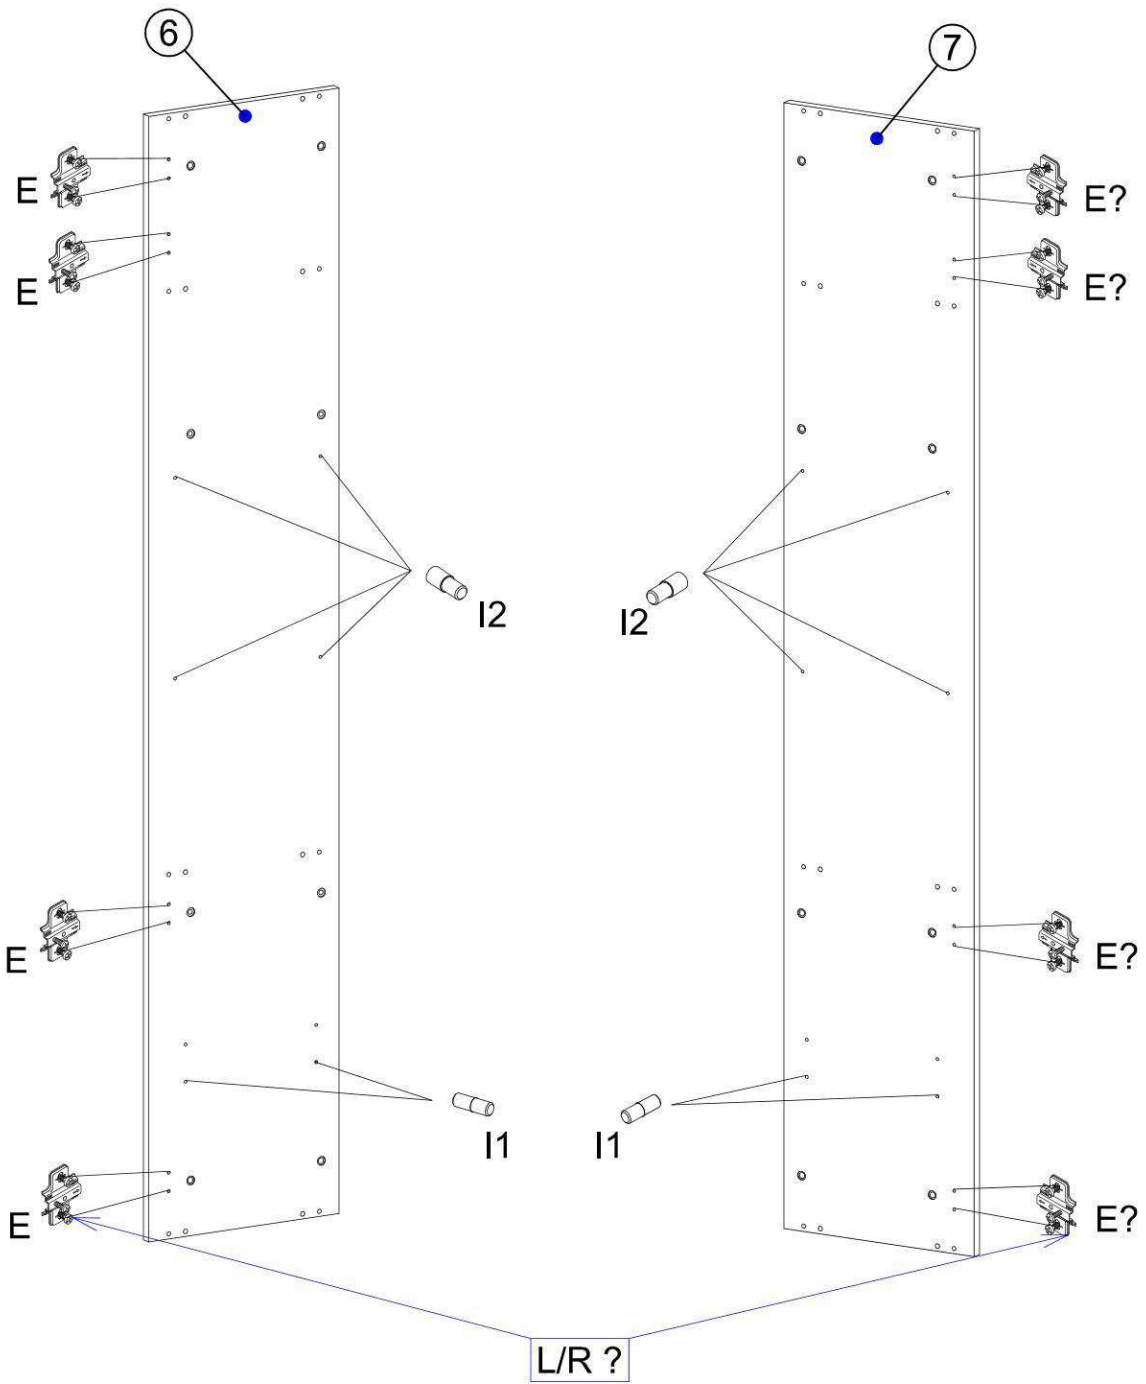


A Ø 8x30 8	E Ø 6.3x13 4	I2 I1 8 4
------------------------------	--------------------------------	------------------------------------

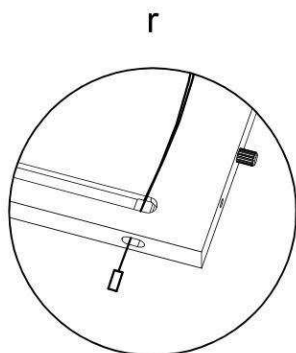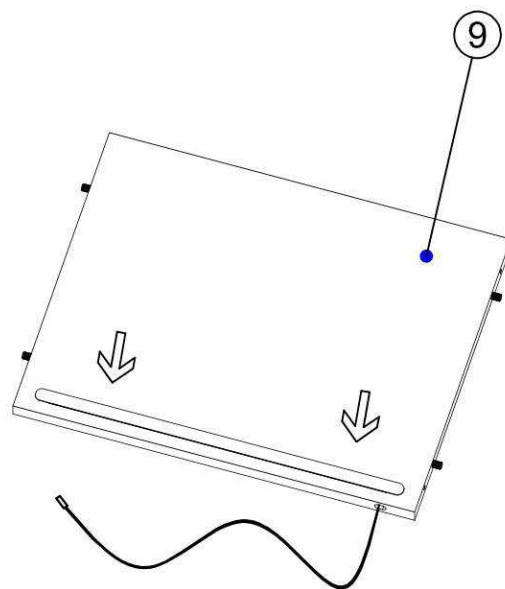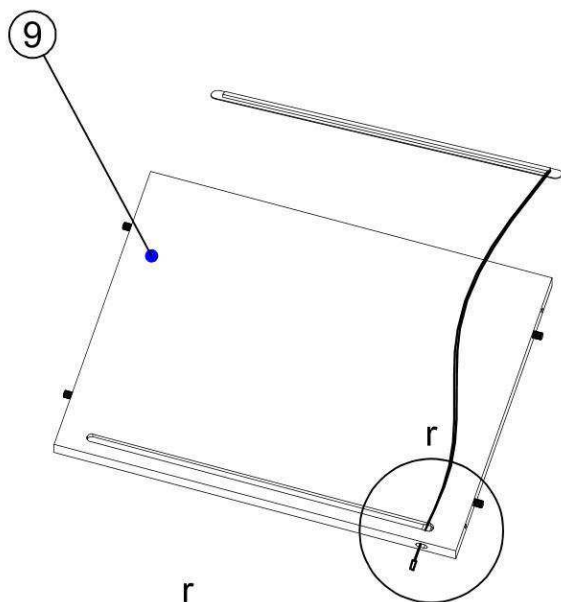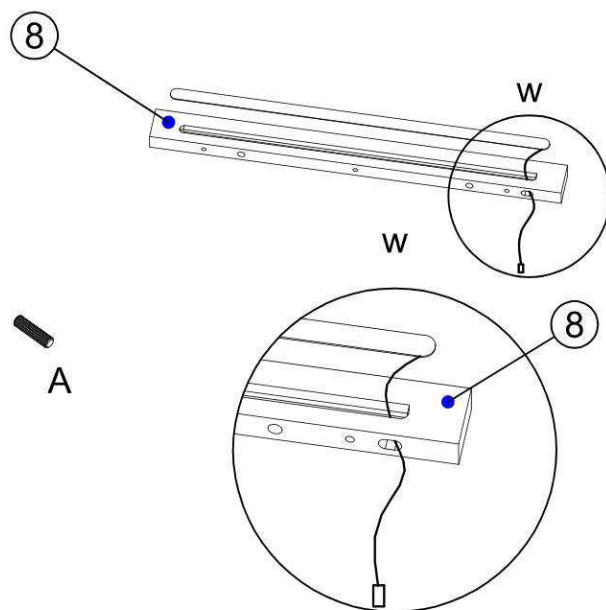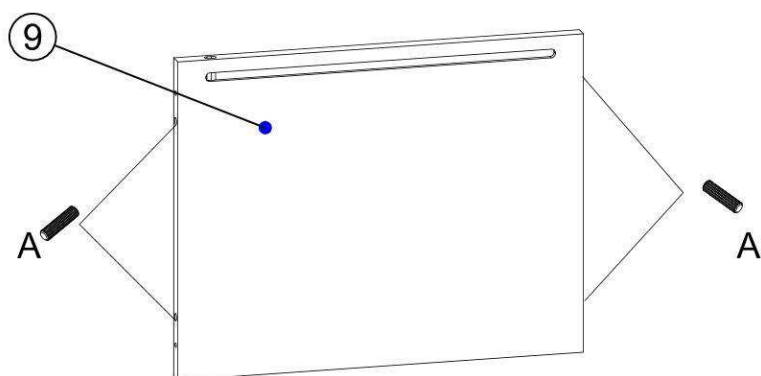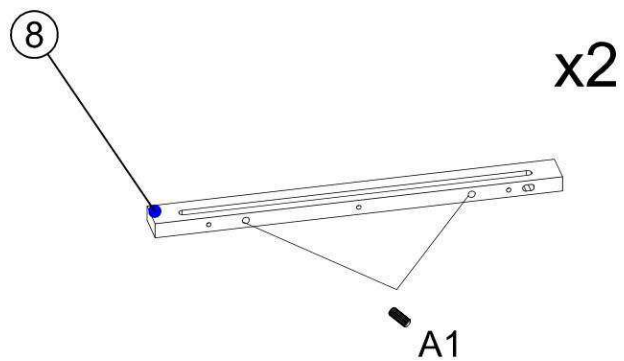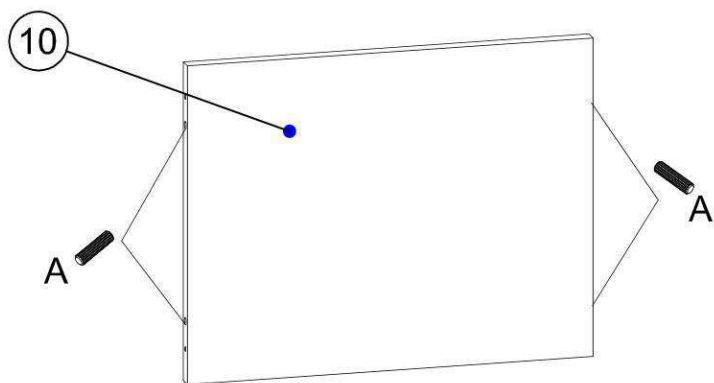


A1	Ø 8x20	R
A	4	3 LED
Ø 8x30	8	

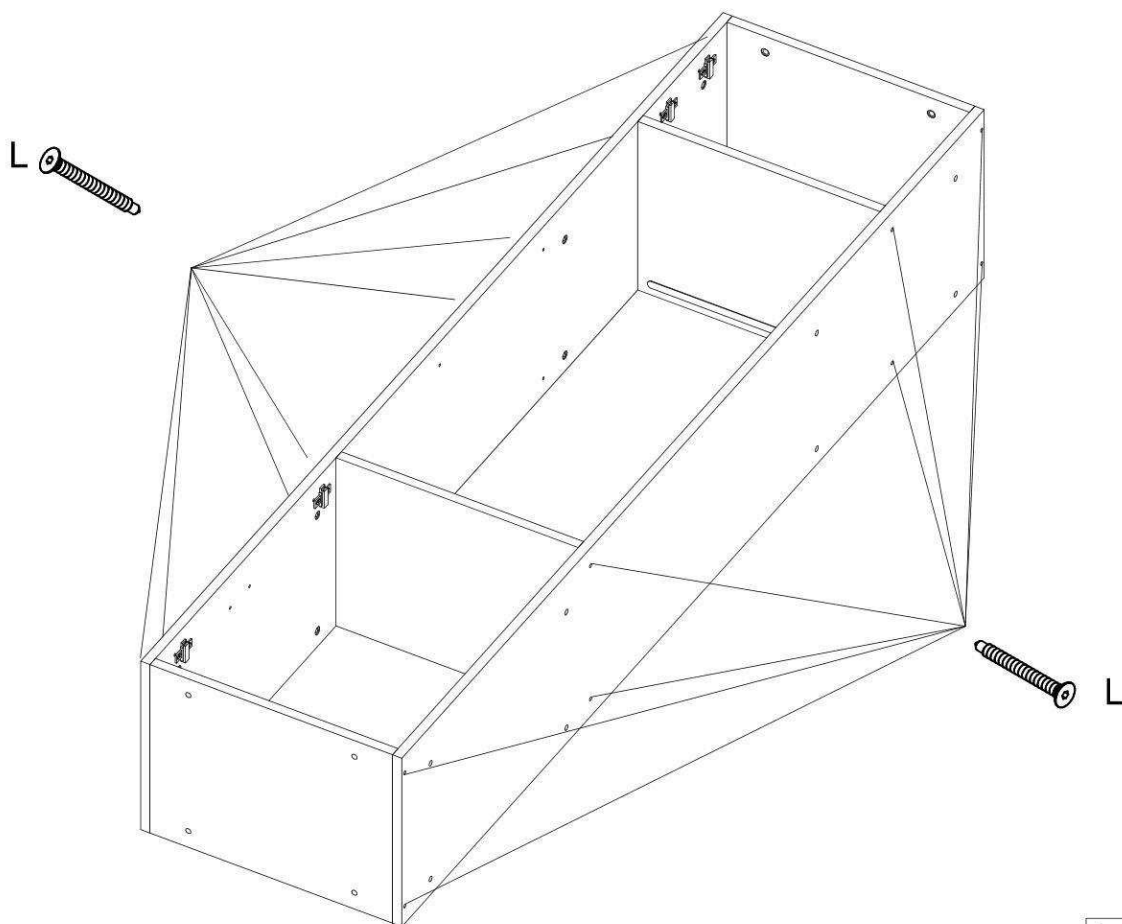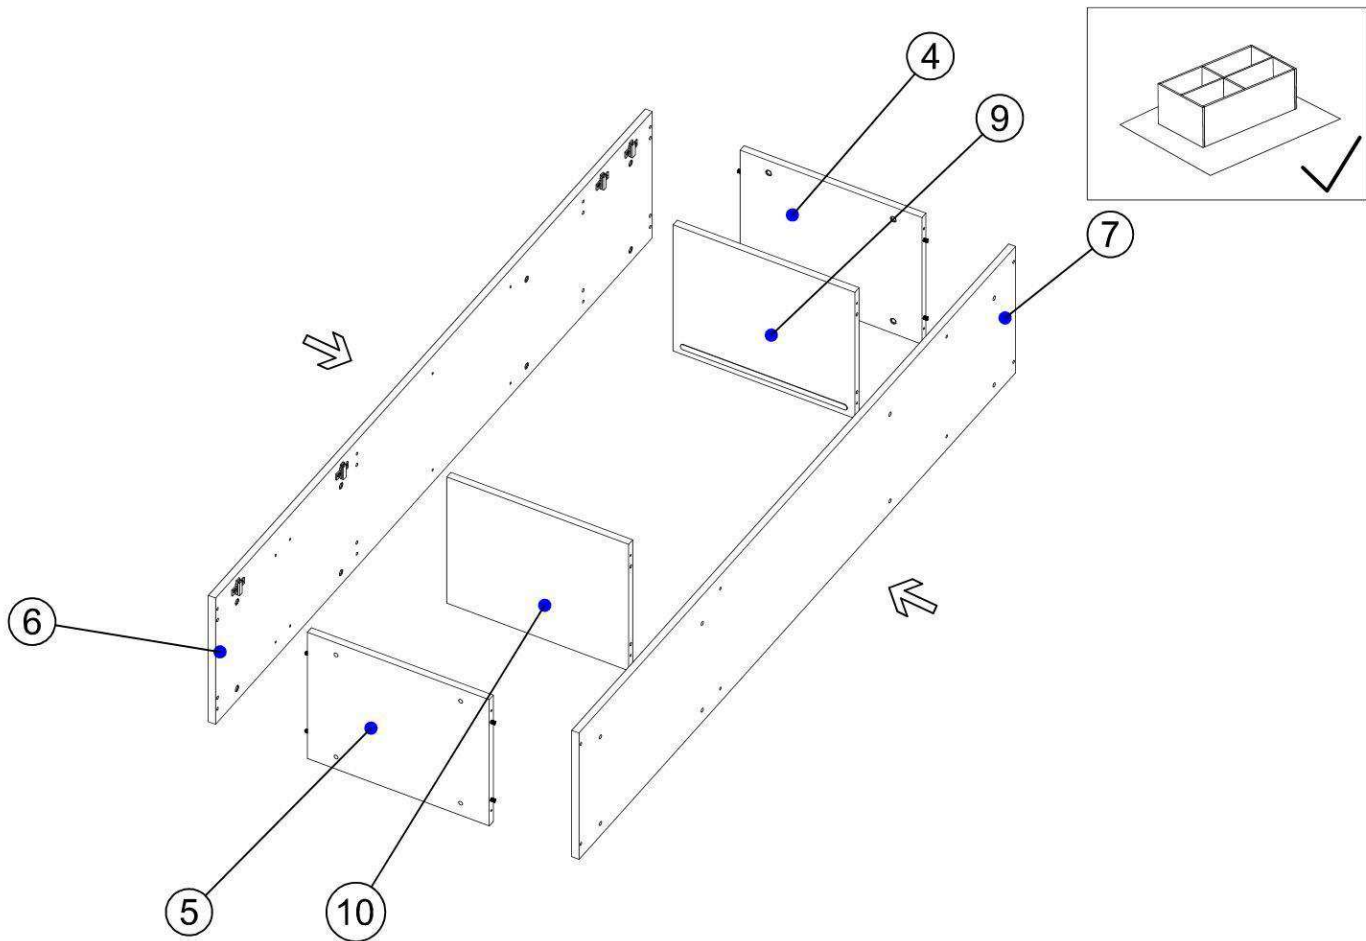


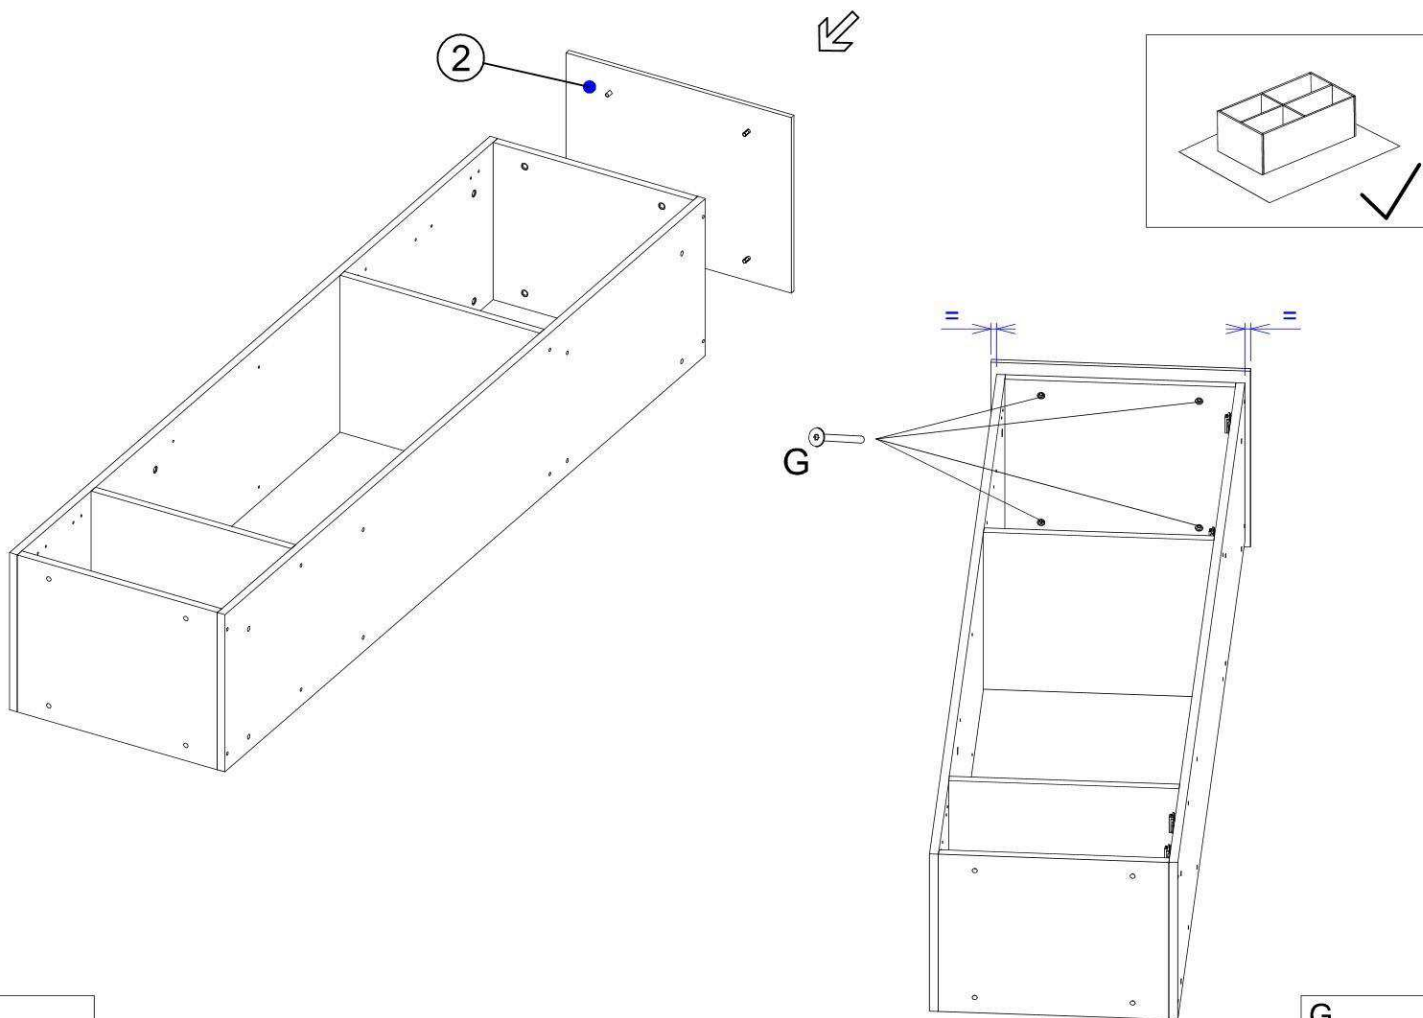


V

G
M6x23
4


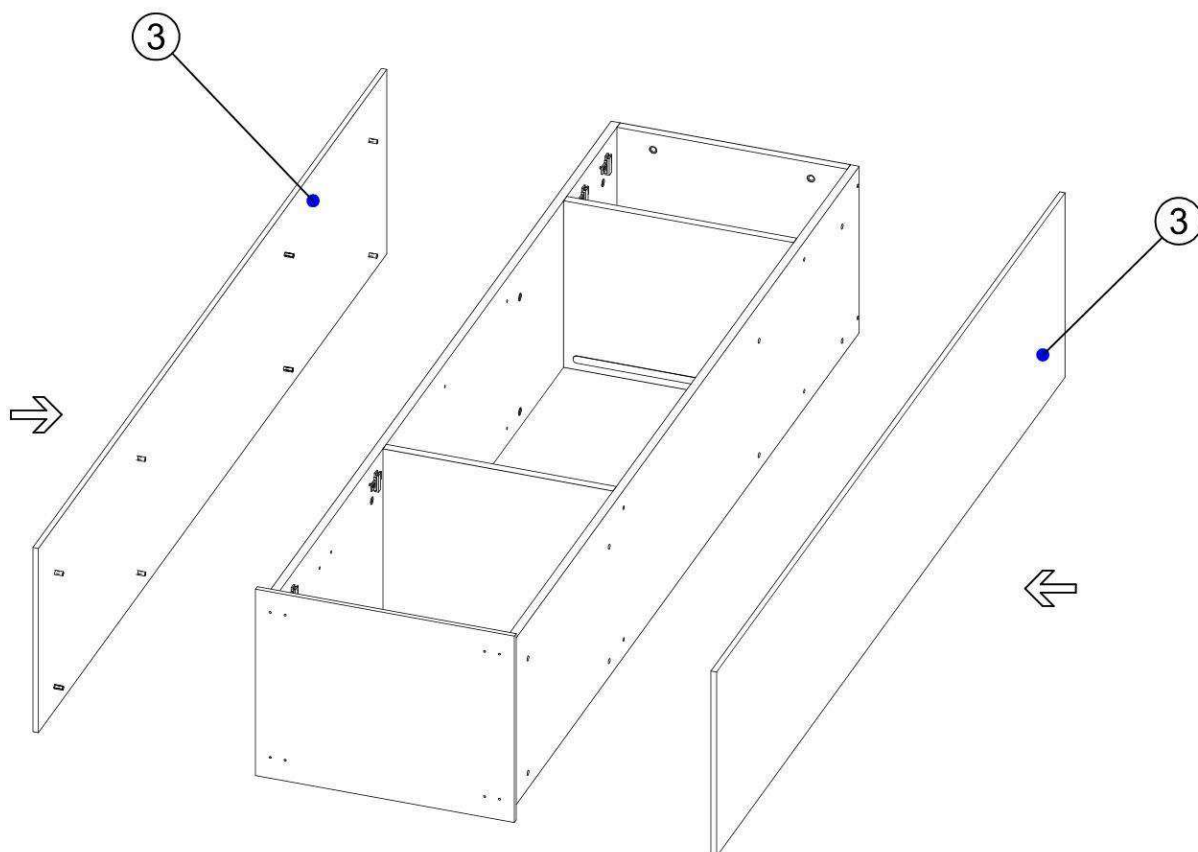


VI

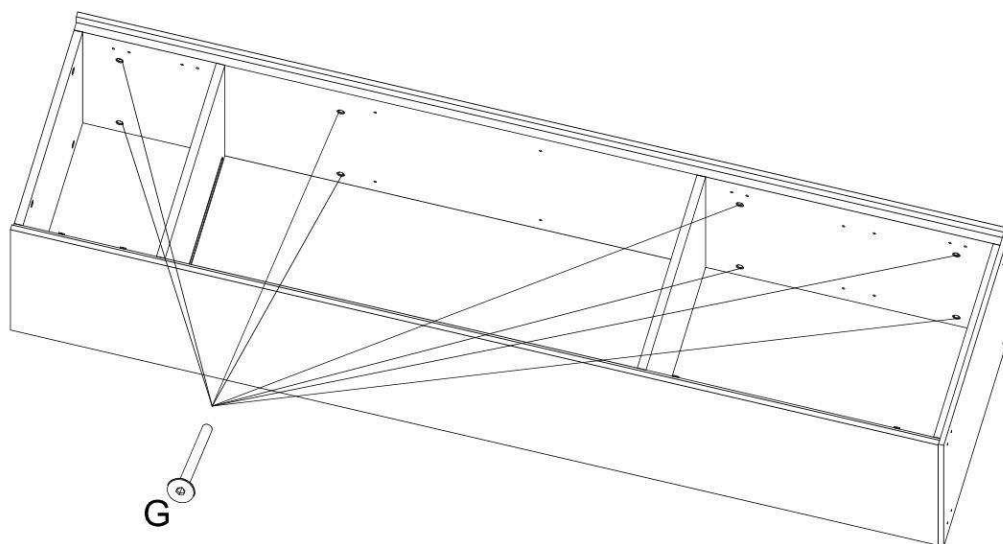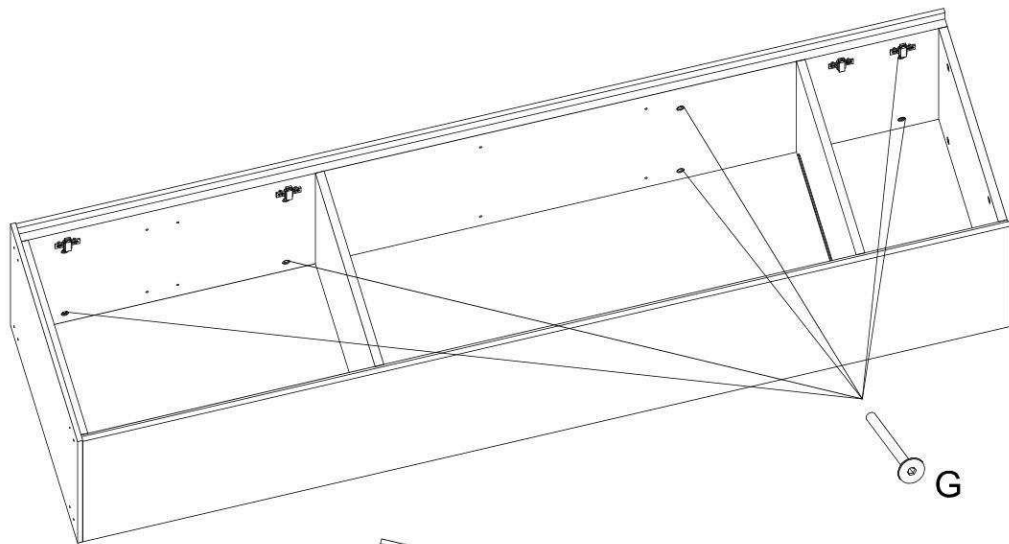



VII

G
M6x23
16

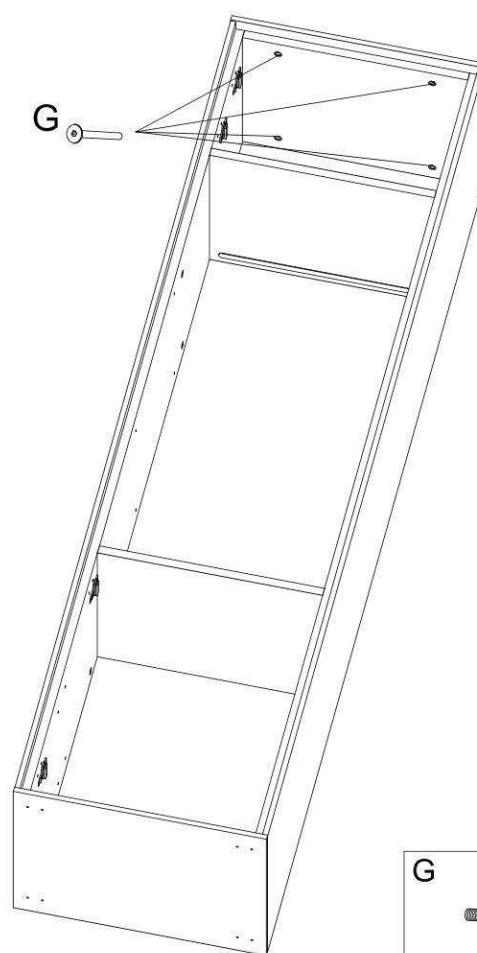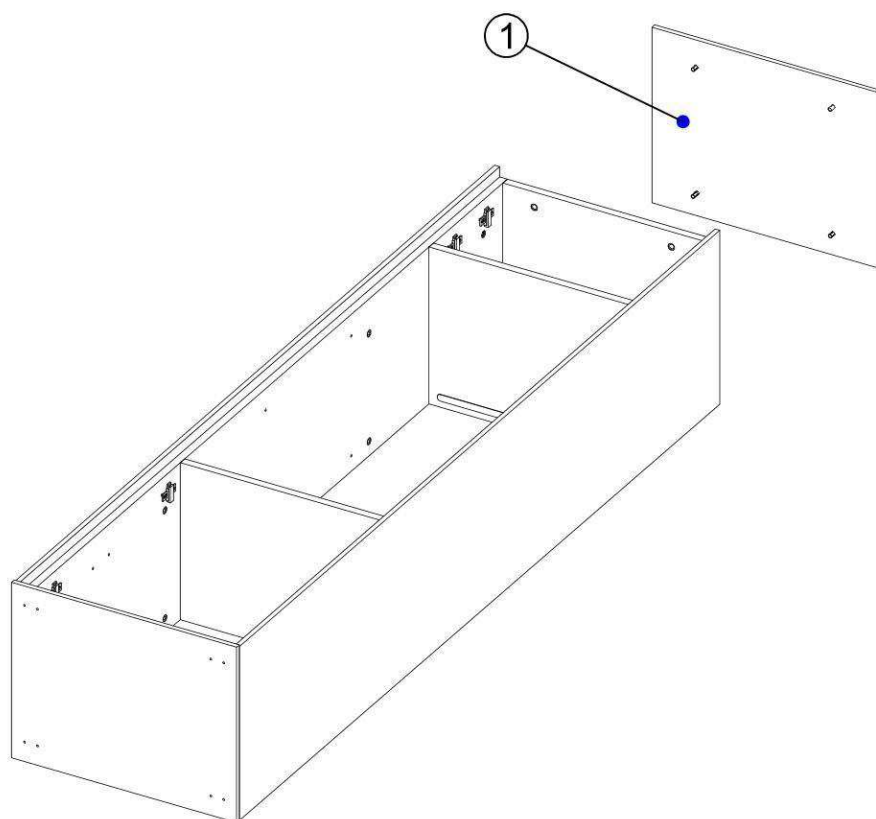



VIII

G
M6x23
4

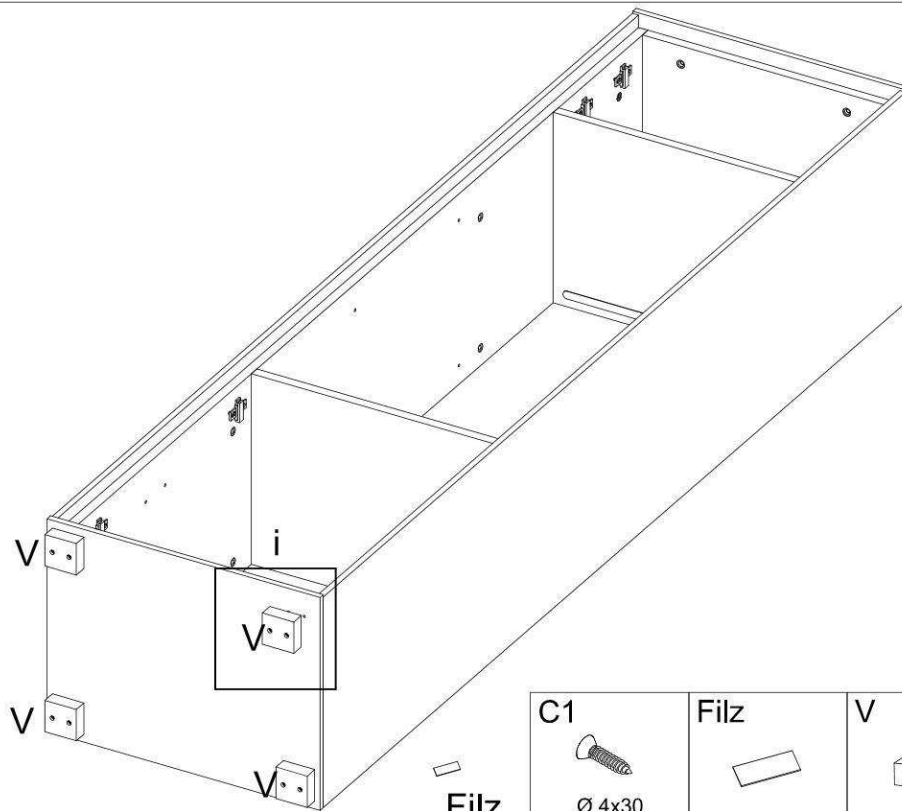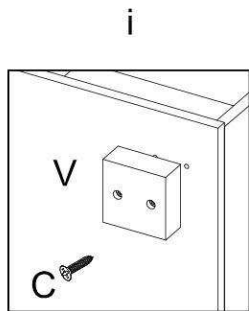



IX





C1	Filz	V
 Ø 4x30 8	 4	 4

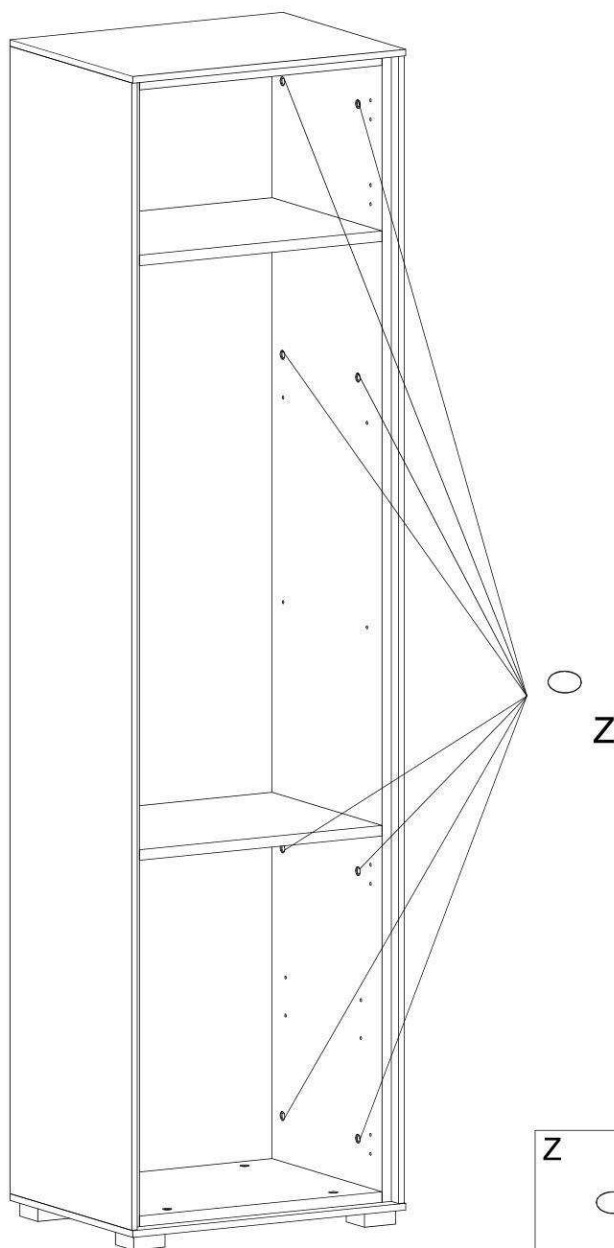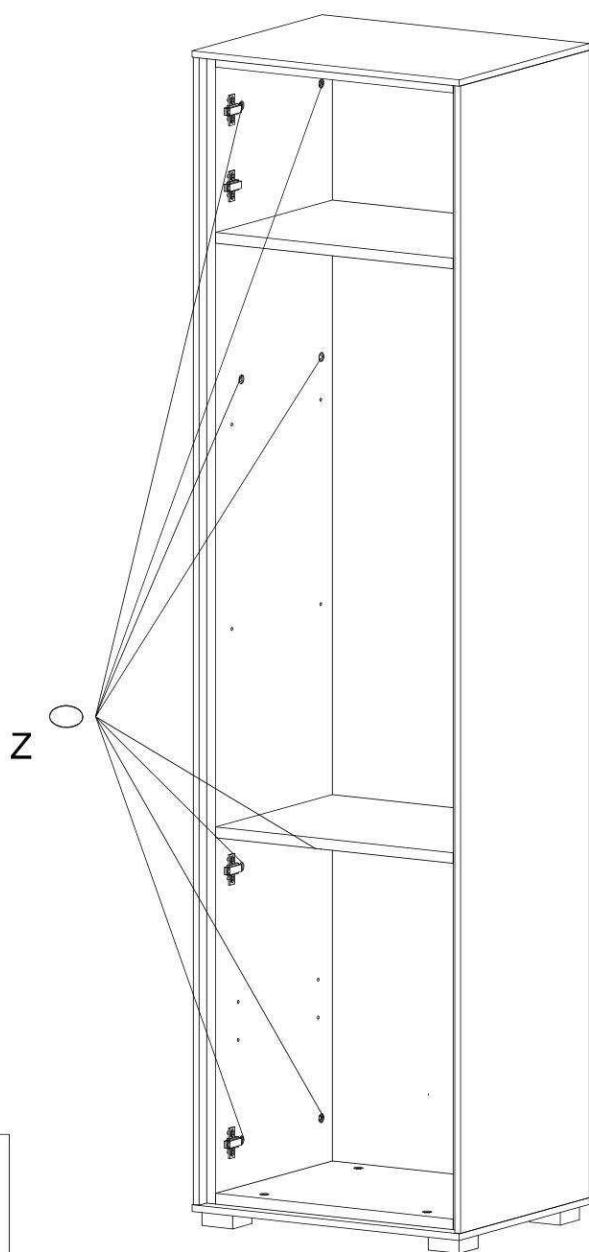


X


Z
 24

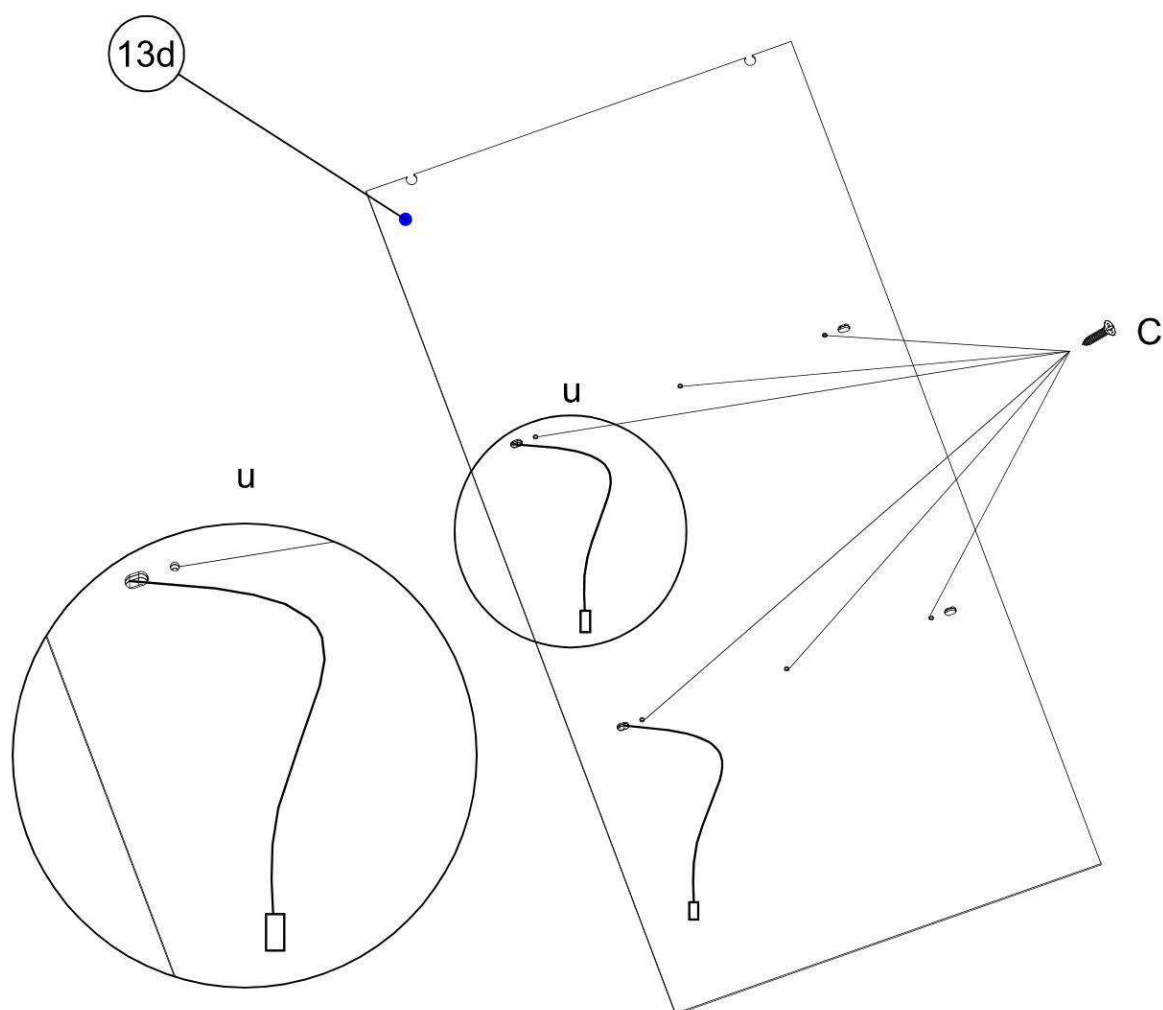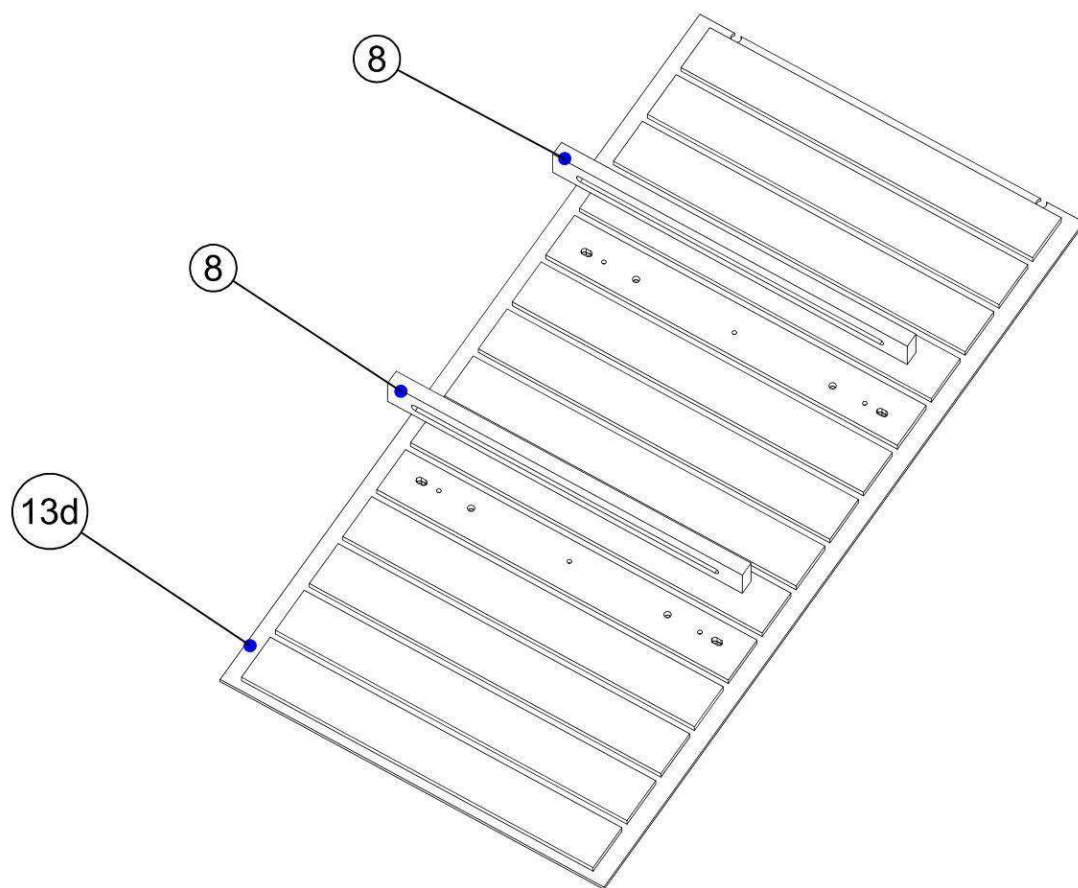


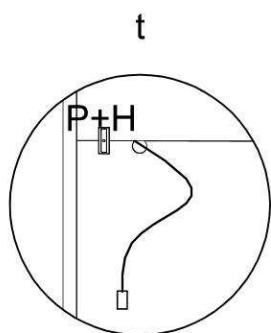
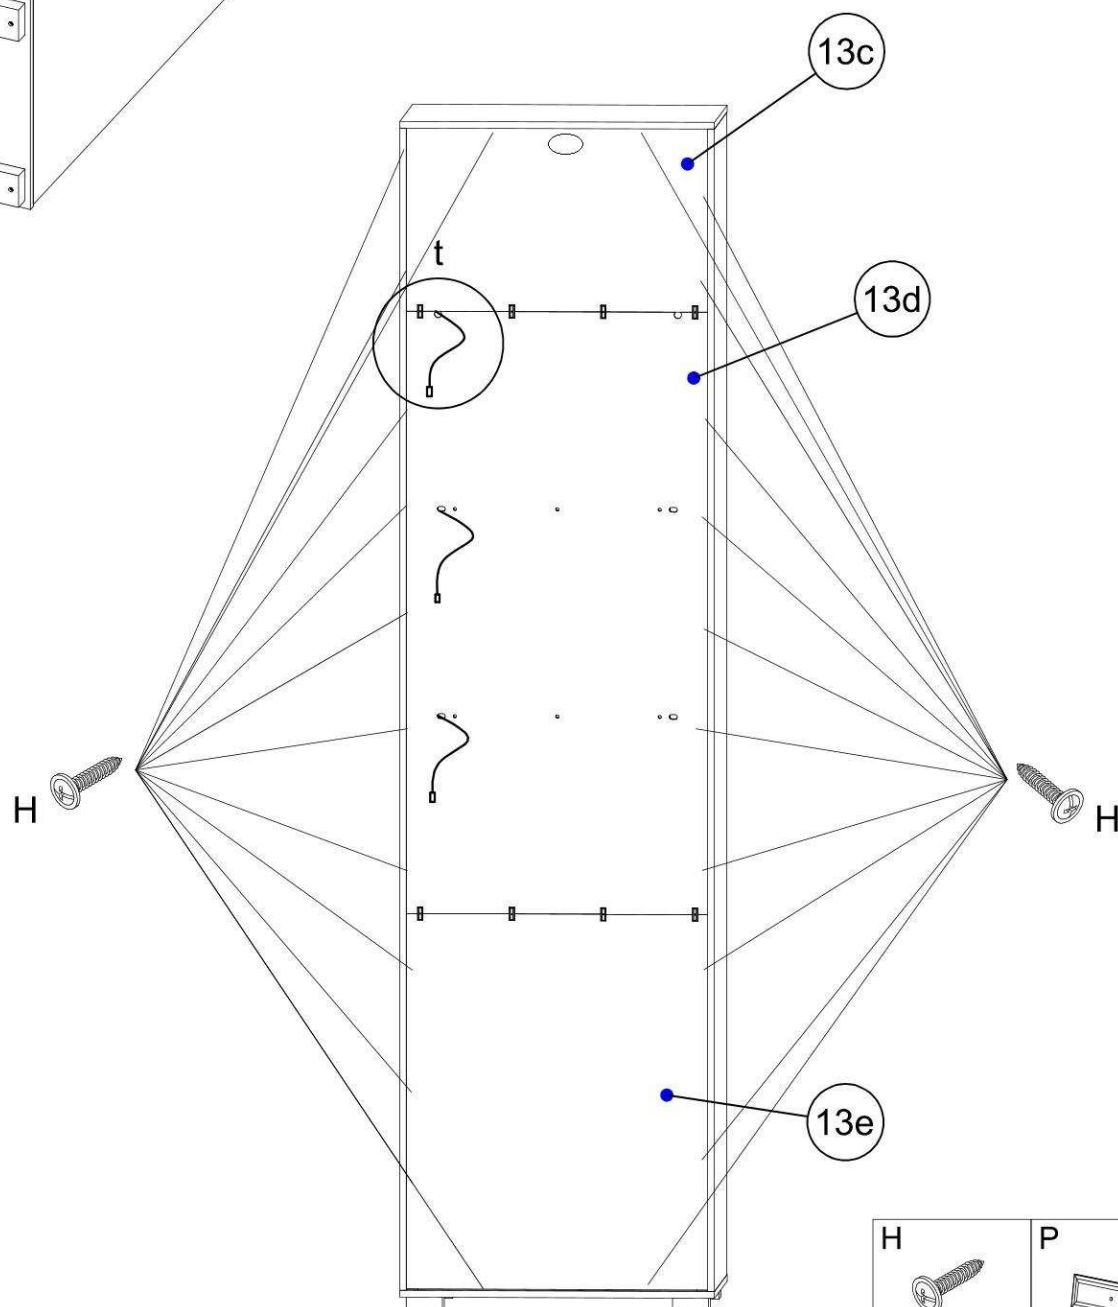
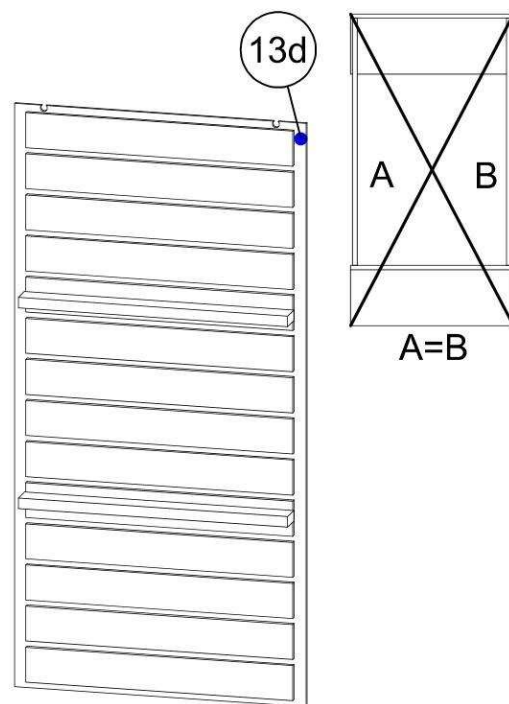
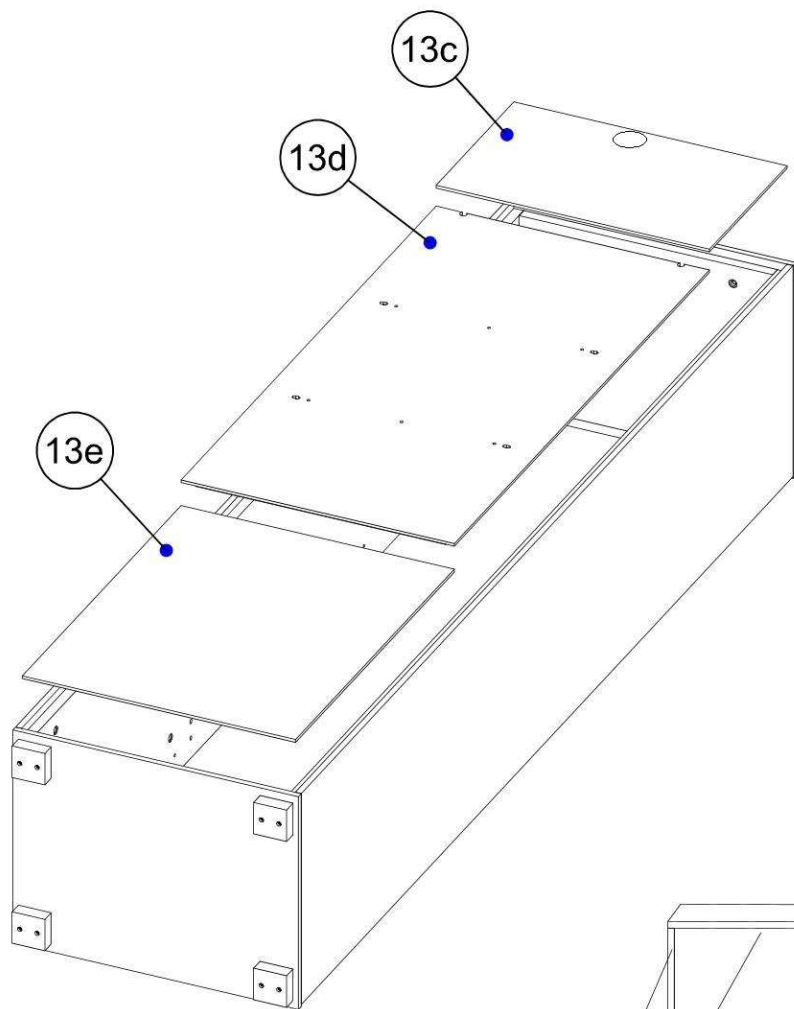


XII



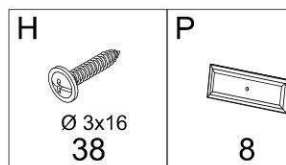


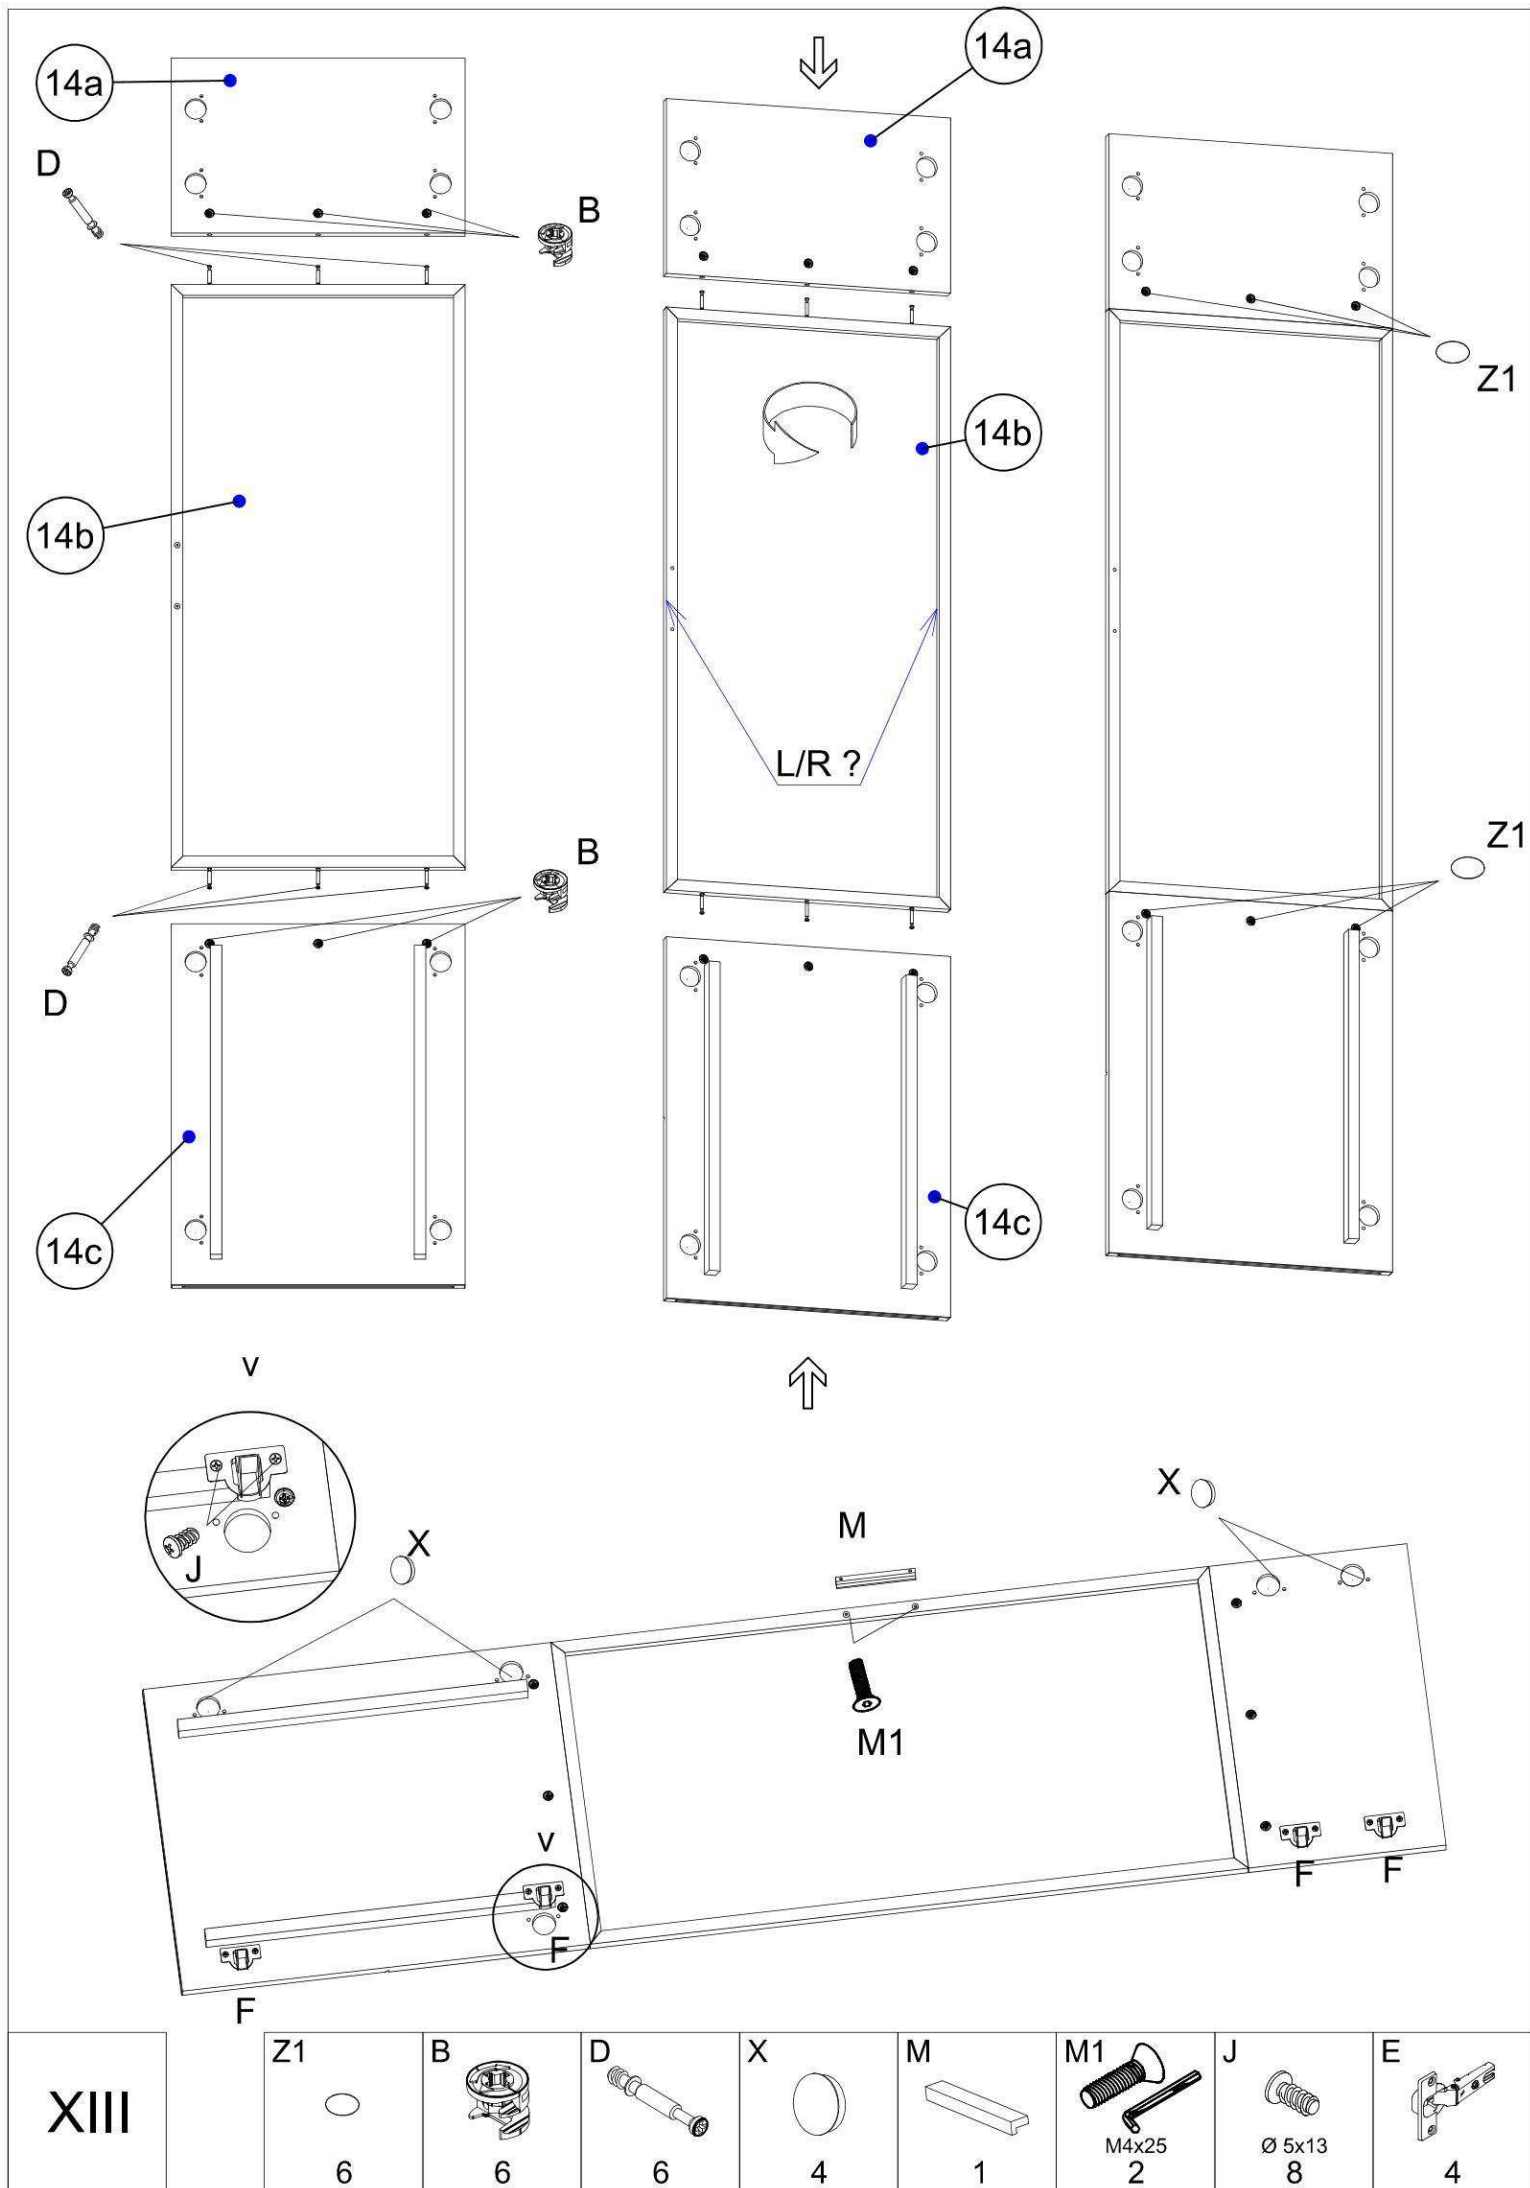

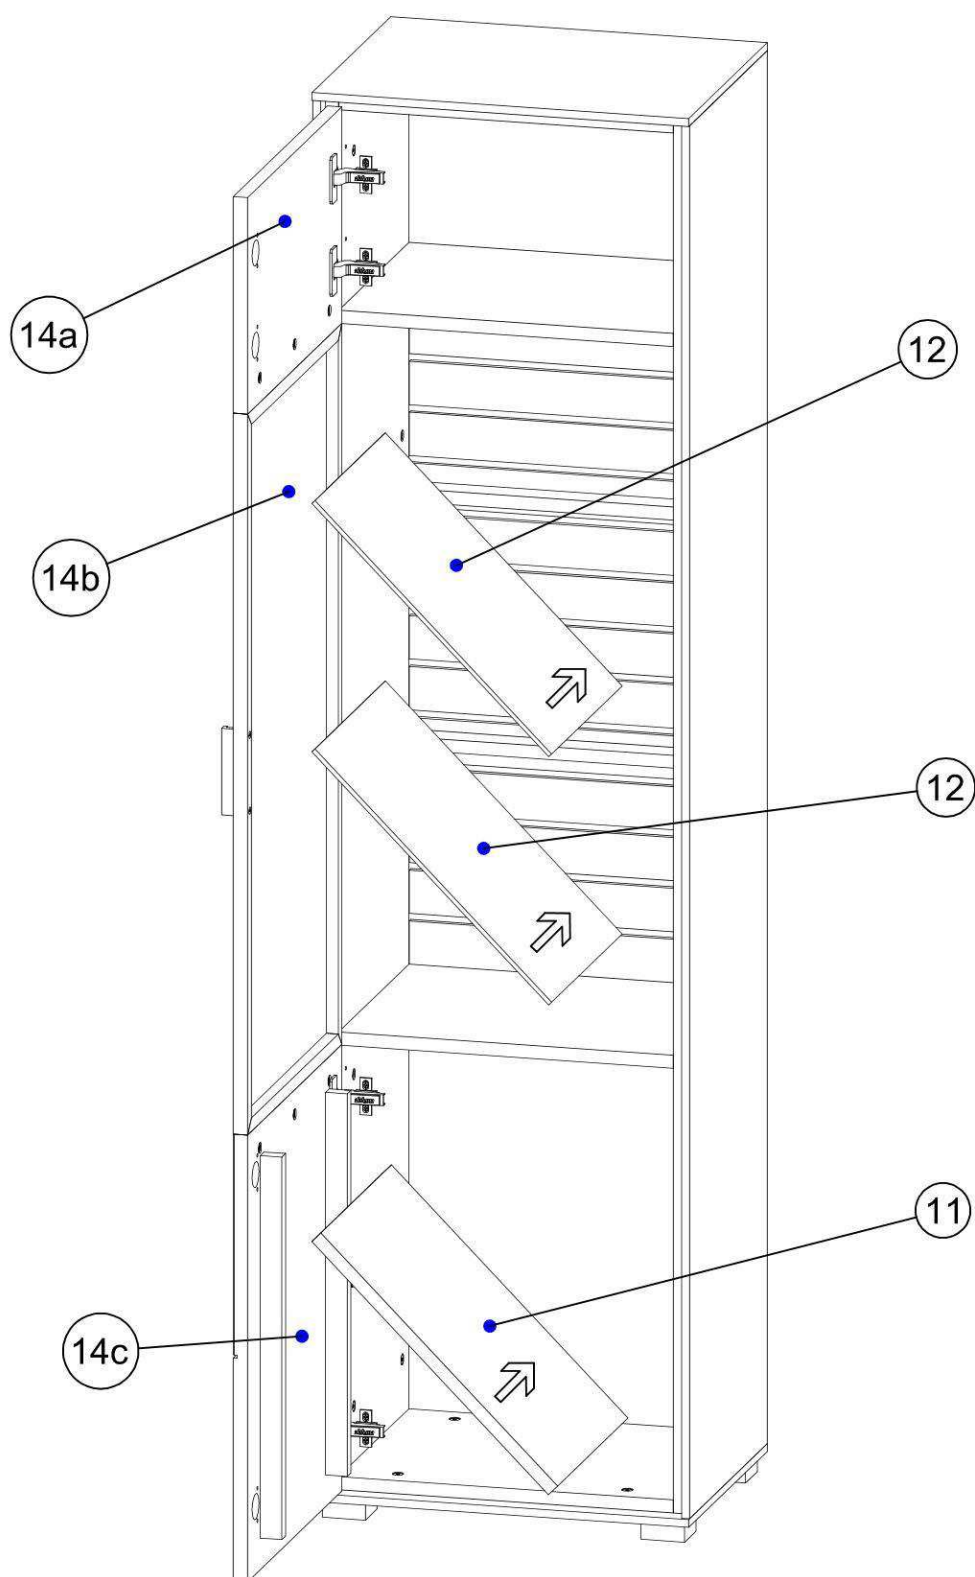

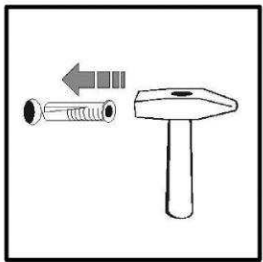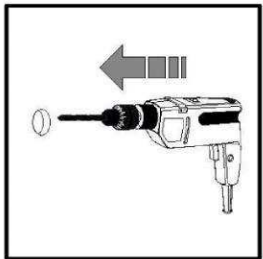
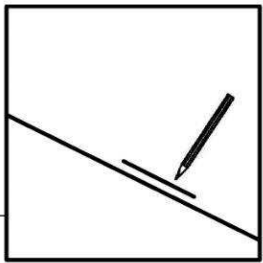
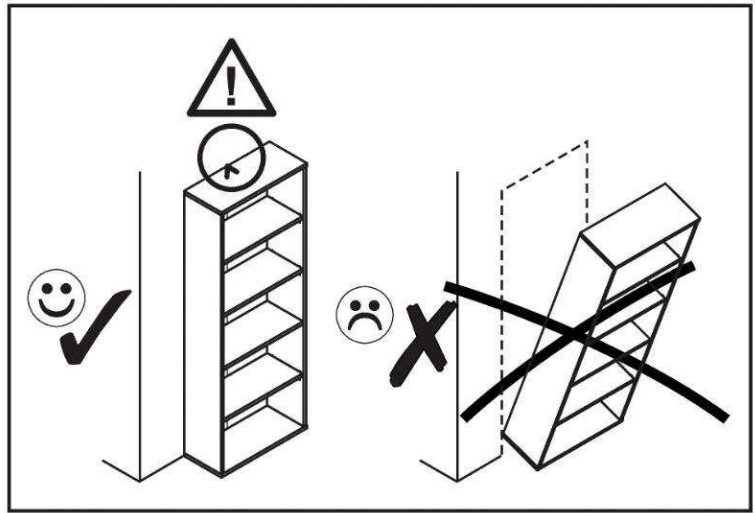


X

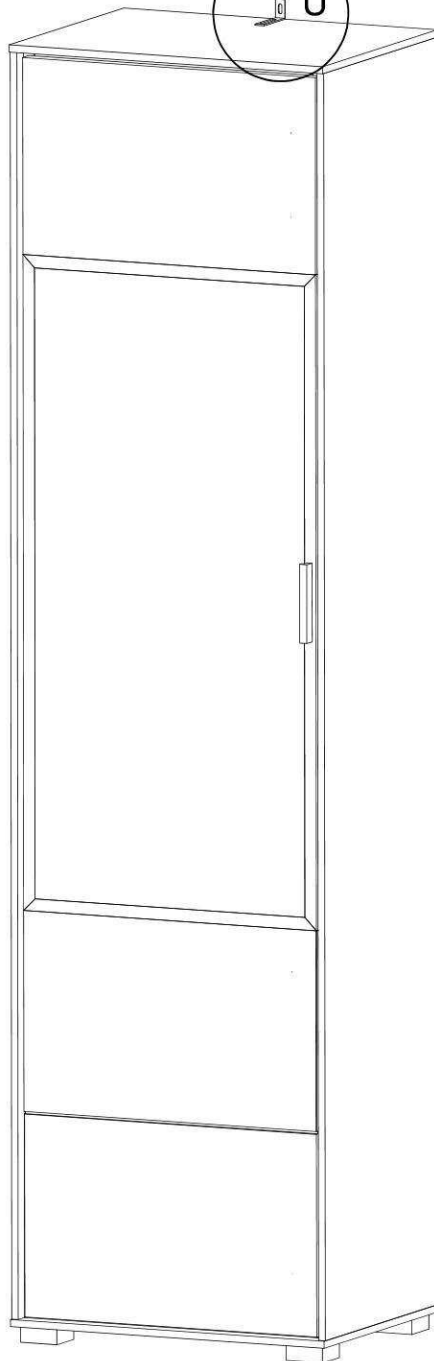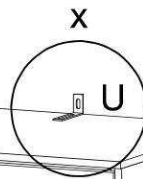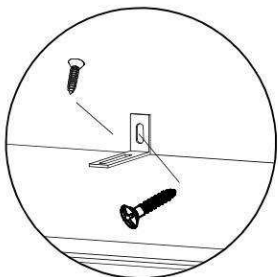

XV



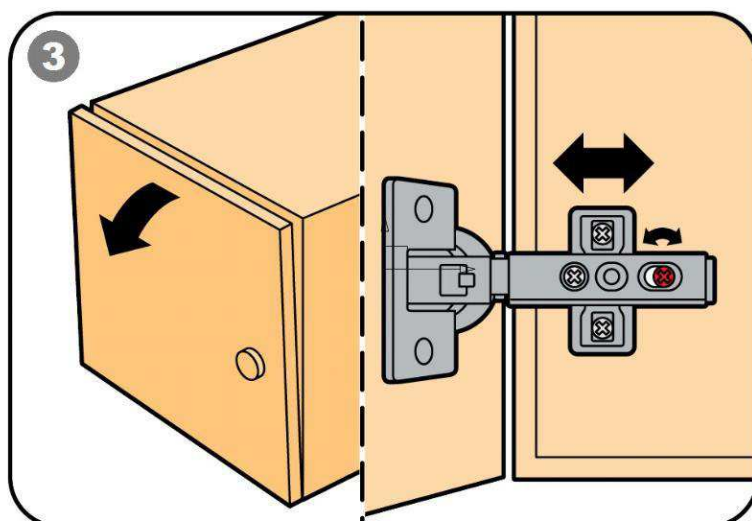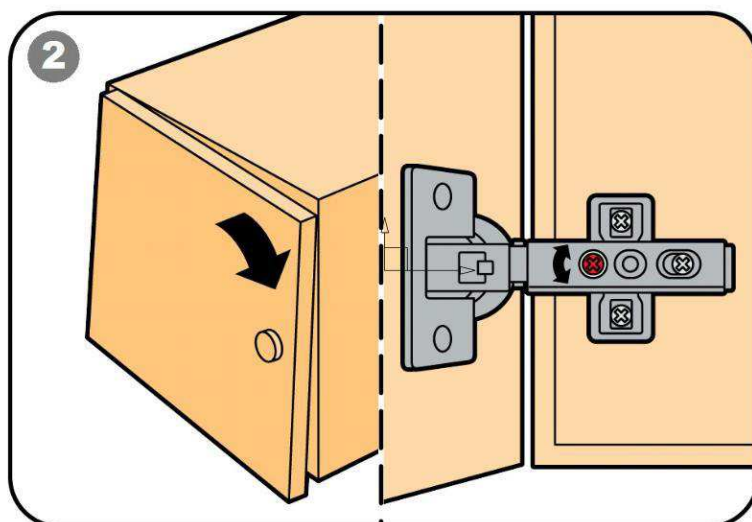
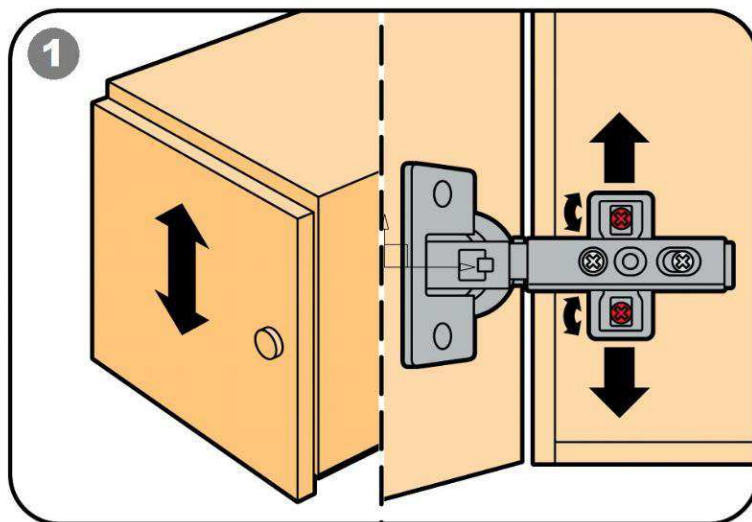


2641

versionsnummer:

11.2023







Naturholz kann sich werkstoffbedingt verziehen. Durch das Montieren ziehen sich Teile wieder plan.

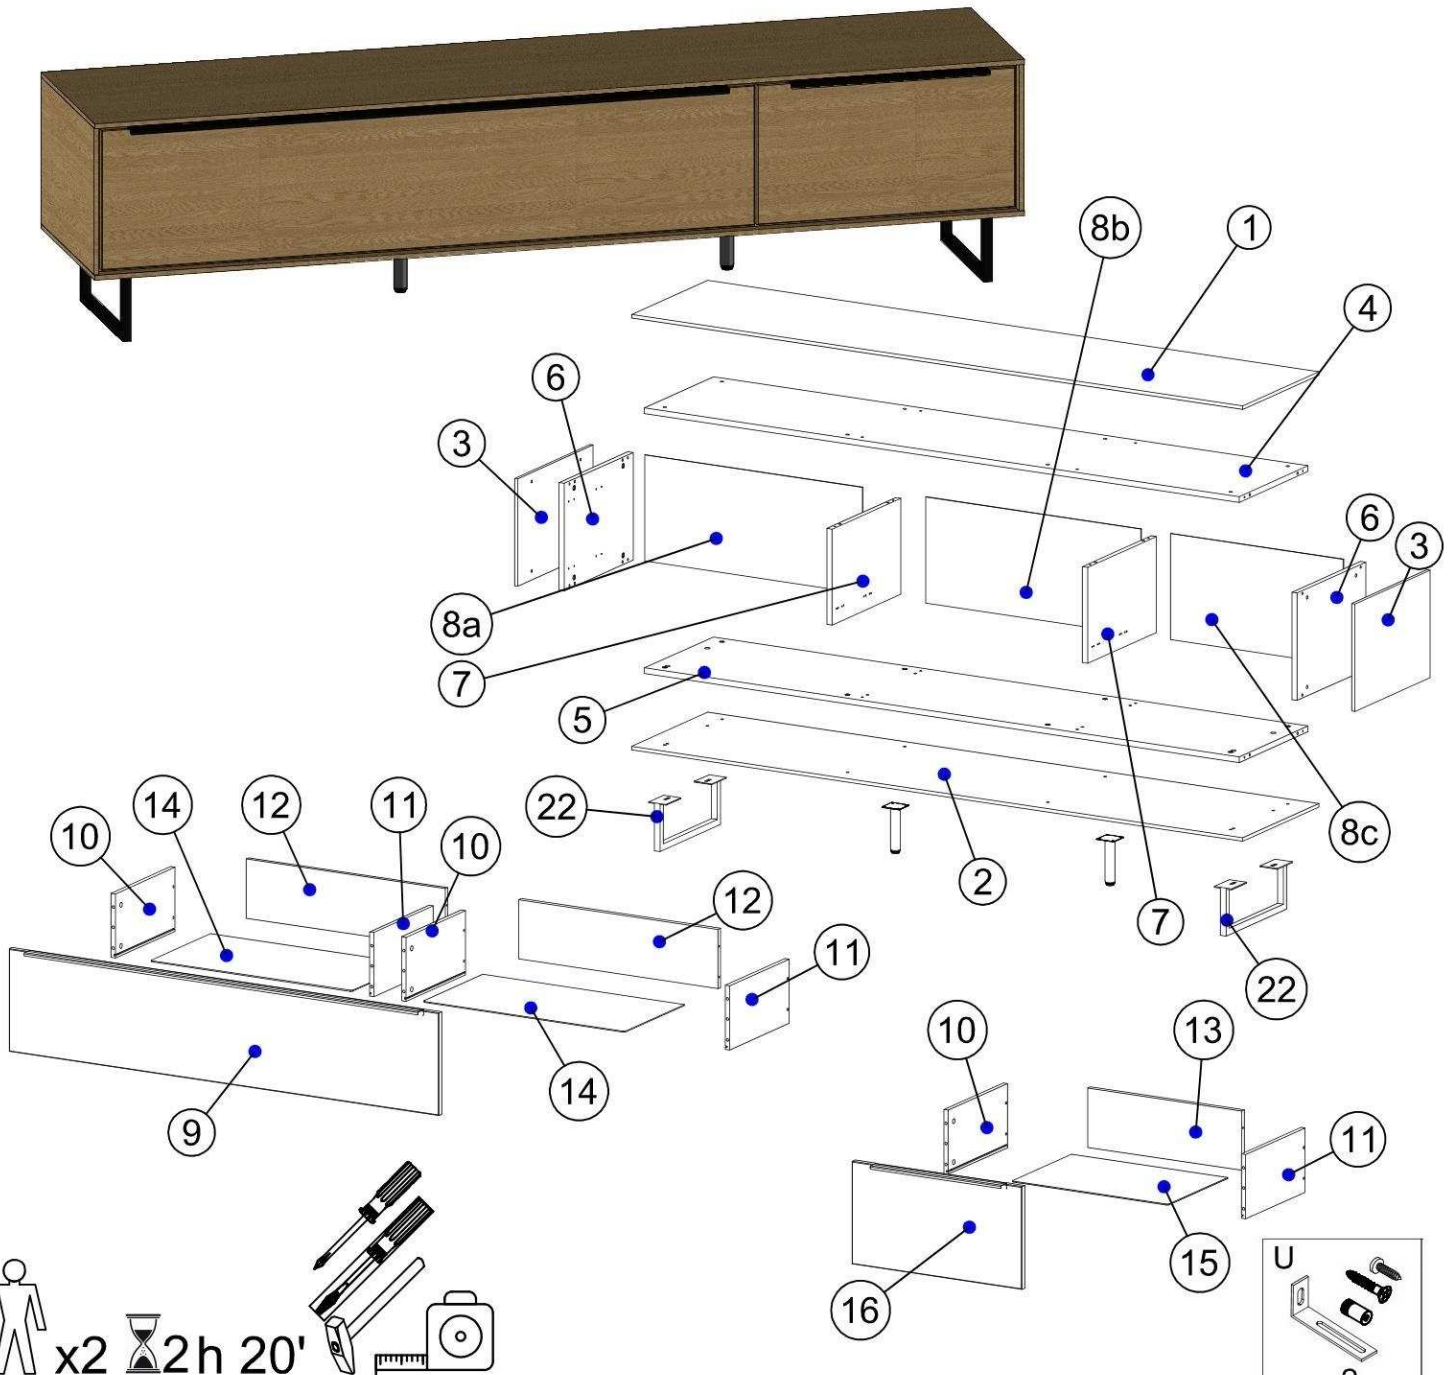



A  Ø 8x30 22	B  12	D  12	C  Ø 4x16 8	M  1350 450 M1/M2	Filz  4	G  M6x23 24	H  Ø 3x16 44	K  M6x22 24
J  Ø 5x13 32	L  Ø 6,4x50 28	N  1	V  2	Z  40	O  OL3/OR3	S  4	P  6	T  Ø 3x16 6



x2

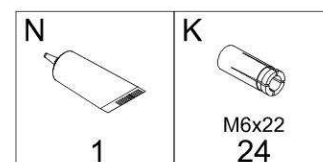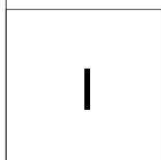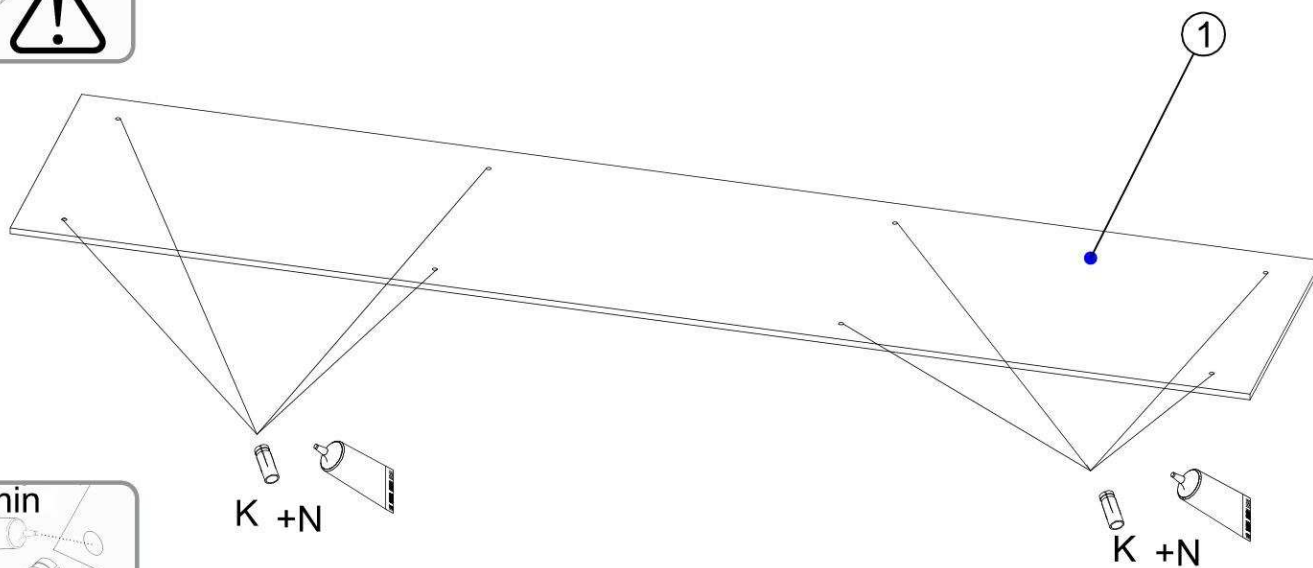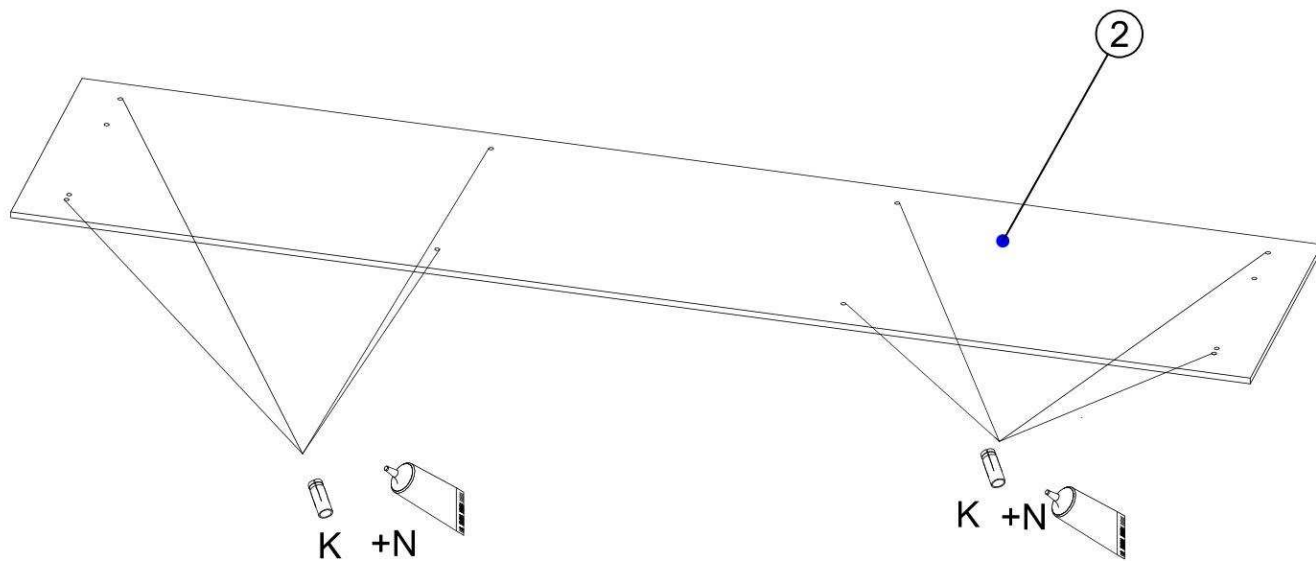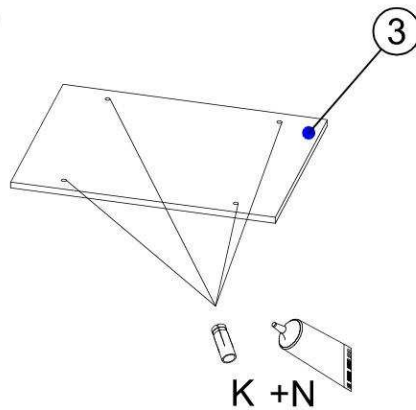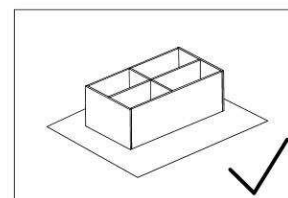

x2

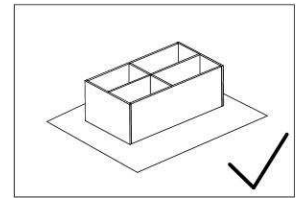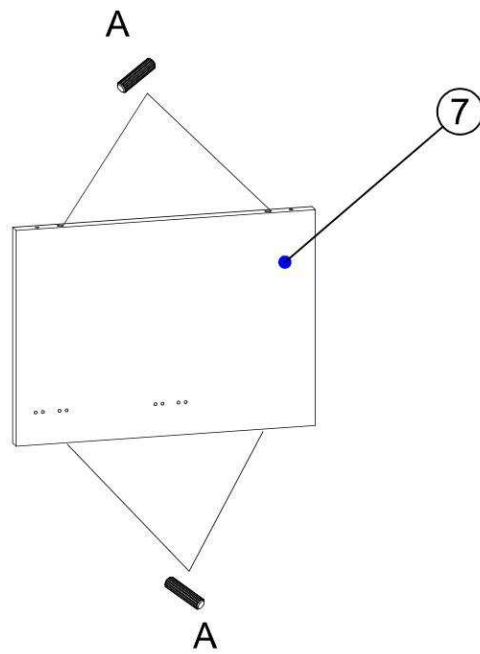


4




5



II

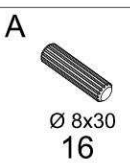

4

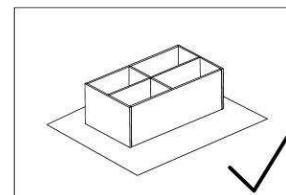


7

5

7



L

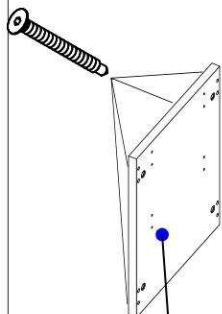

6


6






L

III






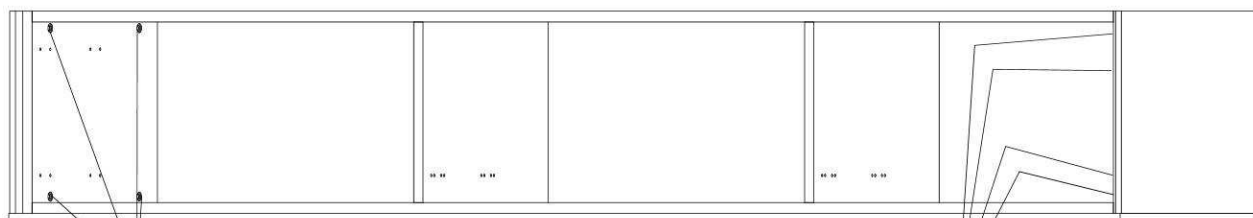


VI

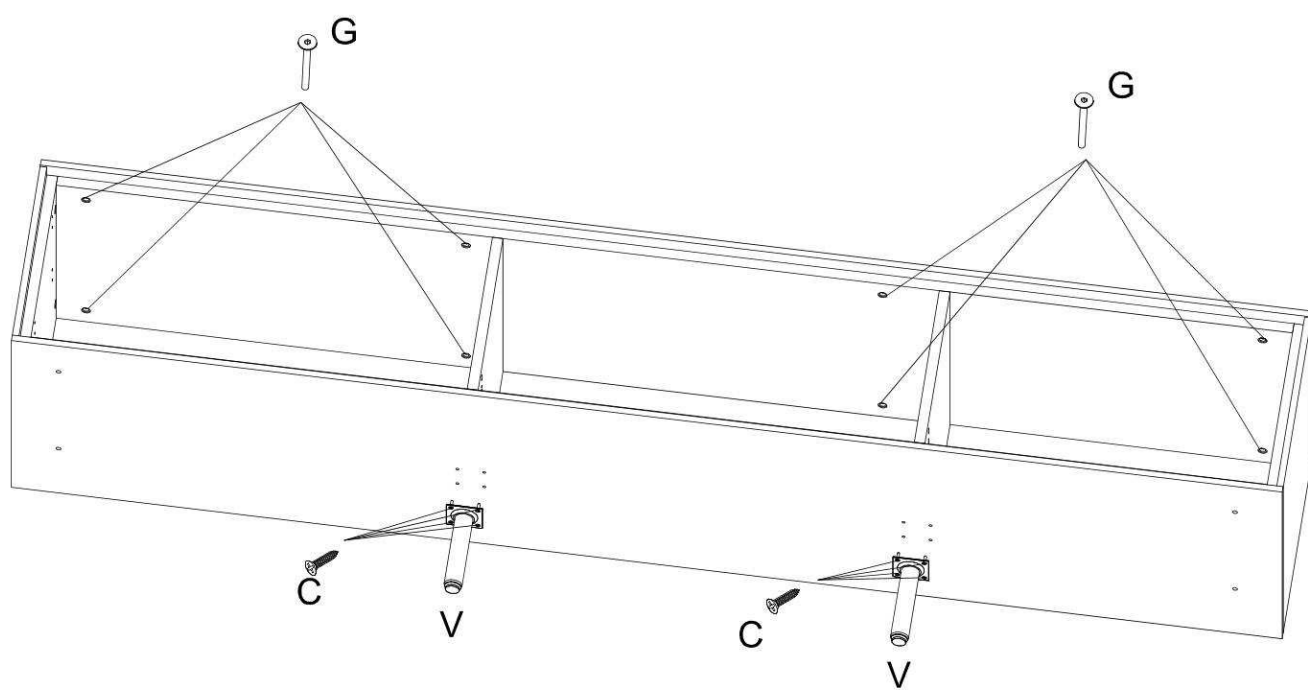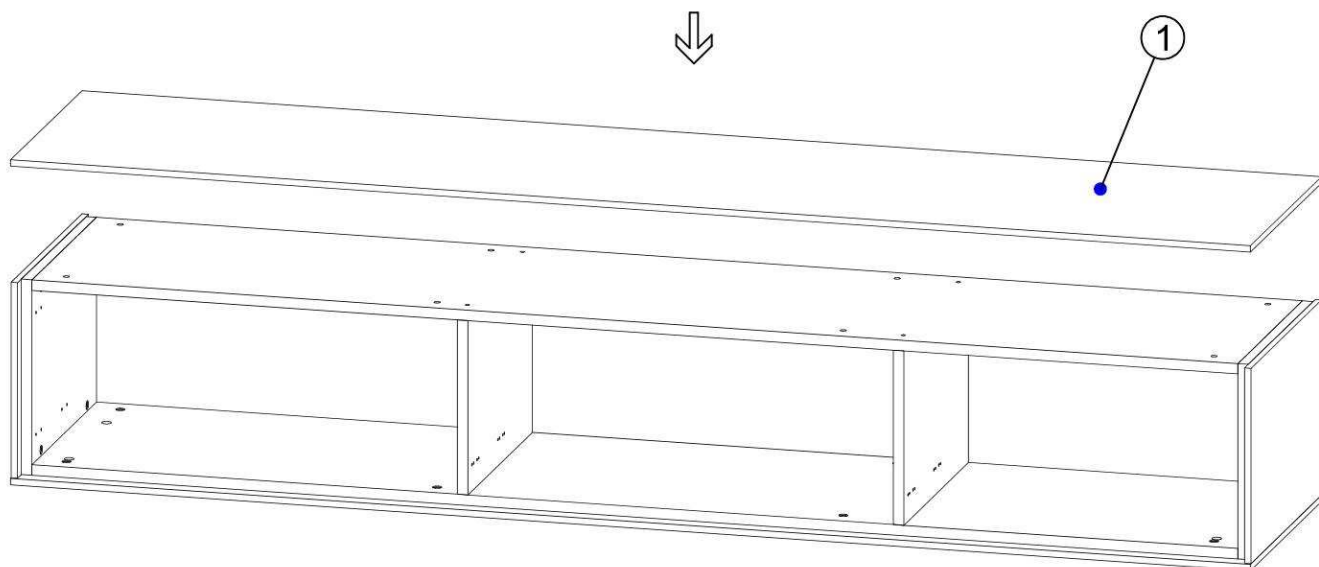
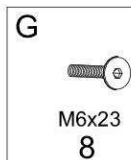


VII

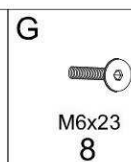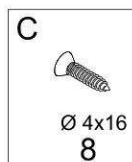


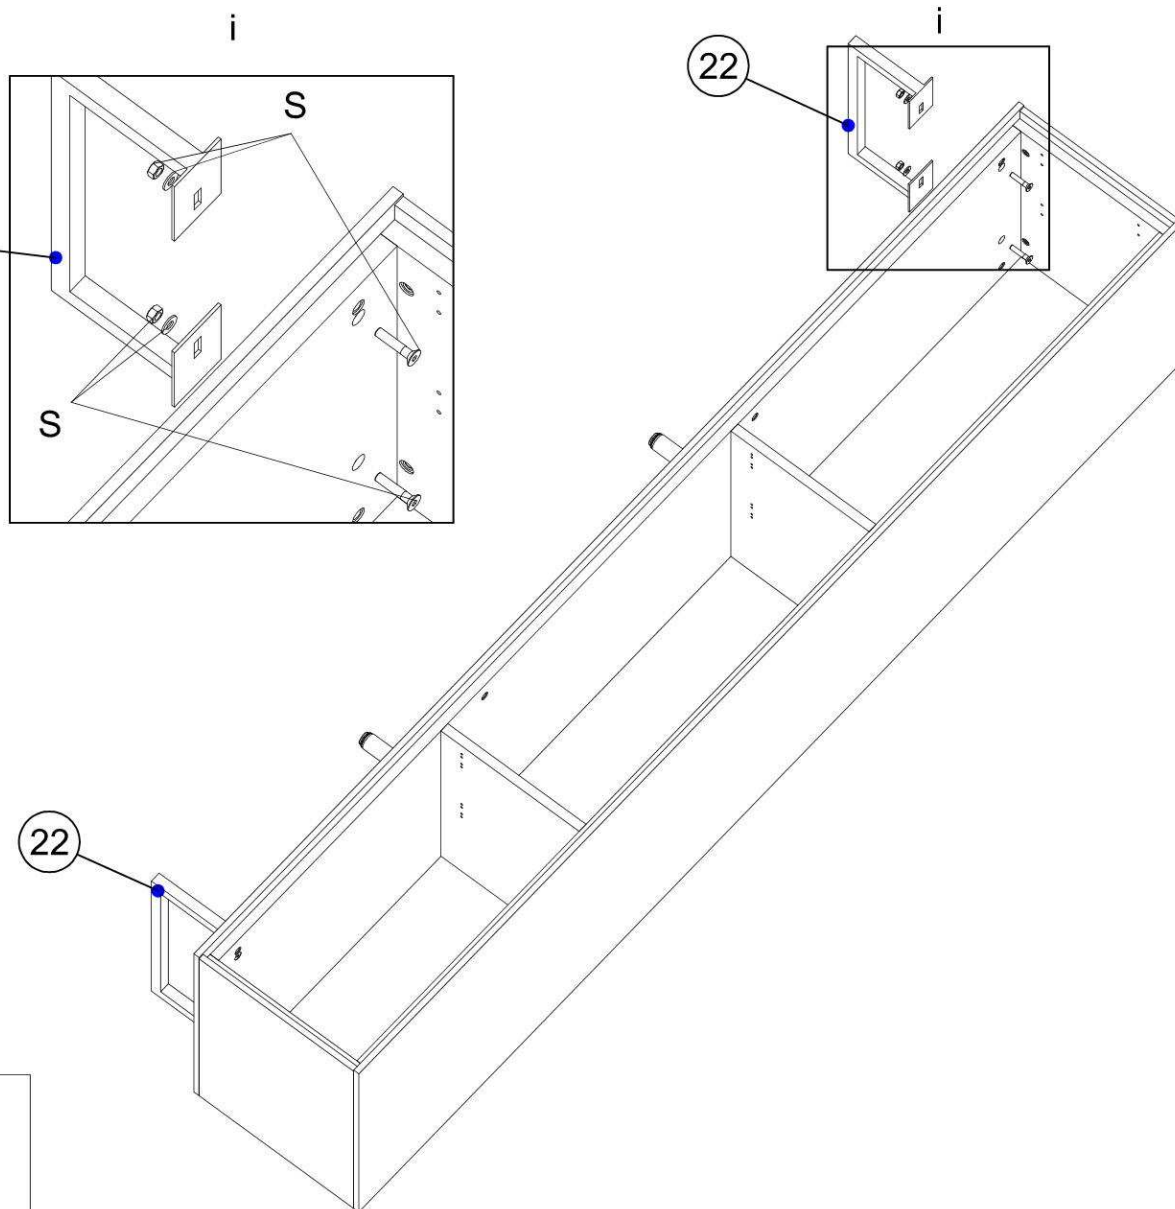










VIII





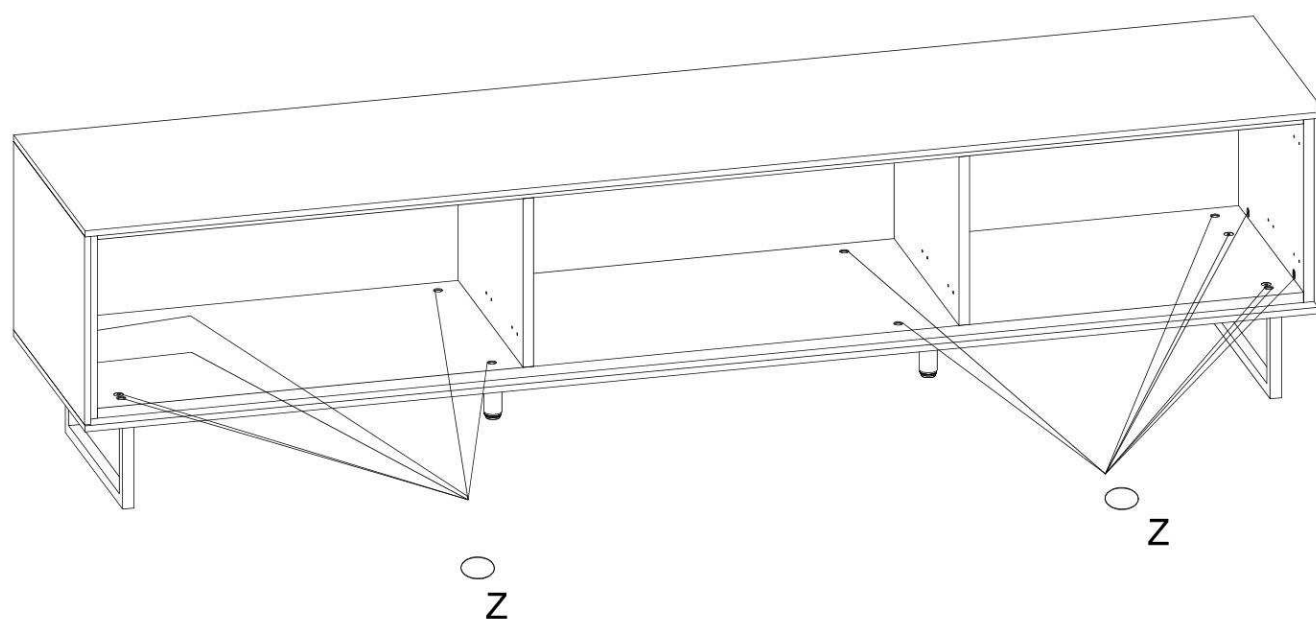
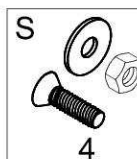





IX

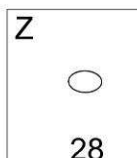

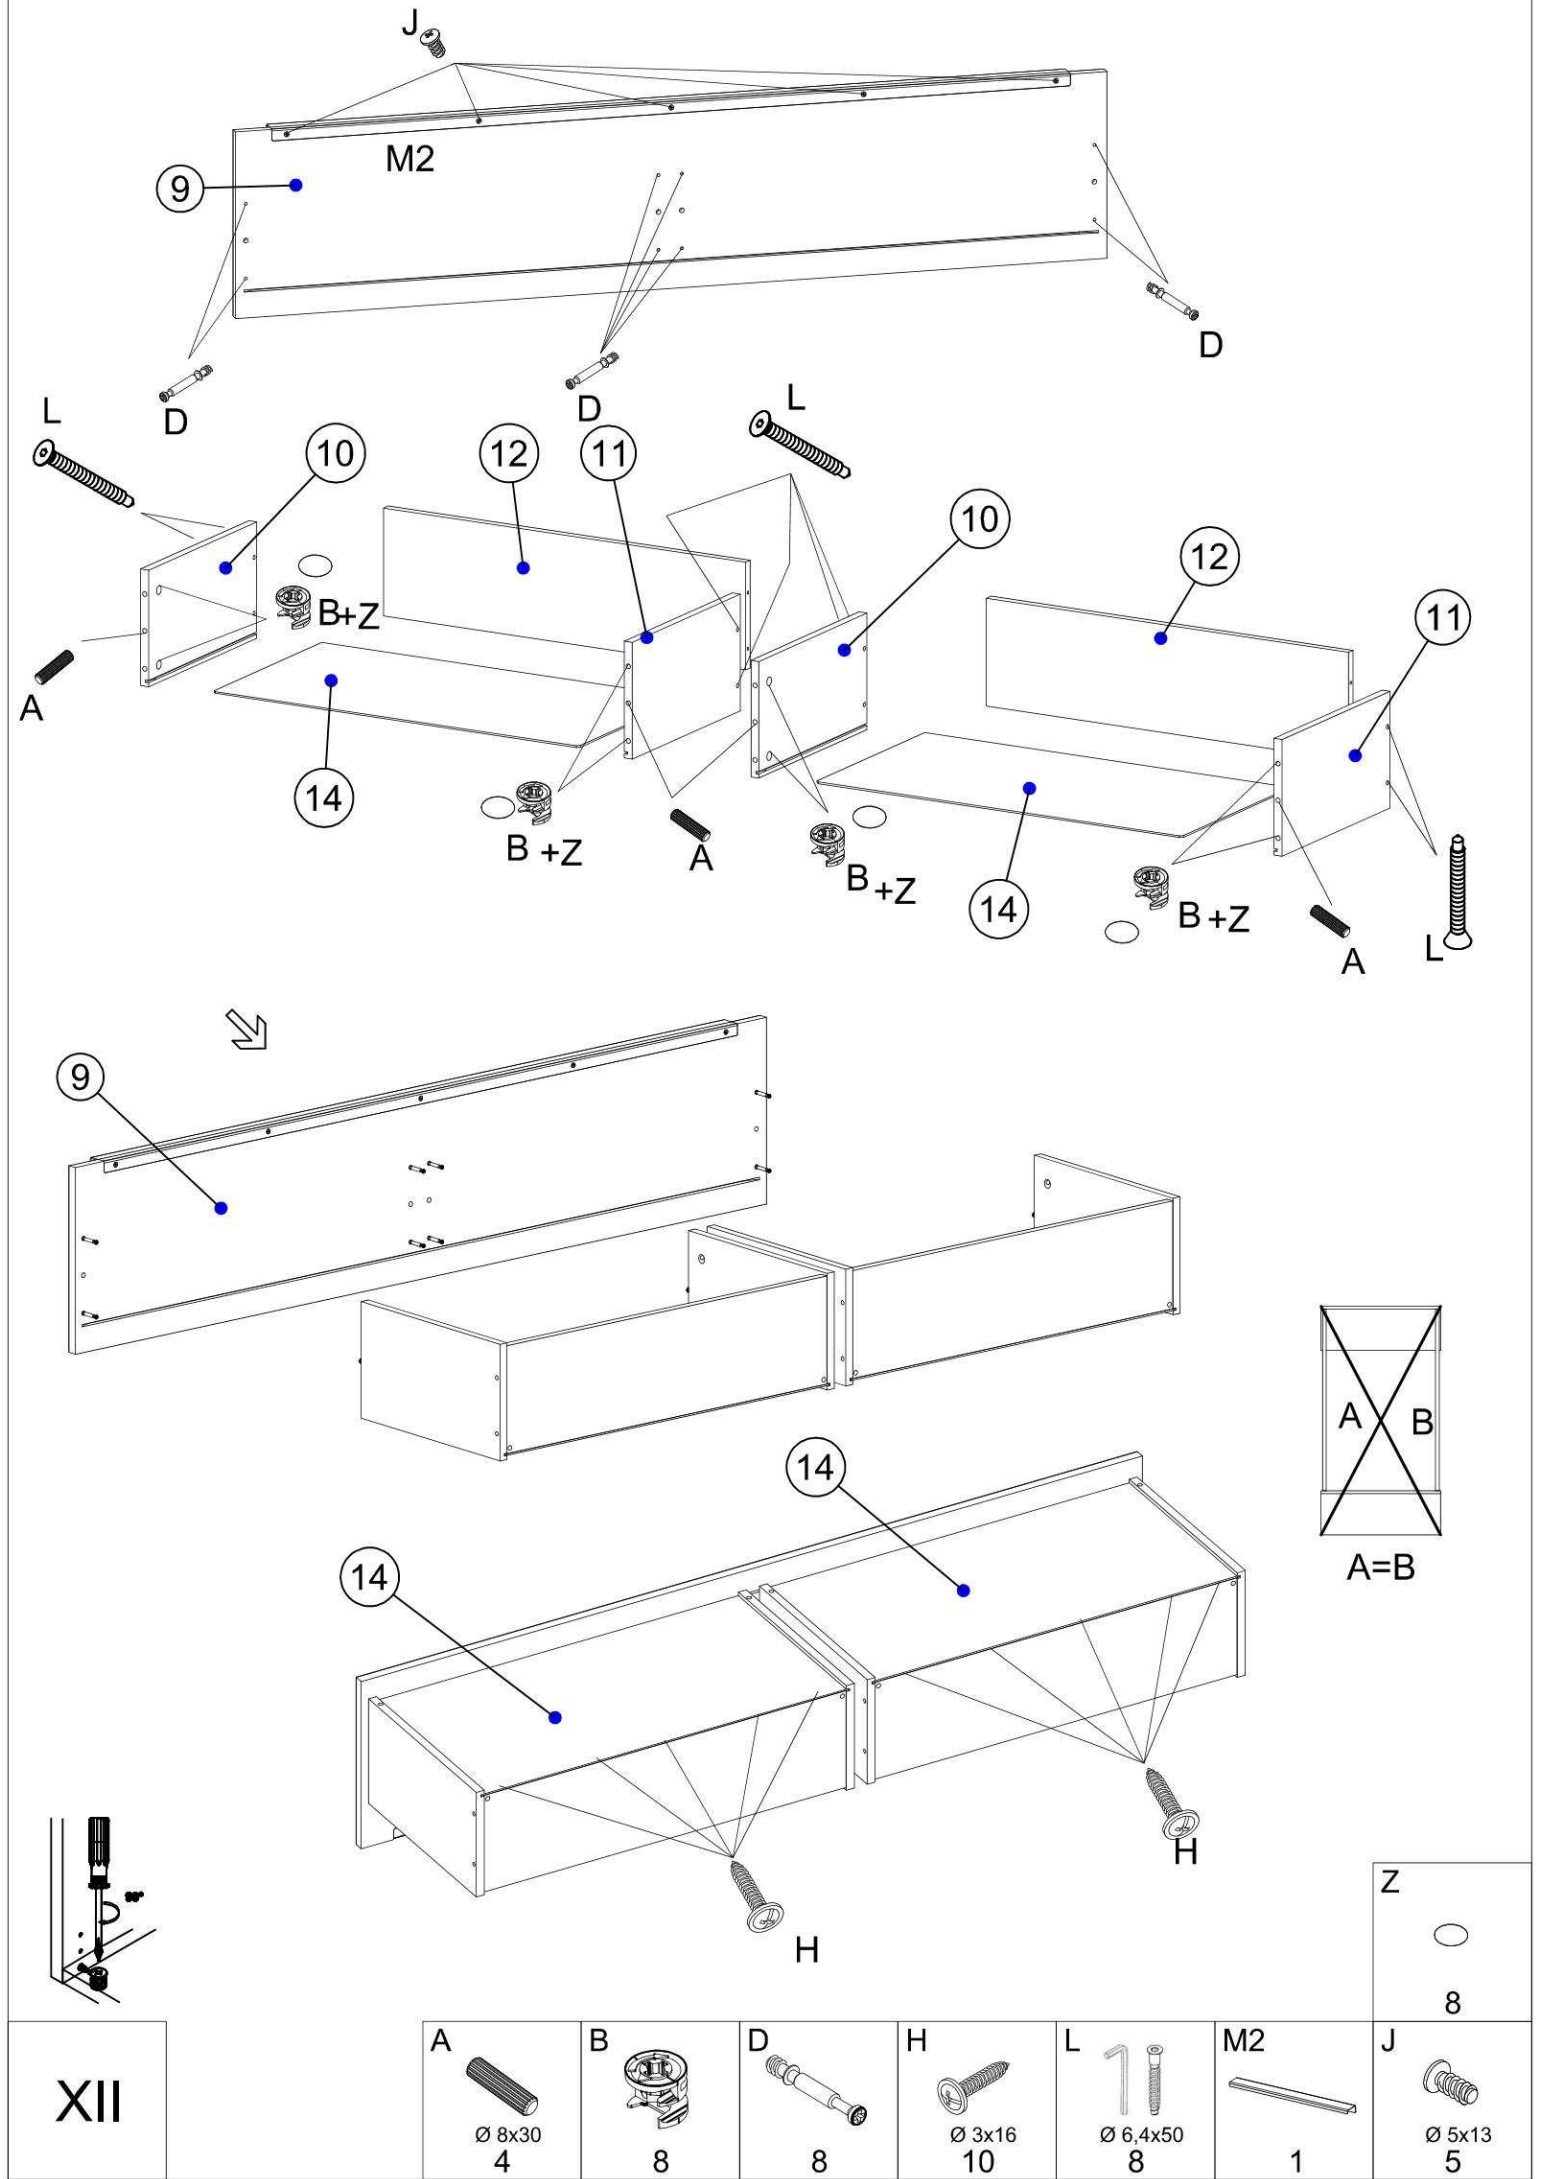

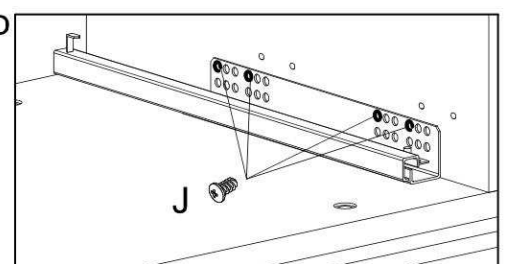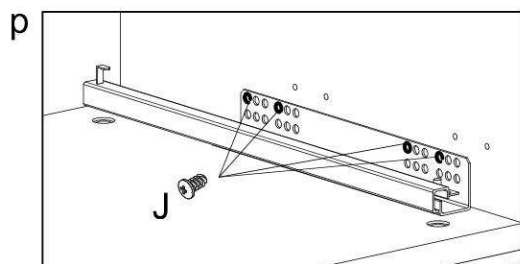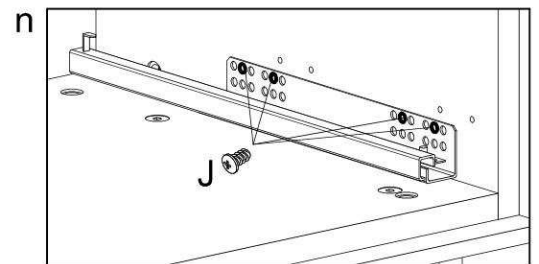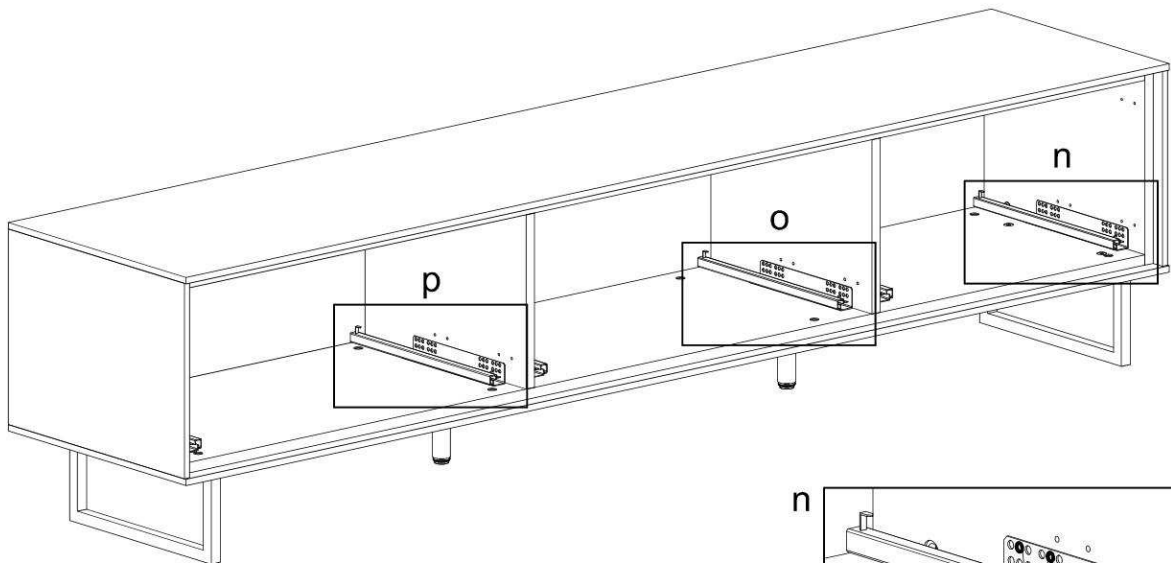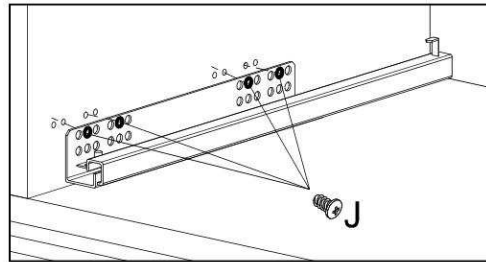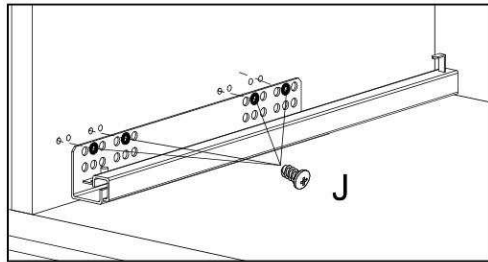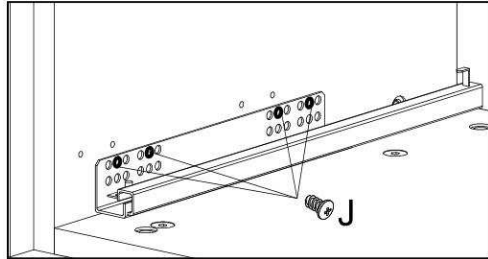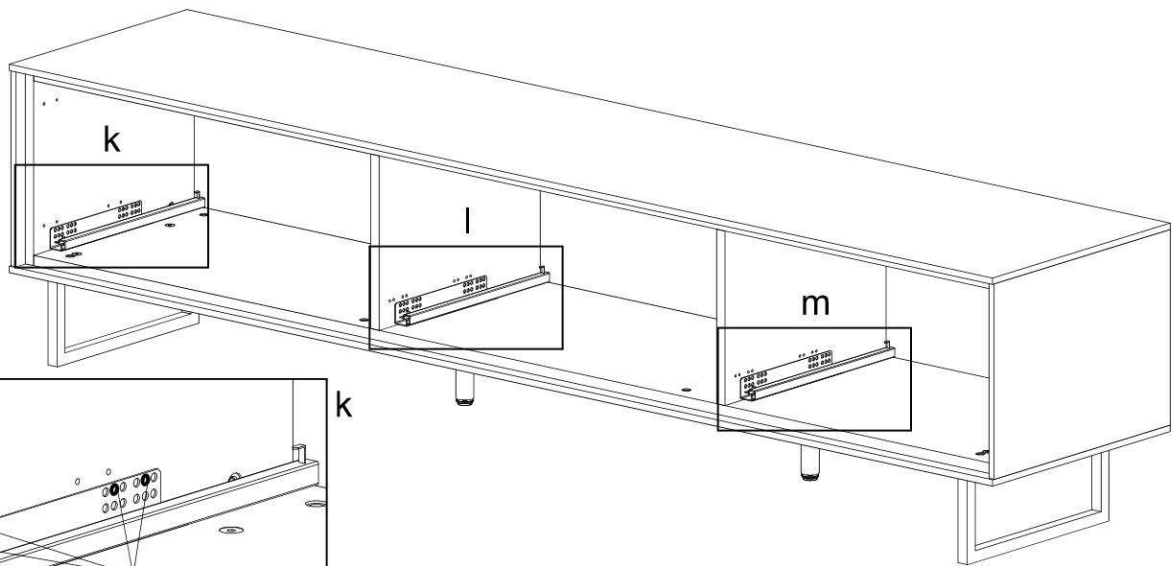

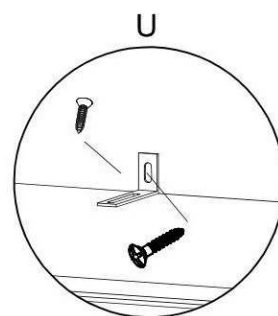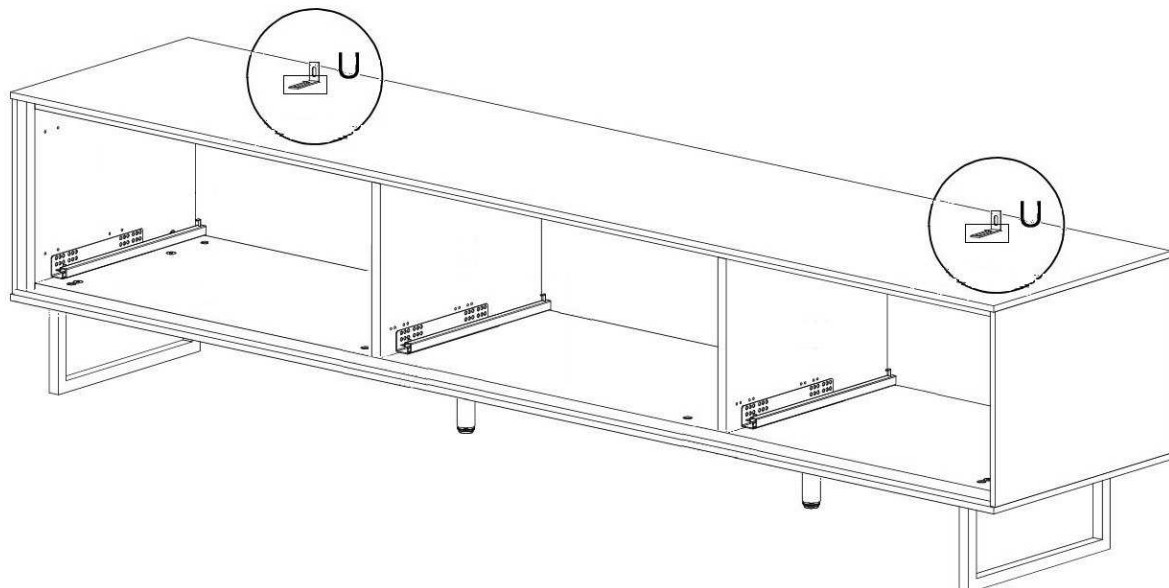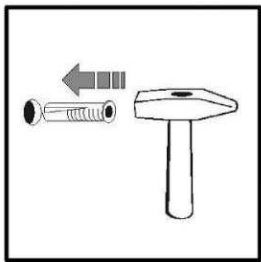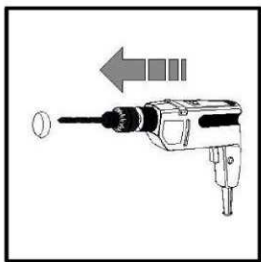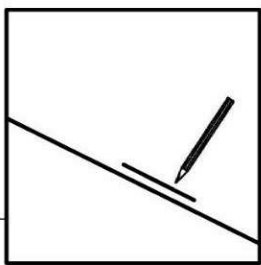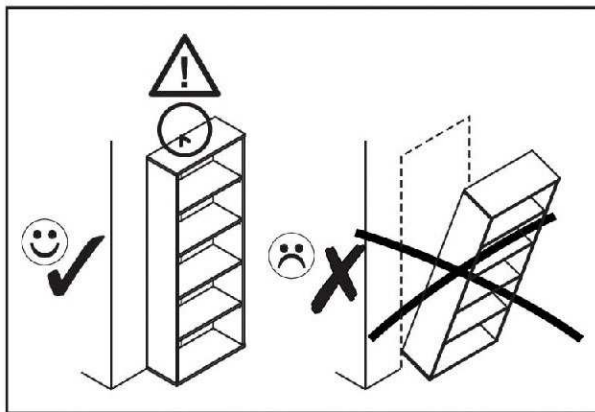

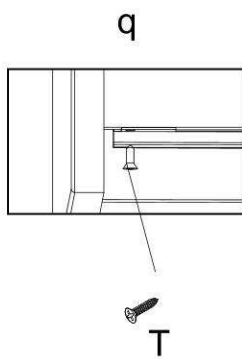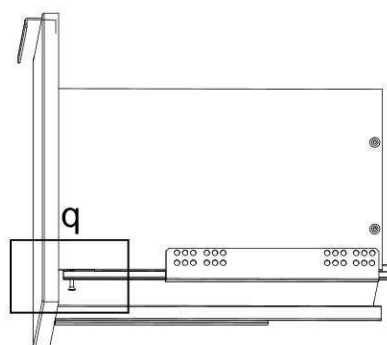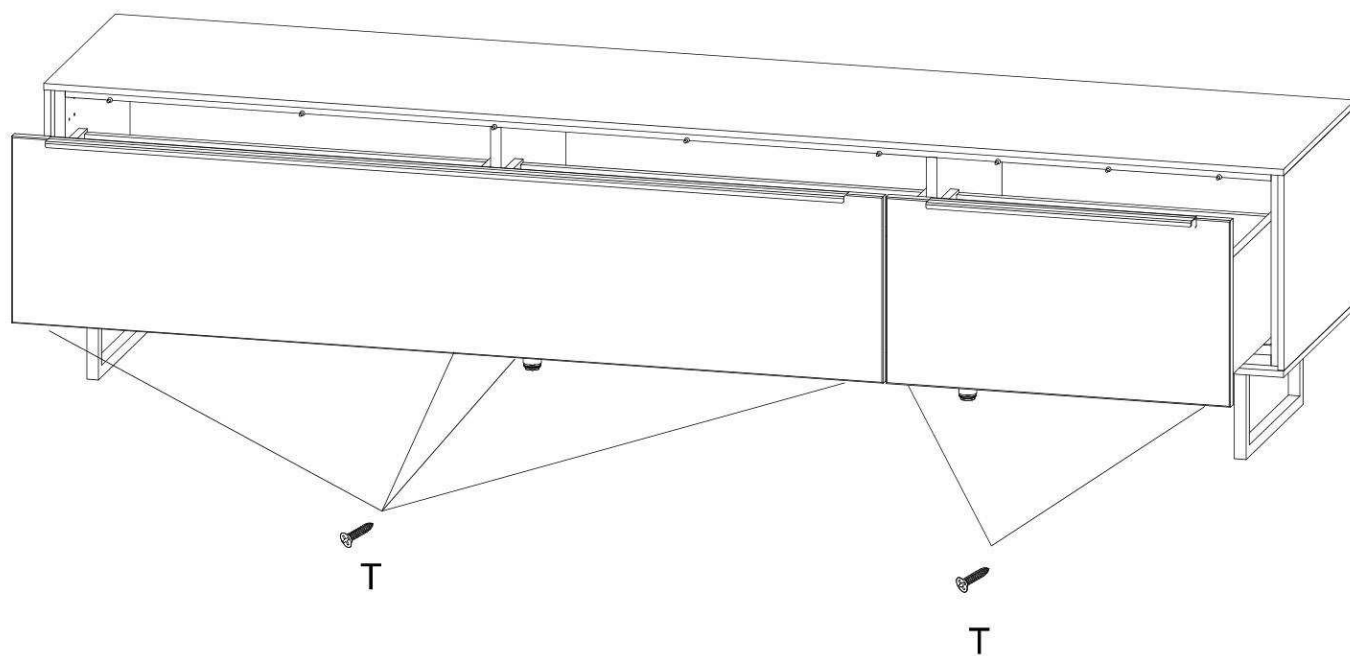

XV

T





 Ø 3x16
 6

2648









Versionsnummer:

12.2023



Naturholz kann sich werkstoffbedingt verziehen. Durch das Montieren ziehen sich Teile wieder plan.

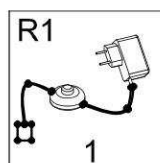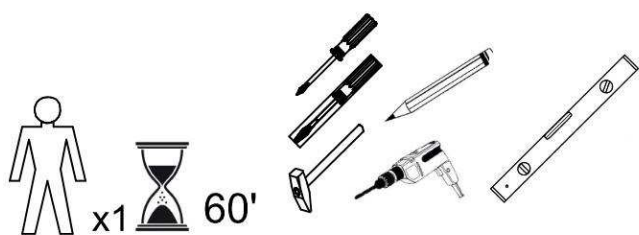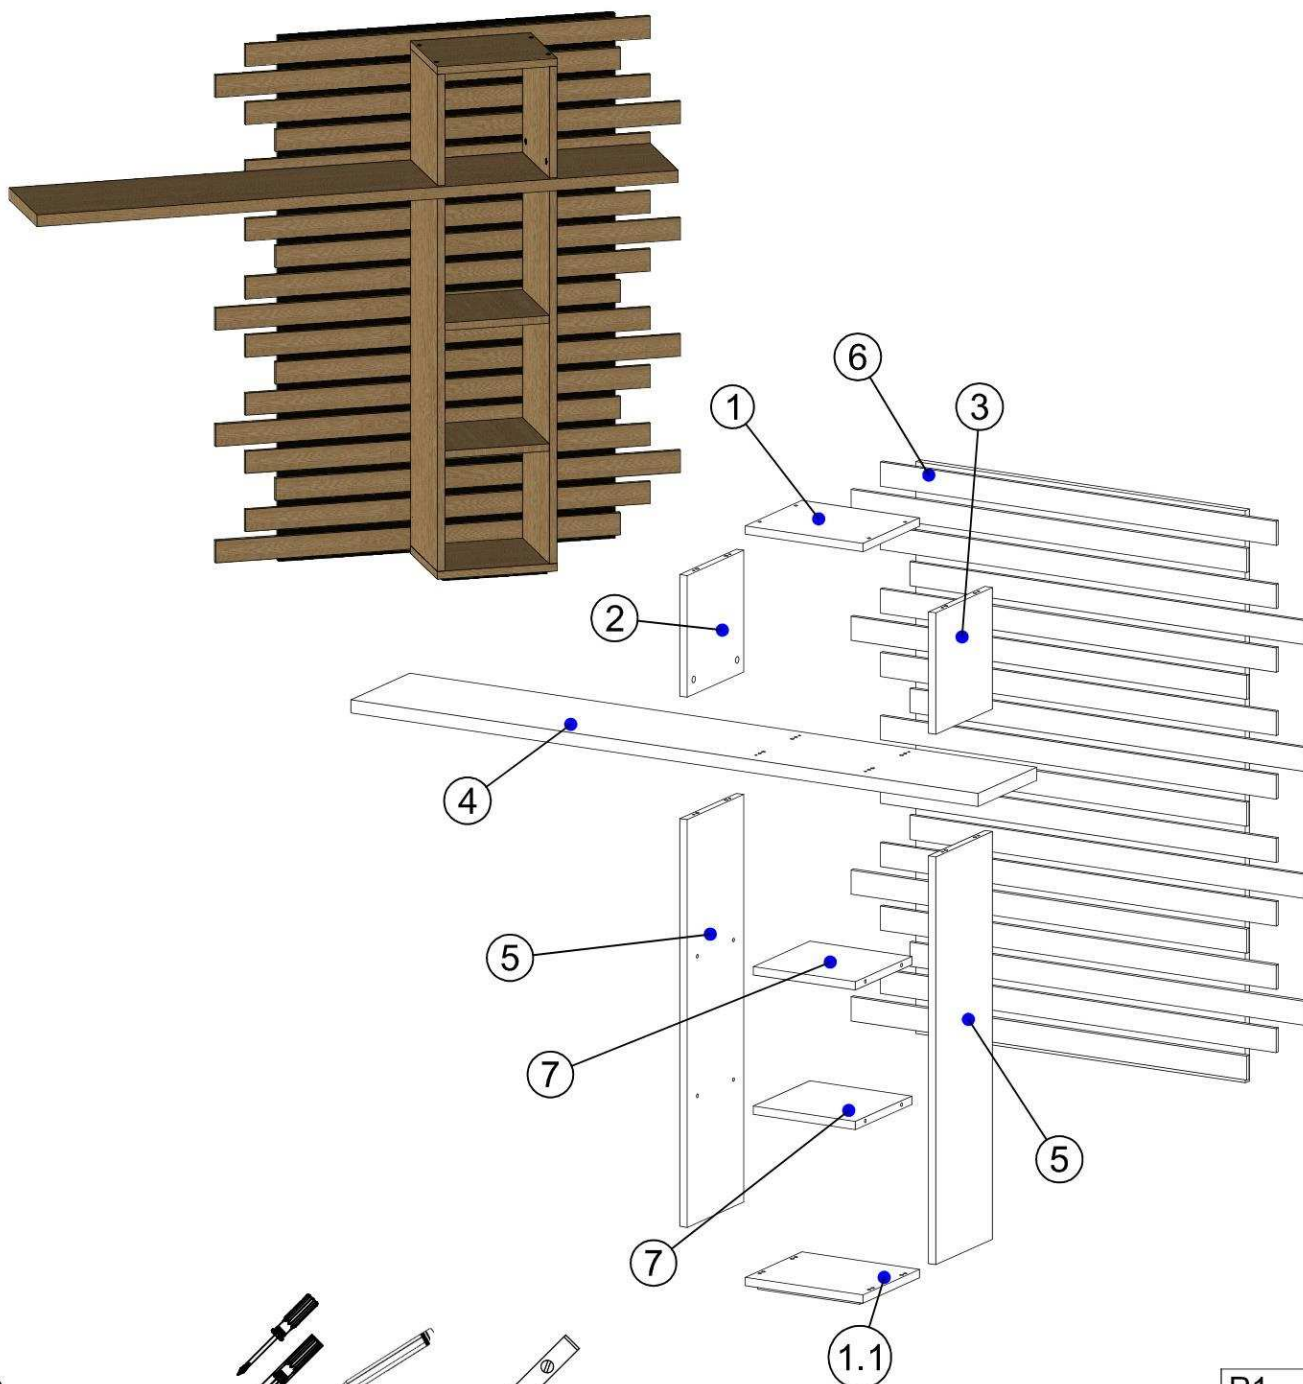

A	B	D	L	L1	R	H	Z	Z1
								
Ø 8x30 24	4	4	Ø 6,4x50 8	Ø 6,5x70 11	3	2	4	8

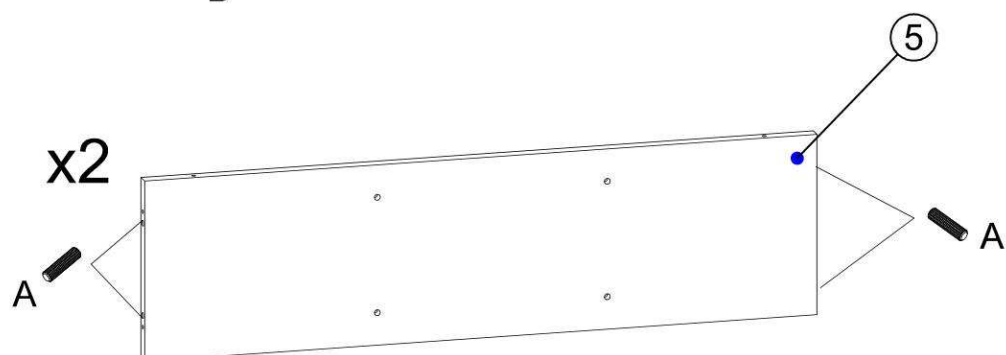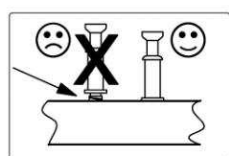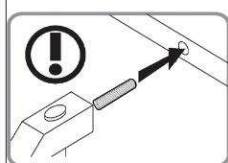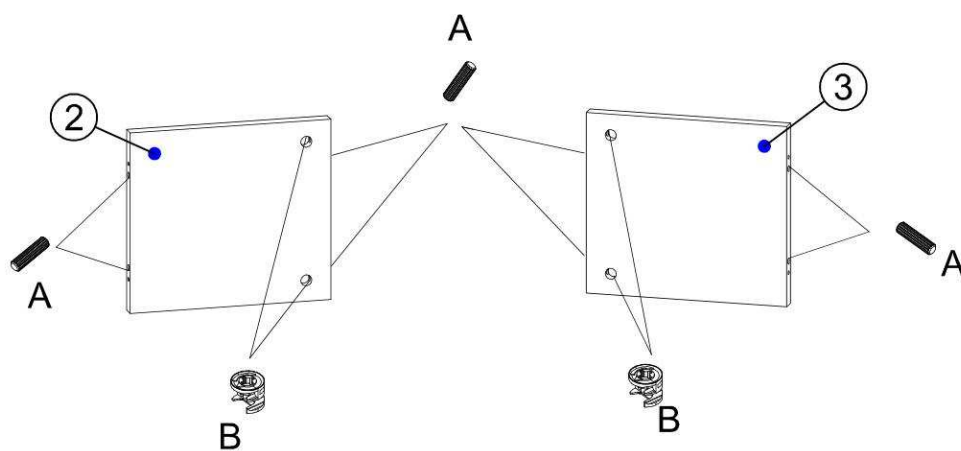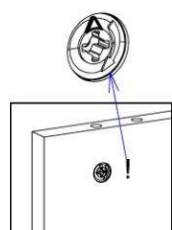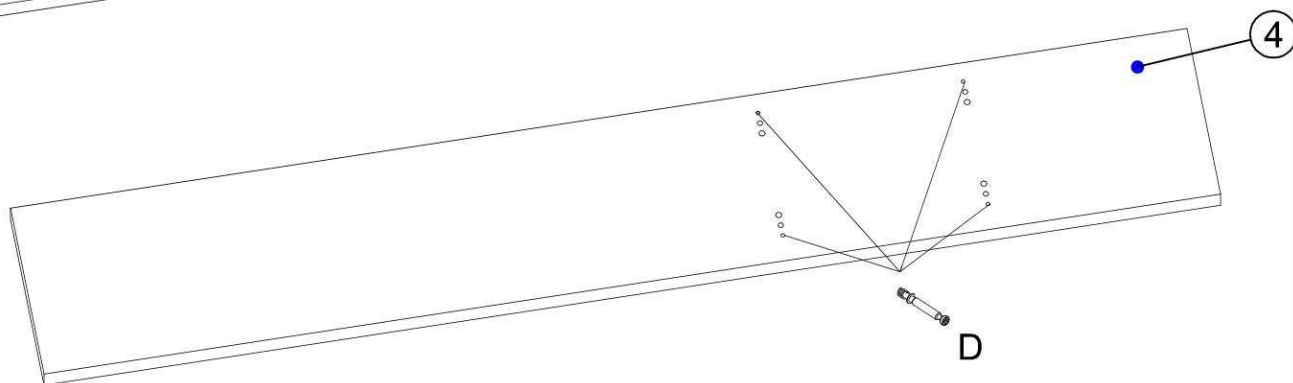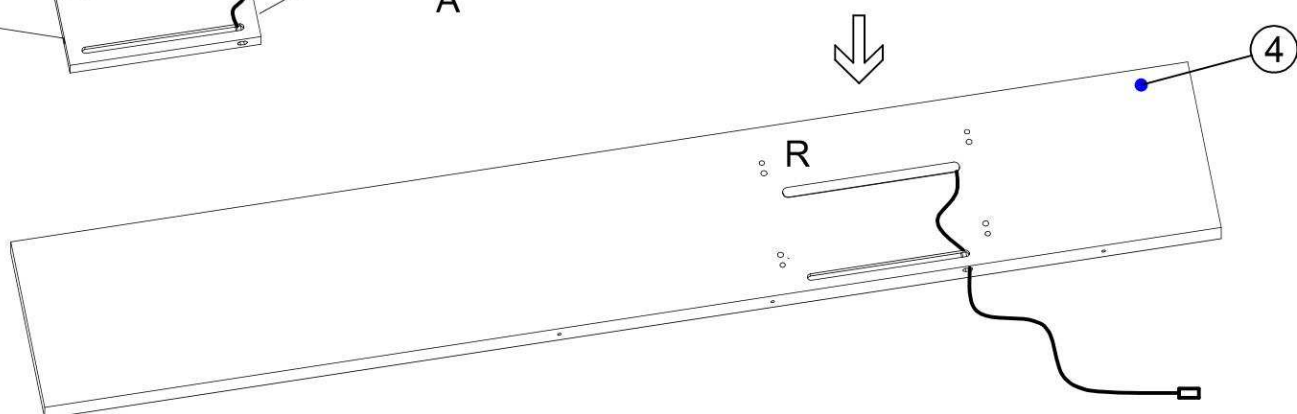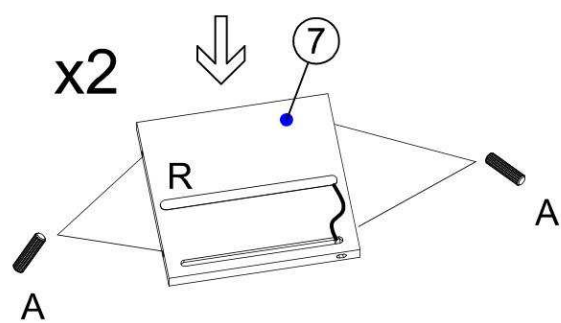


A  Ø 8x30 24	B  4	D  4	R  3
--	---	---	---

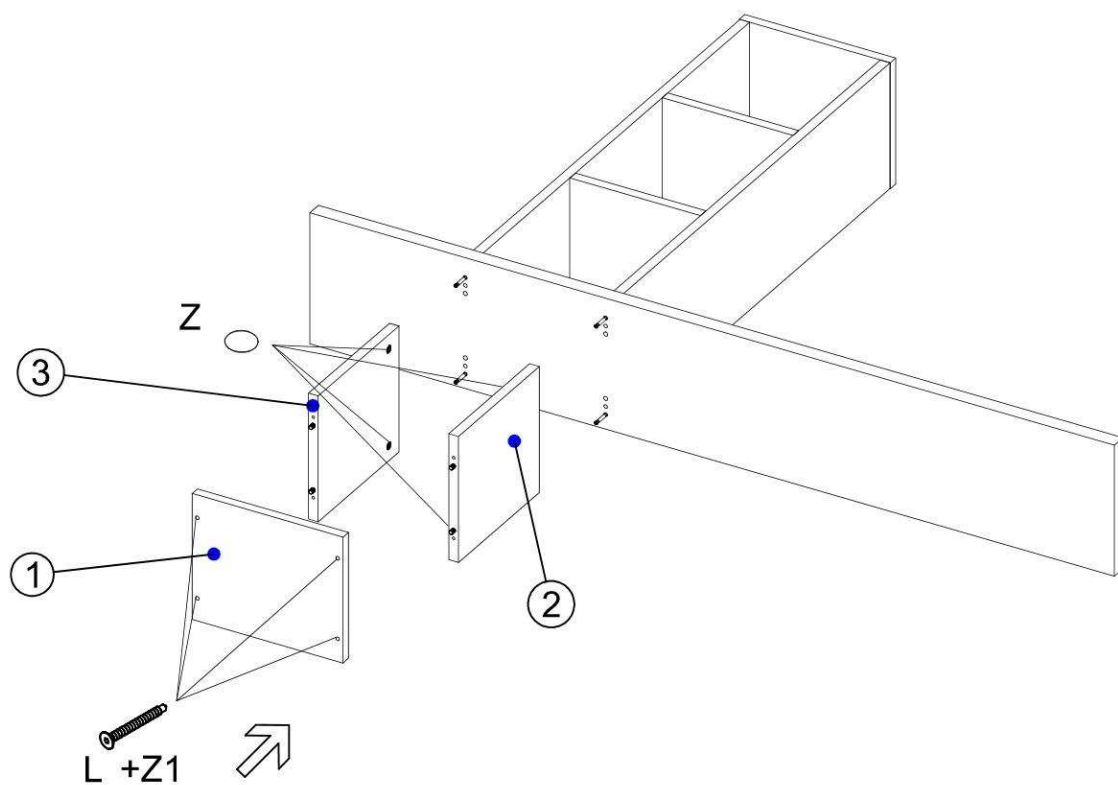
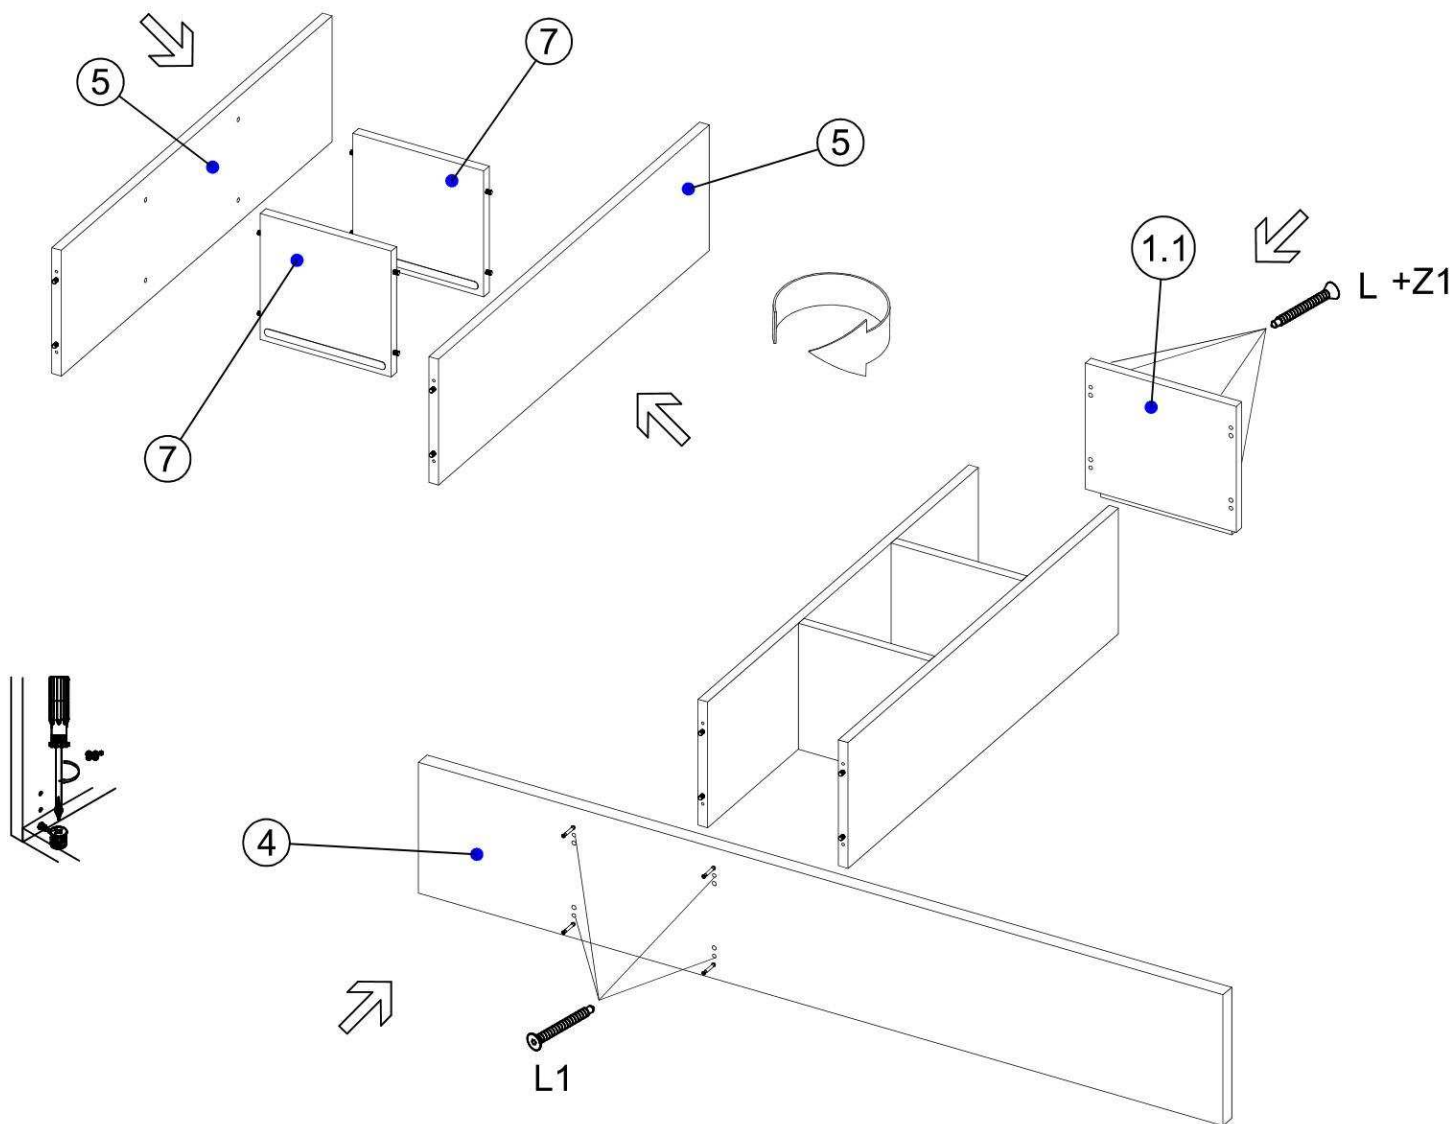



II

L	L1	Z	Z1
			
Ø 6,4x50	Ø 6,5x70		
8	4	4	8

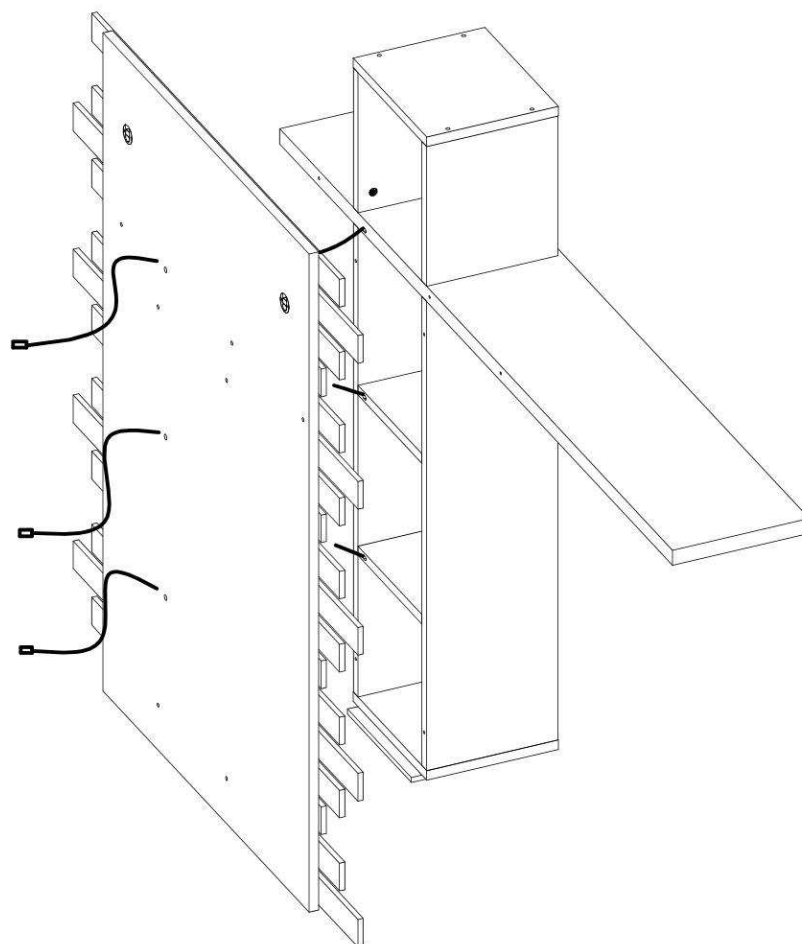

Wandbefestigung

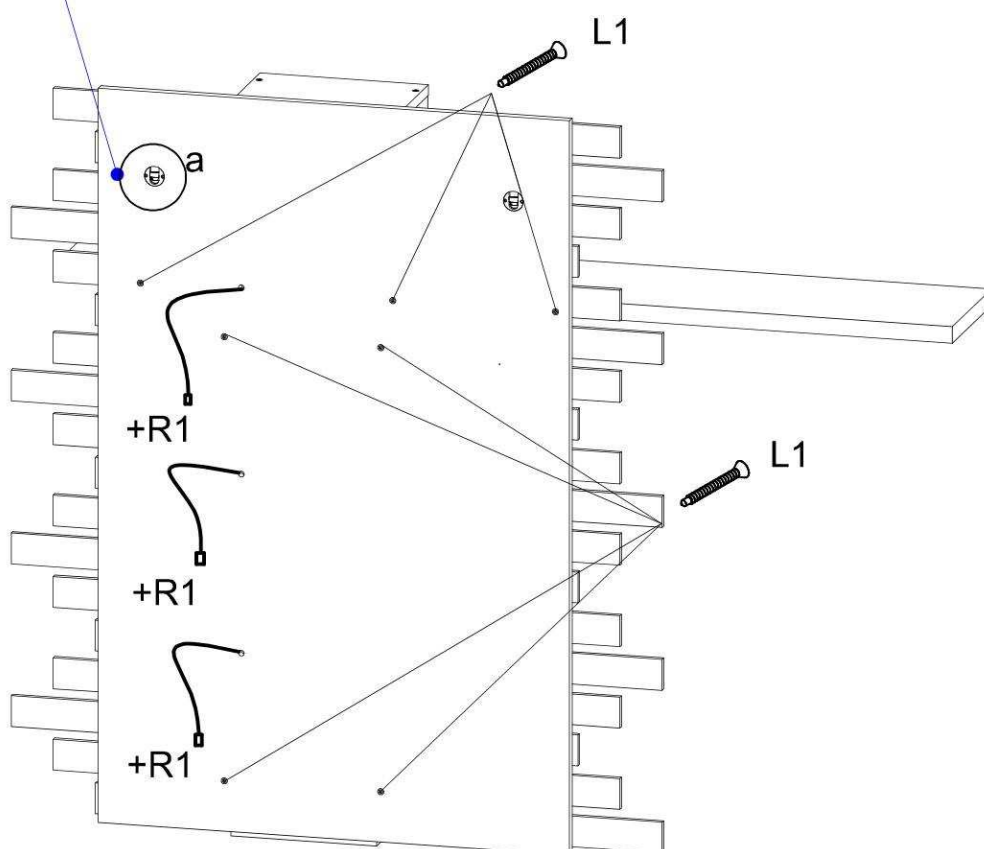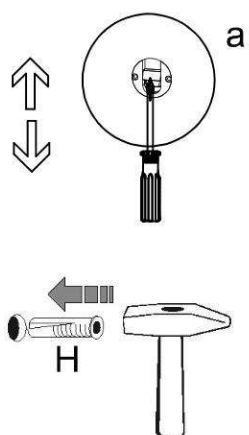

L1  Ø 6,5x70 7	H  2	R1  1
--	---	--