


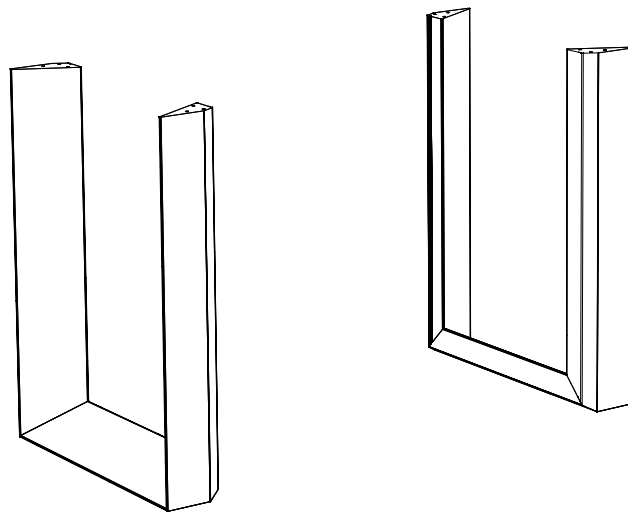







Artikel.-Nr.:





5015-U



Montageanleitung.-Nr.:






MA1-00597

REPC-Nr.:

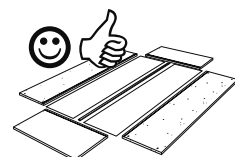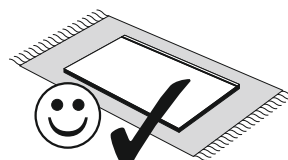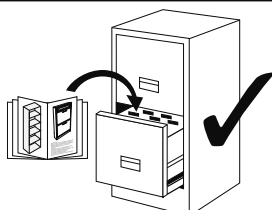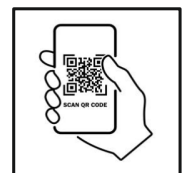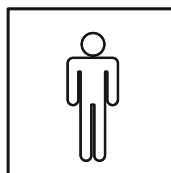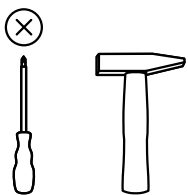

BT1-00684 Colli 1/1					
B01-241		B01-321		B01-362	
1x	SW 5	4x		4x	6x50
B02-104		B02-169		B05-130	
12x	8x40	8x	ø12mm	4x	
B01-183					
12x	6x60				

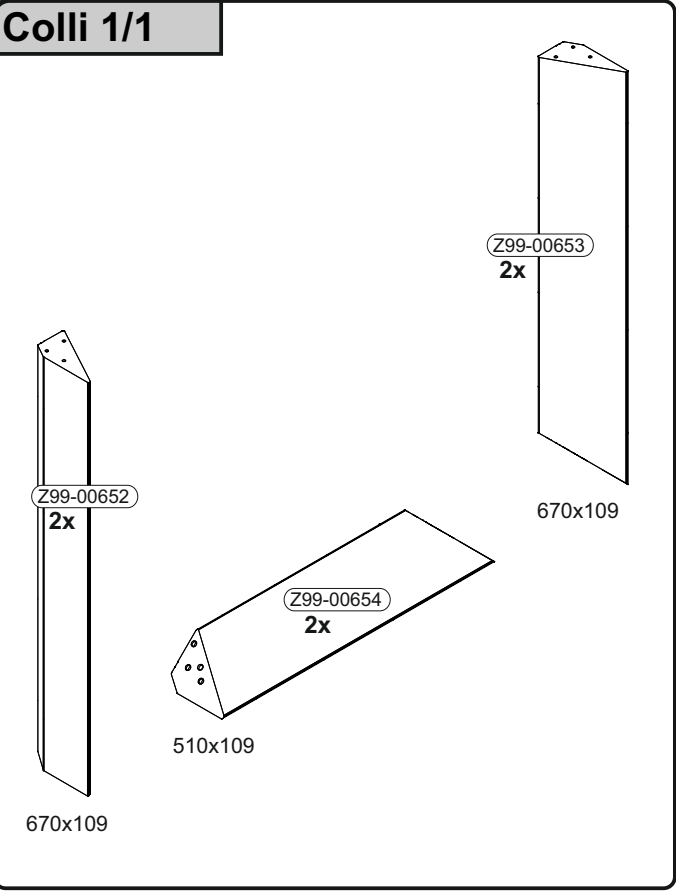

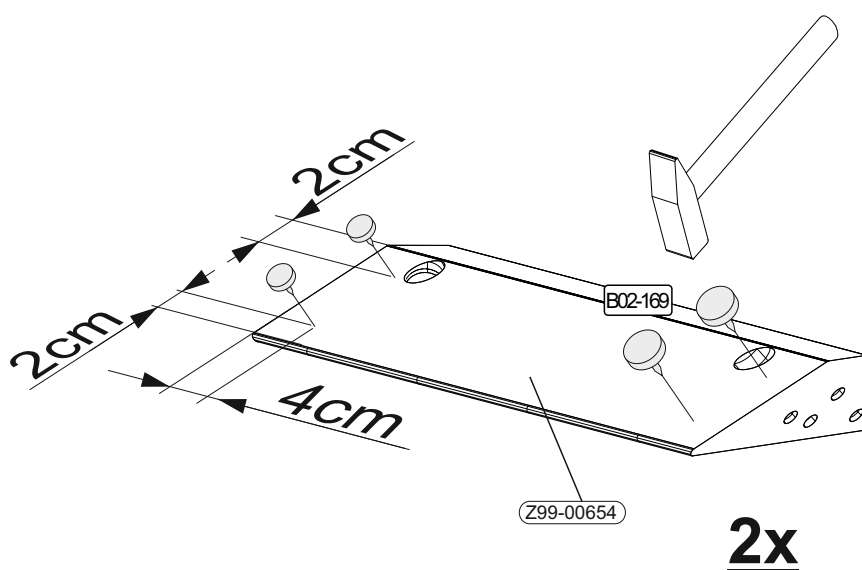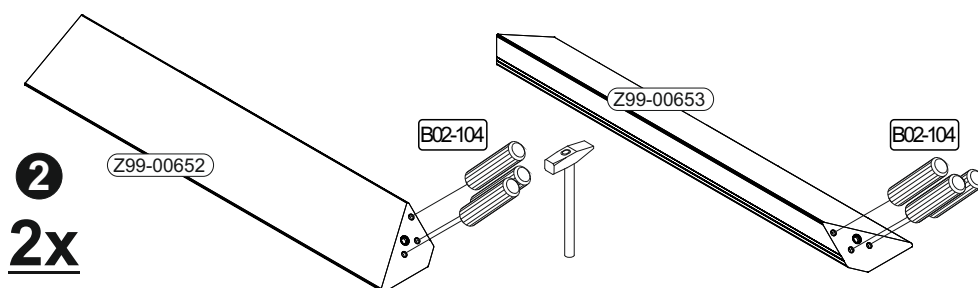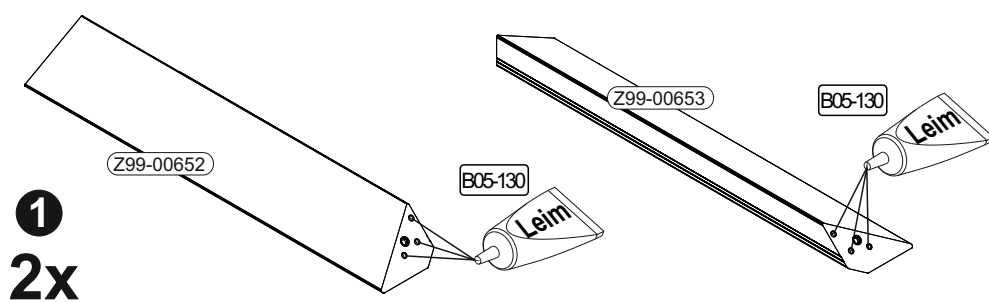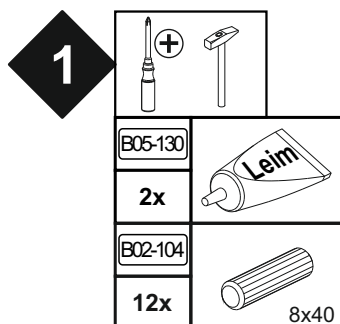


3



B01-241

1x



SW 5

4x




B01-321

4x



B01-362

4x



6x50


B05-130

2x



Leim

1

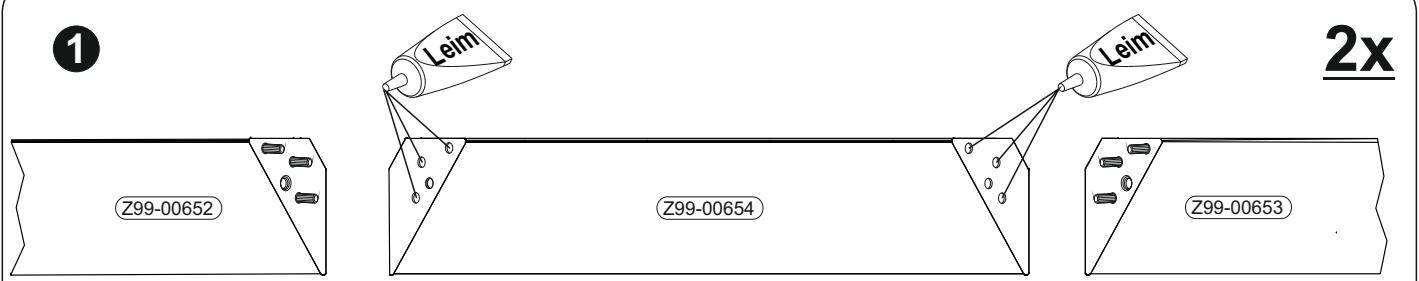


2x

2




2x

3

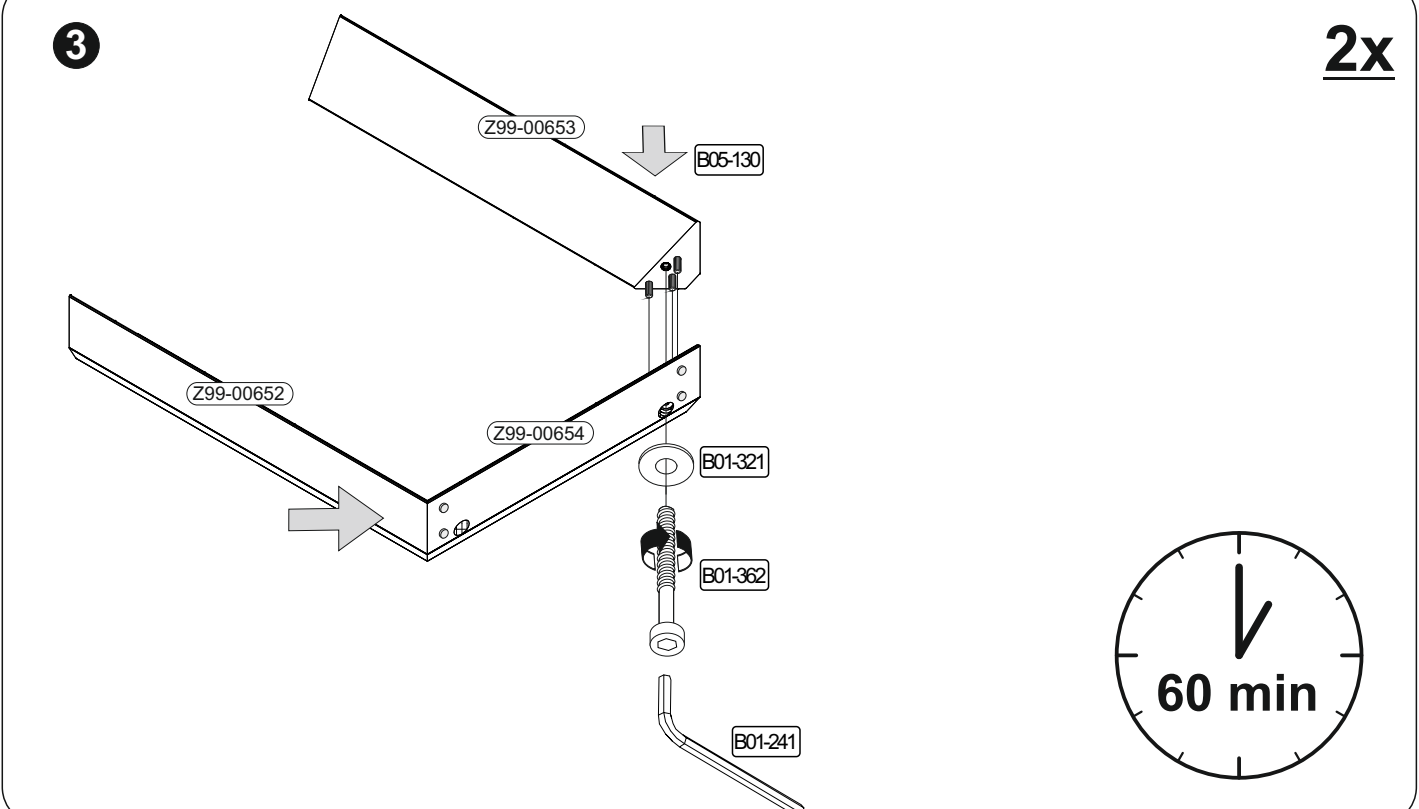

2x




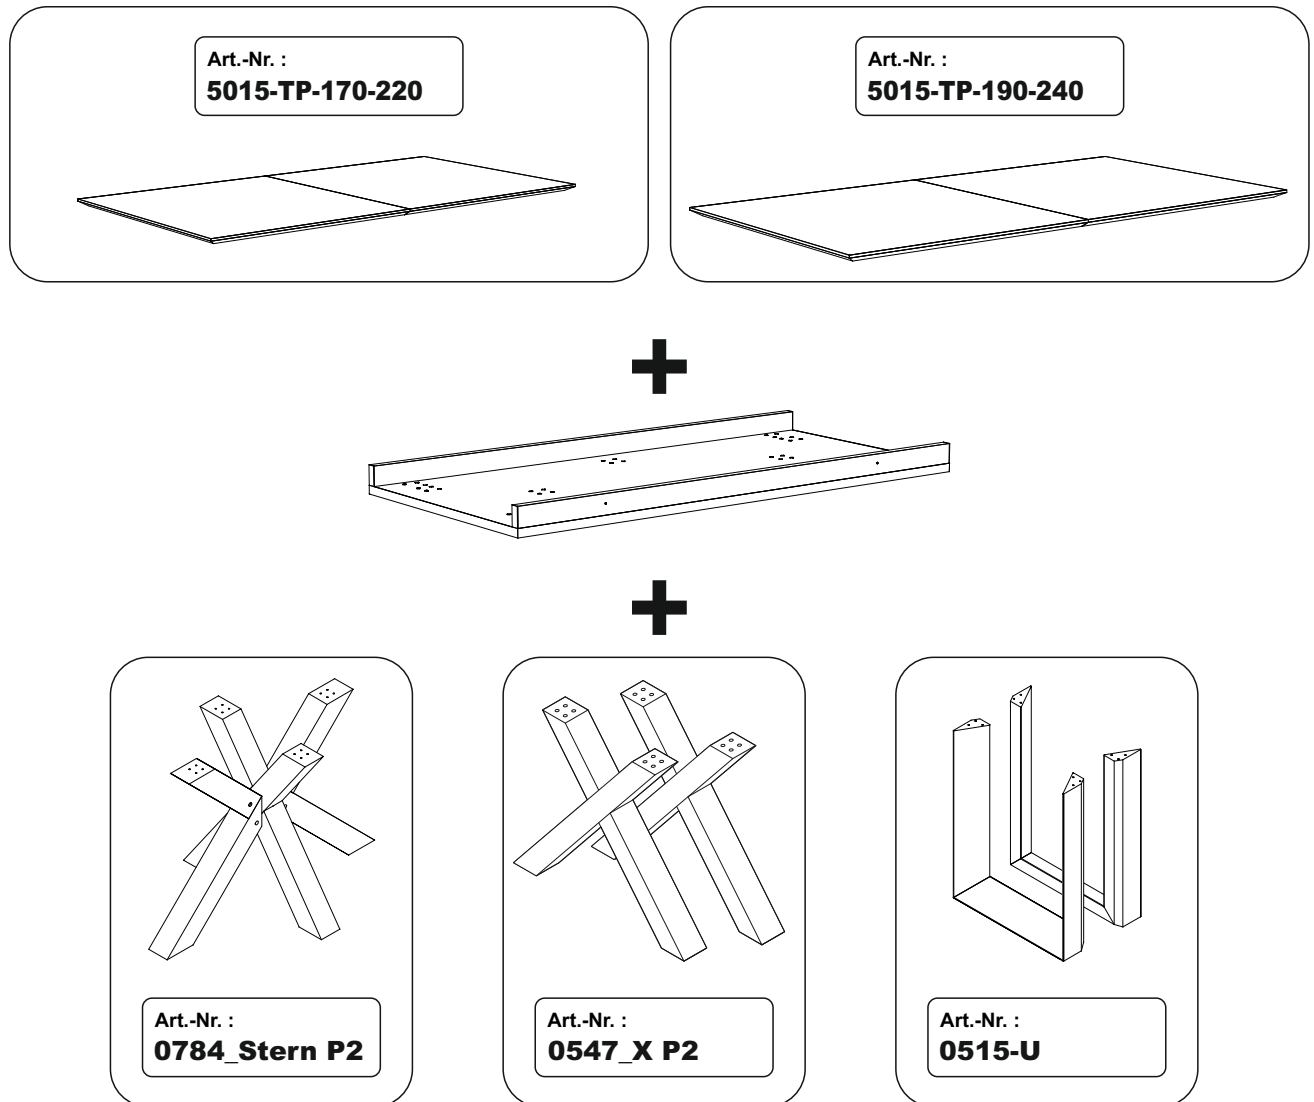


Artikel.-Nr.:



5015-VT

Montageanleitung.-Nr.:

MA1-00587

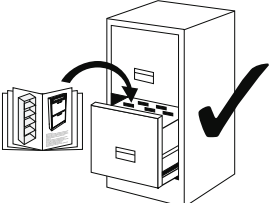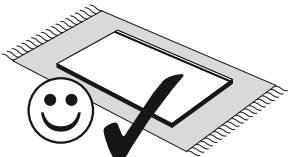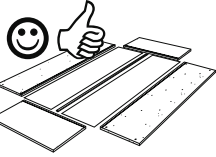
REPC-Nr.:	
 	  
	 

BT1-00687 Colli 1/1


B01-110		B01-120		B01-39-16		B01-90	
8x		10x		24x		2x	
B02-170		B02-174		B05-260			
2x		4x		1x			

BT1-00001 Colli 1/1


B05-265	
1x	





Colli 1/1

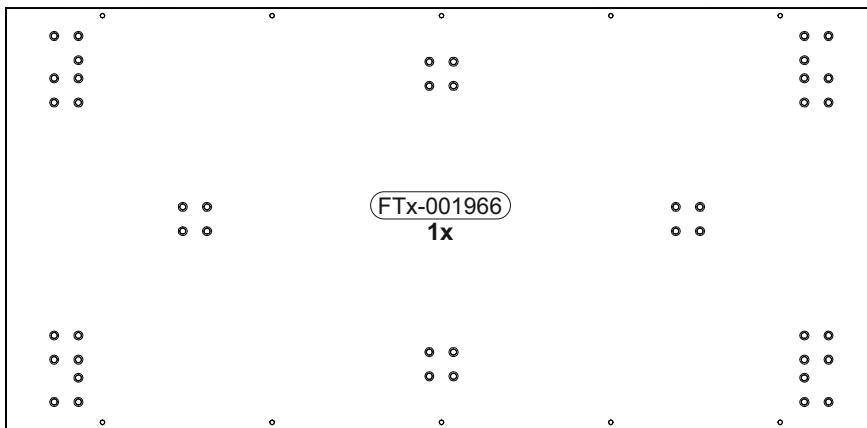


1152x558




1152x44

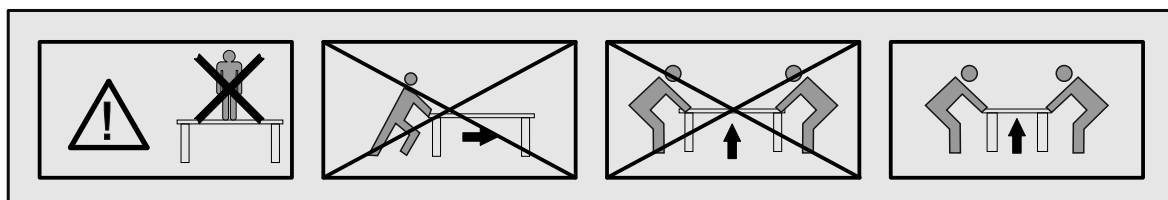
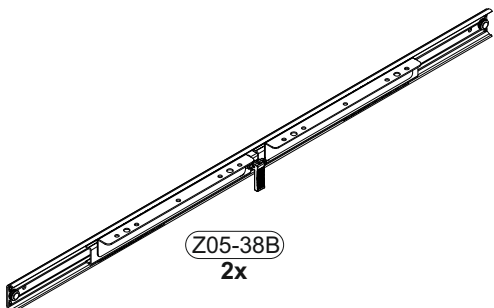


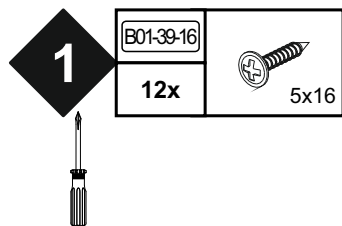

1


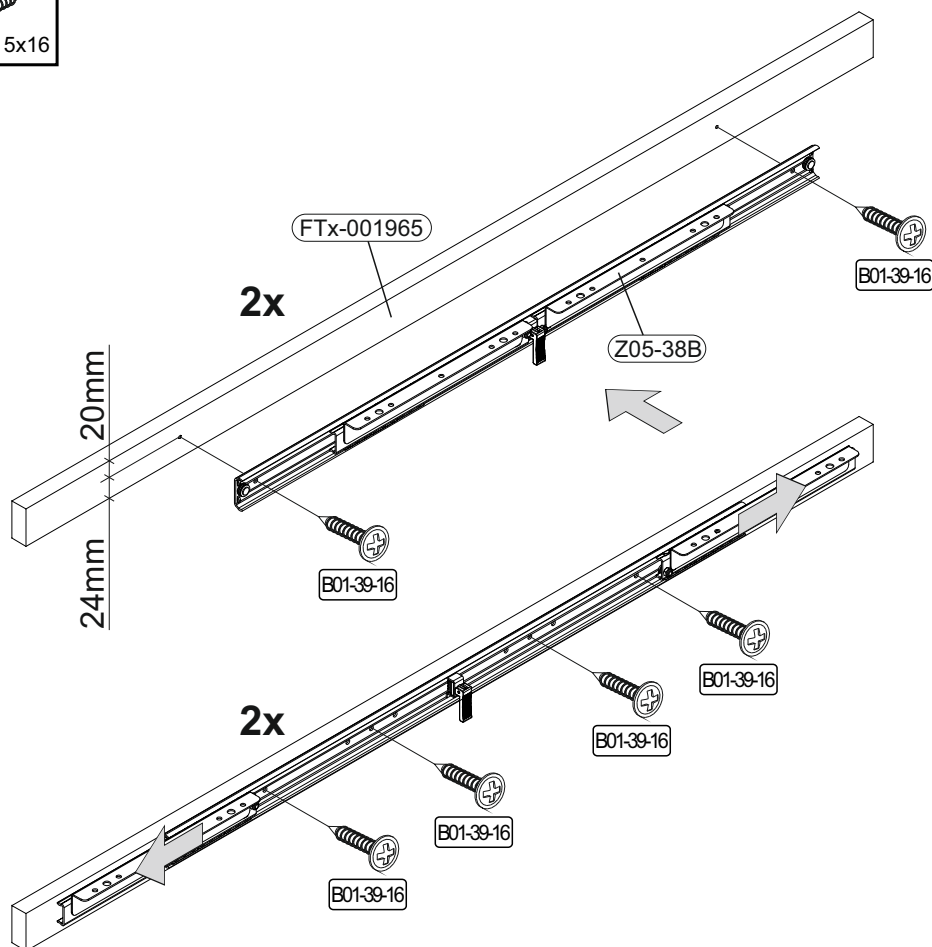


2

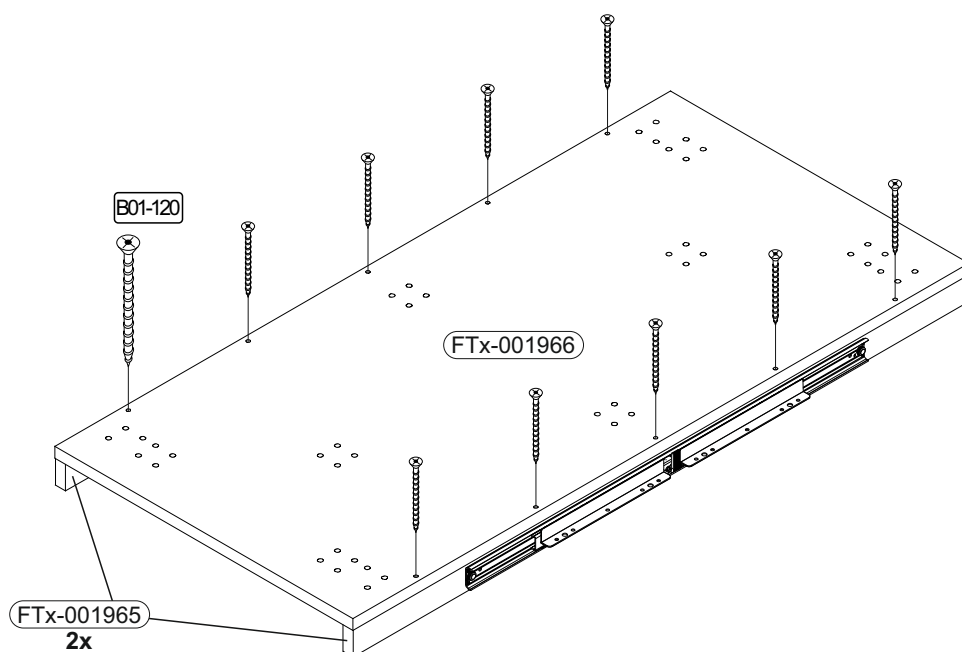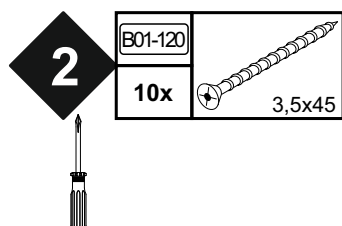


3




B01-110	
8x	3,5x35
B02-174	
4x	


180°


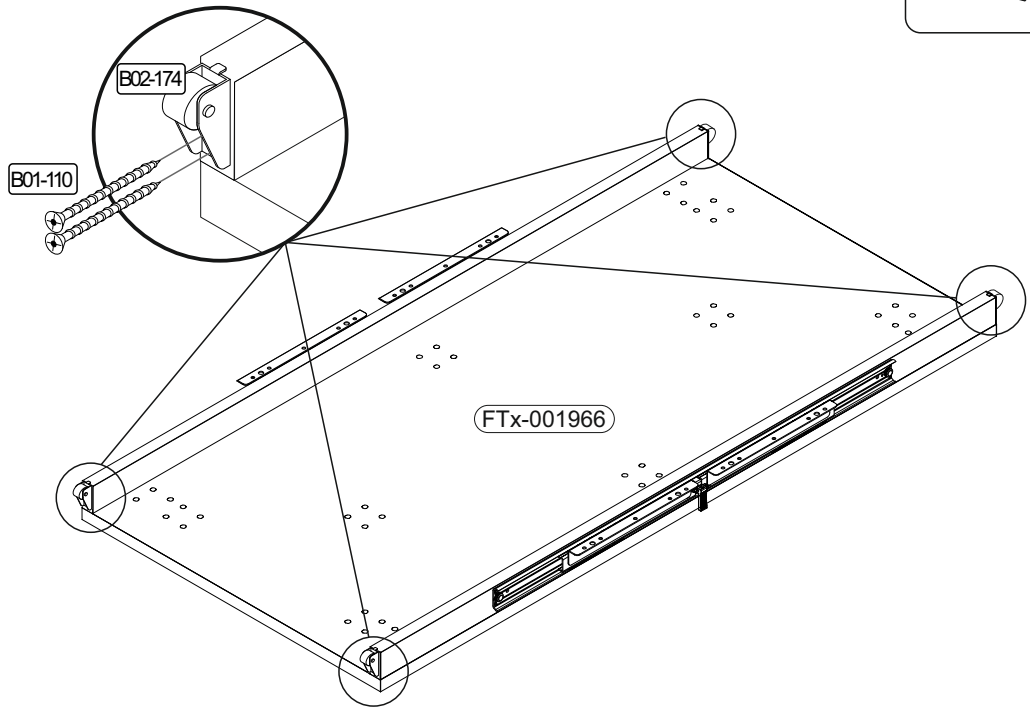


4






B01-90		B02-170	
2x	3,5x20	2x	


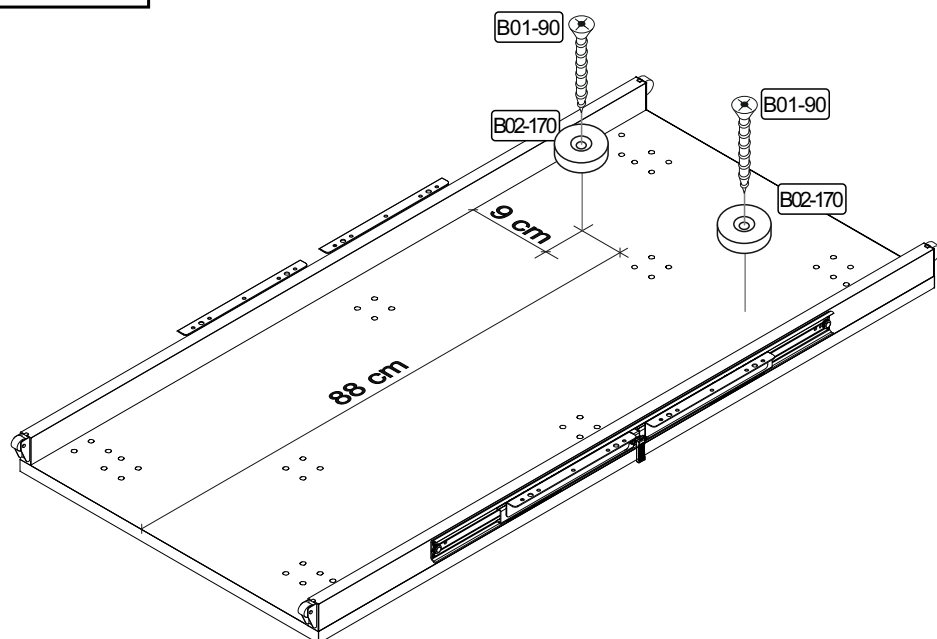


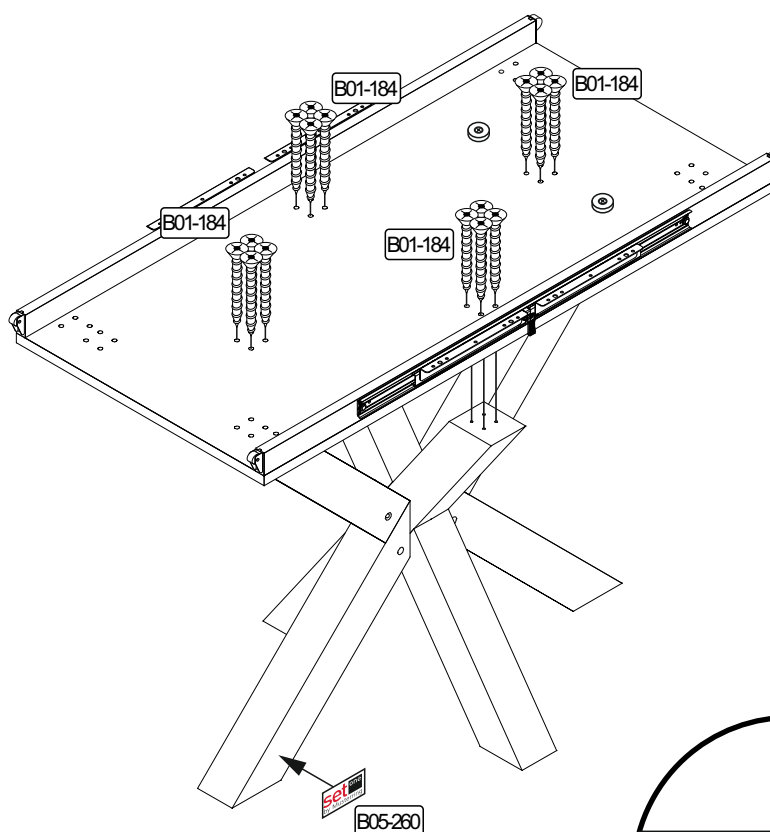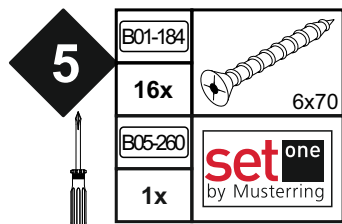


Art.-Nr. :
0784_Stern P2

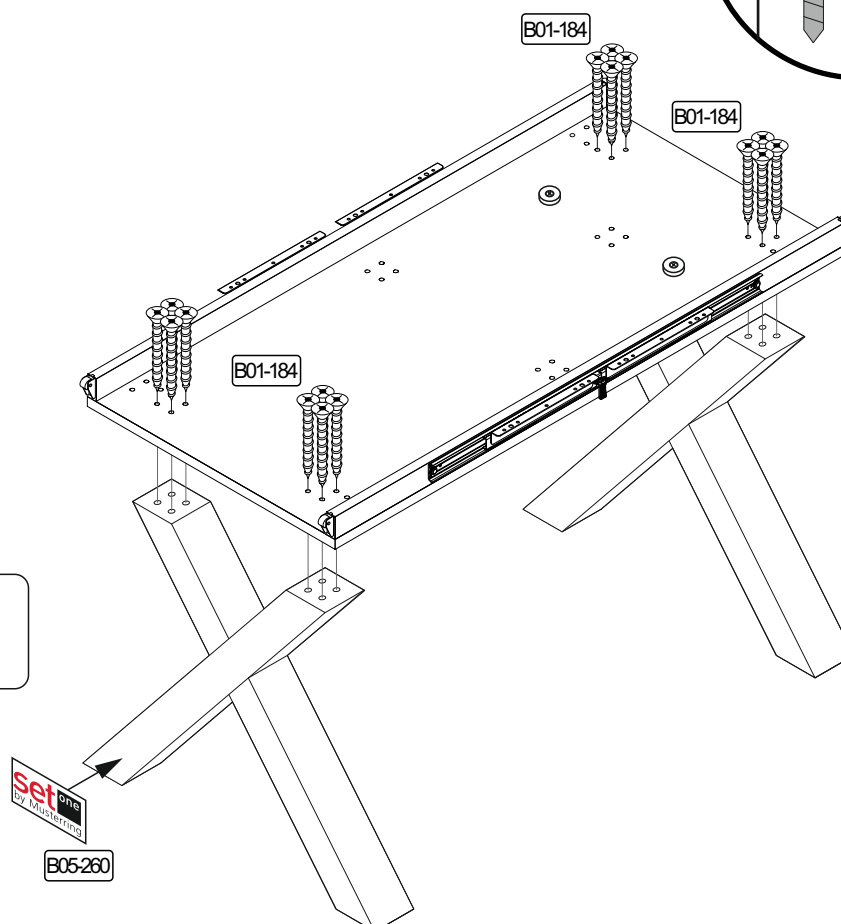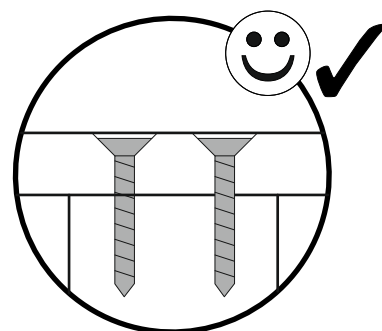

Art.-Nr. :
0547_X P2

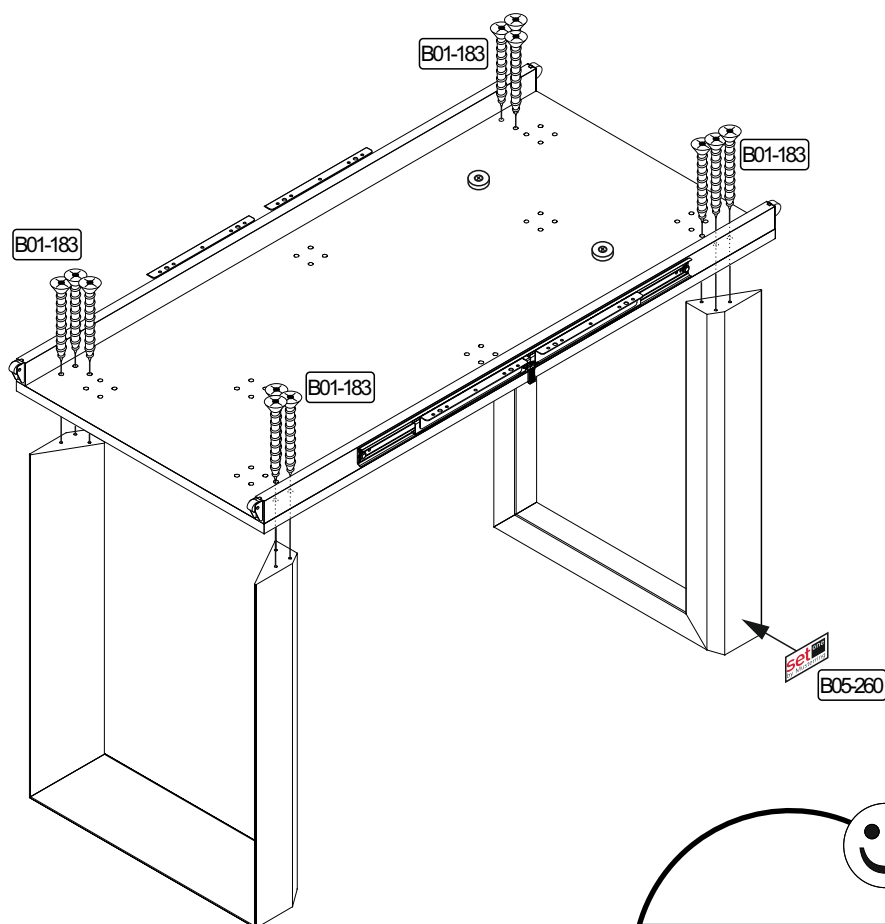


Art.-Nr. :
5015-U

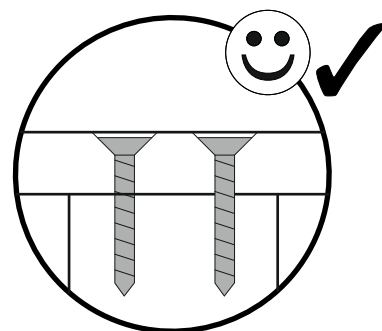


Art.-Nr. :


5015-TP-170-220

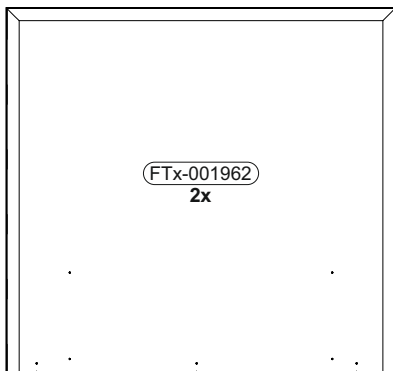

900x850

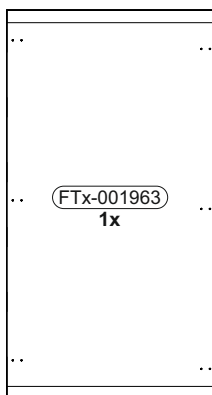


900x484

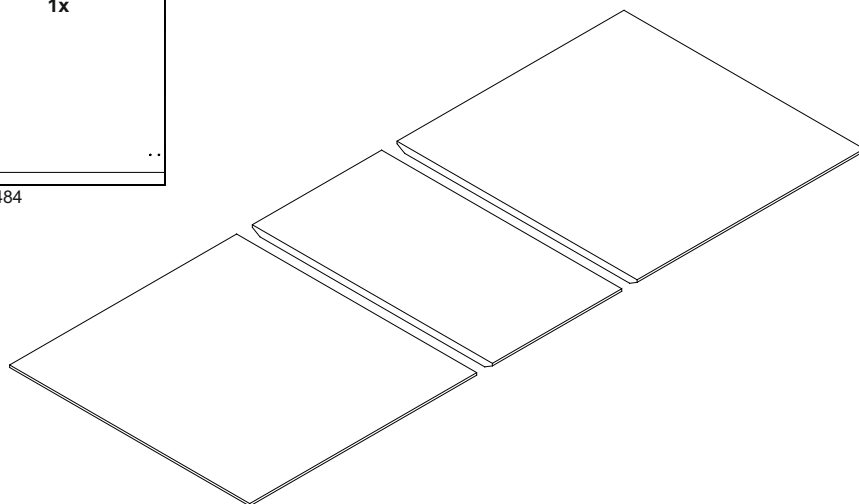


Art.-Nr. :


5015-TP-190-240


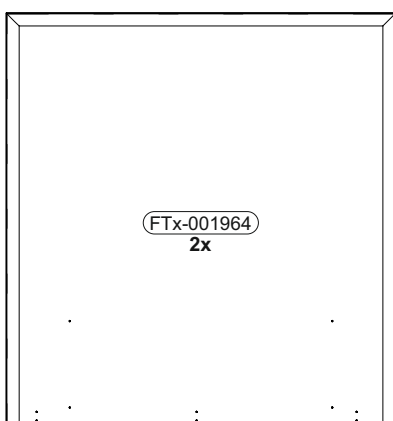




900x950

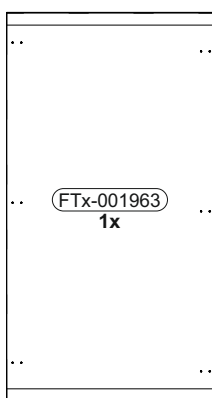

900x484

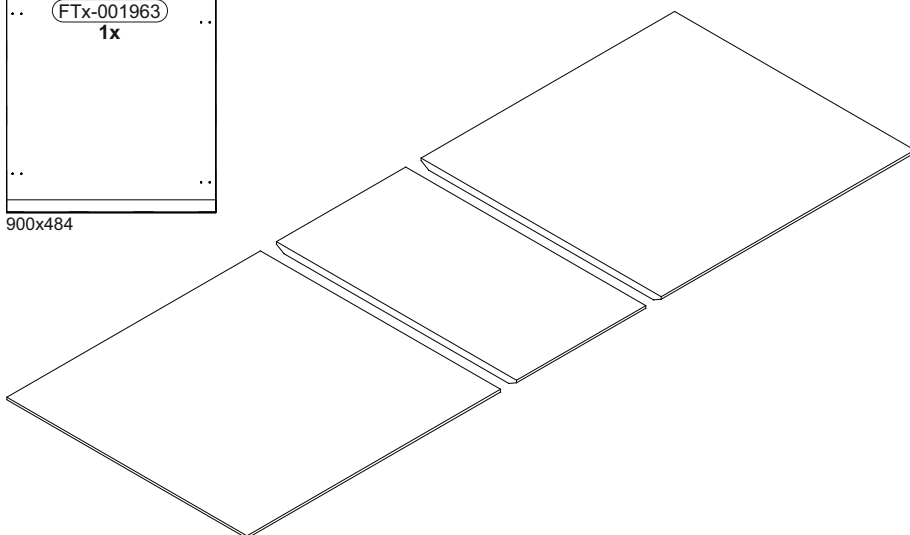

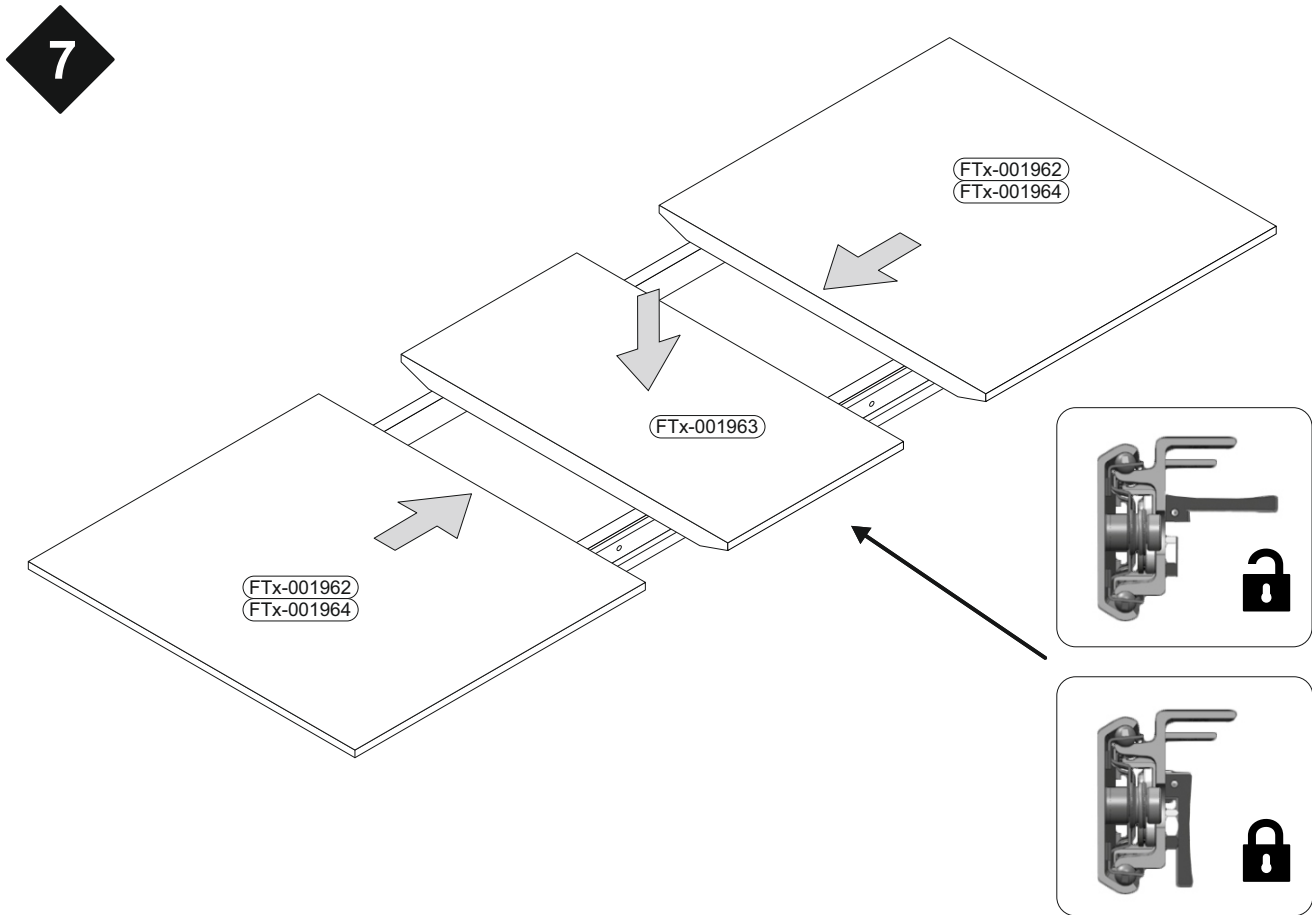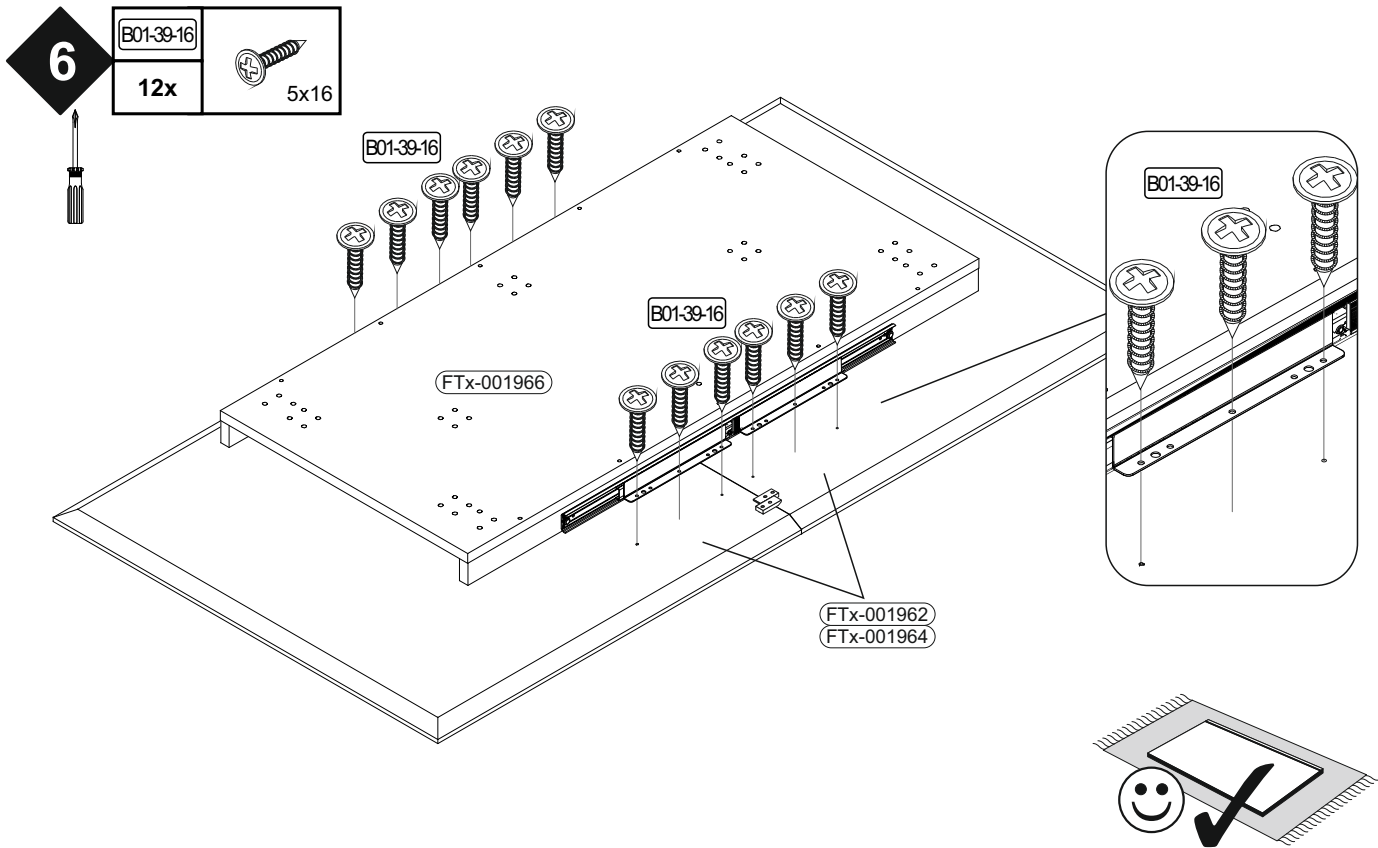

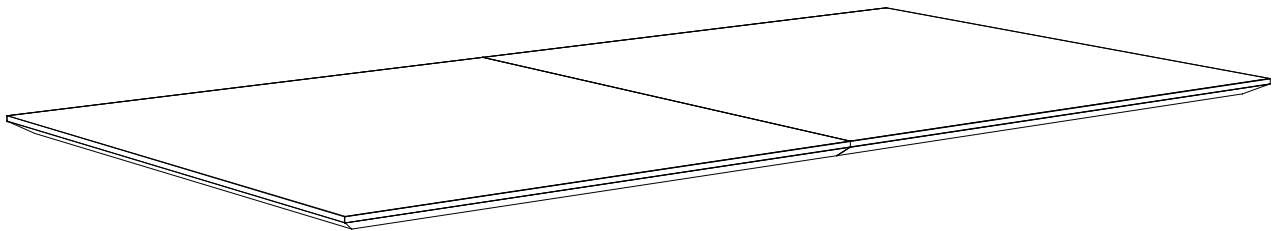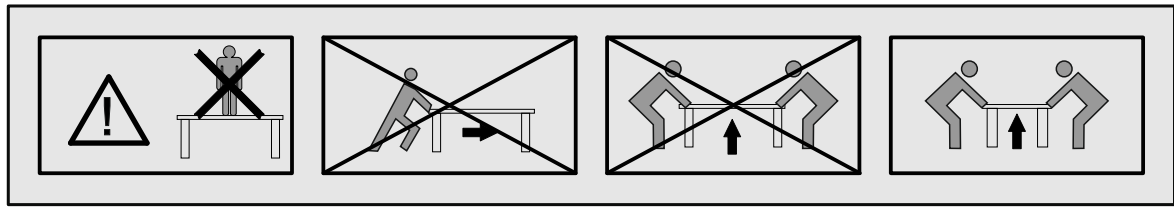


Artikel.-Nr.:


5015-TP-190-240

Montageanleitung.-Nr.:

MA1-00586


REPC-Nr.:

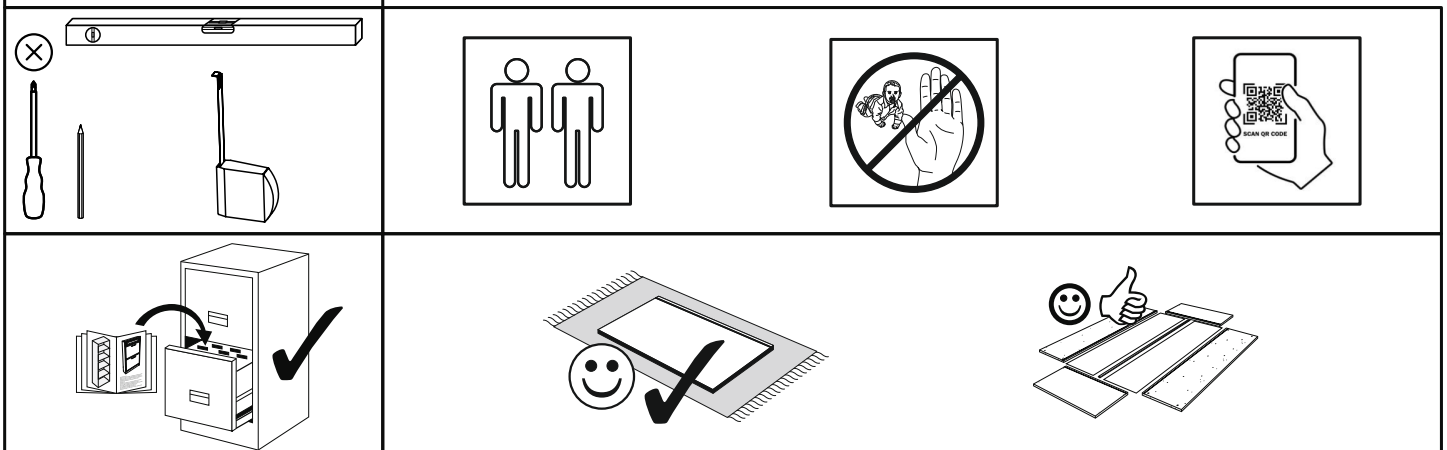


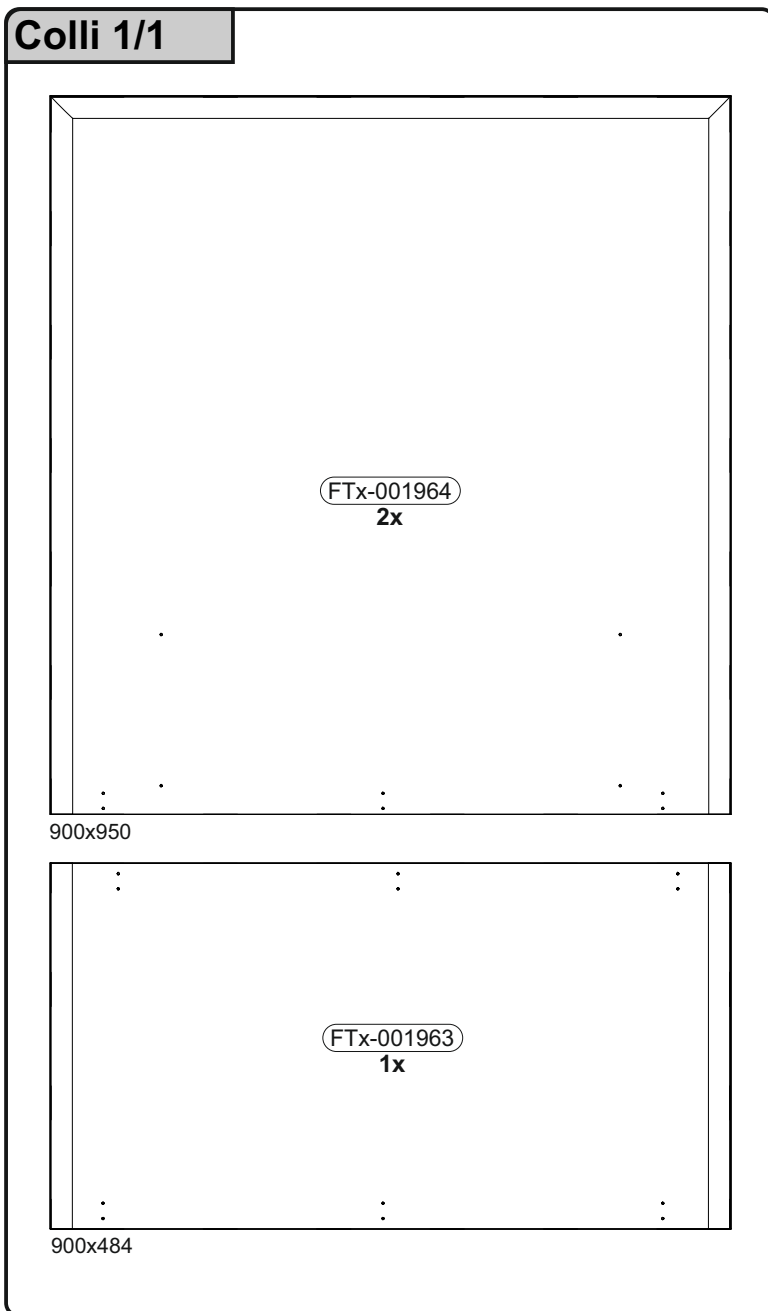

1





B05-193		B01-39-16	
6x		12x	5x16

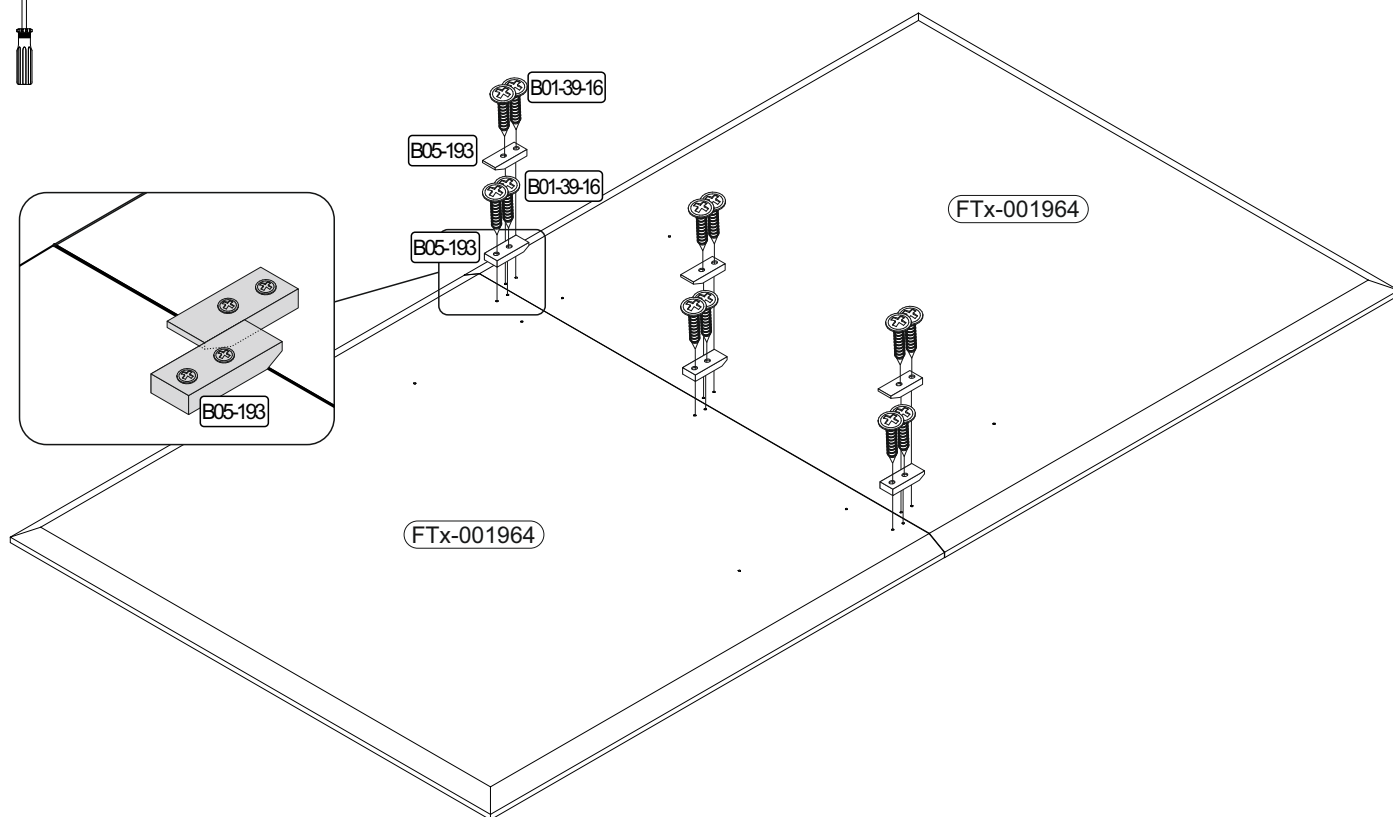


2



B05-193		B01-39-16	
6x		12x	5x16

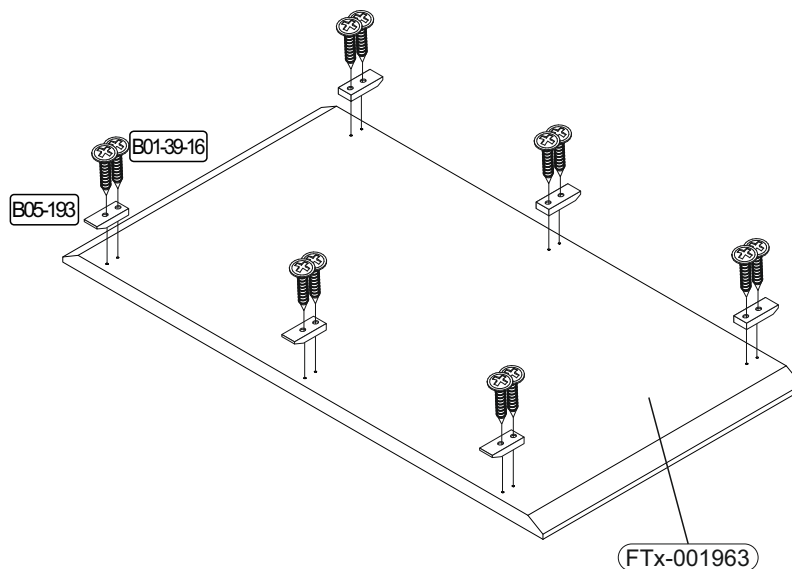

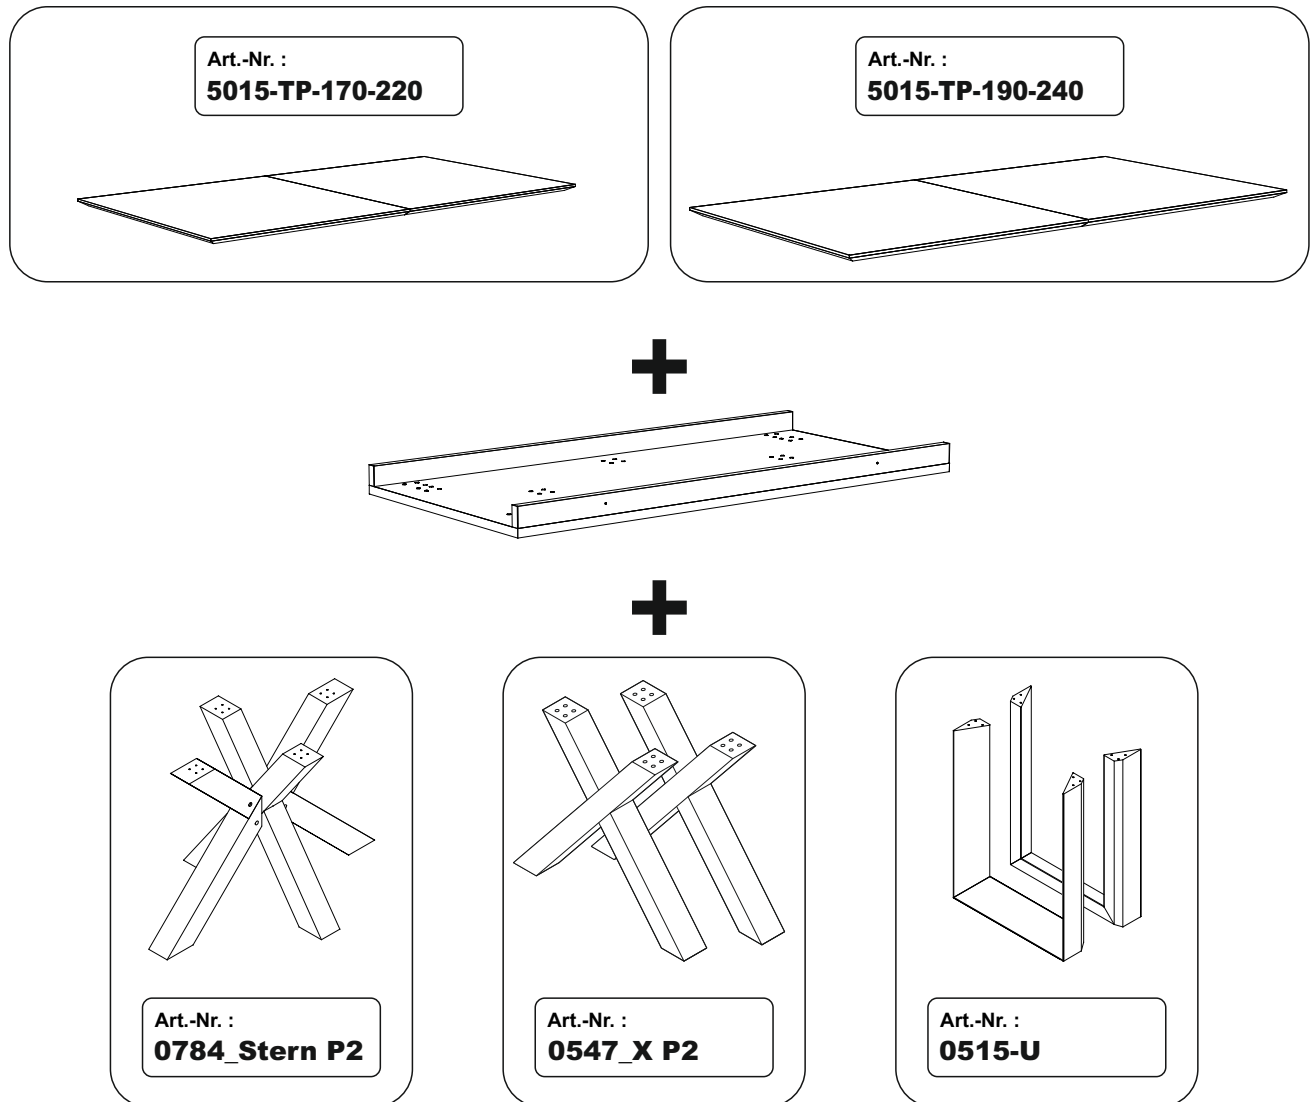


Artikel.-Nr.:



5015-VT

Montageanleitung.-Nr.:

MA1-00587

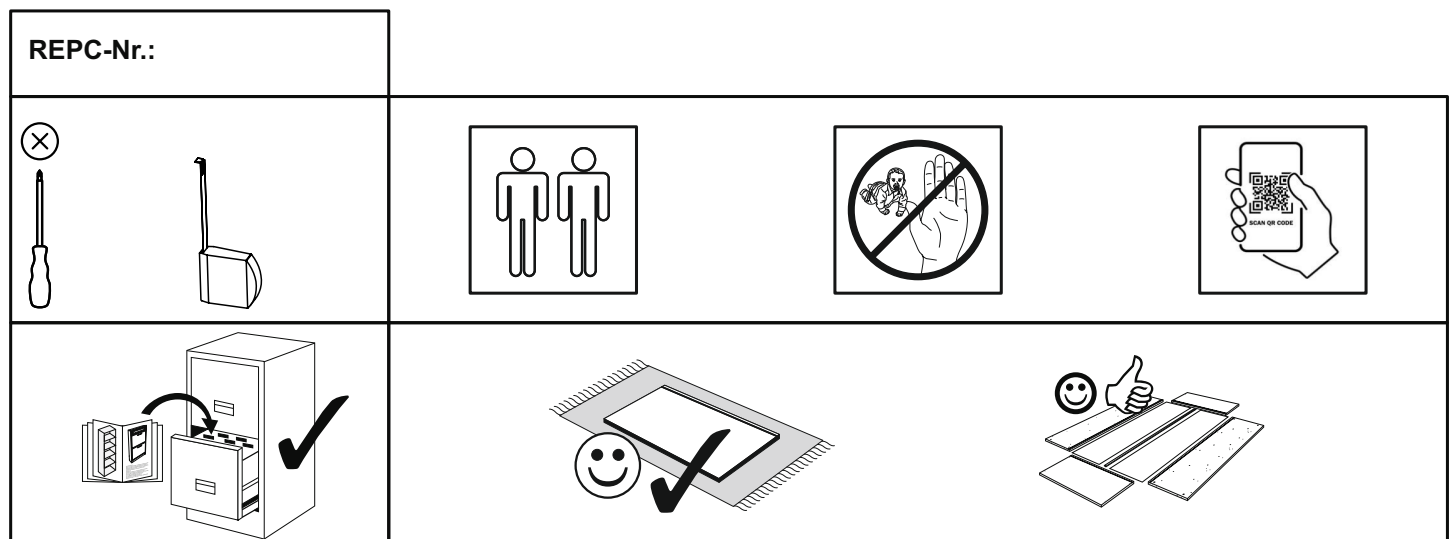


BT1-00687 Colli 1/1


B01-110		B01-120		B01-39-16		B01-90	
8x	3,5x35	10x	3,5x45	24x	5x16	2x	3,5x20
B02-170		B02-174		B05-260			
2x		4x		1x			

BT1-00001 Colli 1/1


B05-265	
1x	





Colli 1/1

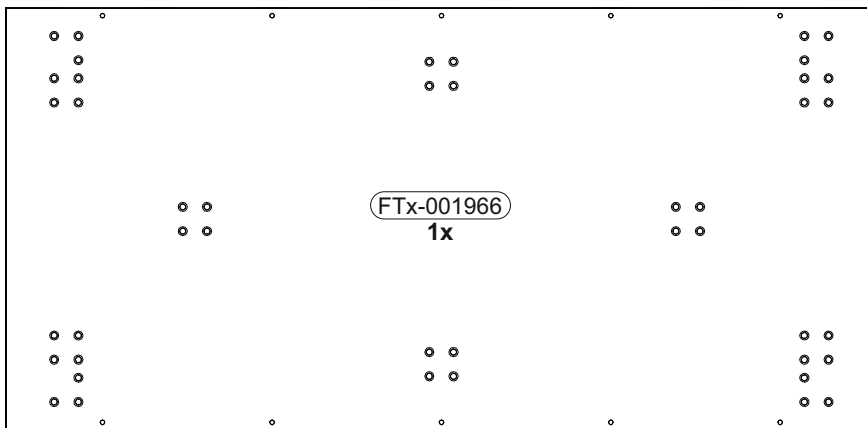


1152x558




1152x44

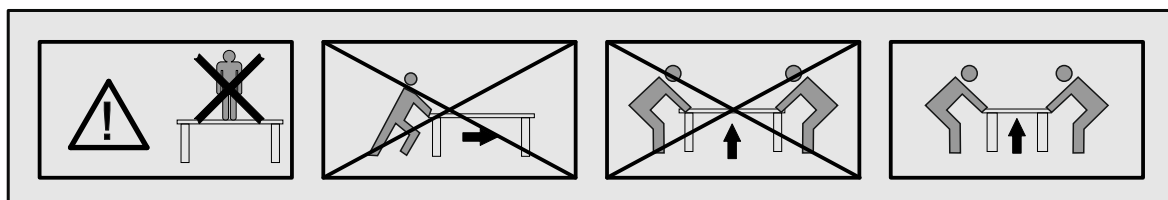
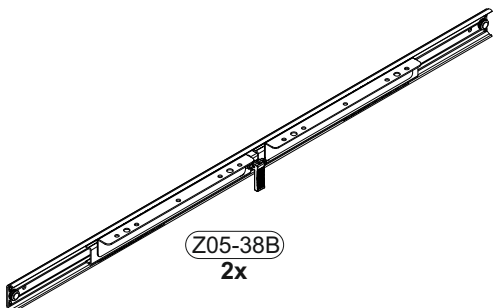





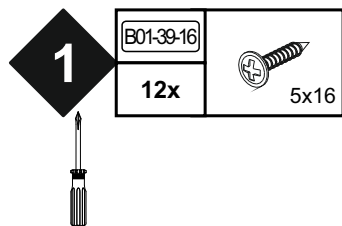




1

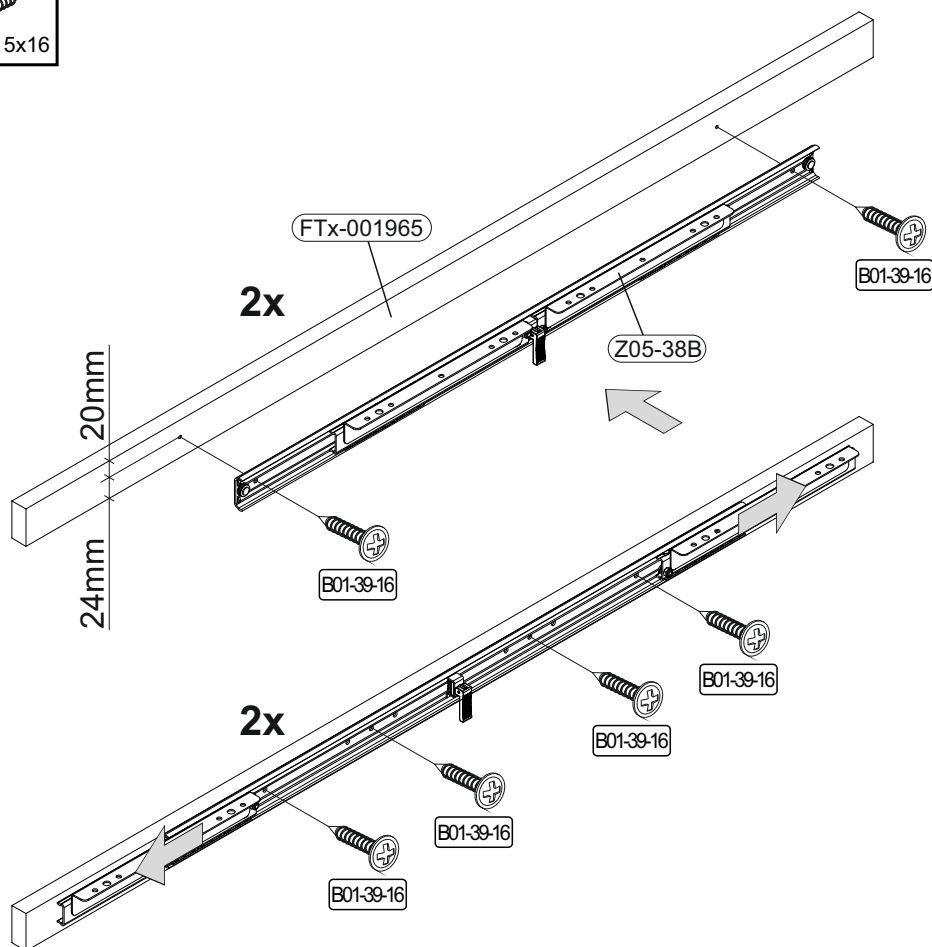




2

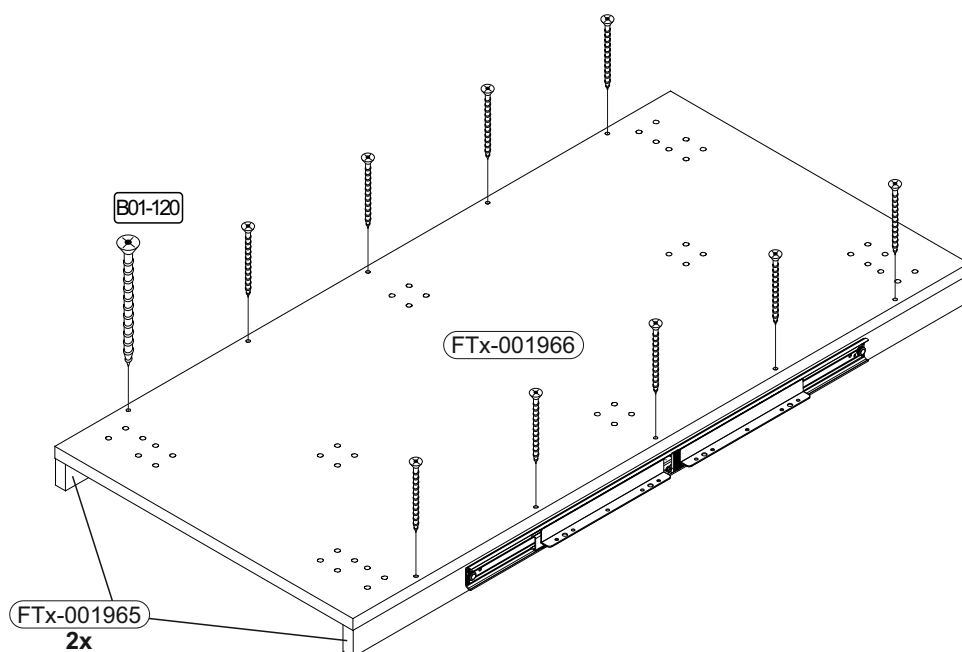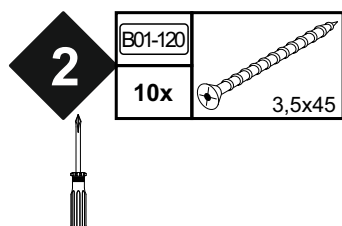

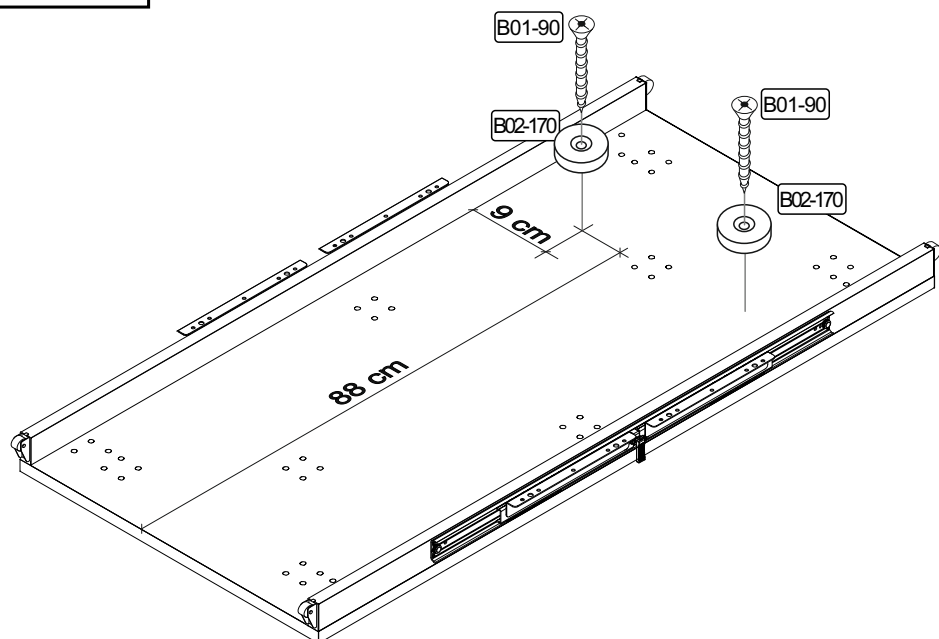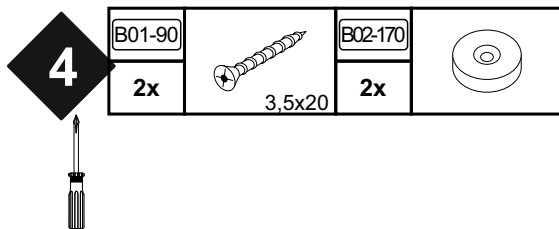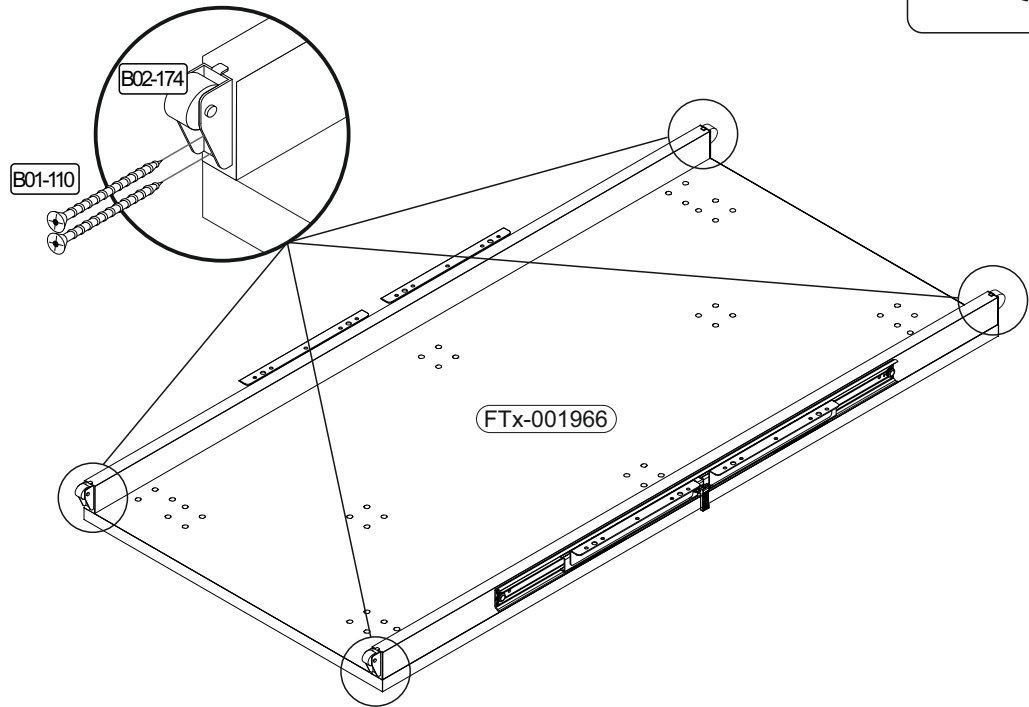
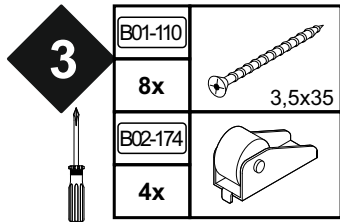


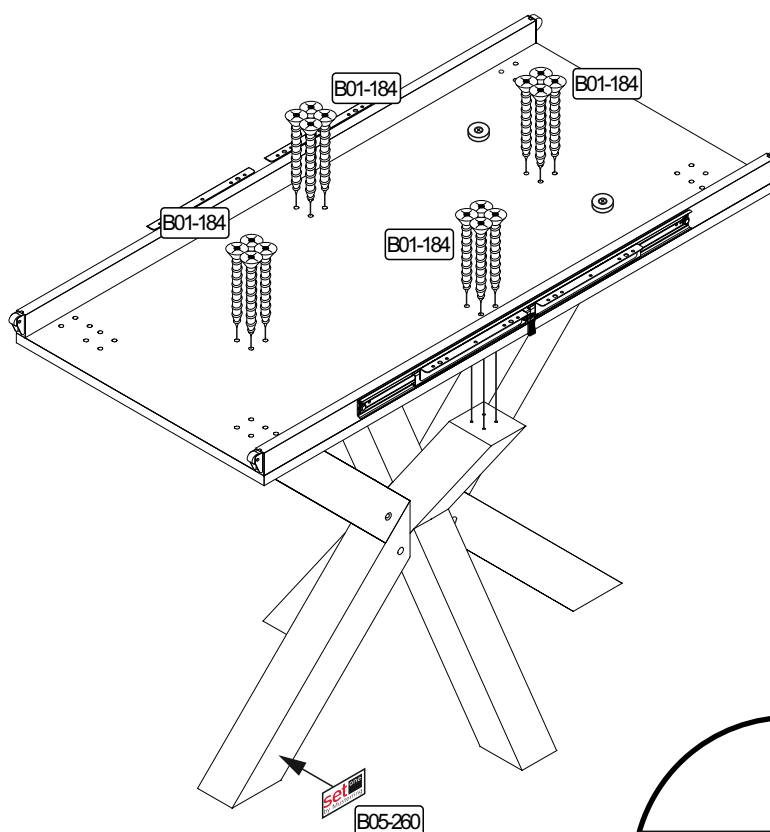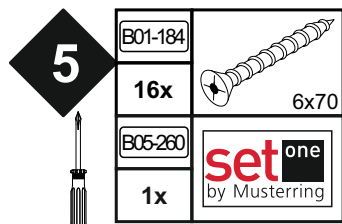


Art.-Nr. :
0784_Stern P2

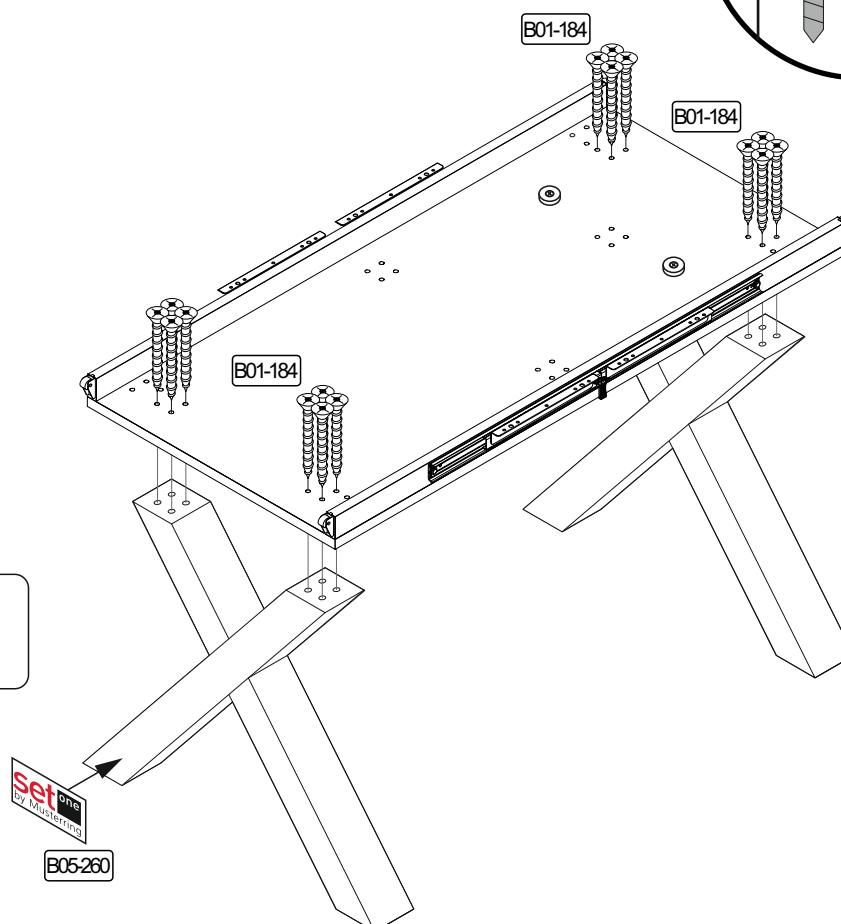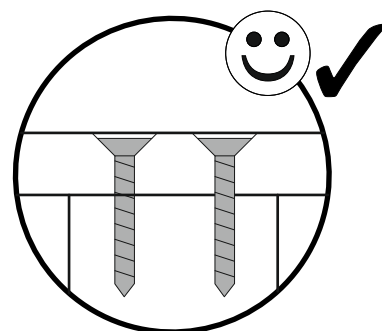

Art.-Nr. :
0547_X P2

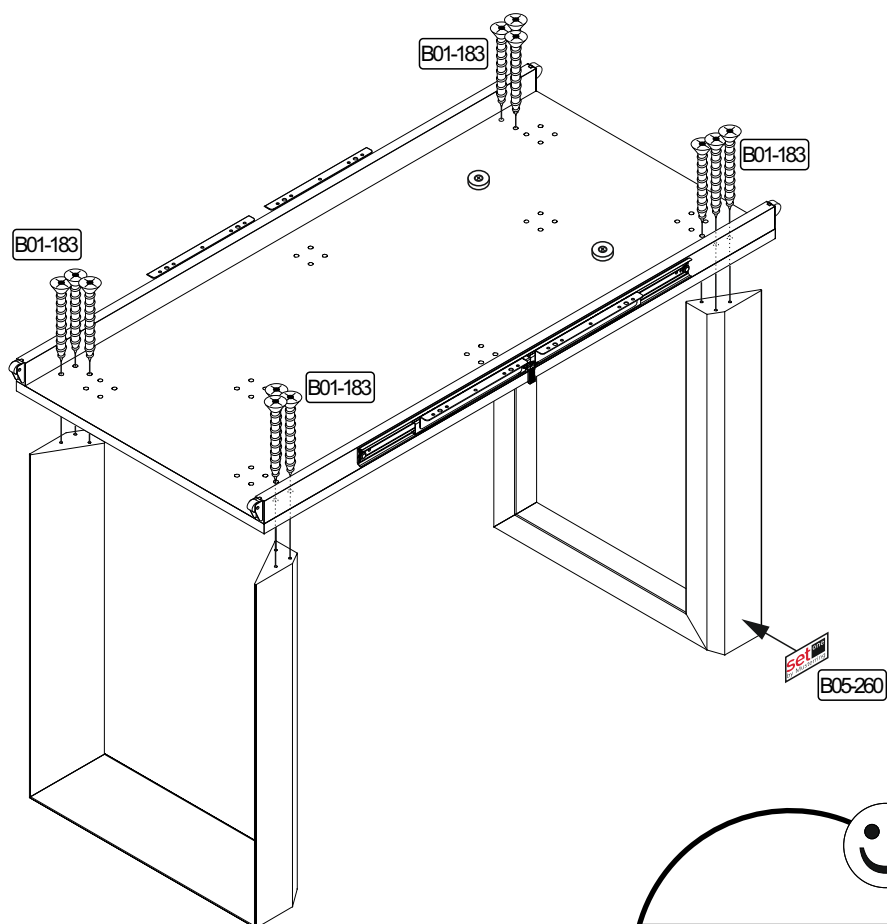


Art.-Nr. :
5015-U

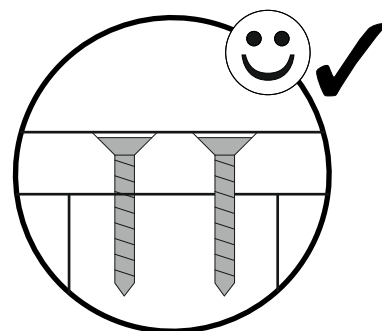


Art.-Nr. :


5015-TP-170-220

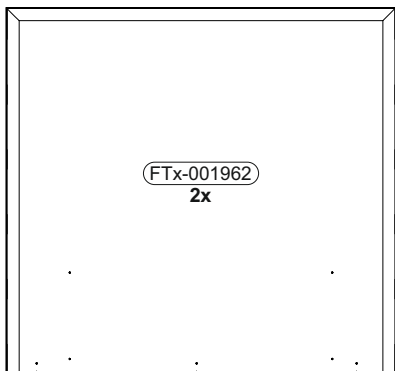

900x850

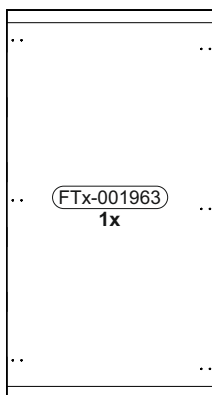


900x484

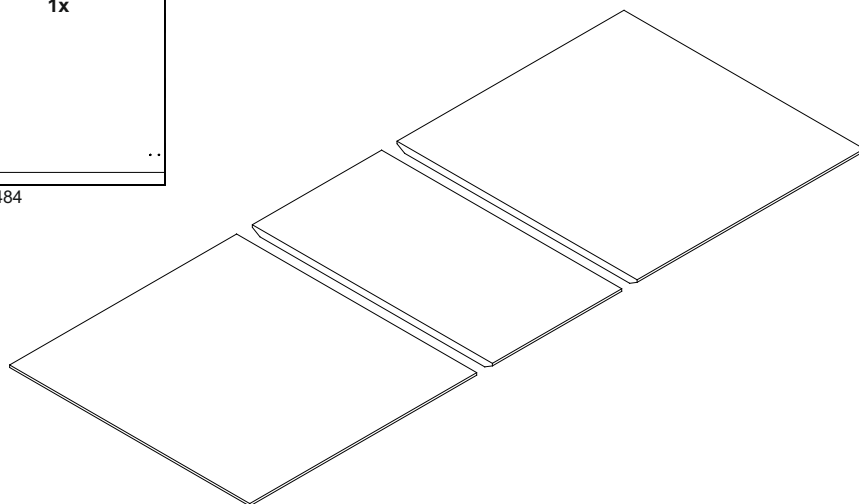


Art.-Nr. :

5015-TP-190-240

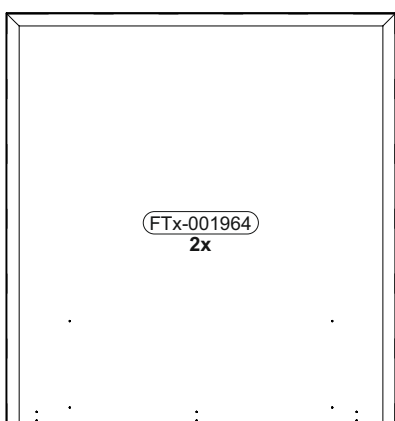

900x950

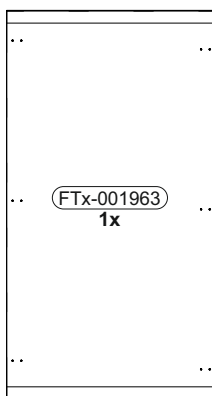

900x484

