



ASSEMBLY INSTRUCTION CH-131

	A  X2	B  X4 6*30mm	C  X4	D  X1	E  X1
---	---	---	---	---	---

STEP 1

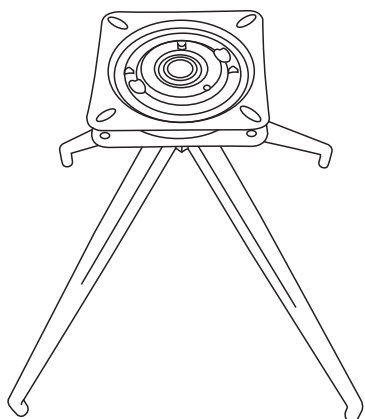


STEP 2

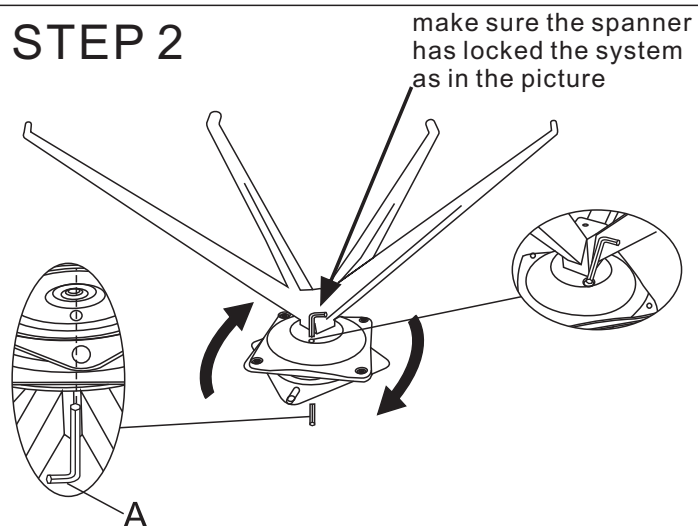


STEP 3

assembly the screws by hand first and then remove the spanner to tighten 100%

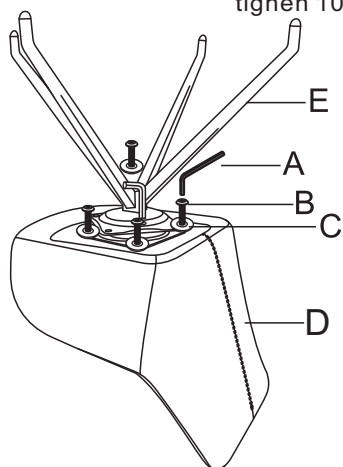

STEP 4

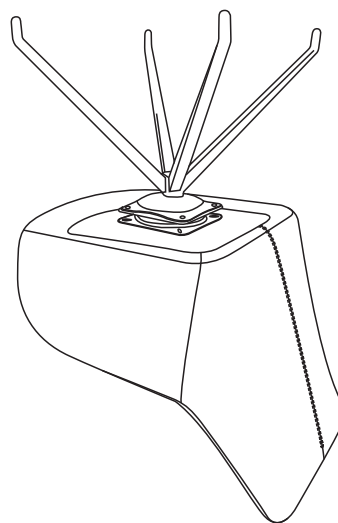

STEP 5

