
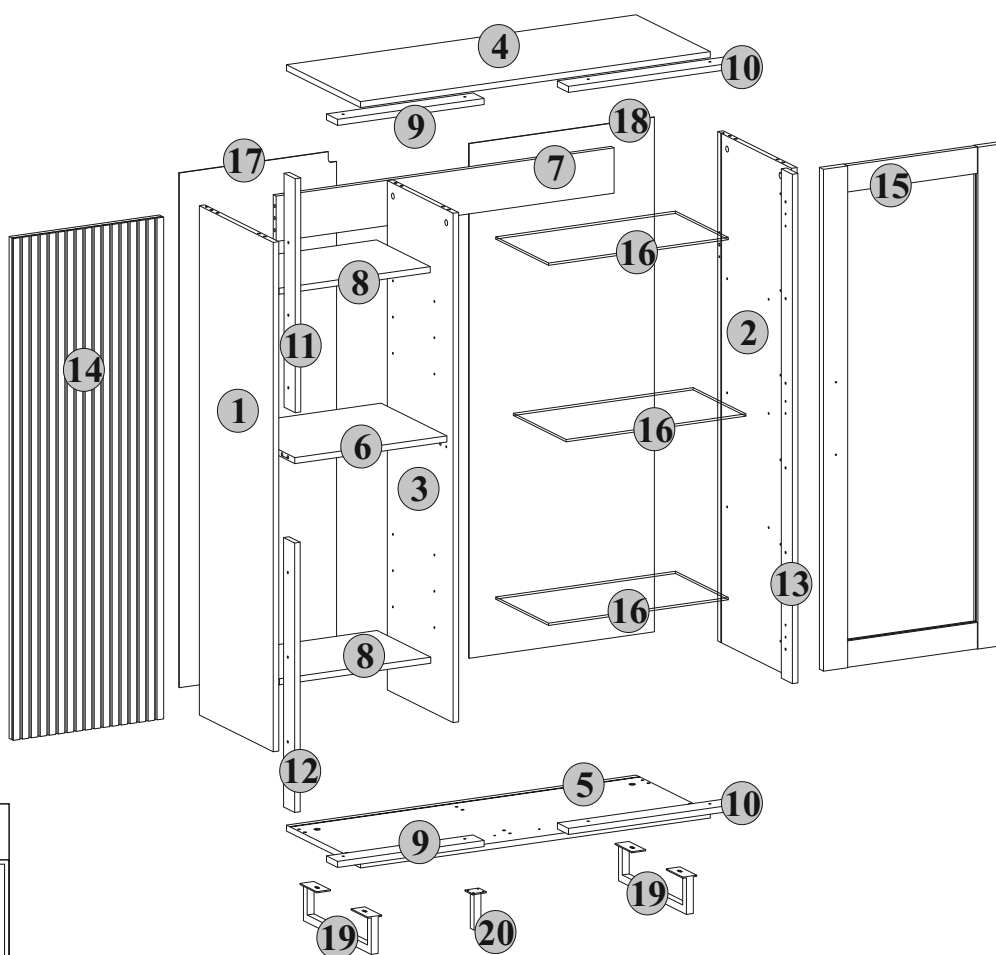
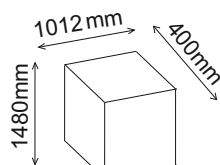




# “3403”

versionsnummer: 02.08.2023


Naturholz kann sich werkstoffbedingt verziehen. Durch das Montieren ziehen sich Teile wieder plan.

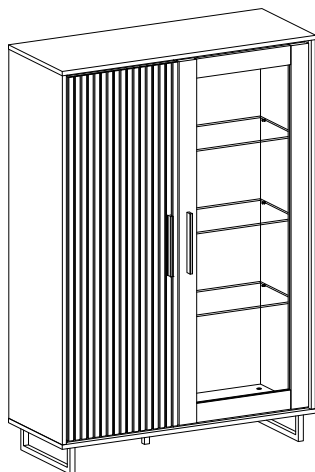


## B5

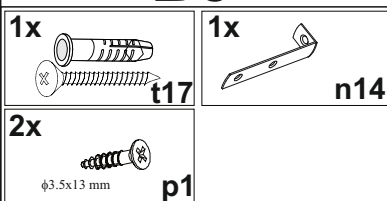


## B1

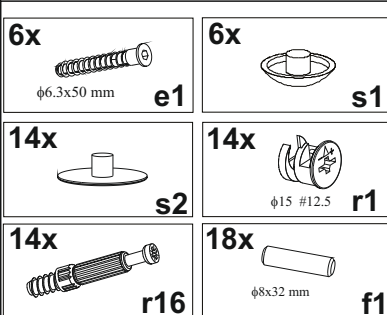


## B2

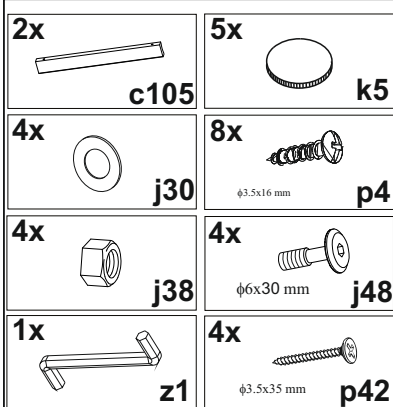









## B3

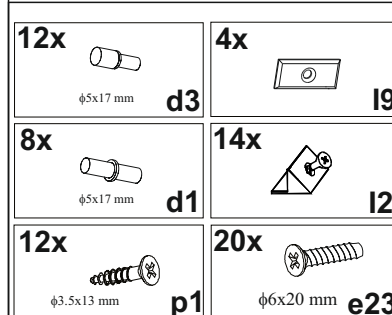









## B4

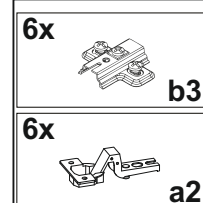

**1**

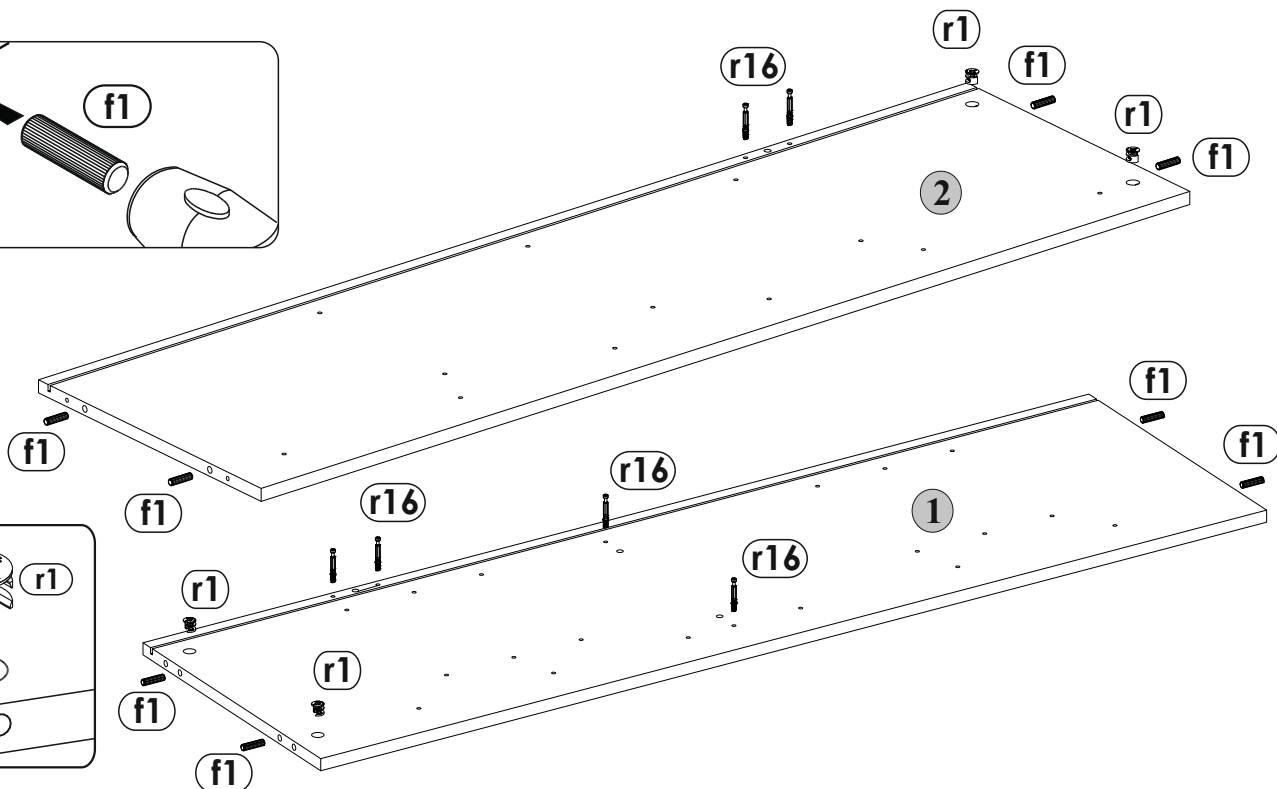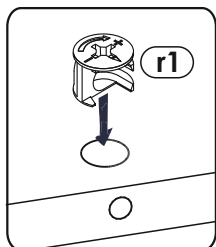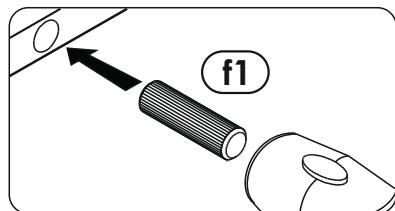

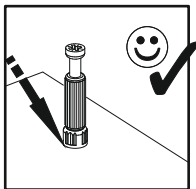
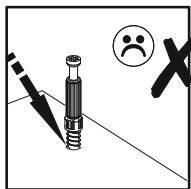
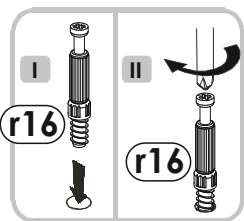


**2**

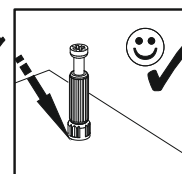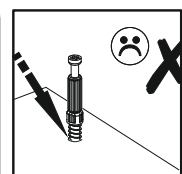
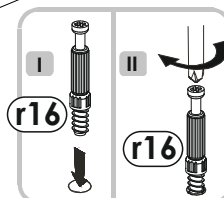
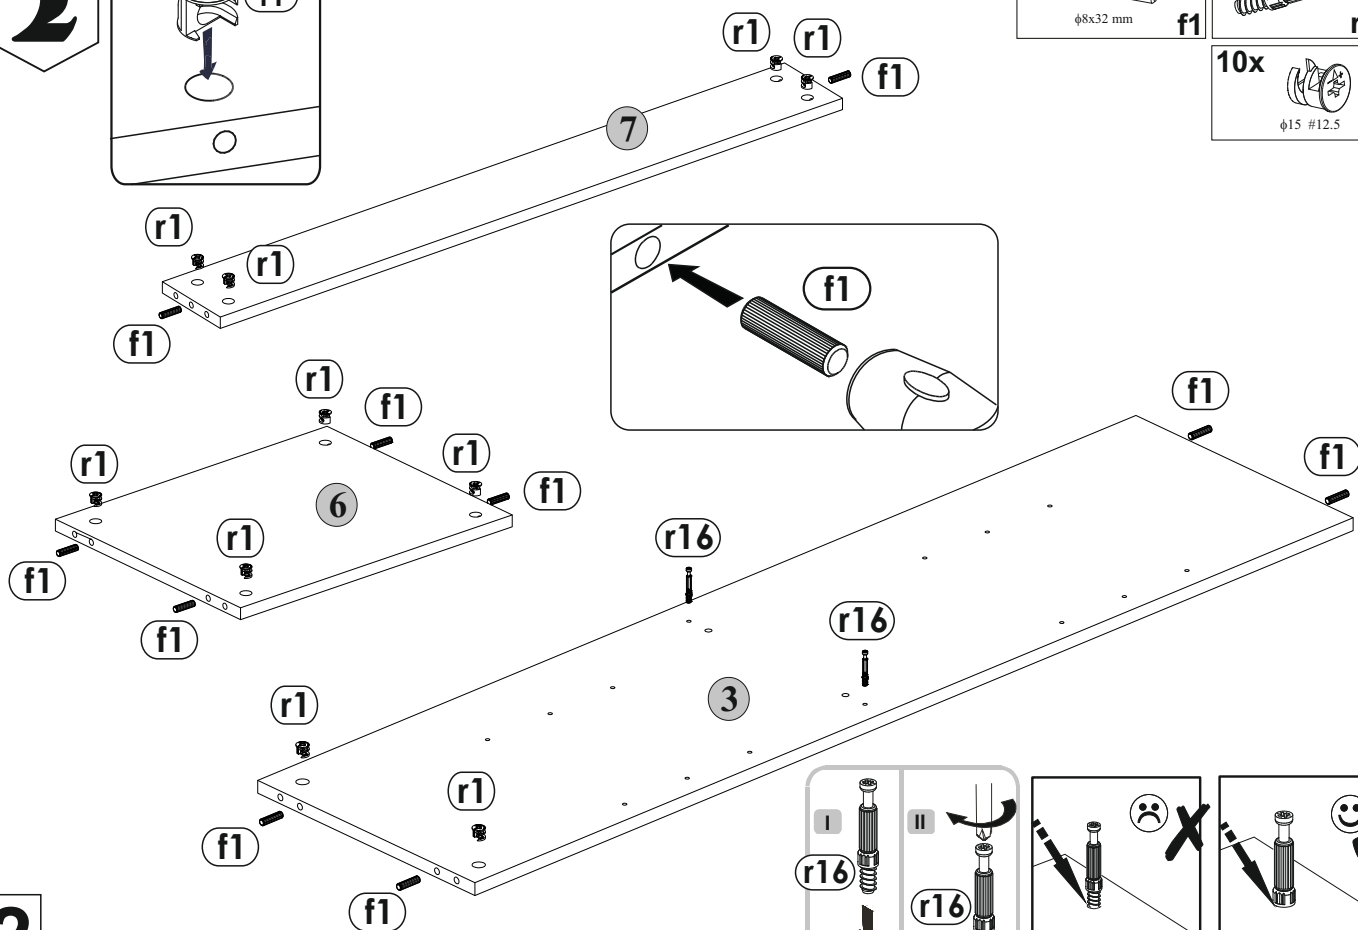
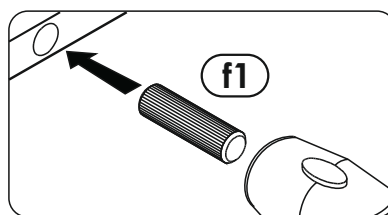


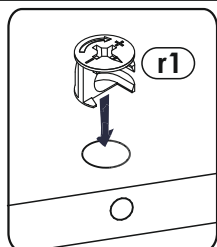


**2**

# 3

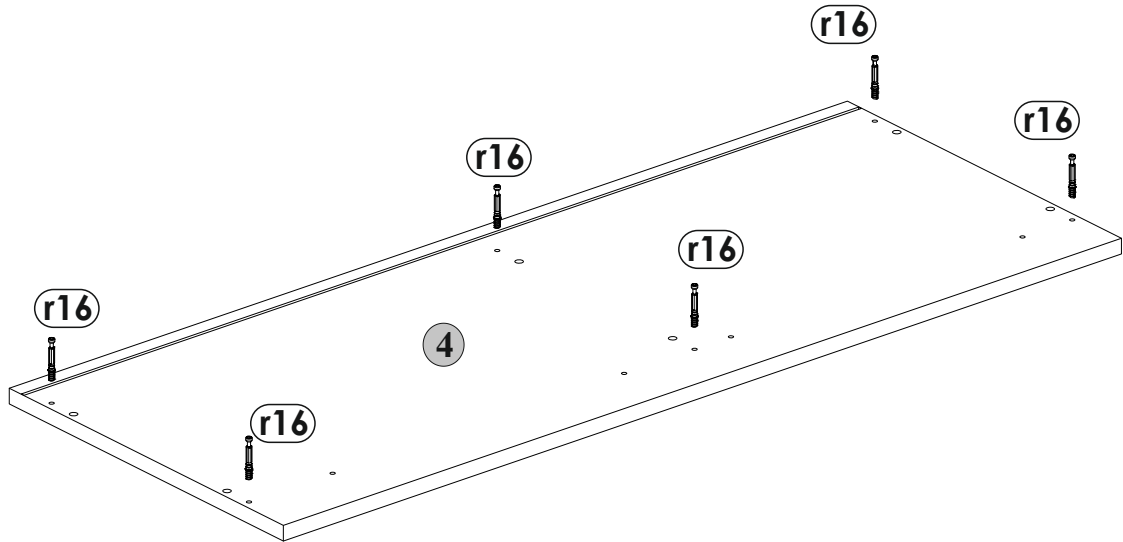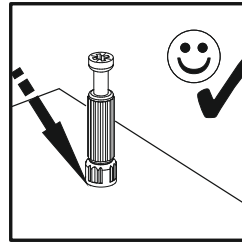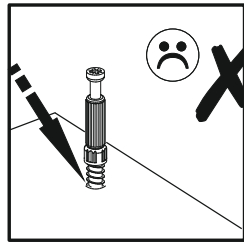
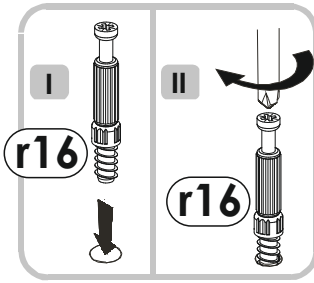


# 4

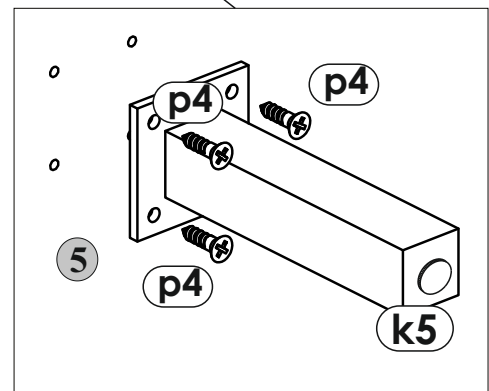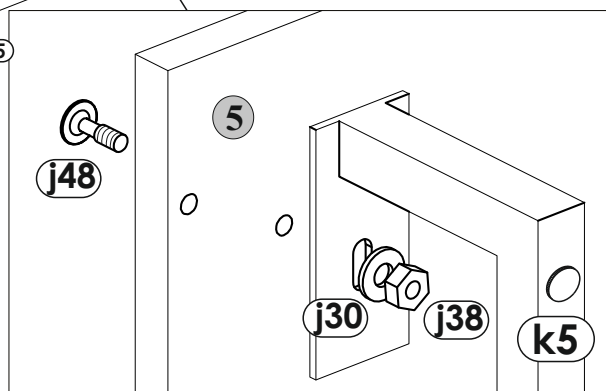


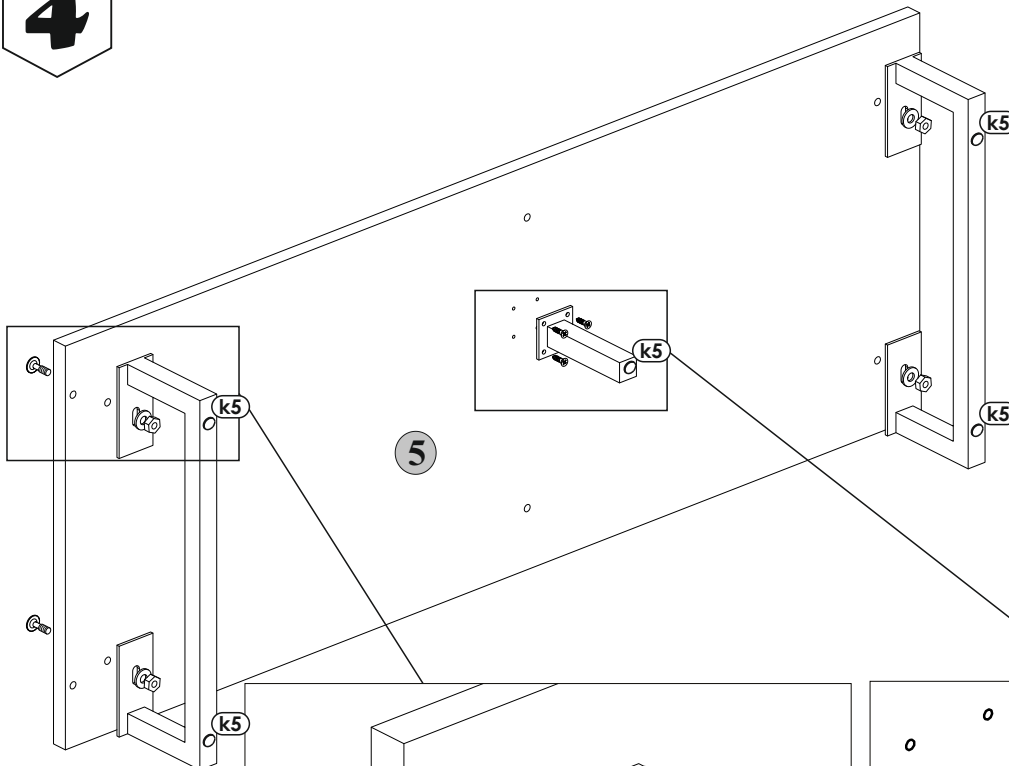


# 3

# 5

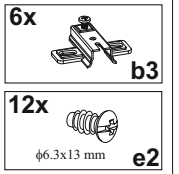
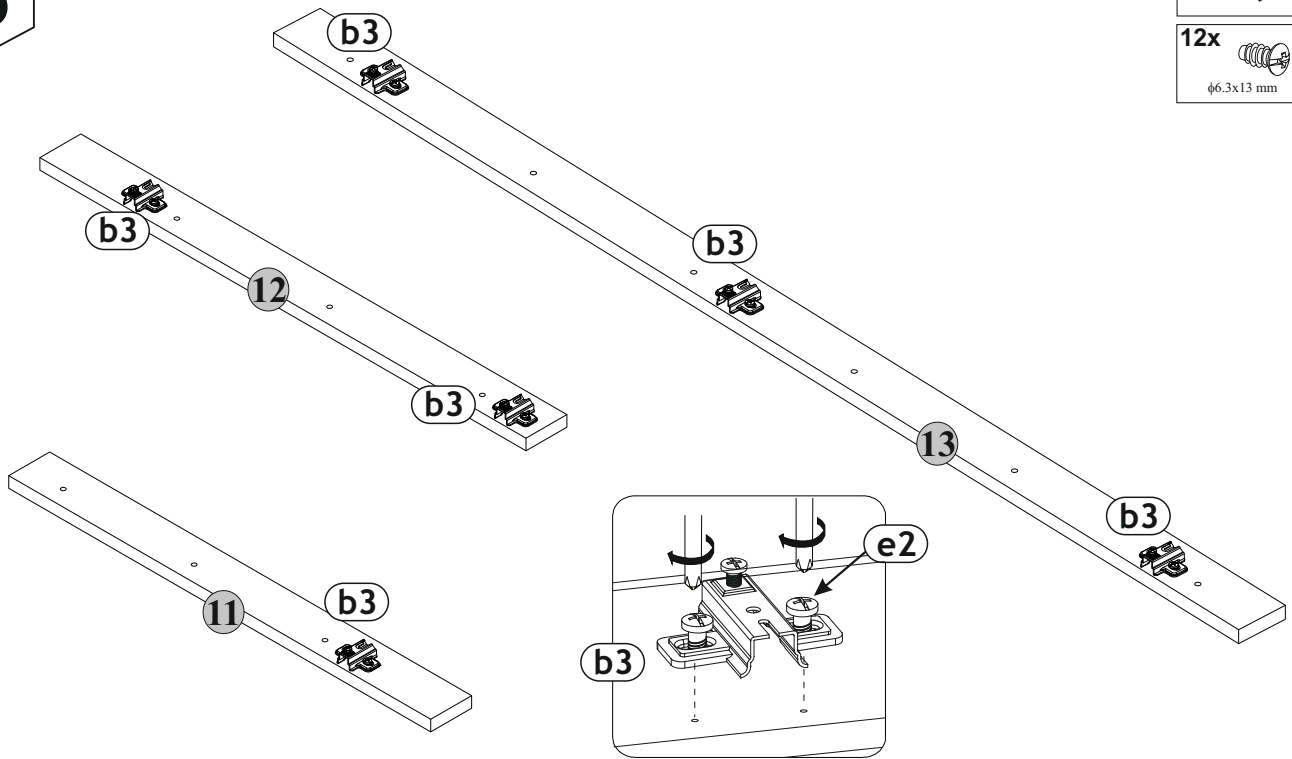


# 6

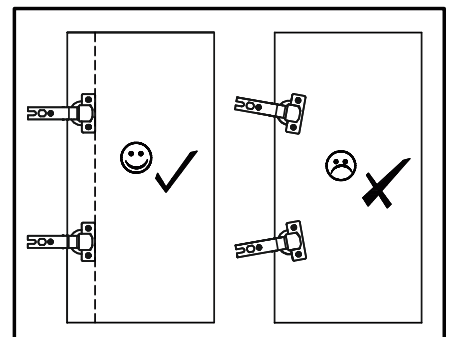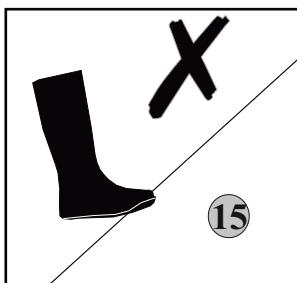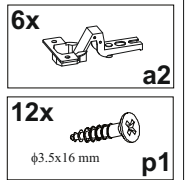
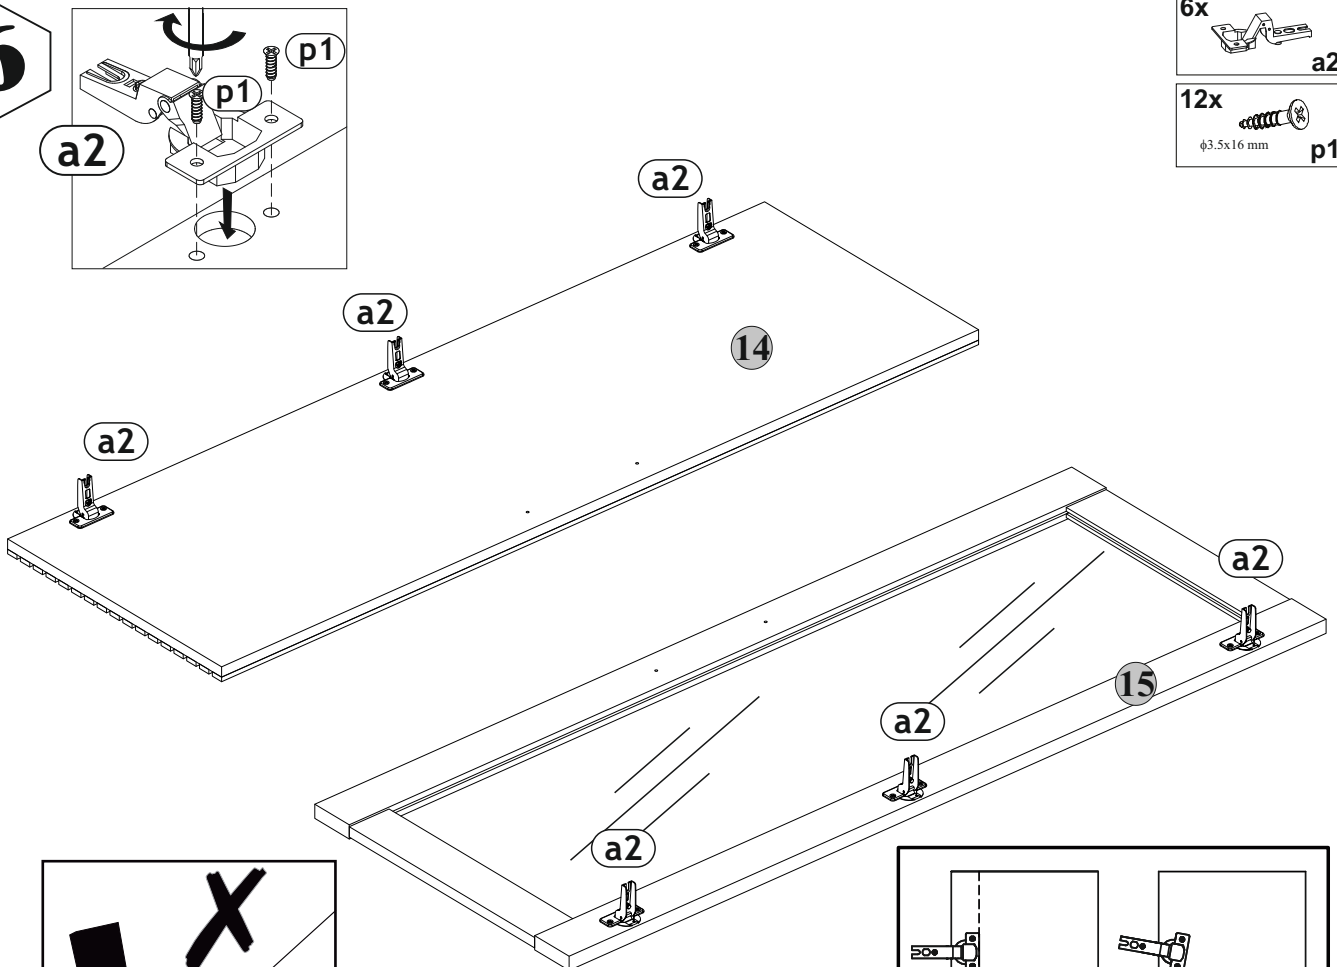


# 4

7

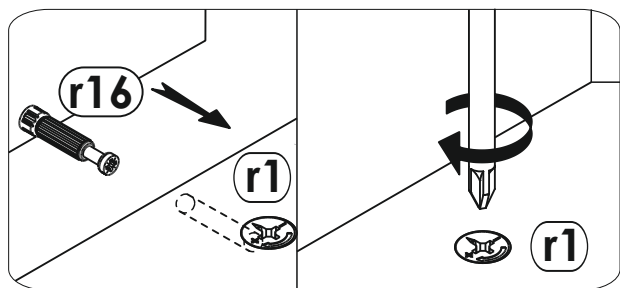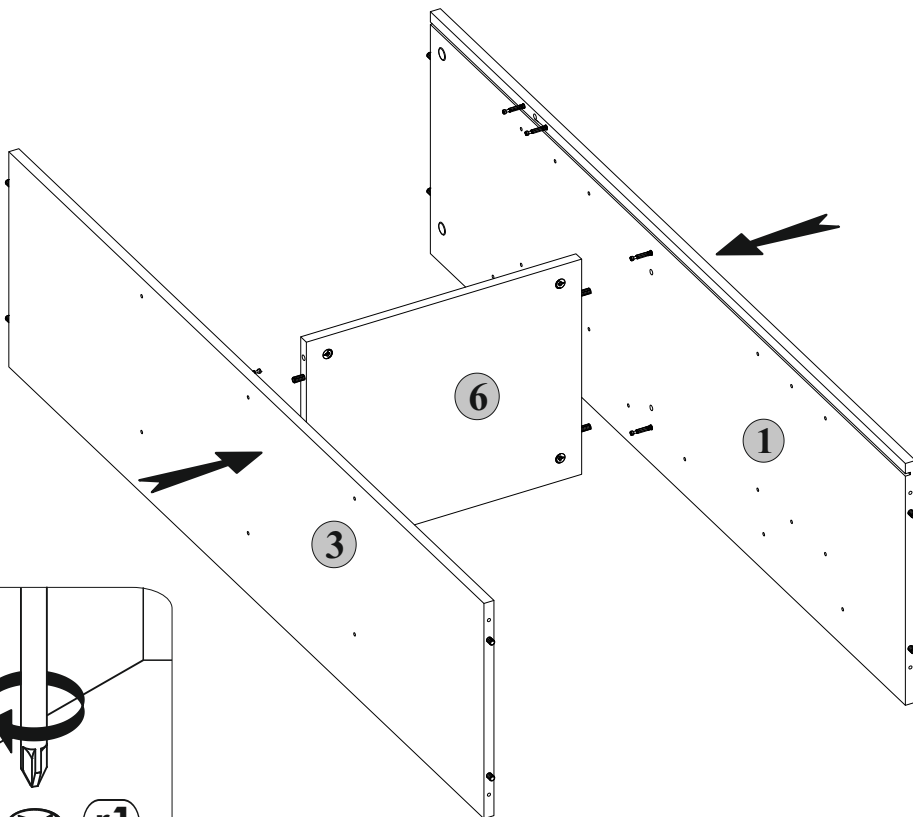


8

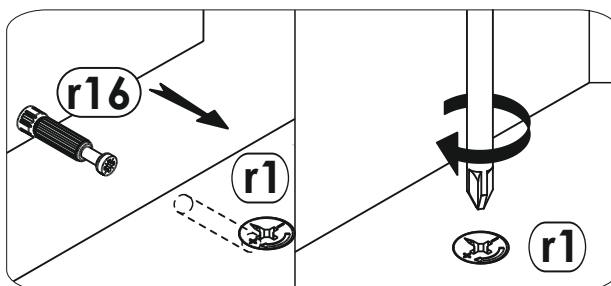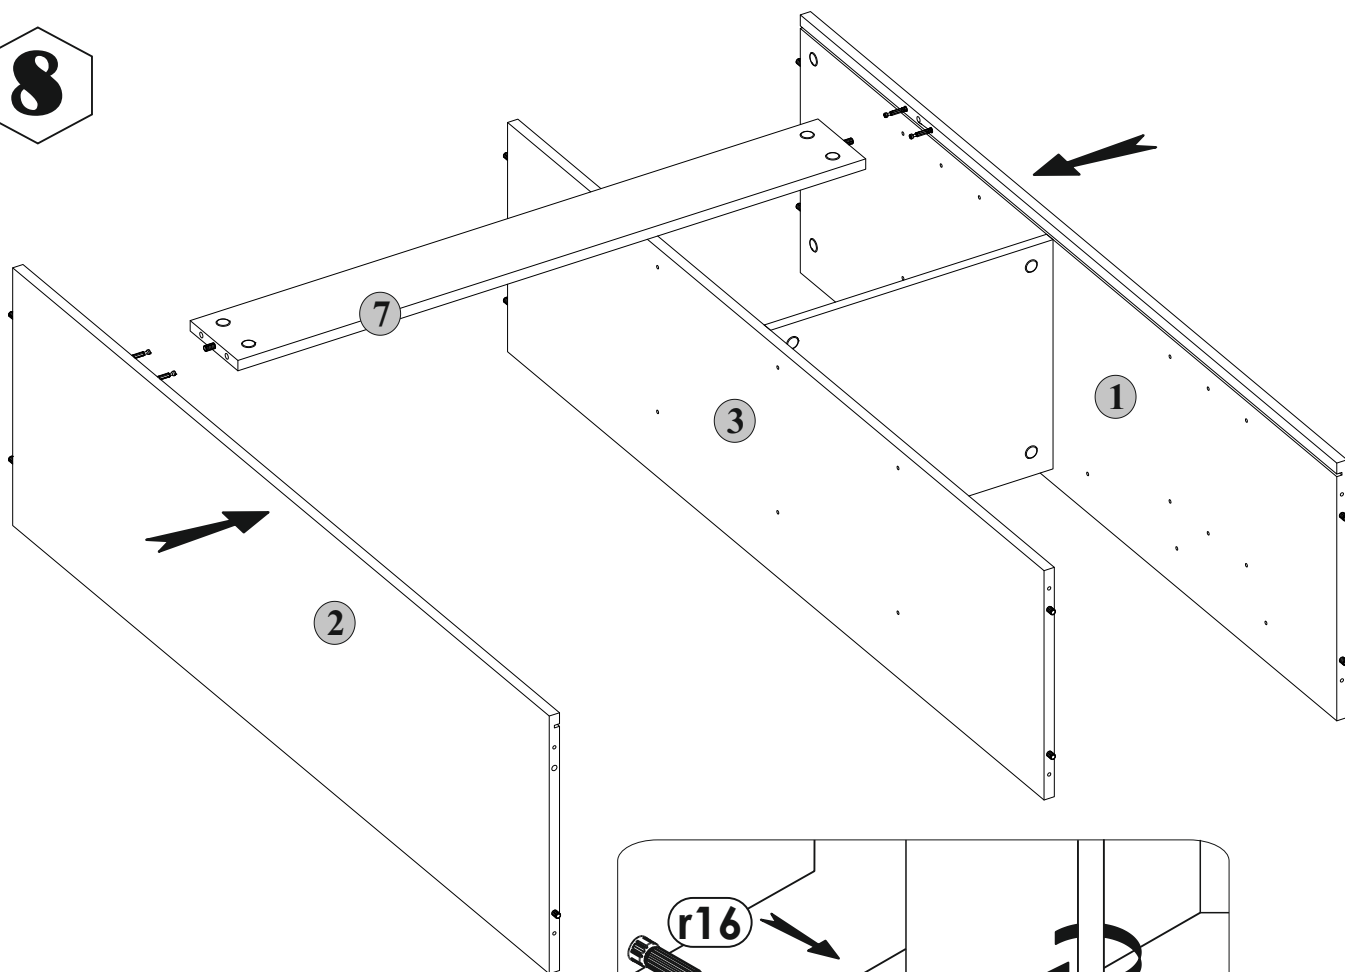


5

9

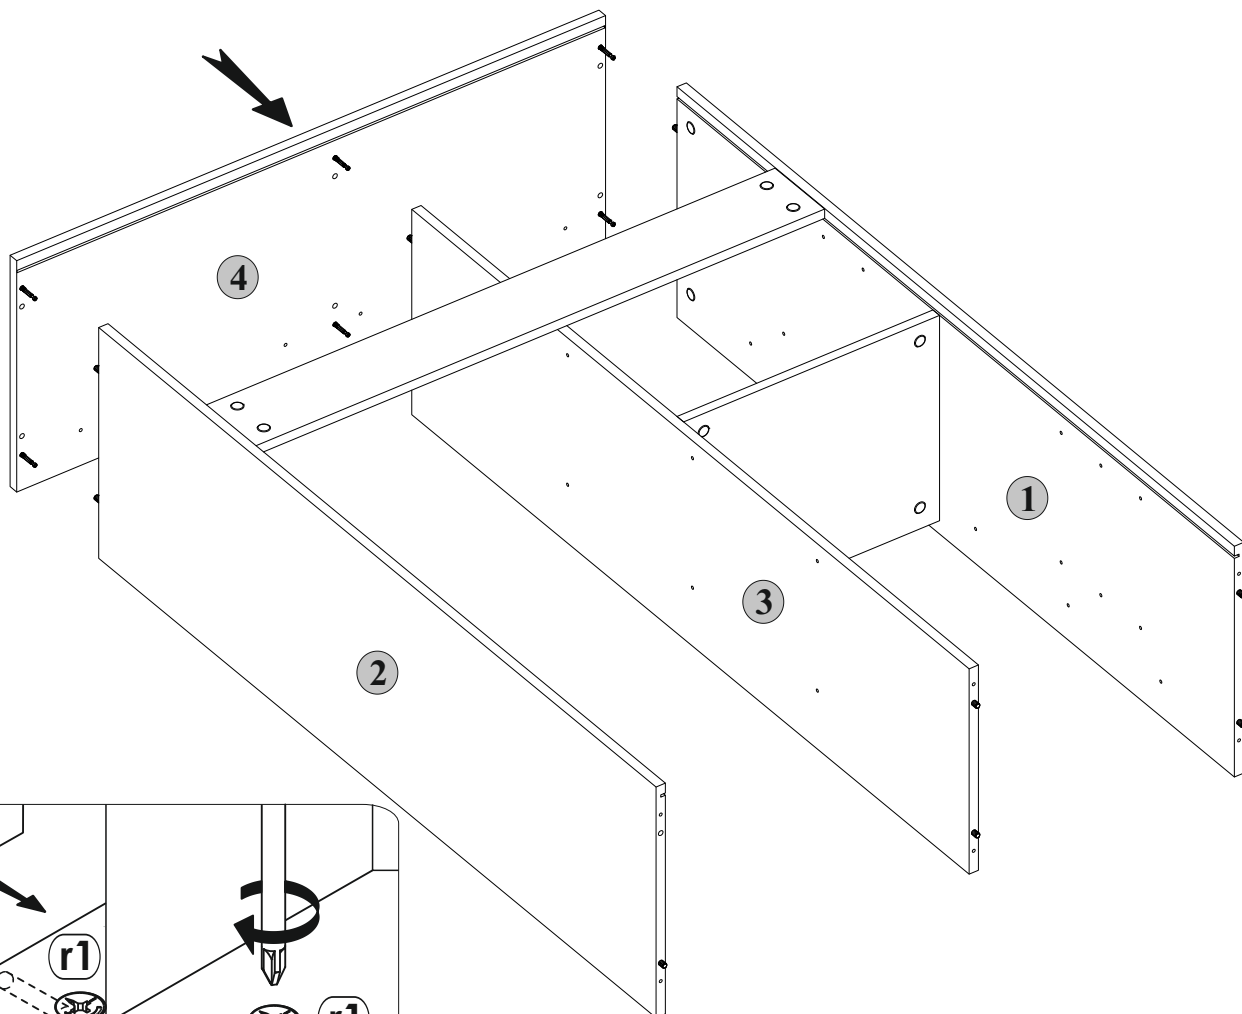

10

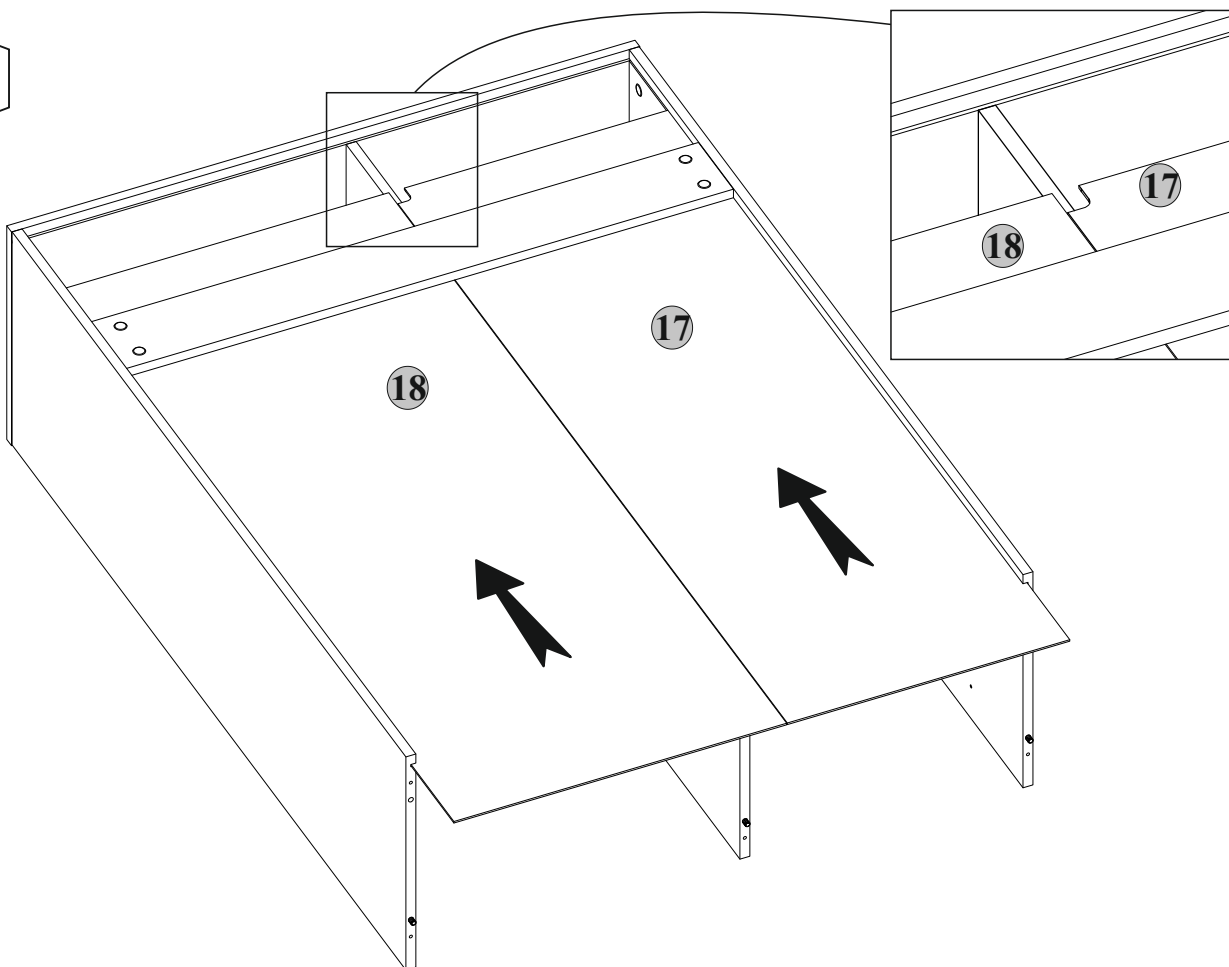




6

# 11

6x  e1


6x  s1

1x  z1


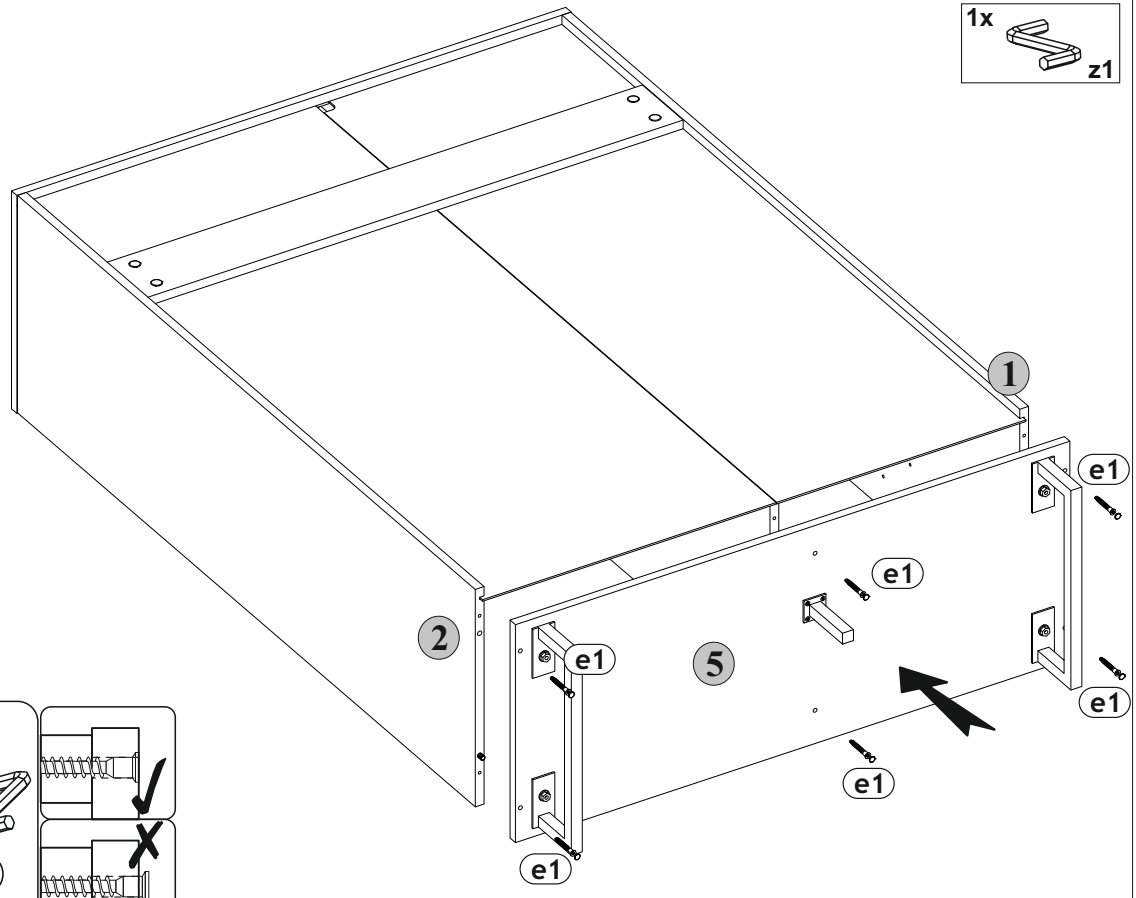
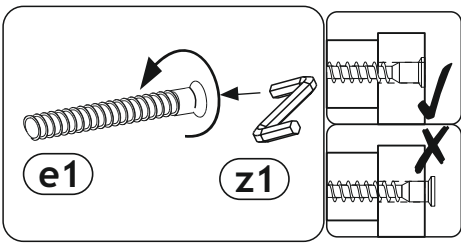
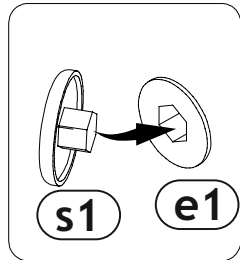


# 12

14x  l2

4x  i9




4x  p4  
φ3.5x16 mm

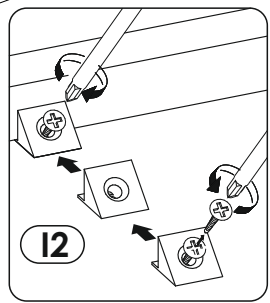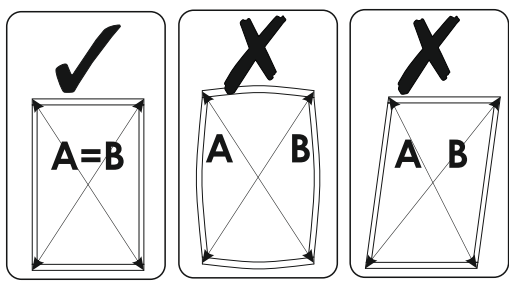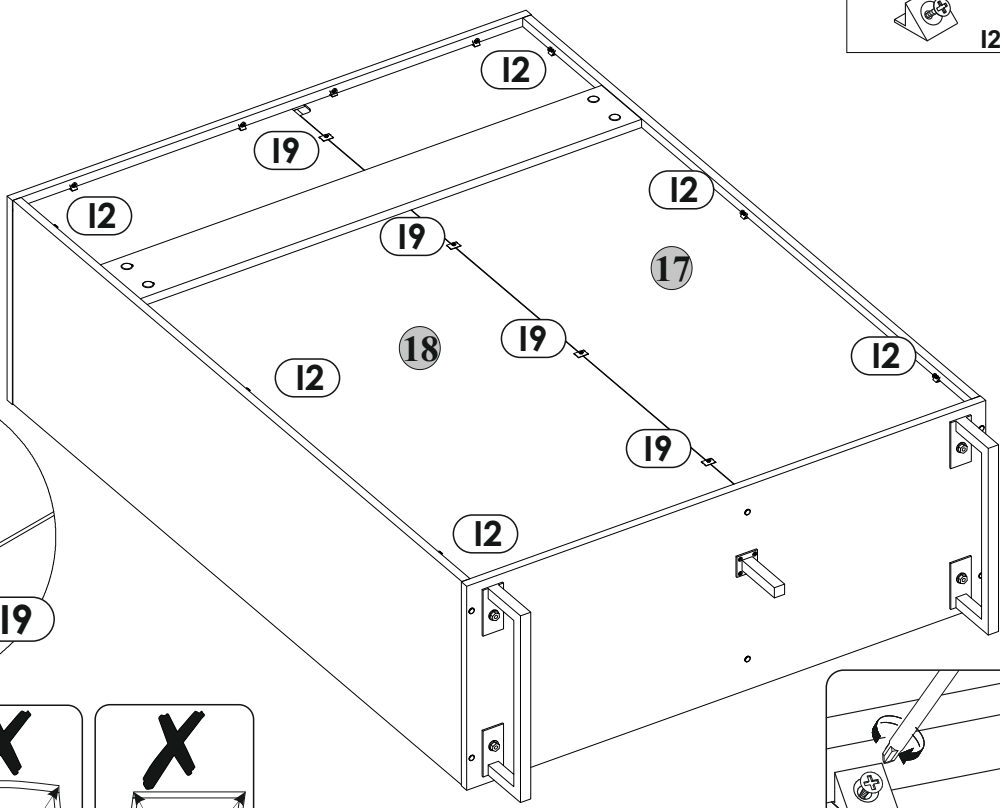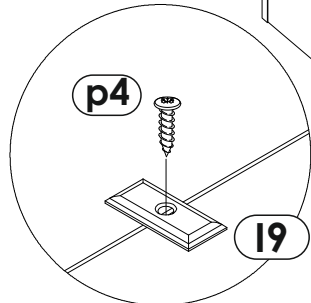

# 7

**13**

20x  
e23  
φ6x20 mm

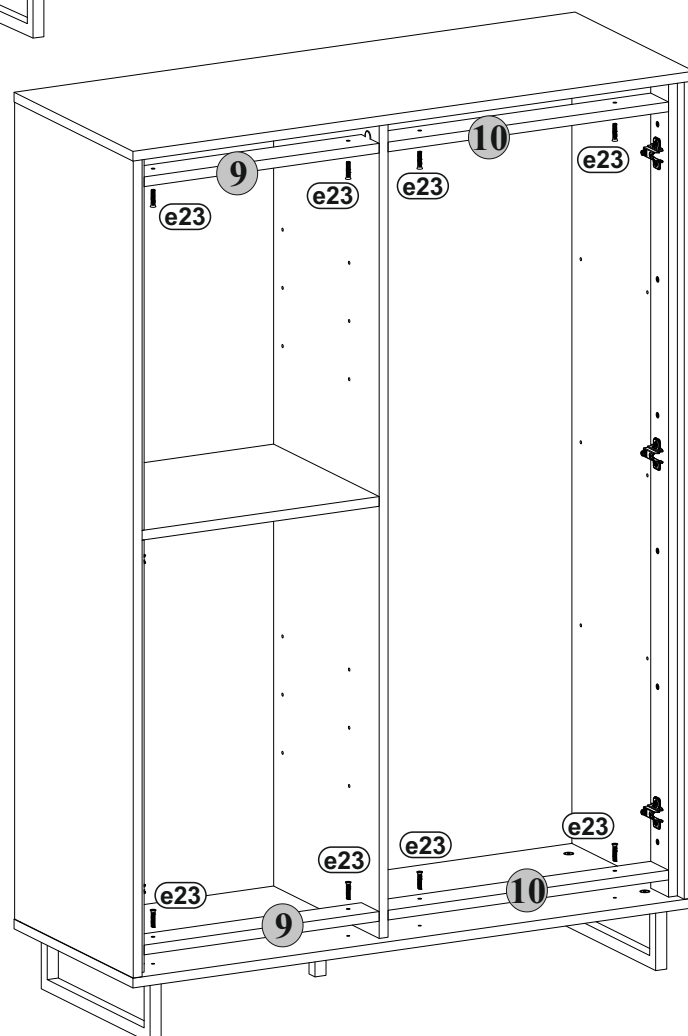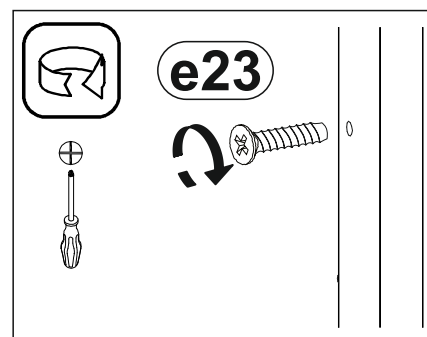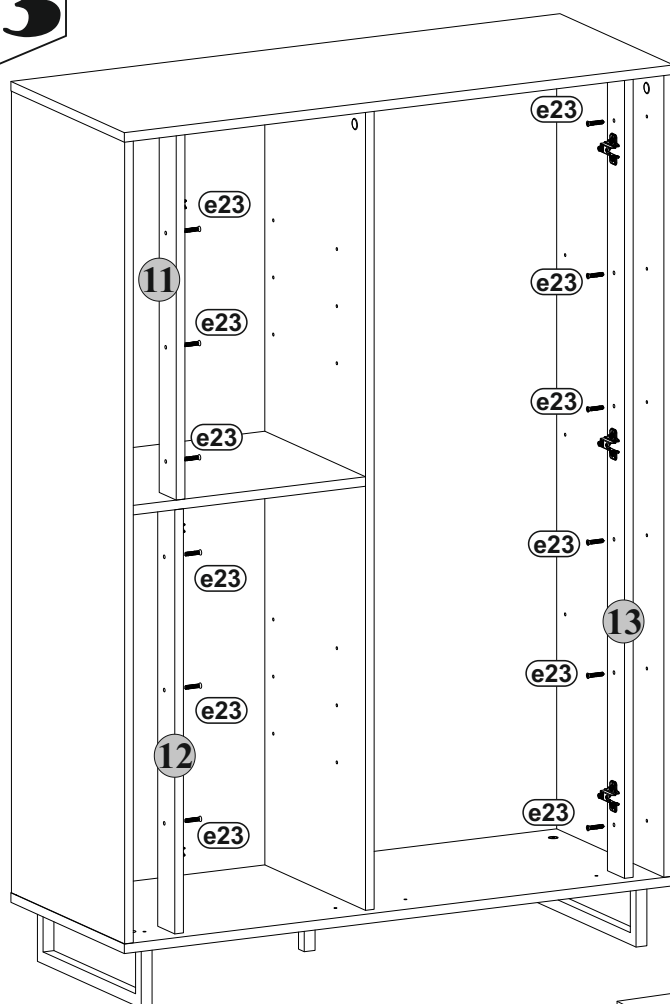

**8**

# I4









4x  
p42

2x  
c105

1x  
t17

1x  
n14

2x  
p1  
φ3.5x16 mm

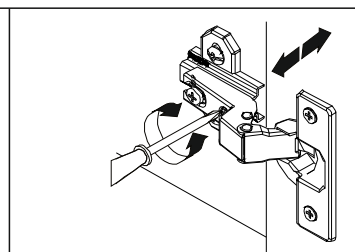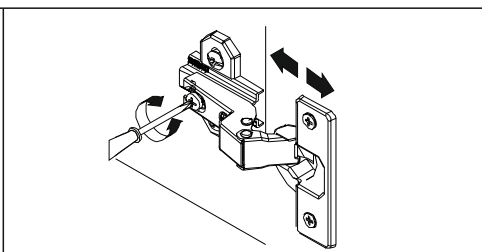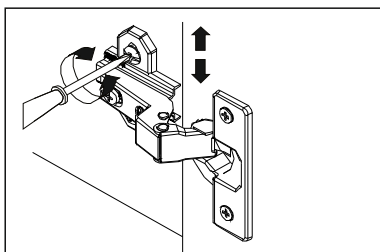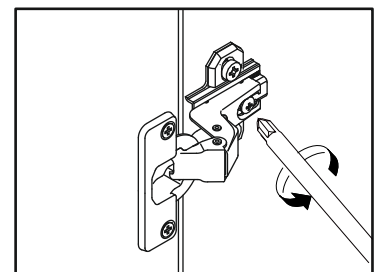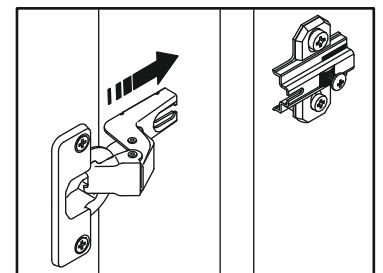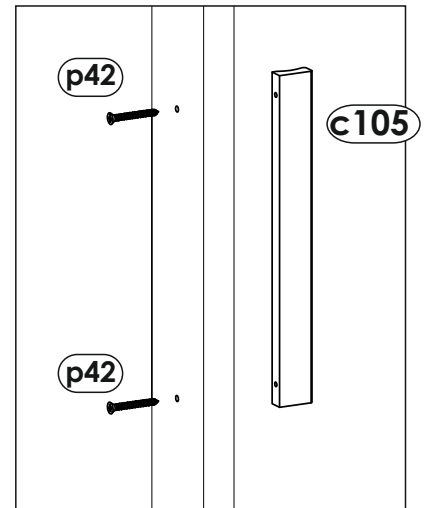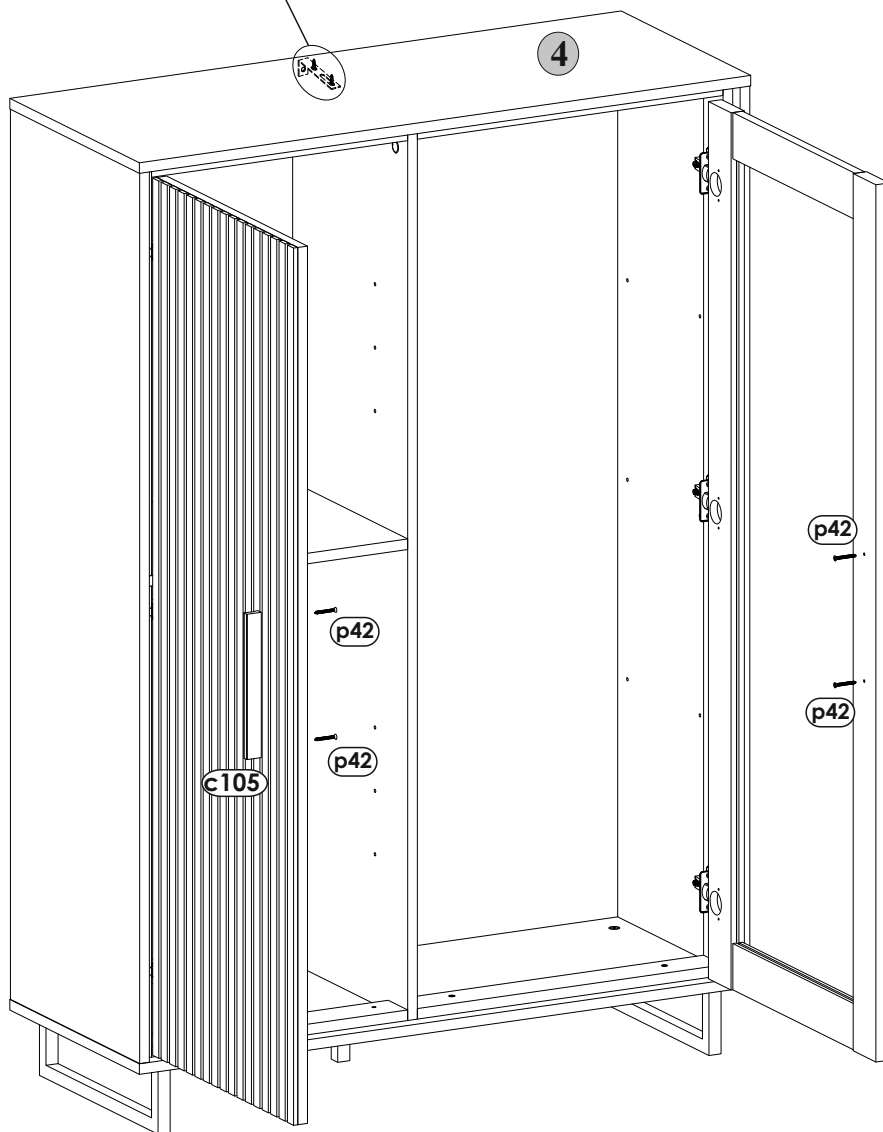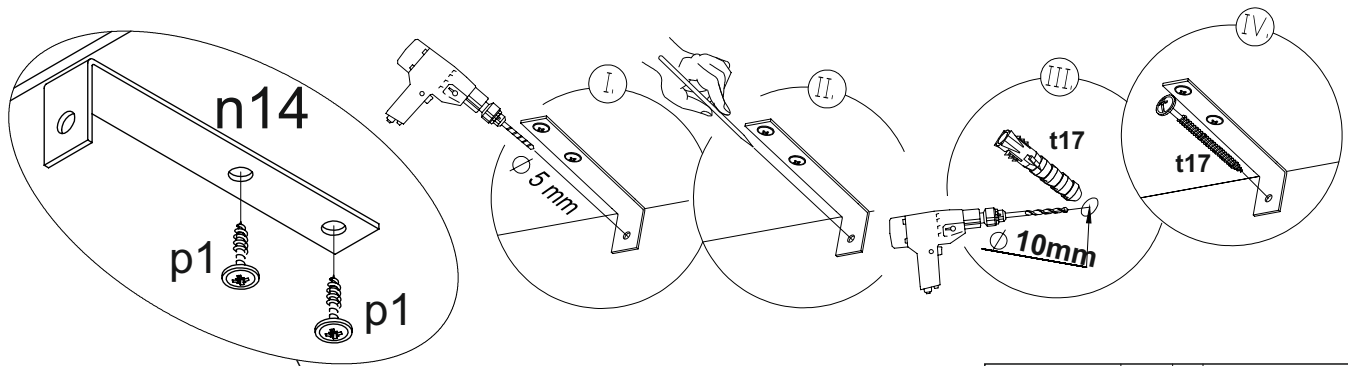




9

**15**

**12x**   
φ5x17 mm **d3**

**8x**   
φ5x17 mm **d1**

**14x**   
**s2**

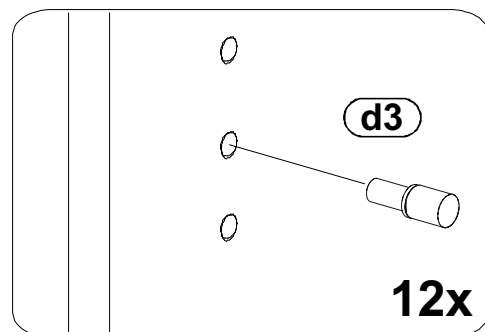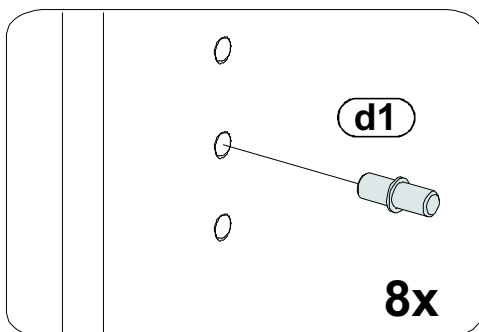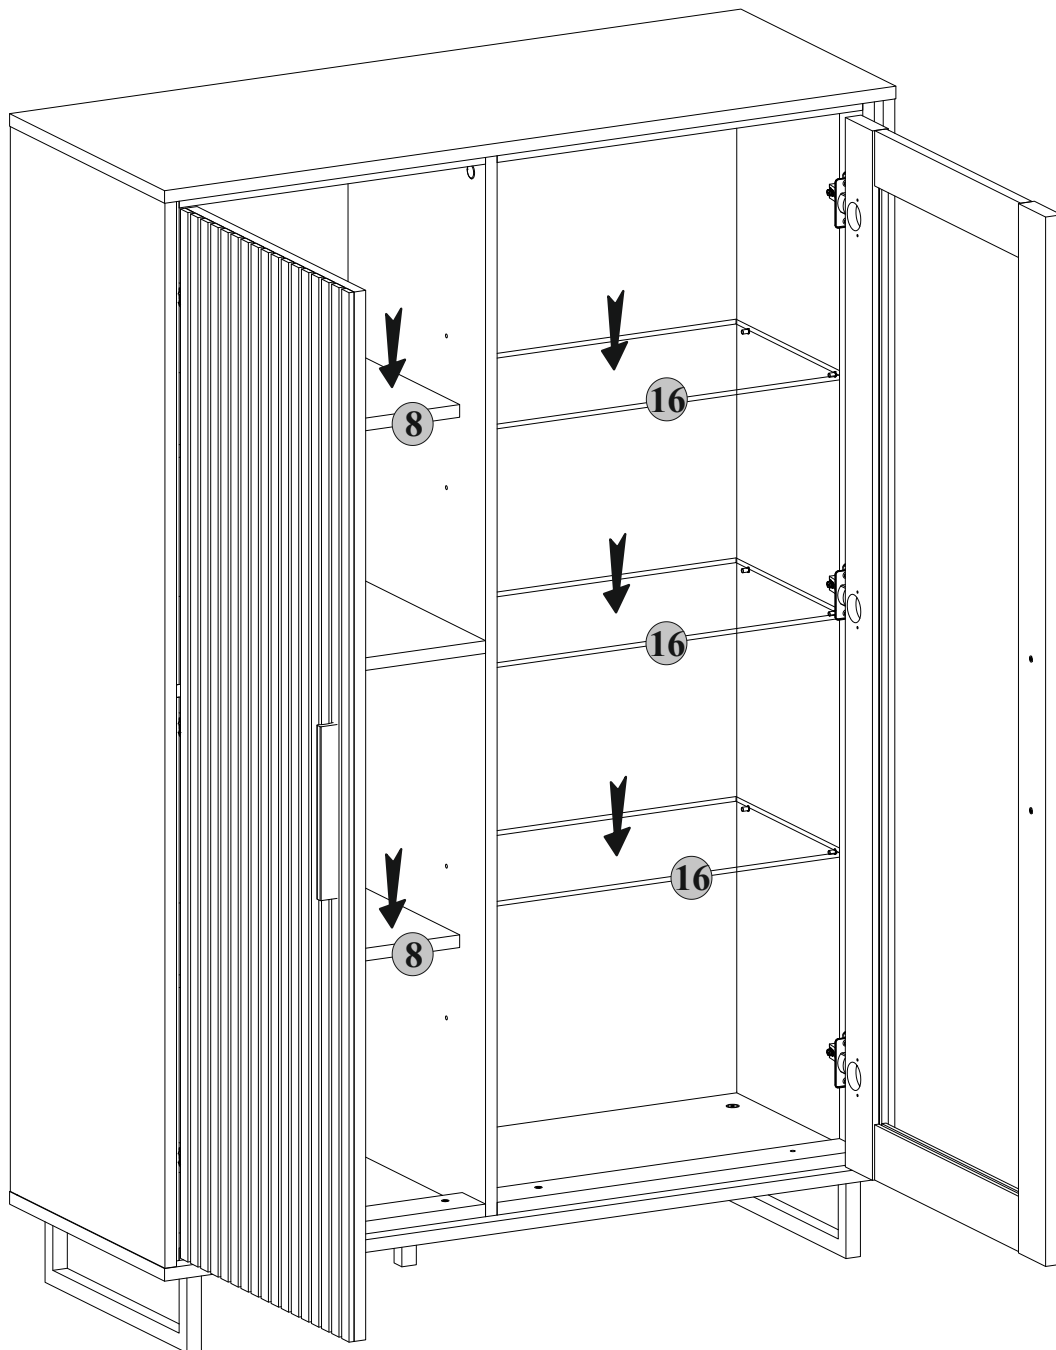

**10**