
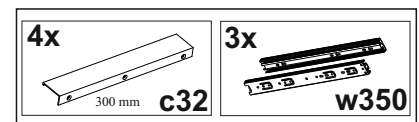
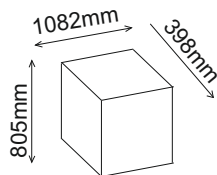
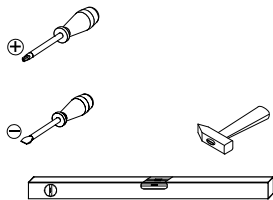
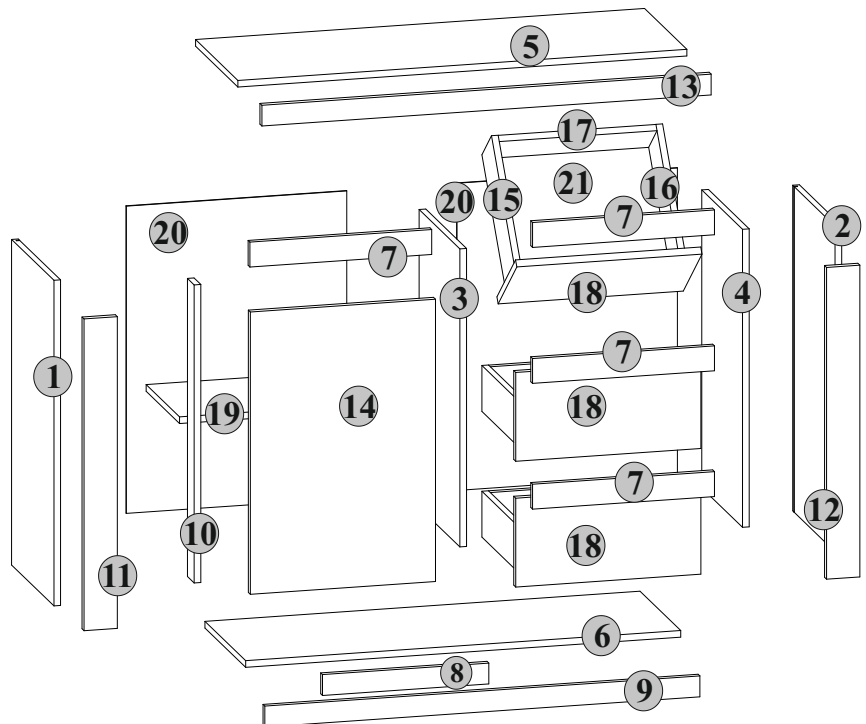
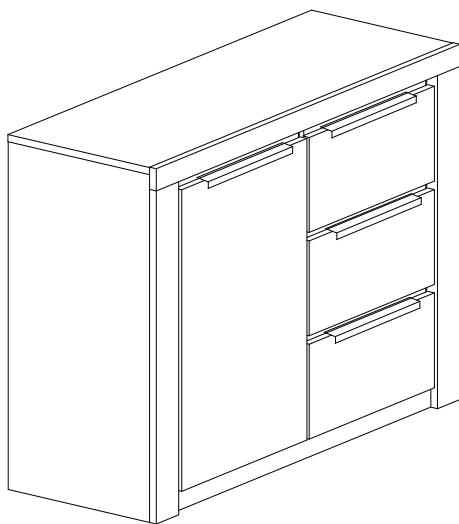














“2562”

versionsnummer: 04.03.2019


Naturholz kann sich werkstoffbedingt verziehen. Durch das Montieren ziehen sich Teile wieder plan.





B1		B2		B3		B4
4x φ5x17 mm d1		8x φ6.5x50 mm e1		2x φ4.2x13 mm p38		
8x l2	60x φ15 #12.5 r1	1x y1	8x s1	4x l9	52x φ3.5x13 mm p1	
60x s2	8x k1	44x φ8x30 mm f1	22x 1x16 l1	2x φ4x30 mm p9	4x φ2x20 mm p27	
58x r16	2x r24	1x z1	1x φ8x50 mm f6	2x n27	2x φ6.3x13 mm e3	
						2x b1
						2x a2

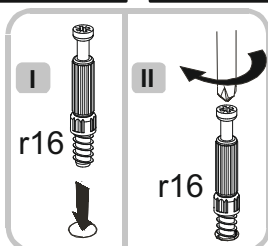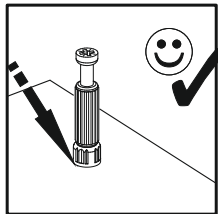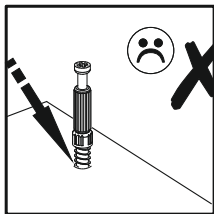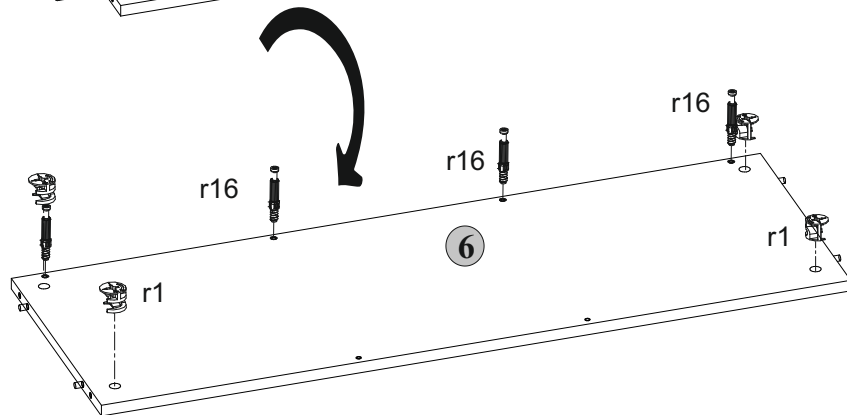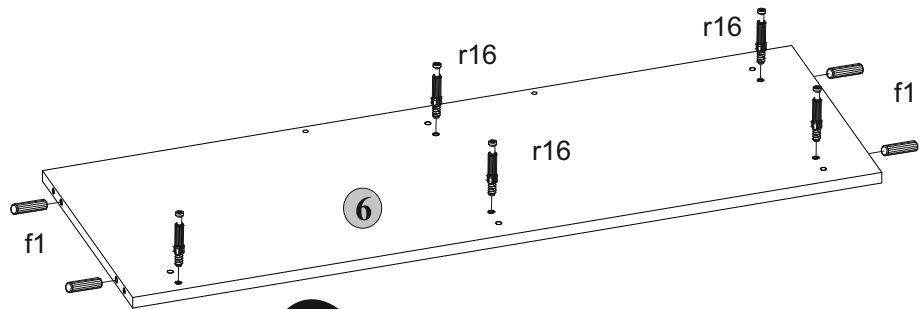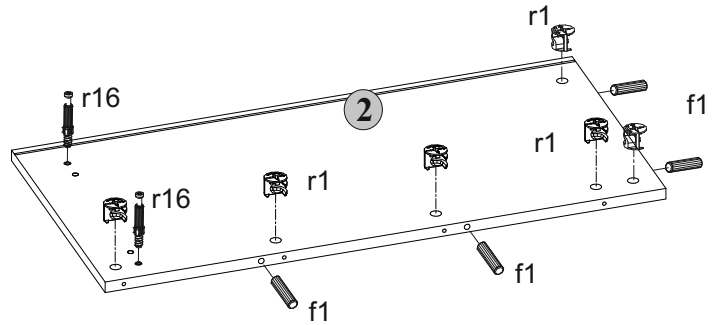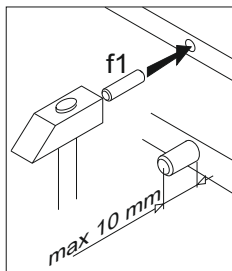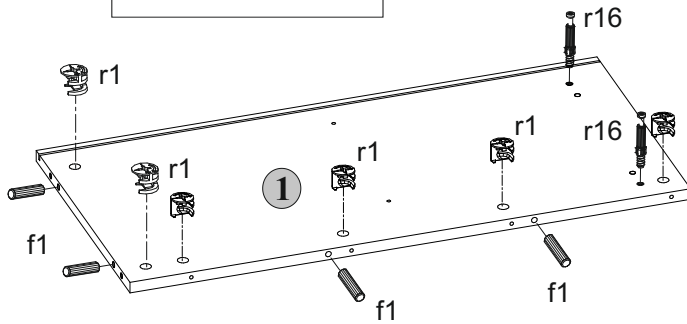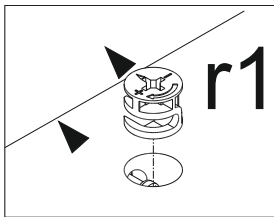











2

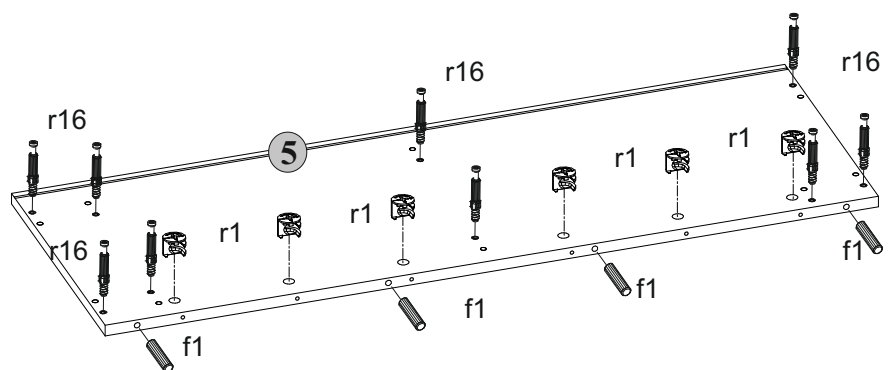

2







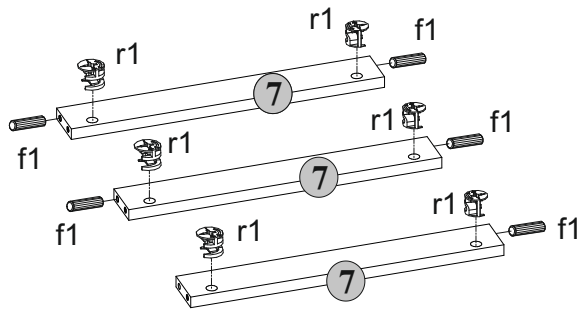
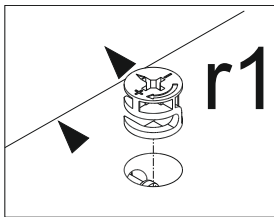


14x $\phi 8 \times 30$ mm f1	20x $\phi 15 \times 12.5$ r1
18x $\phi 3.5 \times 13$ mm p1	2x r24
5x r16	3x w350




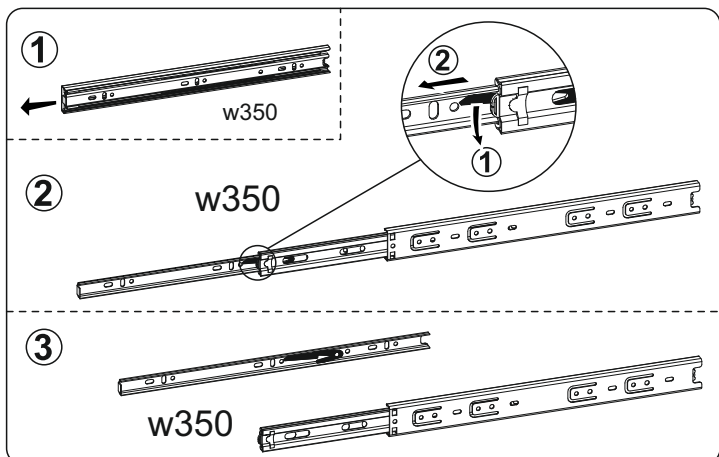
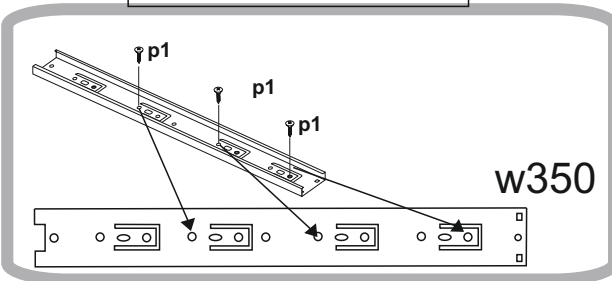
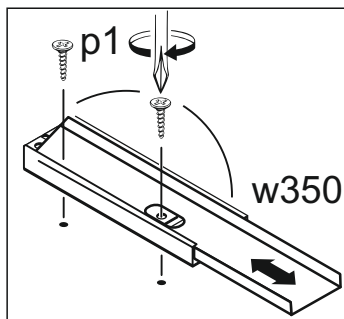
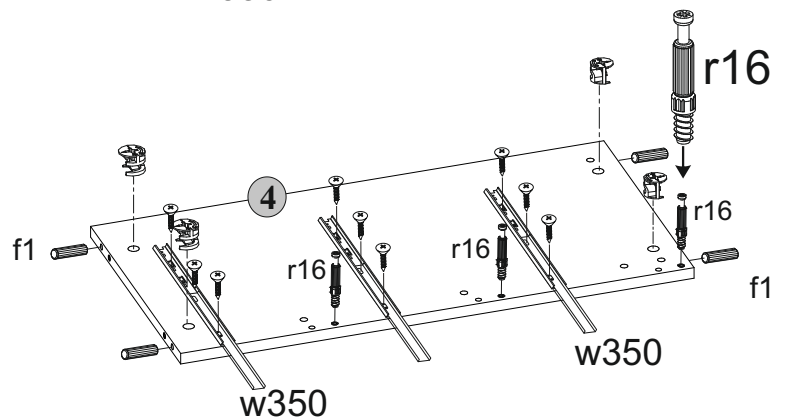
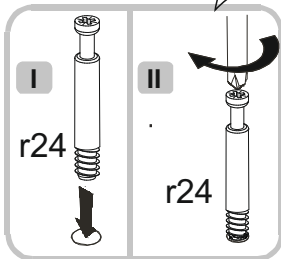
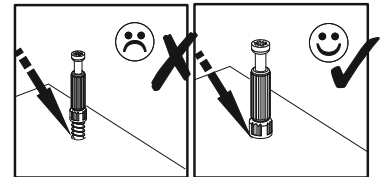
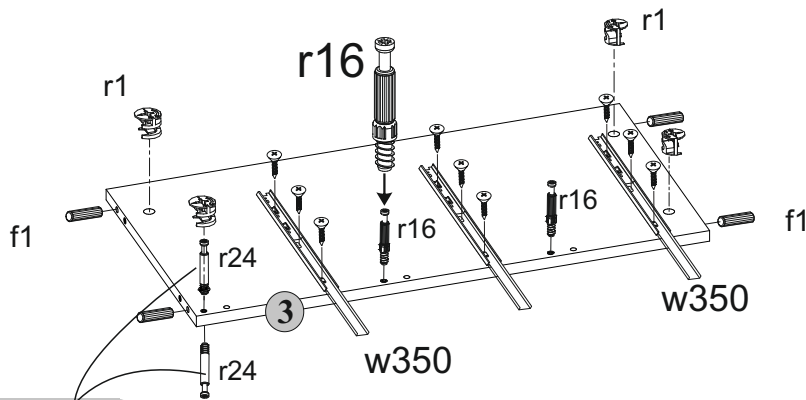
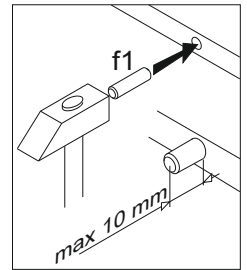
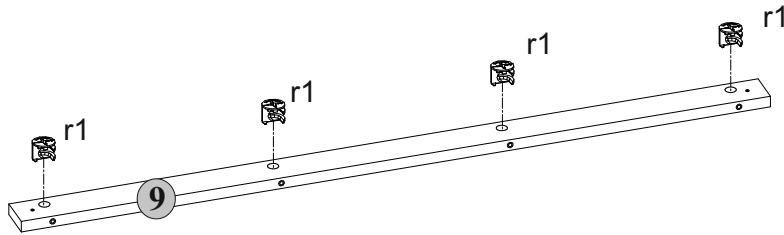
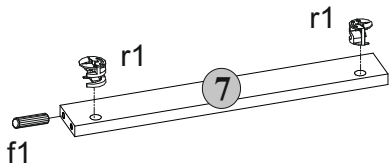


3

3

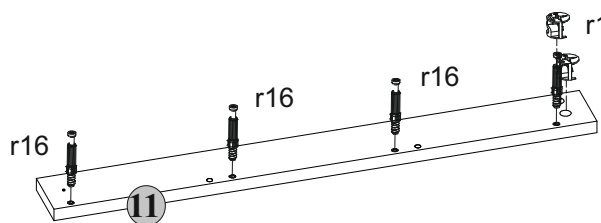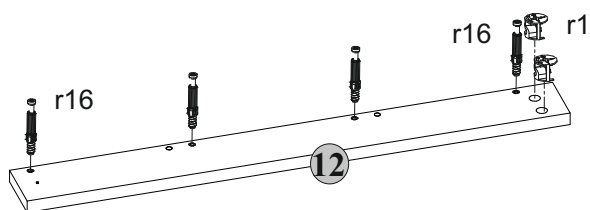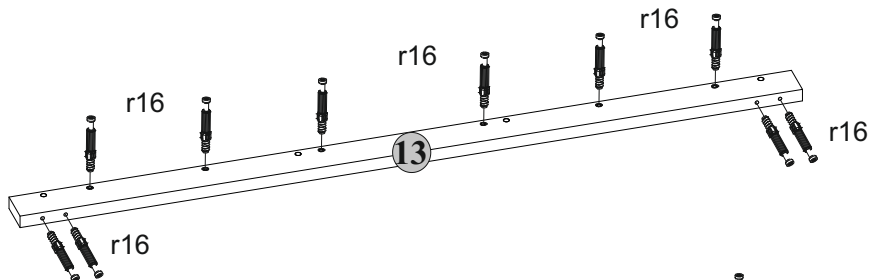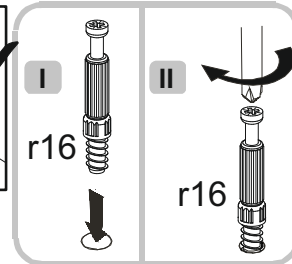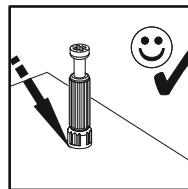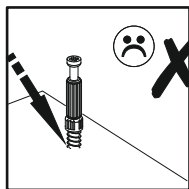

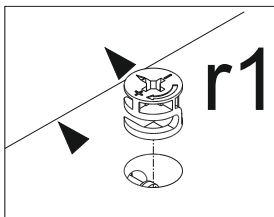


4

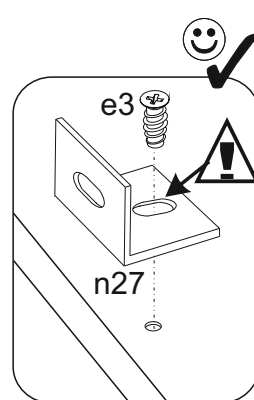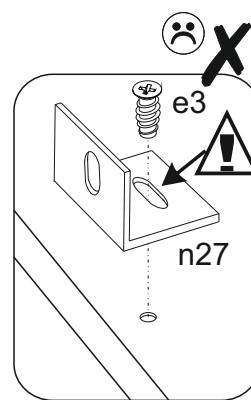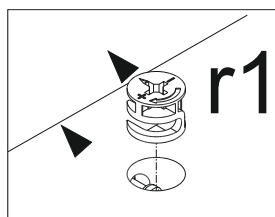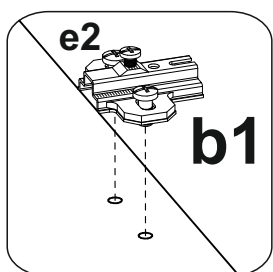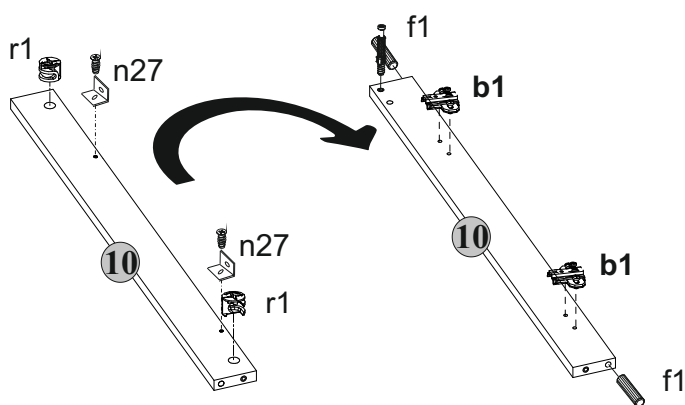

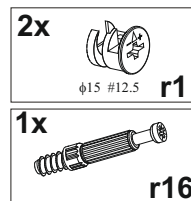
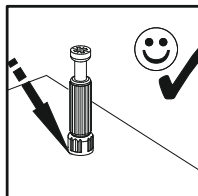
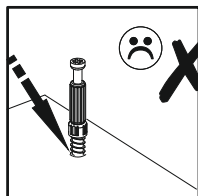
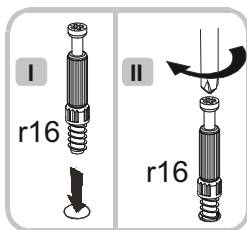


4

5

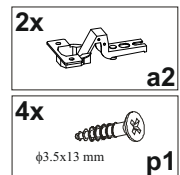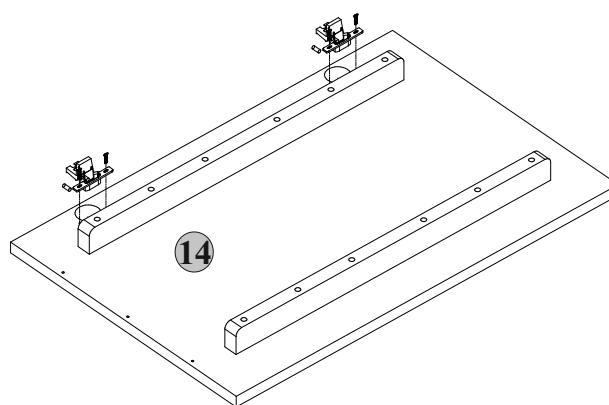
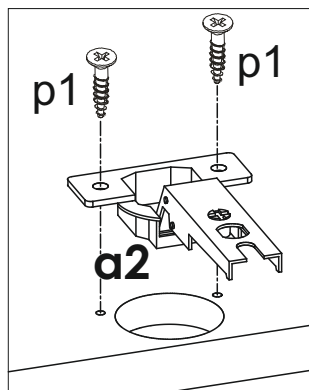


6

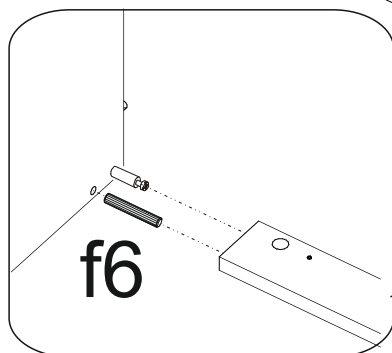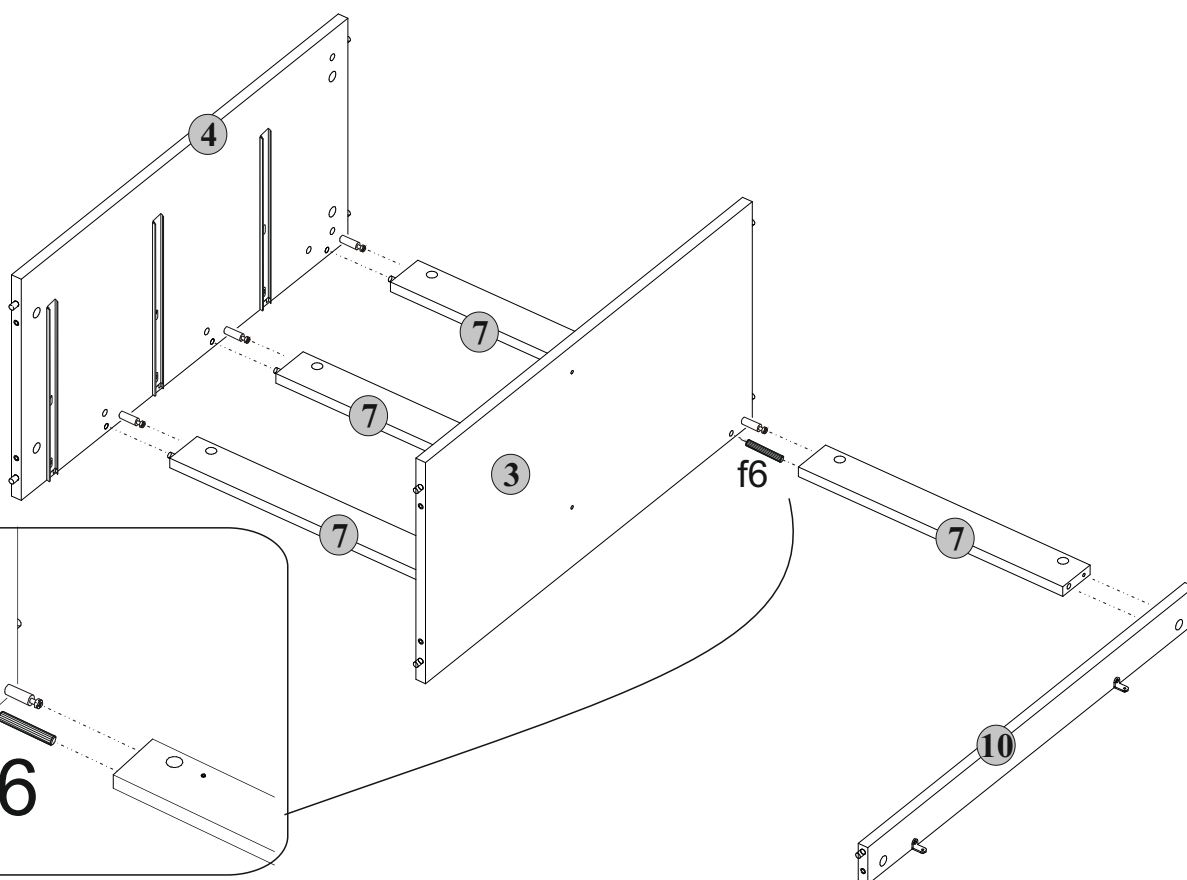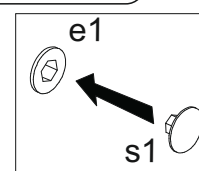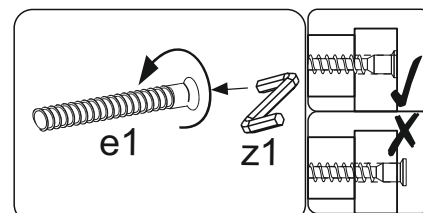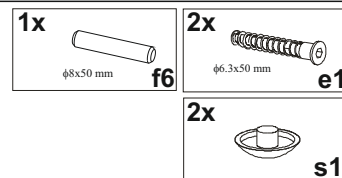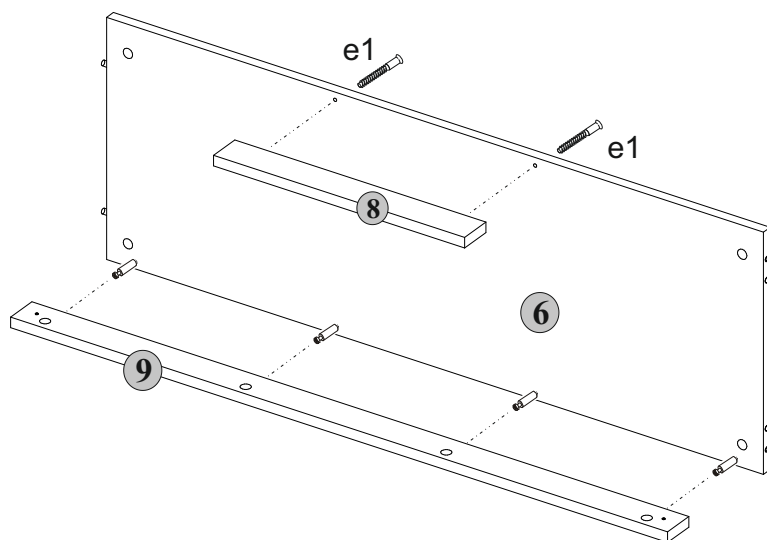


5

7

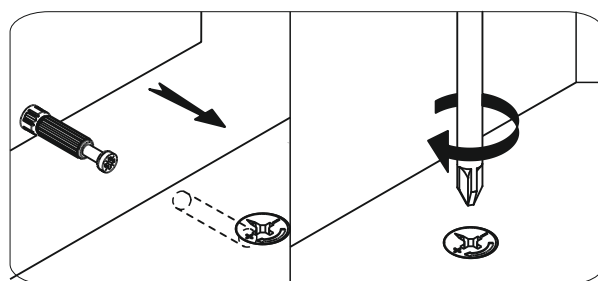
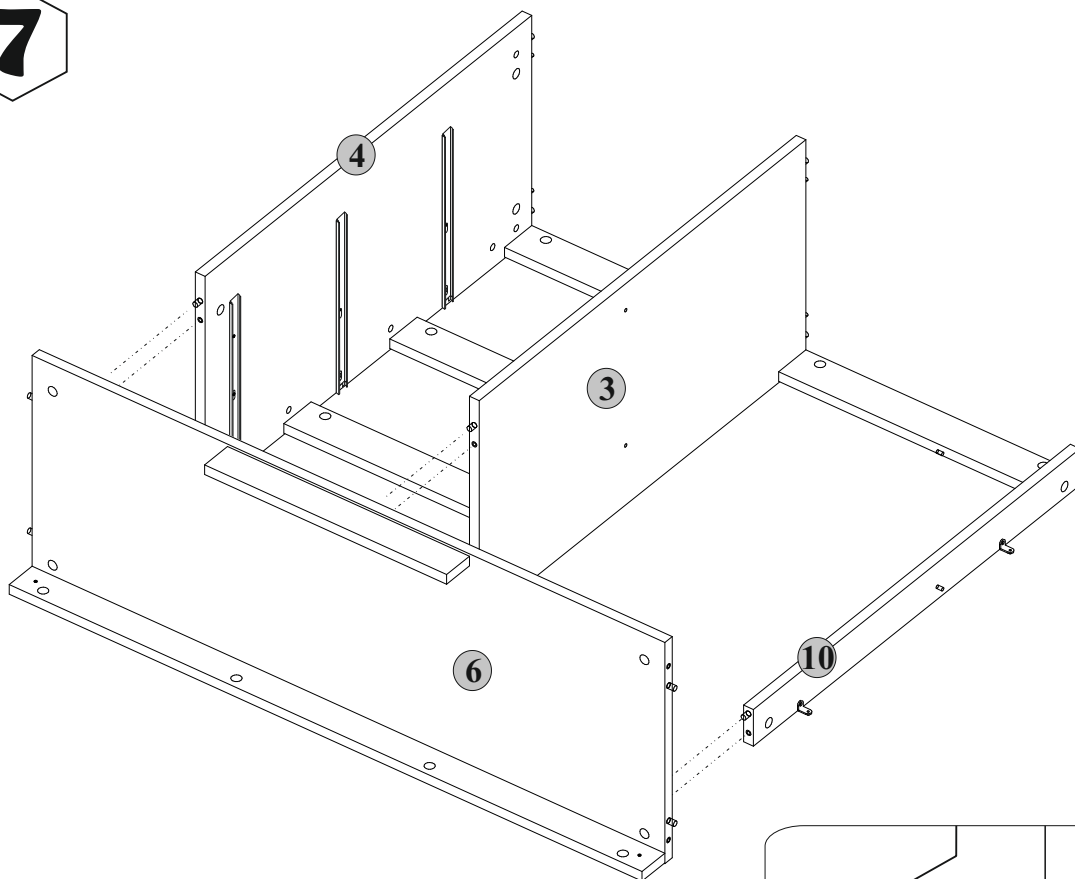


8

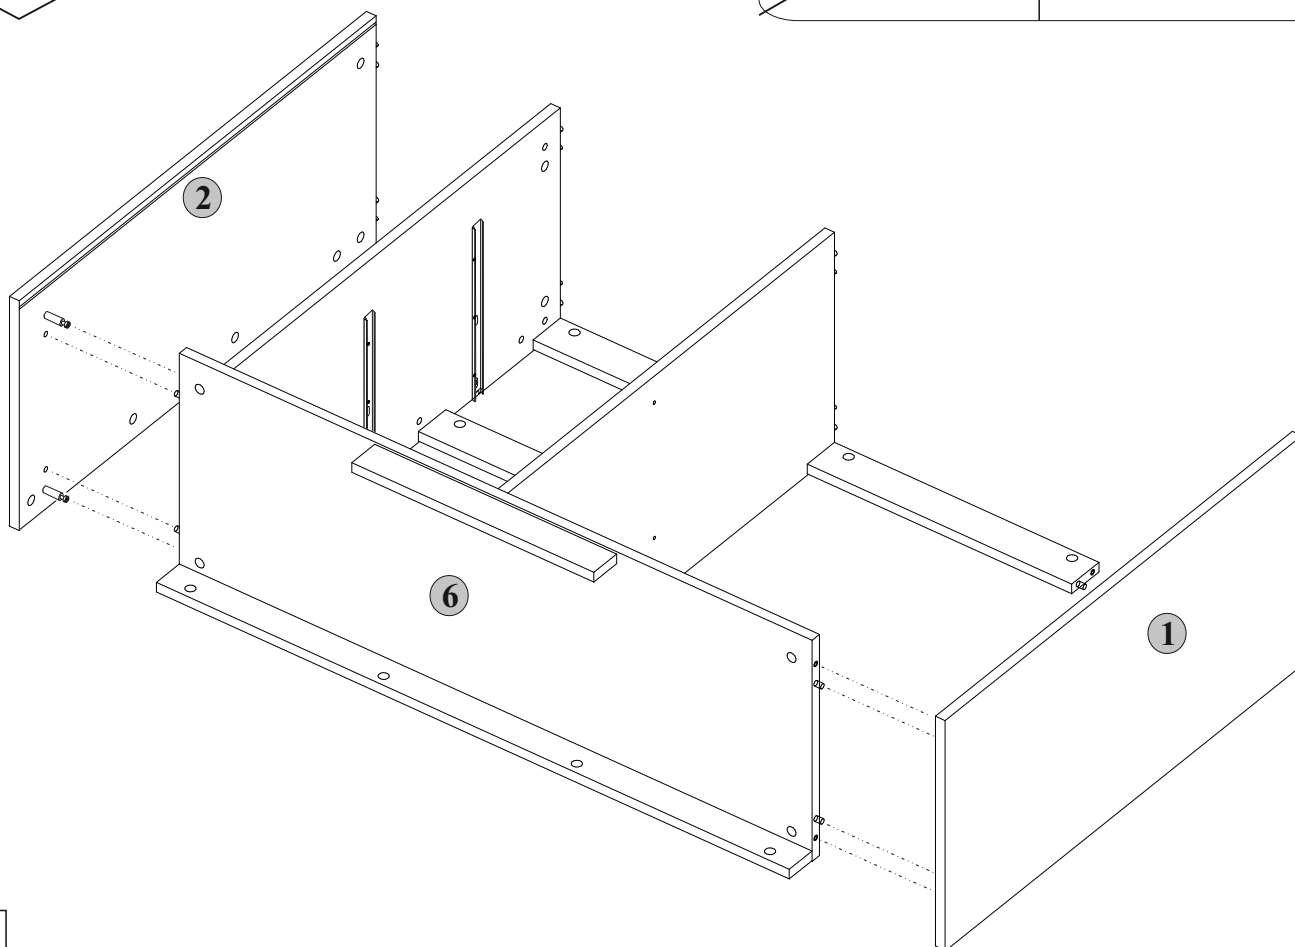


6

9




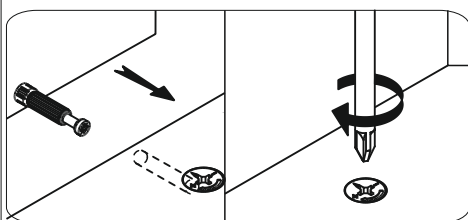
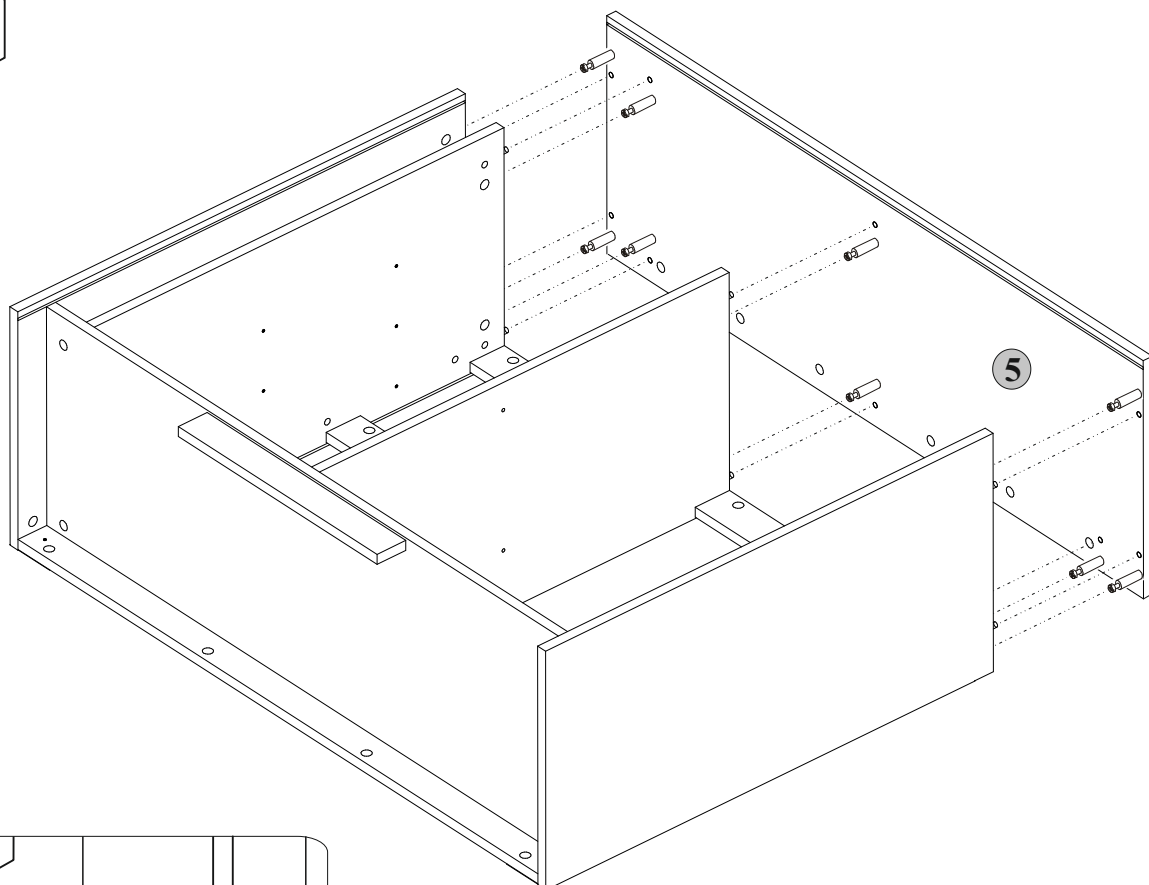


10

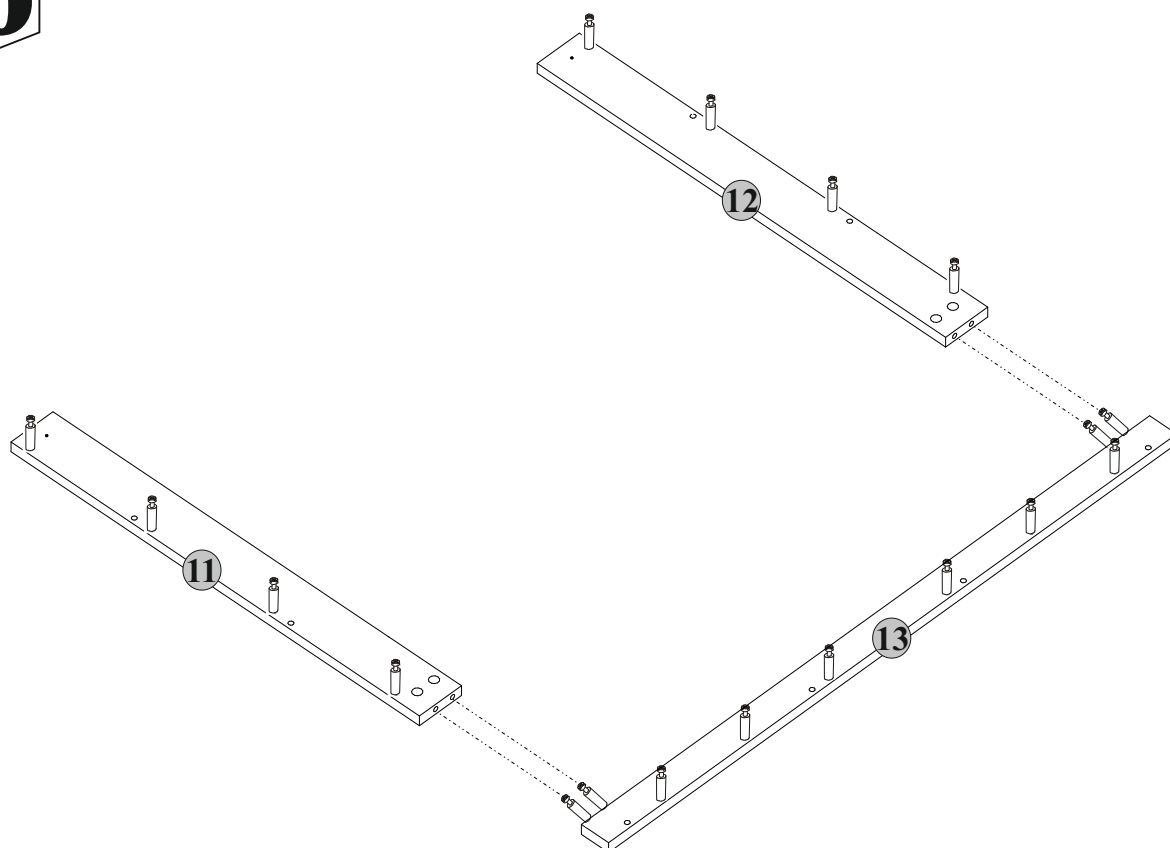


7

11

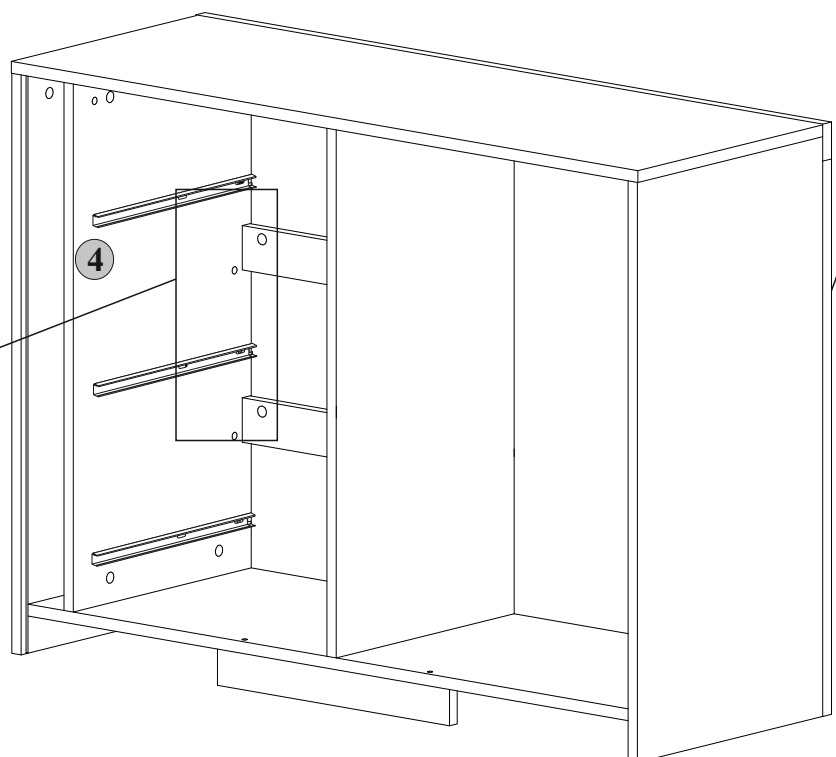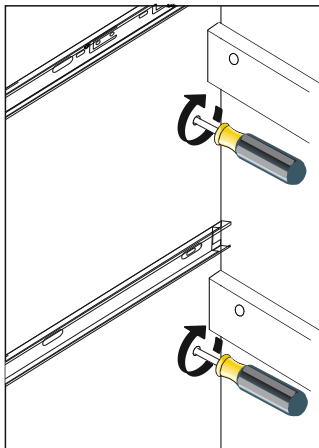
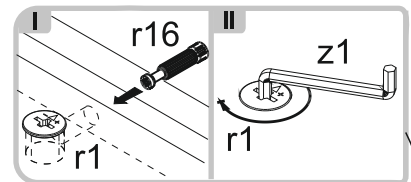
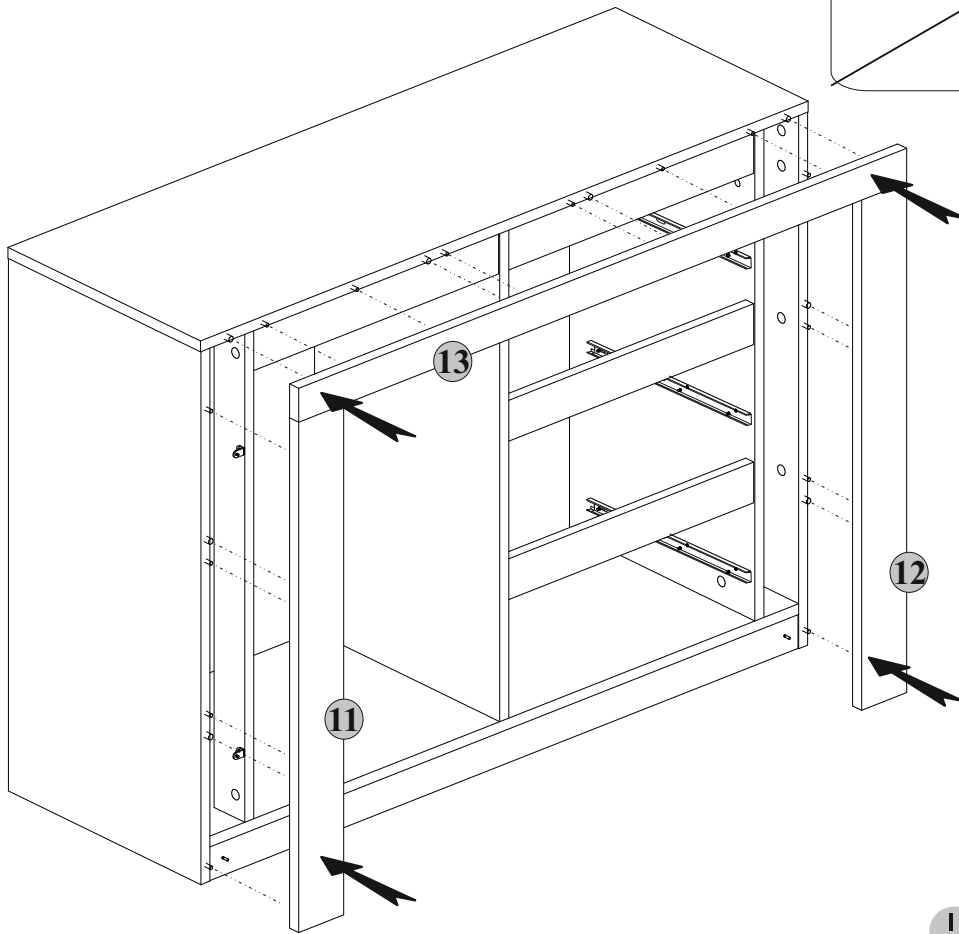
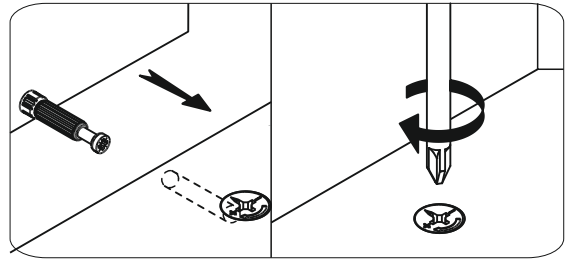


8



12

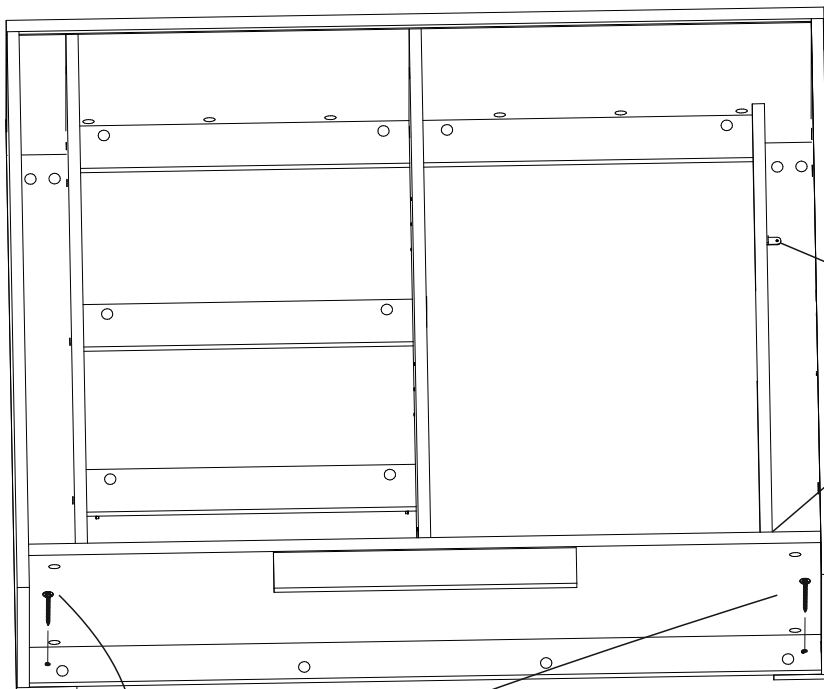




- 4x  $\phi 4.2 \times 13 \text{ mm}$ **p38**
- 2x  $\phi 4 \times 30 \text{ mm}$ **p9**

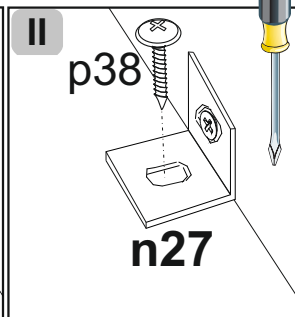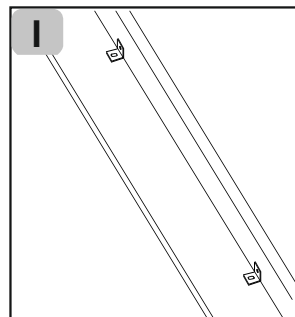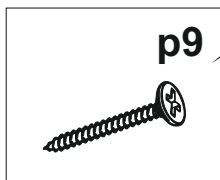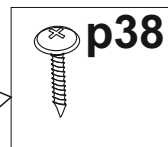

13

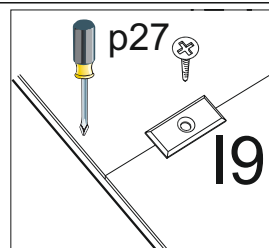
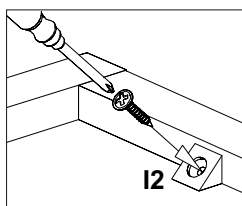


- 4x  **I9**
- 10x  **I1**
- 8x  **k1**
- 4x  $\phi 2 \times 20 \text{ mm}$ **p27**
- 8x  **I2**

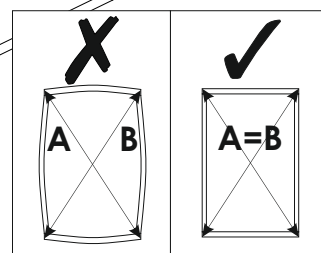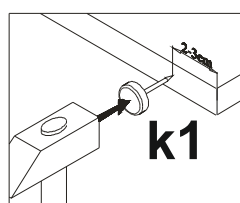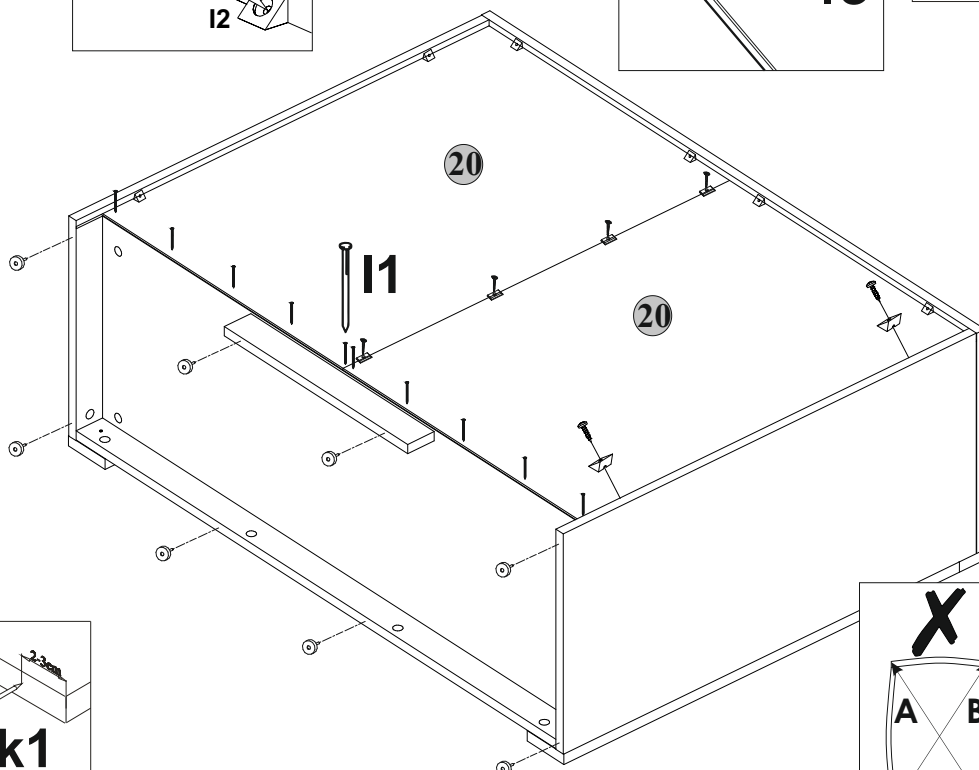

9

14x3

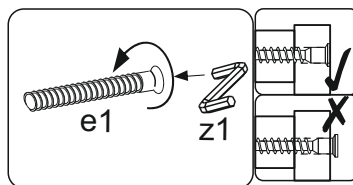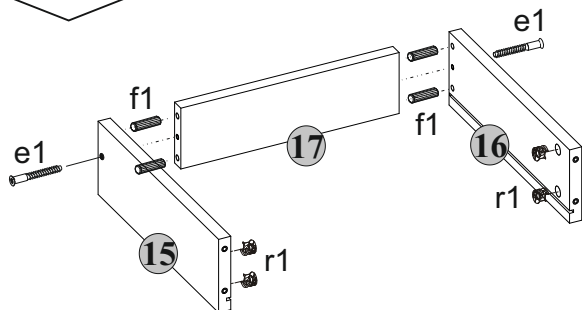

12x
φ8x30 mm
f1

12x
l1

27x
φ3.5x13 mm
p1












12x
r16

12x
φ15 #12.5
r1

3x
300 mm
c32








6x
φ6.3x50 mm
e1

6x
s1

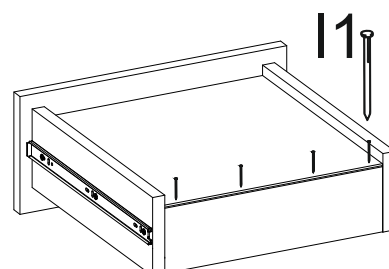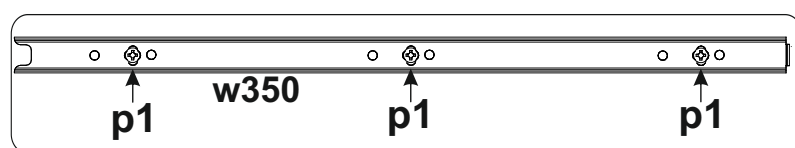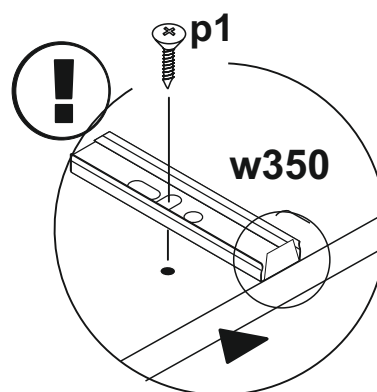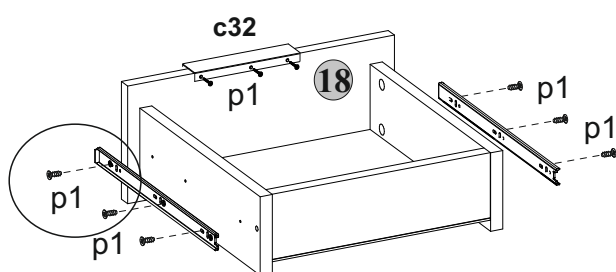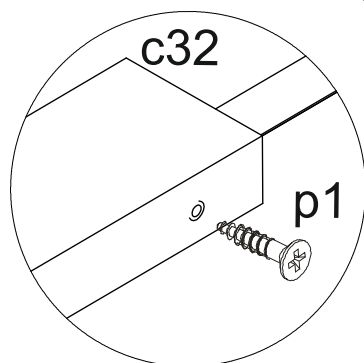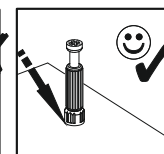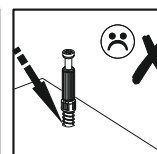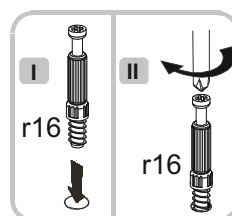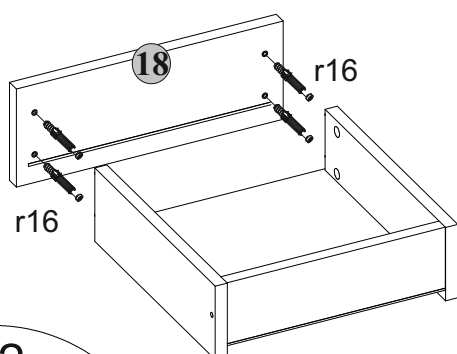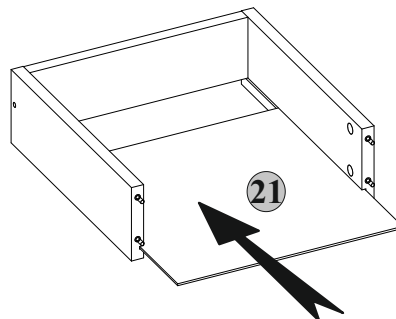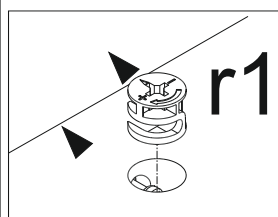

15

60x		s2	1x		c32
4x		d1	3x		p1
	$\phi 5 \times 17$ mm			$\phi 3.5 \times 13$ mm	

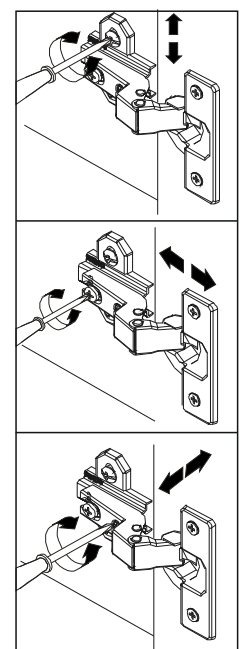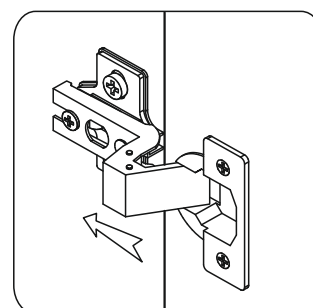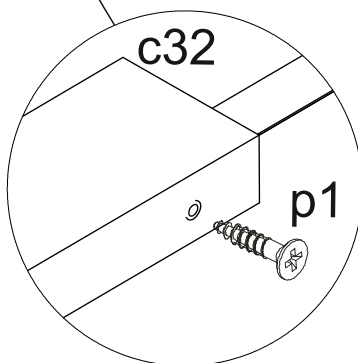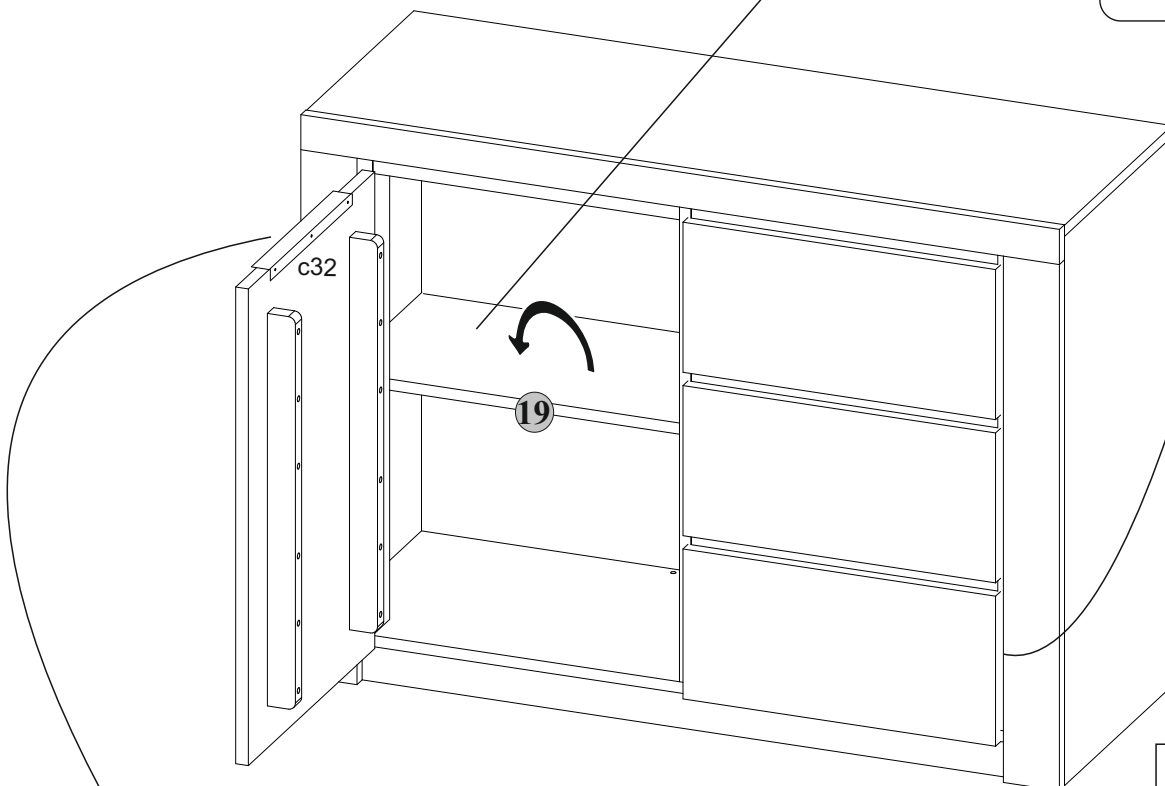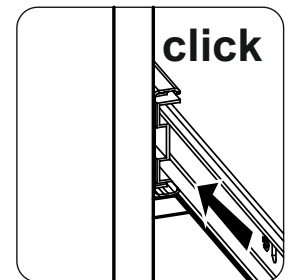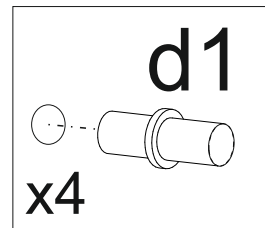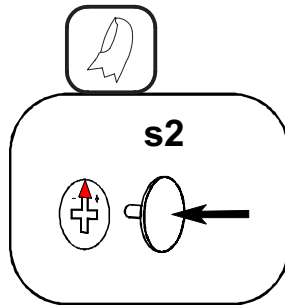

11