


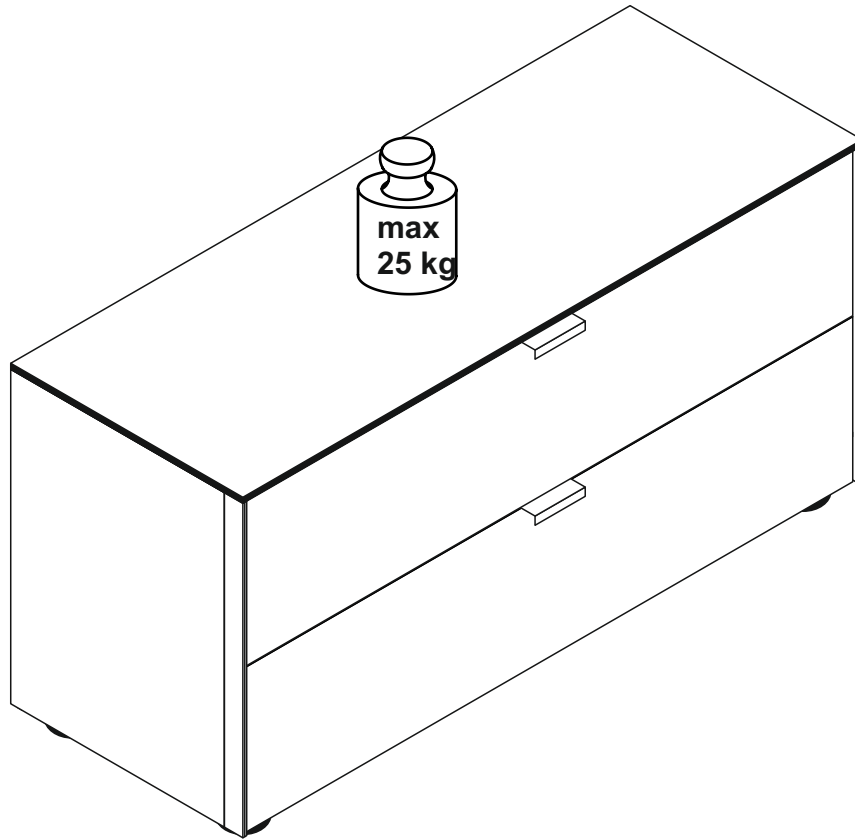

Artikel.-Nr.:

0772-LB_011

Montageanleitung.-Nr.:

MA1-00368

REPC-Nr.:	Service • Assistenza • Dienstverlening • Serwis Servis • Szerviz • Сервисная служба

Beutel 0772-LB_011 GL 0-15 Colli 2/3

B01-30 35x 3x16	B01-80 8x 3,5x13	B01-70 2x 3x30	B01-90 4x 3,5x20	B01-122 2x 4x13
B01-200 10x 6,3x13	B02-08 4x h=10mm	B02-10 16x h=12mm	B02-20 20x	



SCAN ME

Beutel BT1-00005 Colli 2/3

B01-123 8x 4x15	B02-173 4x	
-----------------------	---------------	--

Beutel 0772-LB_011 0-35 Colli 2/3

B03-07 1x	B03-11 3x	B03-42 3x 8er
--------------	--------------	---------------------

Beutel 0772-LB_011 0-45 Colli 2/3

B02-103 12x 8x30	B05-130 2x	B05-185 4x
B05-260 1x set one by Musterring	B05-280 1x	B06-425 2x

Beutel BT1-00001 Colli 2/3


B05-265 1x set one by Musterring Pflegeanweisung

Beutel BT1-00176 Colli 3/3


B01-349 6x M4	B01-190 6x M4x20
---------------------	------------------------

Beutel 0772-LB_011 0-55 Colli 1/3


B01-36 4x 4x40




Colli 1/3




1123 x 358
(HTS-00057)




1111 x 140
(Z01-99-1111)




1x
(Z01-200R)

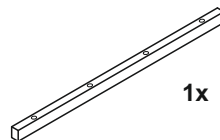


1x
(Z17-96)



1163 x 316
(Schubk.-blende)




1x
(Z01-105-350)




1x
(Z01-106-350)




1x
(Z01-72)



1x
(Z01-200L)



1x
(Klappe)




1x
(Z07-27)


Colli 2/3



2x
(Z99-00465)




1x
(Seite links)




1x
(Oberboden)




1x
(Mittelboden)




1x
(Boden)



1x
(Seite rechts)




1x
(HTR-00324)





1x
(HTR-00325)








Colli 3/3

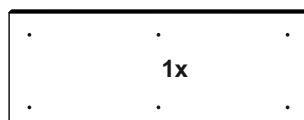

1x
(Oberplatte)

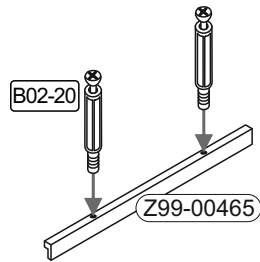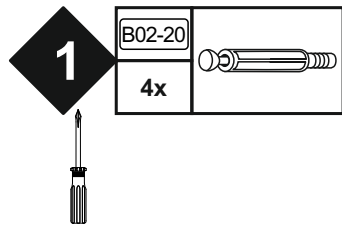

2x

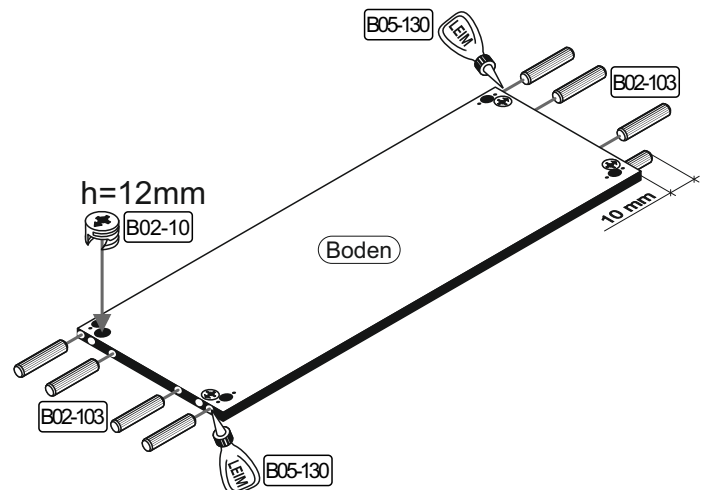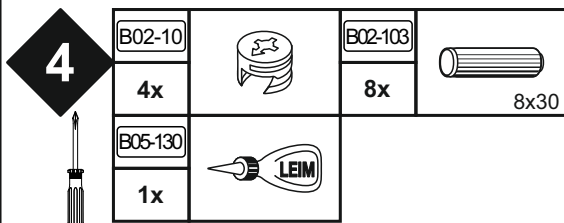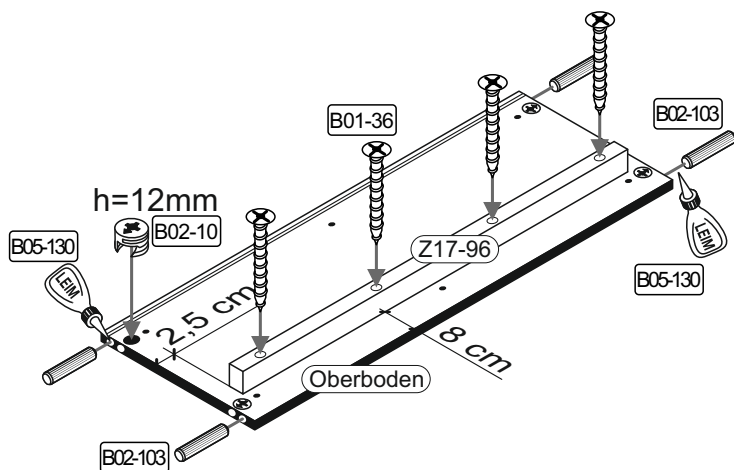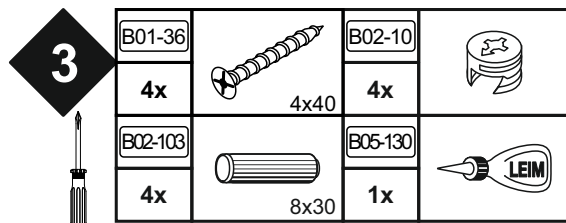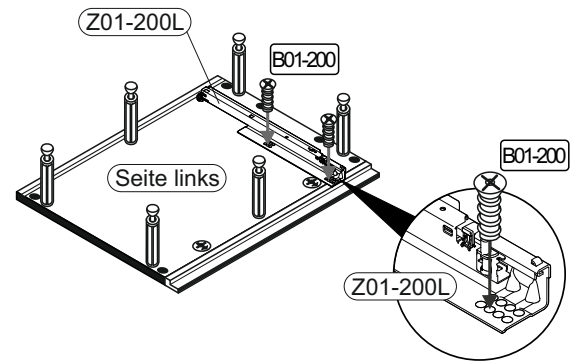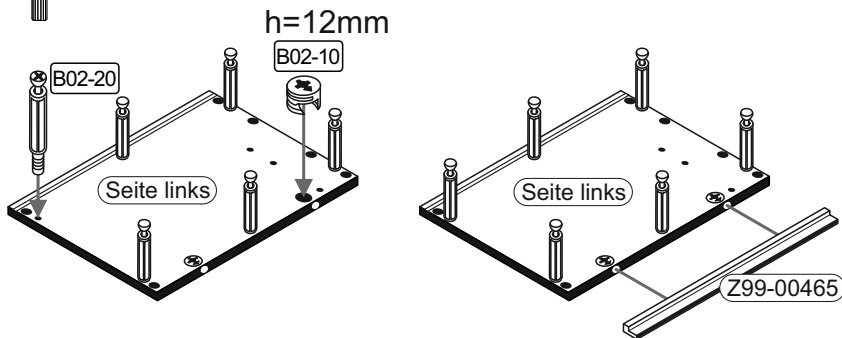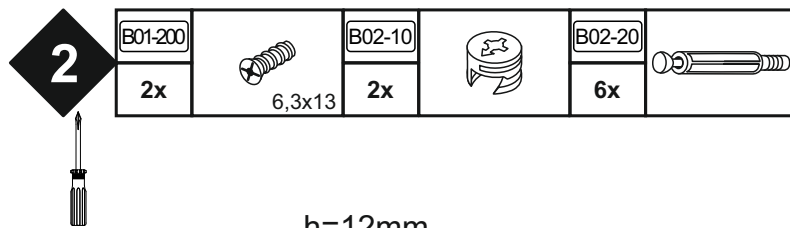

CHICAGO

5

B02-10		B03-11	
4x		3x	

h=12mm

Mittelboden

Mittelboden

6

B01-200		B02-10		B02-20	
2x	6,3x13	2x		6x	

h=12mm

Seite rechts

Seite rechts

Z99-00465

Z01-200R

Z01-200R

7

B01-80		B01-200	
6x	3,5x13	2x	6,3x13
B03-42		B06-425	
3x	8er	1x	

Klappe

8



B01-200		B02-08		B02-20		B06-425	
2x	6,3x13	4x		4x		1x	

Schubk.-blende

h=10mm

Z01-105-350

Z01-106-350

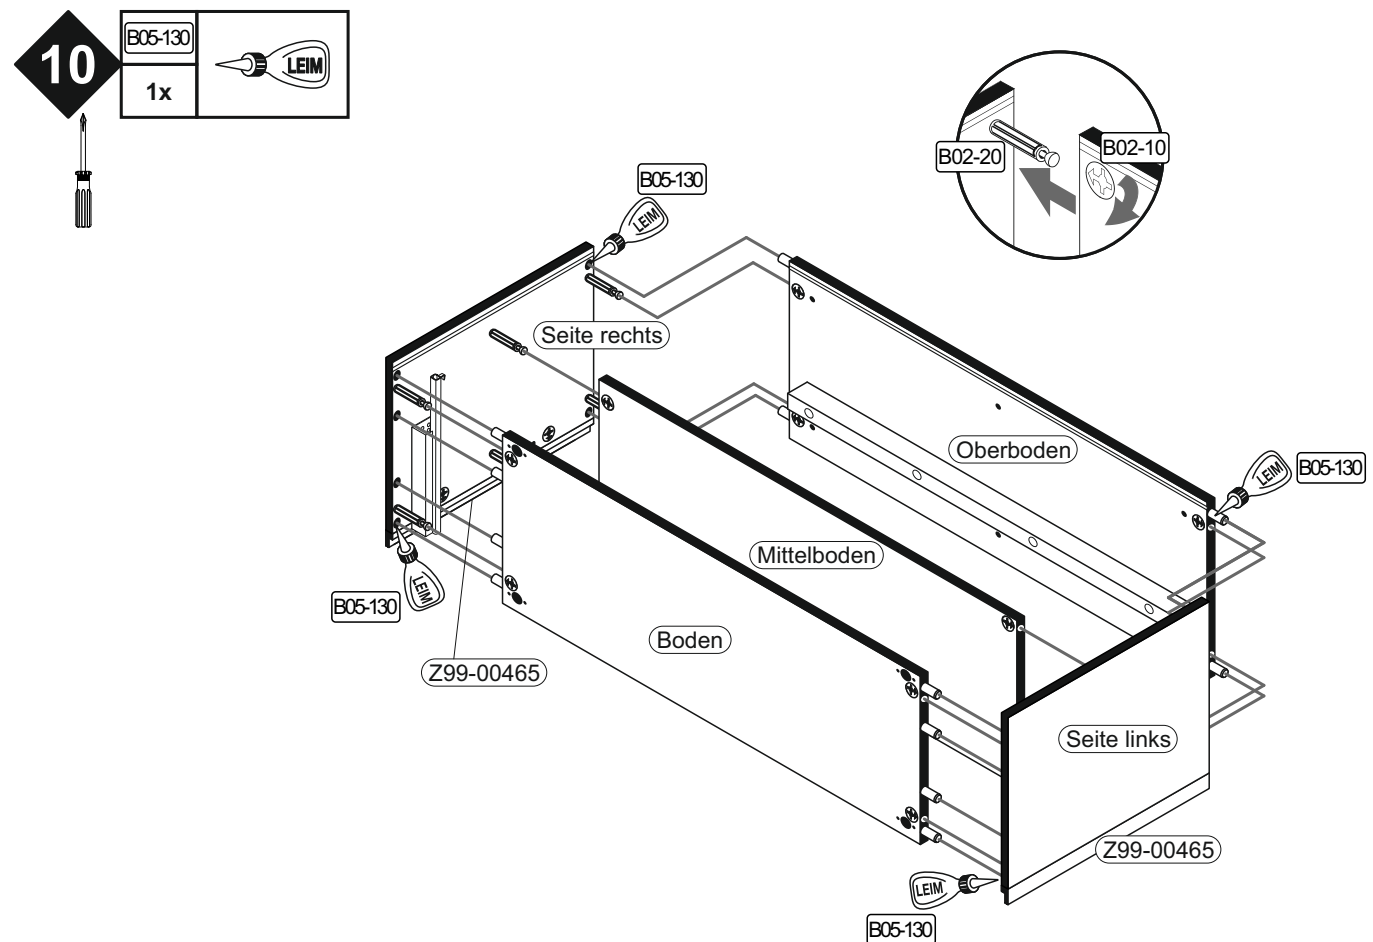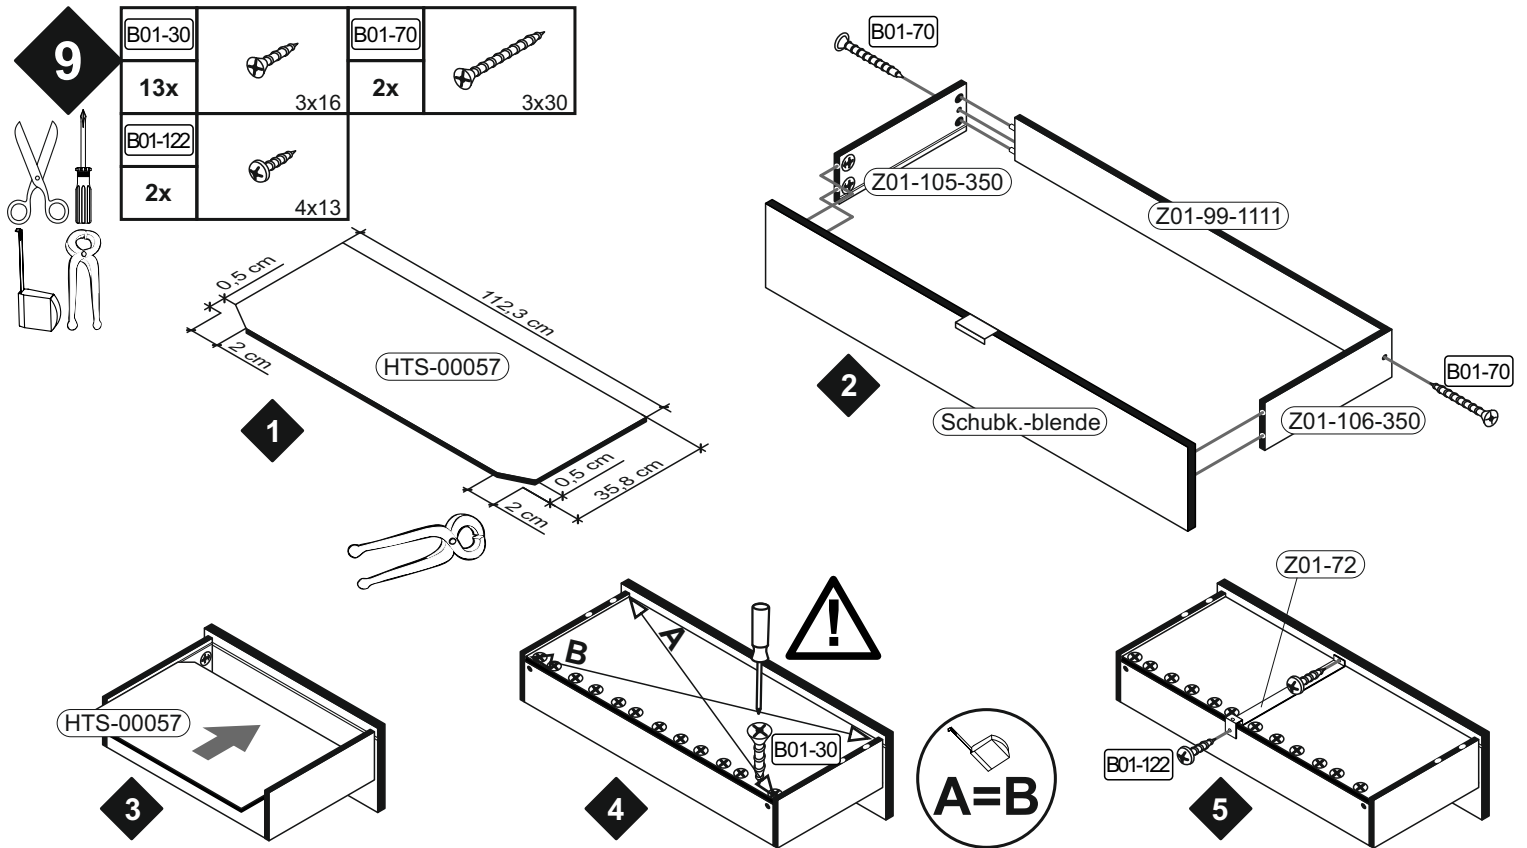

CHICAGO

11

B01-30		B01-90	
22x	3x16	4x	3,5x20
B01-123		B05-185	
8x	4x15	4x	
B02-173			
4x			


12

B05-280	
1x	


Höhenverstellung der Möbelfüße

13



Einbau des Schubkastens

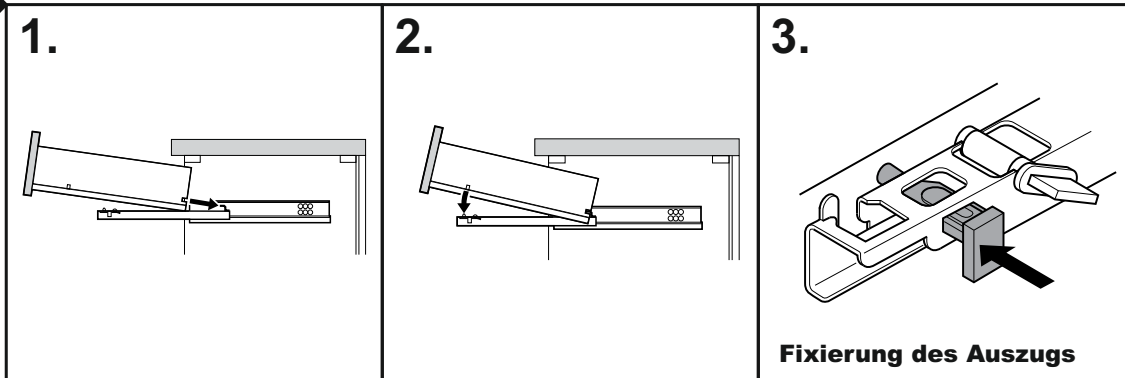



Ausbau des Schubkastens

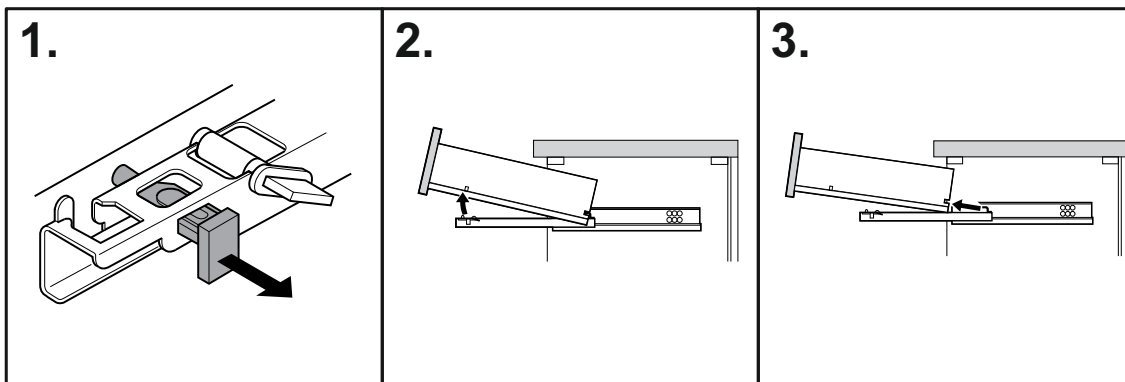


Höhenverstellung des Schubkastens

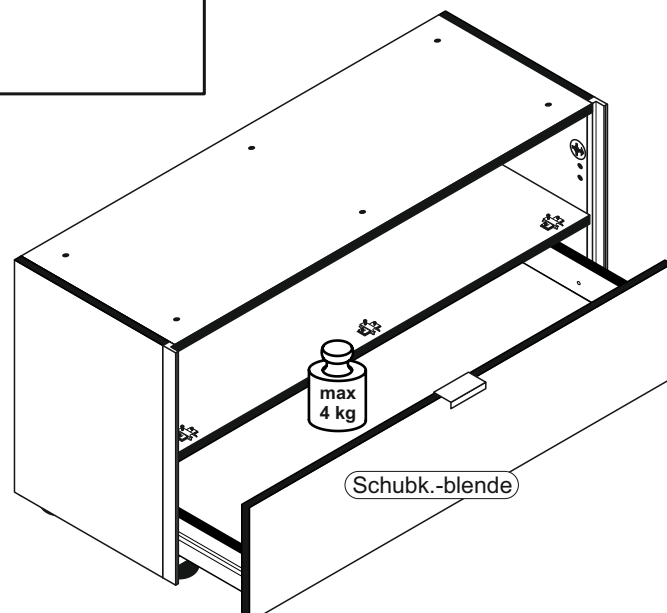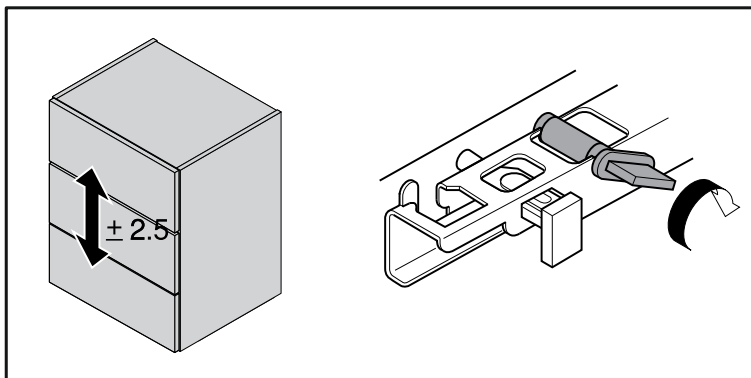

CHICAGO



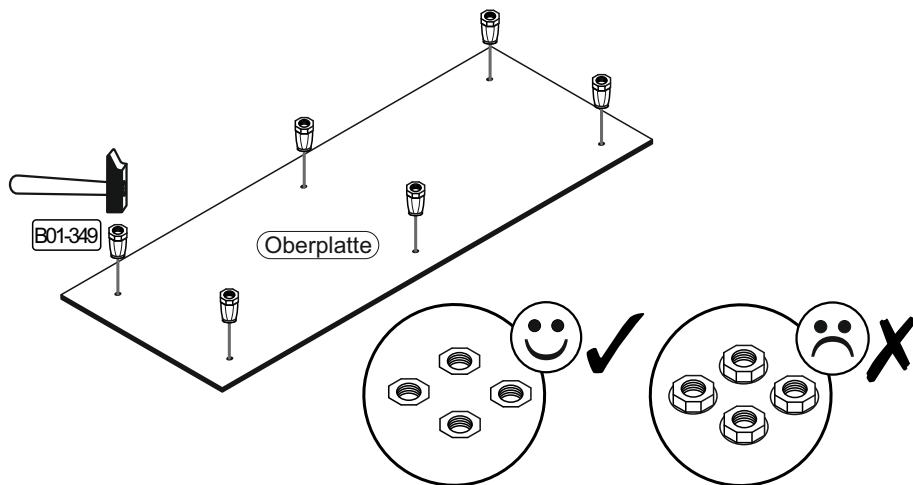
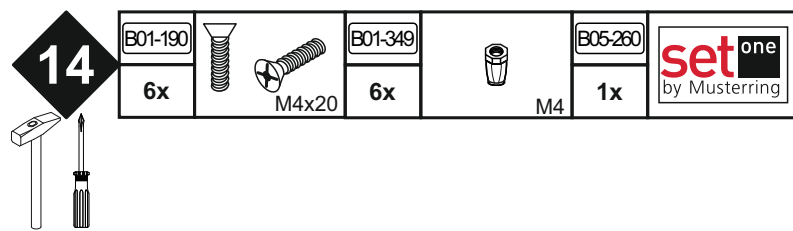


Die Schrauben M4x20 B01-190 müssen mit der Hand eingedreht werden.

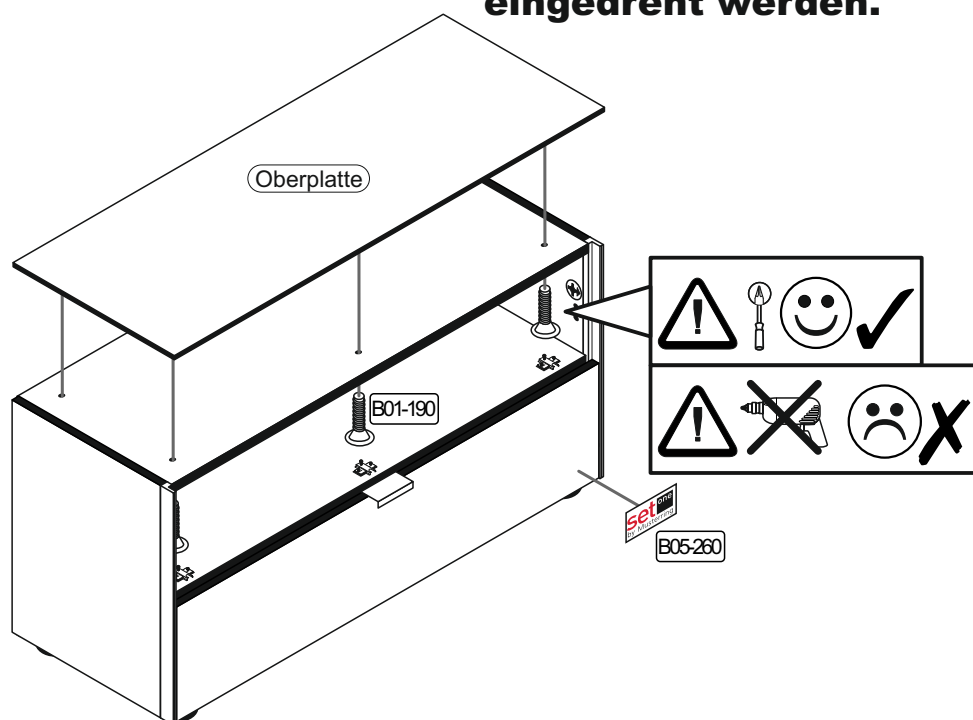


15	B01-80		B01-200	
	2x	3,5x13	2x	6,3x13
	B03-07			
	1x			


Stütze unten (Z07-27) überdrehen

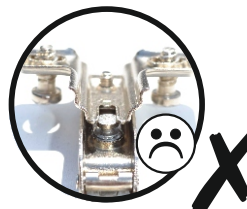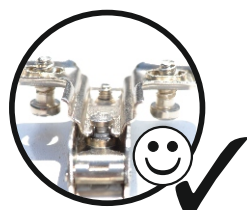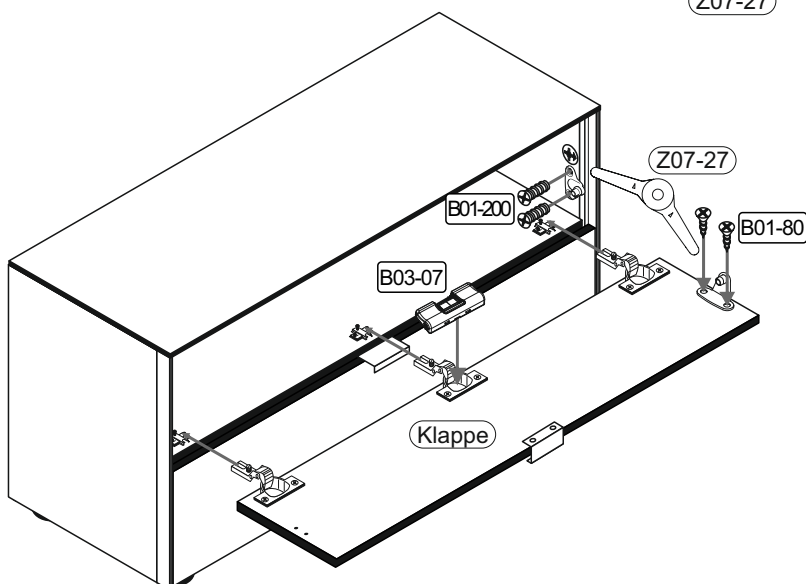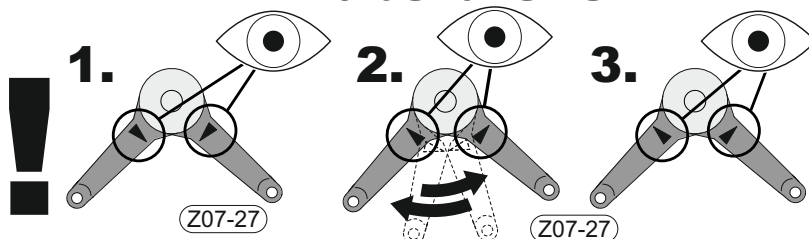

Montage der Türdämpfung

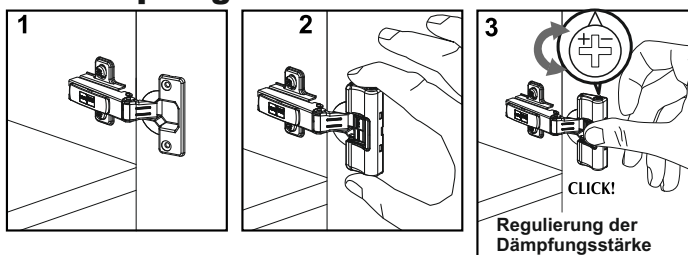

Türen einstellen (Scharniere justieren)
Adjusting the doors (adjusting the hinges)
Régler les portes (ajuster les charnières)
Sistemare le porte (regolare le cerniere)
Deuren instellen (scharnieren afstellen)
Nastawić drzwi (wyregulować zawiasy)
Výrovnejte dvířka (seřid'te závěsy)
Nastavenie dverí (nastavenie závesov)
Állítsa be az ajtókat (állítsa be a zsanérokot)
Reglare usi (ajustare balamale)
Kapıların ayarlanması (menteselerin seviye ayarı)
Регулировка дверей (регулировка шарнира)

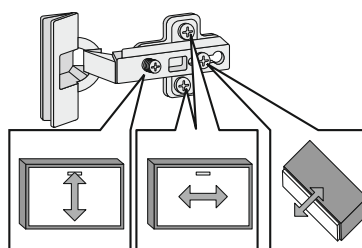

SCAN ME