
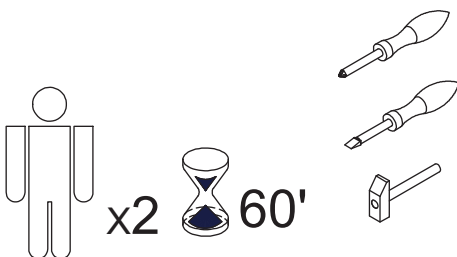


"2347"



versionsnummer:

05.2017

Naturholz kann sich werkstoffbedingt verziehen. Durch das Montieren ziehen sich Teile wieder plan.






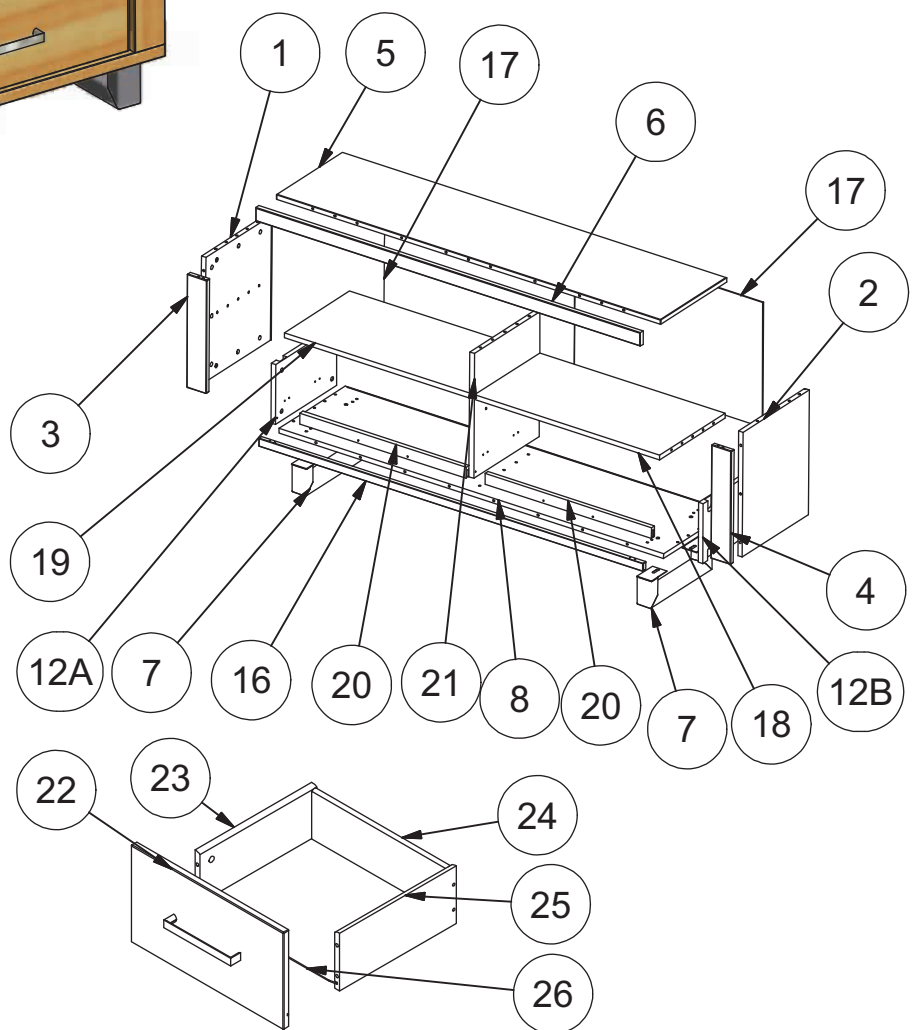


A Ø 8x30 27	B 70	C Ø 8x50 2	D 70		O Ø 5x9 8	G M 4x30 4	H 15	S 4
FILZ 4	J Ø 5x13 8	T Ø 3x16 4	R M 4x26 4	M 2	S 4	P 3	L 16	D1 8/8

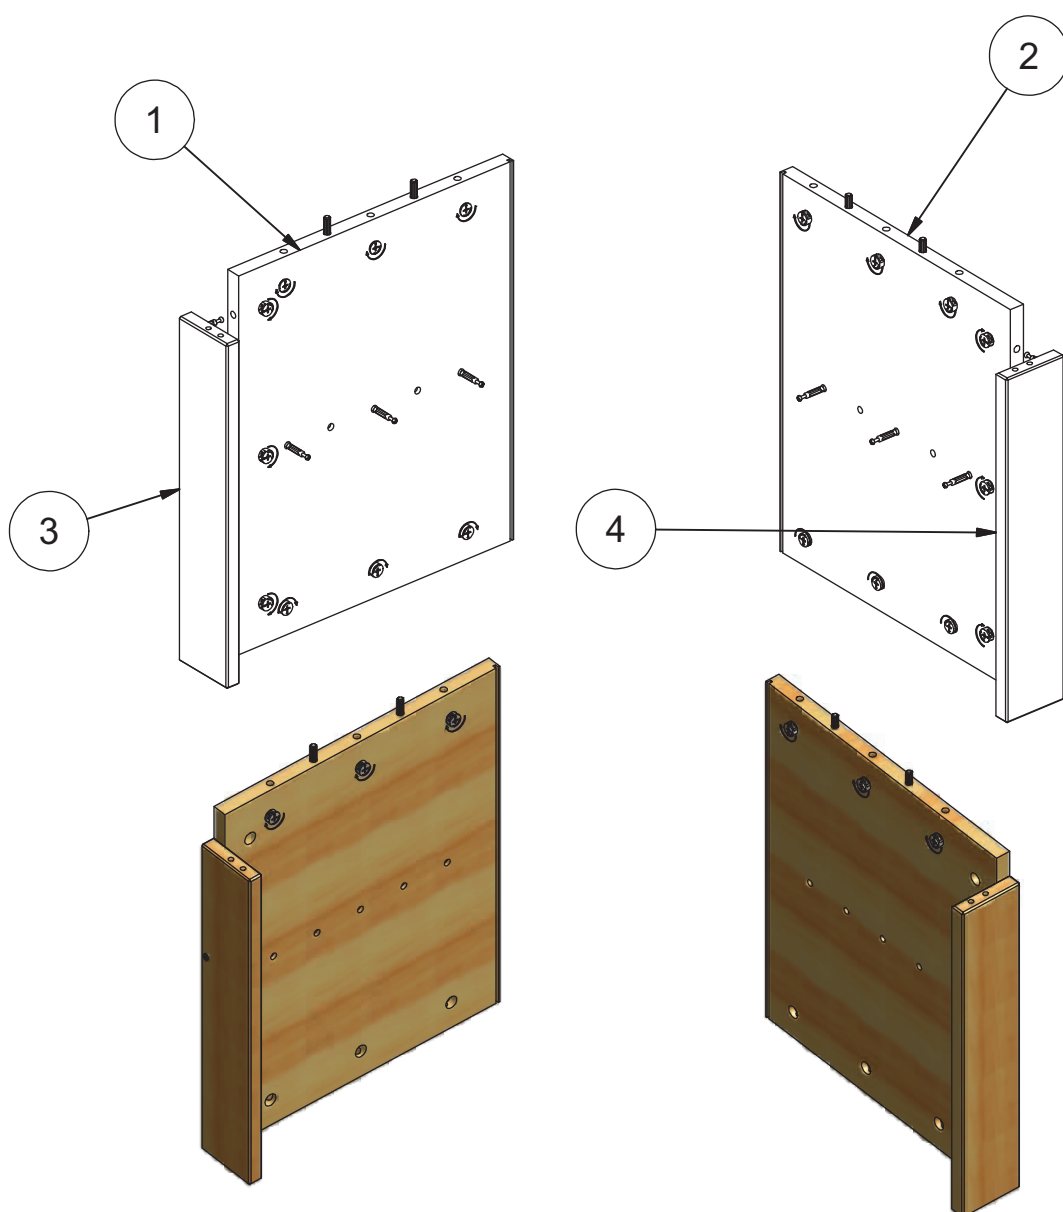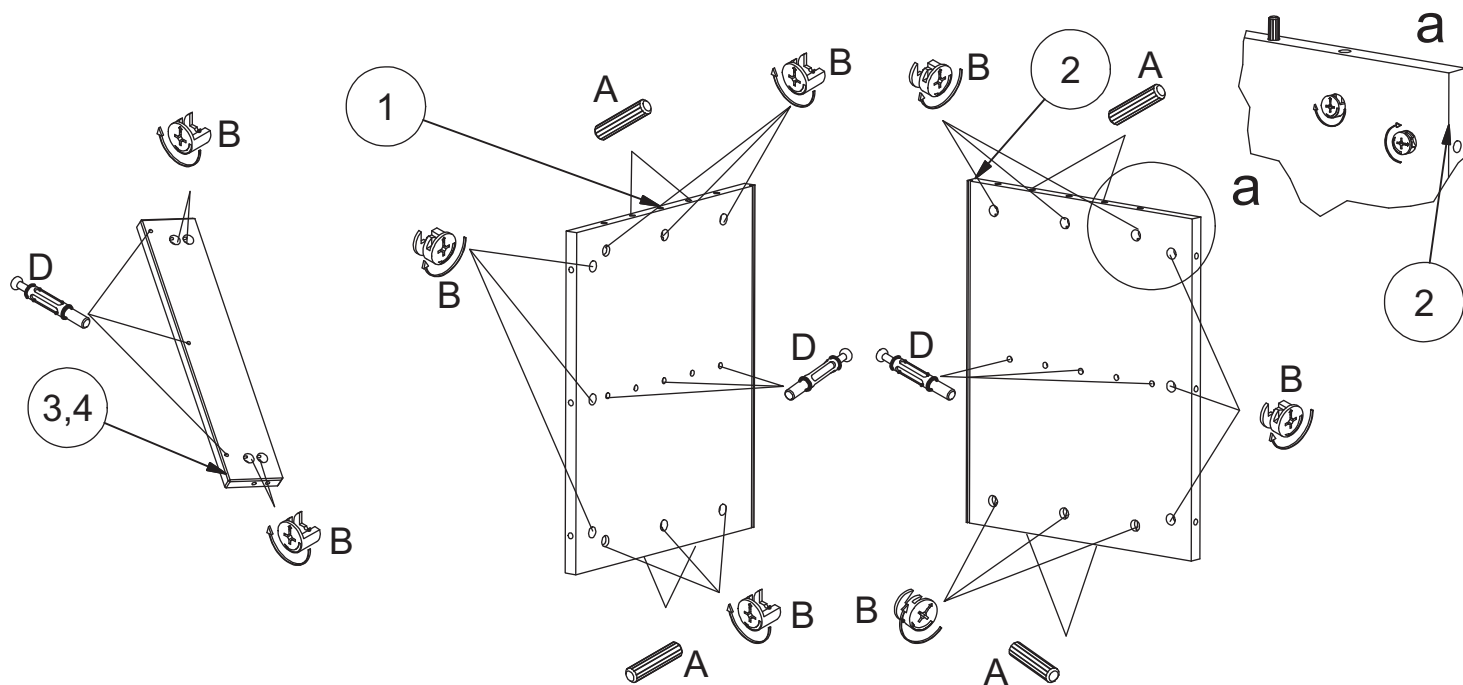





I

A	B	D
		
Ø 8x30 8	26	12

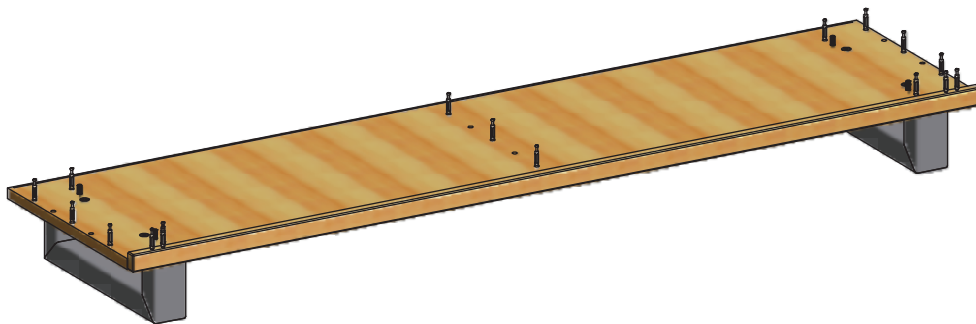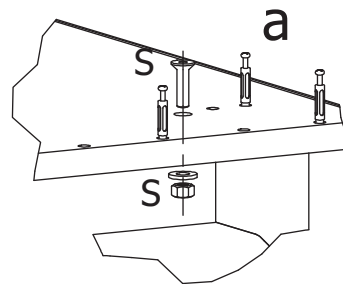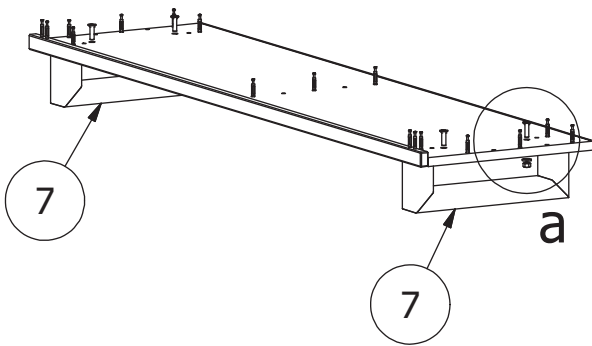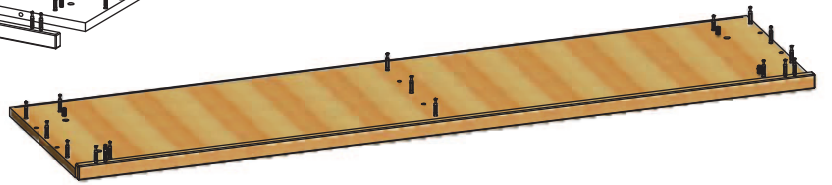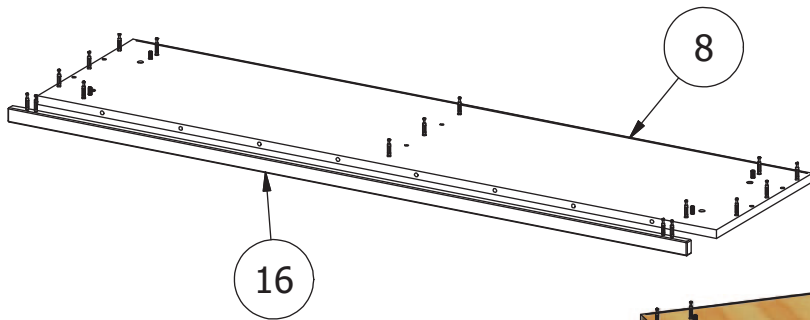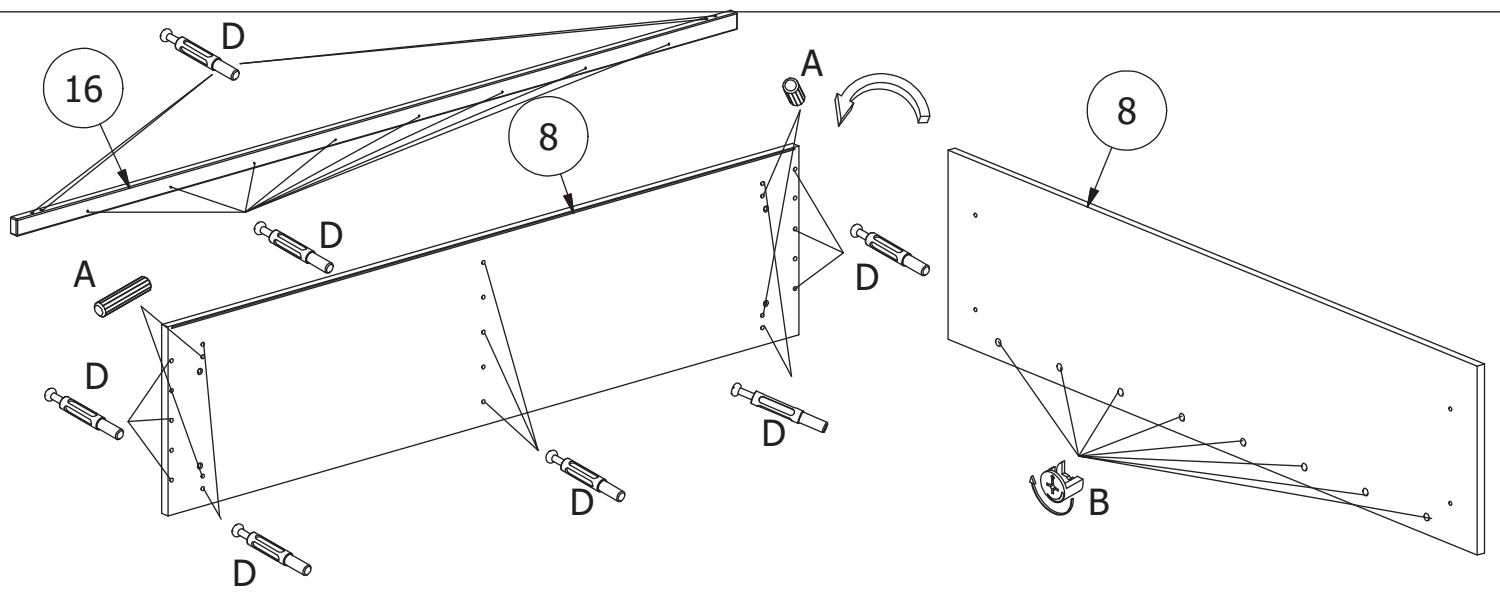


II

A	S	B	D
			
4	4	8	25

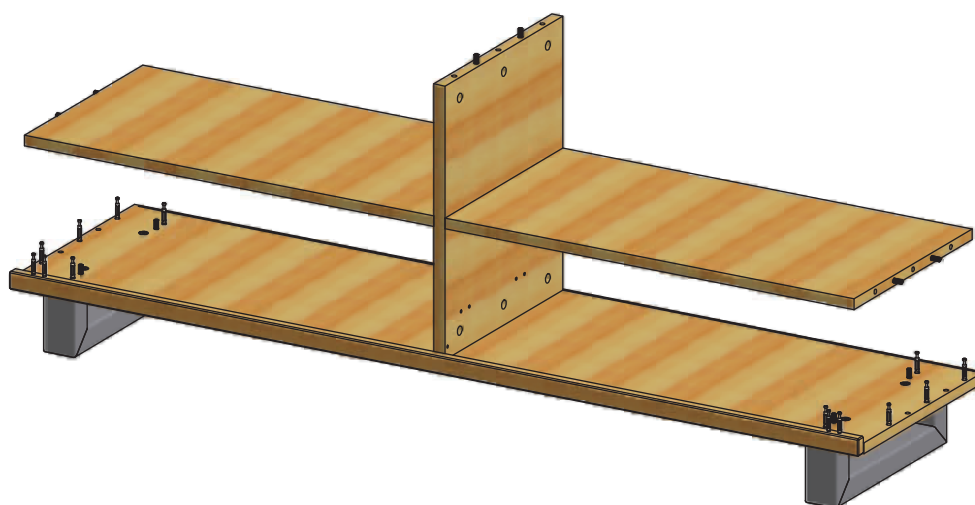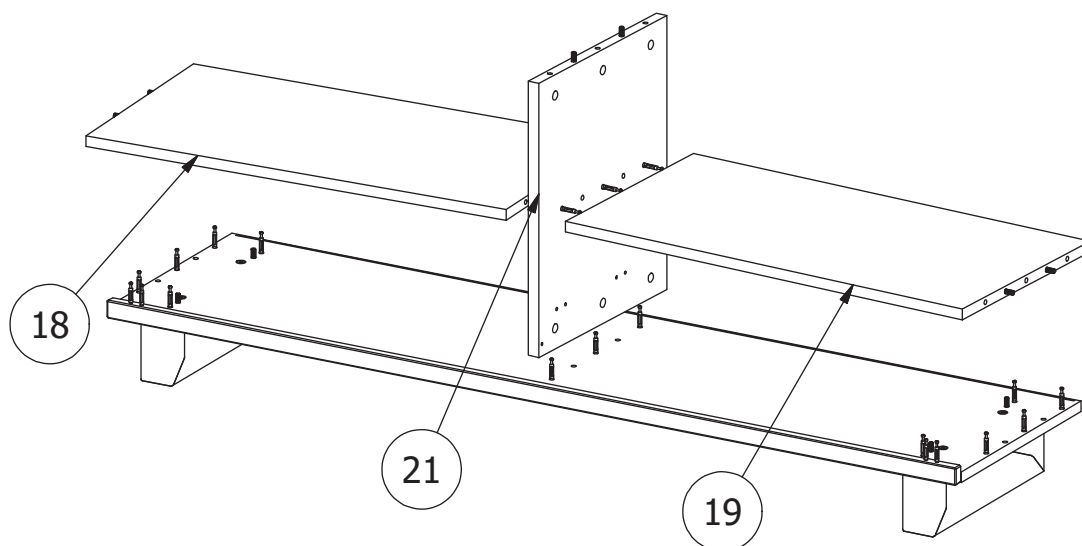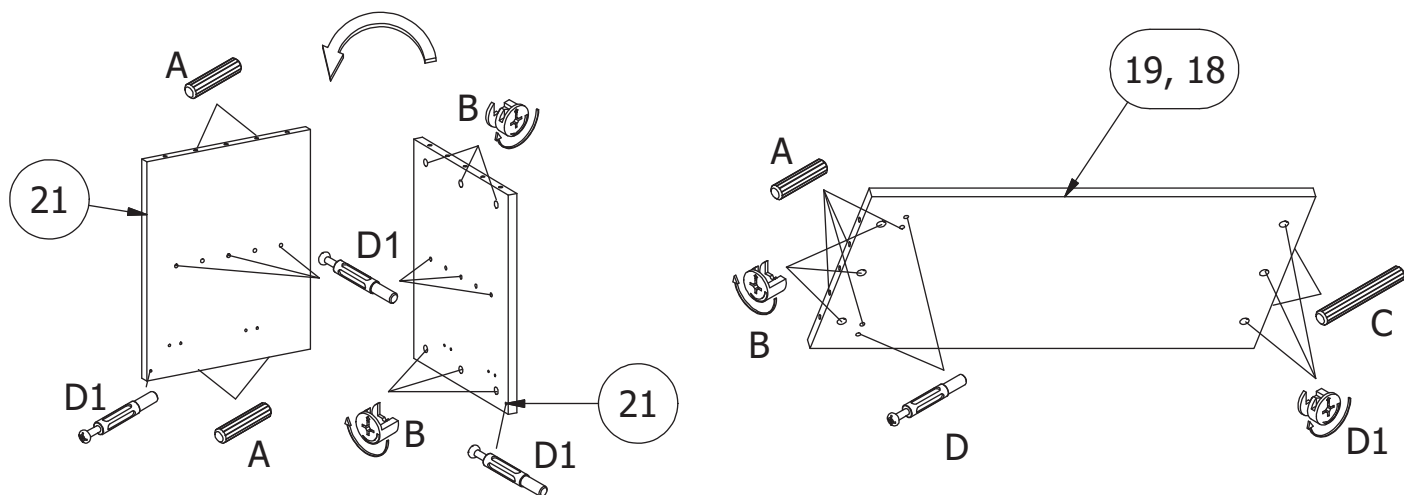


III

C	A	B	D	D1
				
Ø8x50 2	Ø8x30 12	12	4	6/8

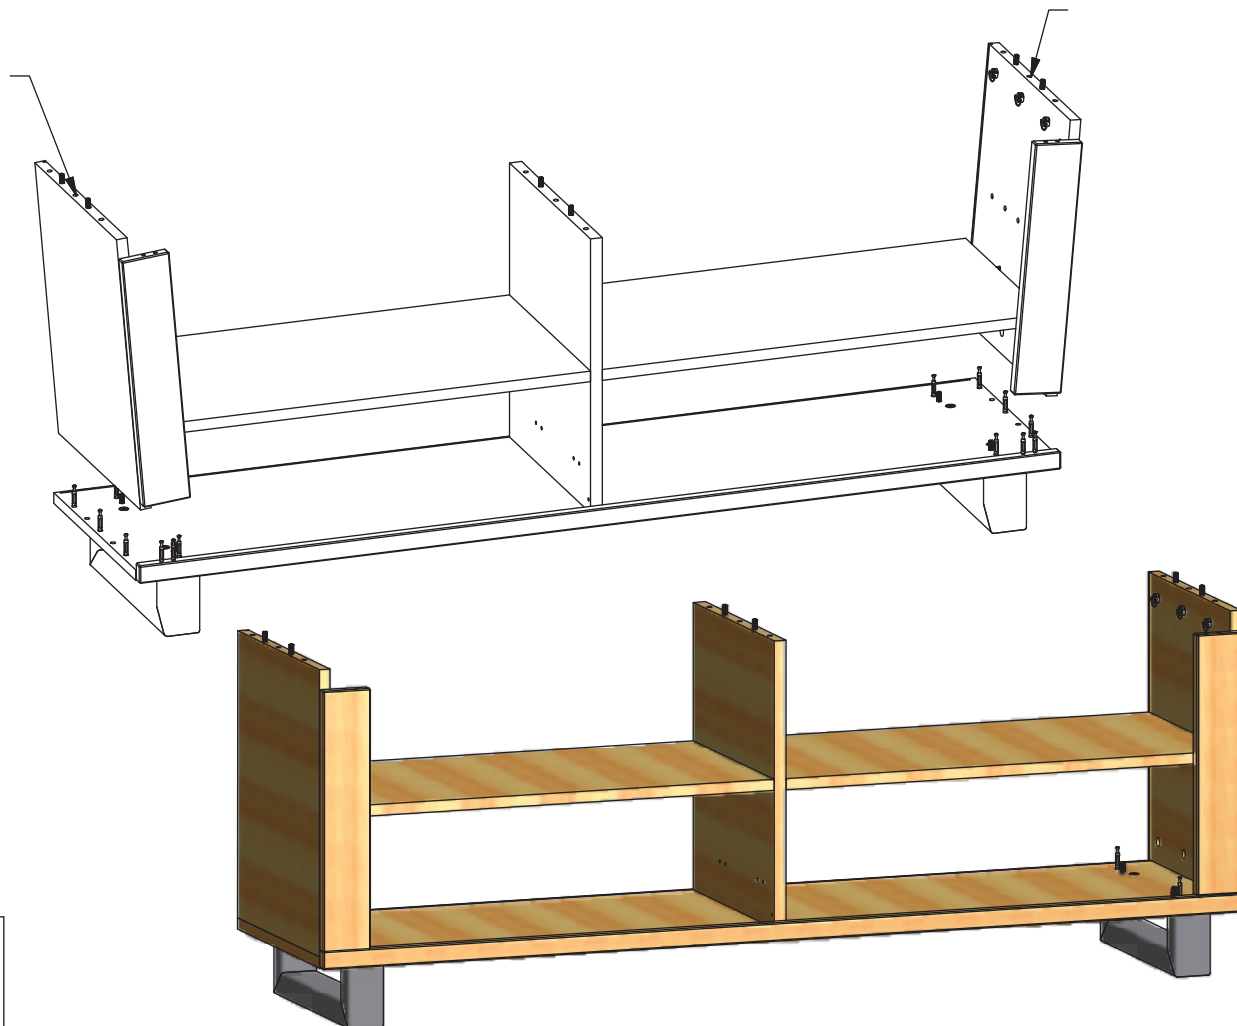


IV



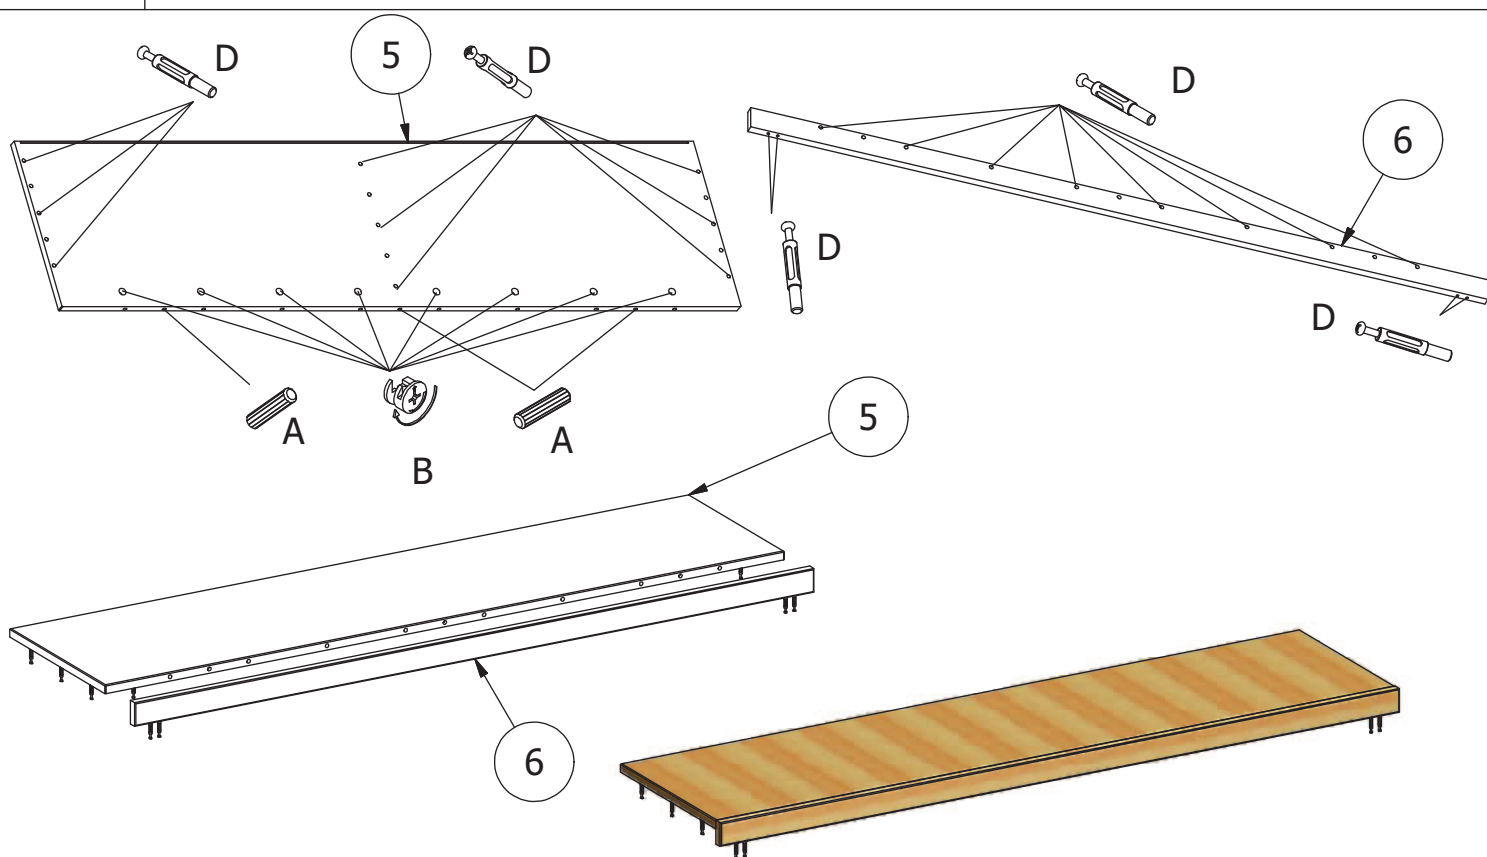


V

B	D	A Ø8x30
		
8	21	3




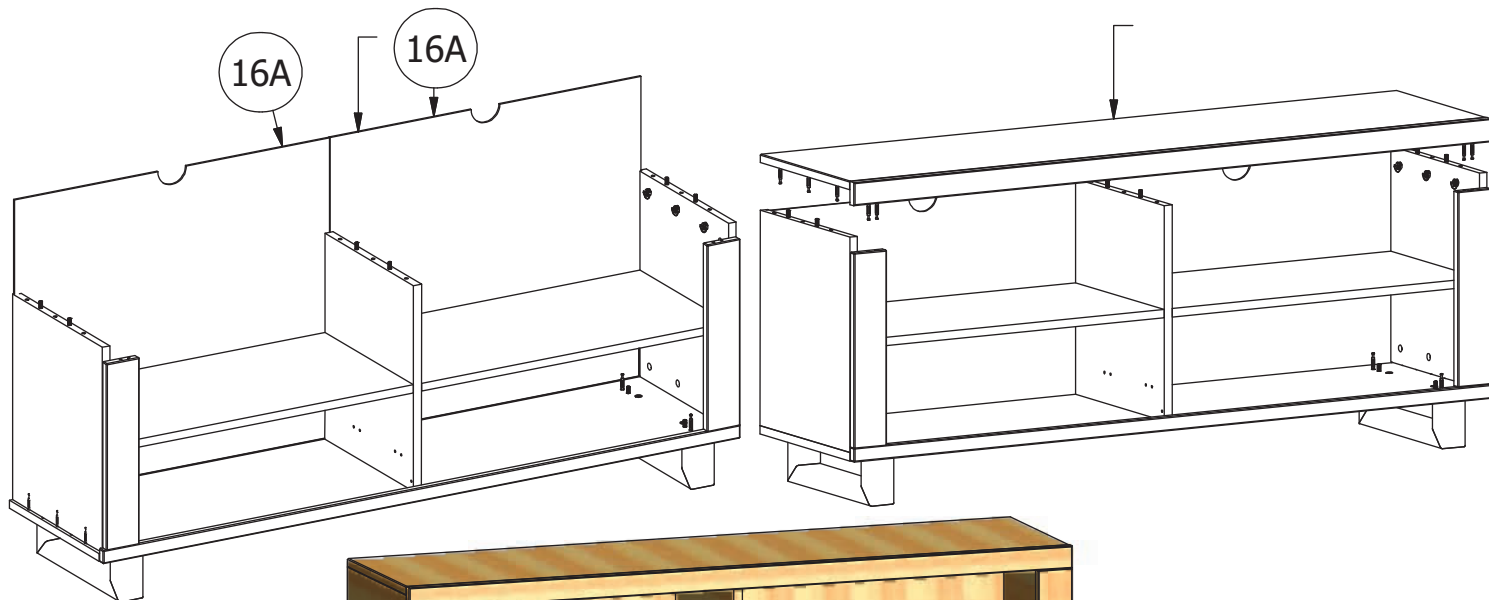


VI

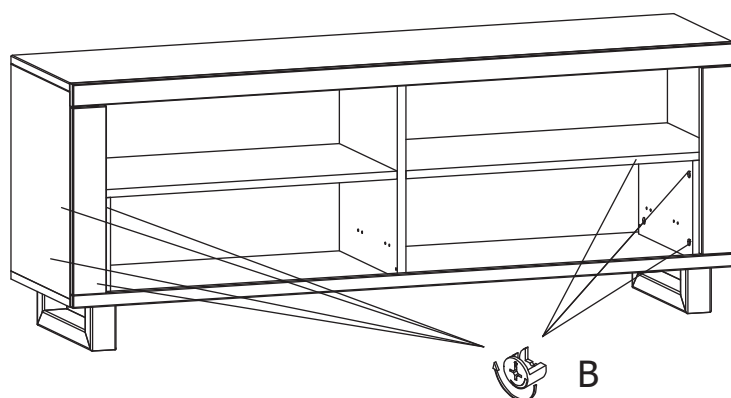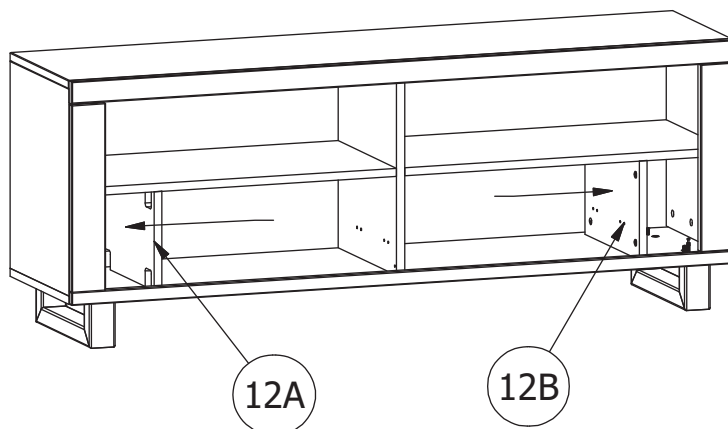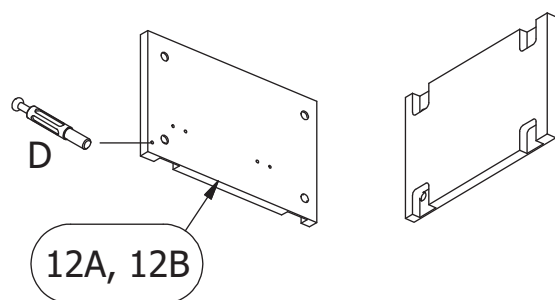

VII





D	B
	
2	8

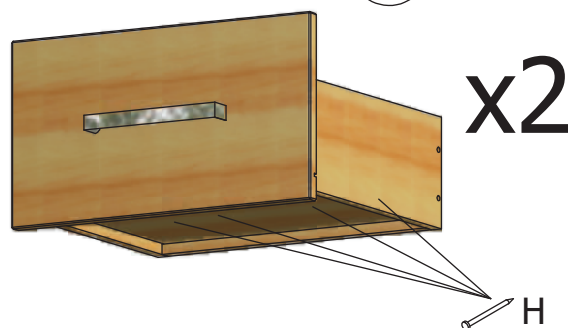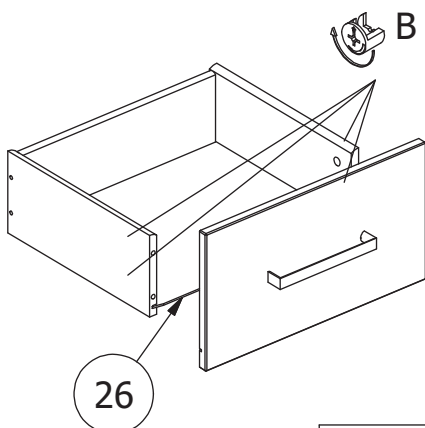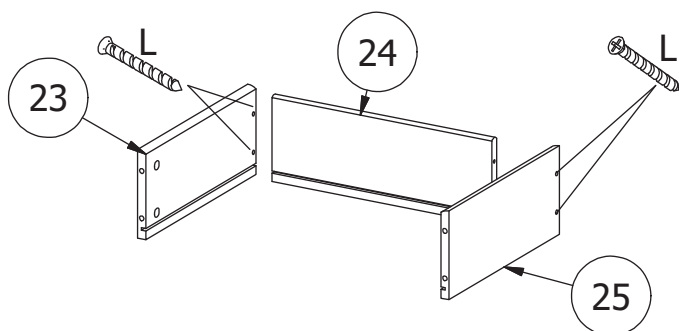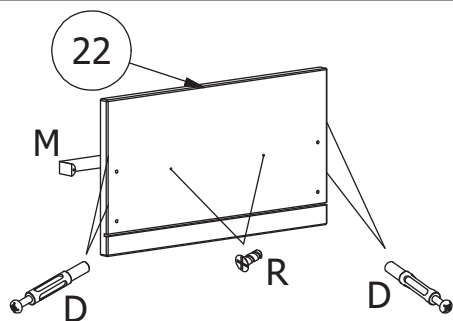

VIII


B	D	L	M	R	H
8	8	8	2	4	12

x2

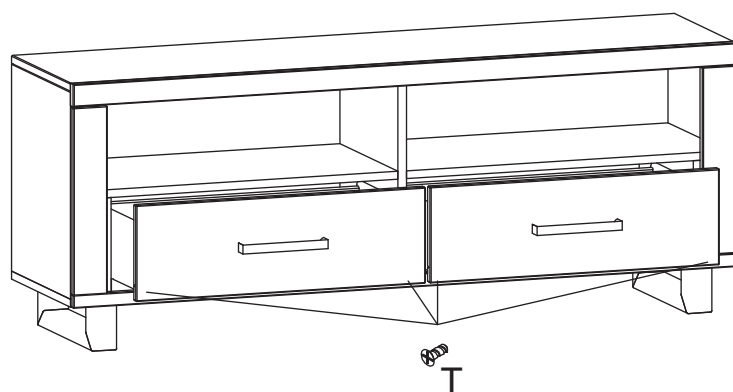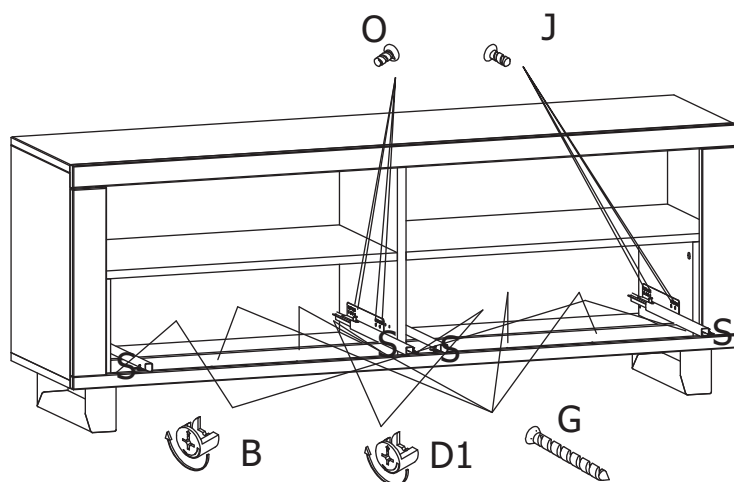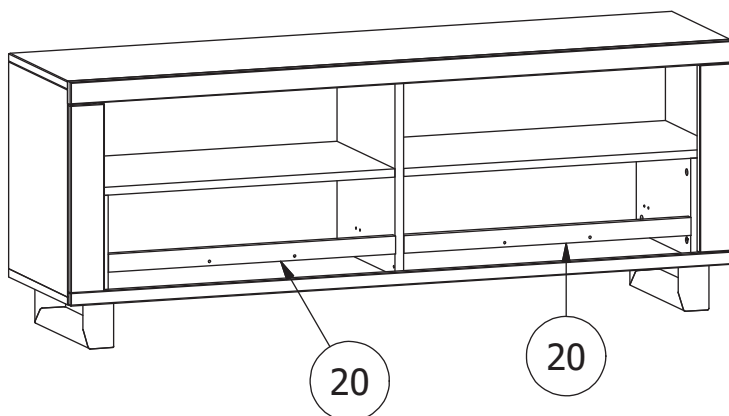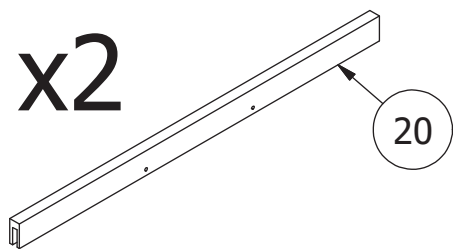


IX

O	D1	S	J	G	B	T
8	2/0	4	8	4	2	4

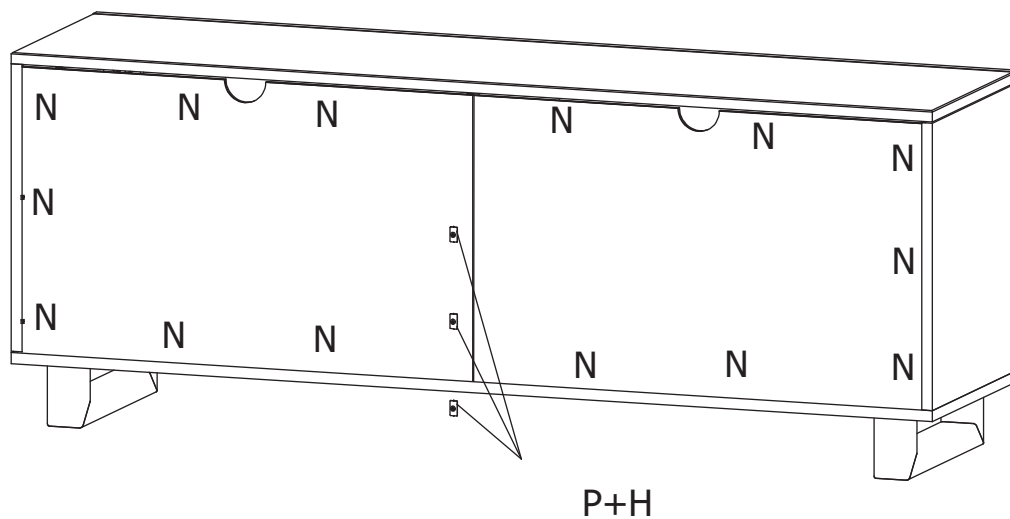

X

N	P	H
		
16	4	4

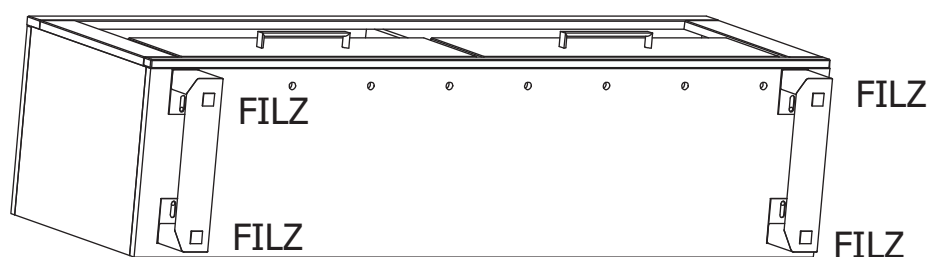

XI

FILZ

