
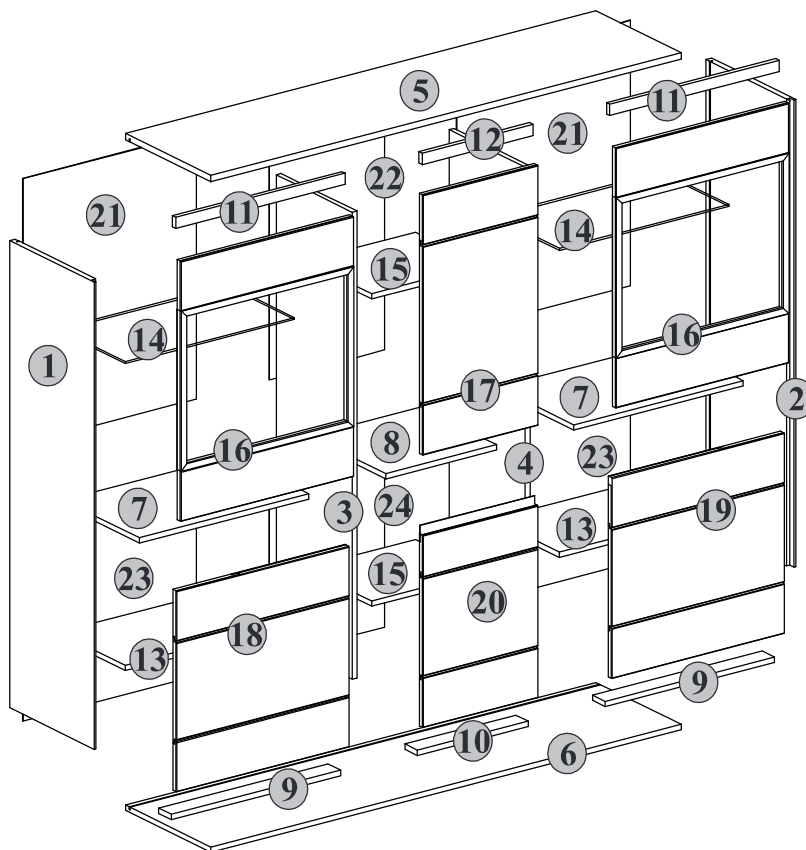
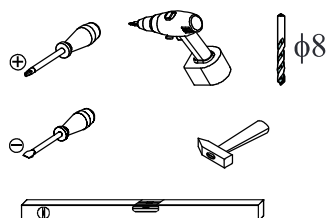
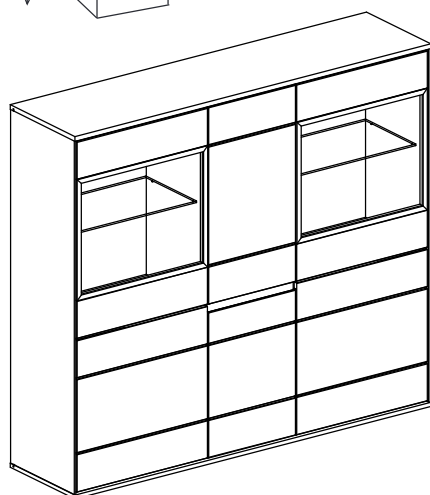






“3995”

versionsnummer: 19.05.2022


Naturholz kann sich werkstoffbedingt verziehen. Durch das Montieren ziehen sich Teile wieder plan.

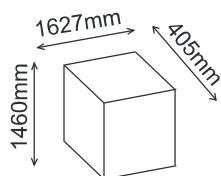

B5

1x  t17	1x  n14
2x  φ3.5x16 mm p1	


B1

24x  l2	37x  φ15 #12.5 r1
37x  s2	6x  r10
22x  r16	3x  r14


B2










6x  k19	12x  φ3.5x35 mm p80
24x  φ8x32 mm f1	6x  φ4x30 mm p42
1x  z1	6x  φ8x50 mm f6

B3







16x  φ5x17 mm d1	8x  φ5x17 mm d3
24x  φ3.5x16 mm p1	18x  φ3.5x20 mm p4
18x  l9	24x  φ6.3x13 mm e3

B4

12x  b1
12x  a2







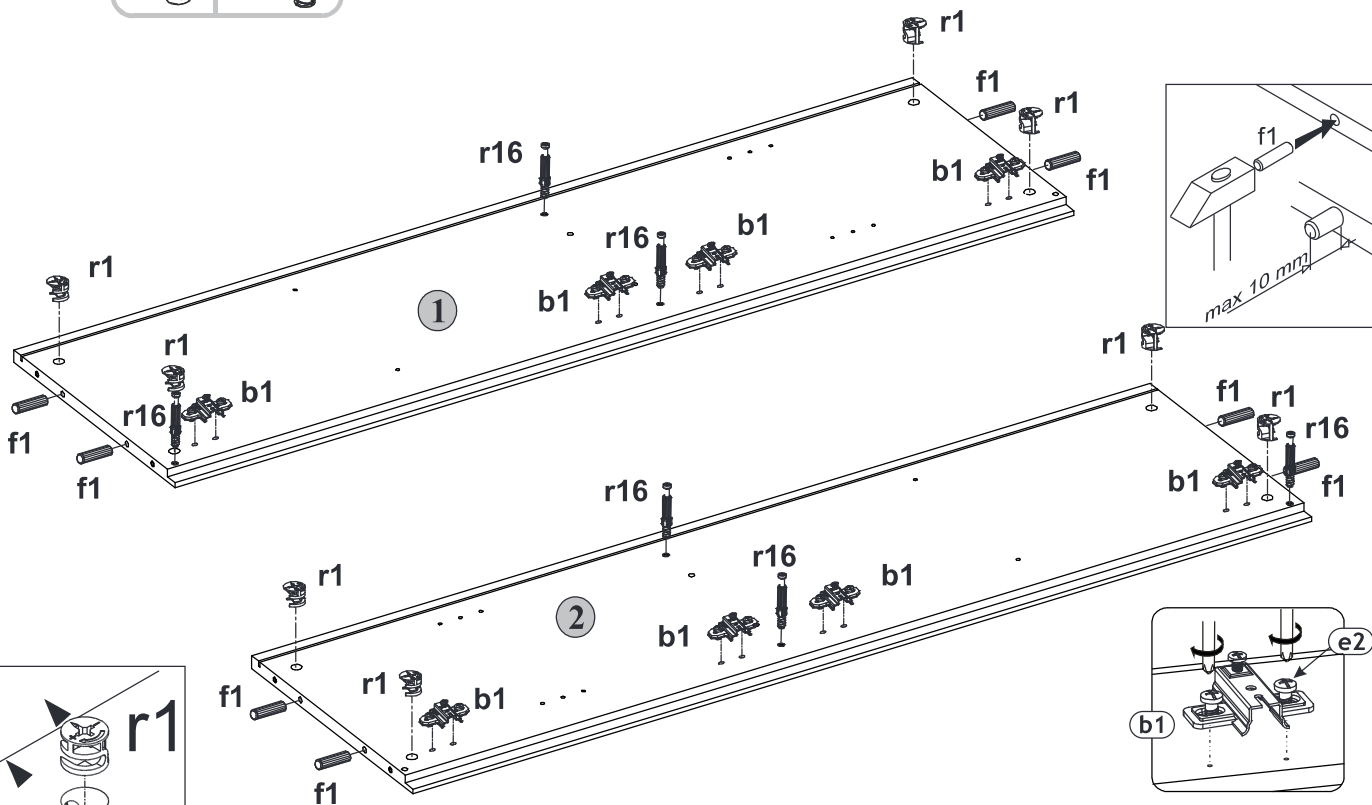





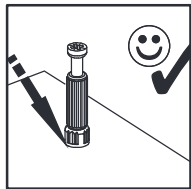
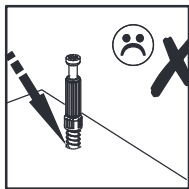
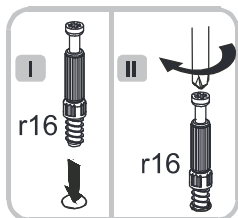


r16

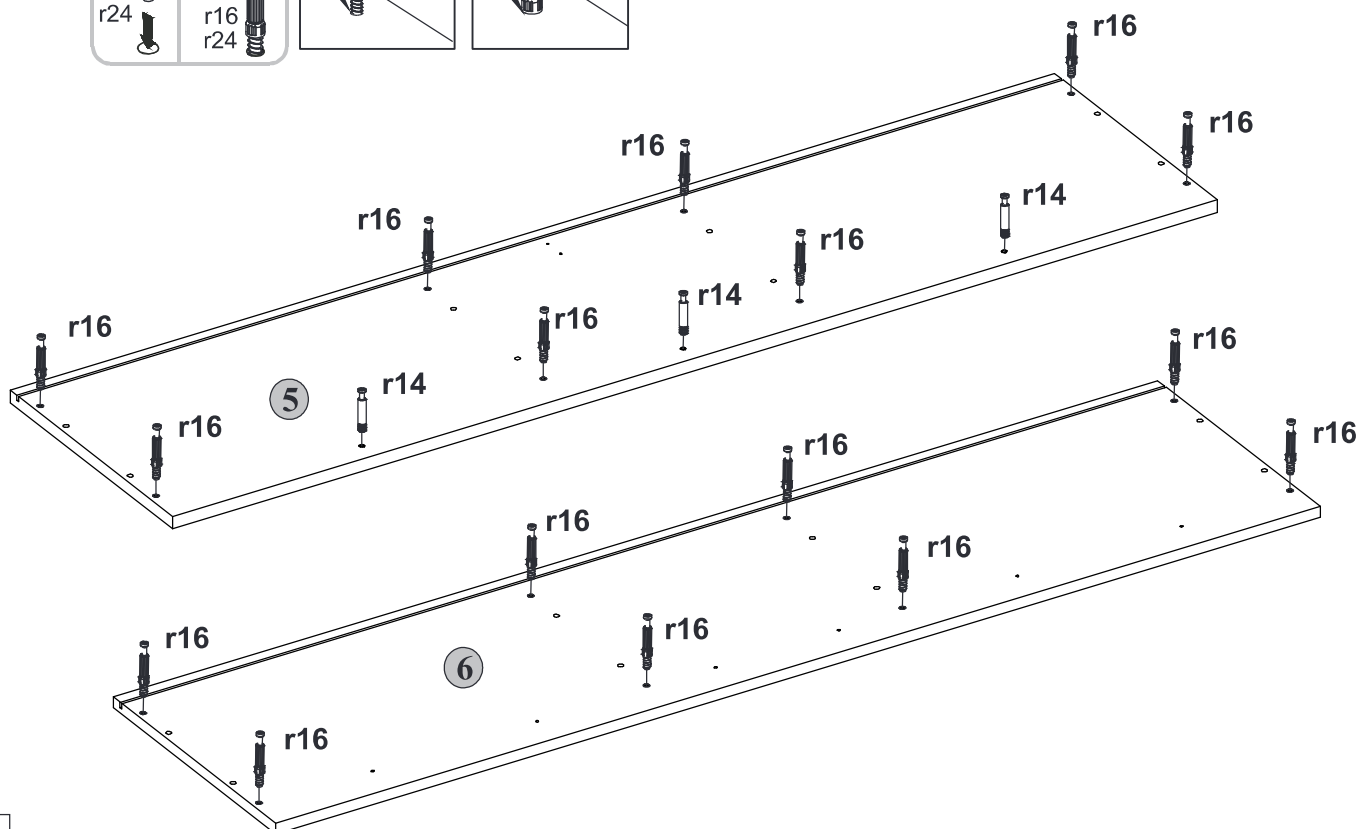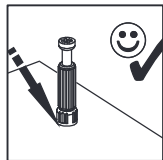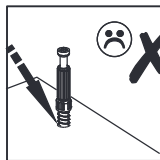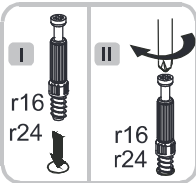

2

3

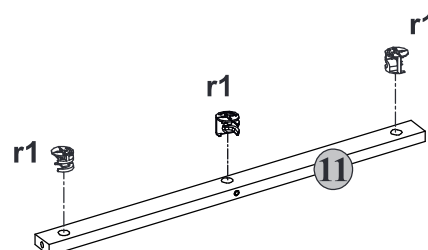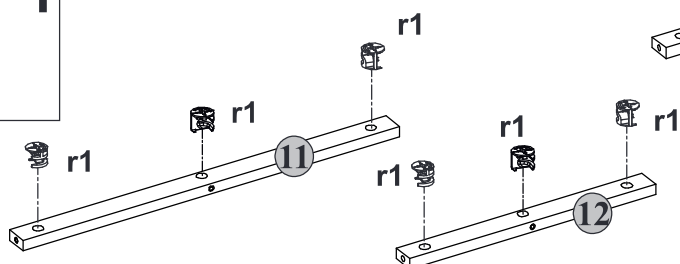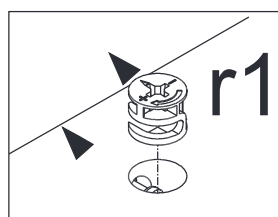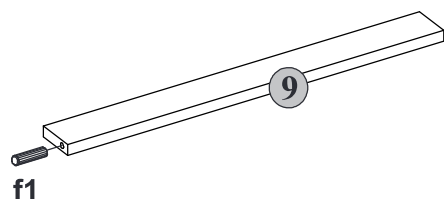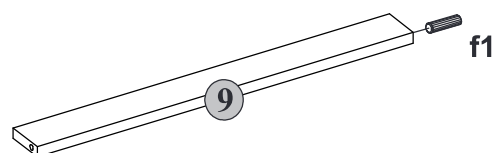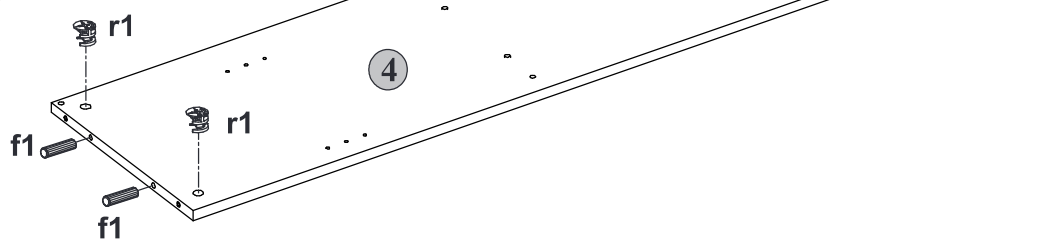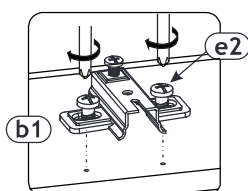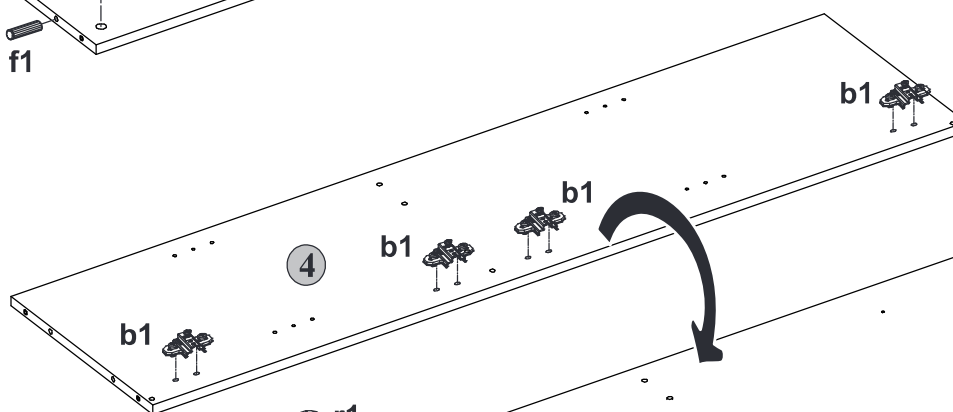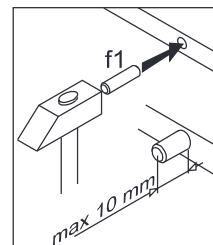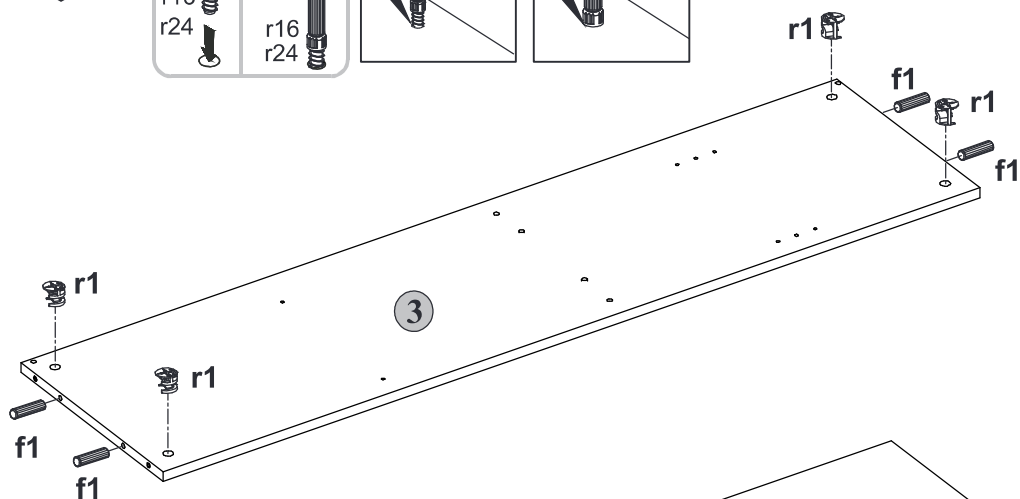

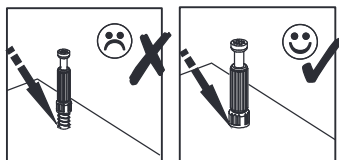
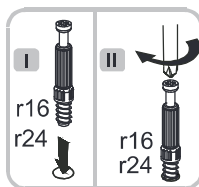


3



4

12x
a2

24x
p1
φ3.5x16 mm

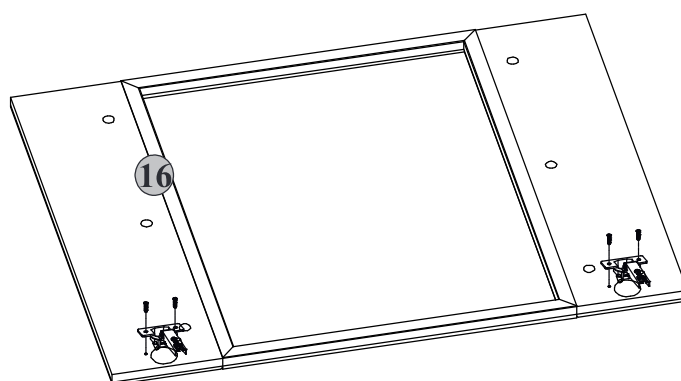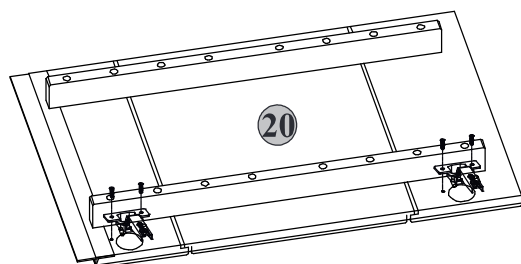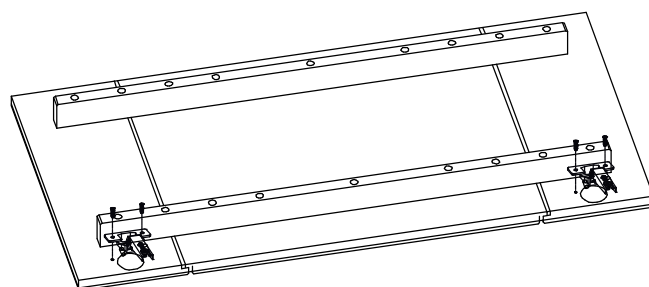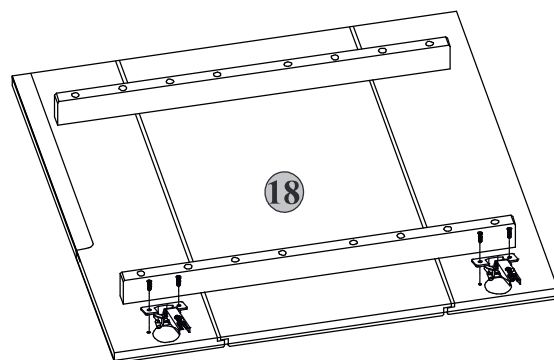

x2

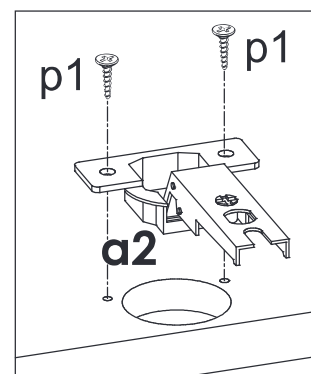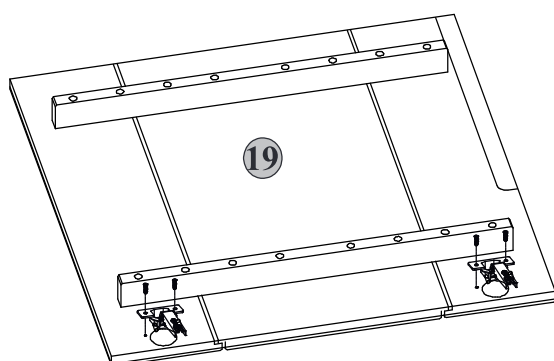

4

5

4x





f1


12x



r1

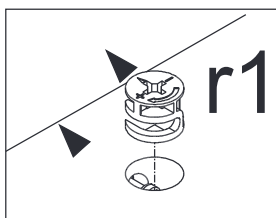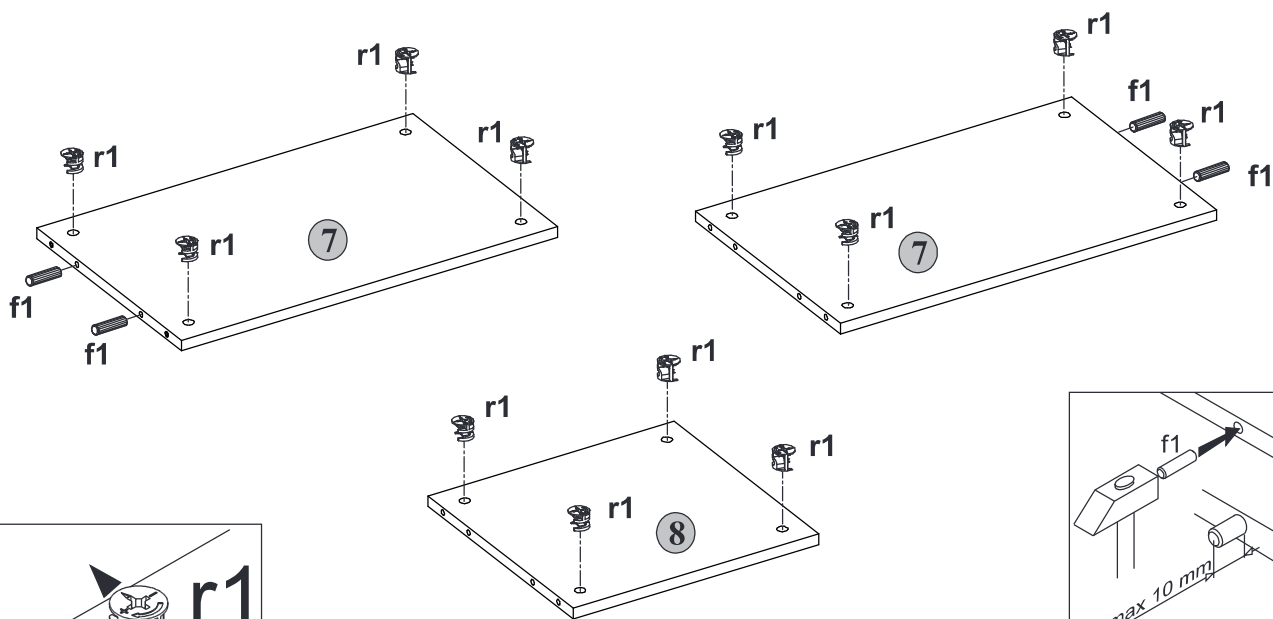



6

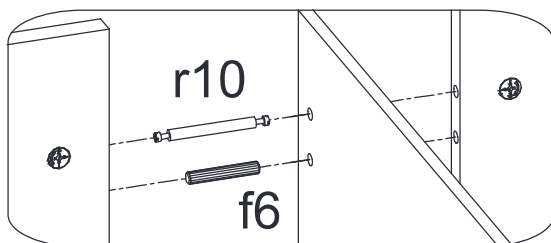

6x








6x

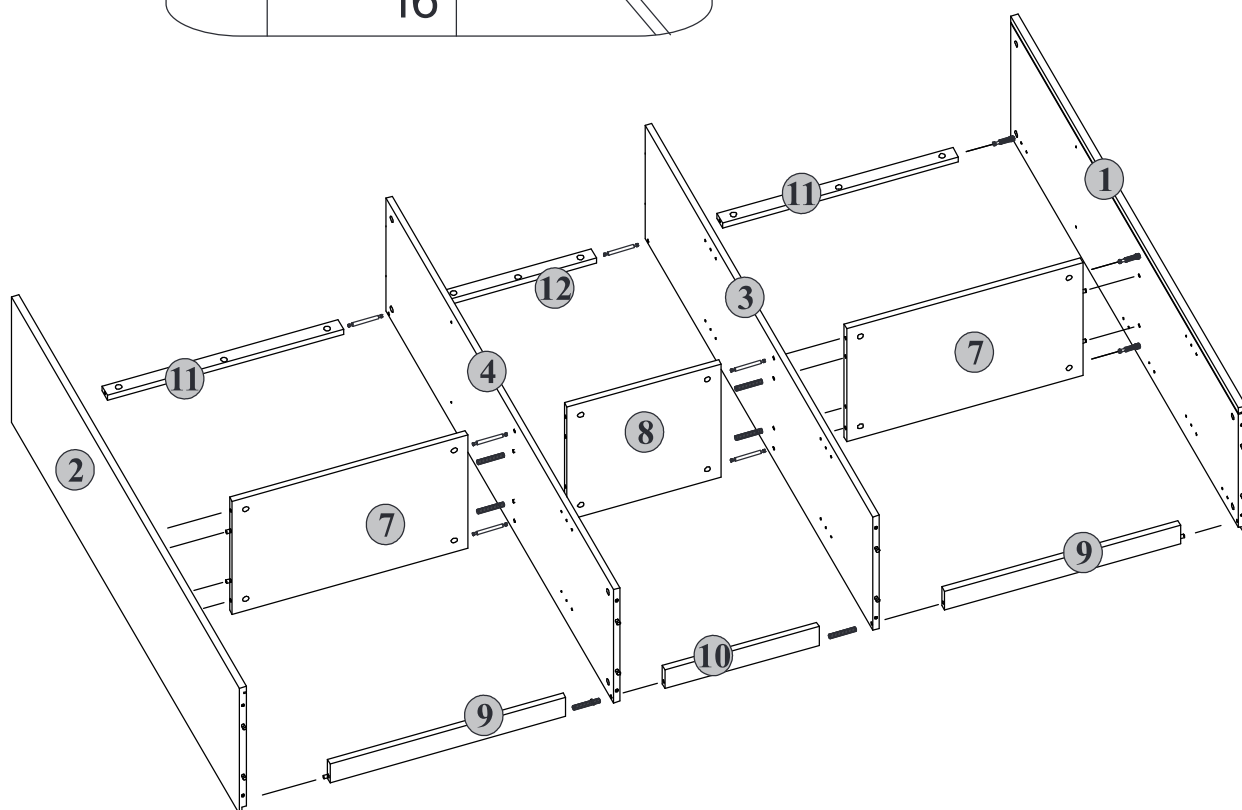



5

7

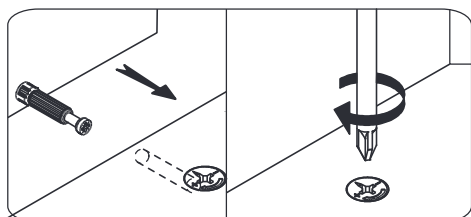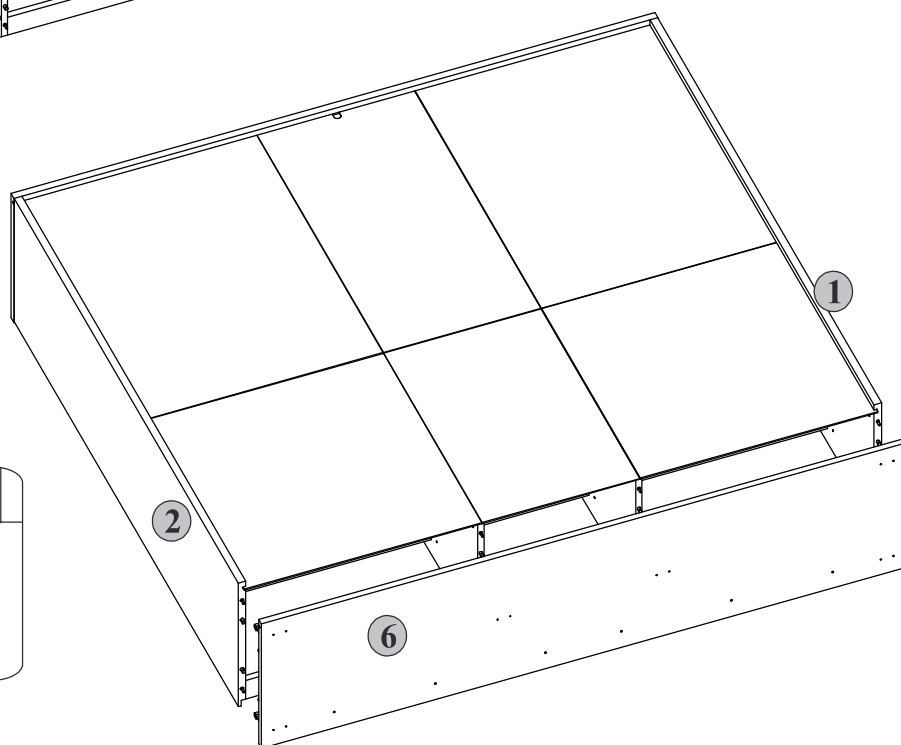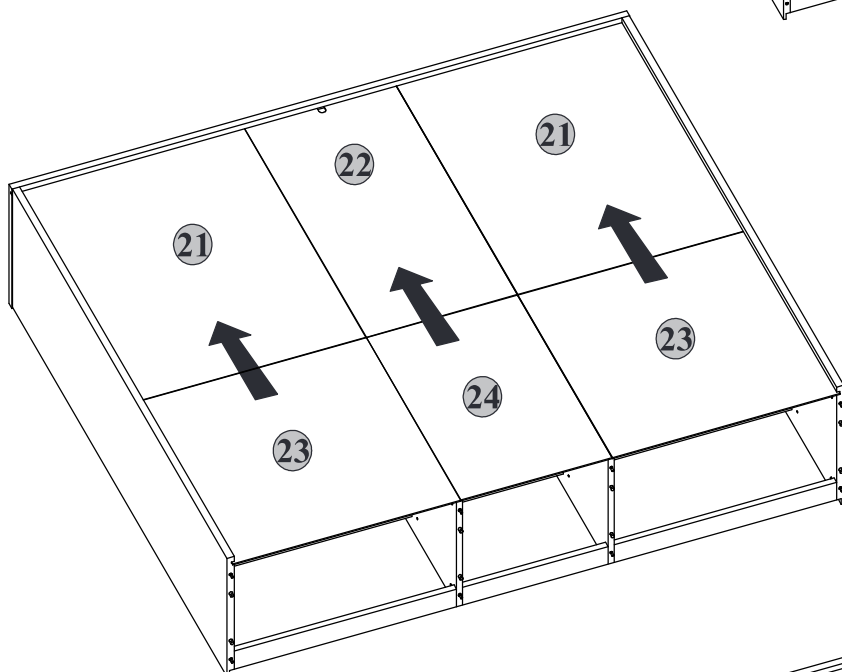
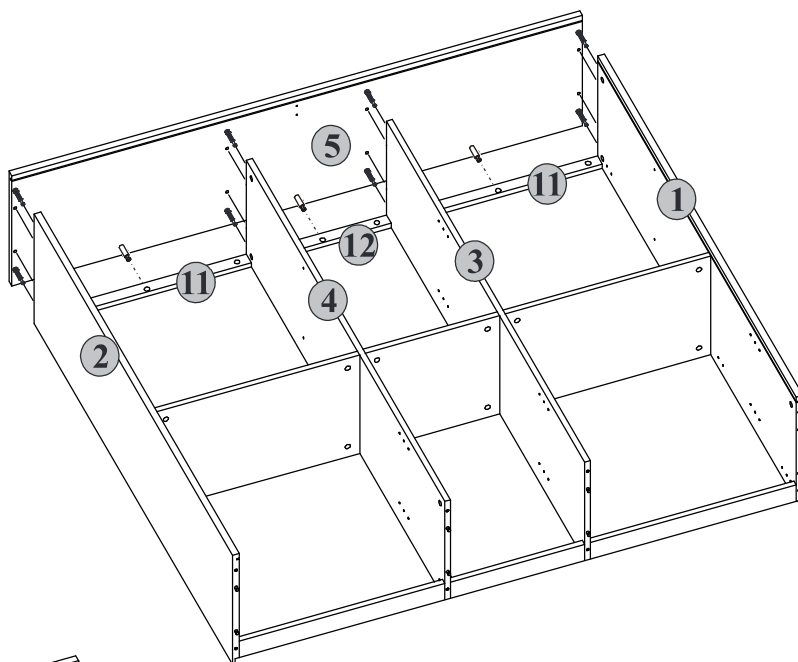
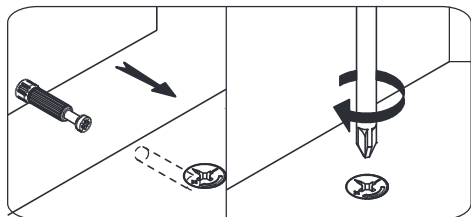


6

8

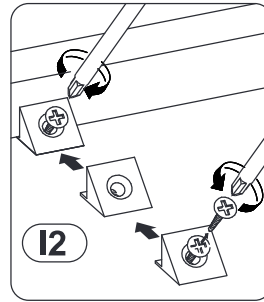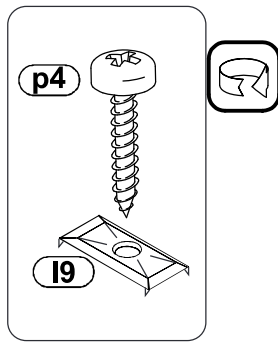







6x  k19	24x  I2
6x  φ4x30 mm p42	18x  3,5x20 p4
12x  φ3,5x35 mm p80	18x  I9

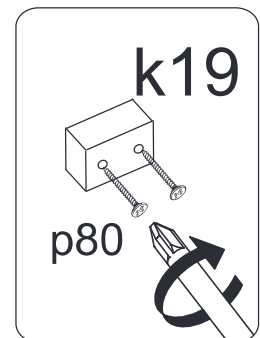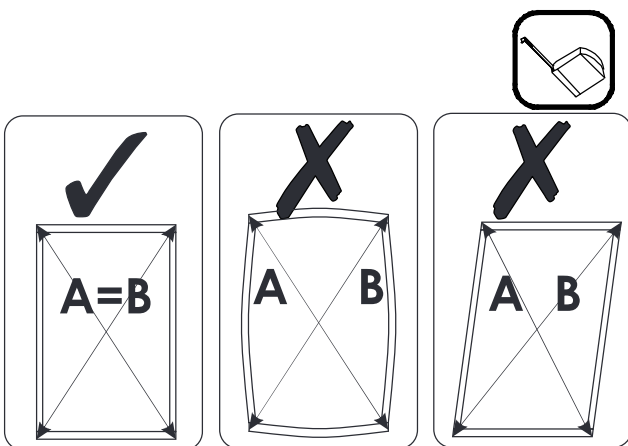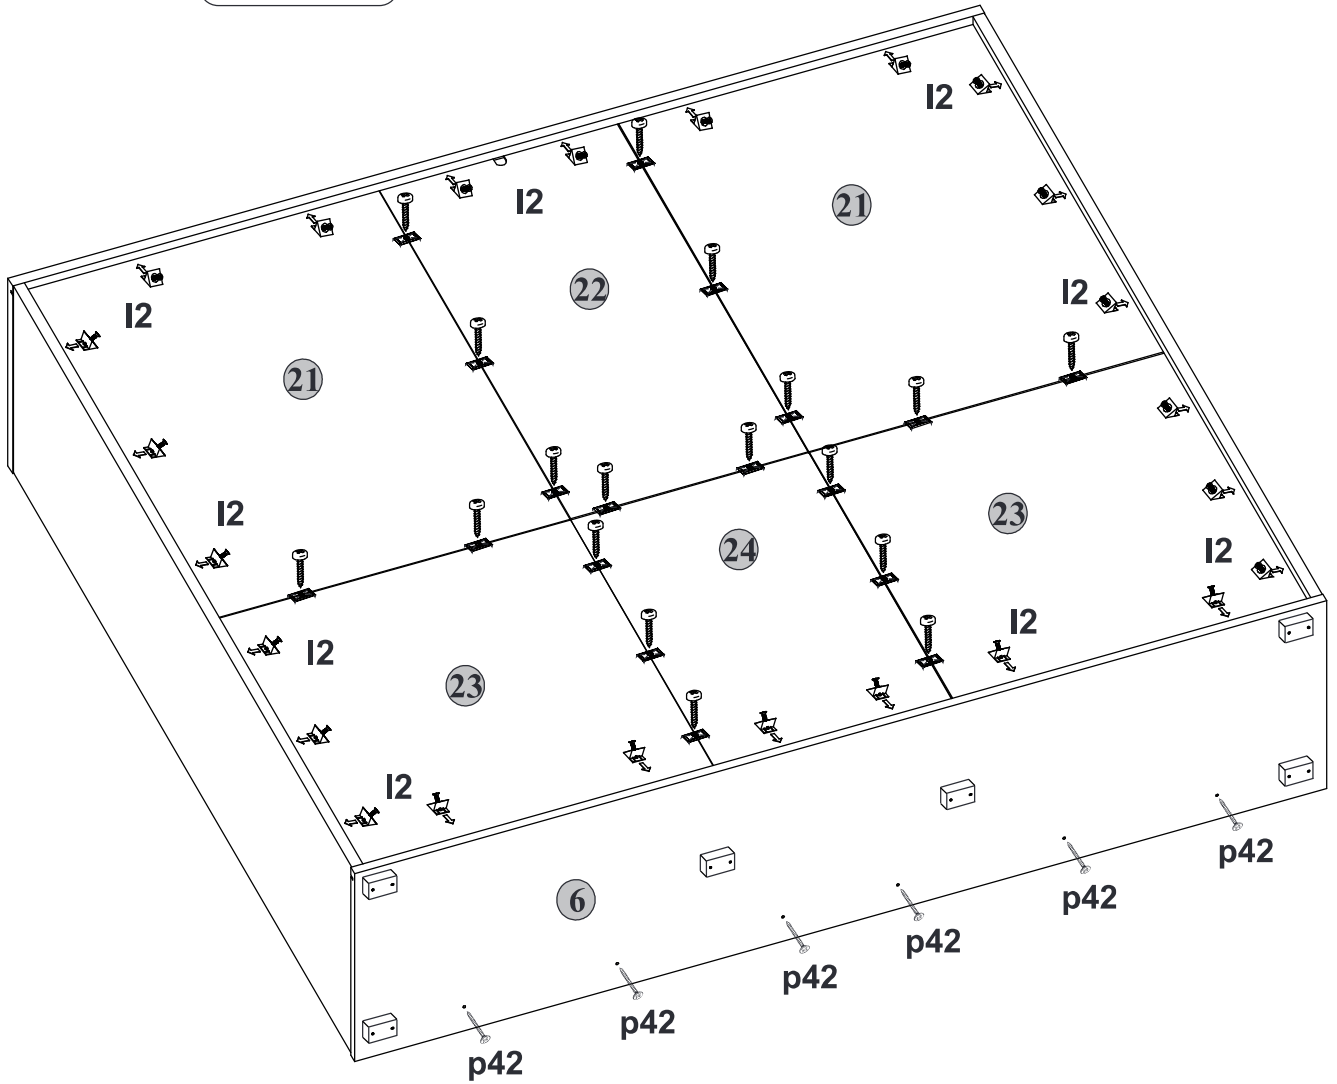

7

9

37x s2	8x d3 ø5x17 mm	16x d1 ø5x17 mm	1x t17	1x n14	2x p1 ø3.5x16 mm
---------------	--------------------------	---------------------------	---------------	---------------	----------------------------

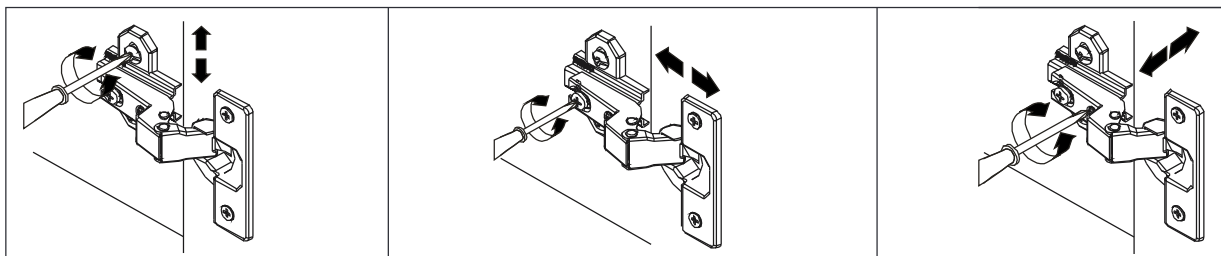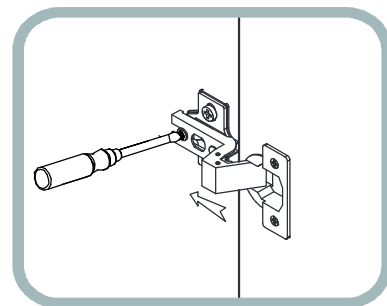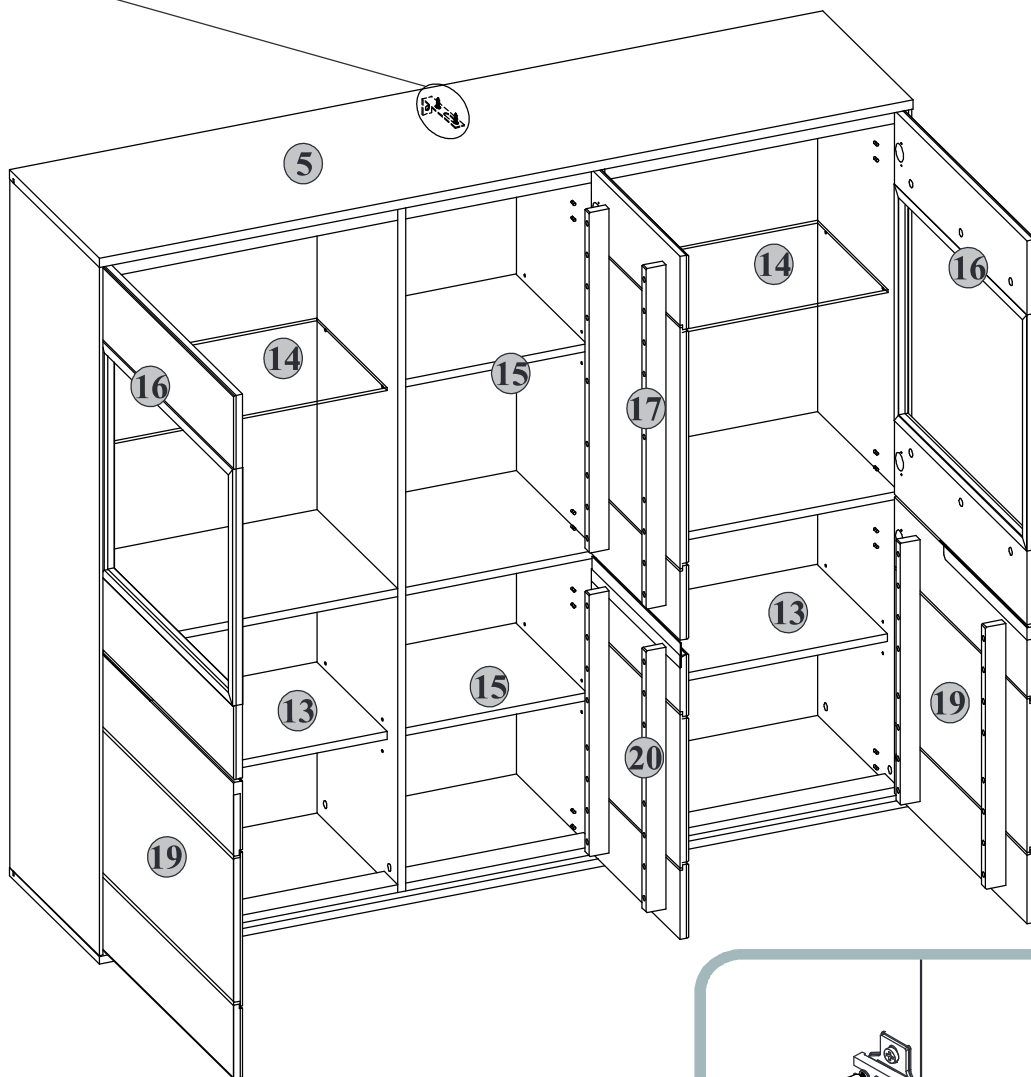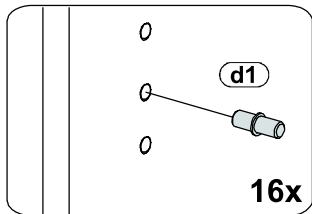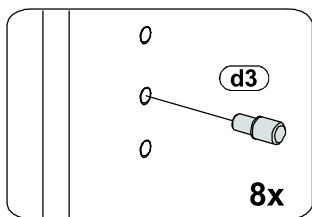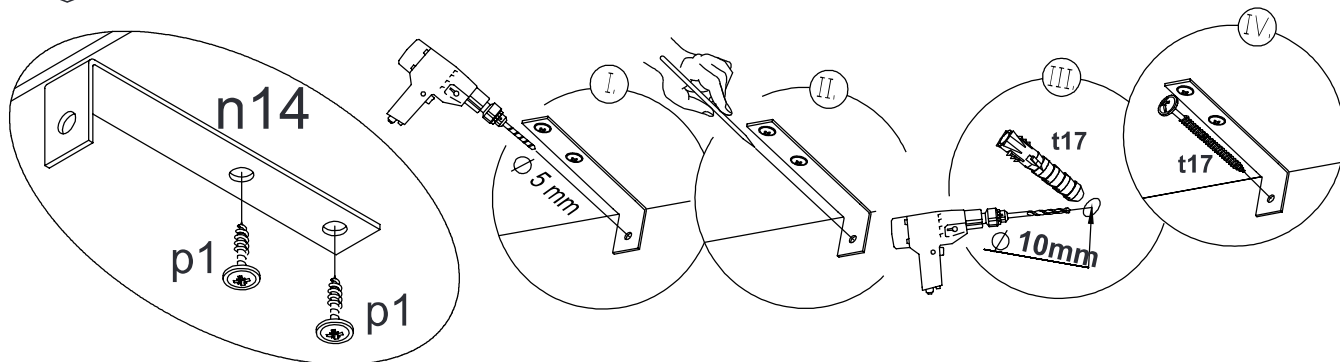

8