

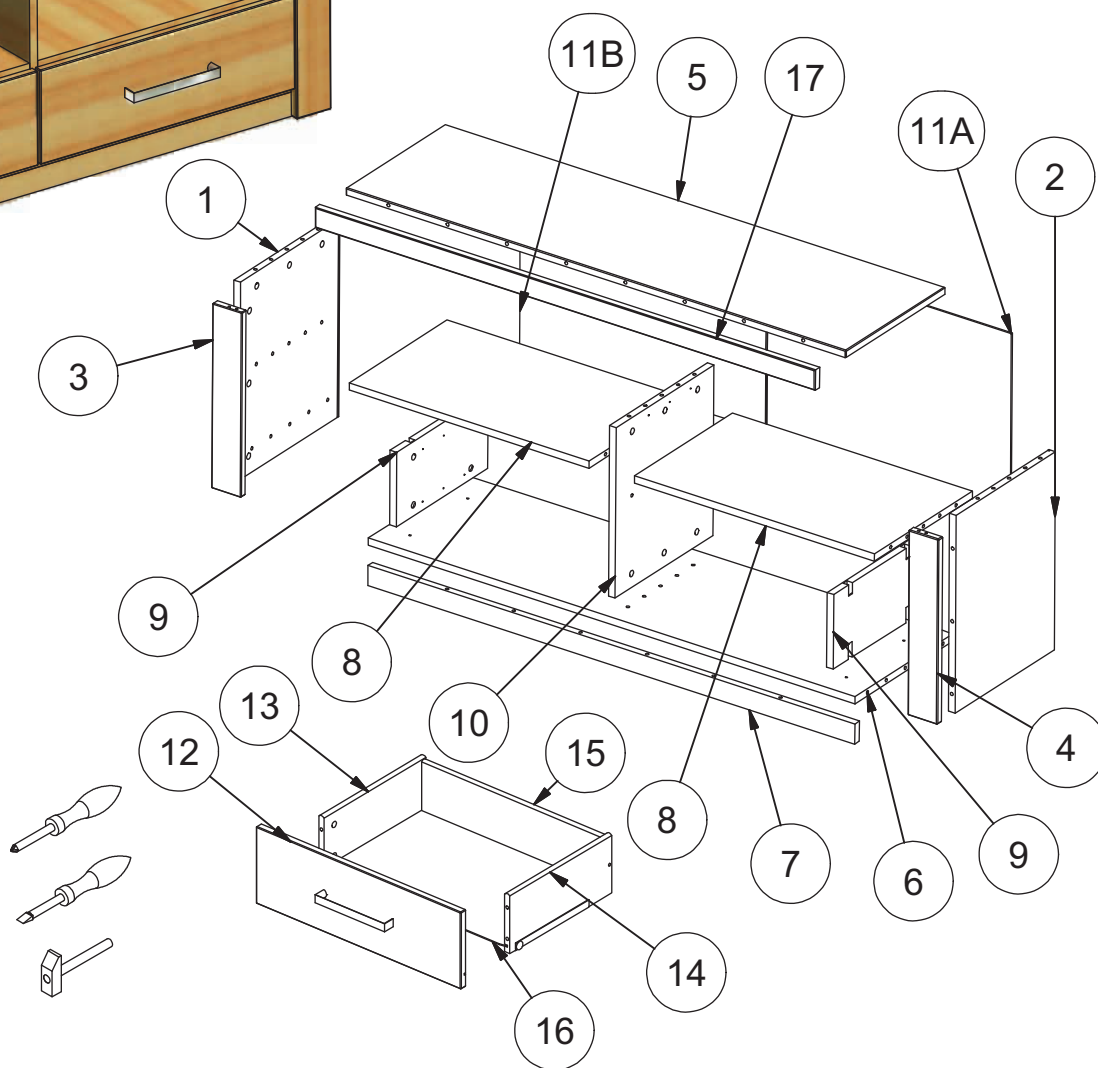


"2337"

versionsnummer:

06.2015


Naturholz kann sich werkstoffbedingt verziehen. Durch das Montieren ziehen sich Teile wieder plan.

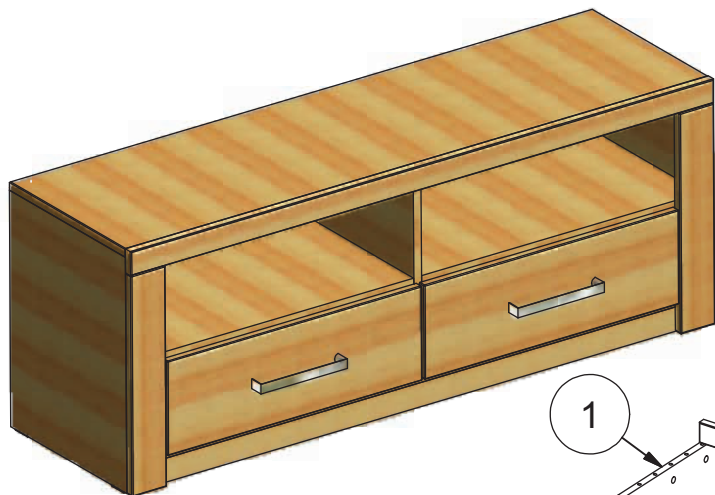


x2



60'

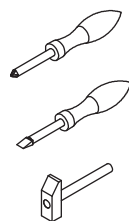


A Ø 8x30 24	B 64	S Ø 8x50 2	D 64	D1 6/6		G M 4x30 2	H 80	
	J Ø 5x13 20		R M 4x22 4	M 2	L Ø 7x50 4		O 4	N 4

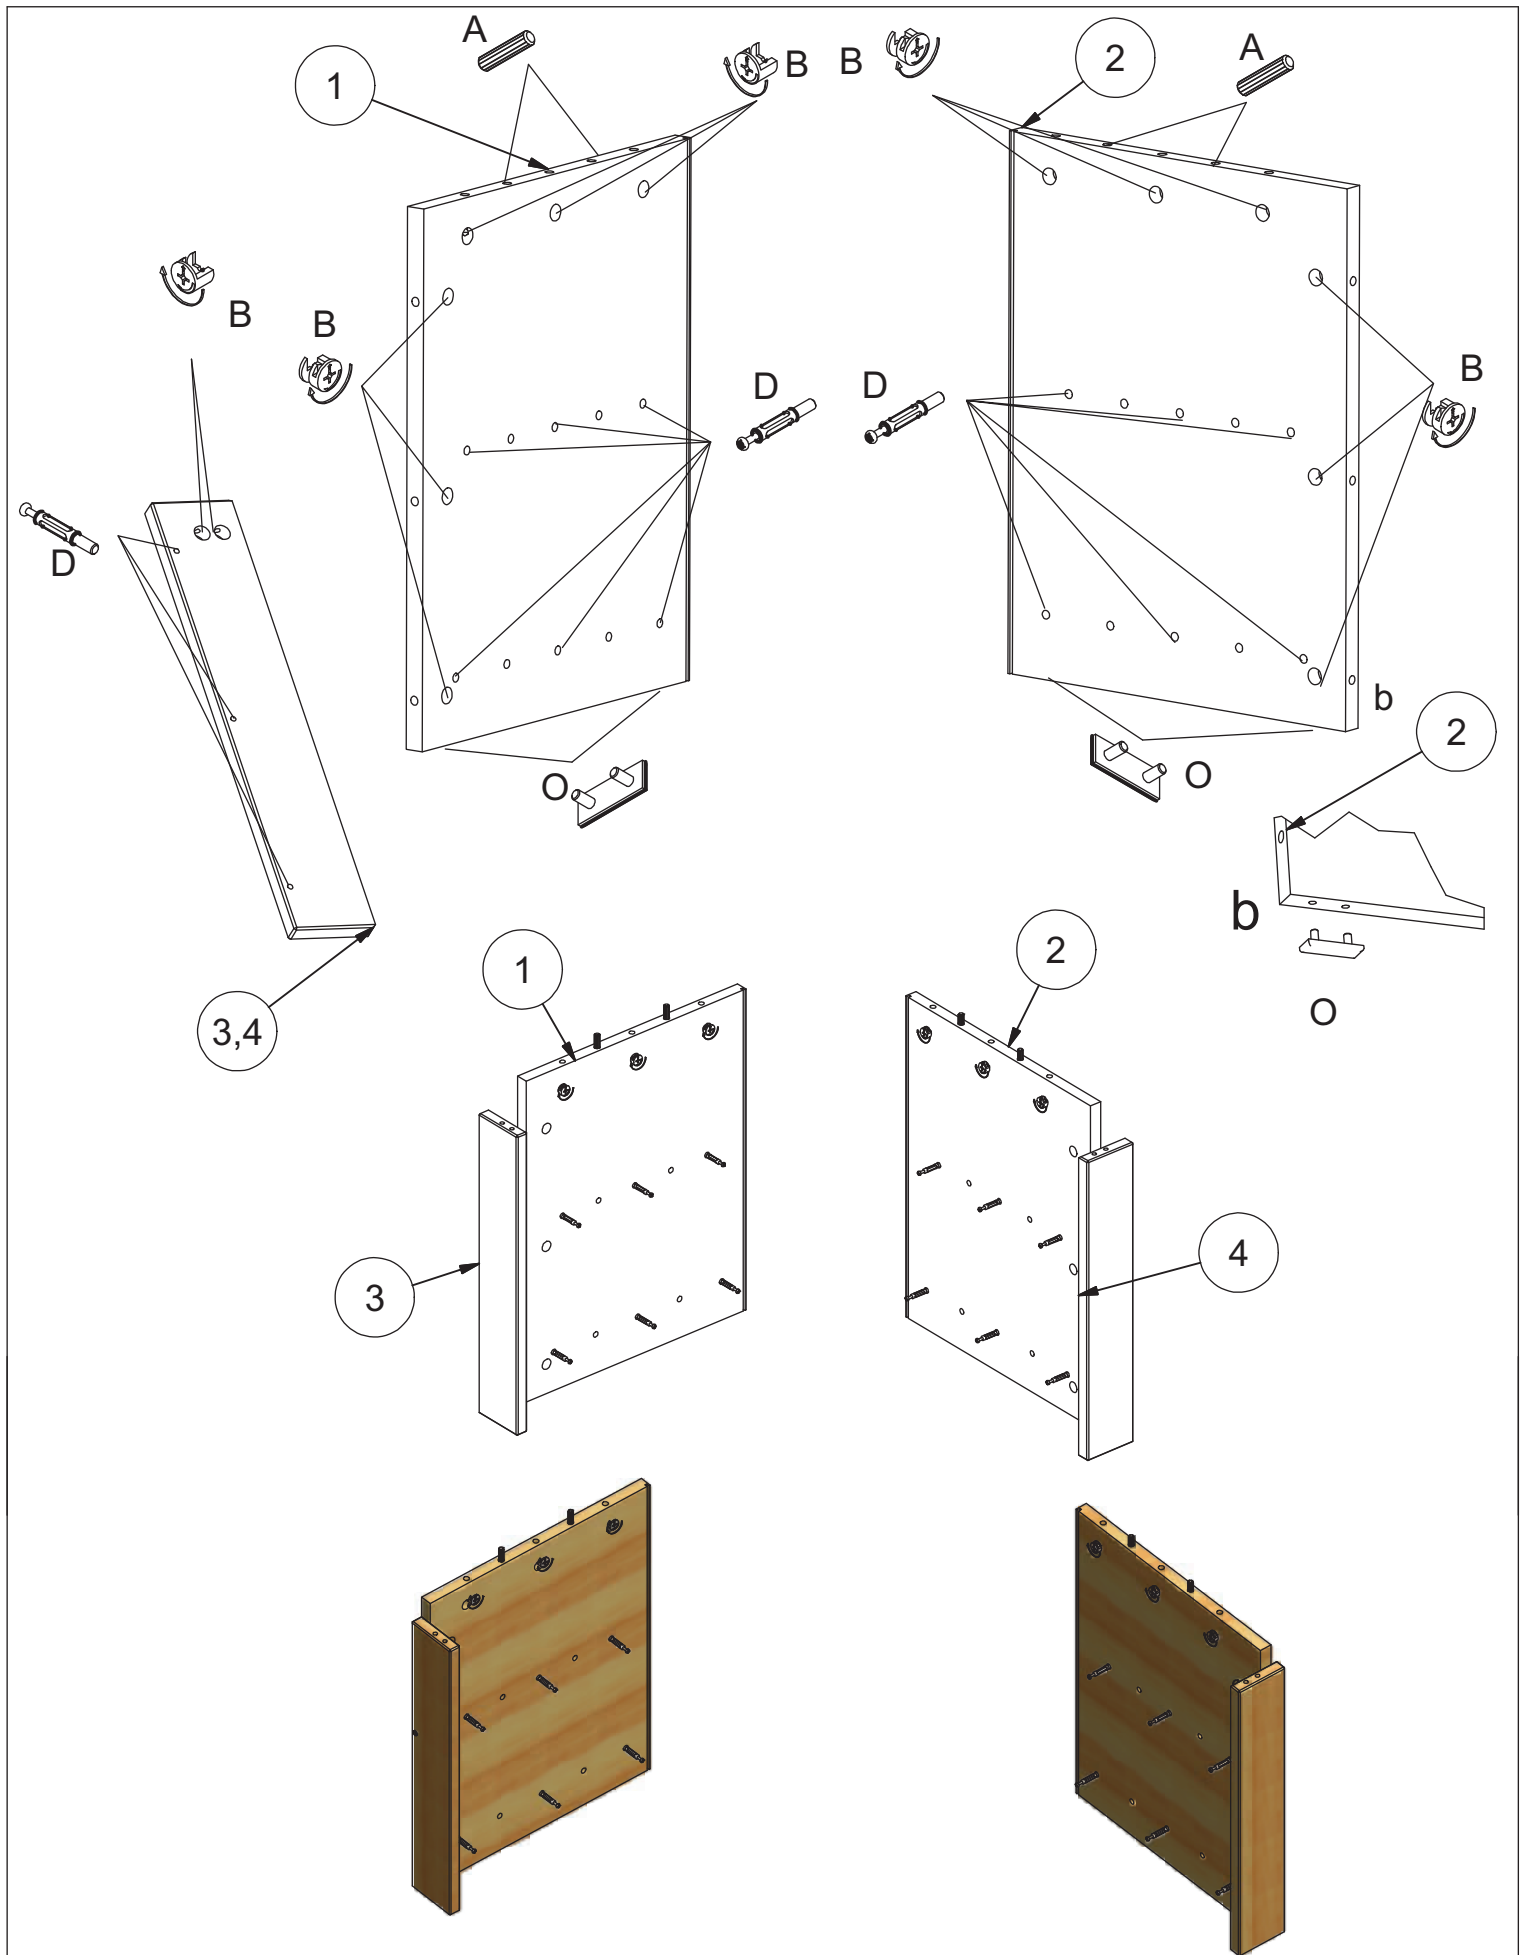


I

A	B	D	O
 Ø 8x30 4	 16	 18	 4

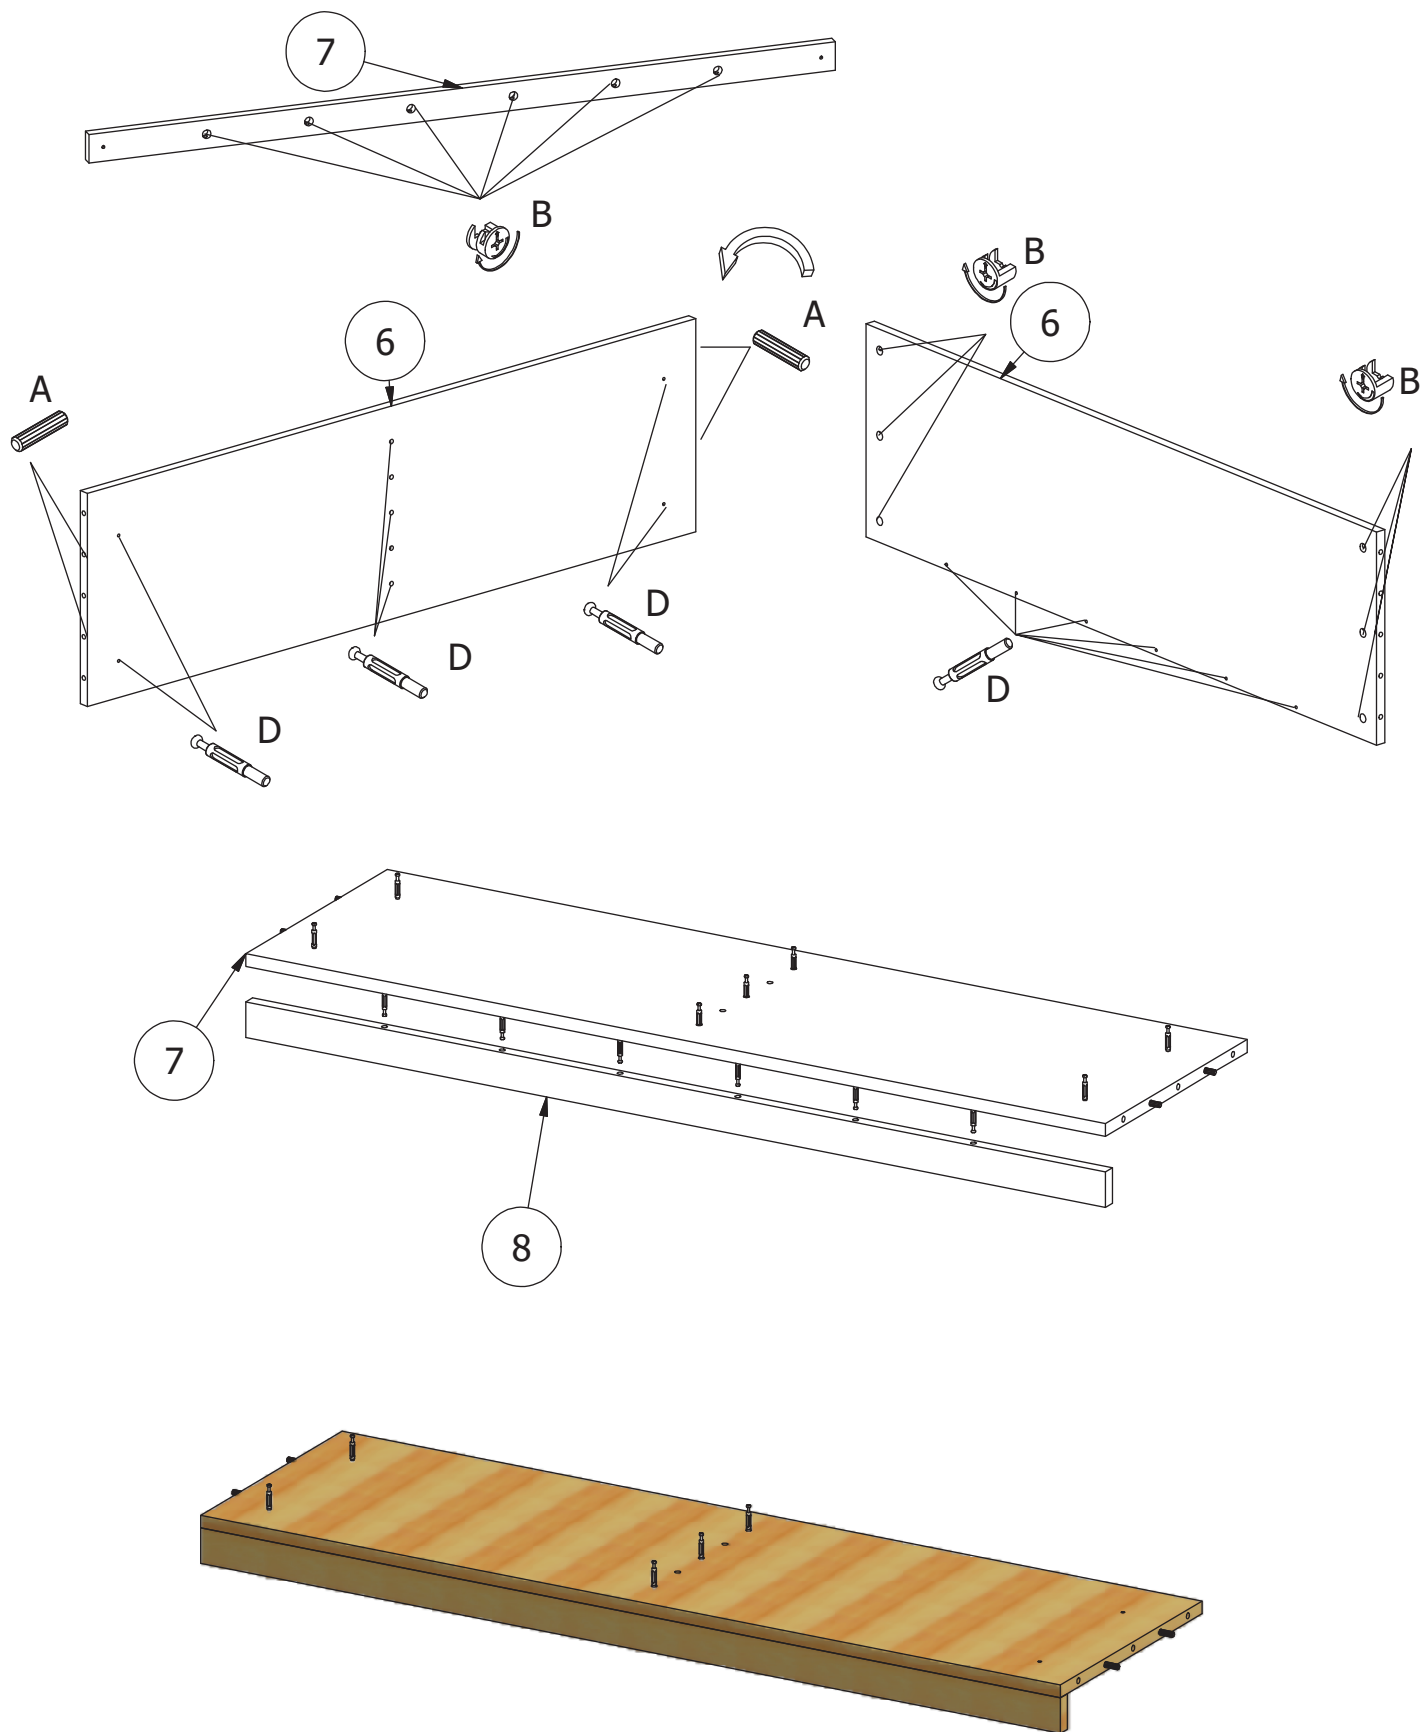



II

A	B	D
		
4	12	13


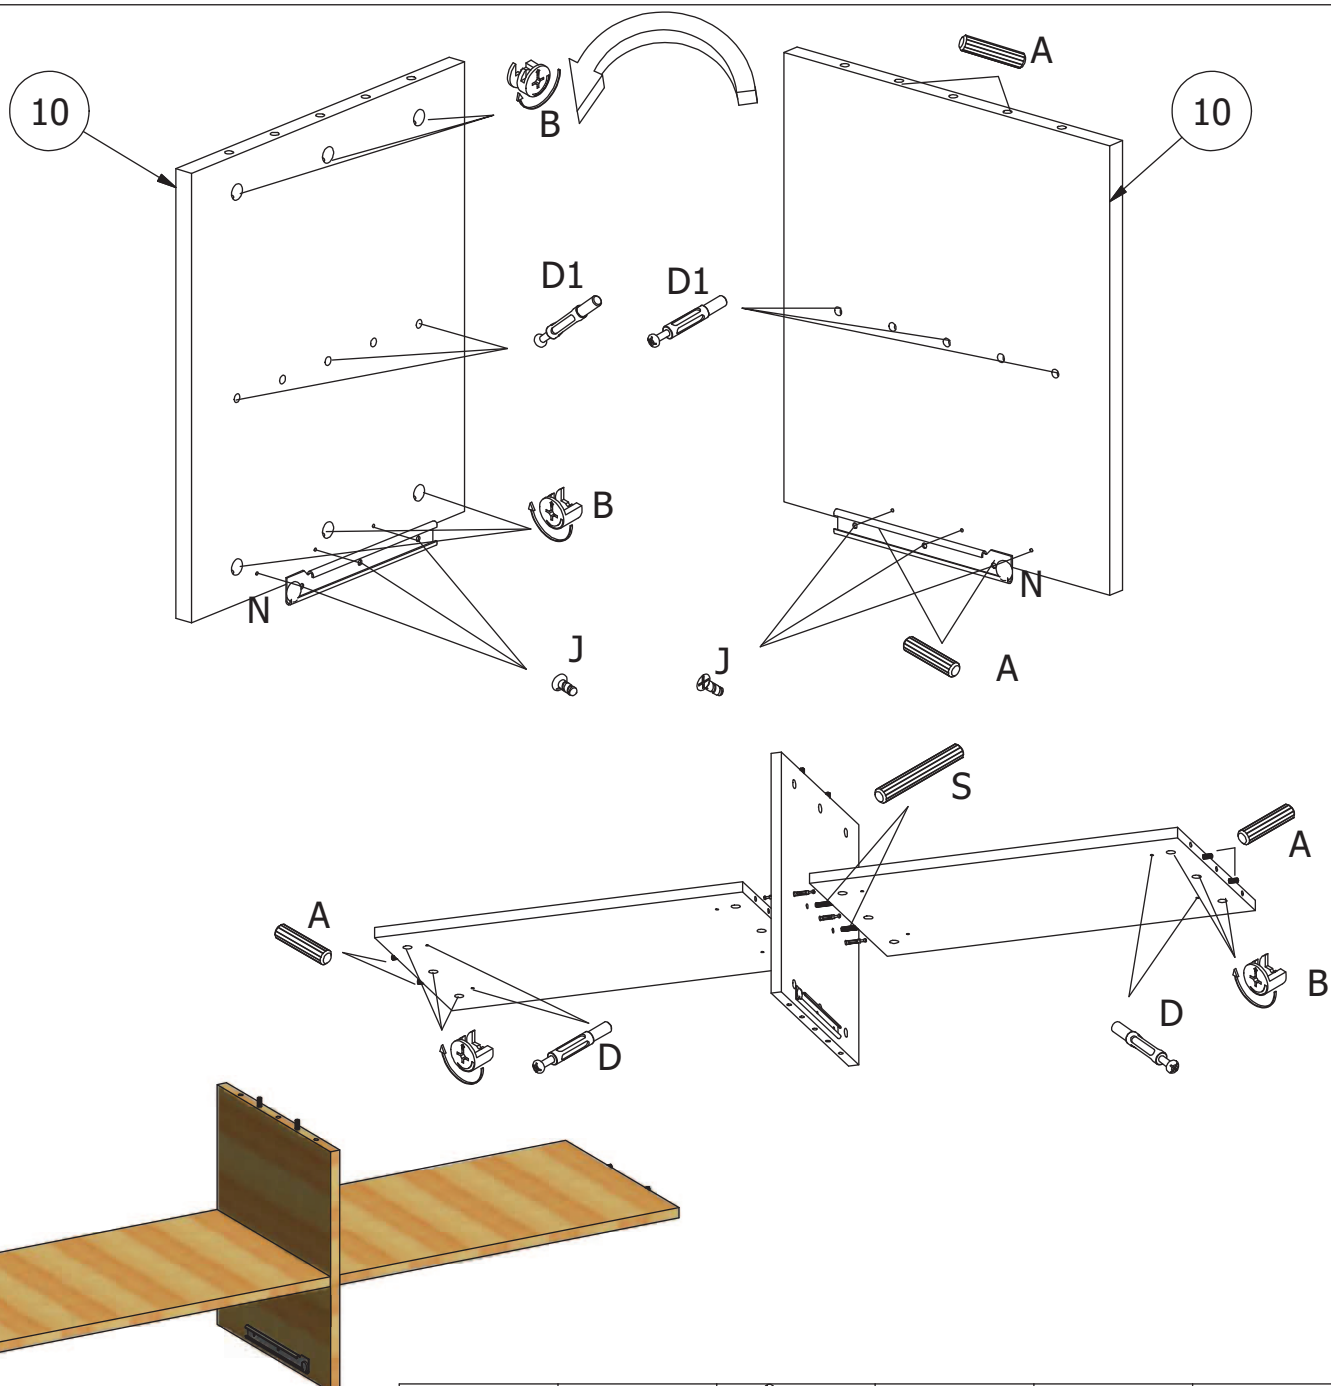


III


D	A	D1	B	J	S
					
4	8	6/6	12	6	2

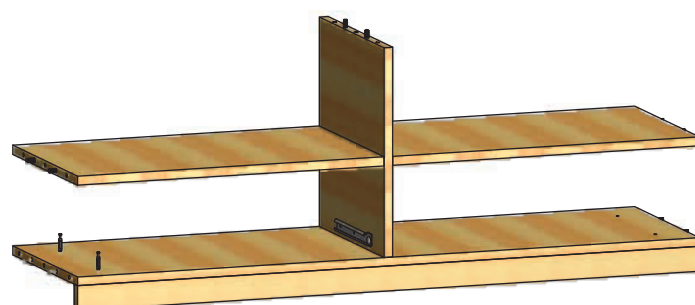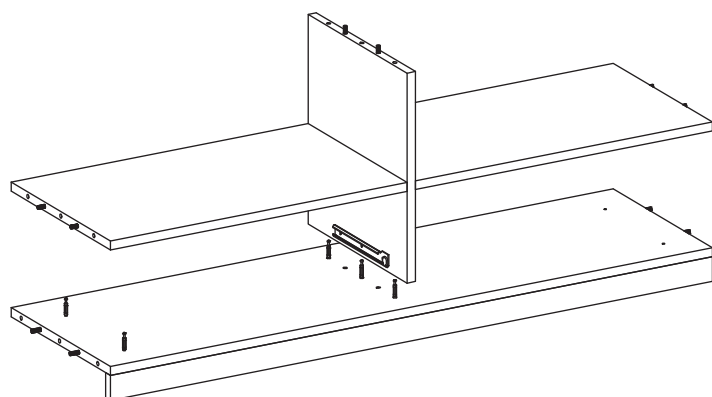

IV

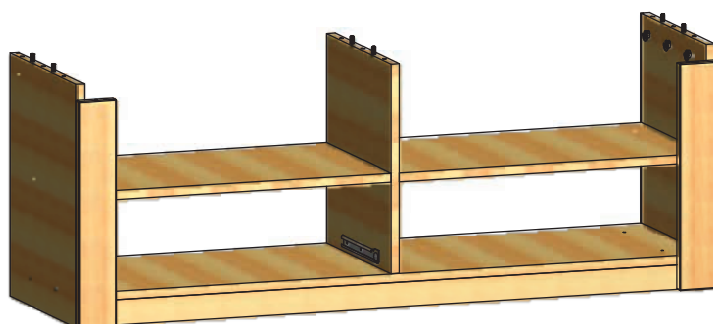
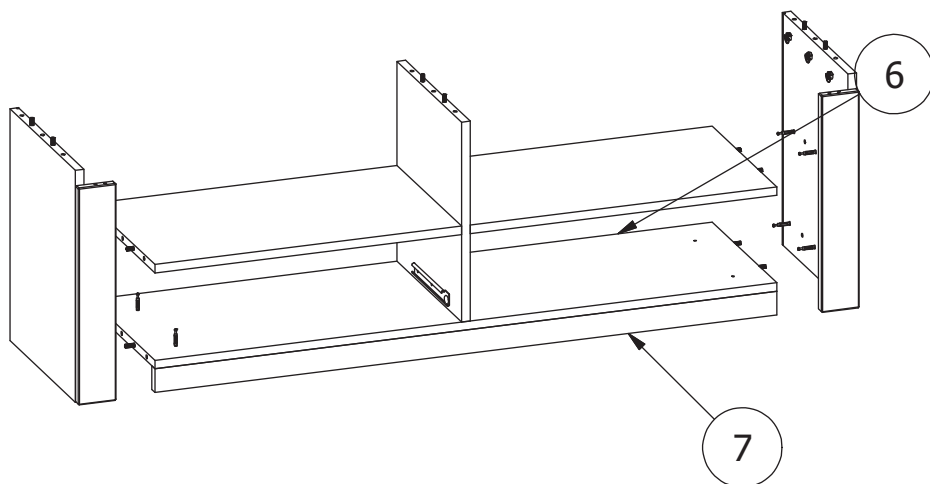





V

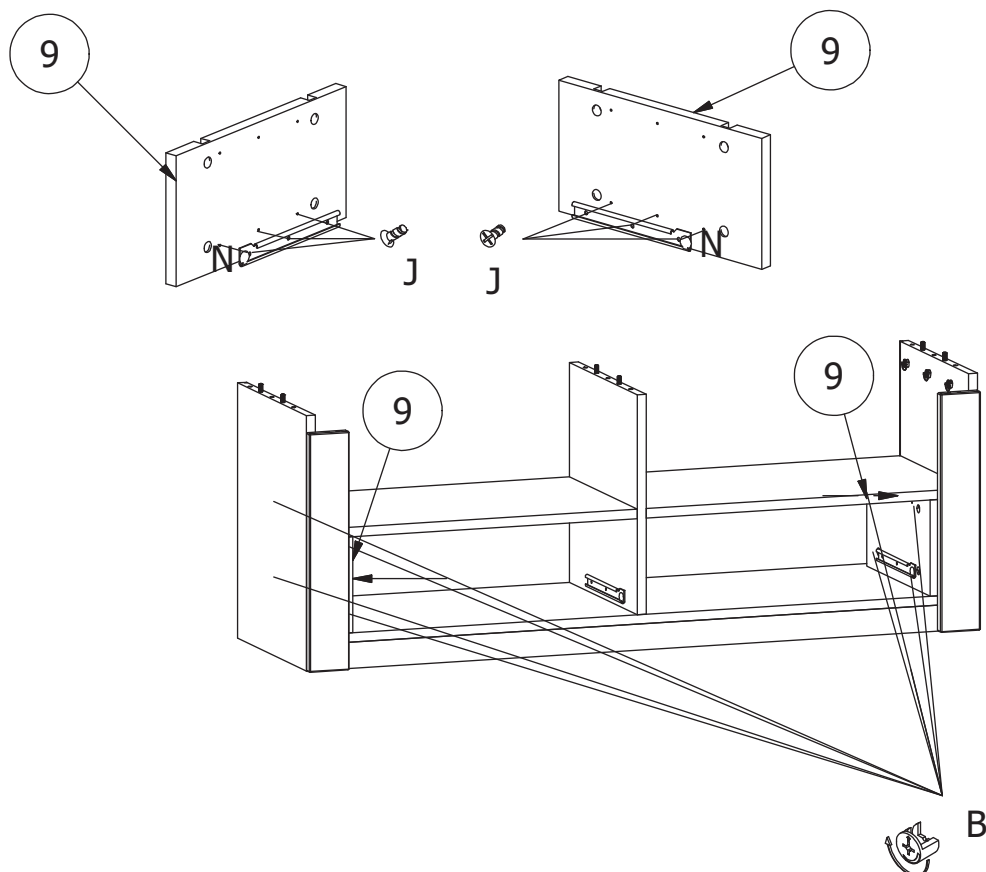

VI



J	B	N
		
Ø5x13 6	8	2

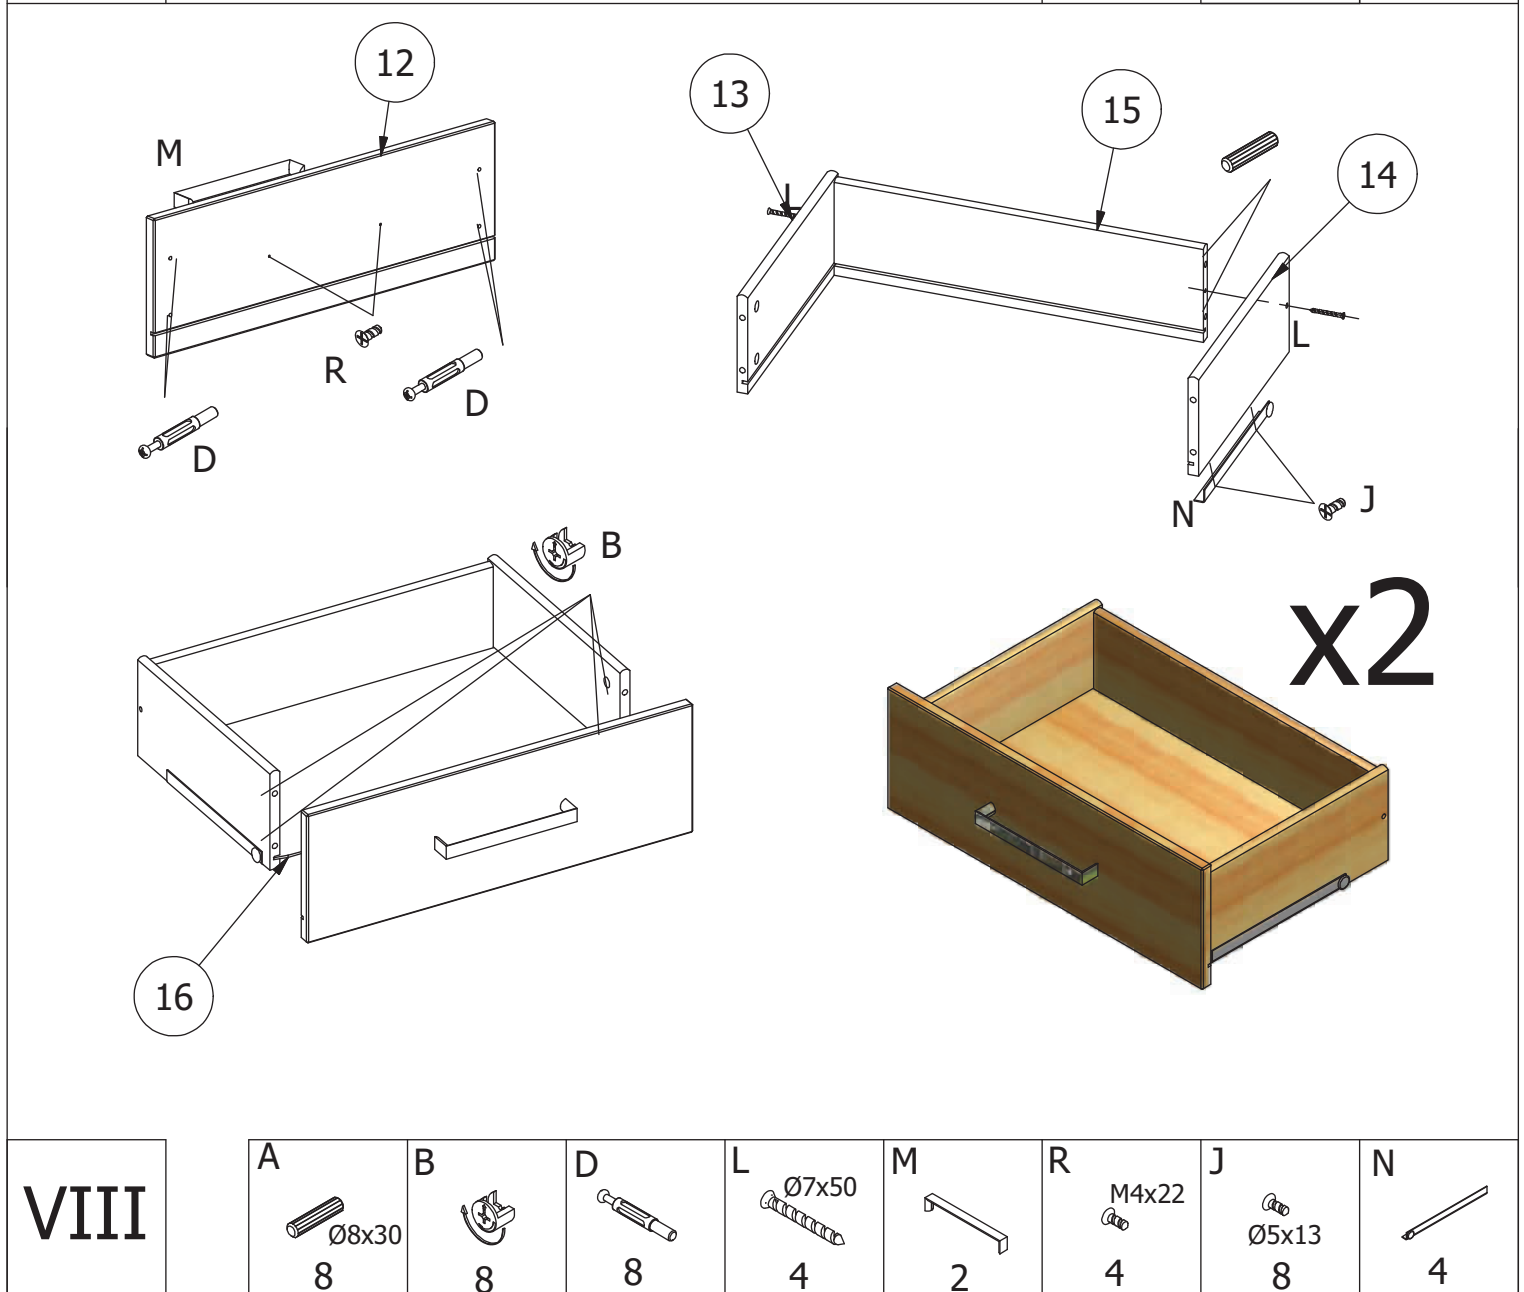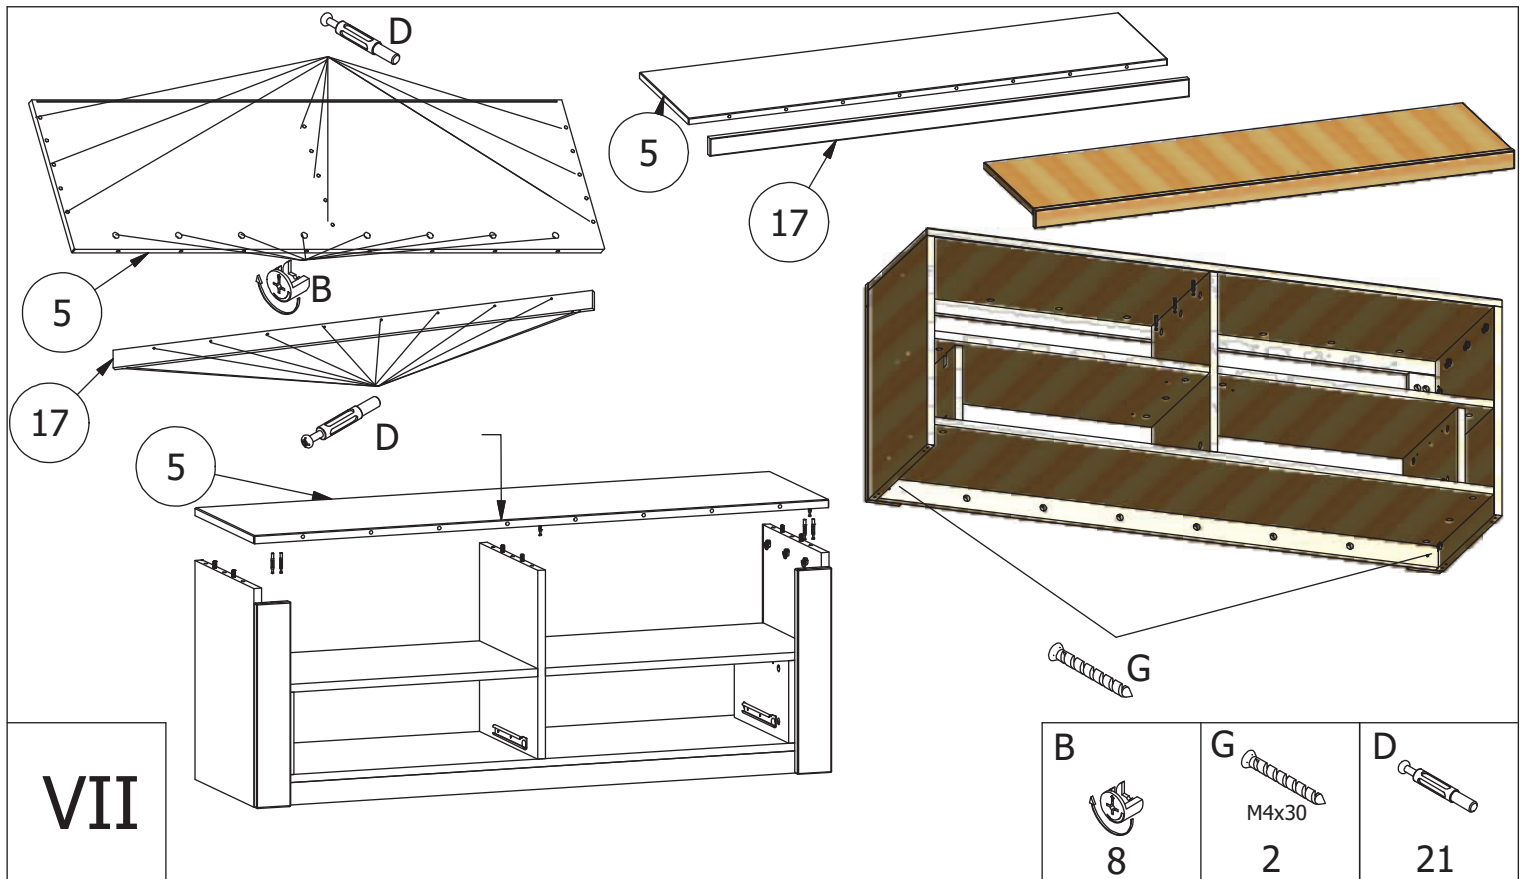

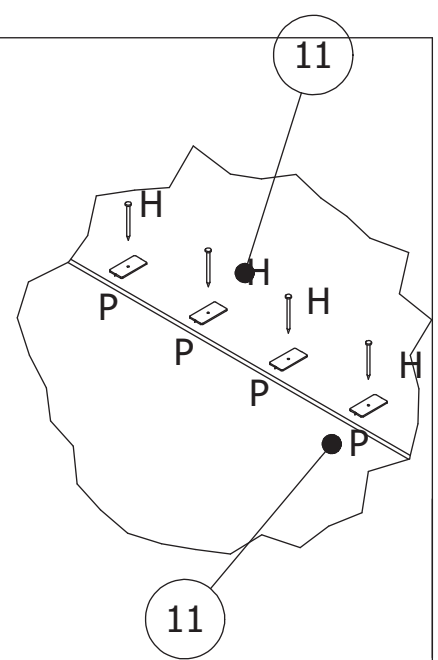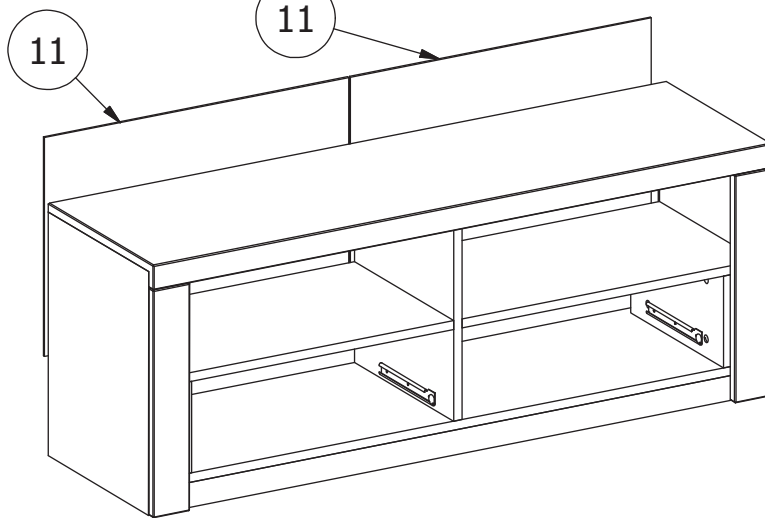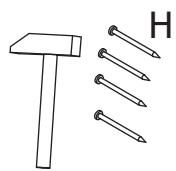

VIII

P	H
	
5	80

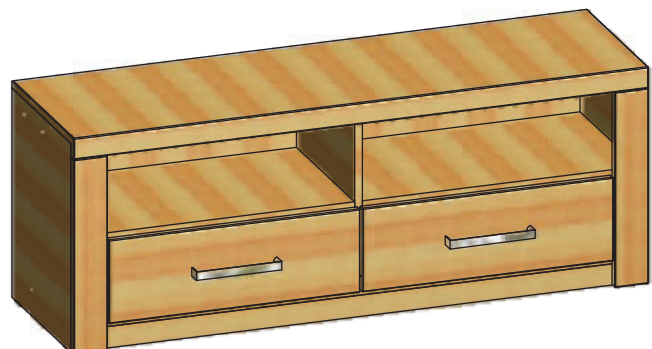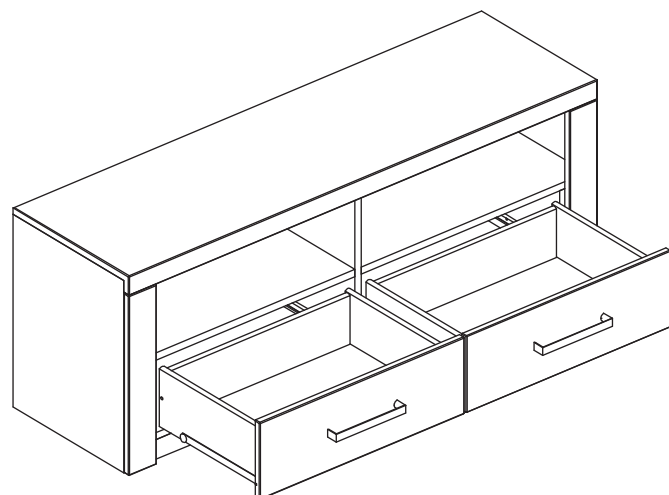

IX