


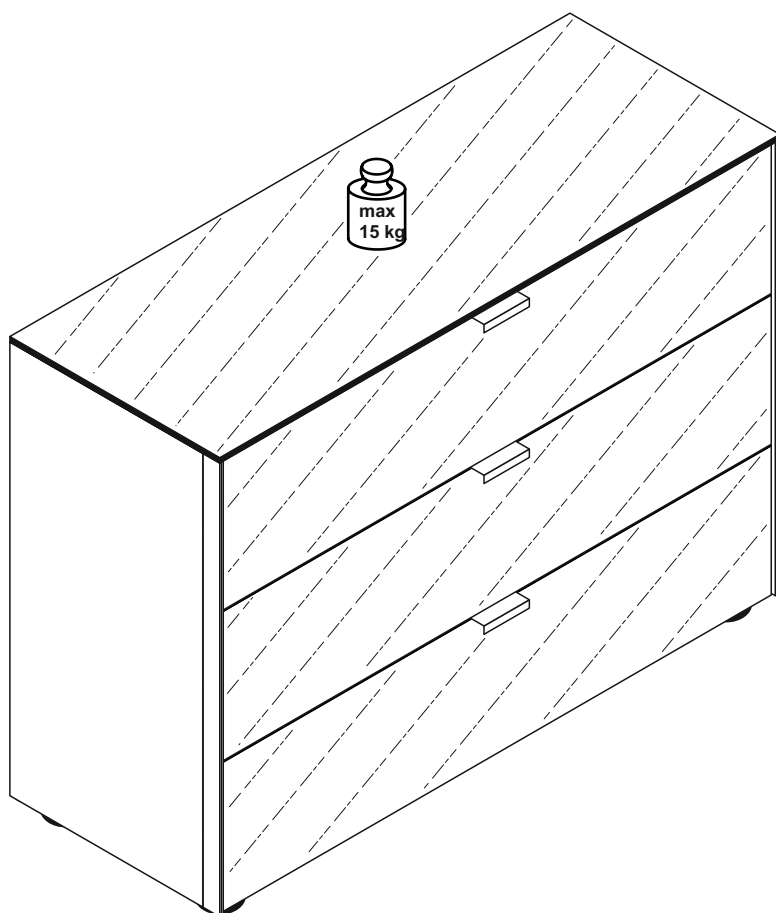

Artikel.-Nr.:

0772-KO_021 GL

Montageanleitung.-Nr.:

MA1-00372

REPC-Nr.:	Service • Assistenza • Dienstverlening • Serwis Servis • Szerviz • Сервисная служба

Beutel 0772-KO_021 GL 0-15 Colli 2/3

B01-30 48x 3x16	B01-80 8x 3,5x13	B01-70 4x 3x30	B01-90 4x 3,5x20	B01-122 4x 4x13
B01-200 16x 6,3x13	B02-08 8x h=10mm	B02-10 18x h=12mm	B02-20 26x	



SCAN ME

Beutel 0772-KO_021 0-35 Colli 2/3

B03-07 1x	B03-11 3x	B03-42 3x 8er
--------------	--------------	---------------------

Beutel 0772-KO_021 0-45 Colli 2/3

B02-103 12x 8x30	B05-130 2x	B05-185 4x	B05-280 1x	B06-425 3x
B05-260 1x	set one by Musterring			

Beutel 0772-KO_021 0-55 Colli 1/3

B01-36 4x 4x40










Beutel BT1-00001 Colli 2/3

B05-265 1x	set one by Musterring Pflegeanweisung
---------------	---








Beutel BT1-00005 Colli 2/3

B01-123 8x 4x15	B02-173 4x	
-----------------------	---------------	--



Colli 1/3

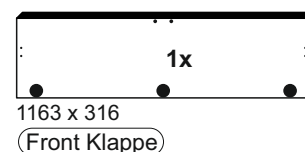

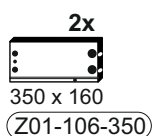
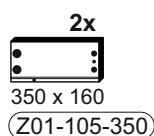
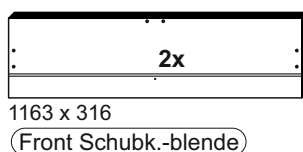
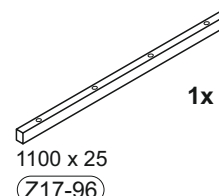
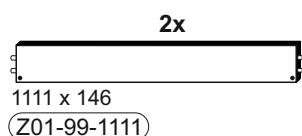
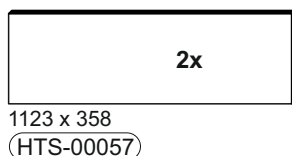


Colli 2/3

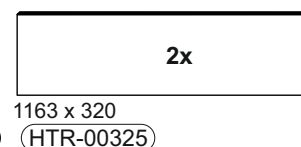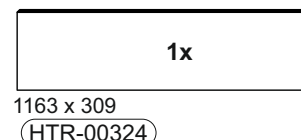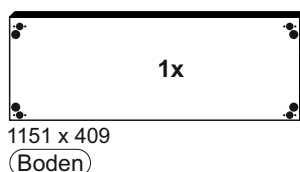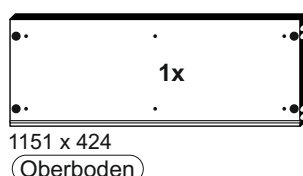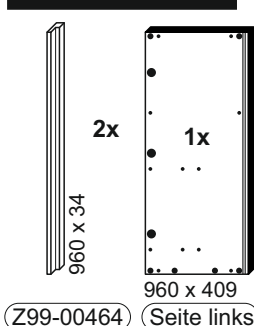

Colli 3/3

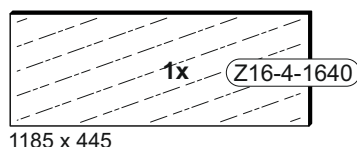

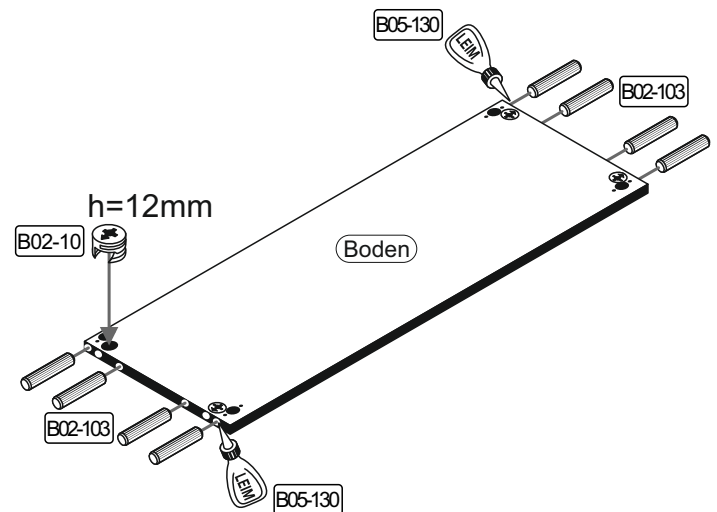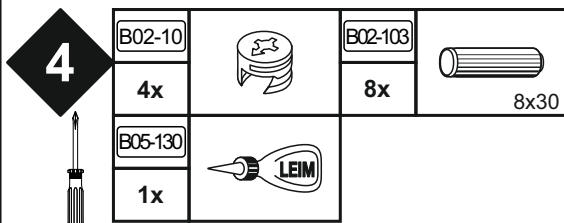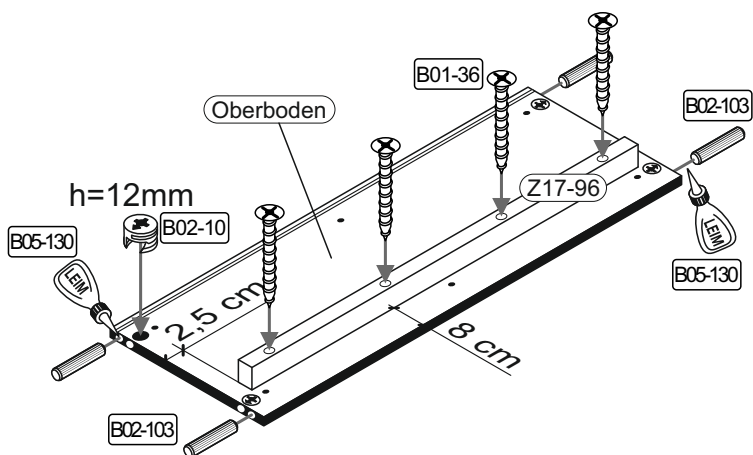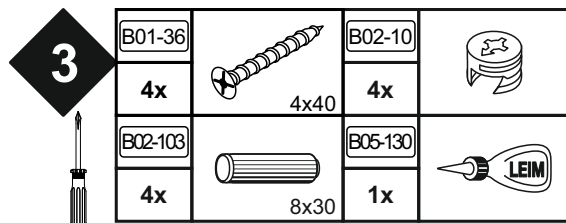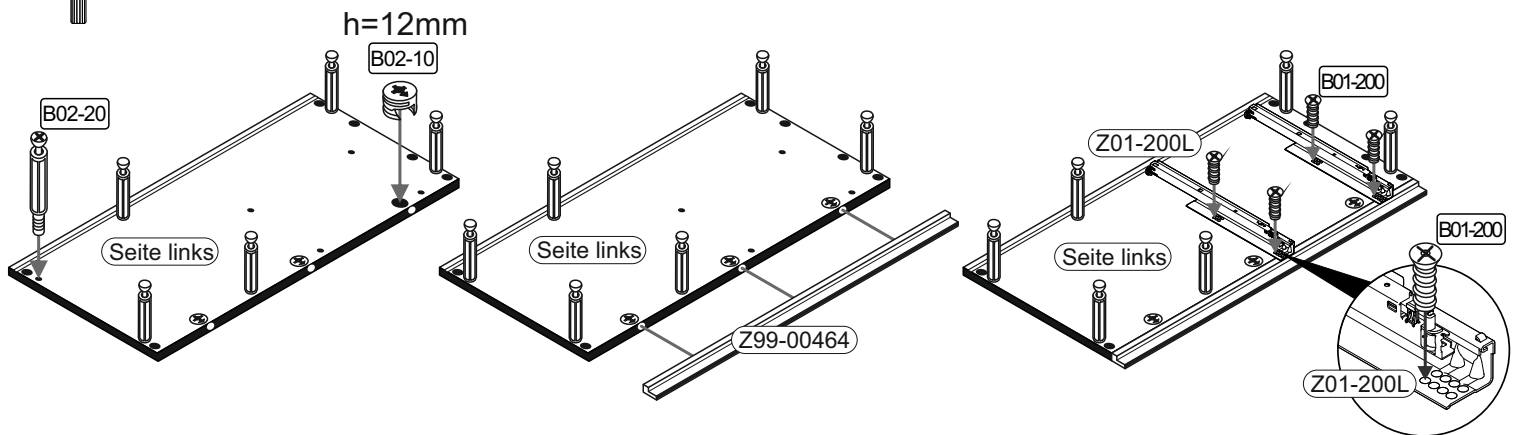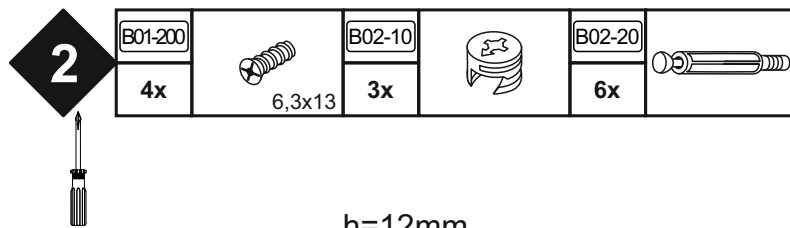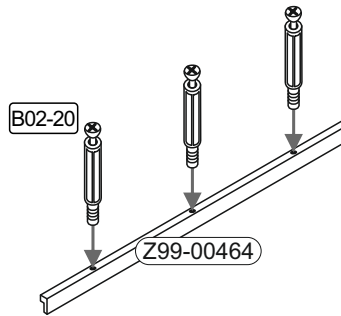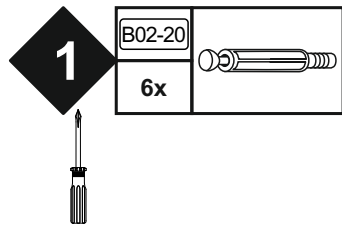

CHICAGO

5

B02-10		B03-11	
4x		3x	

h=12mm


B02-10

Mittelboden

B03-11

Mittelboden

6

B01-200		B02-10		B02-20	
4x	6,3x13	3x		6x	

h=12mm

B02-10

Seite rechts

B02-20

Seite rechts

Z99-00464

B01-200

Z01-200R

B01-200

Z01-200R

Seite rechts

7

B01-80		B01-200	
6x	3,5x13	2x	6,3x13
B03-42		B06-425	
3x	8er	1x	

B01-80


B03-42

Front Klappe

B01-200

B06-425

8

B01-200		B02-08		B02-20		B06-425	
4x	6,3x13	8x		8x		2x	

B01-200

B06-425

Front Schubk.-blende

B02-08

Z01-105-350

h=10mm

B02-08






Z01-106-350

4

9




B01-30		B01-70	
26x	3x16	4x	3x30
B01-122			
4x	4x13		

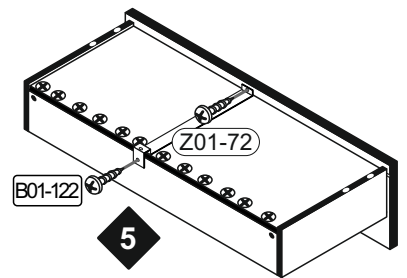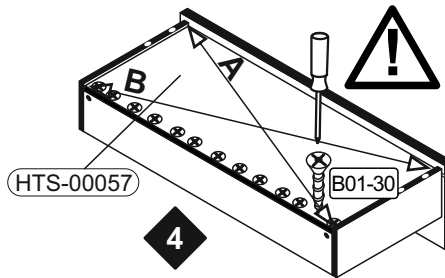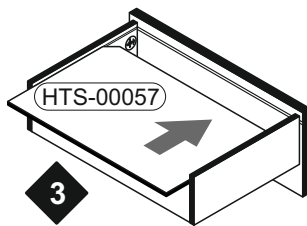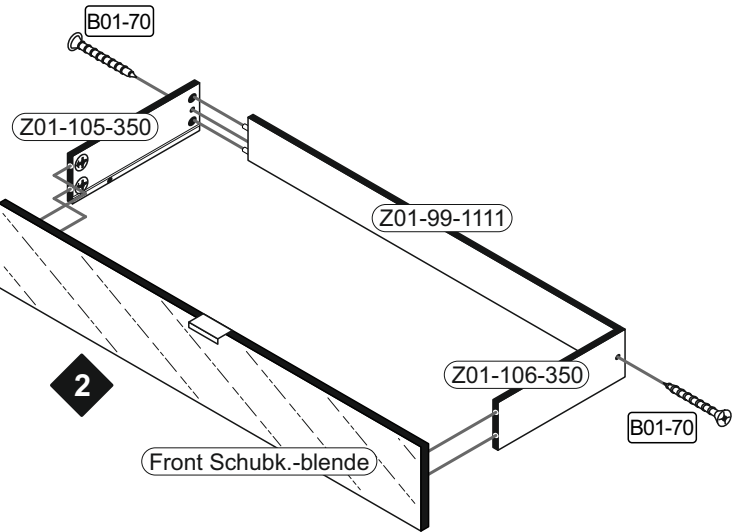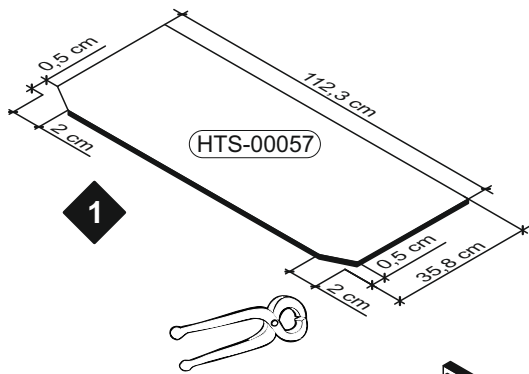

10



B05-130	
1x	LEIM

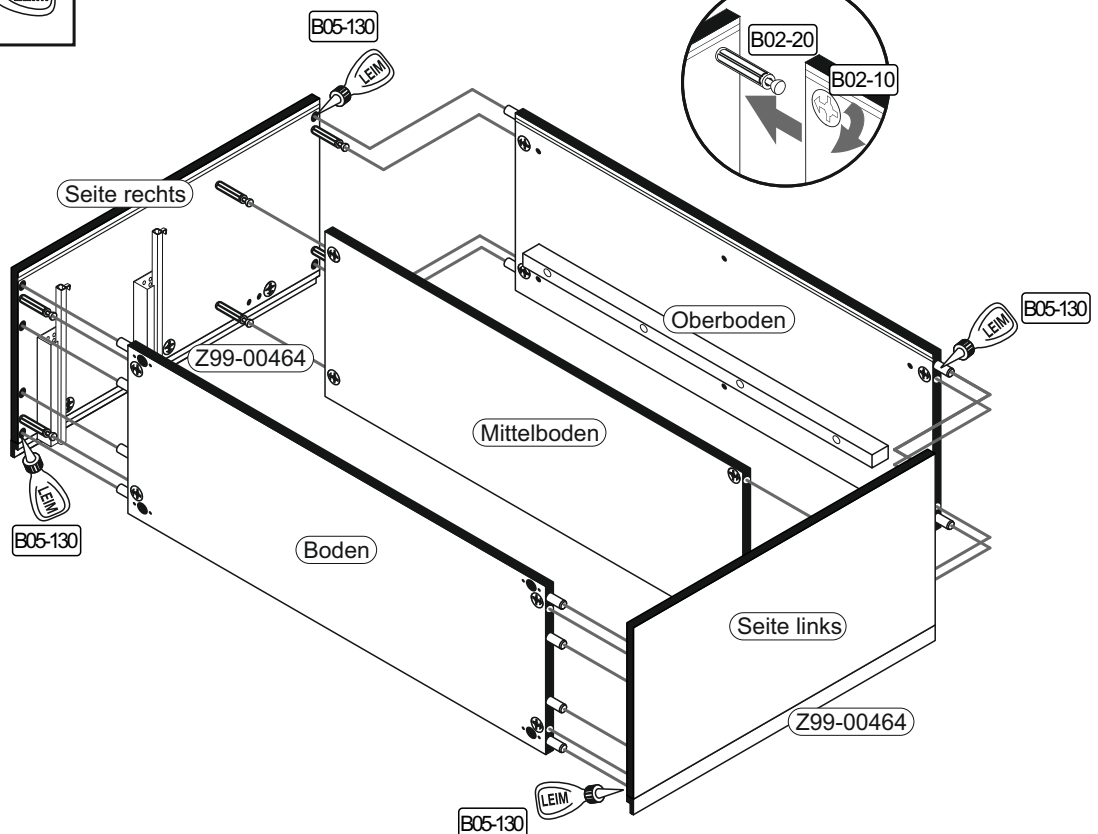

CHICAGO

11

B01-30		B01-90	
22x	3x16	4x	3,5x20
B01-123			
8x	4x15		
B05-185			
4x			
B02-173			
4x			

12


B05-280	
1x	

Höhenverstellung der Möbelfüße


6

13



Einbau des Schubkastens

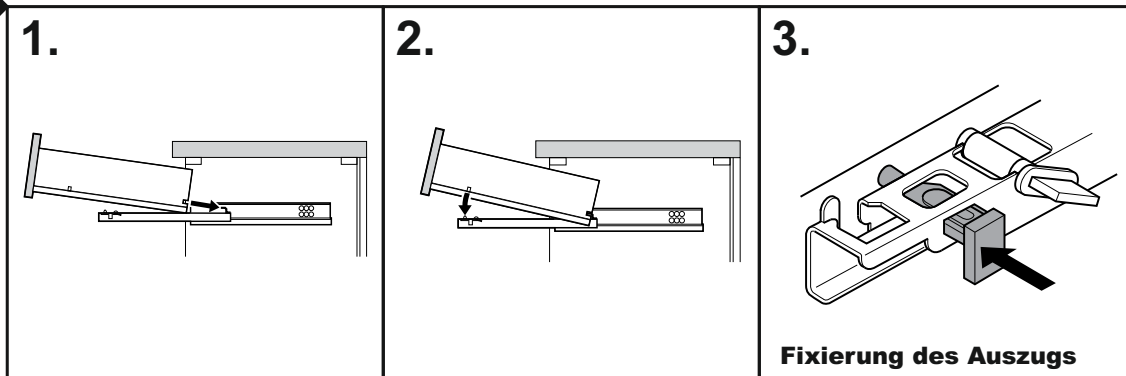

Ausbau des Schubkastens

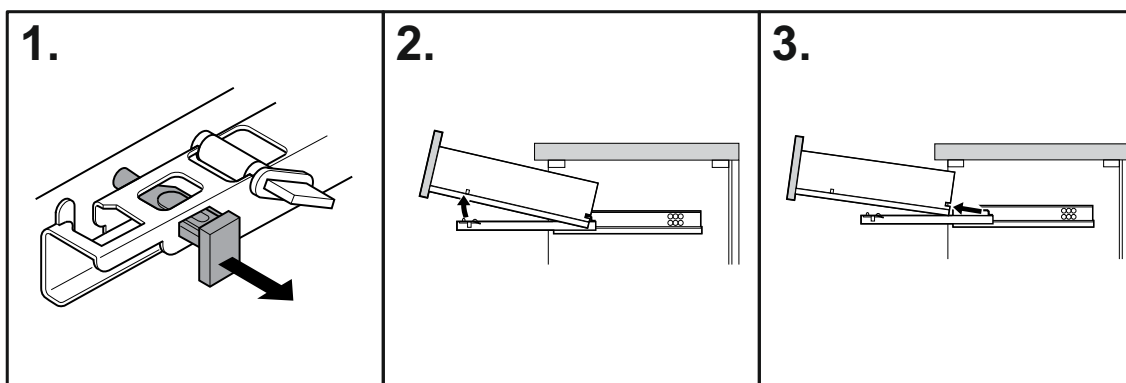

Höhenverstellung des Schubkastens

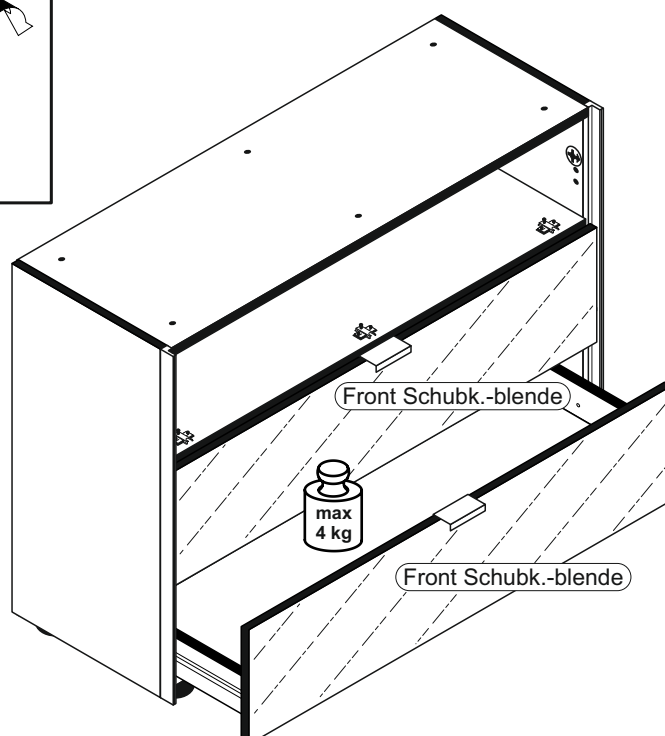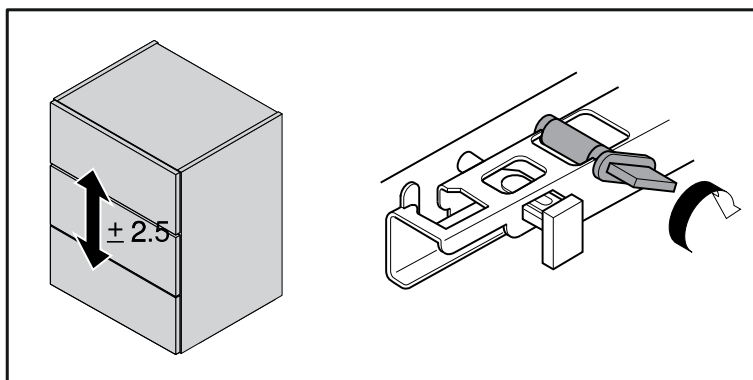

CHICAGO


14


B05-260

1x



set one

by Musterring


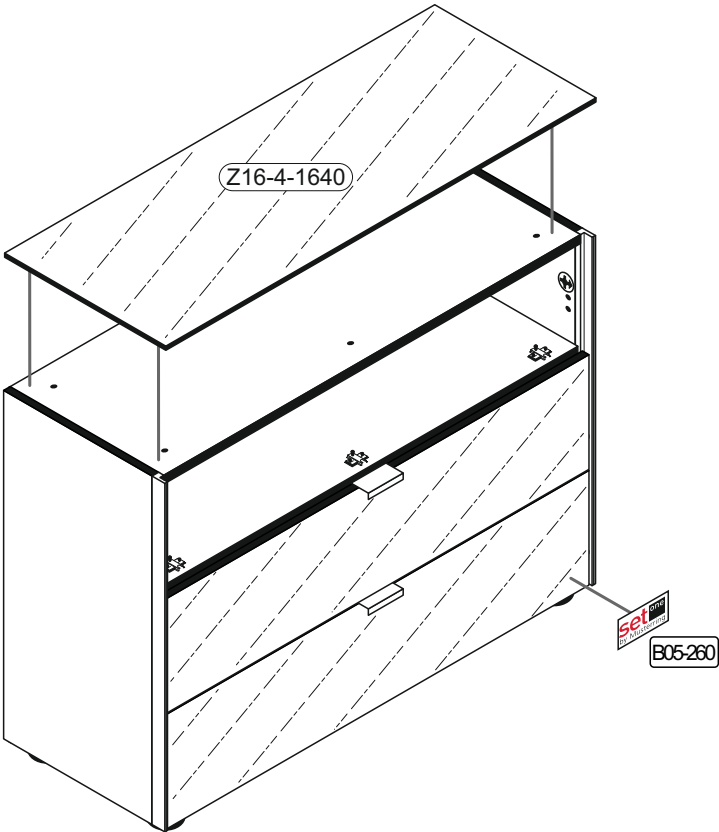


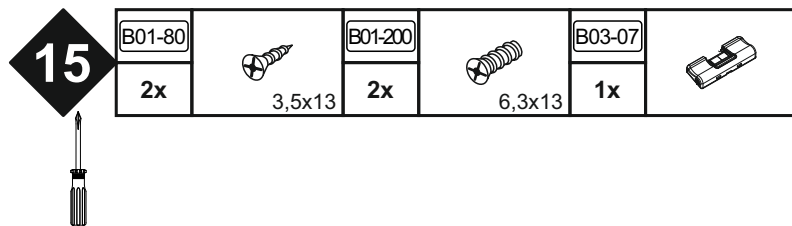


Stütze unten (Z07-27) überdrehen

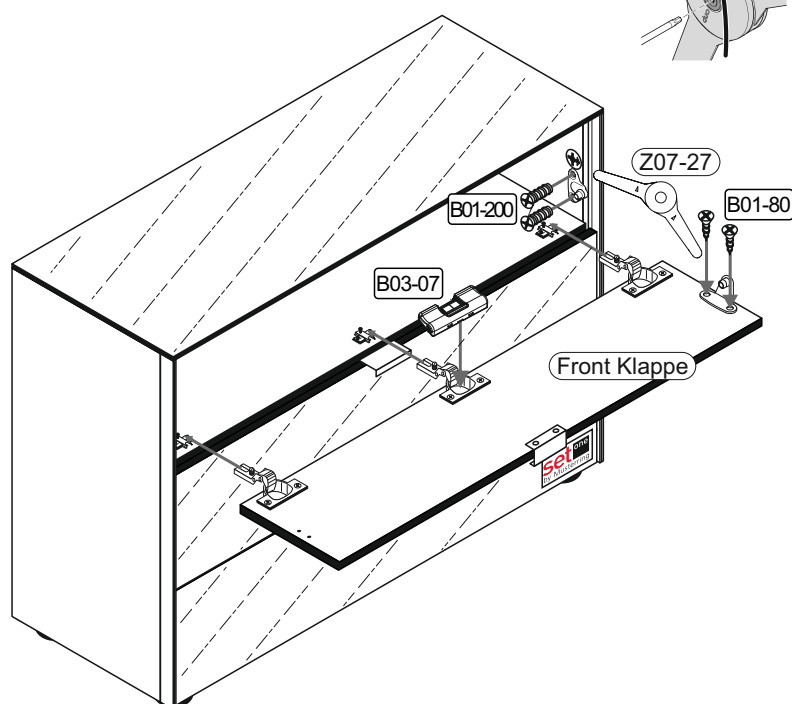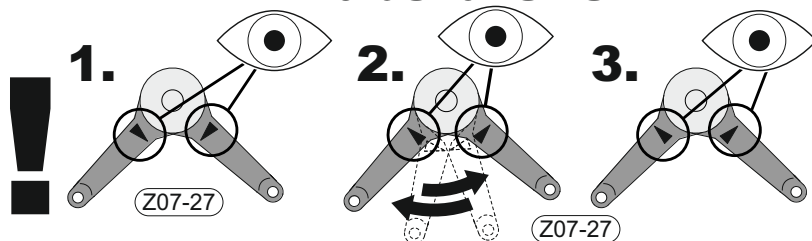

Montage der Türdämpfung

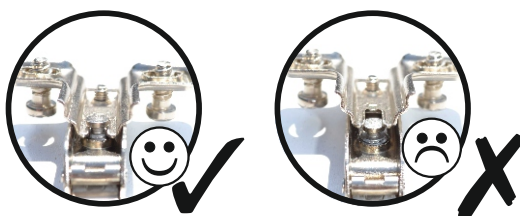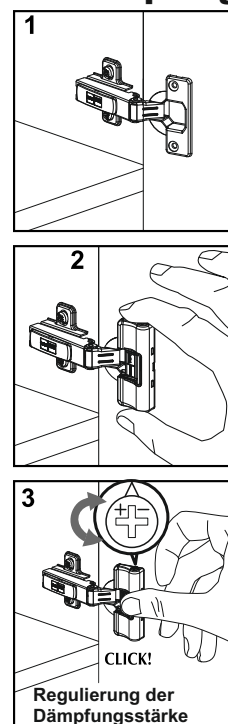

Türen einstellen (Scharniere justieren)
Adjusting the doors (adjusting the hinges)
Régler les portes (ajuster les charnières)
Sistemare le porte (regolare le cerniere)
Deuren instellen (scharnieren afstellen)
Nastawić drzwi (wyregulować zawiasy)
Výrovnejte dvířka (seříd'te závěsy)
Nastavenie dverí (nastavenie závesov)
Állítsa be az ajtókat (állítsa be a zsanérokot)
Reglare usi (ajustare balamale)
Kapıların ayarlanması (menteselerin seviye ayarı)
Регулировка дверей (регулировка шарнира)

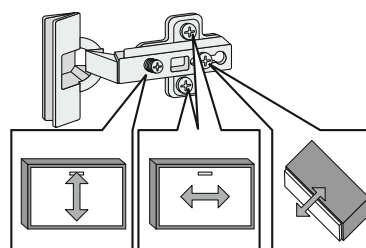

SCAN ME