







3001200
Adelaide Steel Cabinet w.
Rippled Glass Door Black



			
1	2	3	4
x37	x2	x2	x2
spare:2			
			
5	6	7	8
x2	x2	x12	x4
spare:2			
			
9	10		
x2	x2		

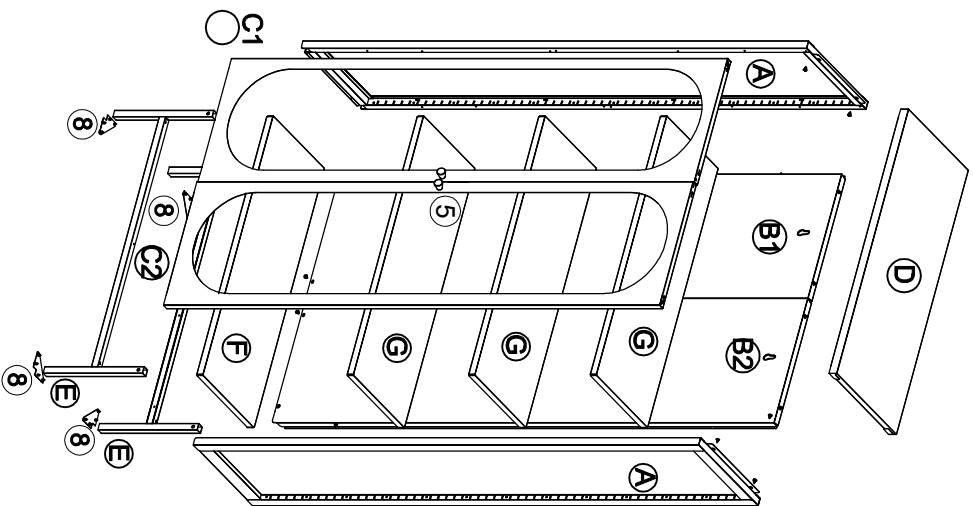


(1) - Attach (A) to (E) as below shown.

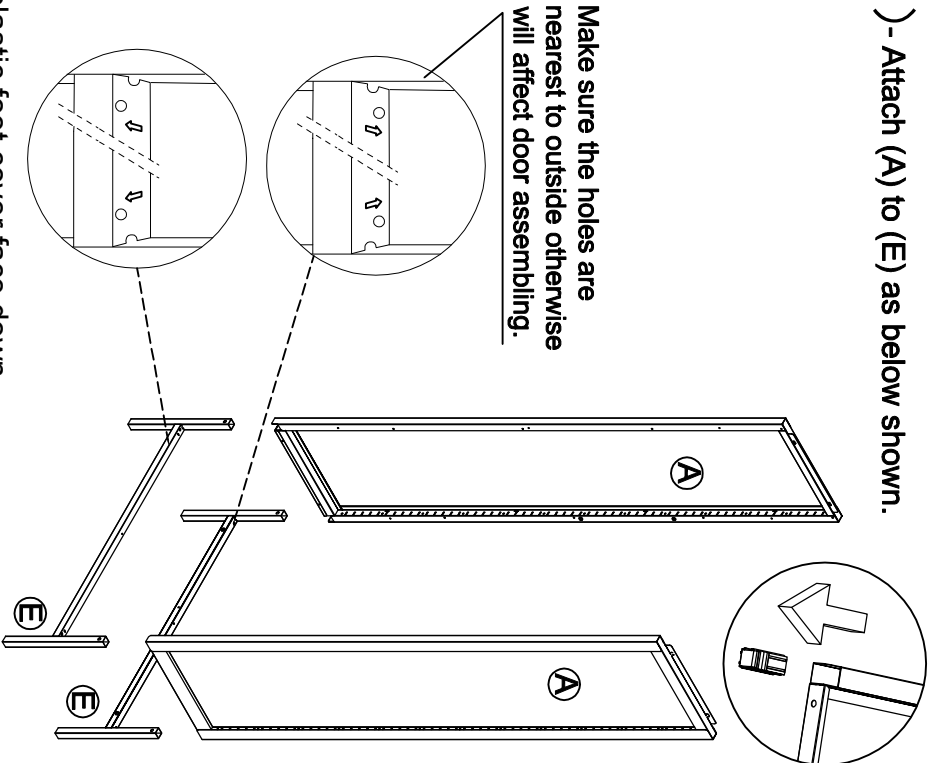


The plastic foot cover face down


(3) - Attach (B) to (A) & (E) as below shown.

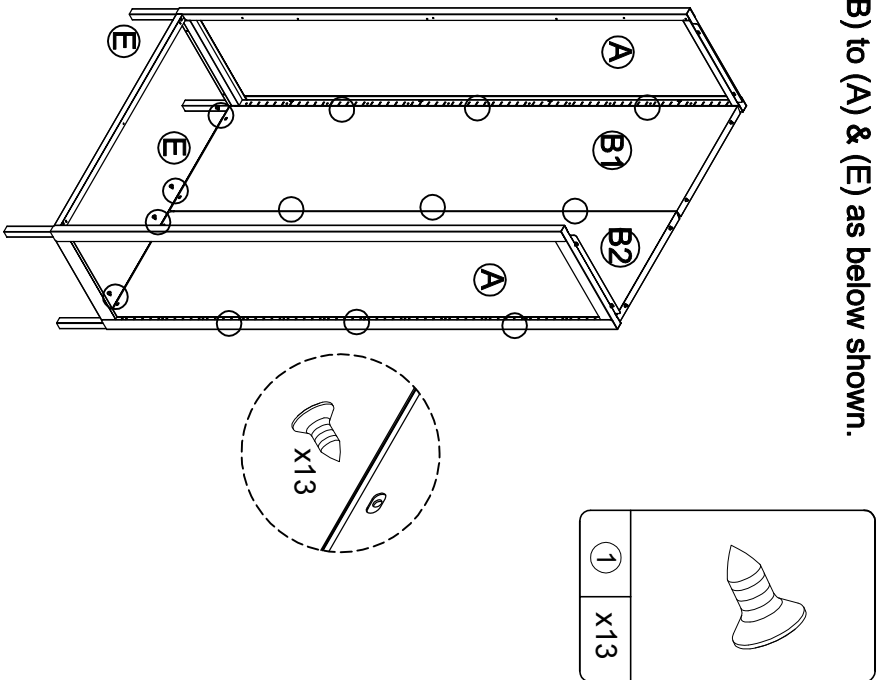



(2) - Attach 8 to (E) as below shown.

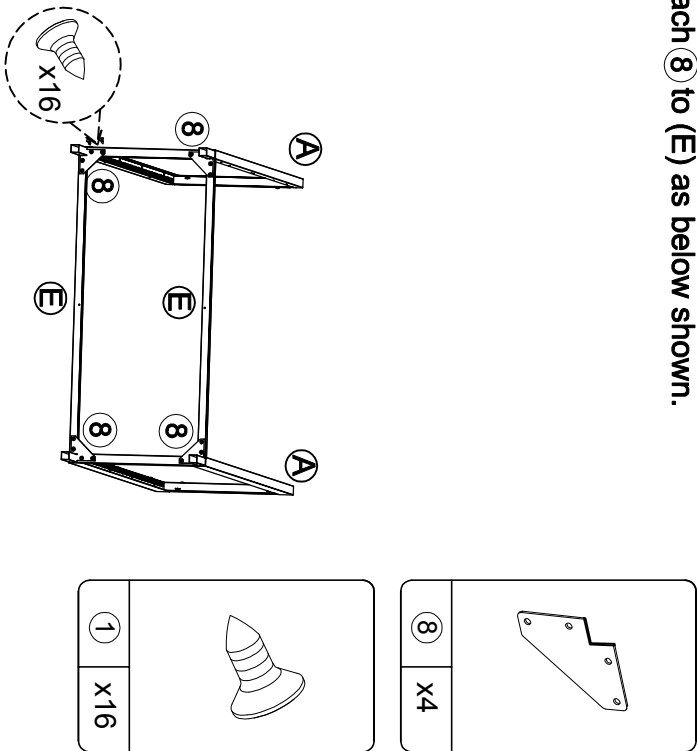



(4) - Attach (F) to (A) & (B) & (E) as below shown.

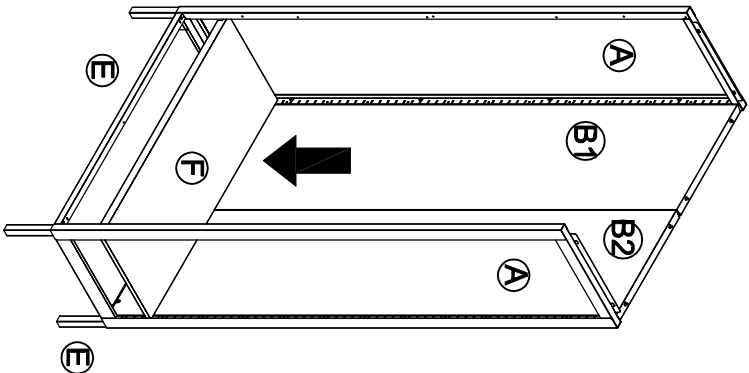





(5) - Attach (D) to (A) as below shown.

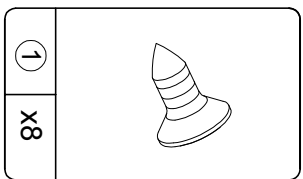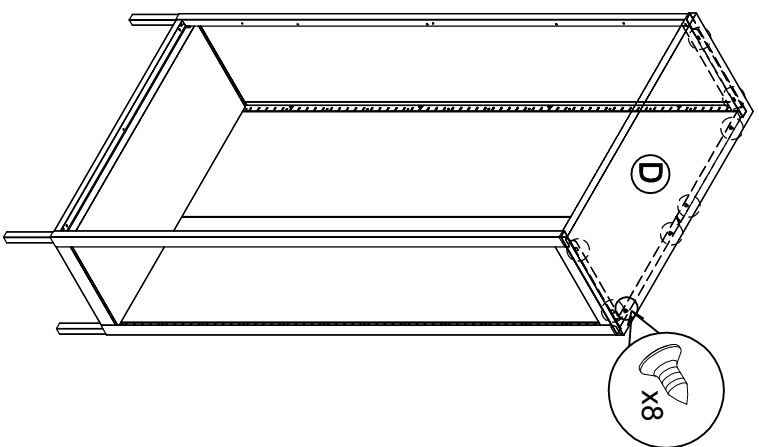




(6) - Attach (G) to pre-assembled unit as below shown.

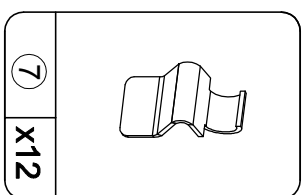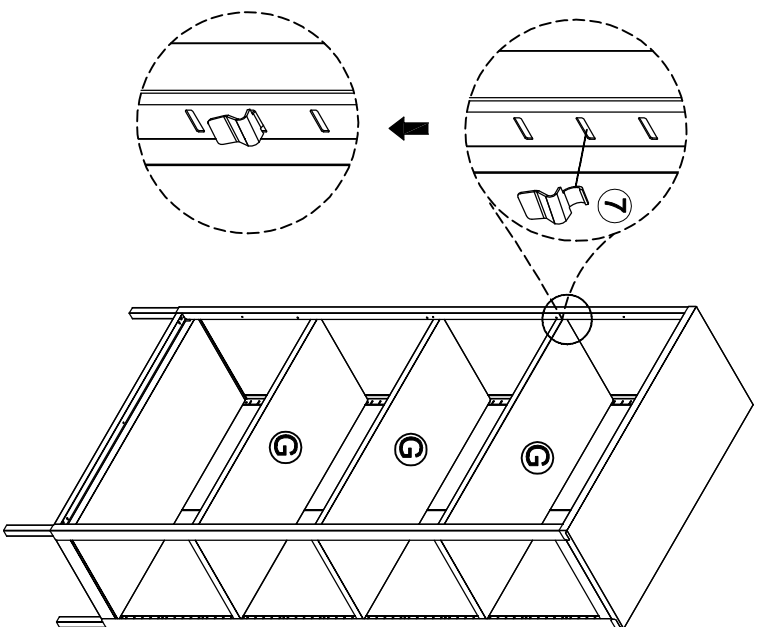


(7) - Attach (6) to (C) as below shown.

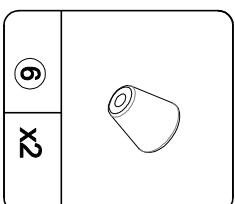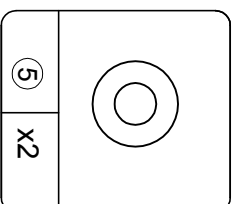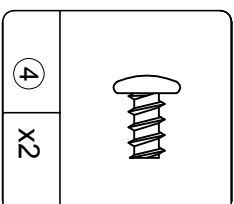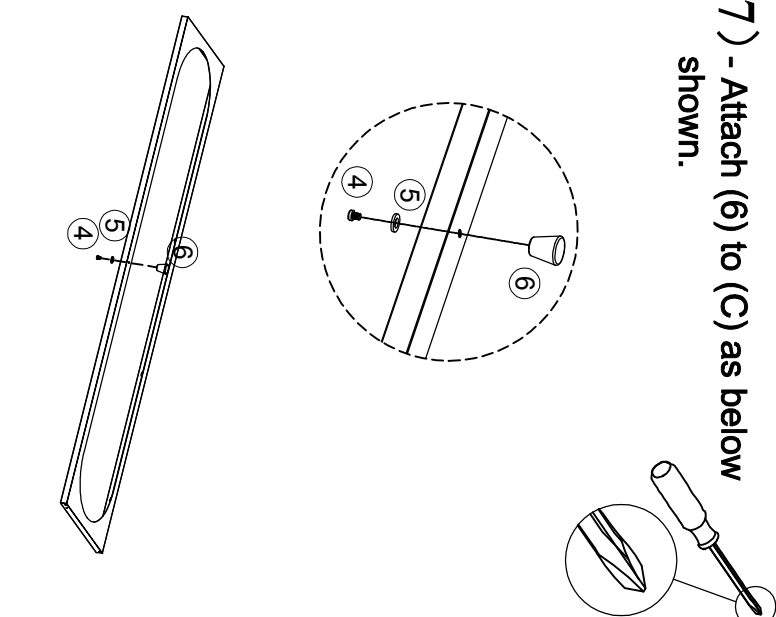




(8) -Attach (2) & (3) to pre-assembled unit as below shown.

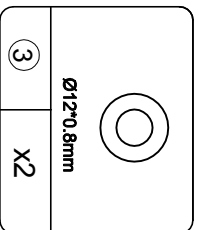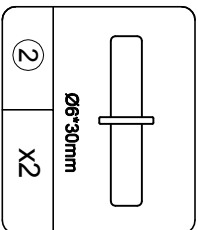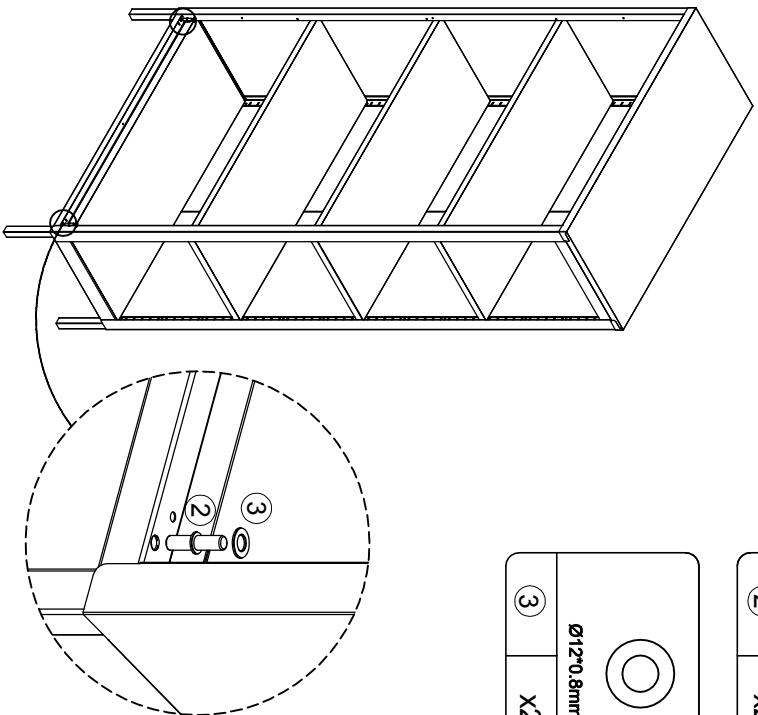

(9) - Attach (C) to pre-assembled unit as below shown.

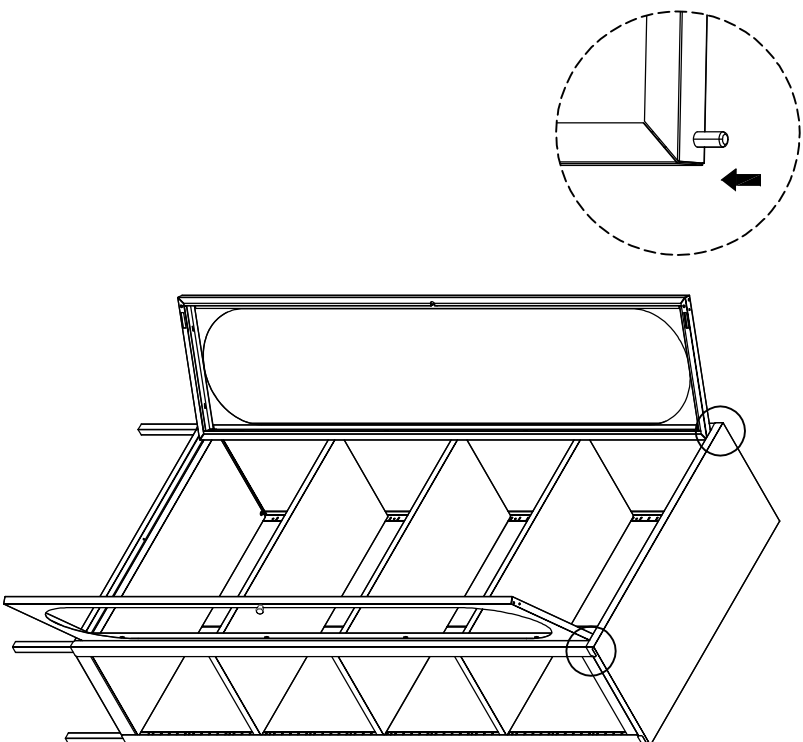

(10)

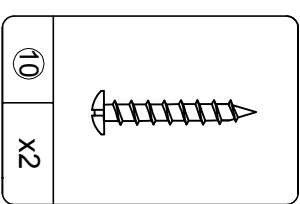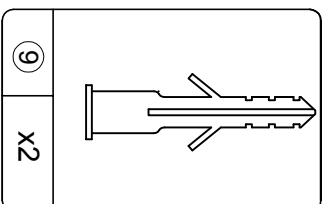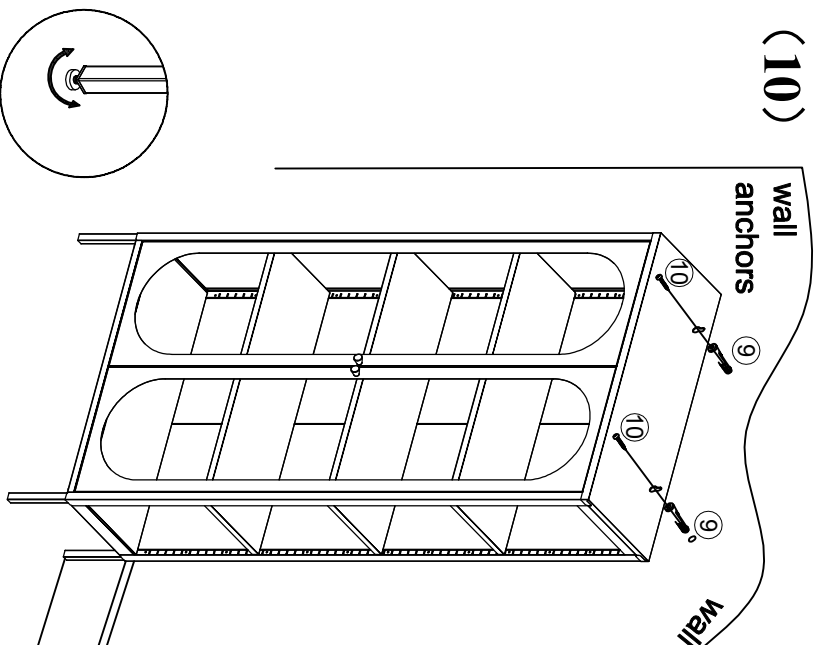

Gaps may appear between the top of the doors and the frame if the item is not on level ground; use the plastic foot cover to level.