




BETT 0568 - MONTAGEANLEITUNG

1	Rechte Seiten	1×
2	Linke Seiten	1×
3	Kopfseite	1×
4	Fußseite	1×
5	Polster kopfteil	1×
6	Mittelträger leiste	1×
7	Querträger leisten	2×
8	Kopfteil träger	2×
9	Stahl Fuss	1×




40 Minutes

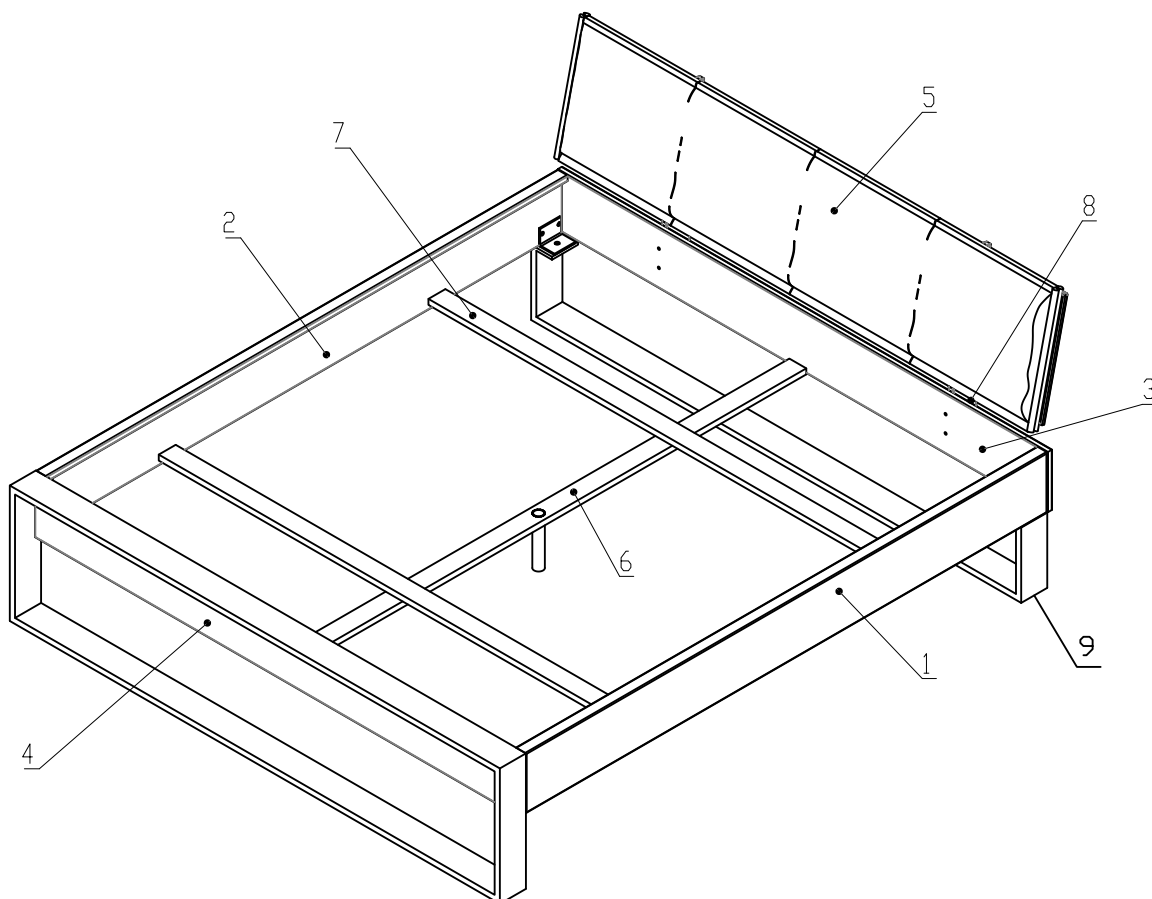




6x15  A x 8	 C x 2	M8x20  D x 2	M 8  E x 4	M 8  F x 2	M6x40  G x 4	10x40  I x 4		
M6x65  J x 4	M6,3x60  K x 4	 L x 6	 M x 6	 N x 1	 O x 2	3,5x16  P x 42	13 	SW 4 

1.

DETAIL A



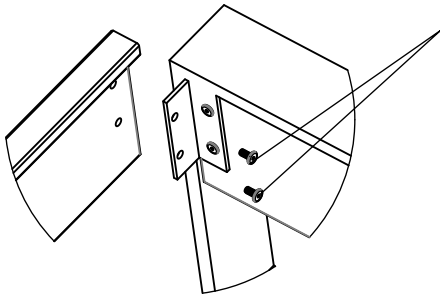


DETAIL B

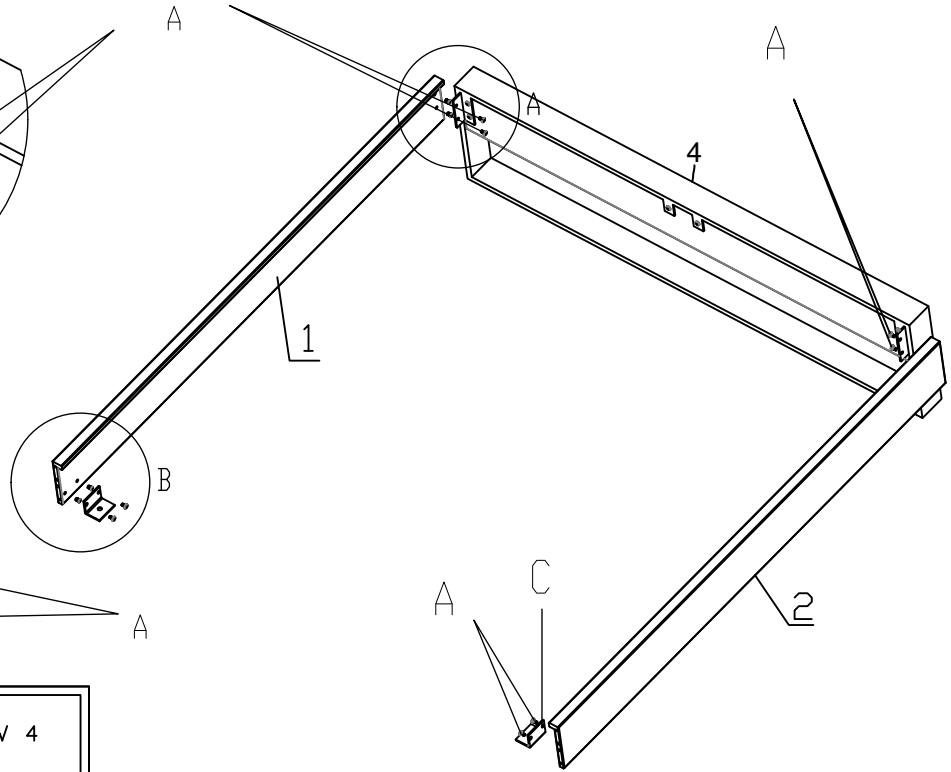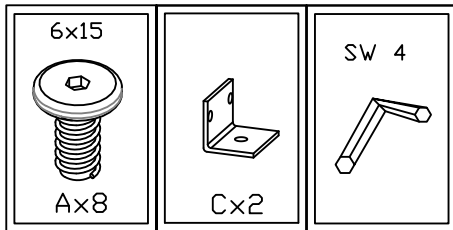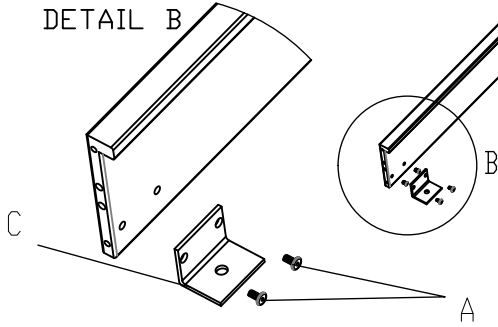



2.

DETAIL A

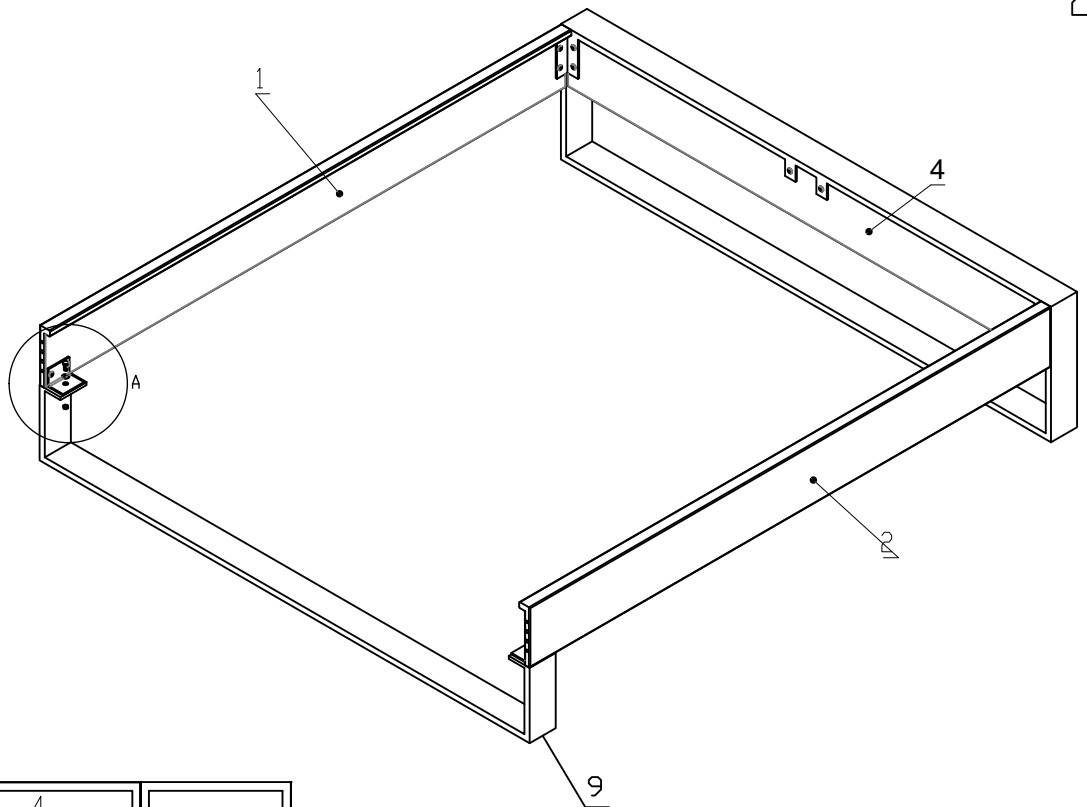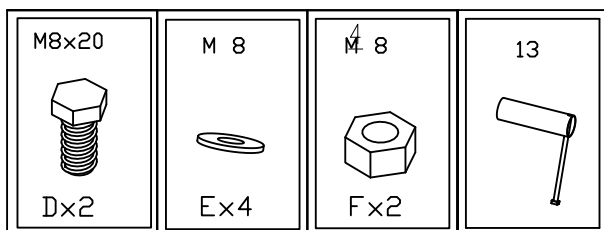
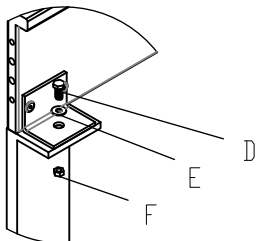




3.

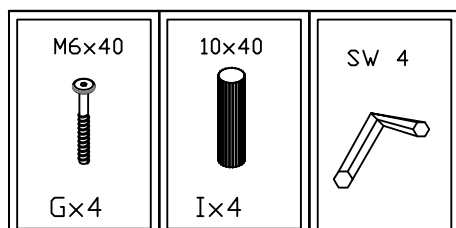
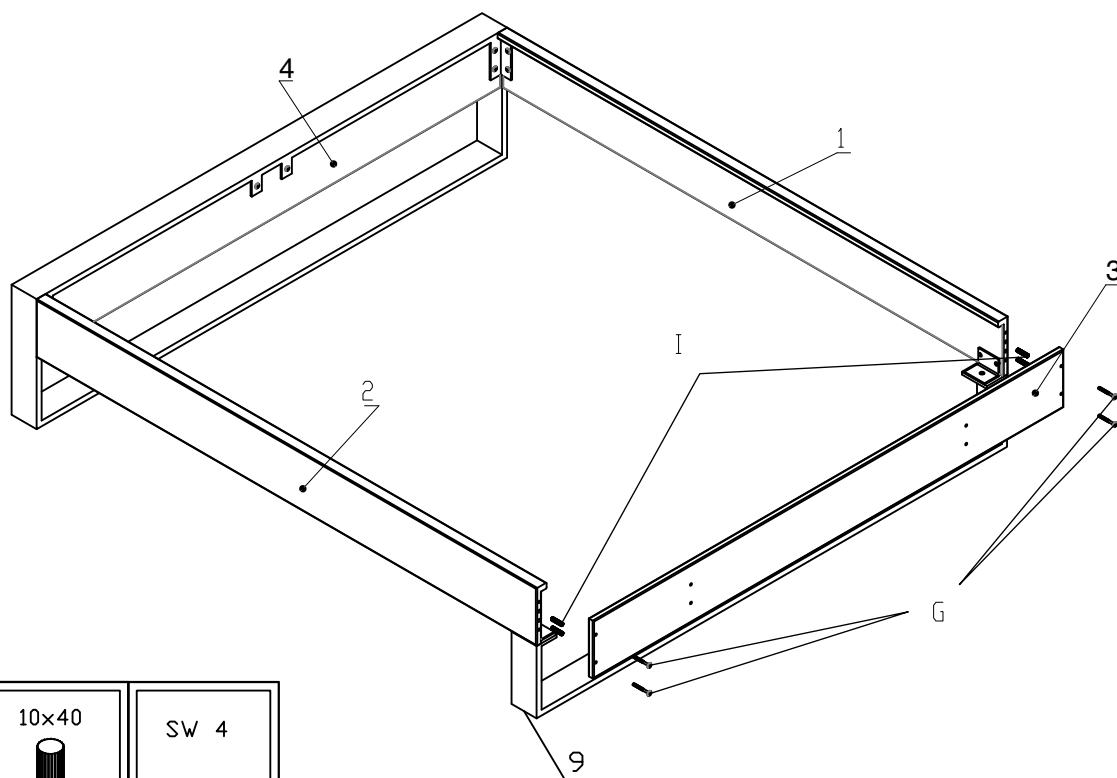


4.




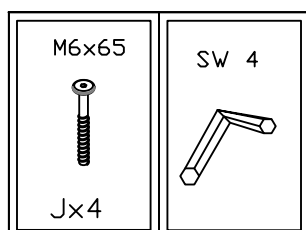
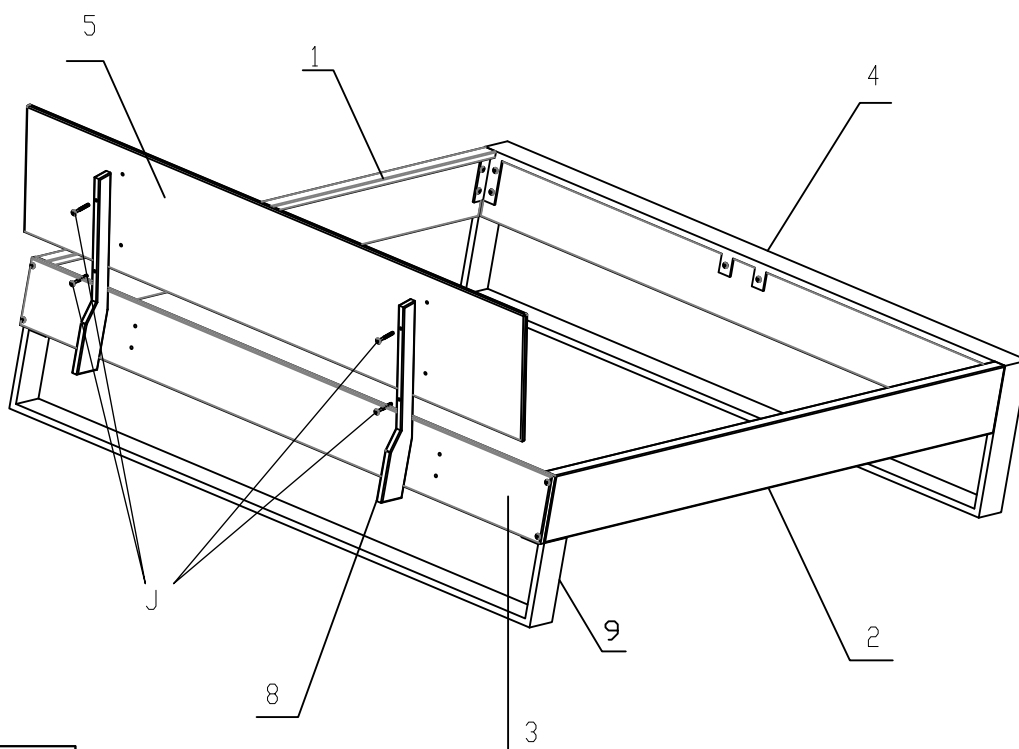





5.

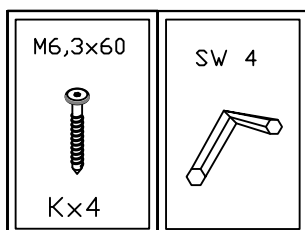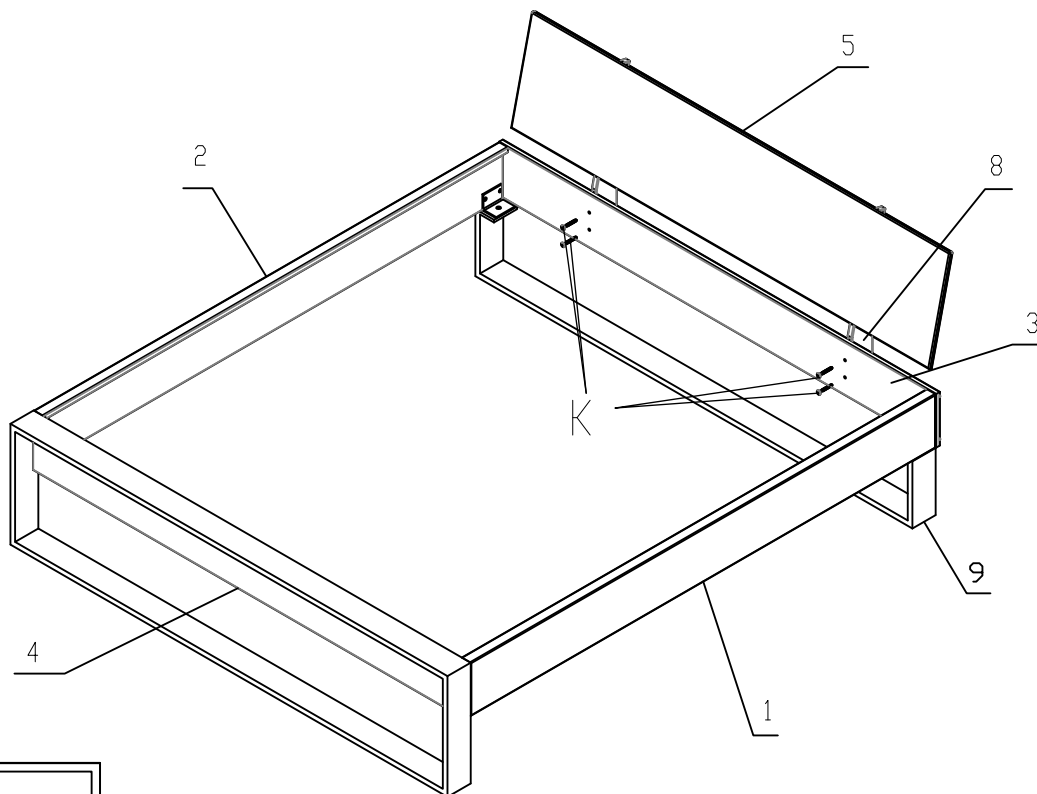

6.

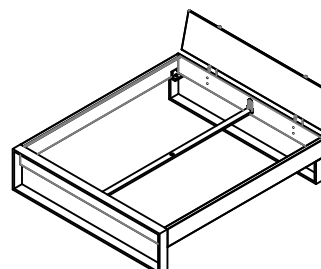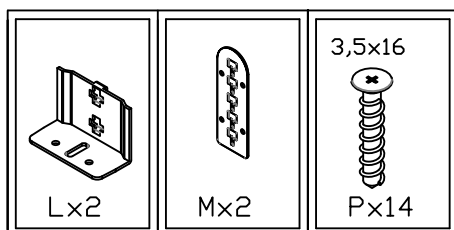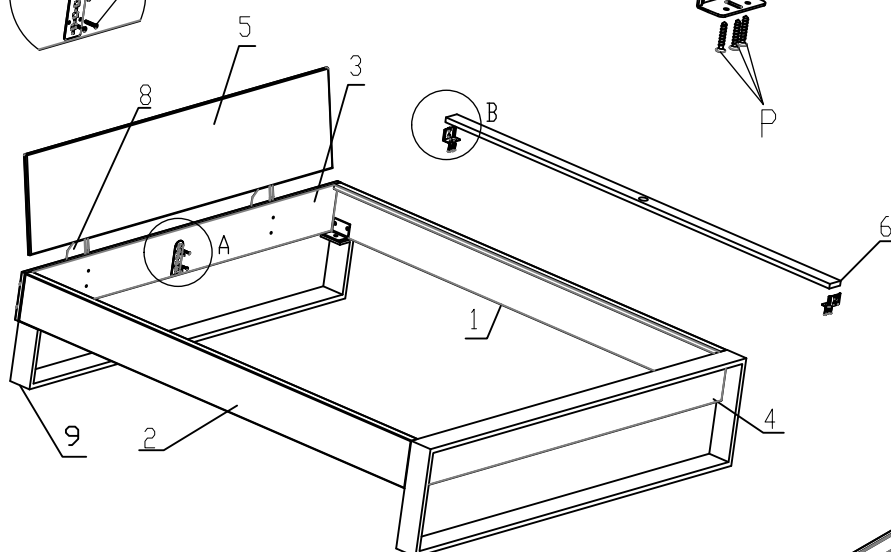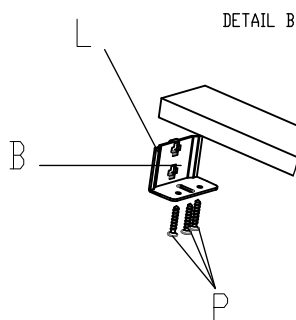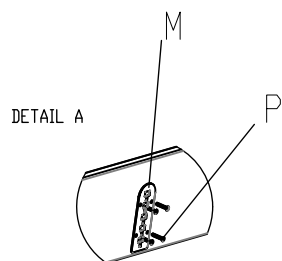

7,

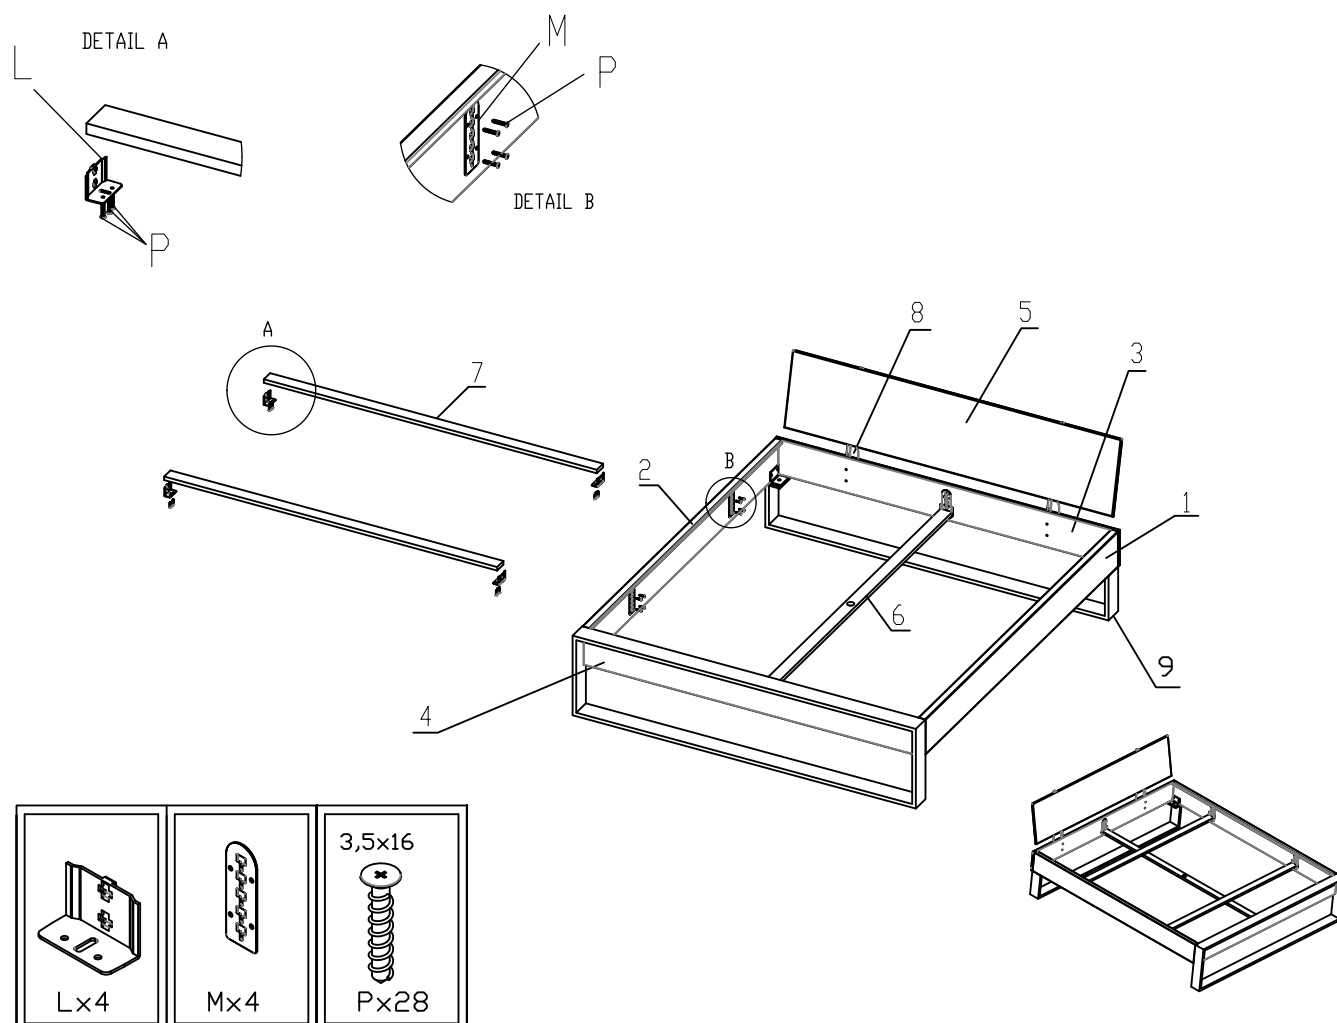

8,

