
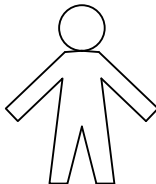


1.



M0861_02

rauch






Typ I

Typ II

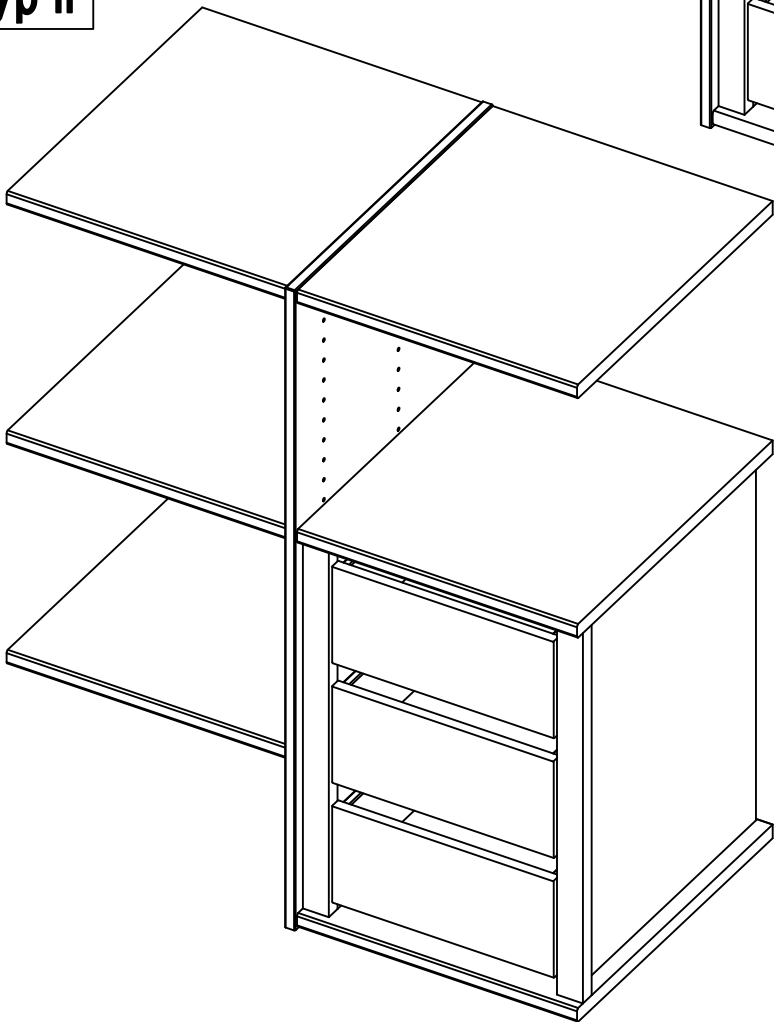
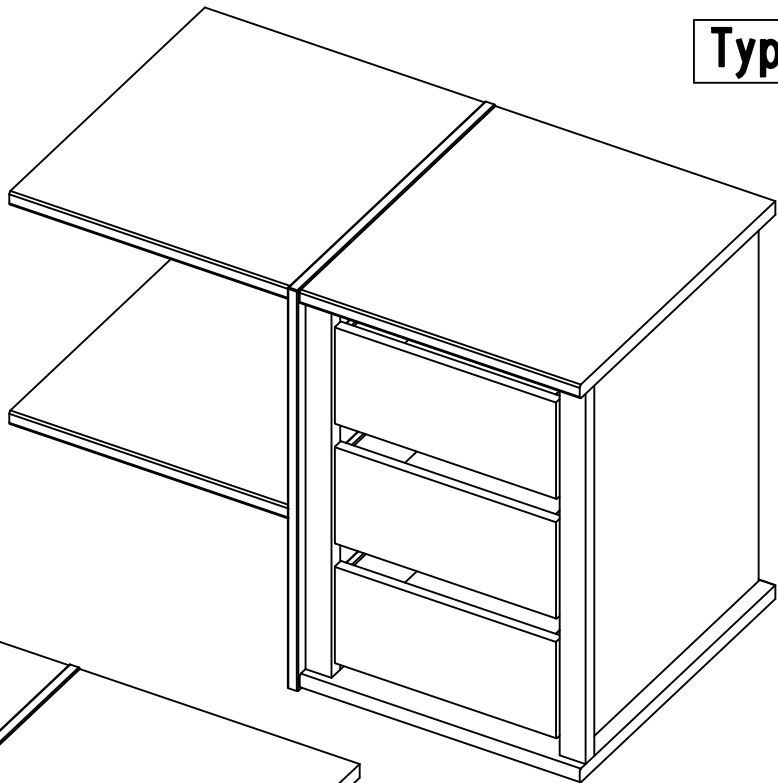


2.

Typ I

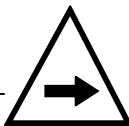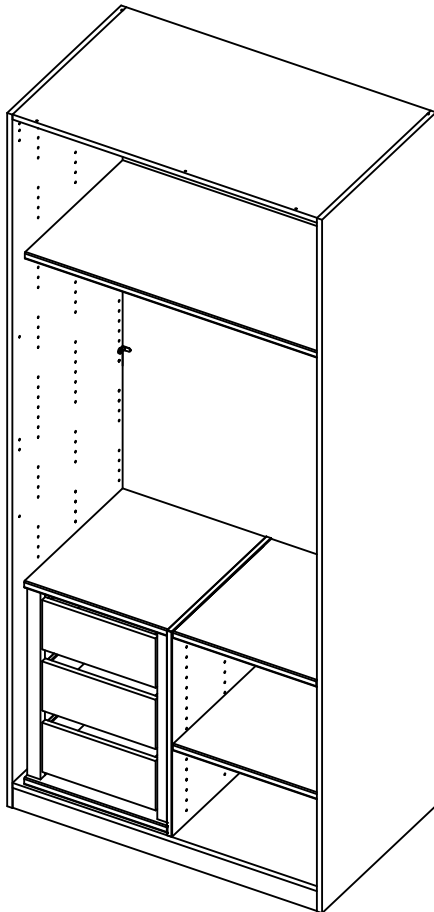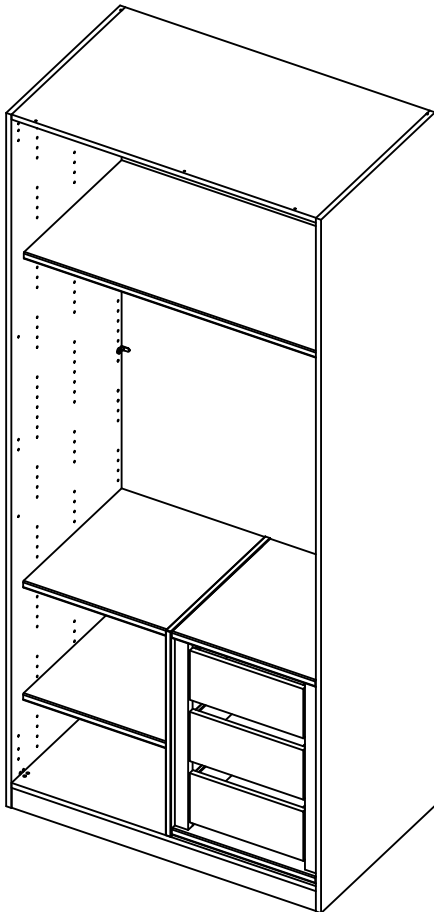


Typ II

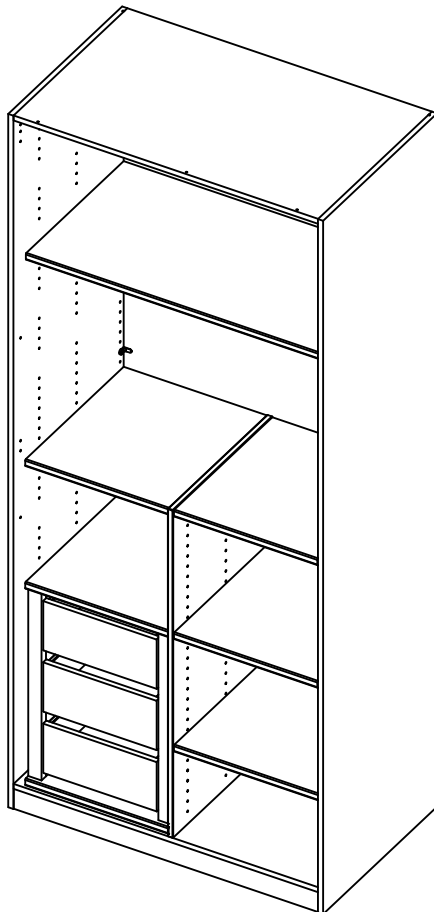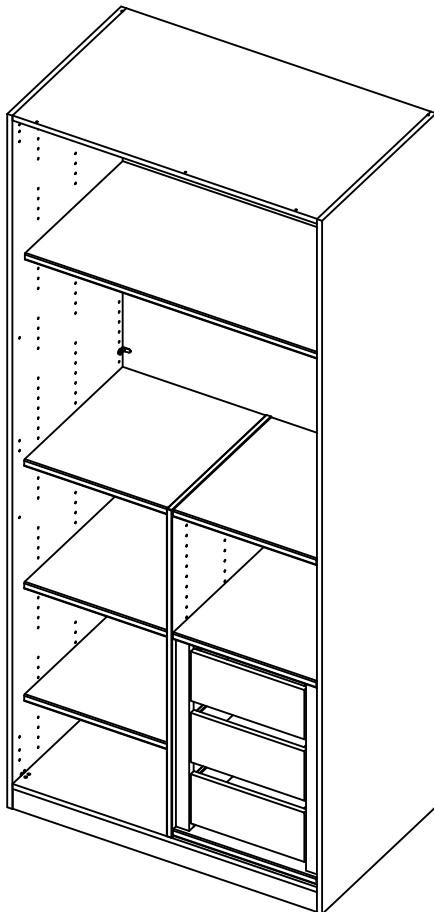


3.

Typ I

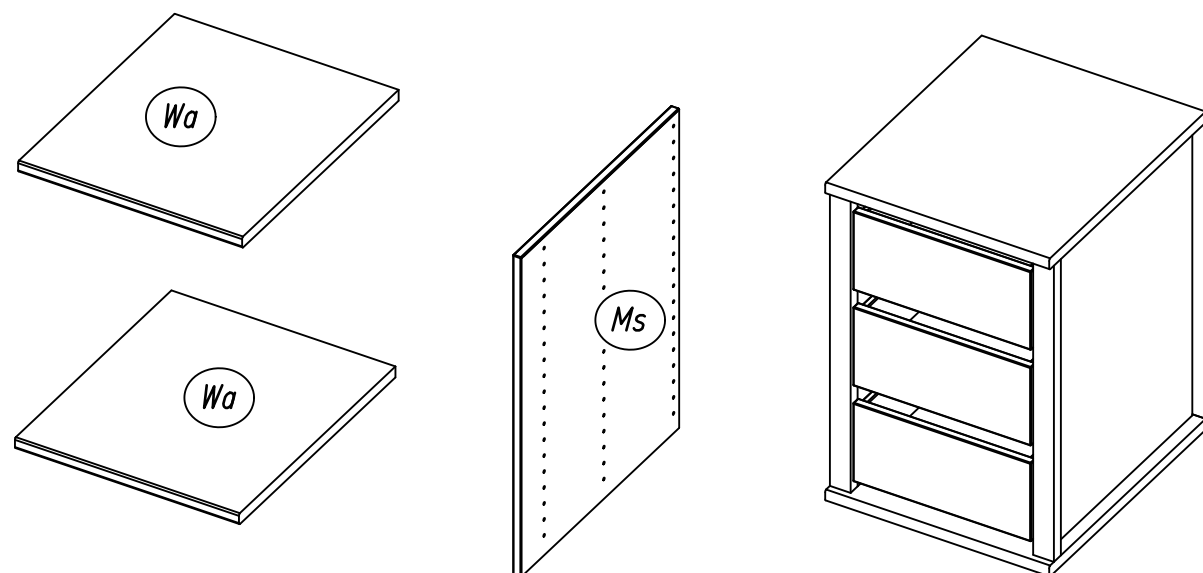

Typ II

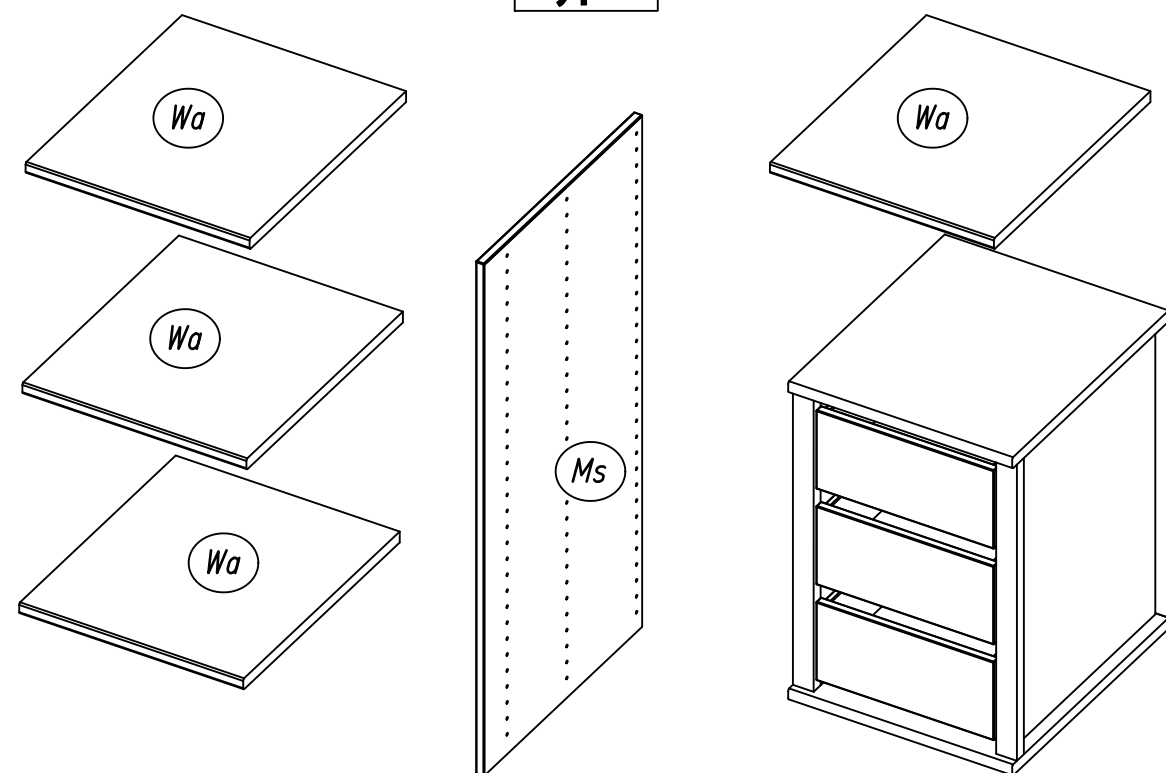


M0861

4.



1089




Kn



1


Kn



Typ I

Typ II



1.

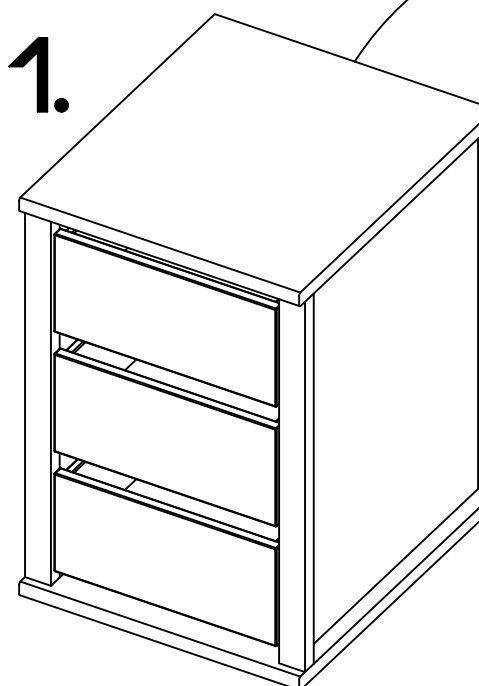

2.

4x


Kn

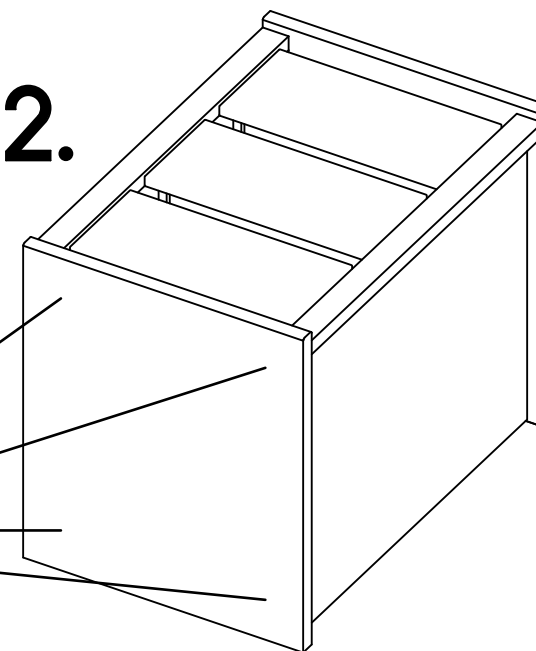

M0861

5.

2


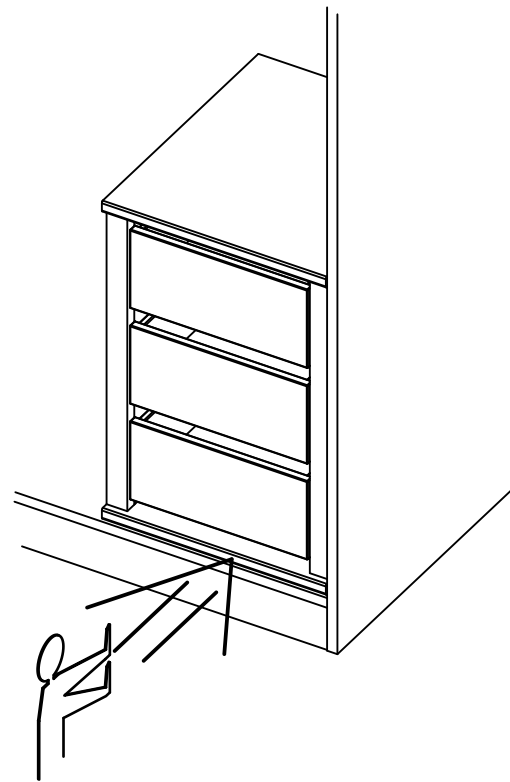


Typ I

Typ II

3

1089

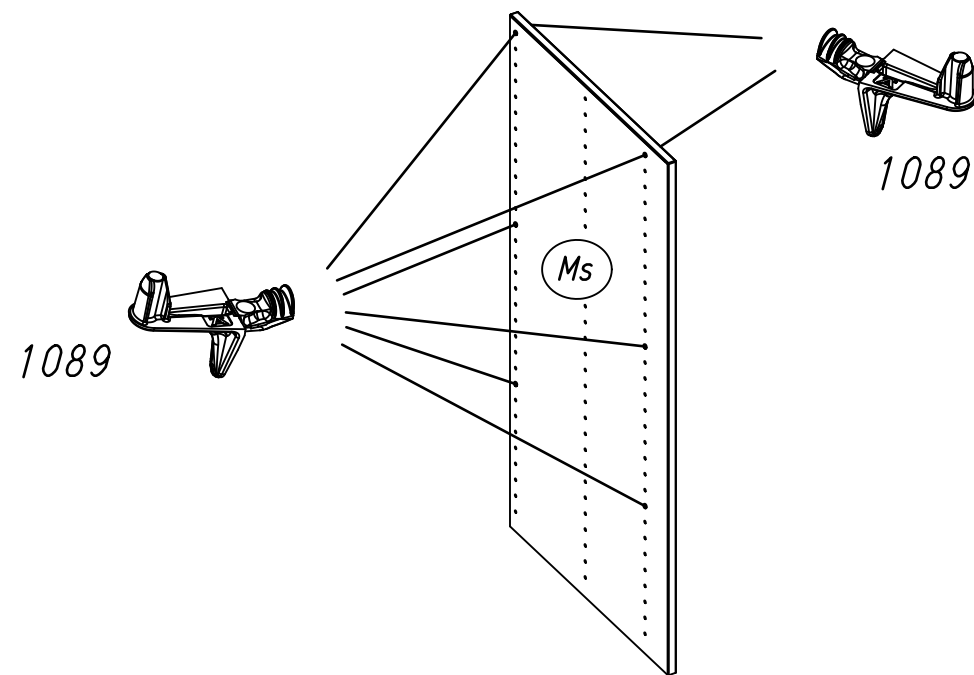


Typ I

Typ II

M0861

6.

4

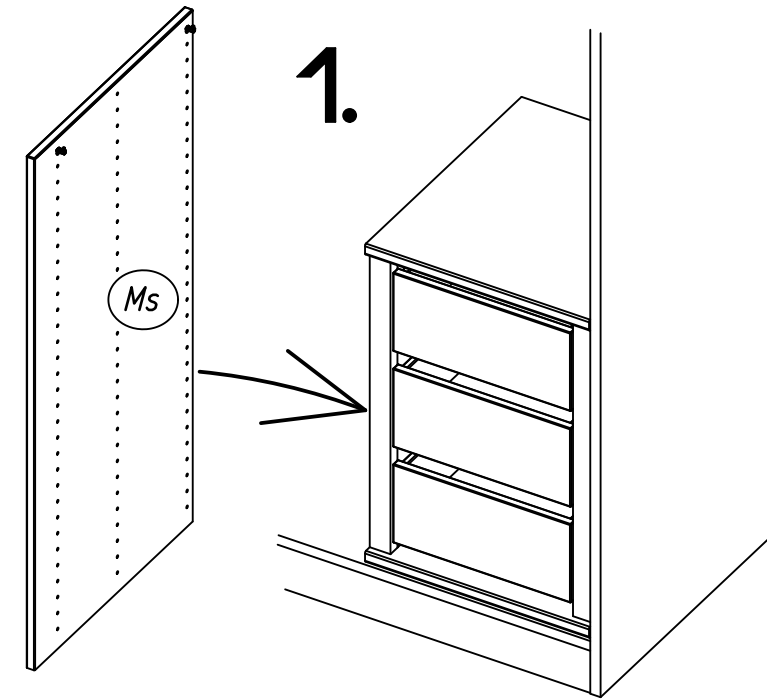


1.

Typ I

Typ II

2.

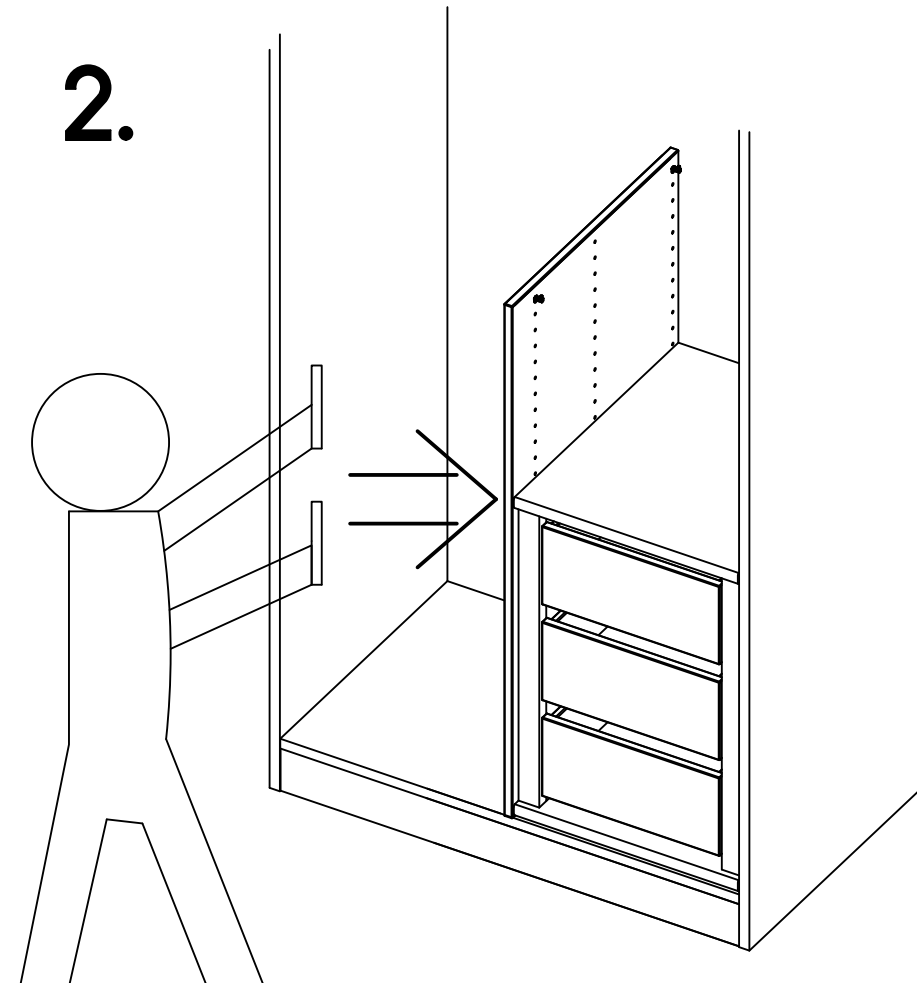


M0861

7.


5

1089



Typ I

Typ II

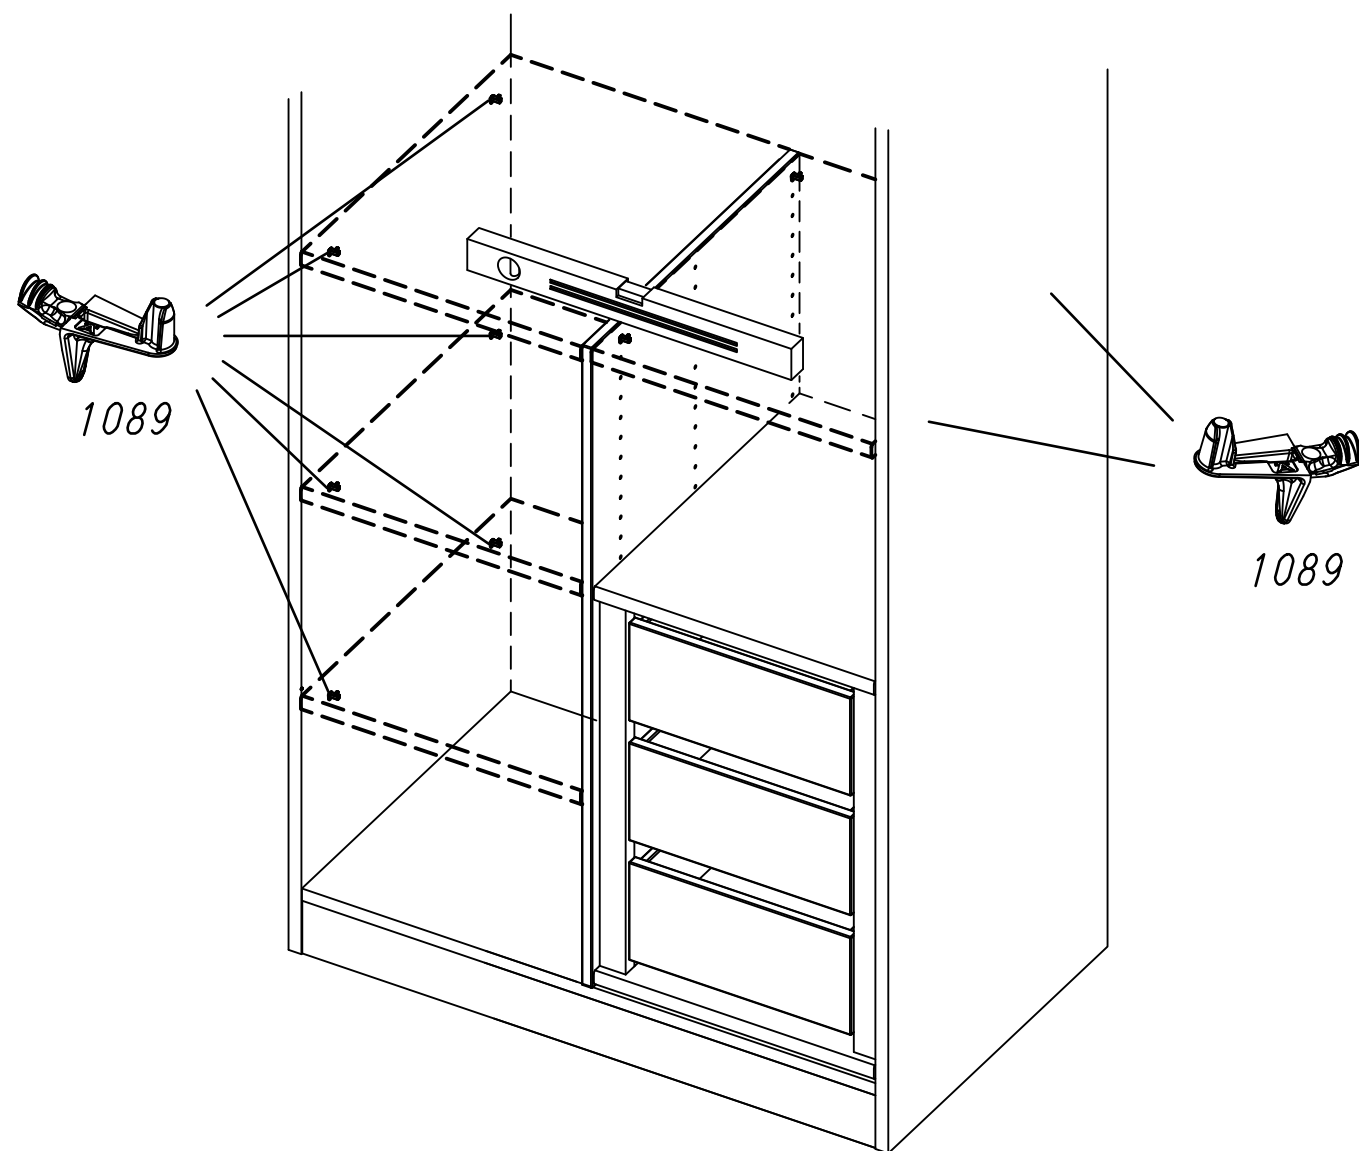


M0861

8.

6

Typ I



Typ II

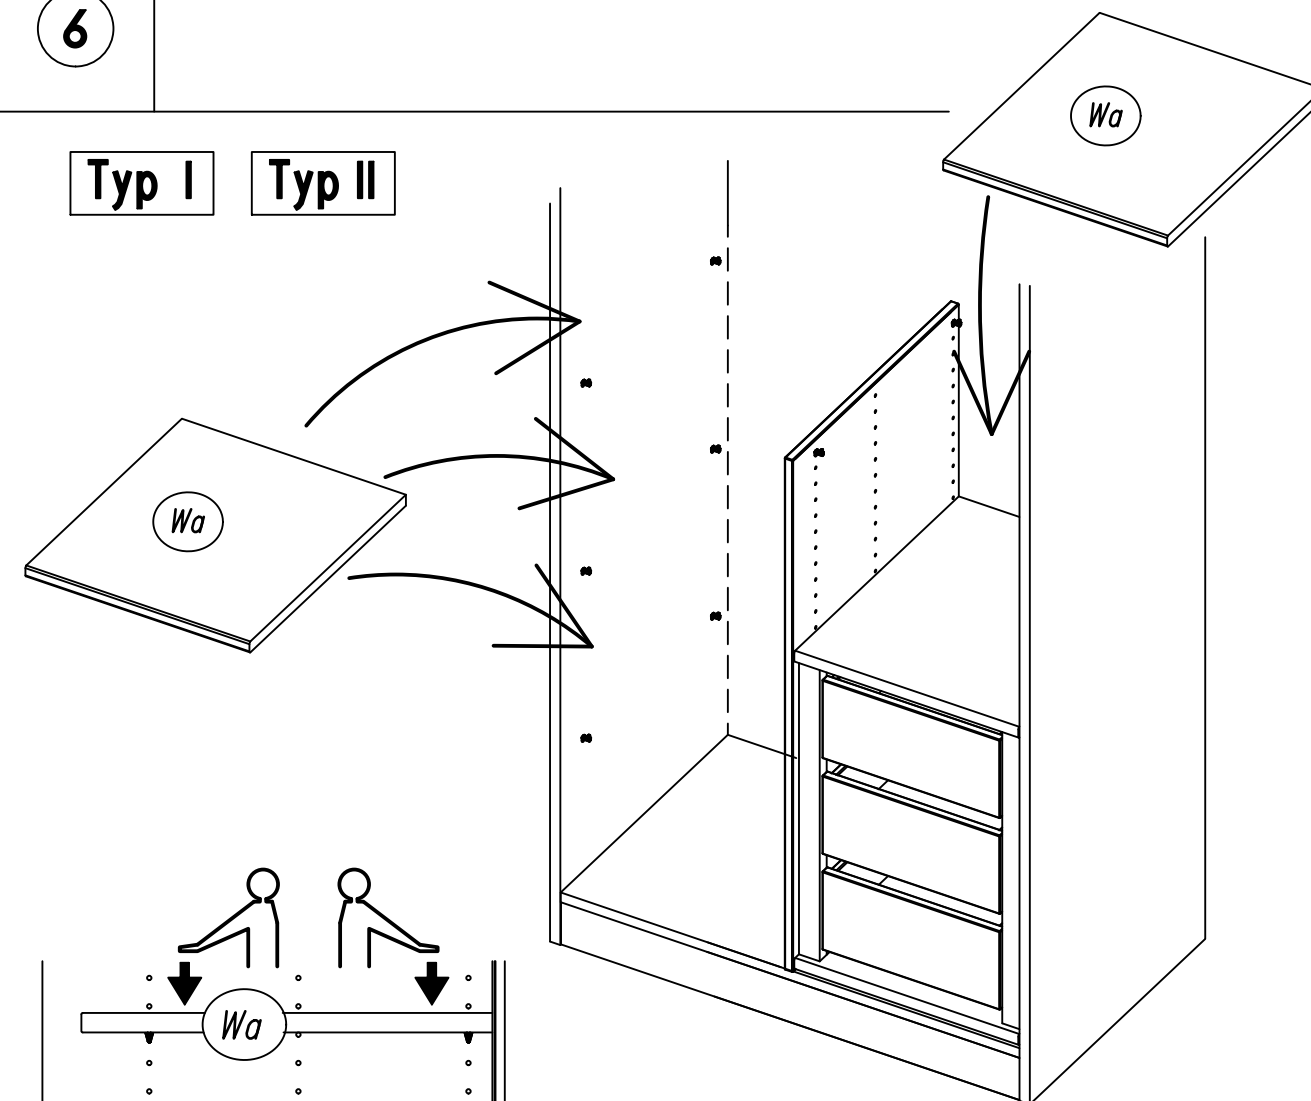

7

Typ I

Typ II


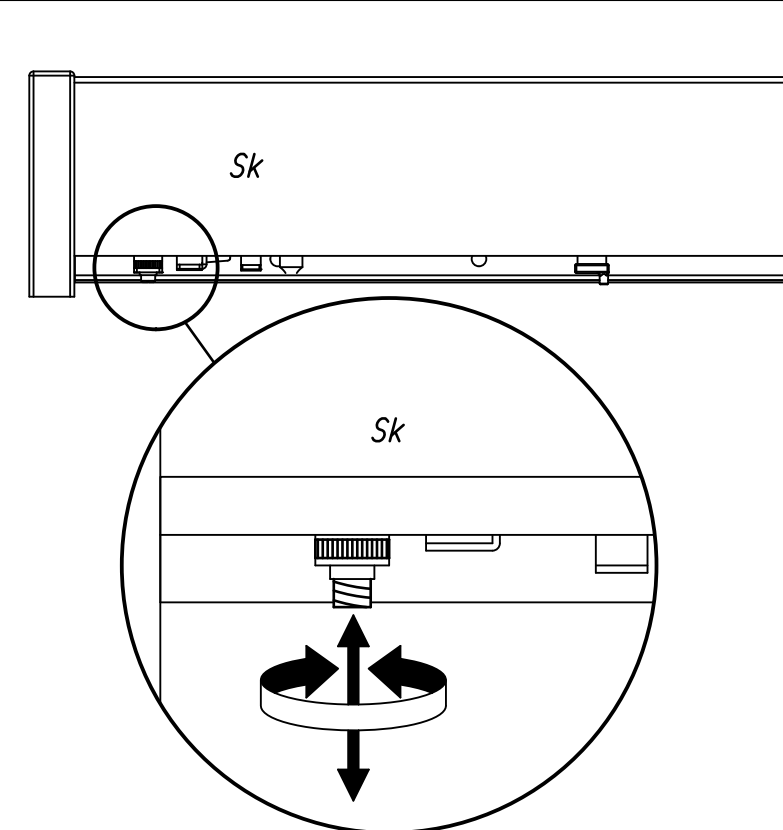
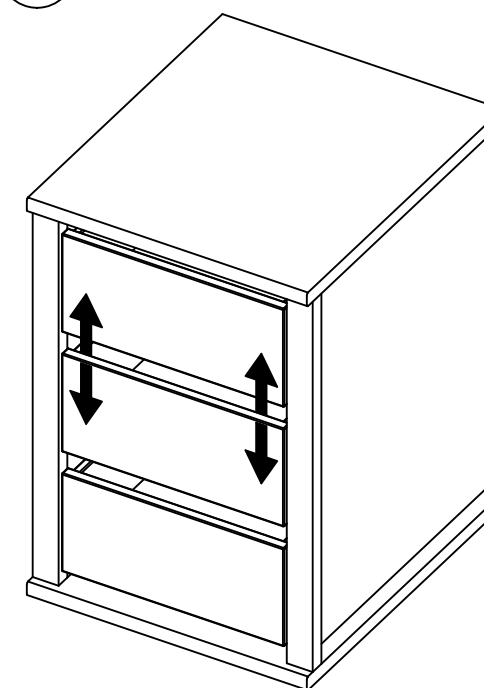


M0861

1.









MD106_03

rauch

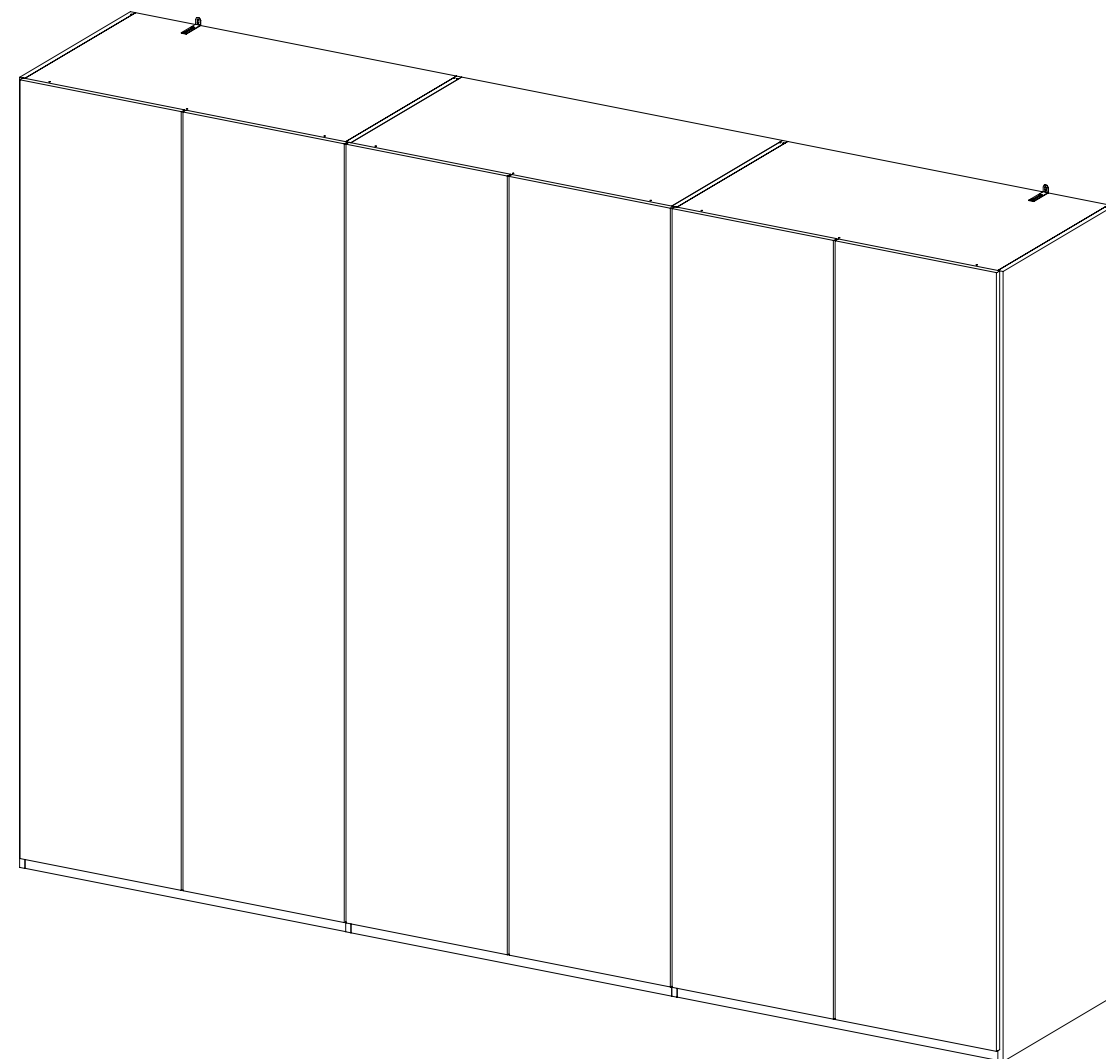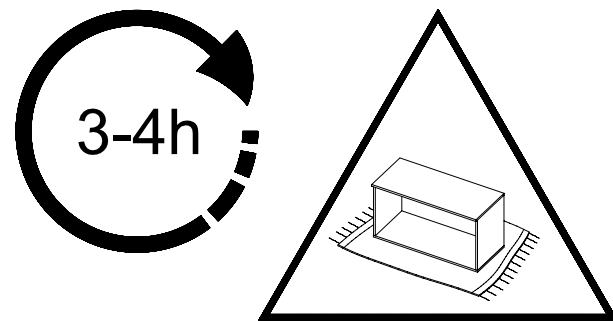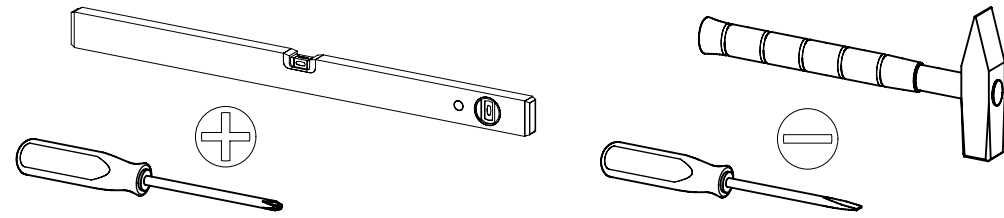







MD106

2.

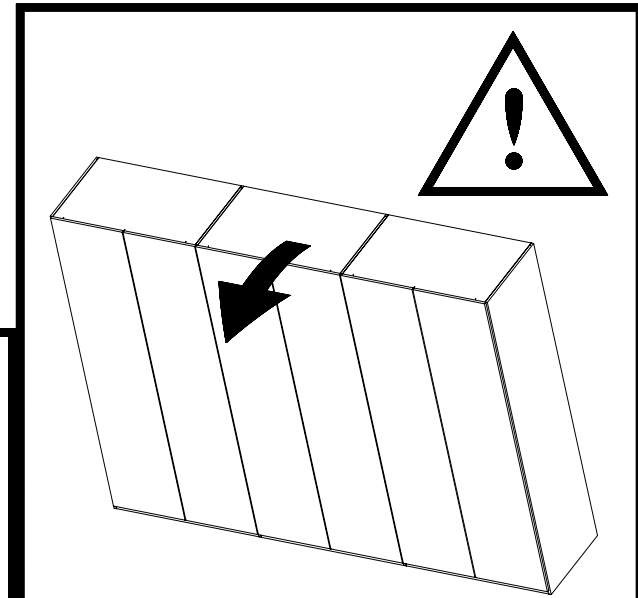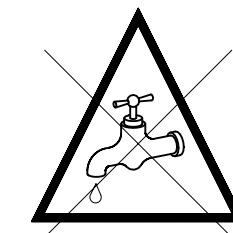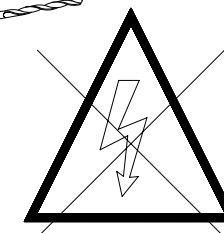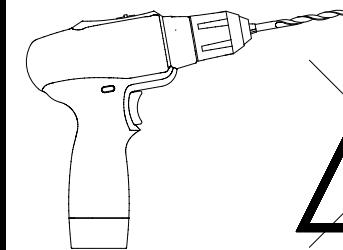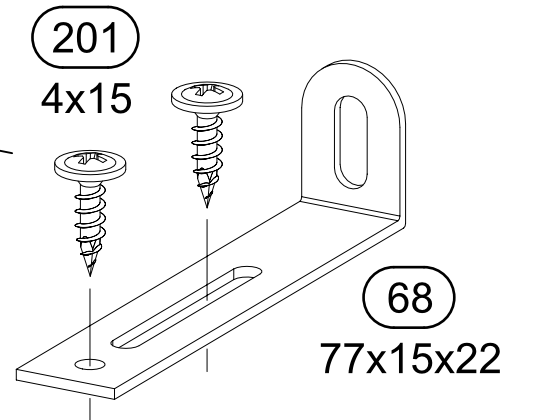
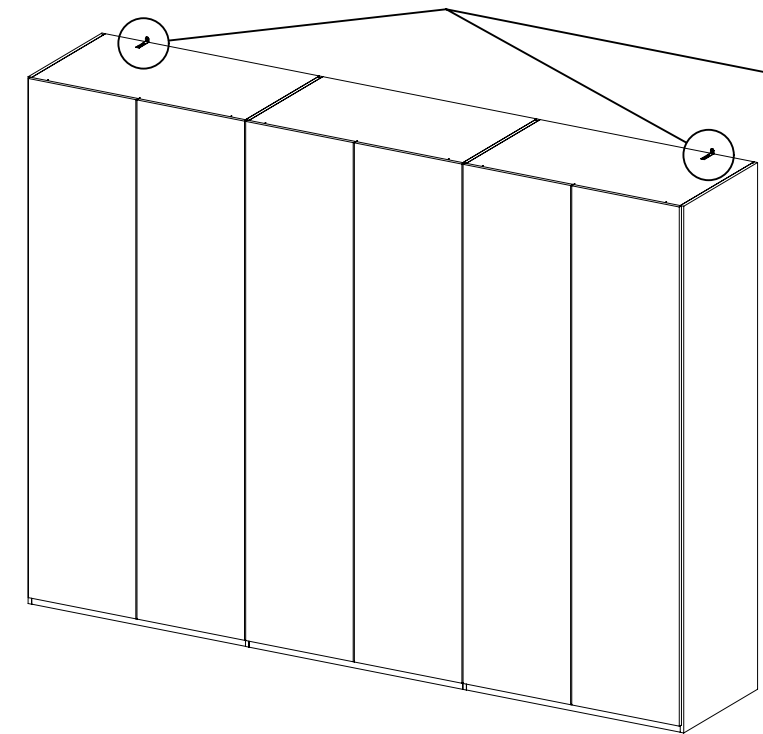














?



ØXmm

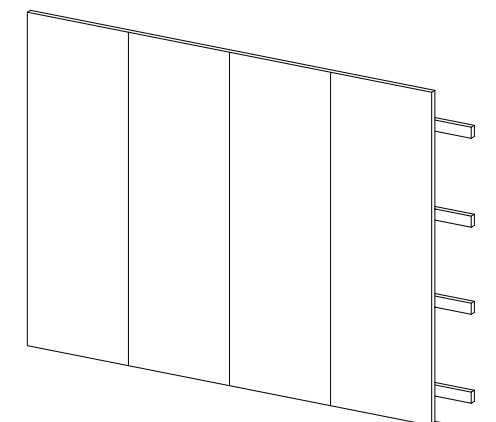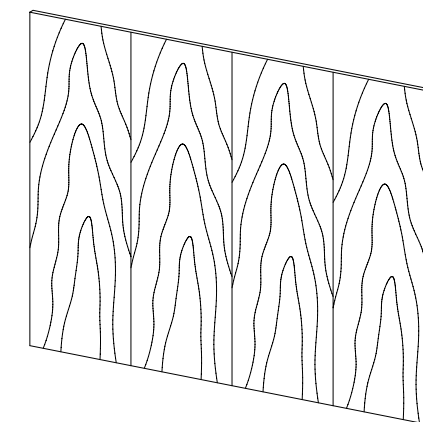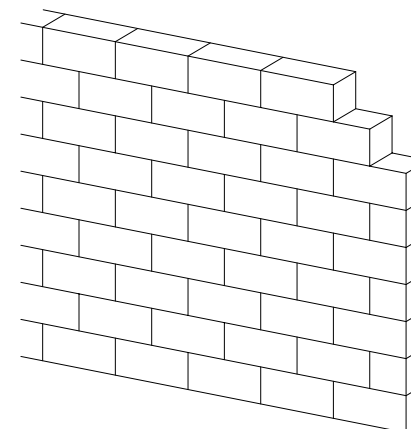


MD106

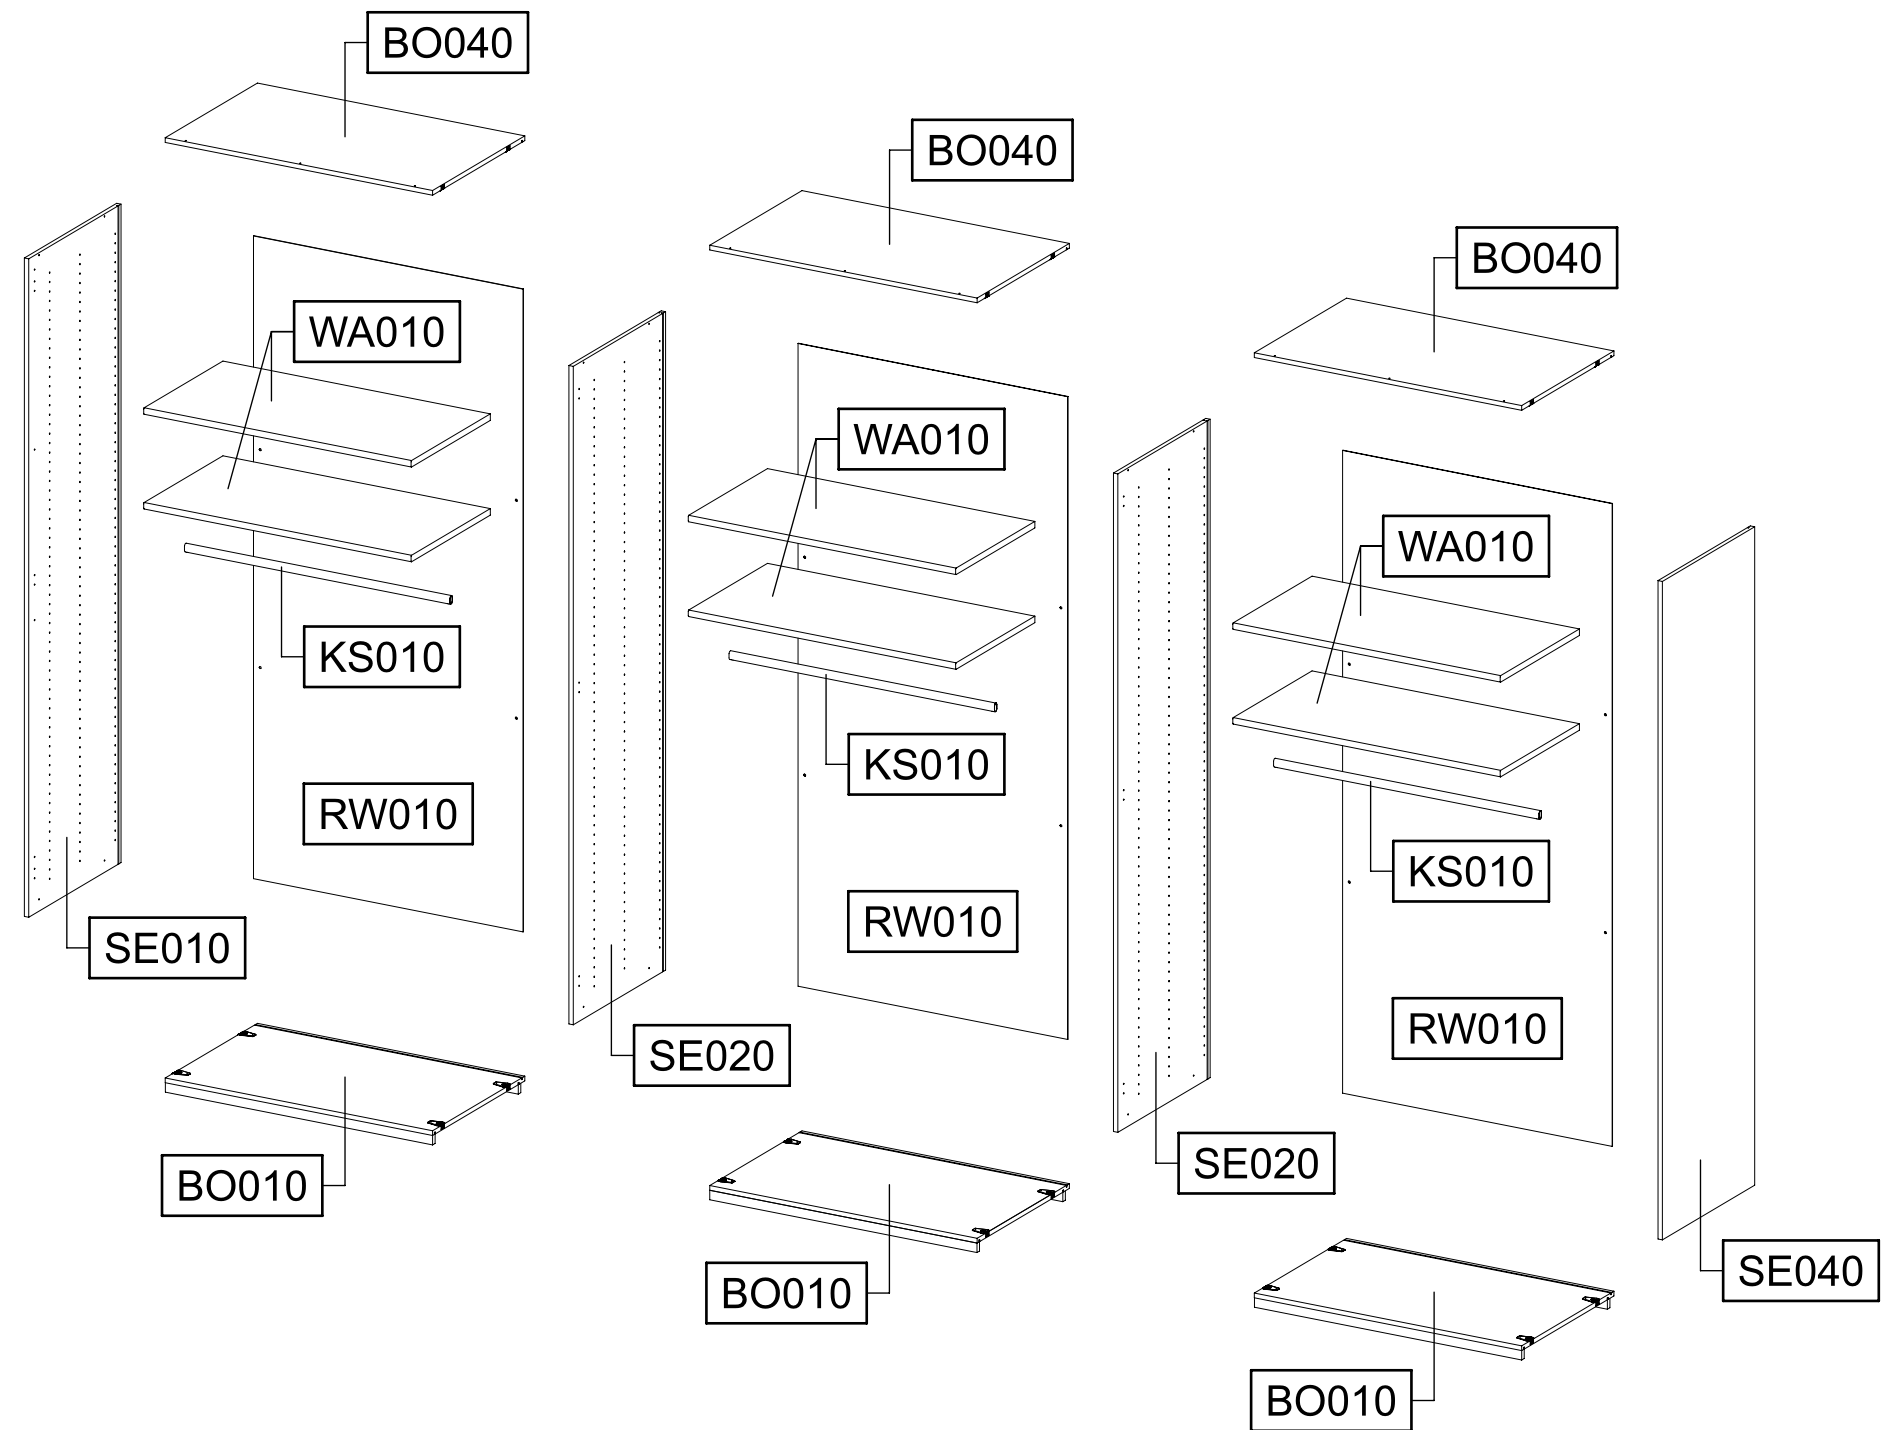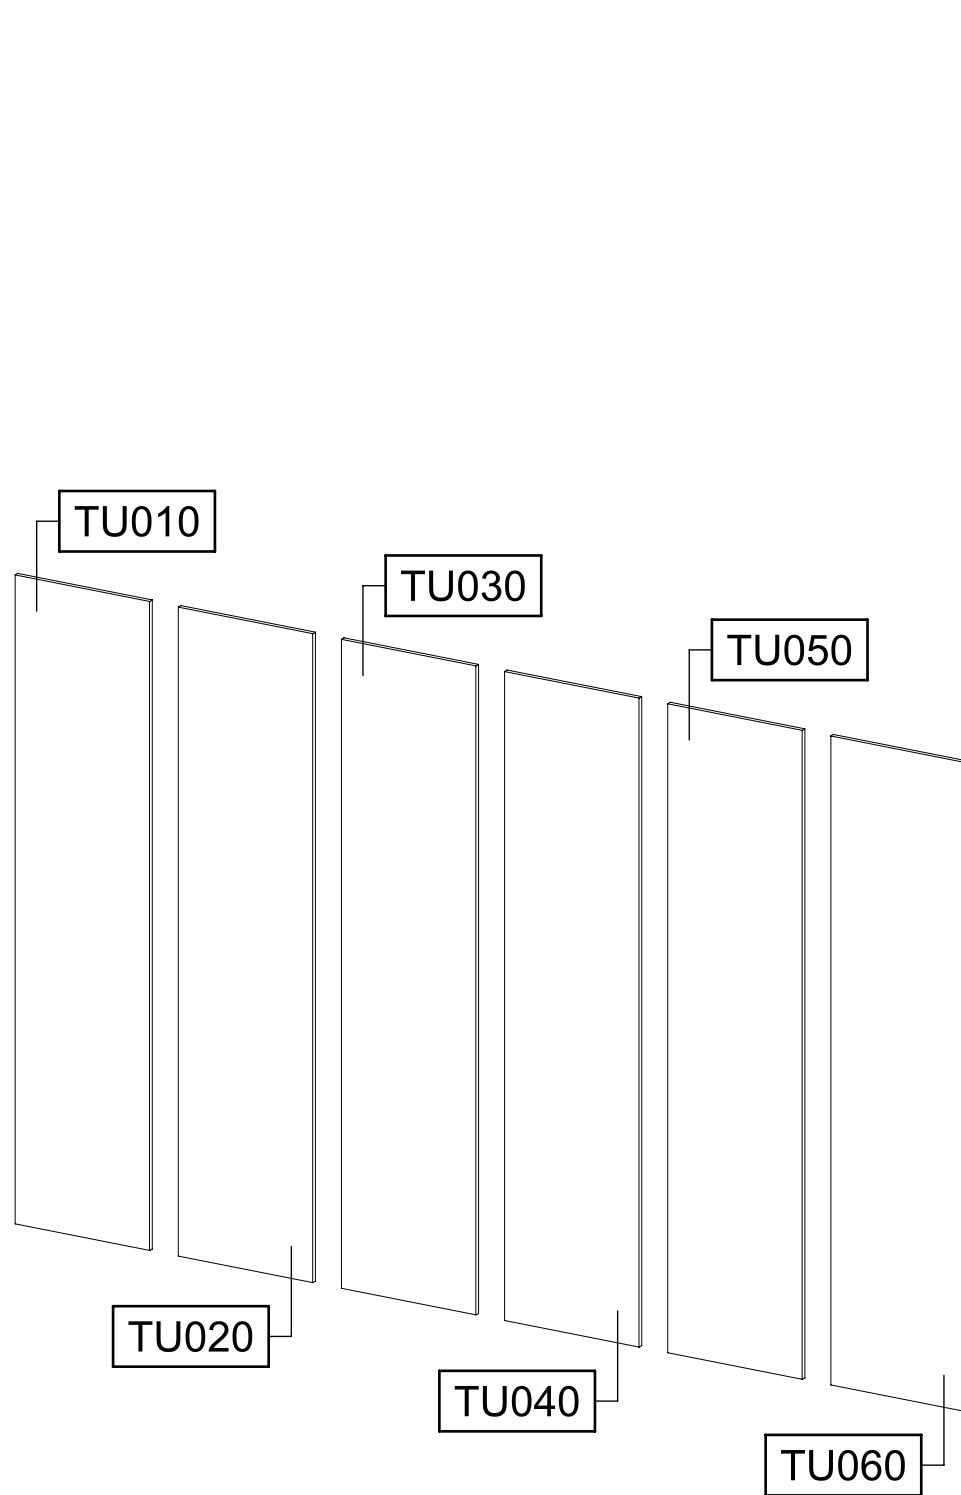

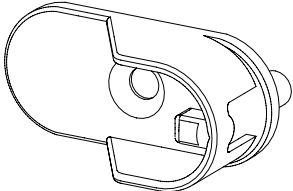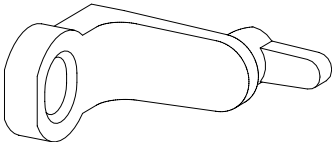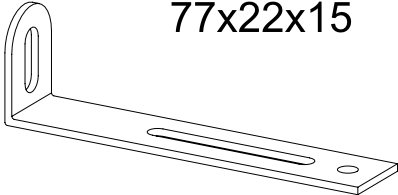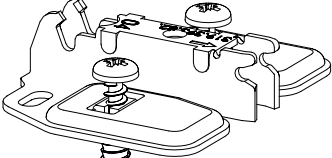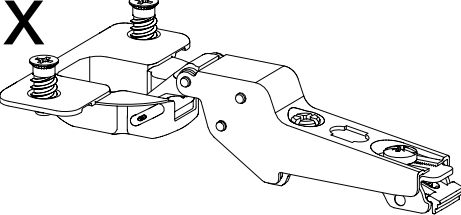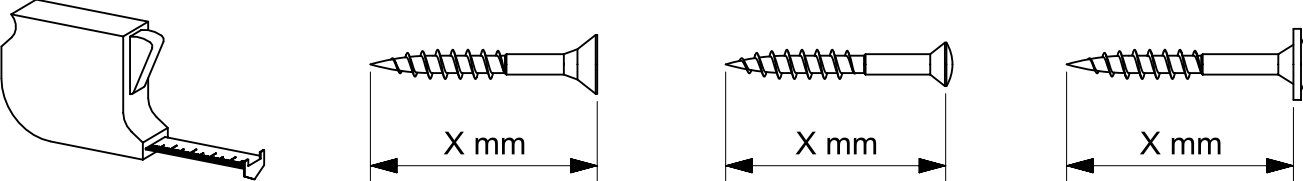
8x 55x16x6,2 12 	6x 29 
12x 47 	2x 77x22x15 68 
4x 4x15 201 	6x 3,5x15 205 
36-48x 4x13 621 	12x 6,5x12 779 
8x 1085 	8x 1086 
24x 1089 	18-24x 1291 
18-24x 1292 	
	


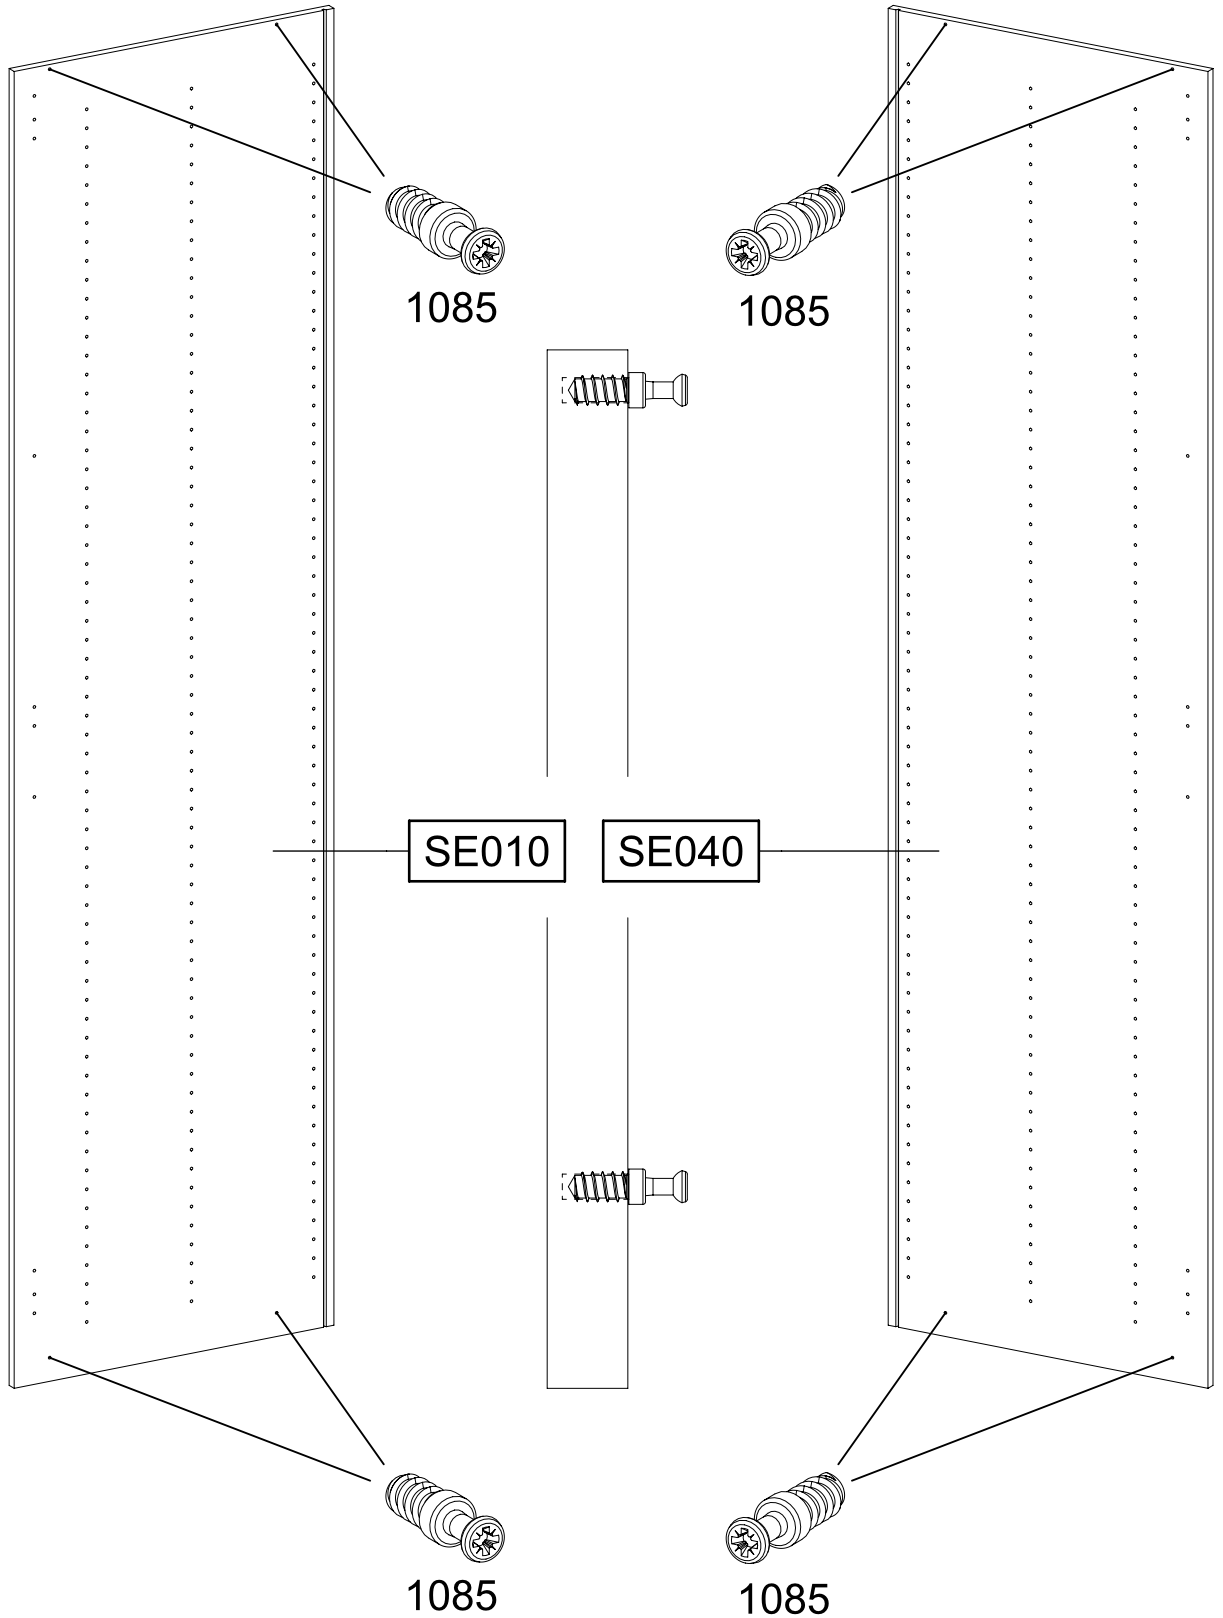
1	8x 1085 	
		



7.


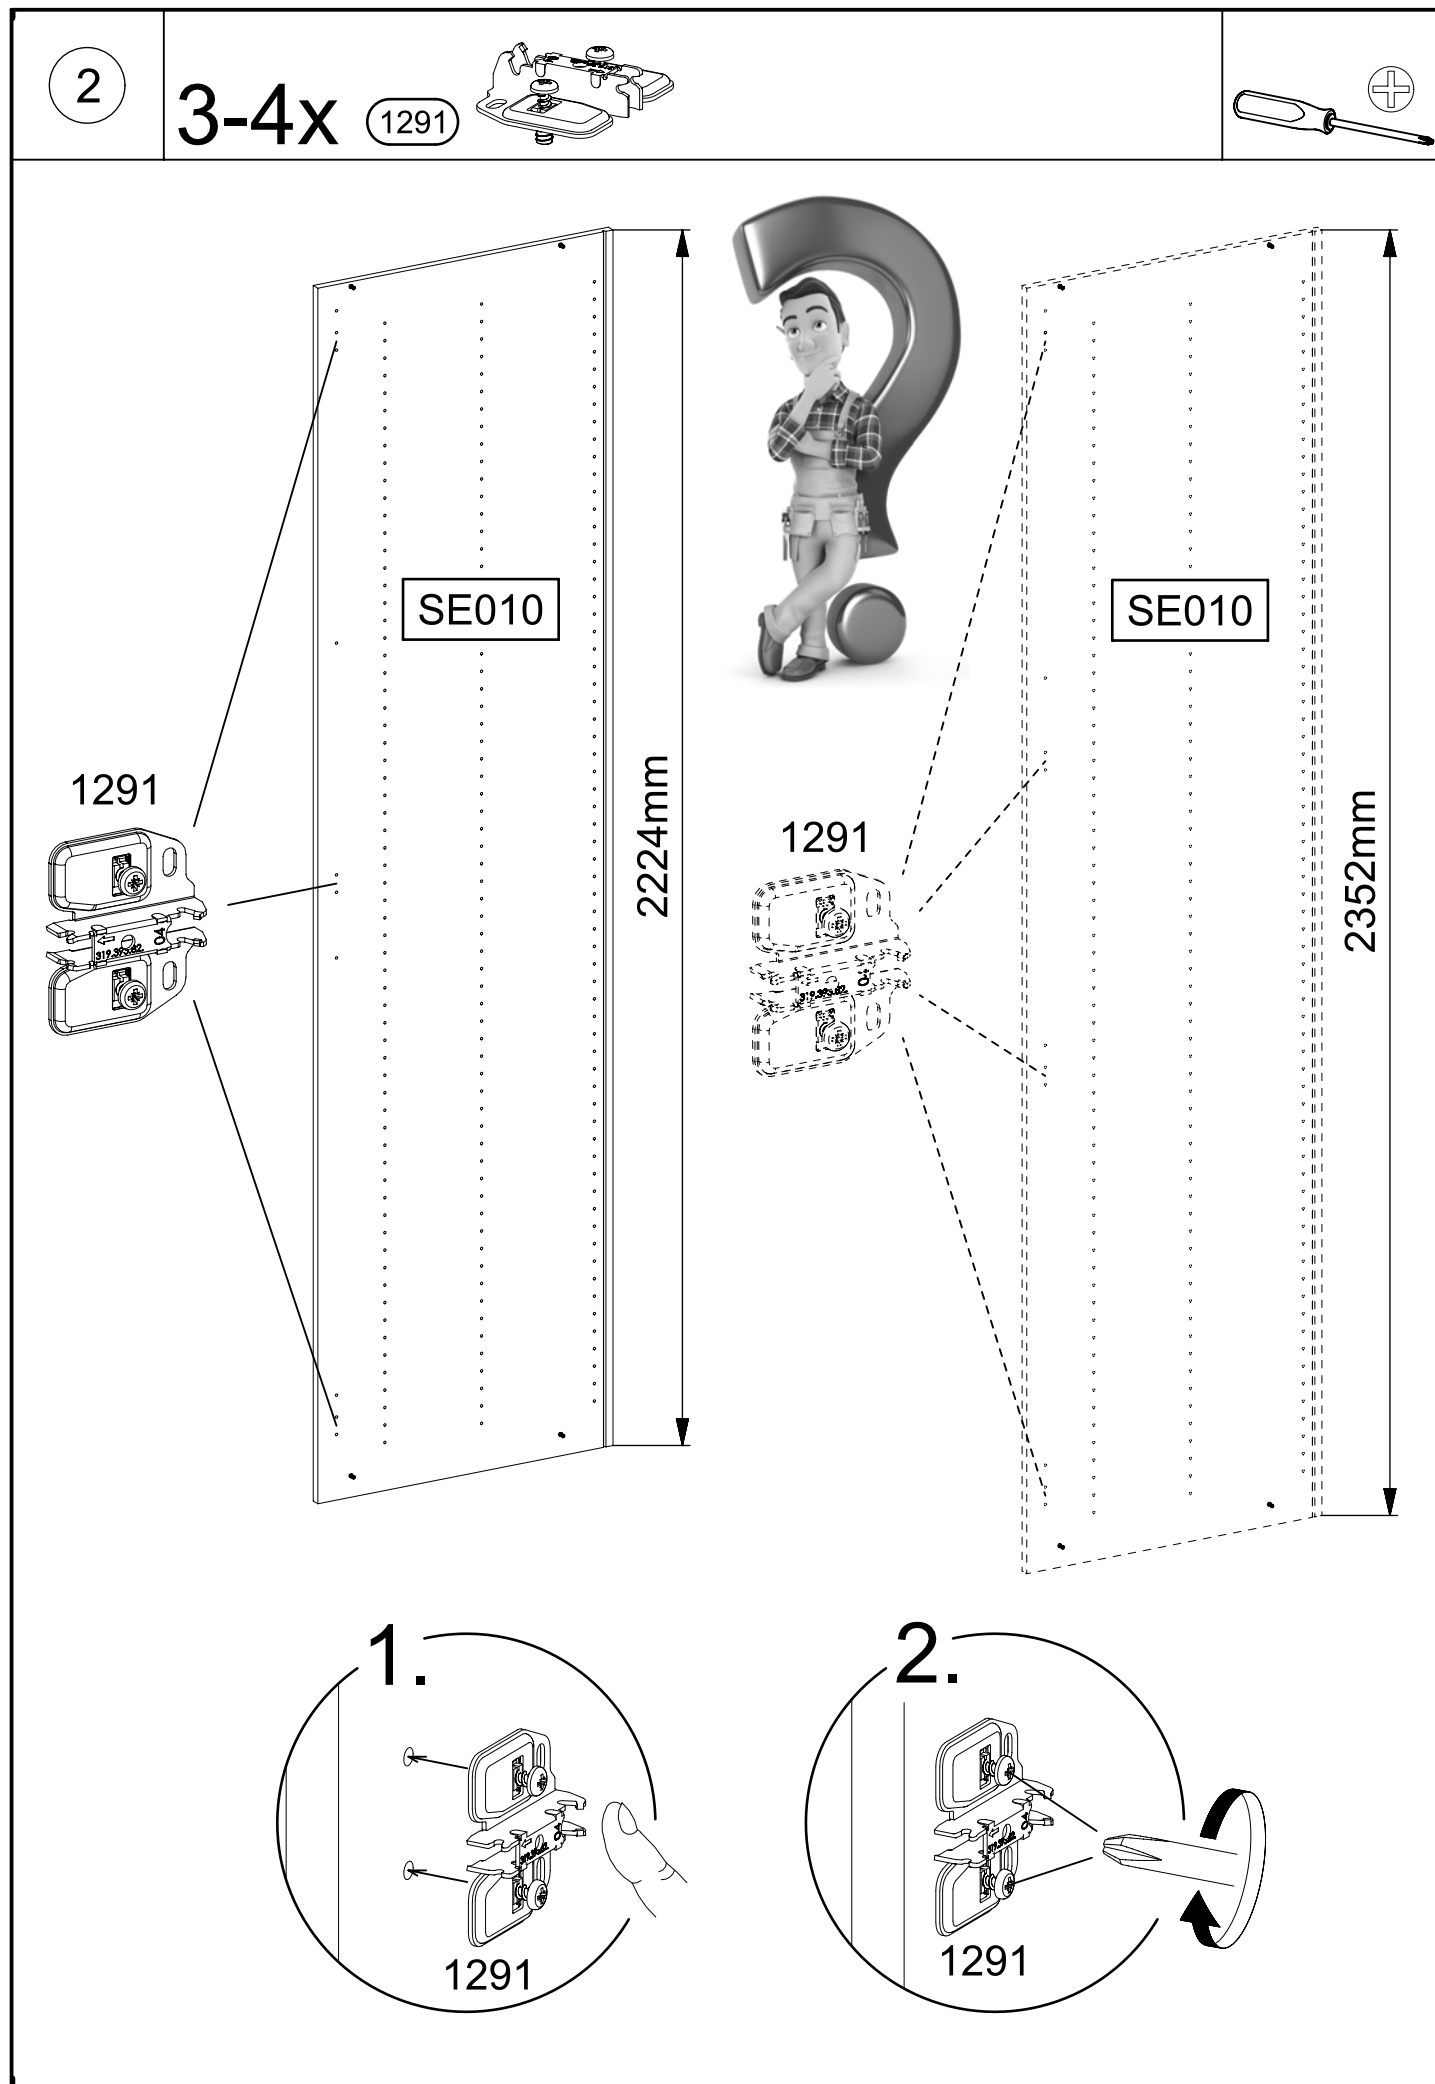


8.

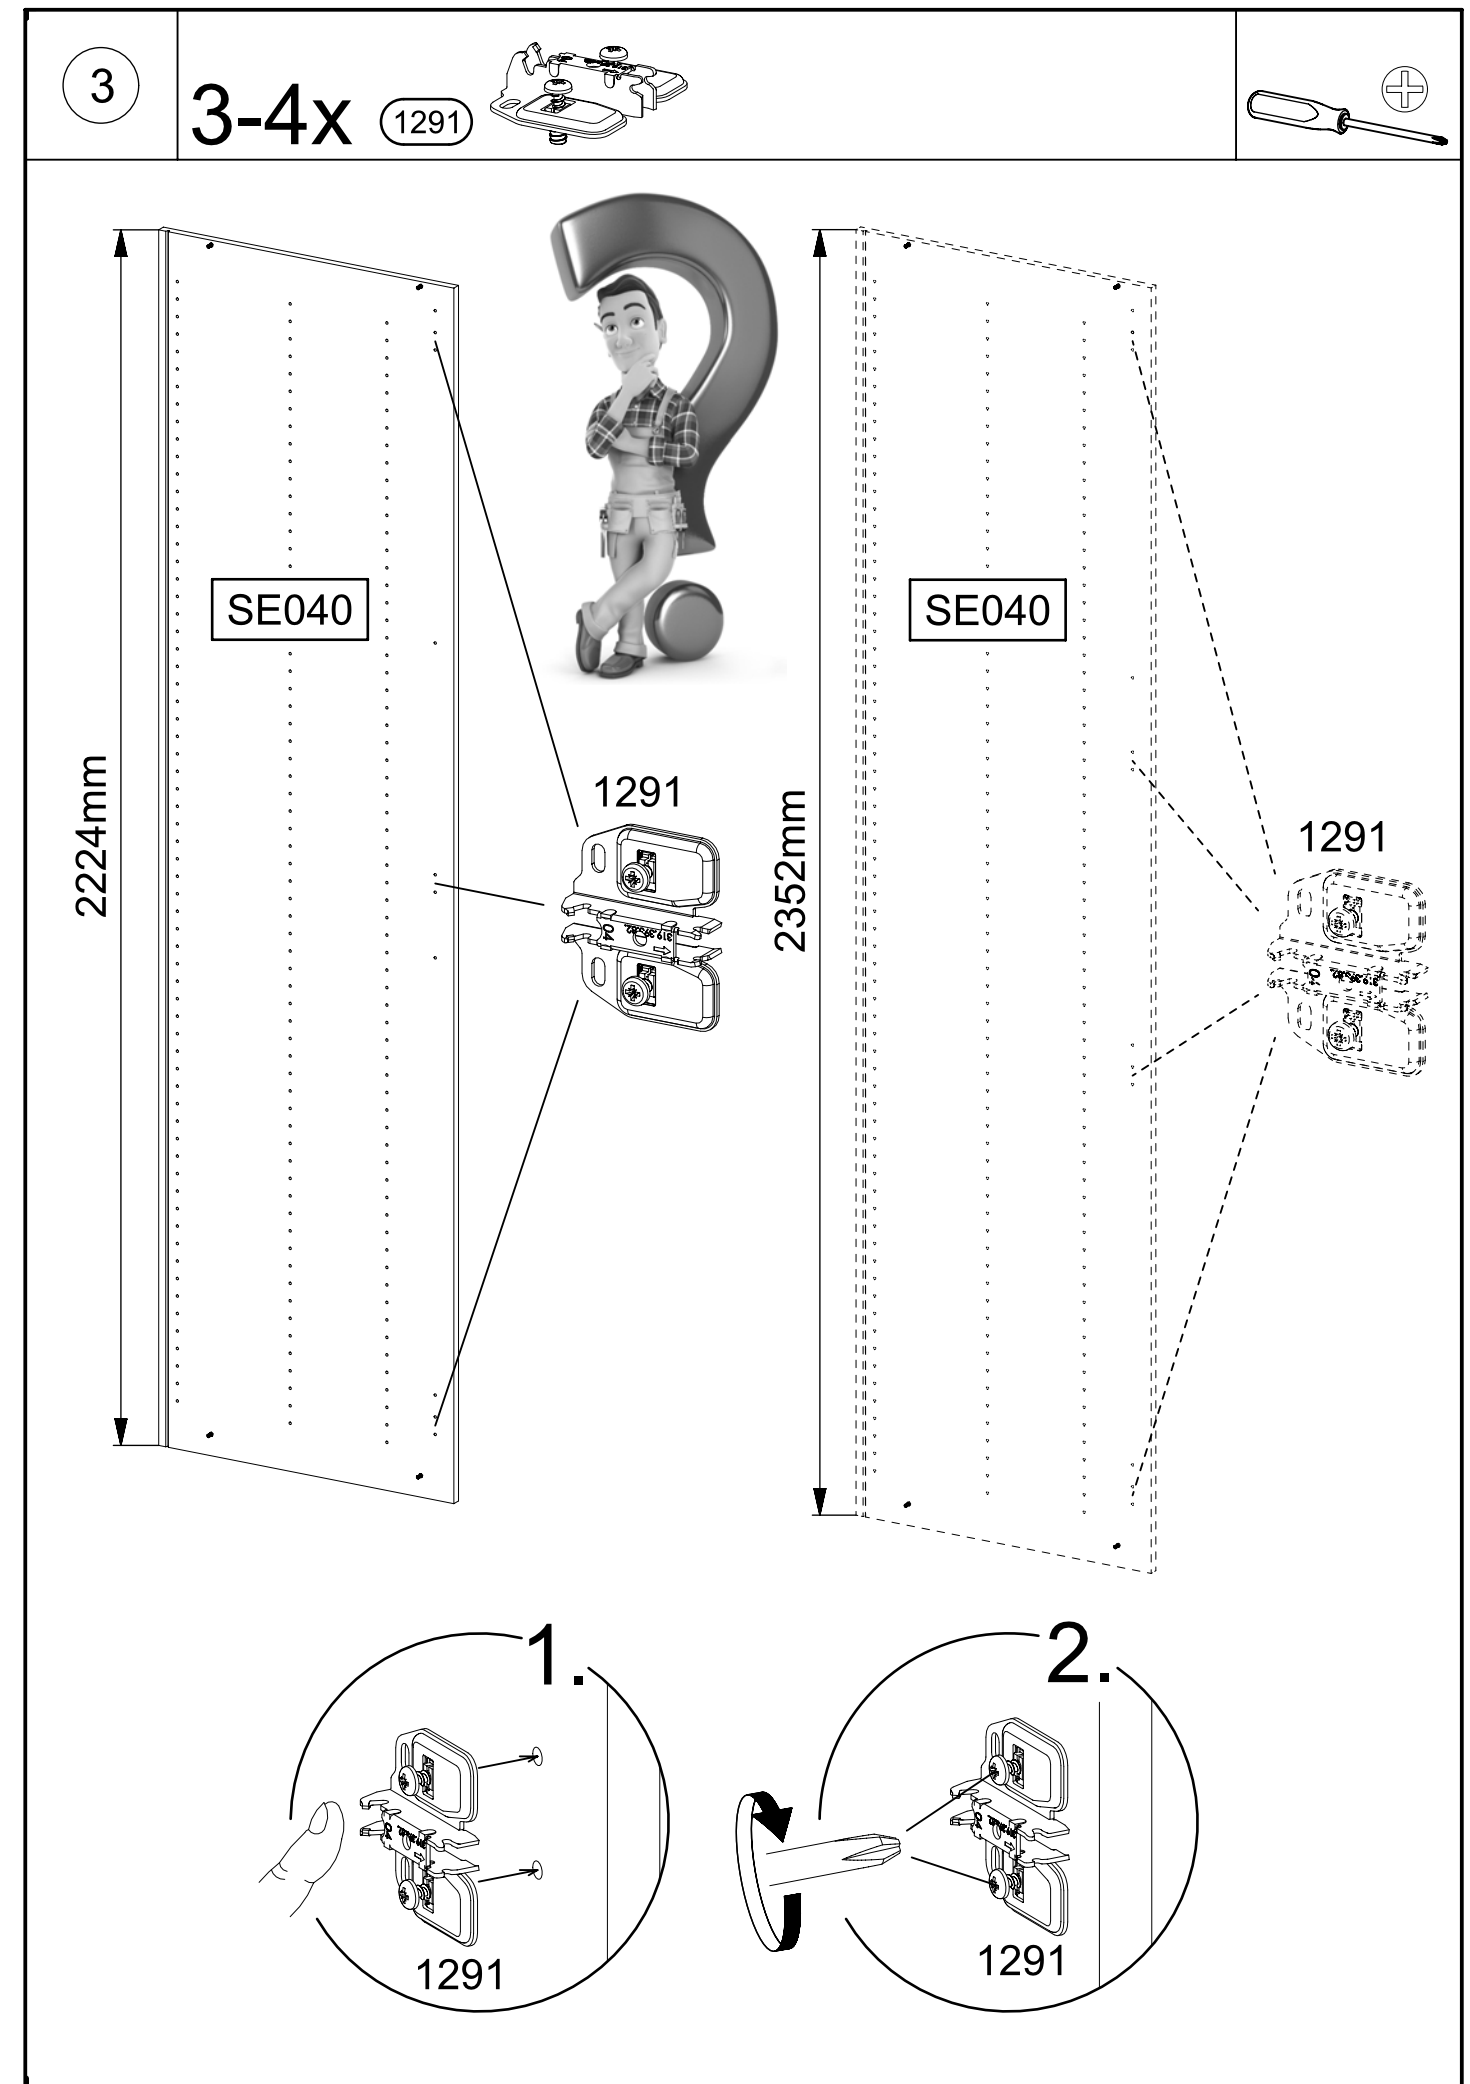


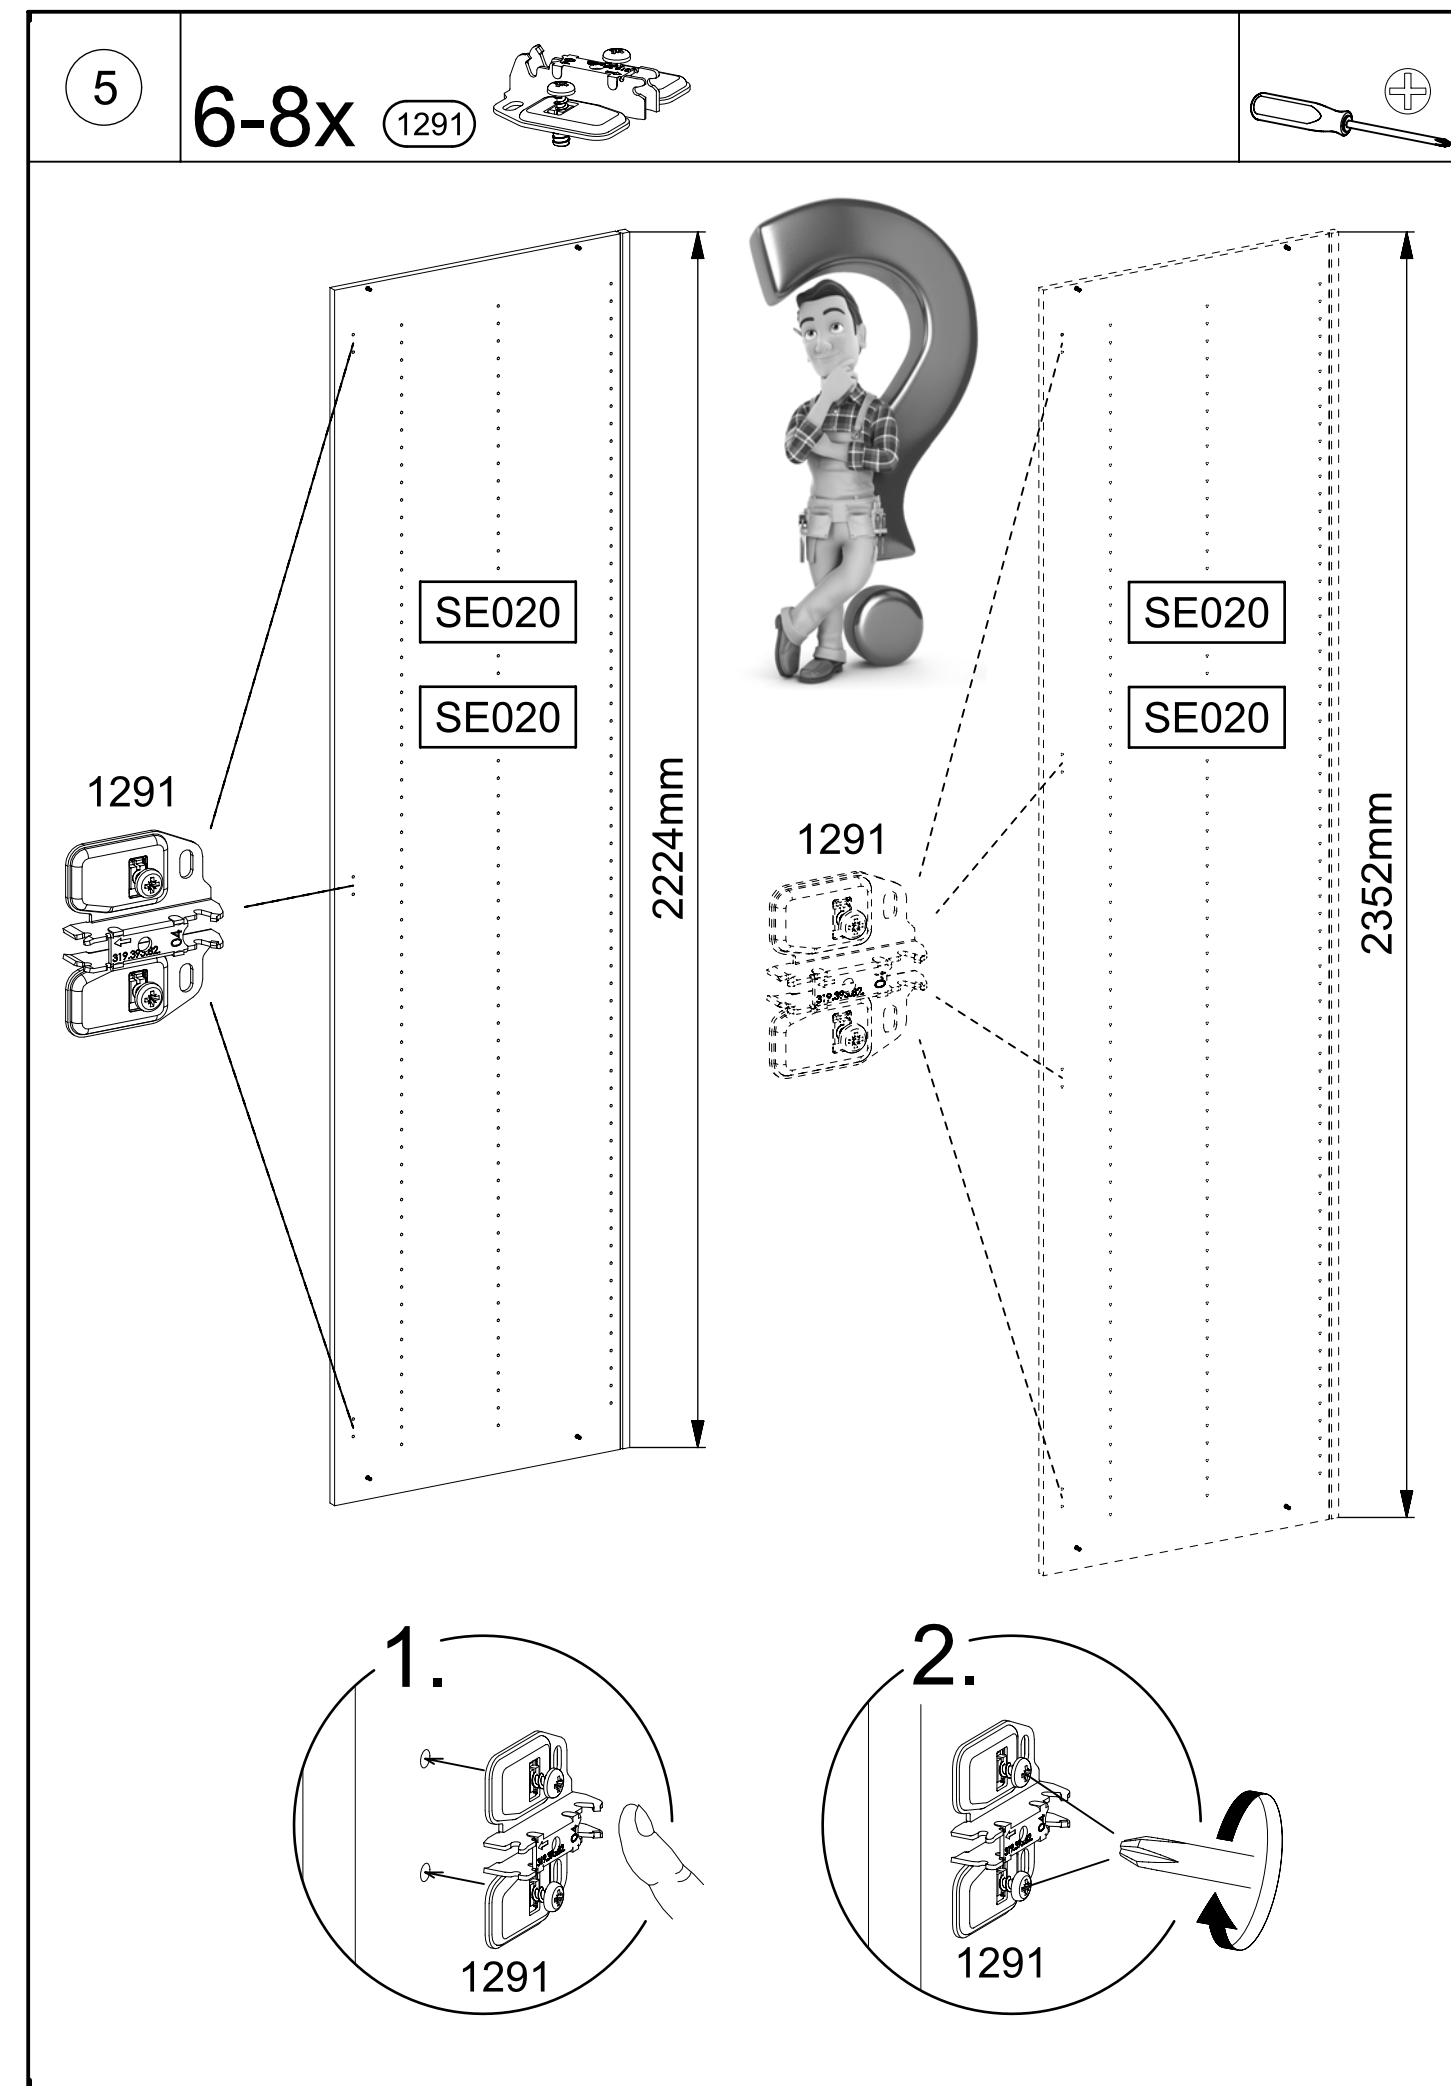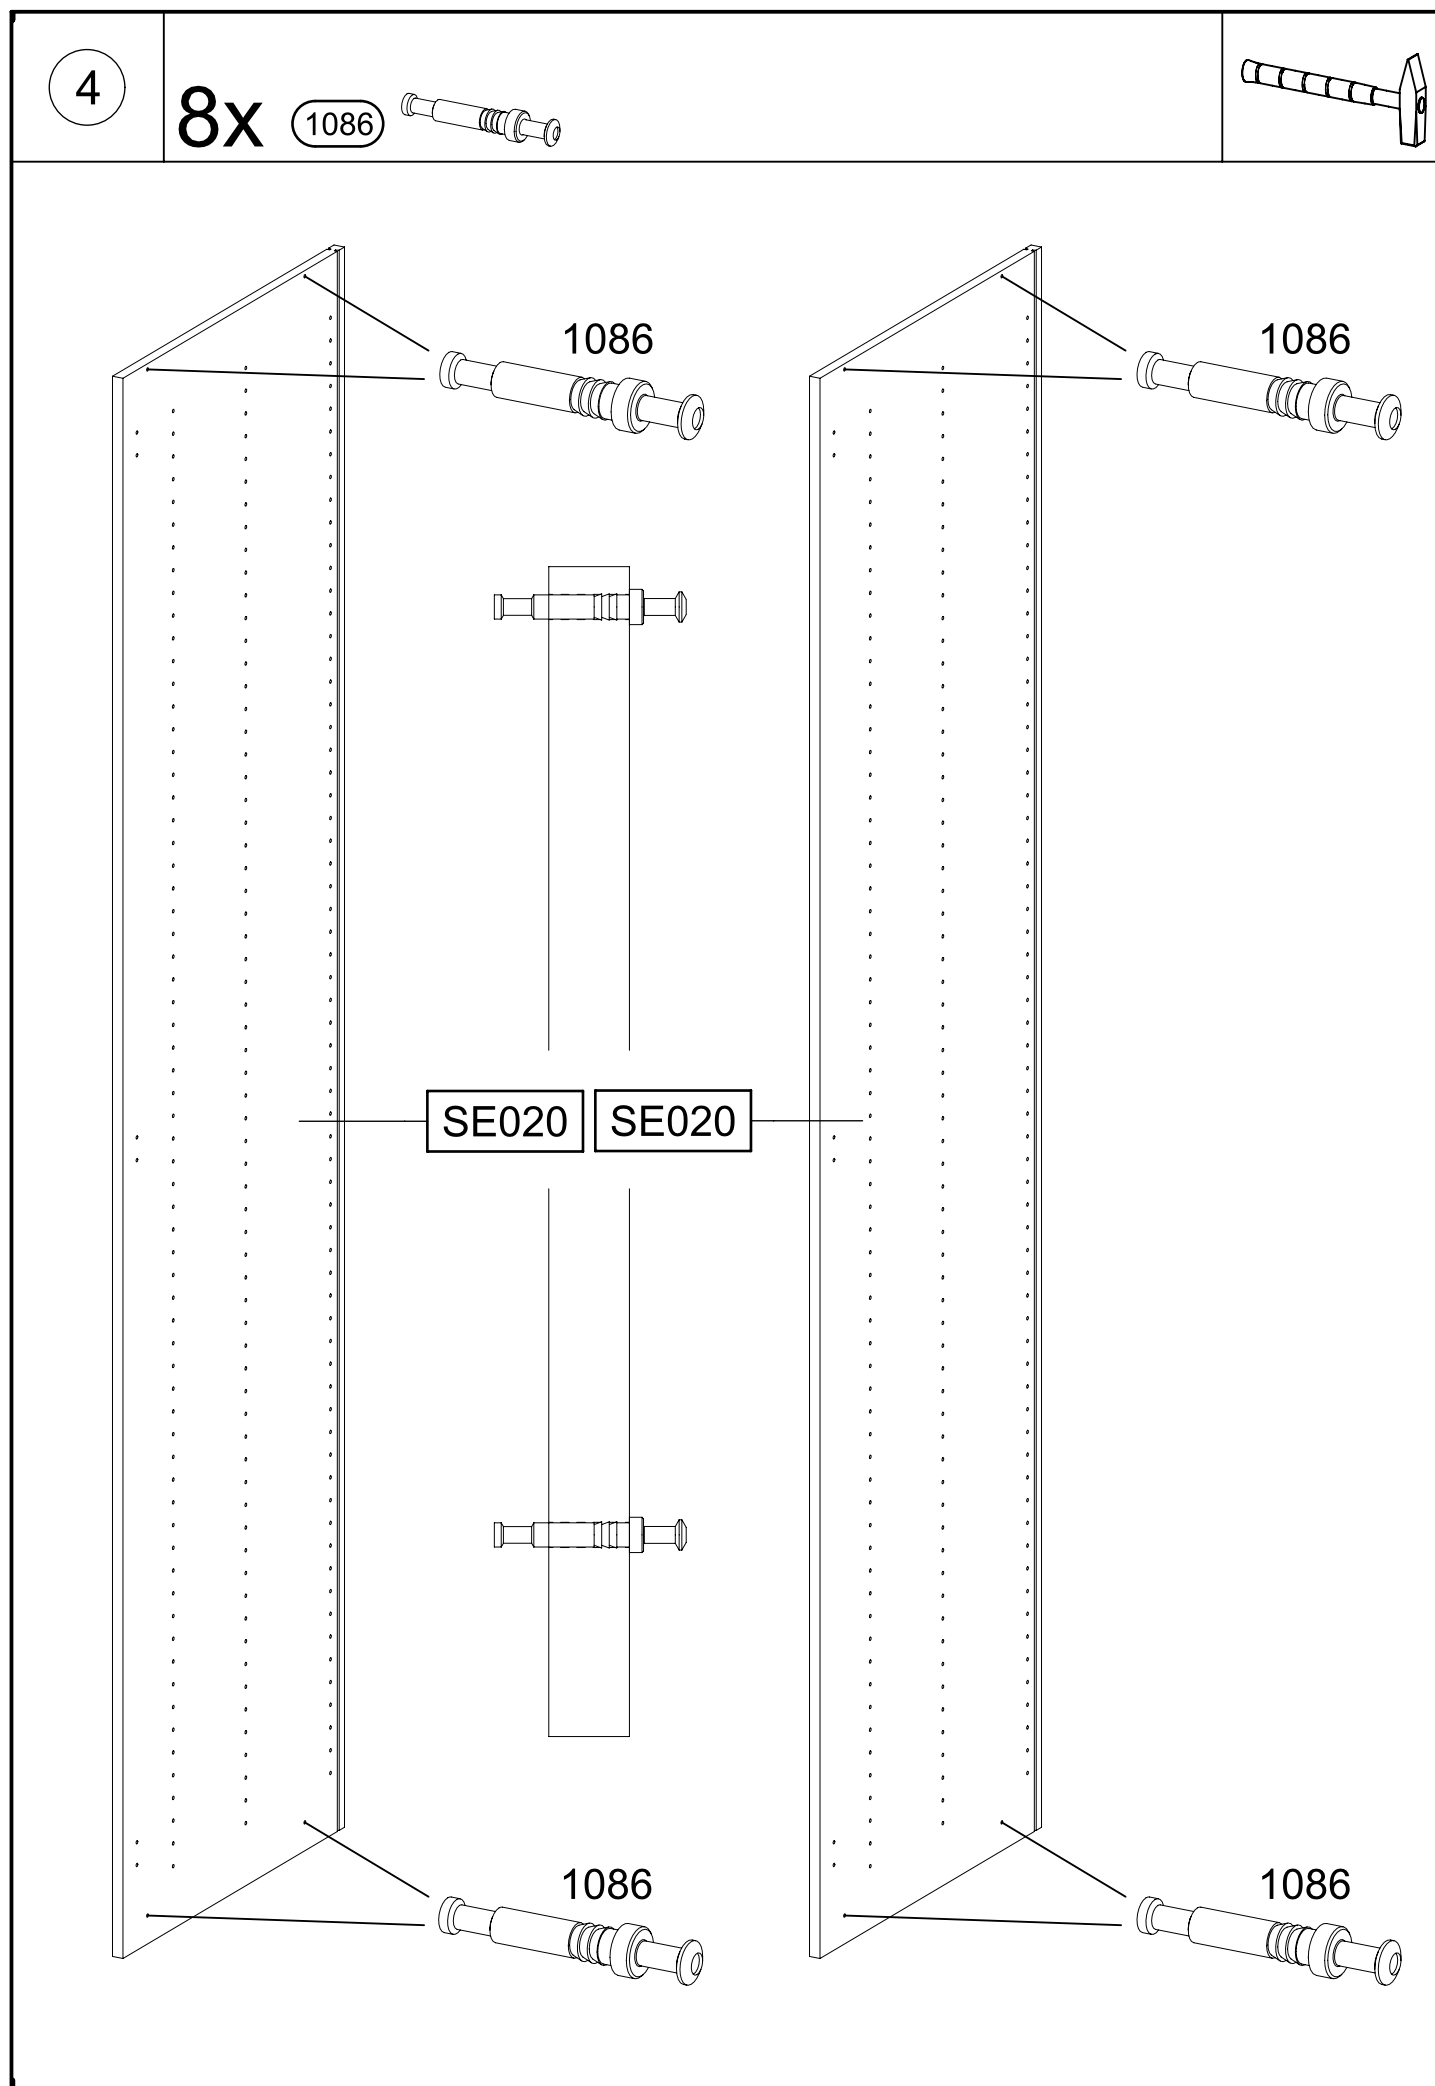

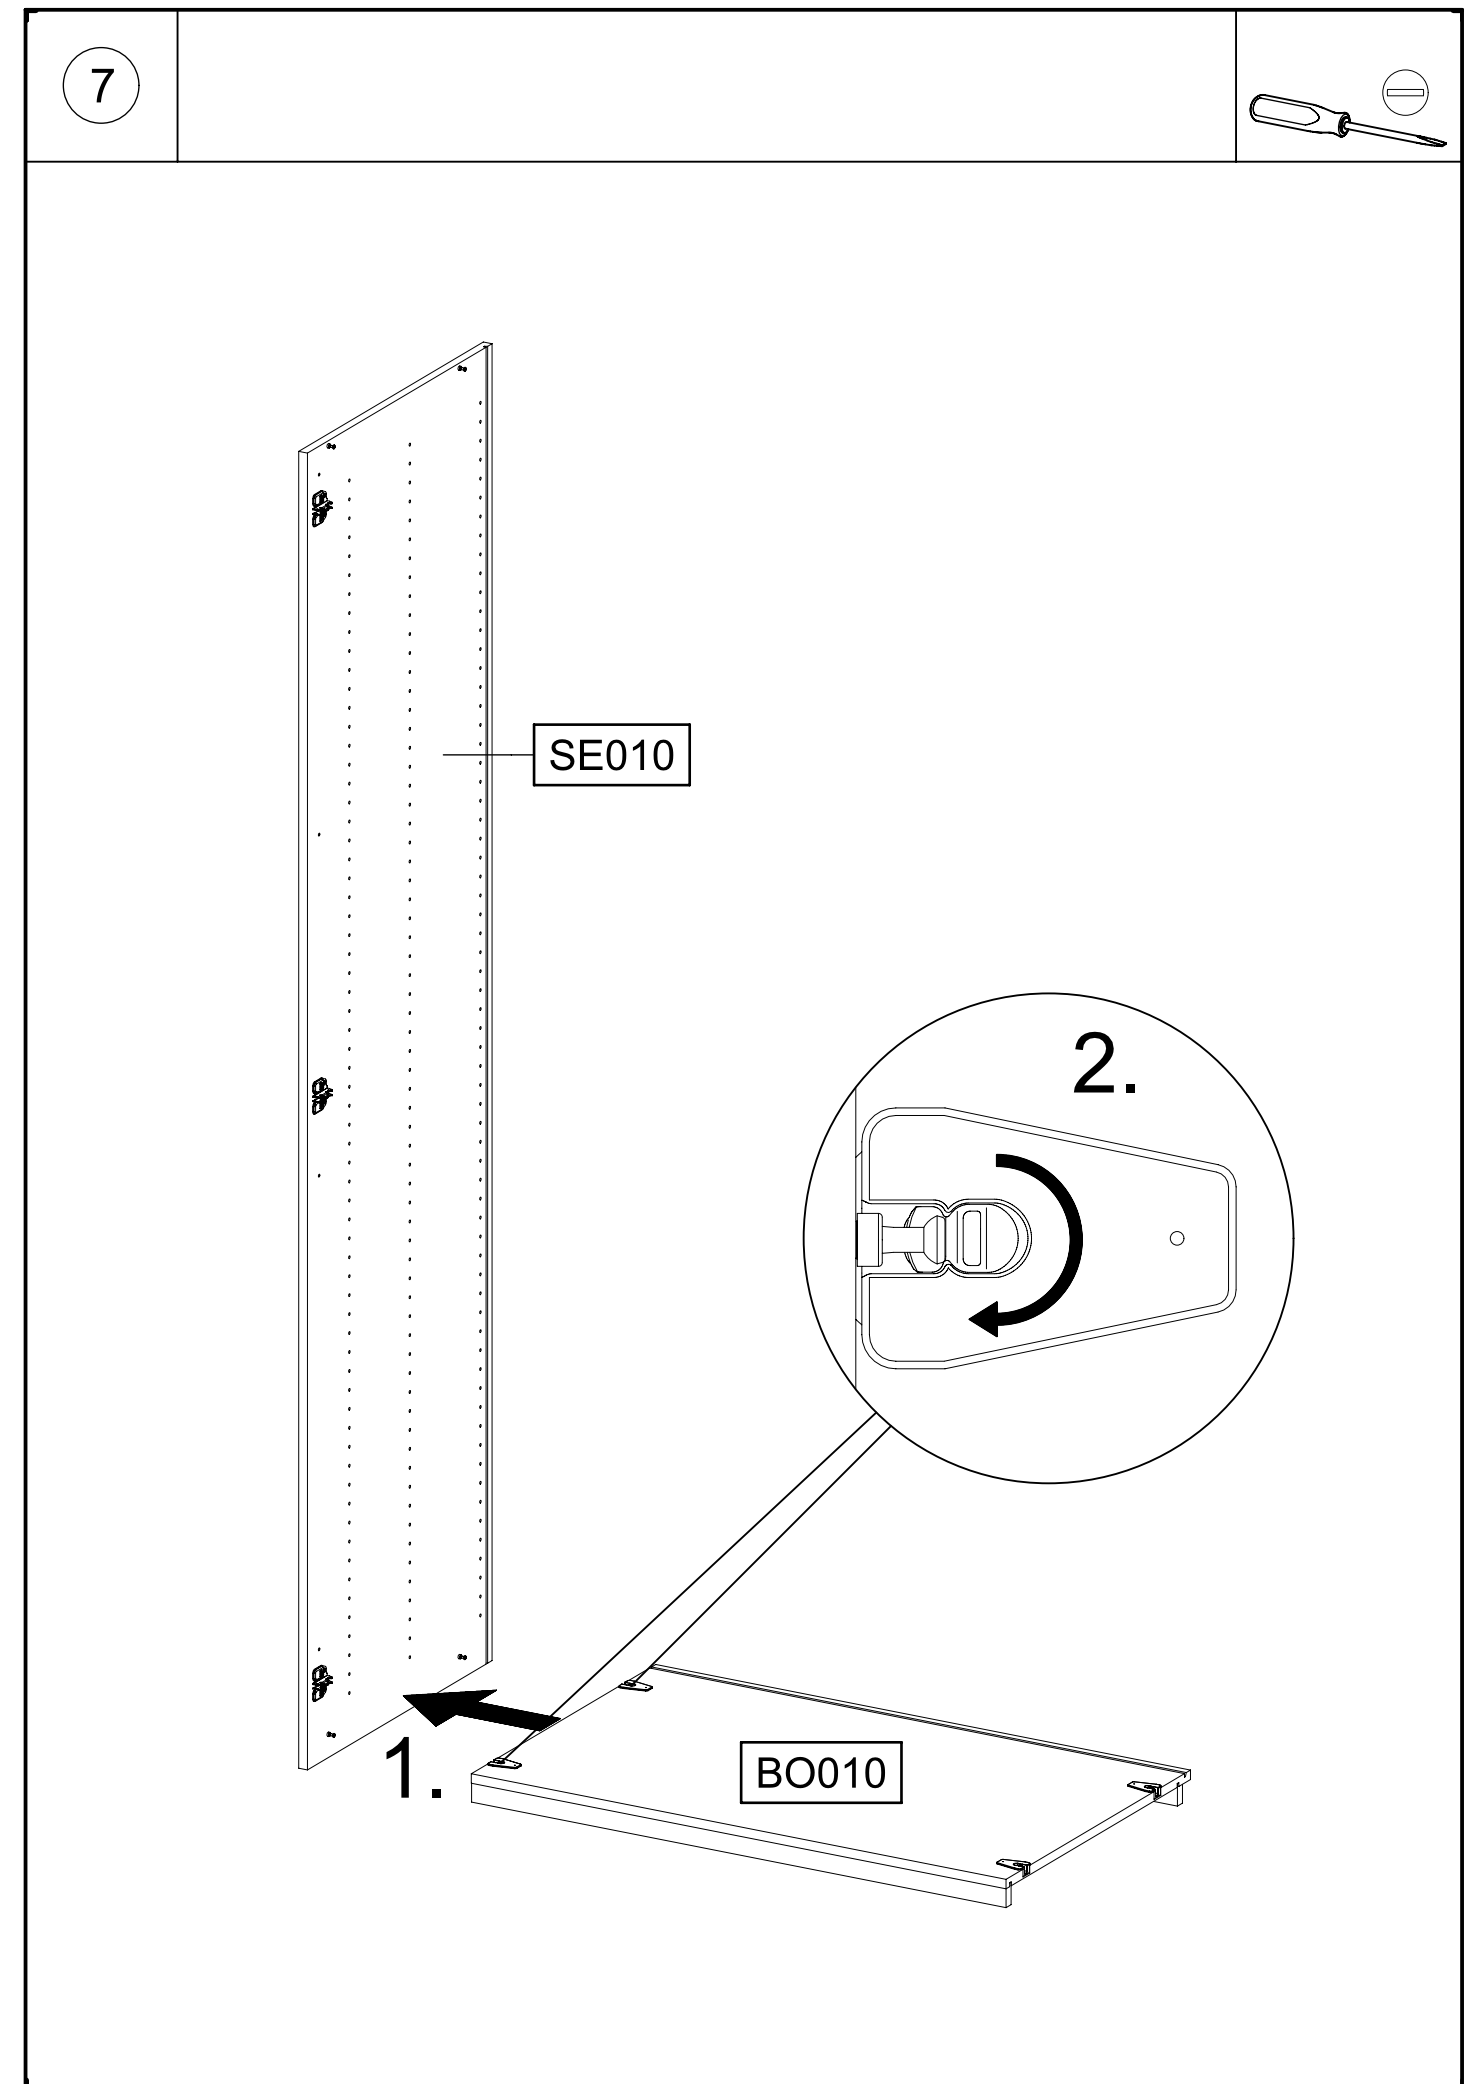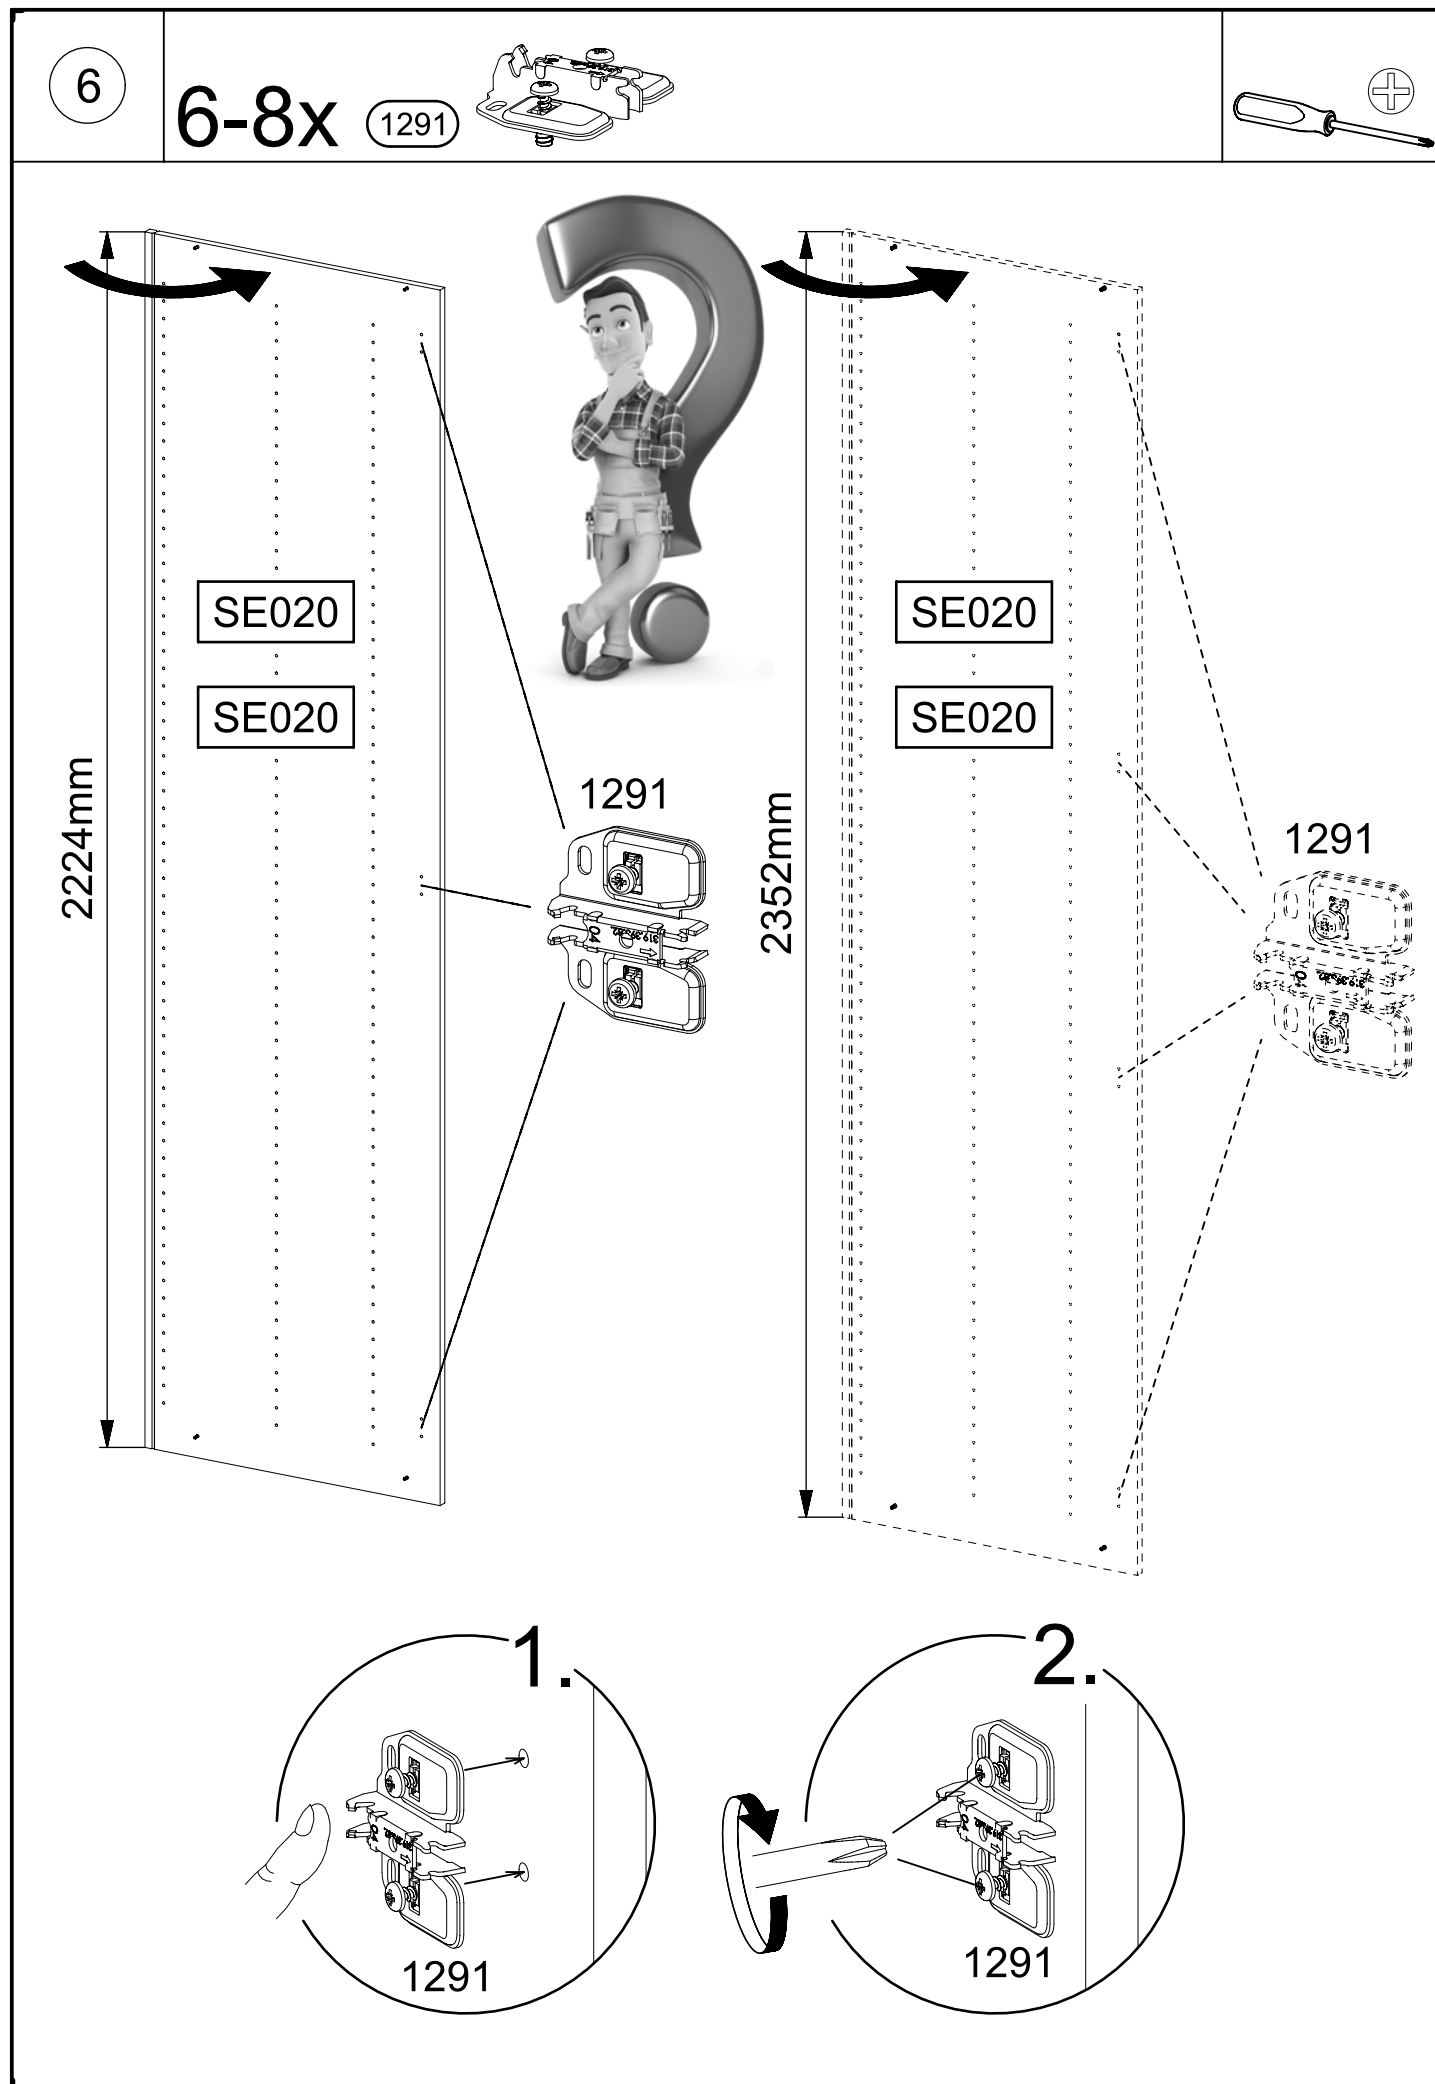

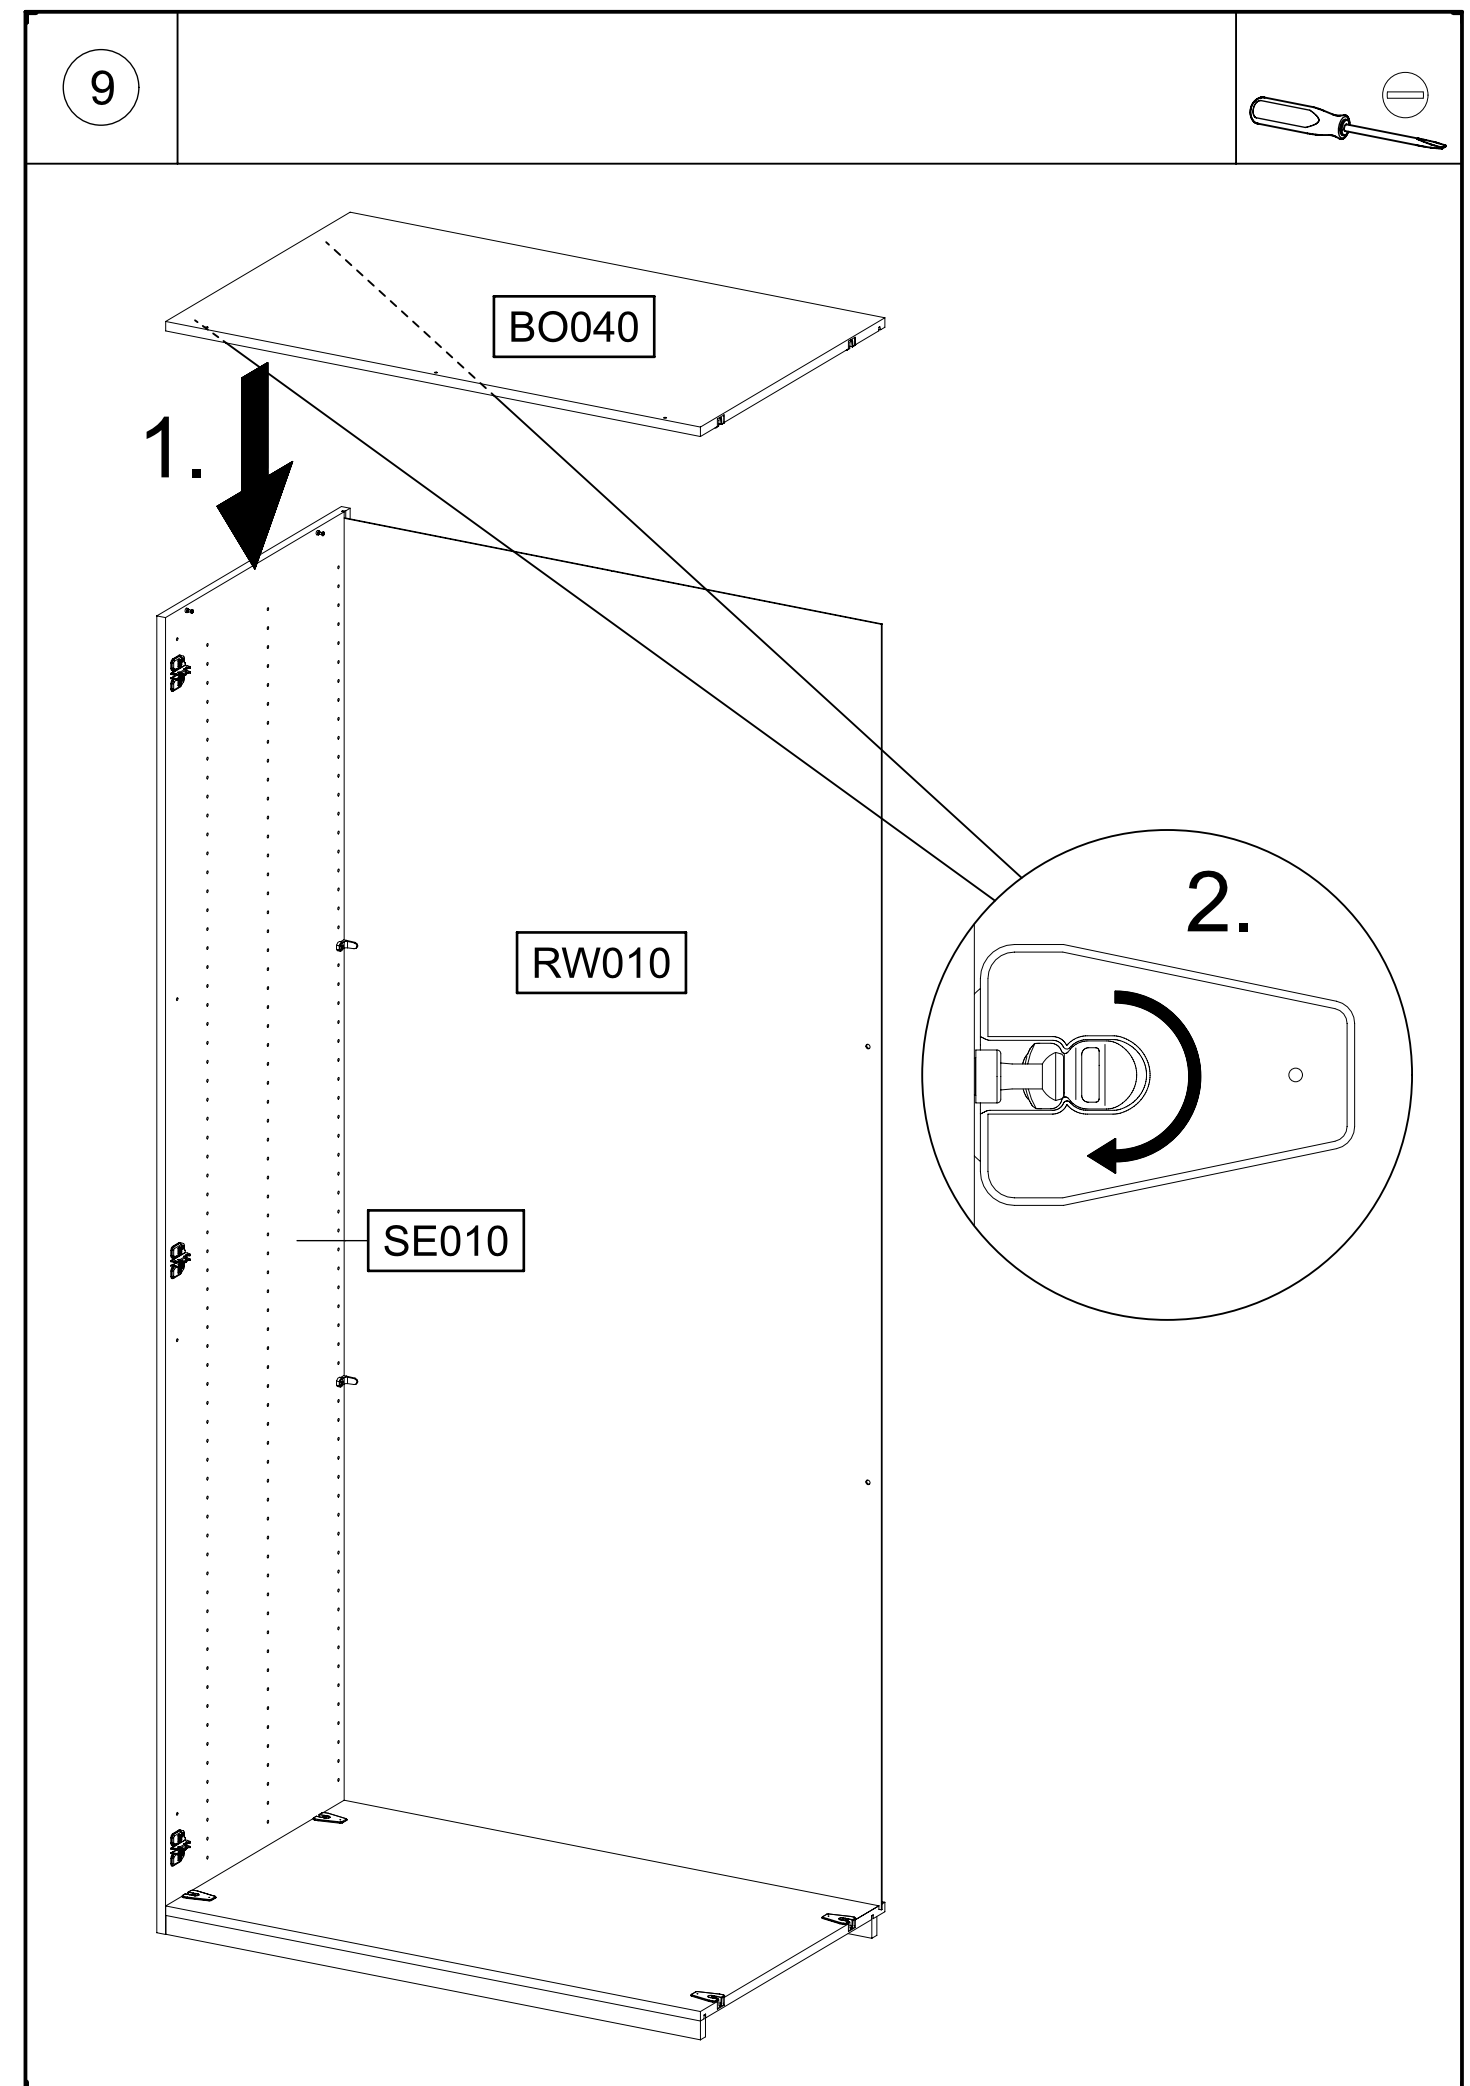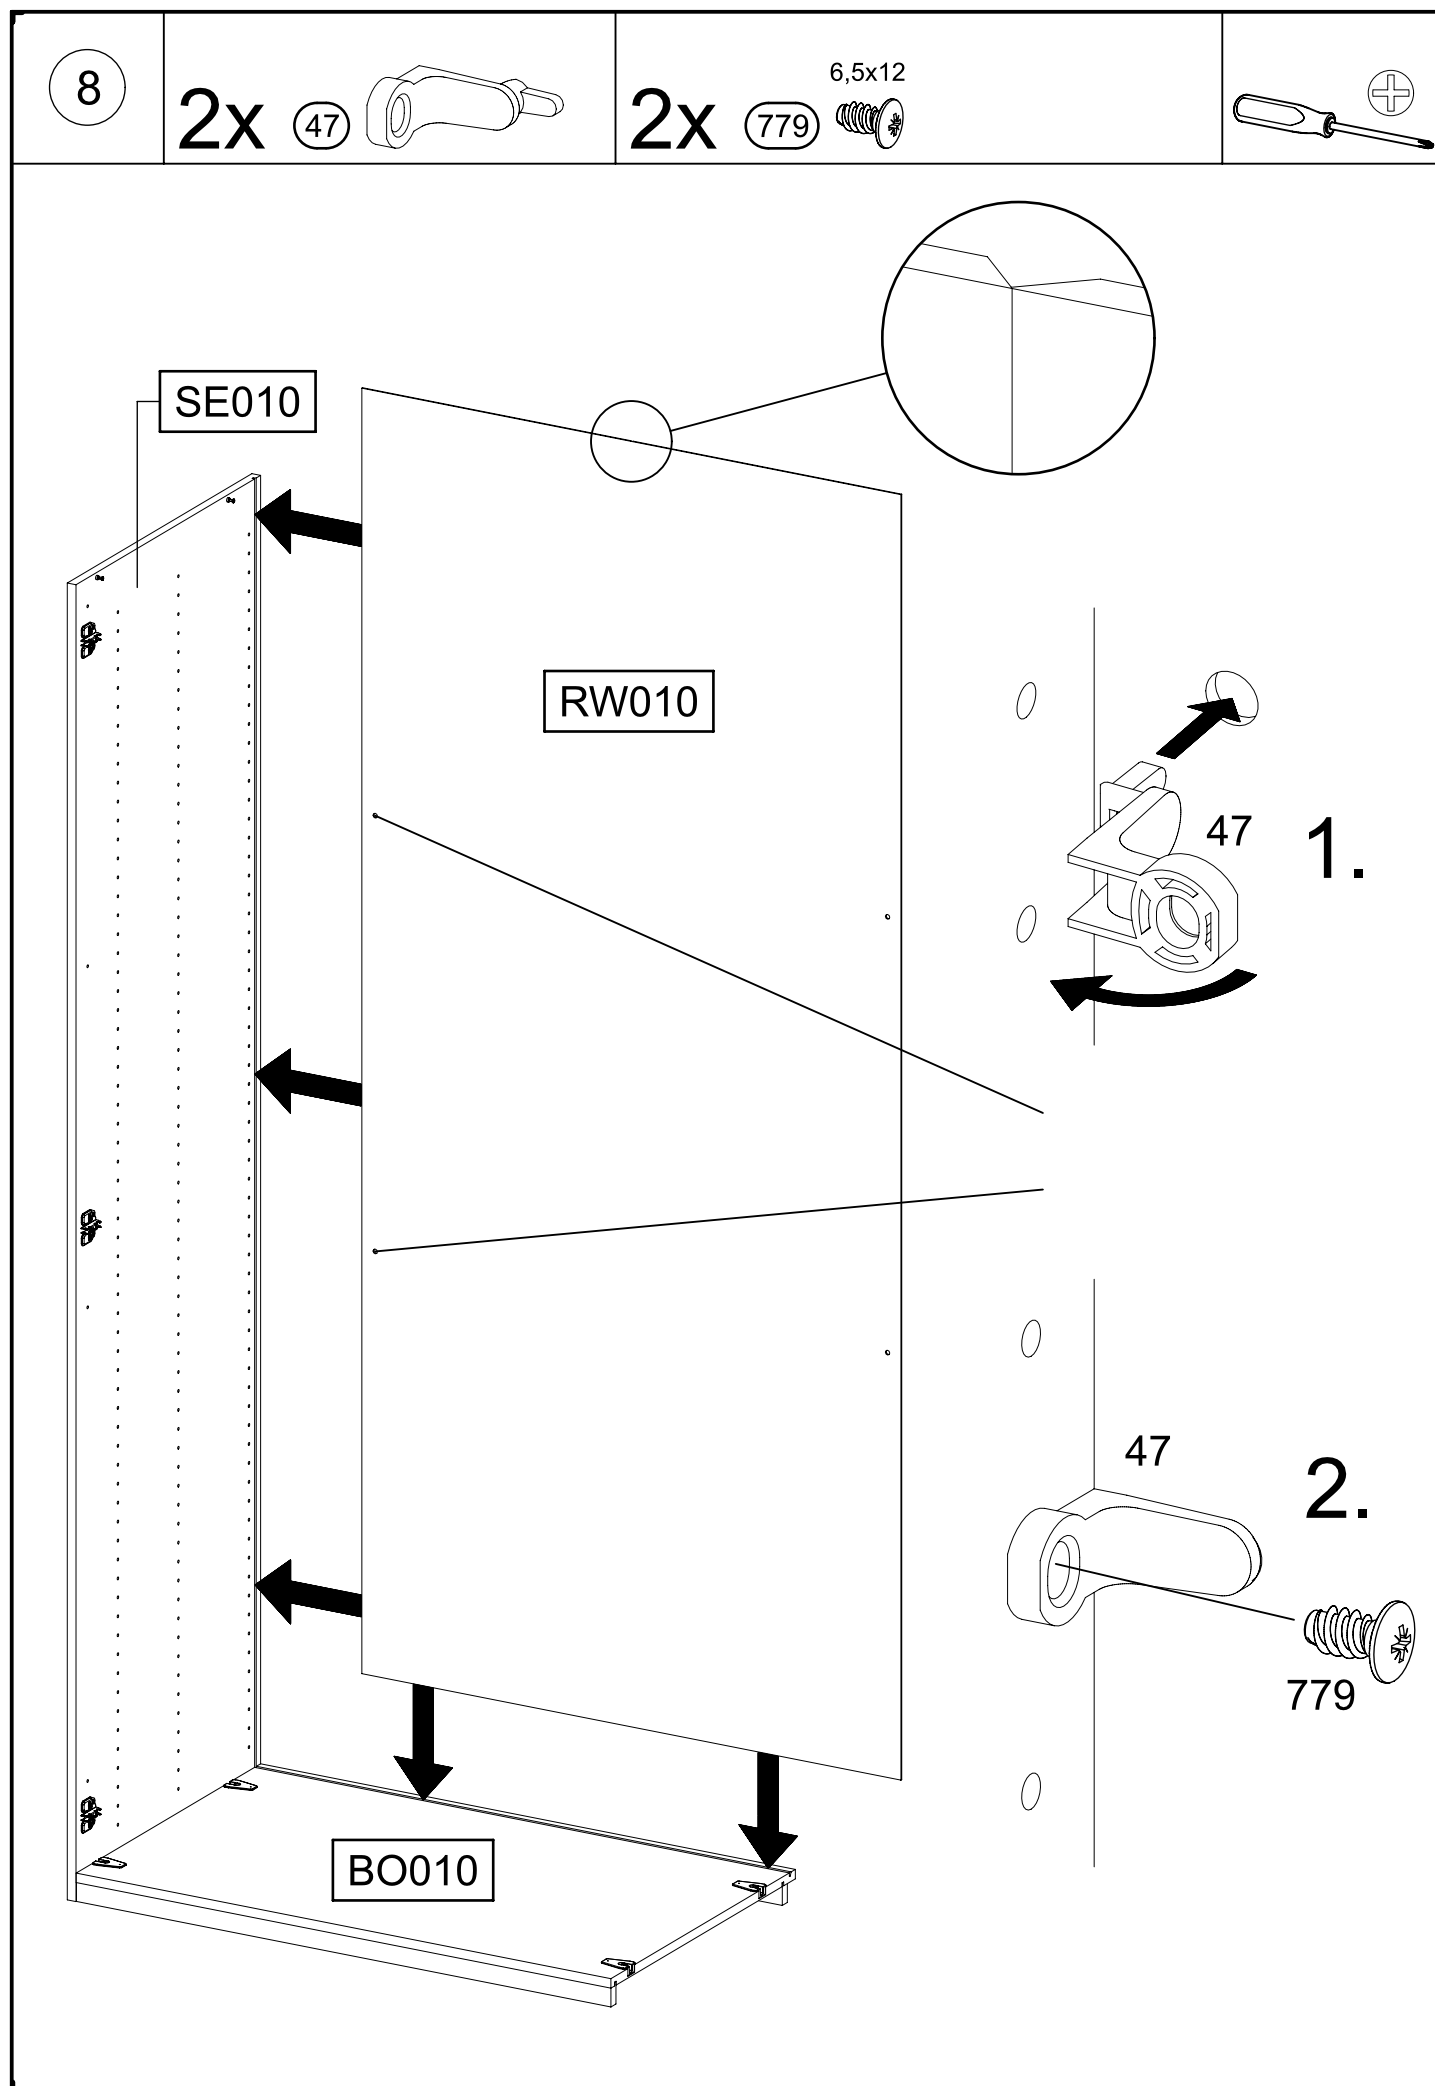


15.


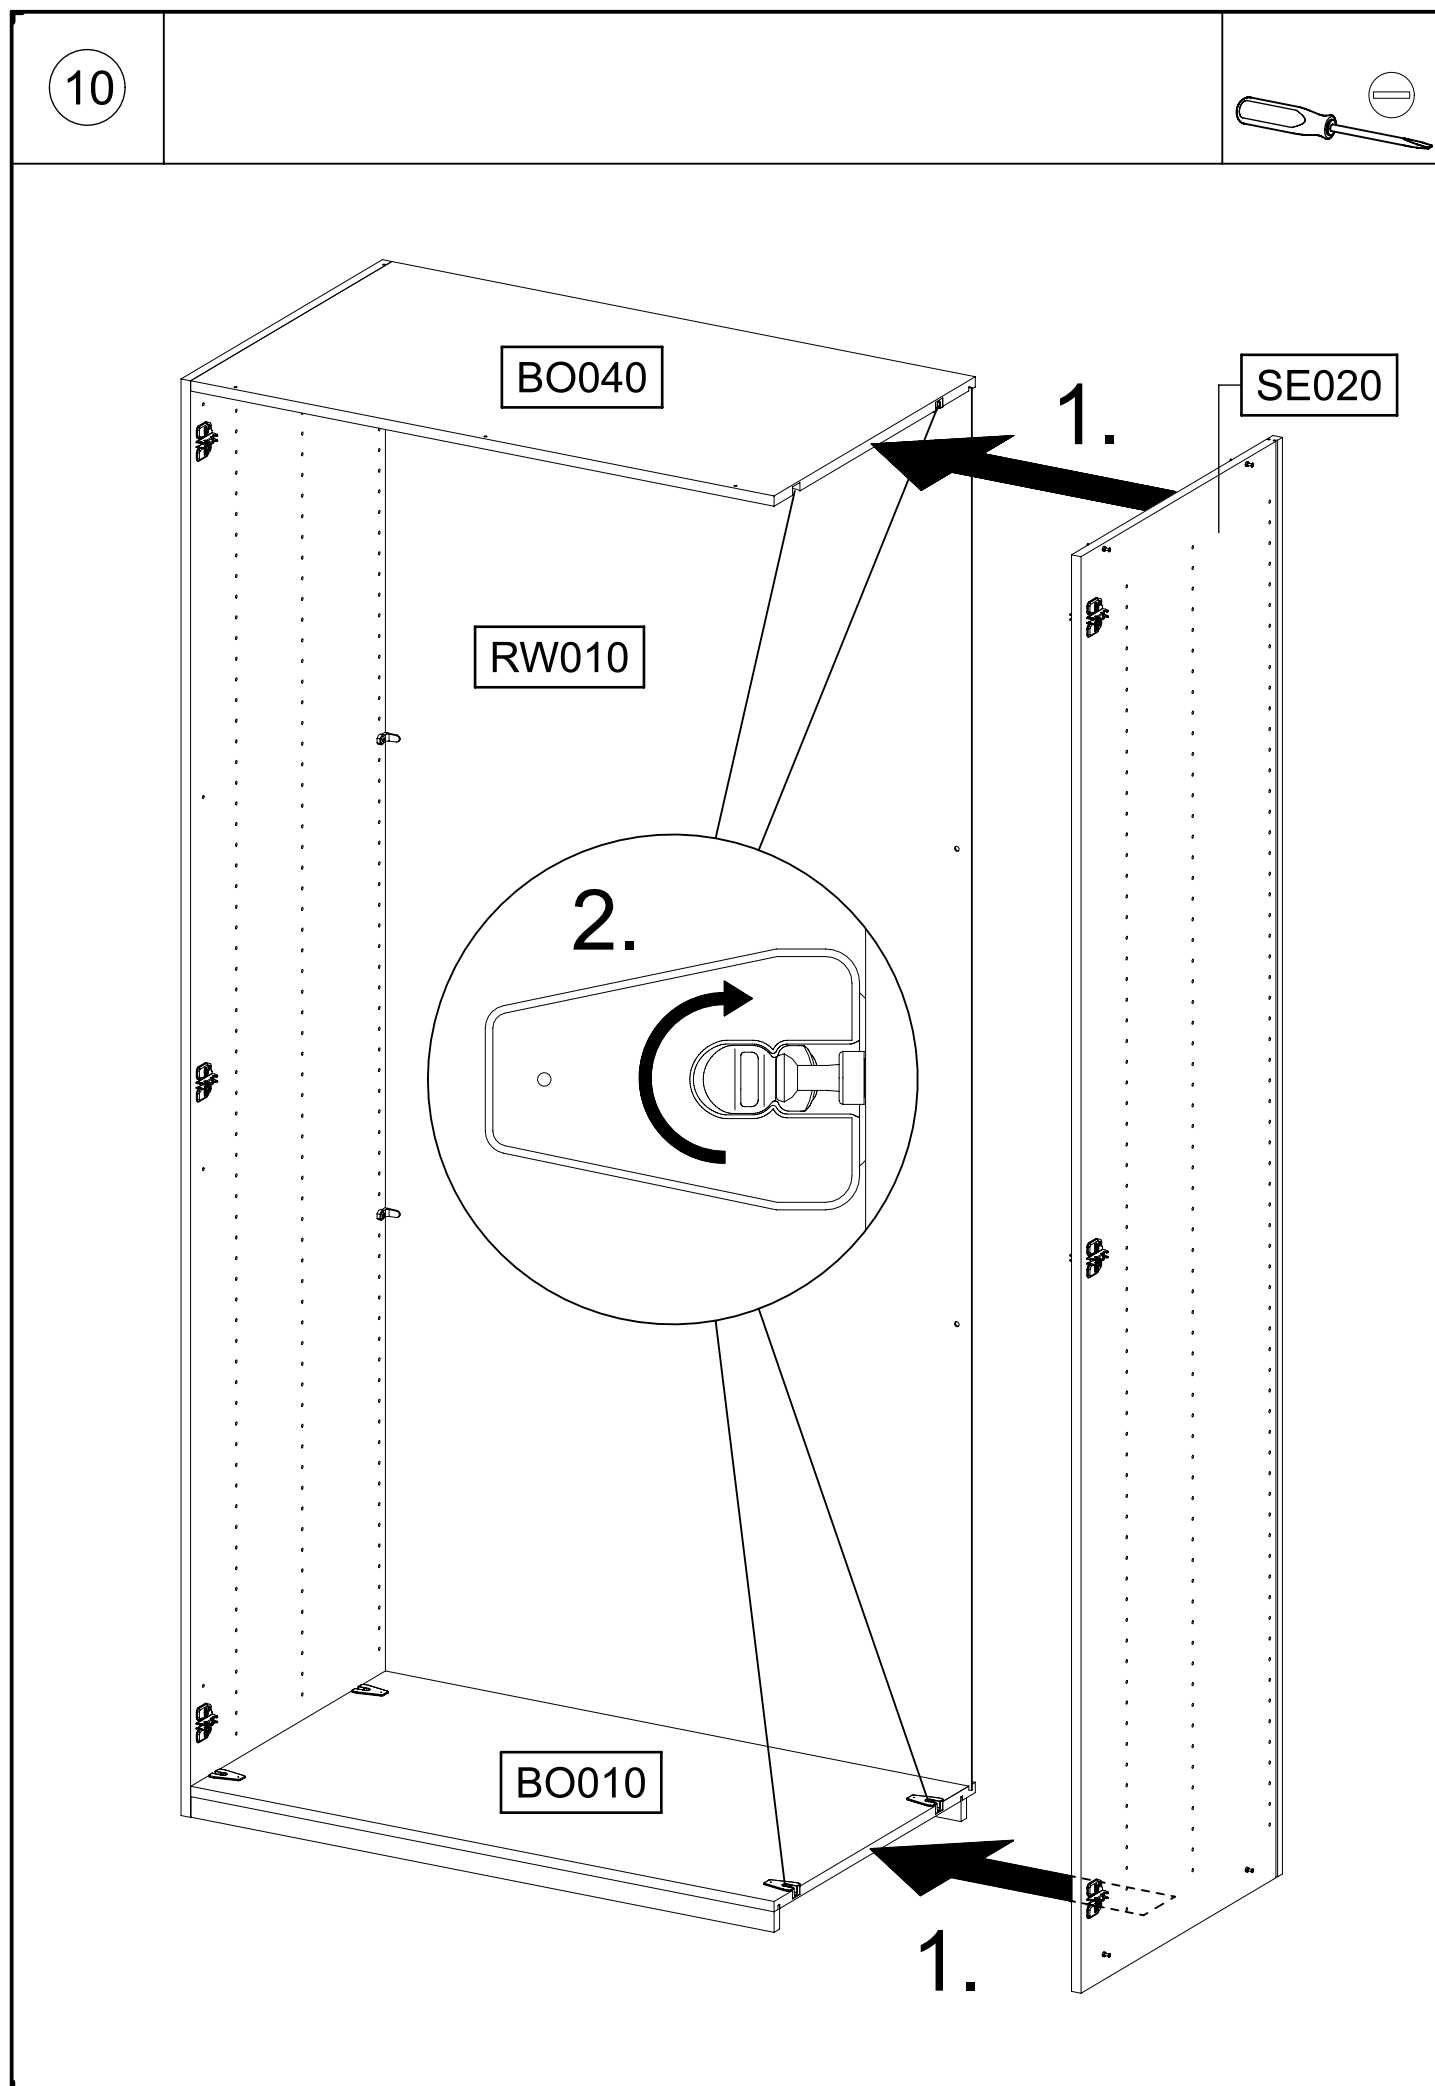




MD106



16.


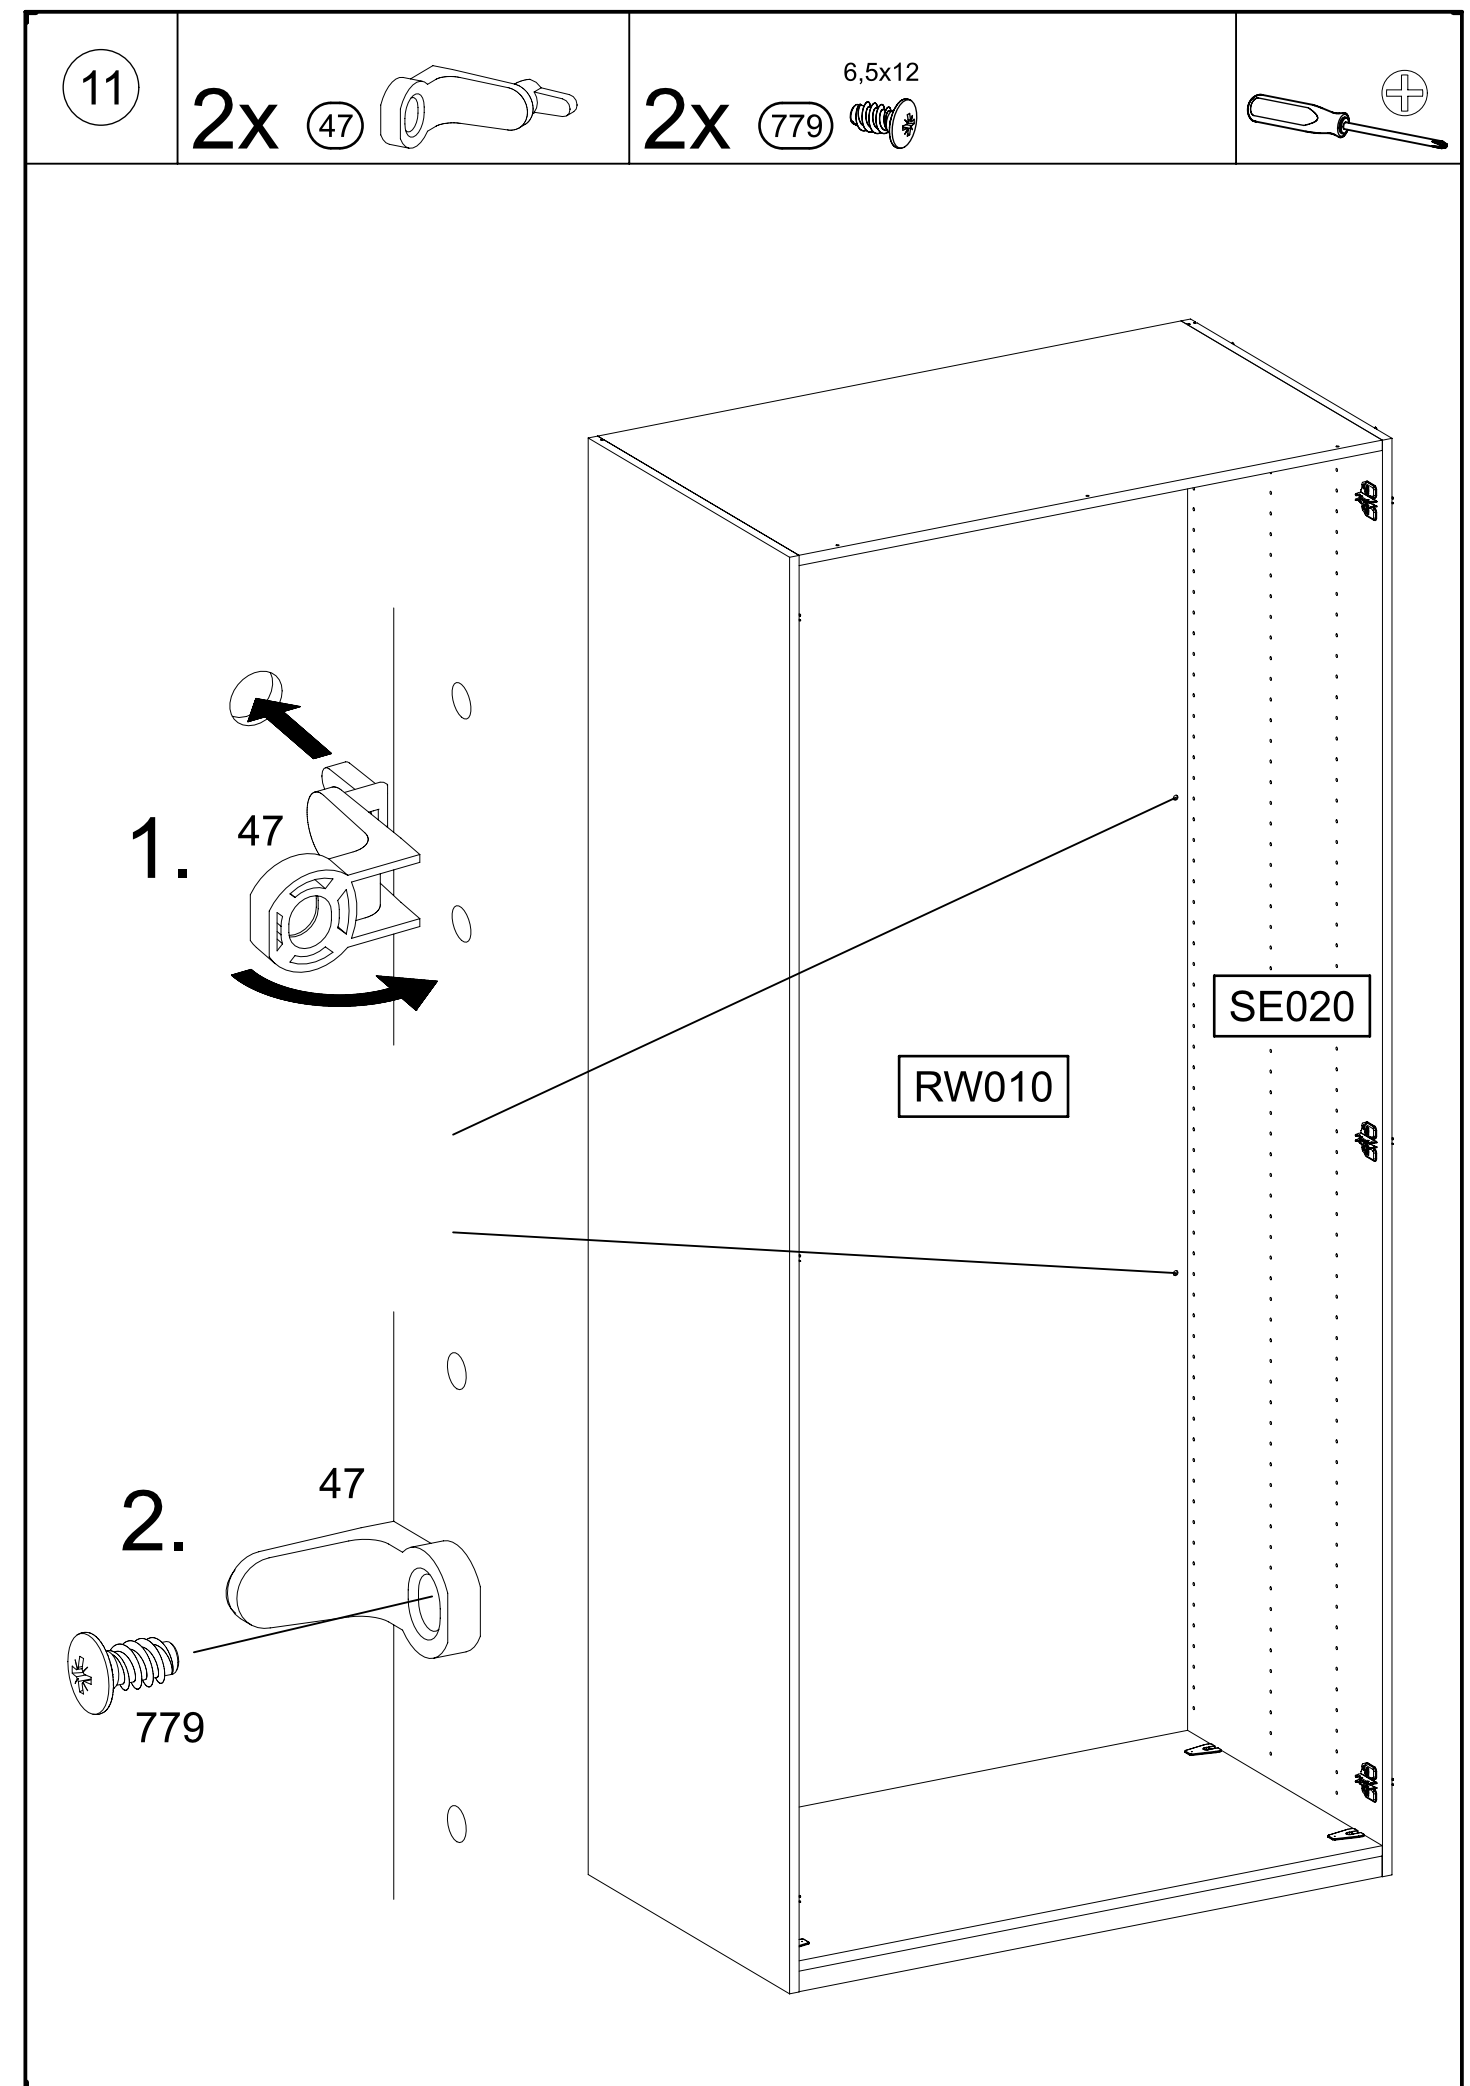


MD106

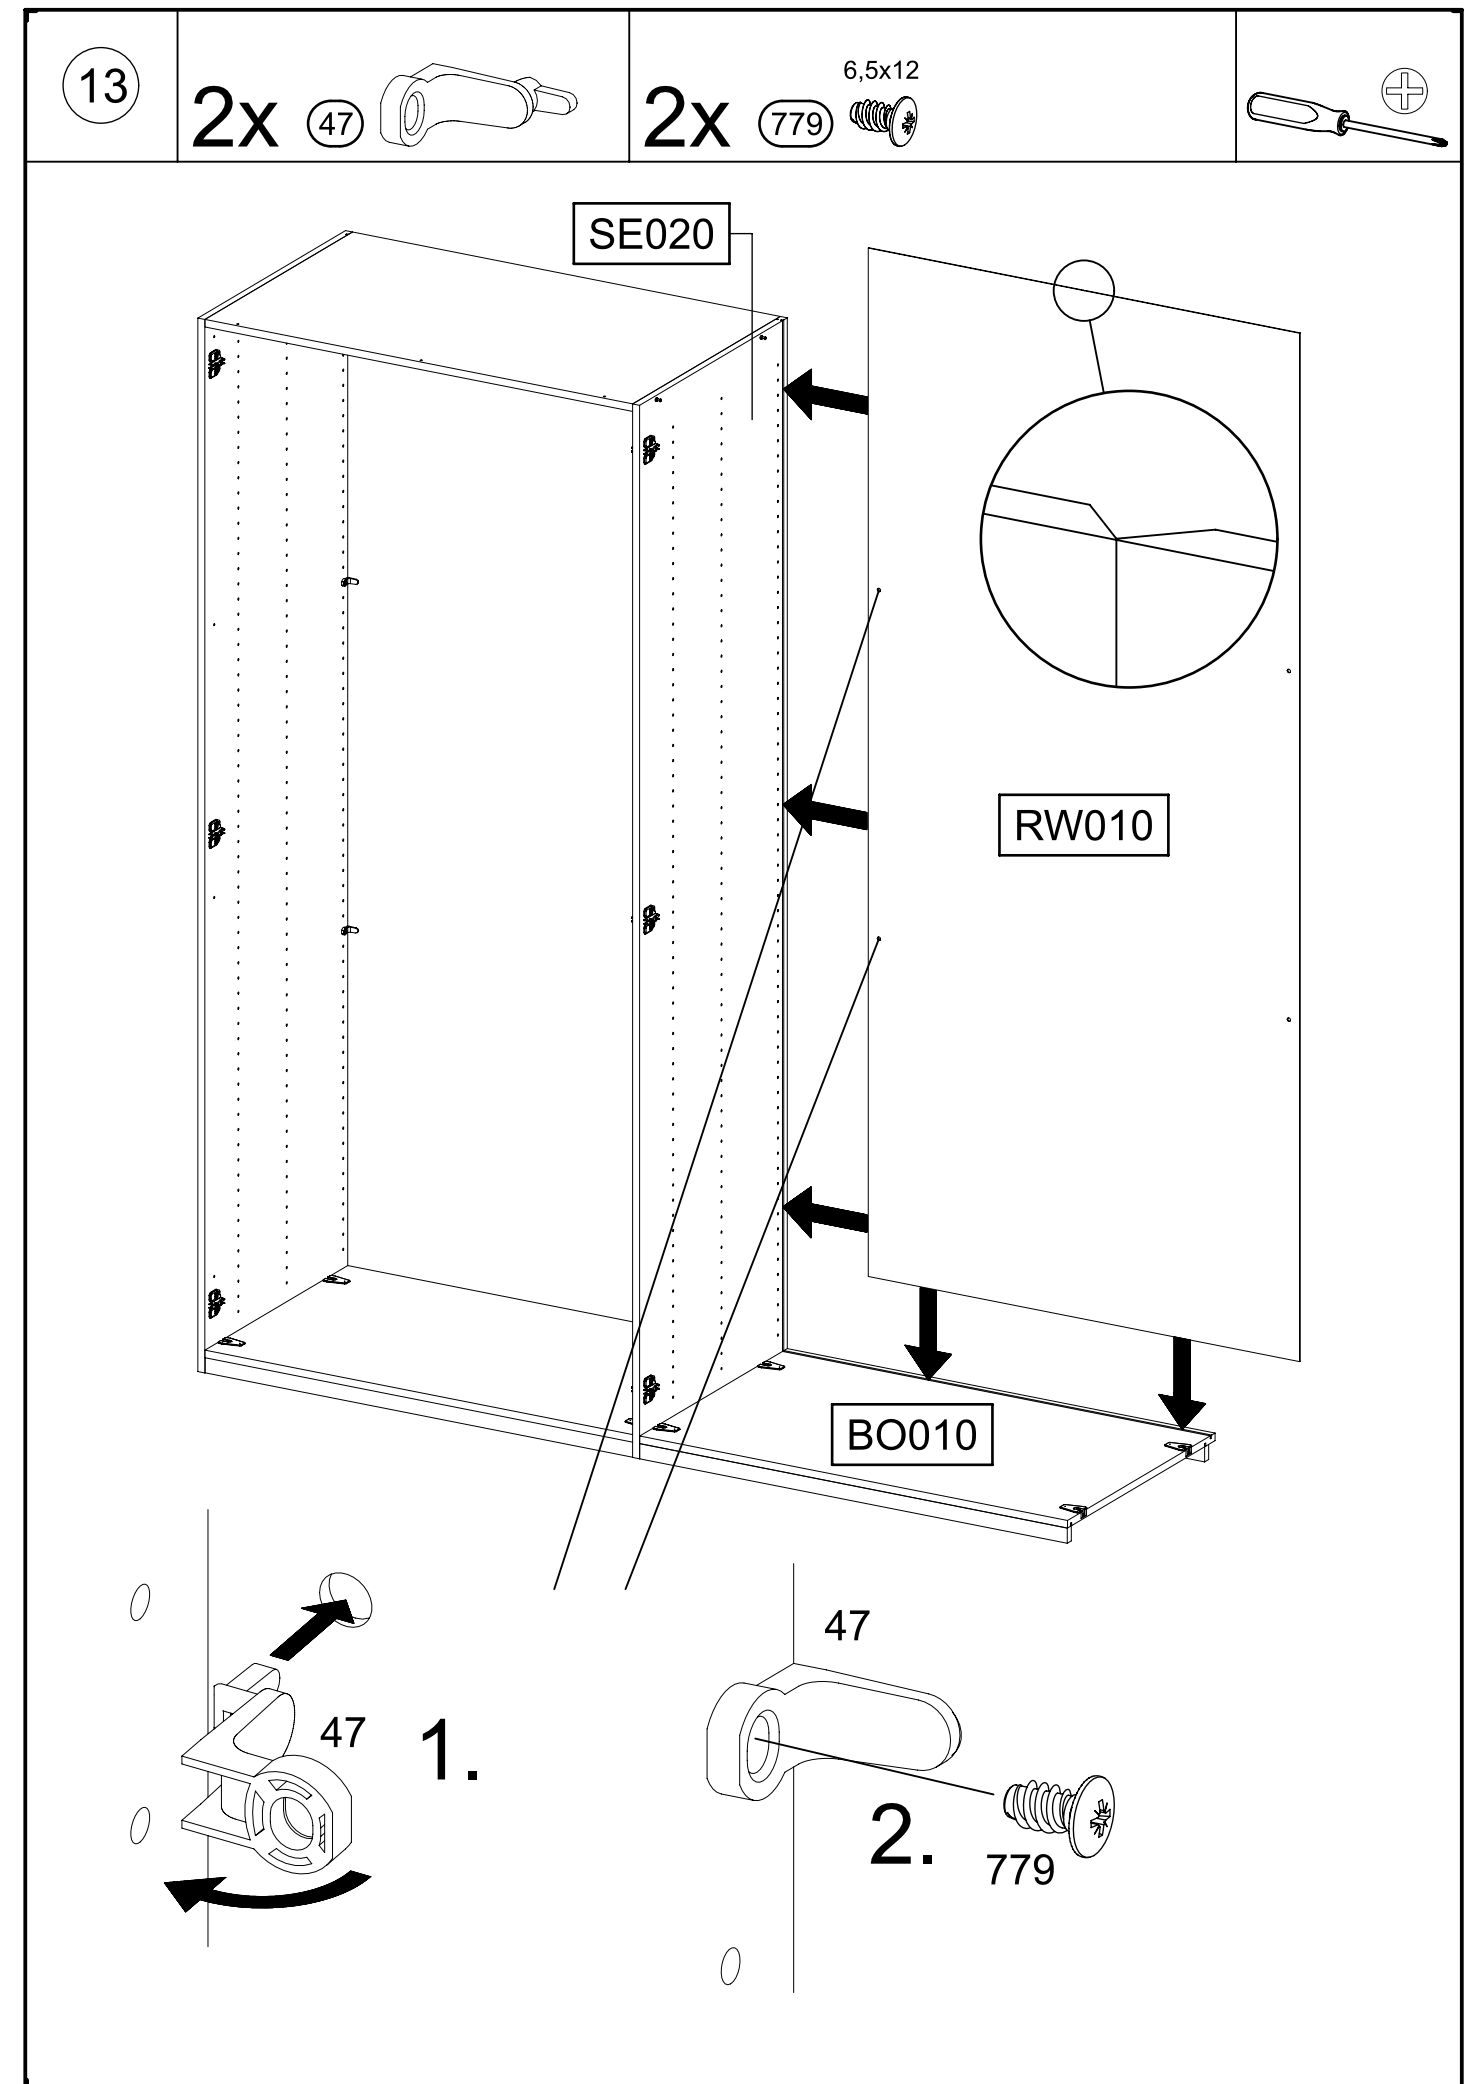
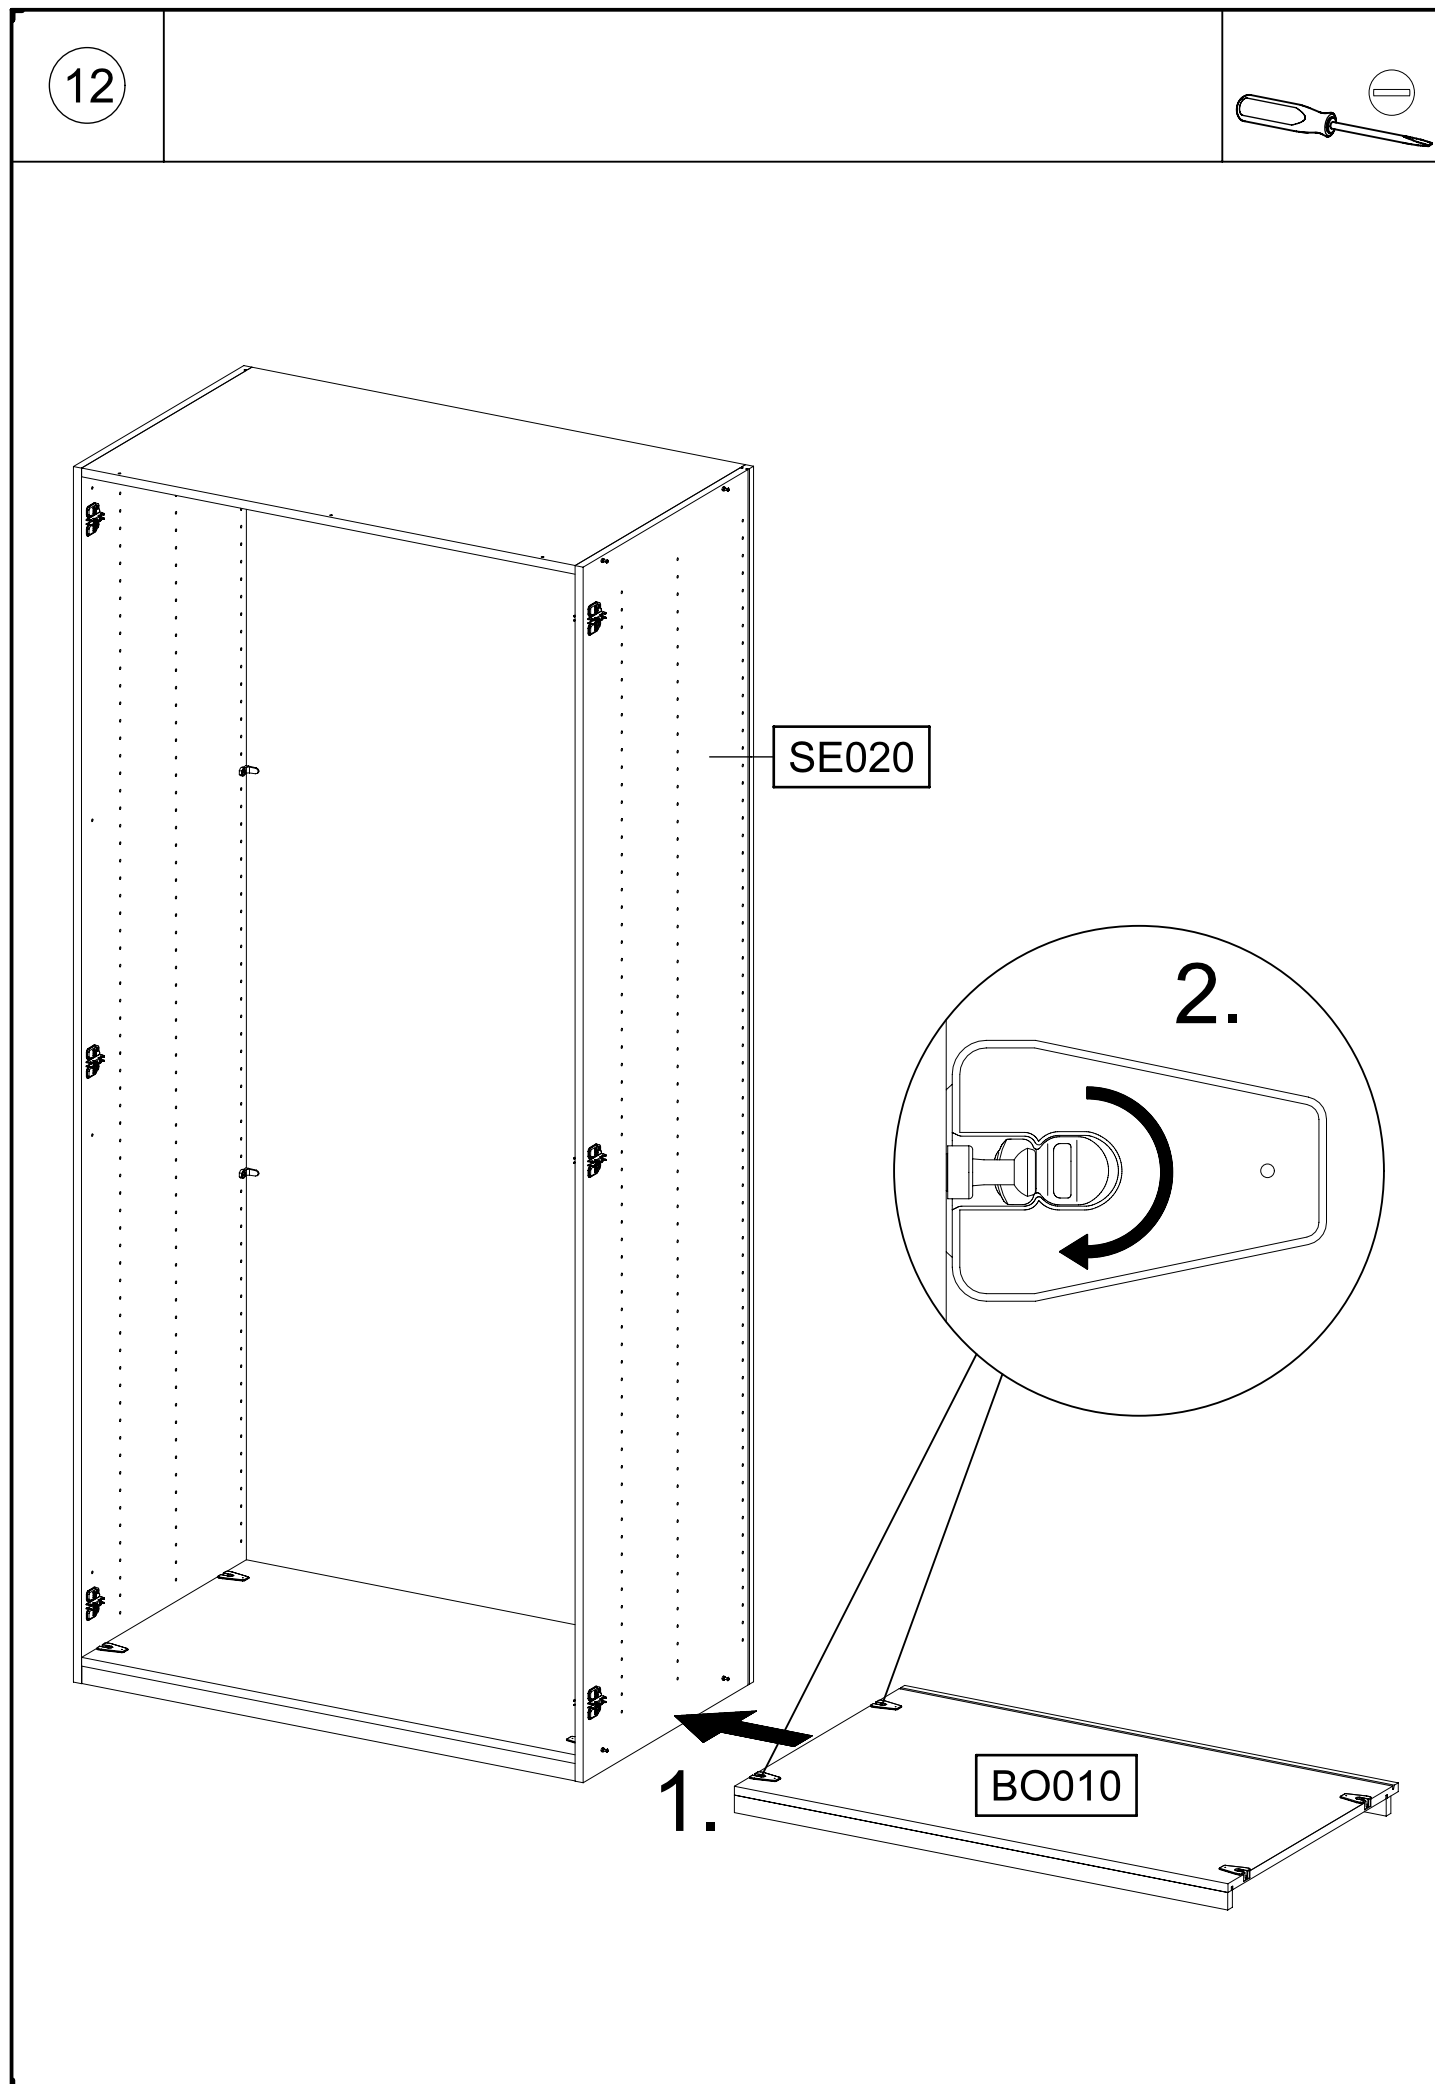


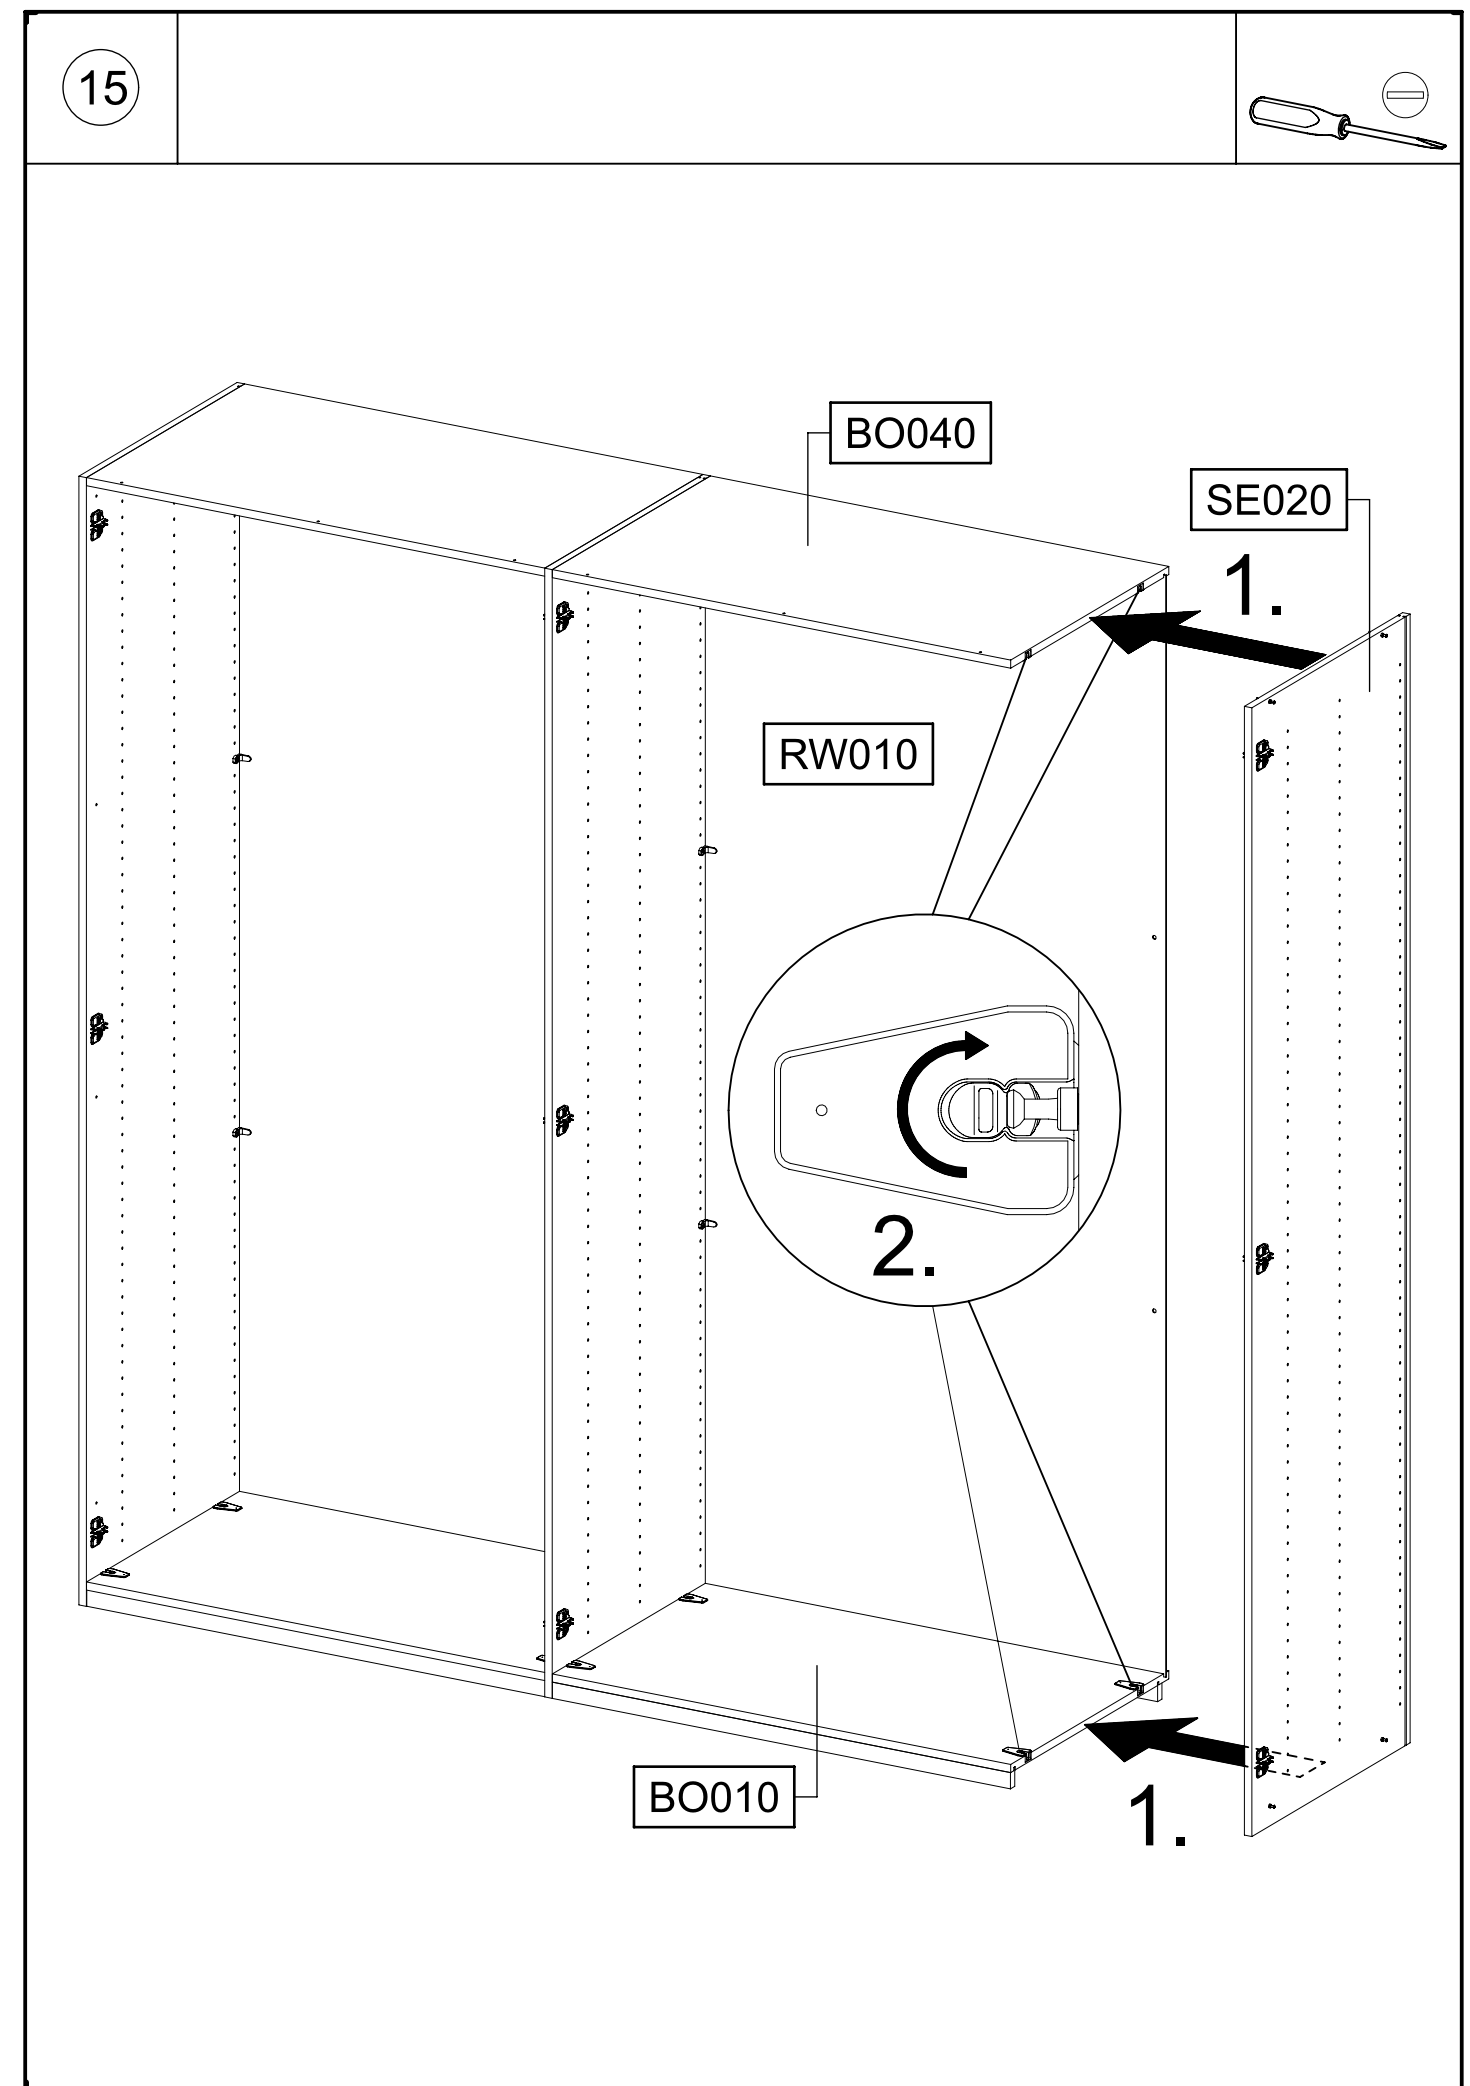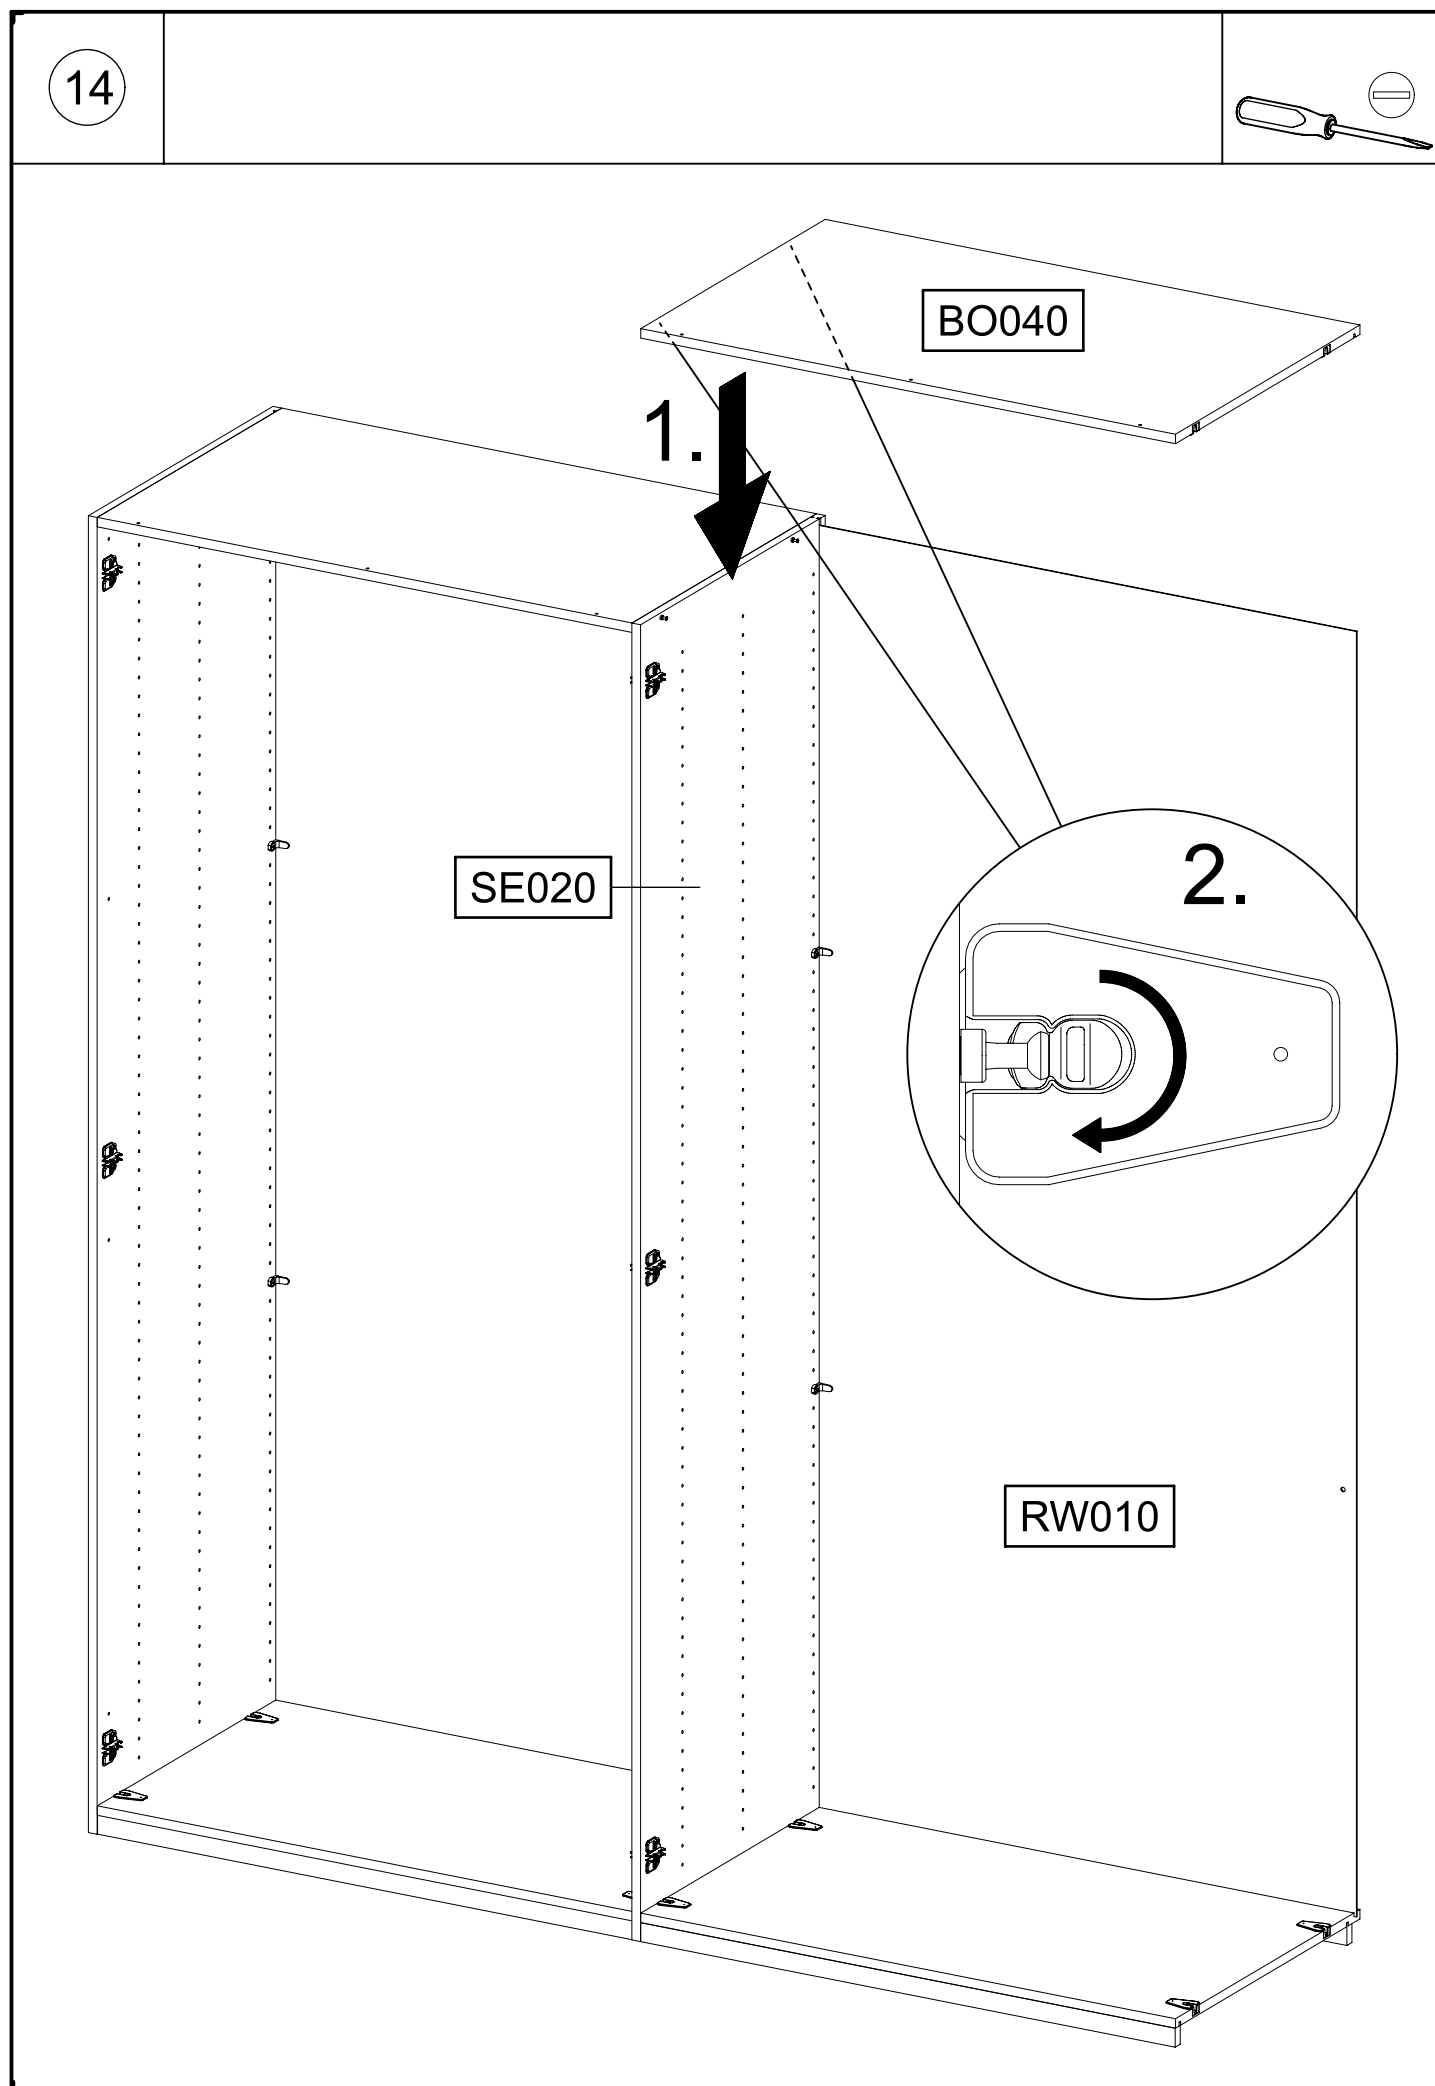

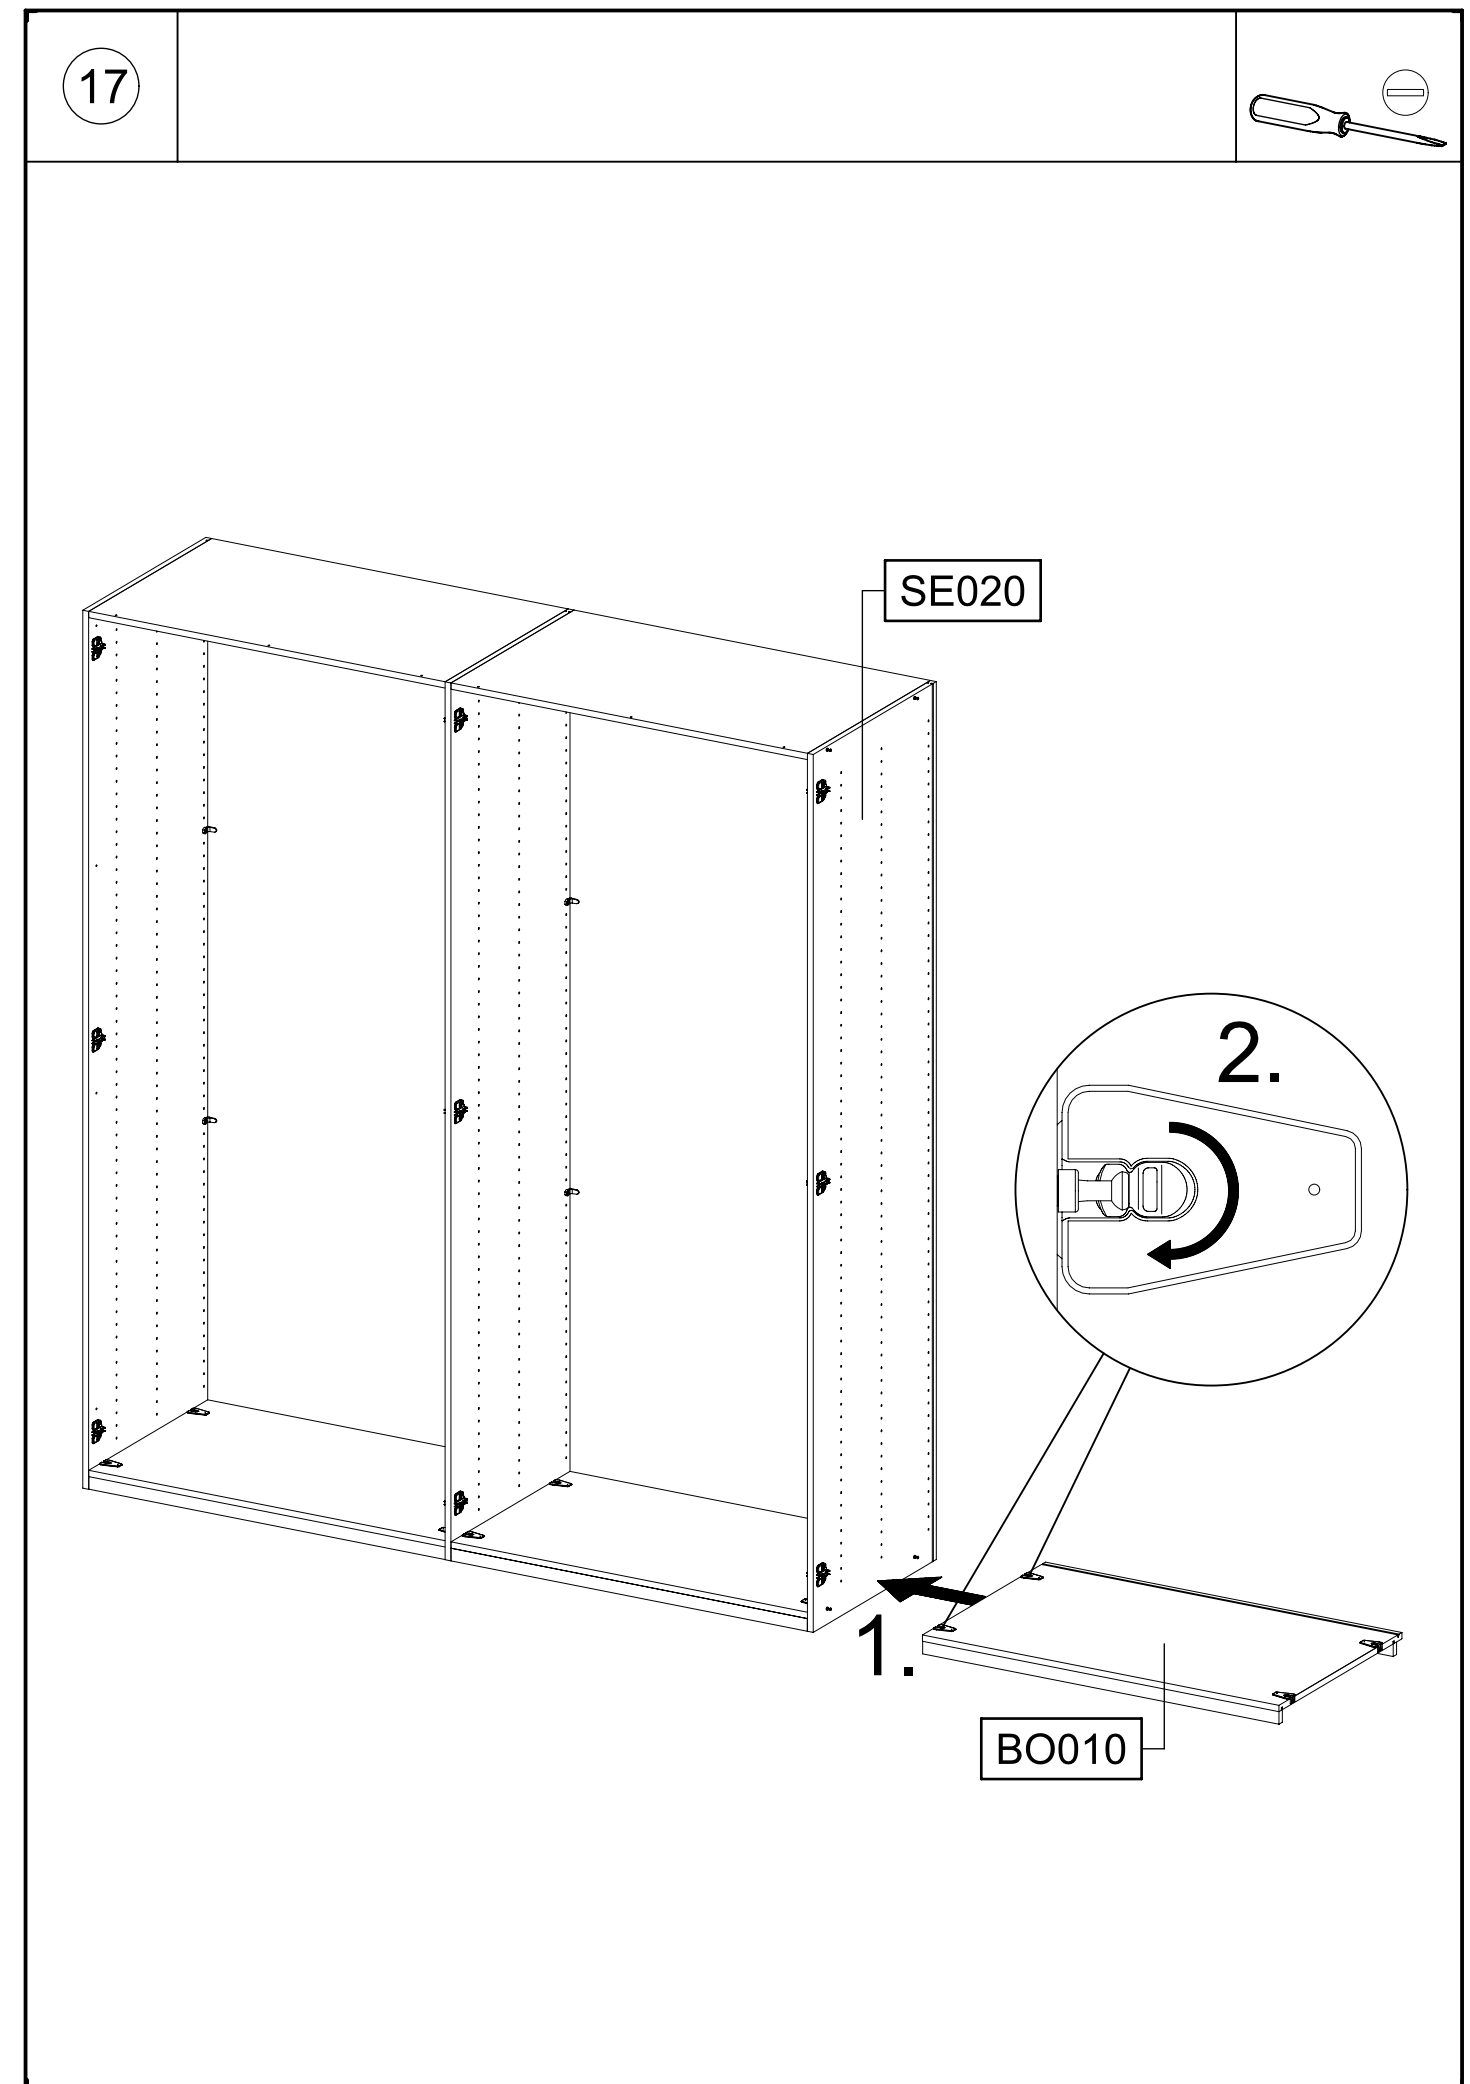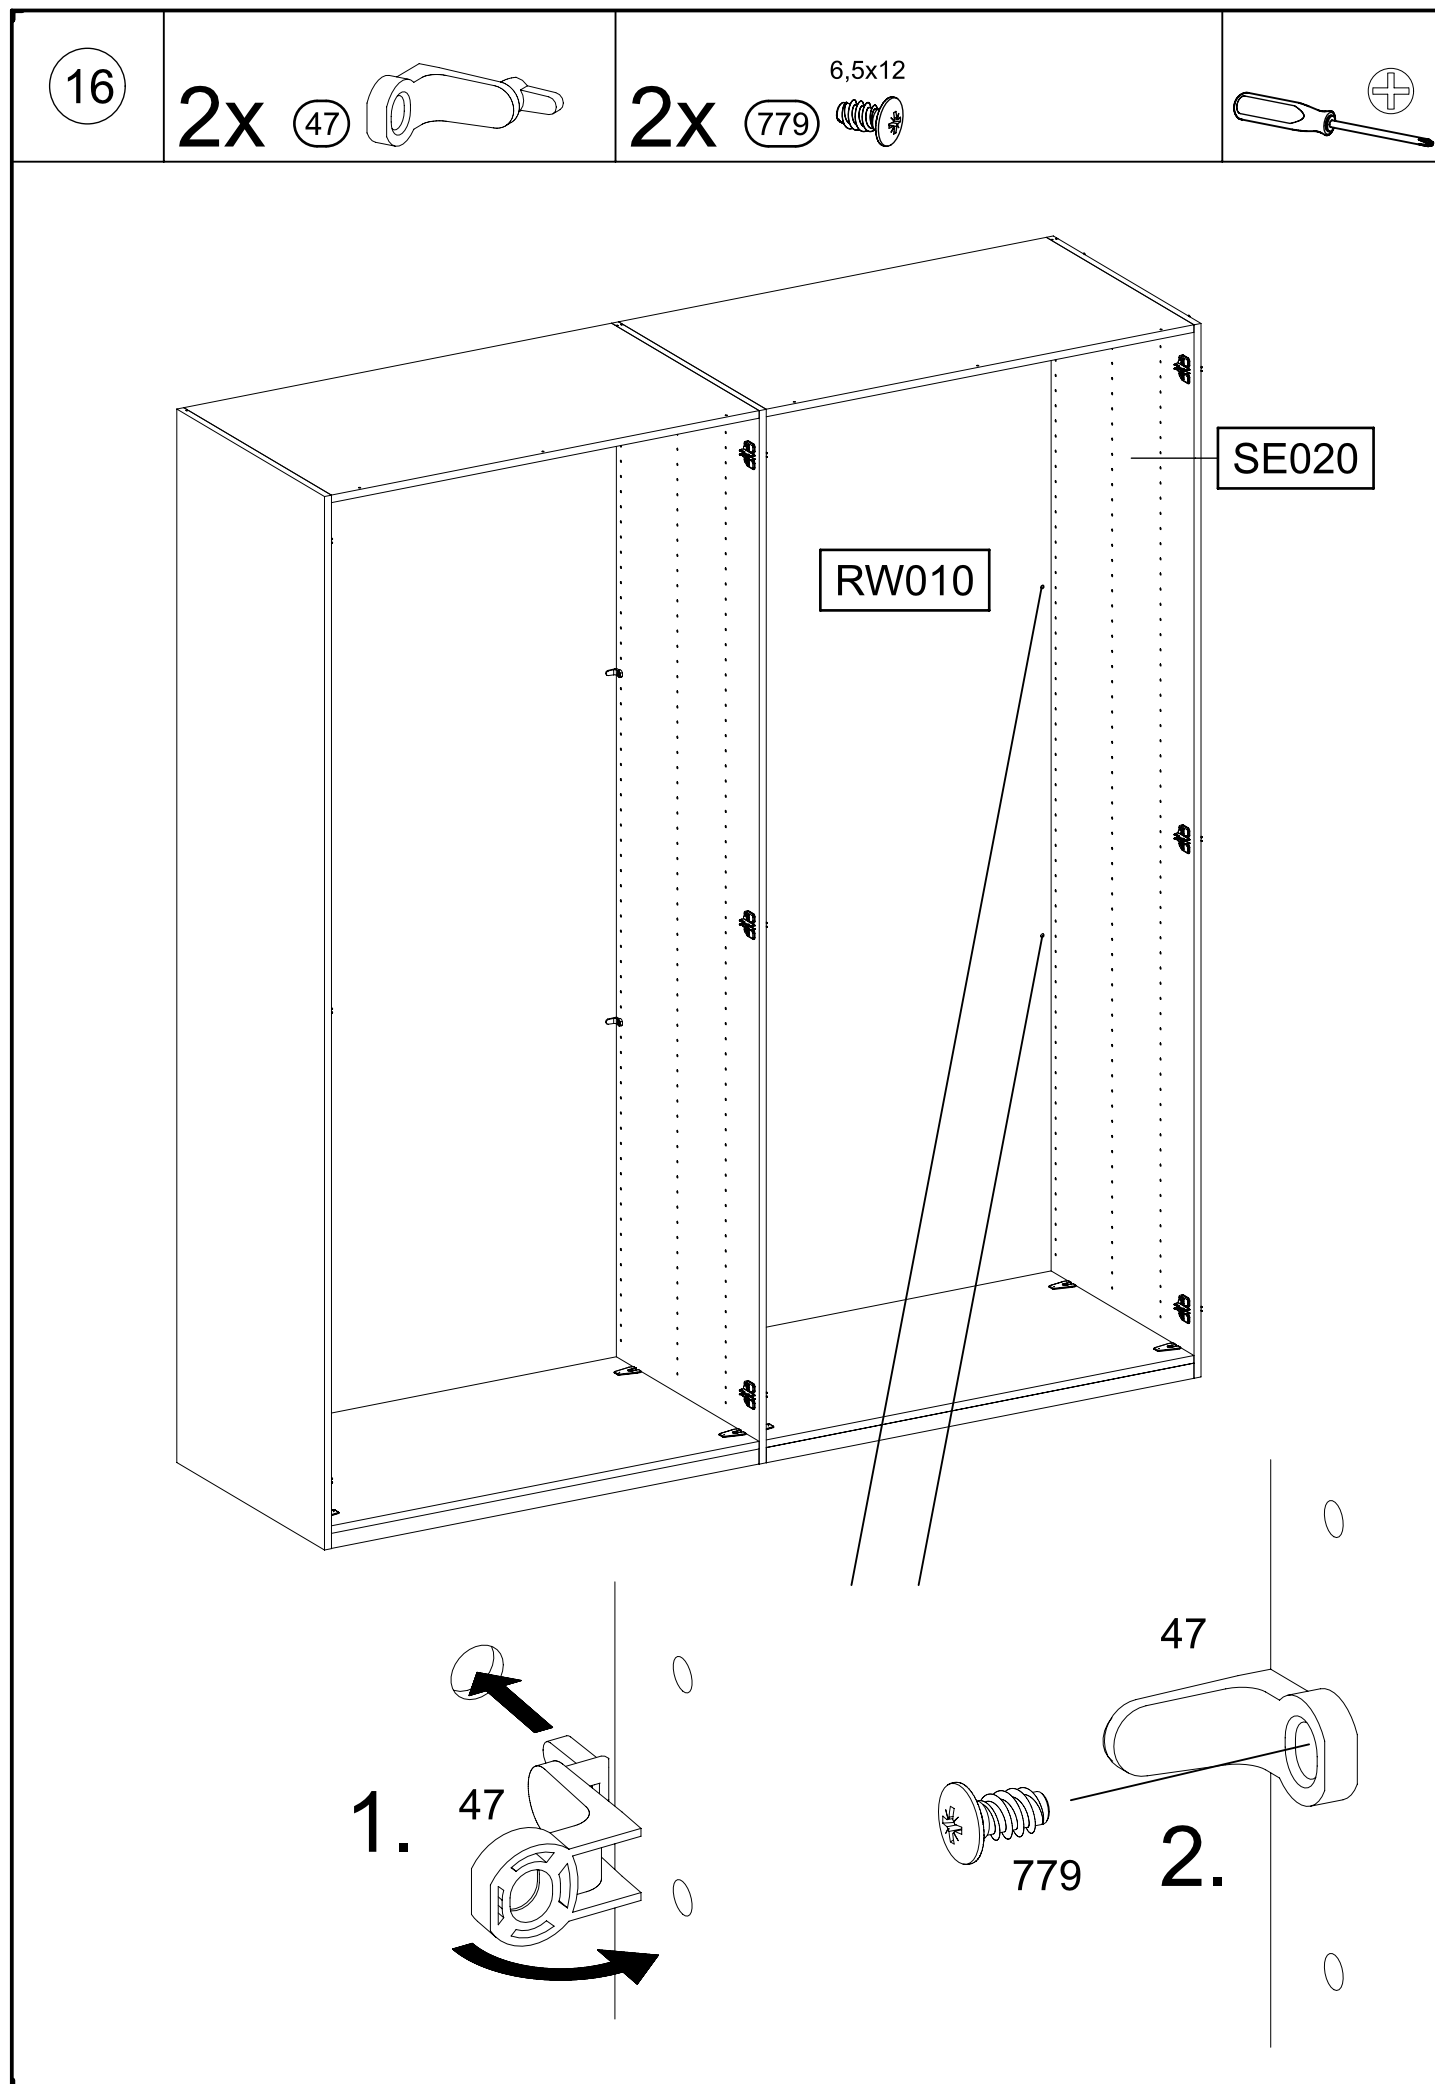

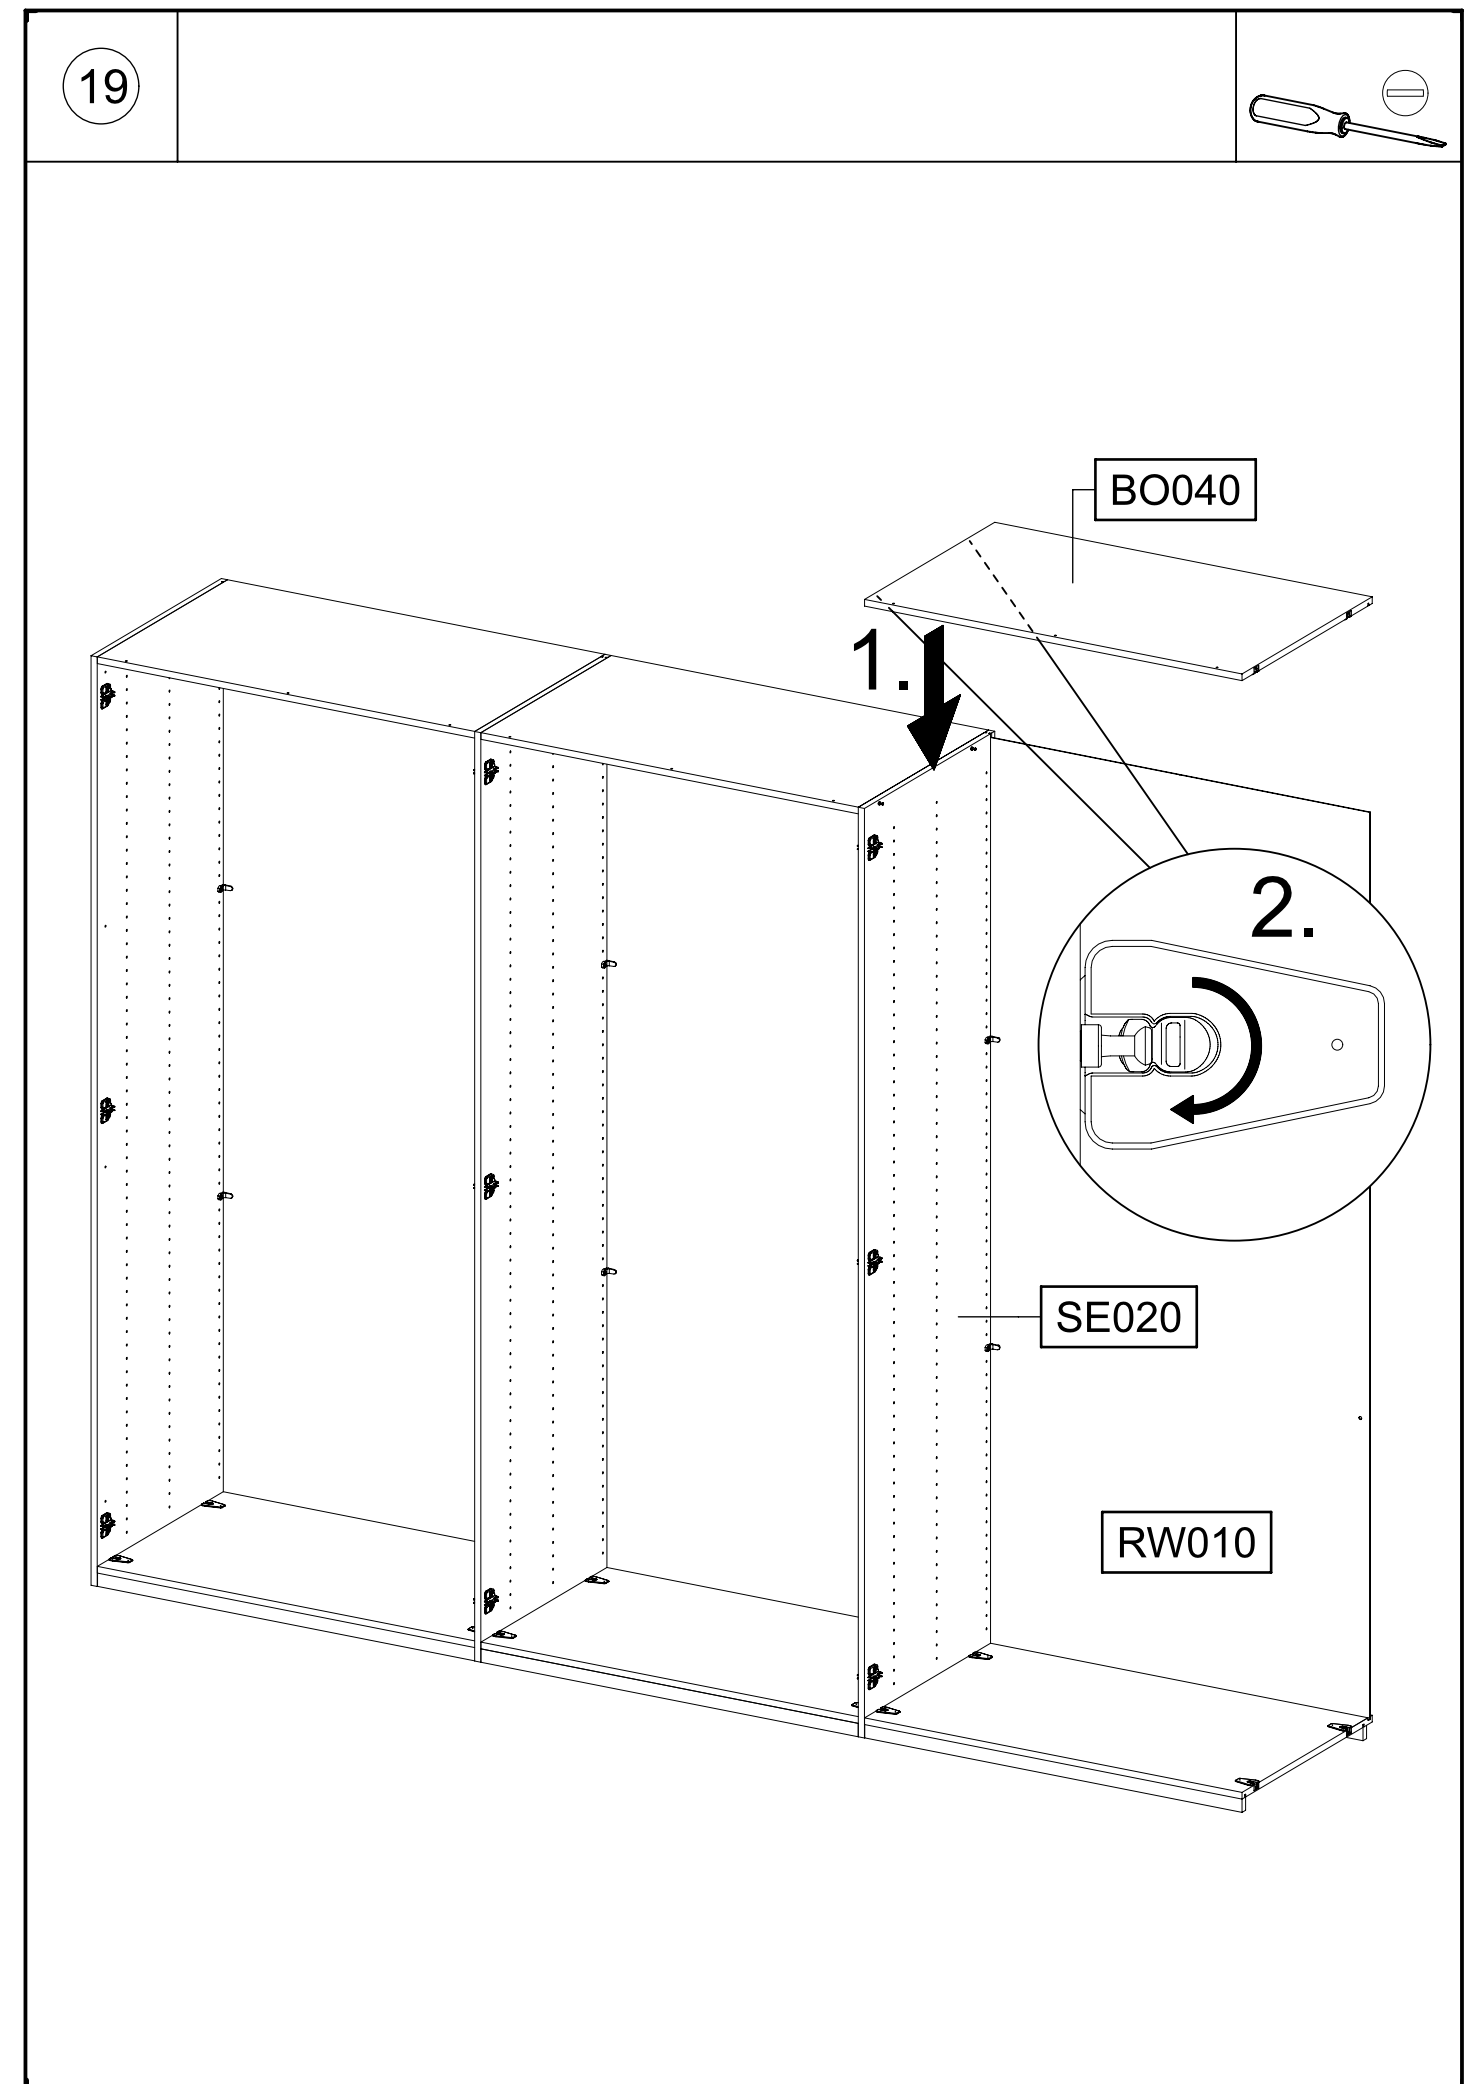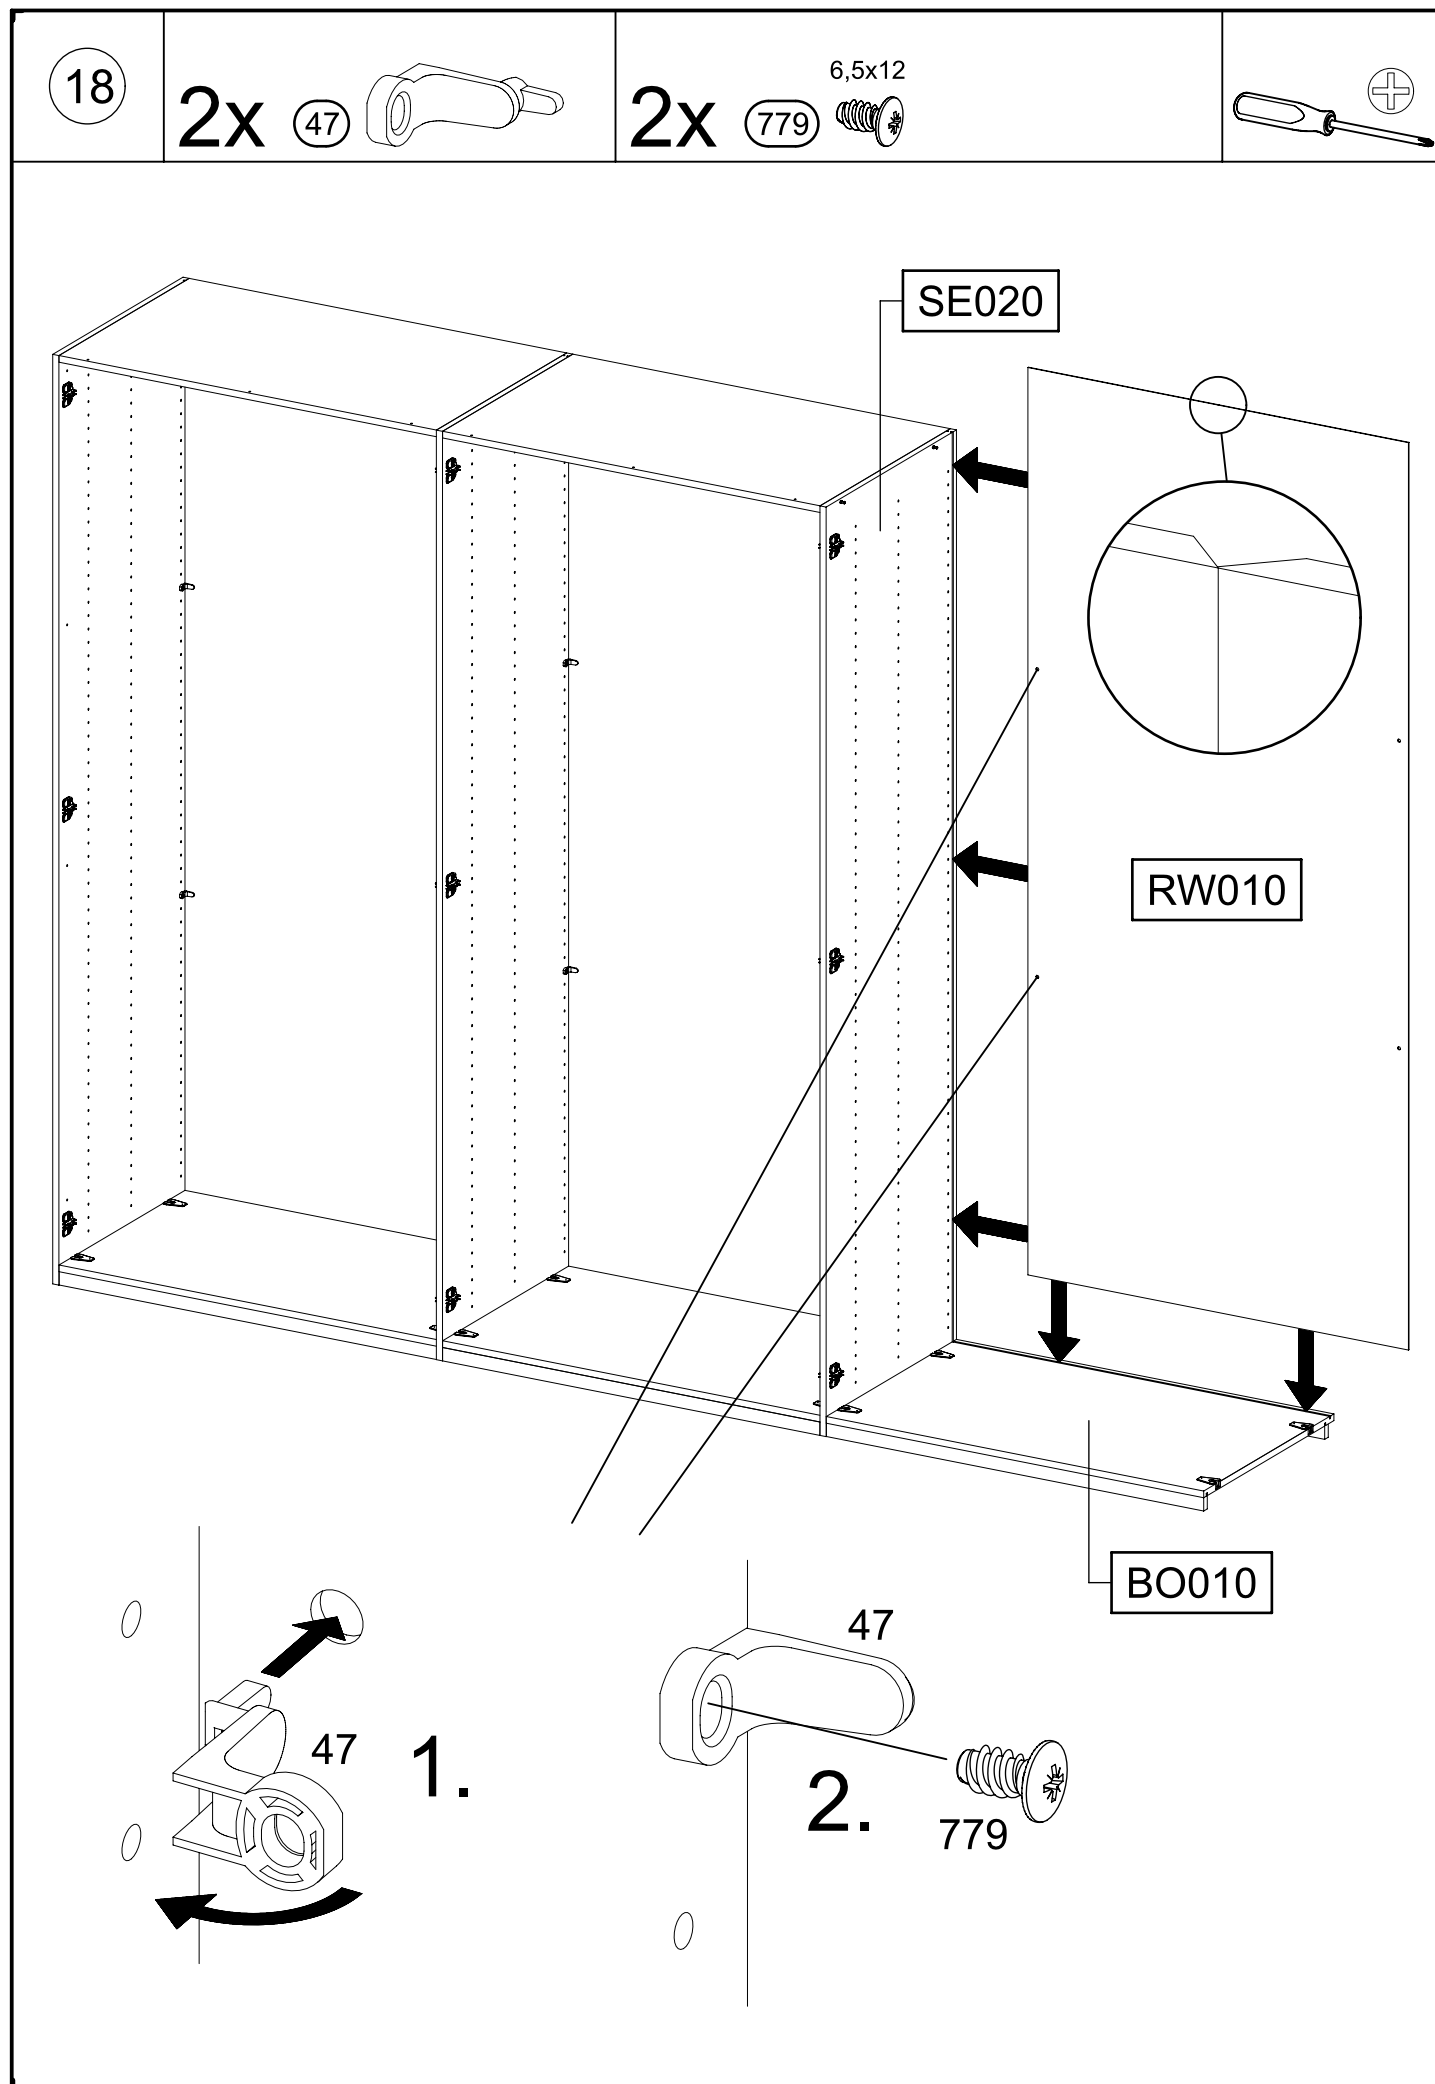

20



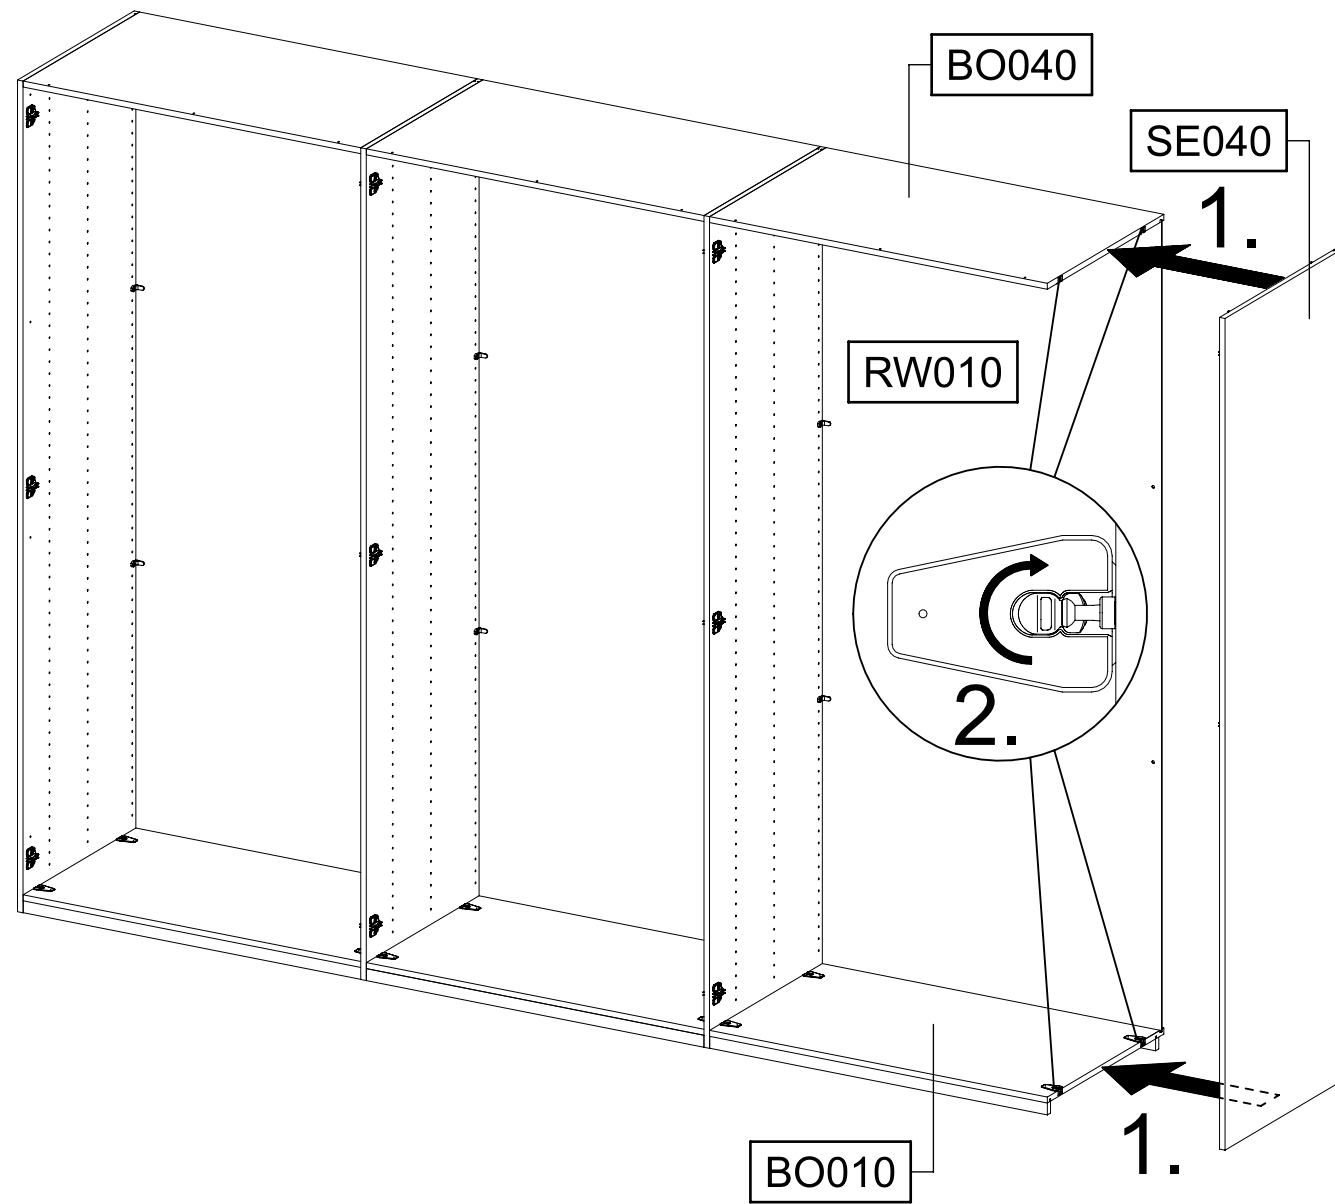



21

2x 47






2x 779 6,5x12

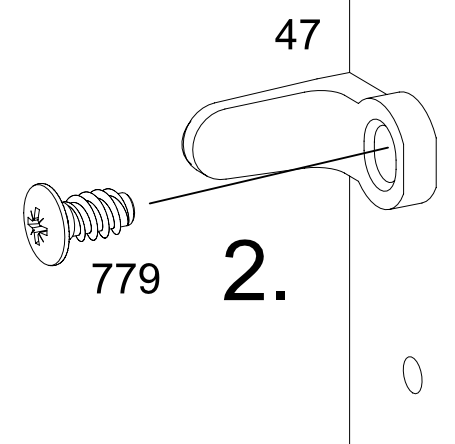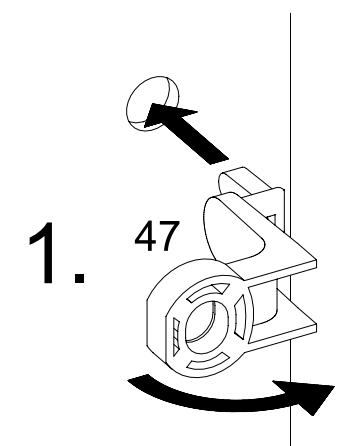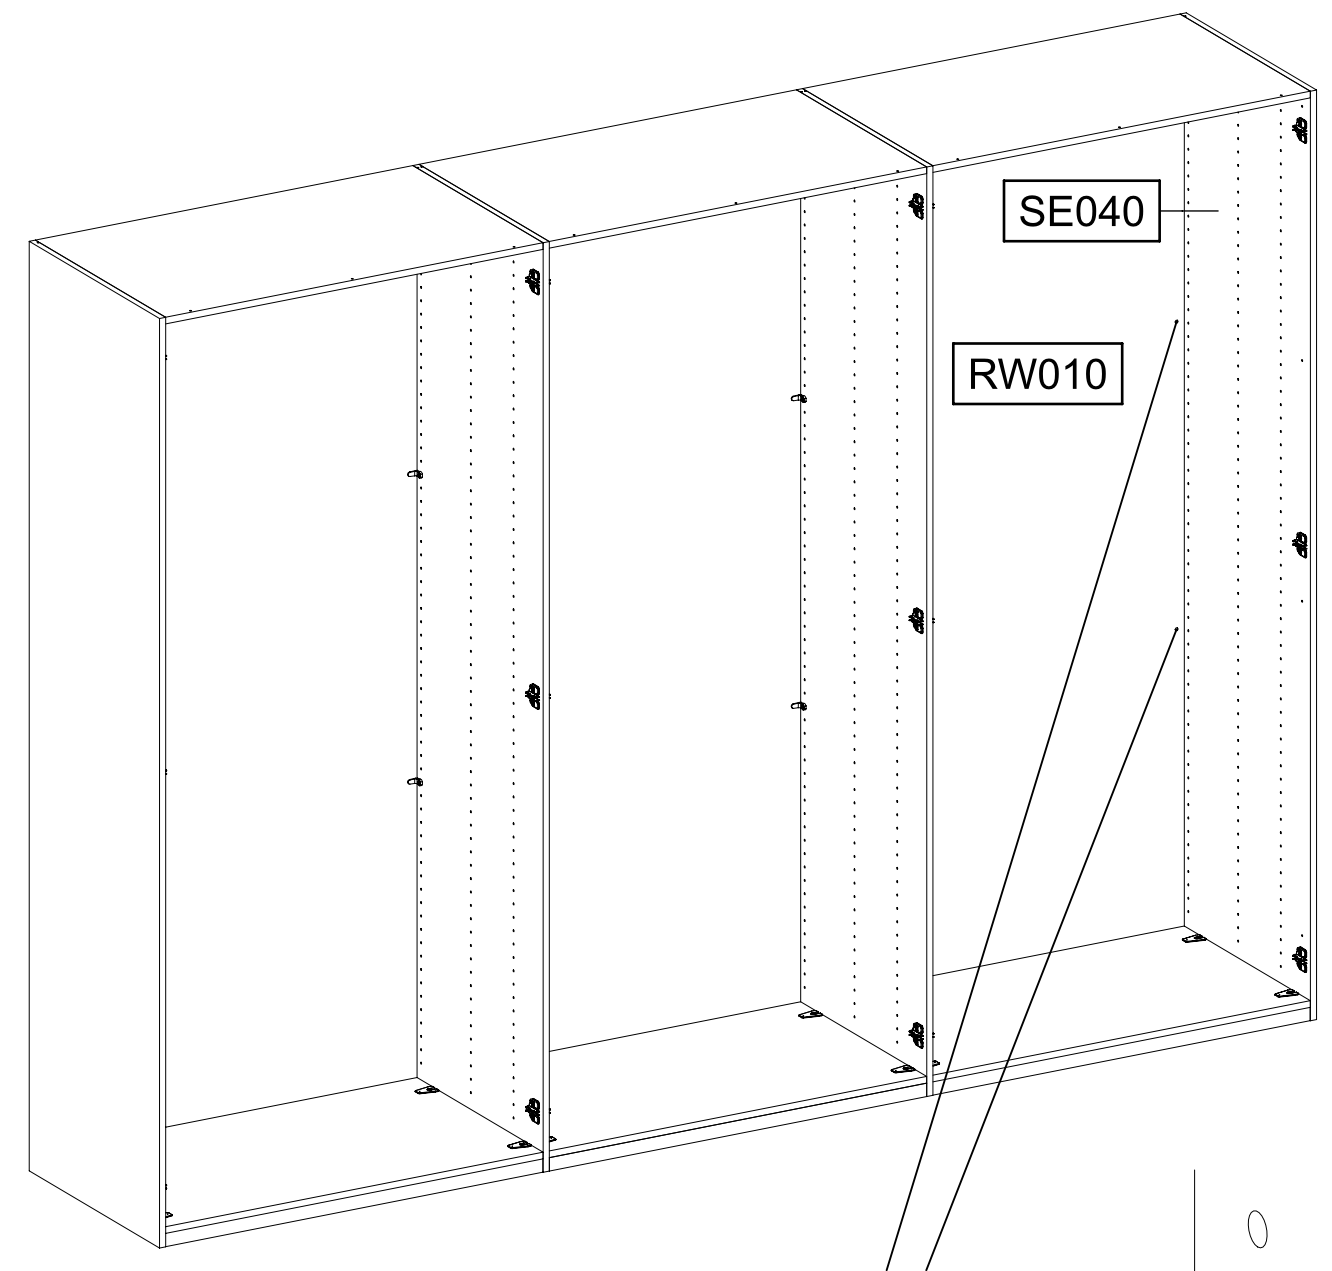

22

24x


1089

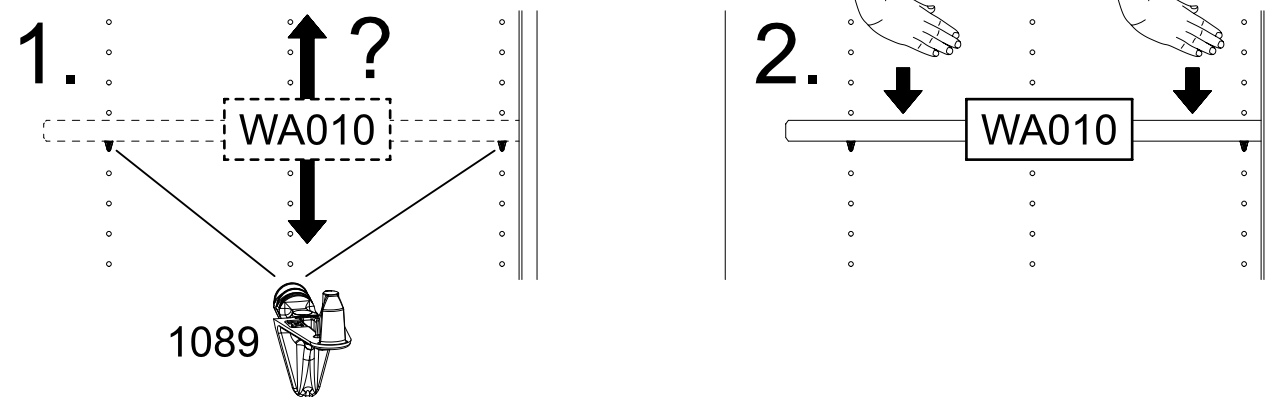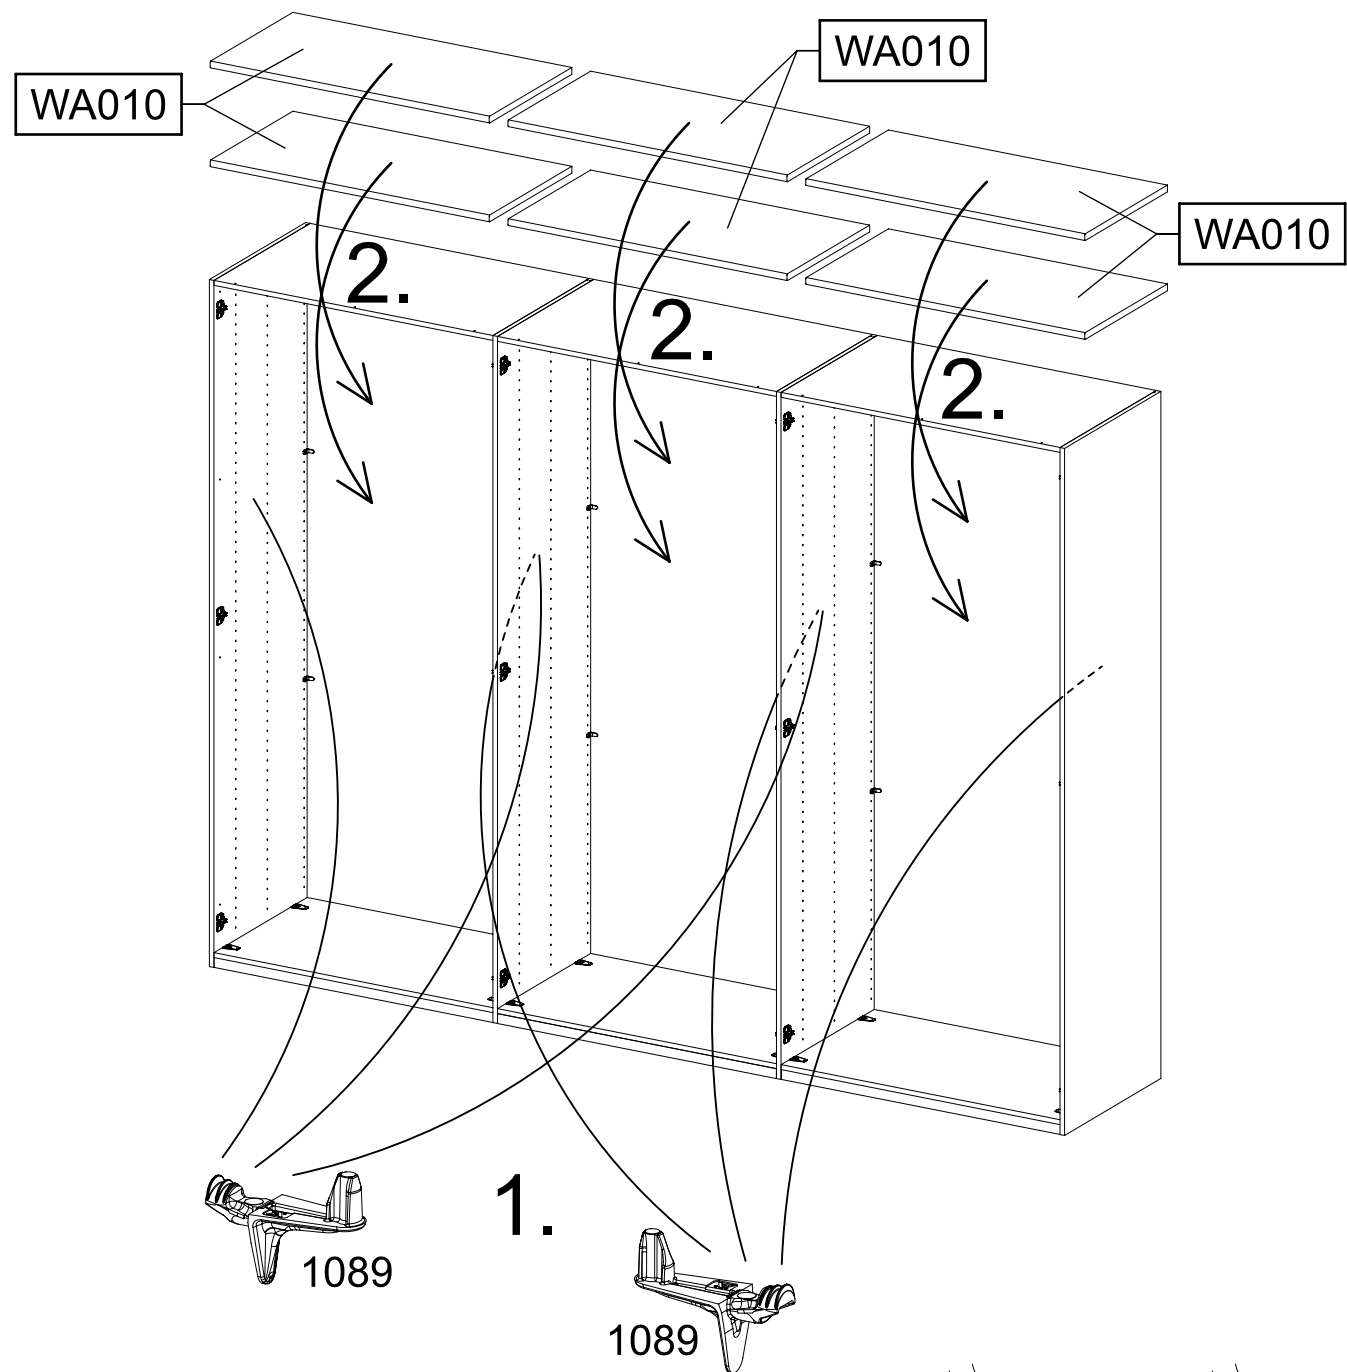

23

6x




29

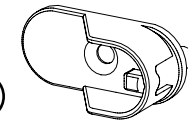

6x






205

3,5x15

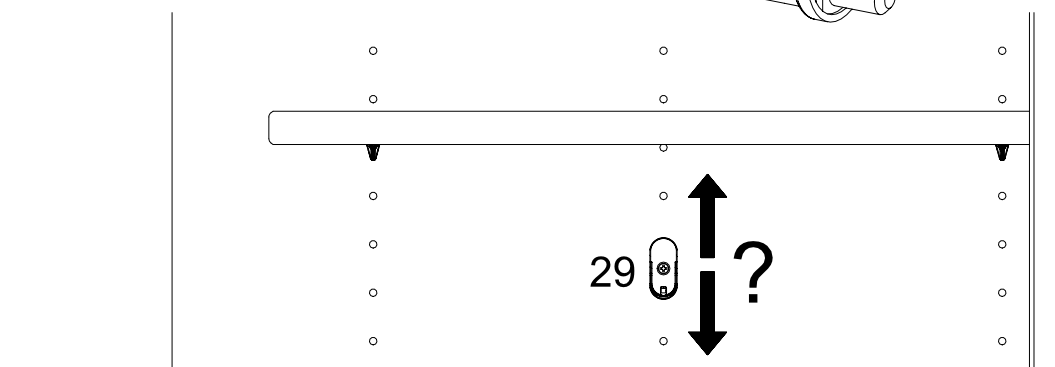
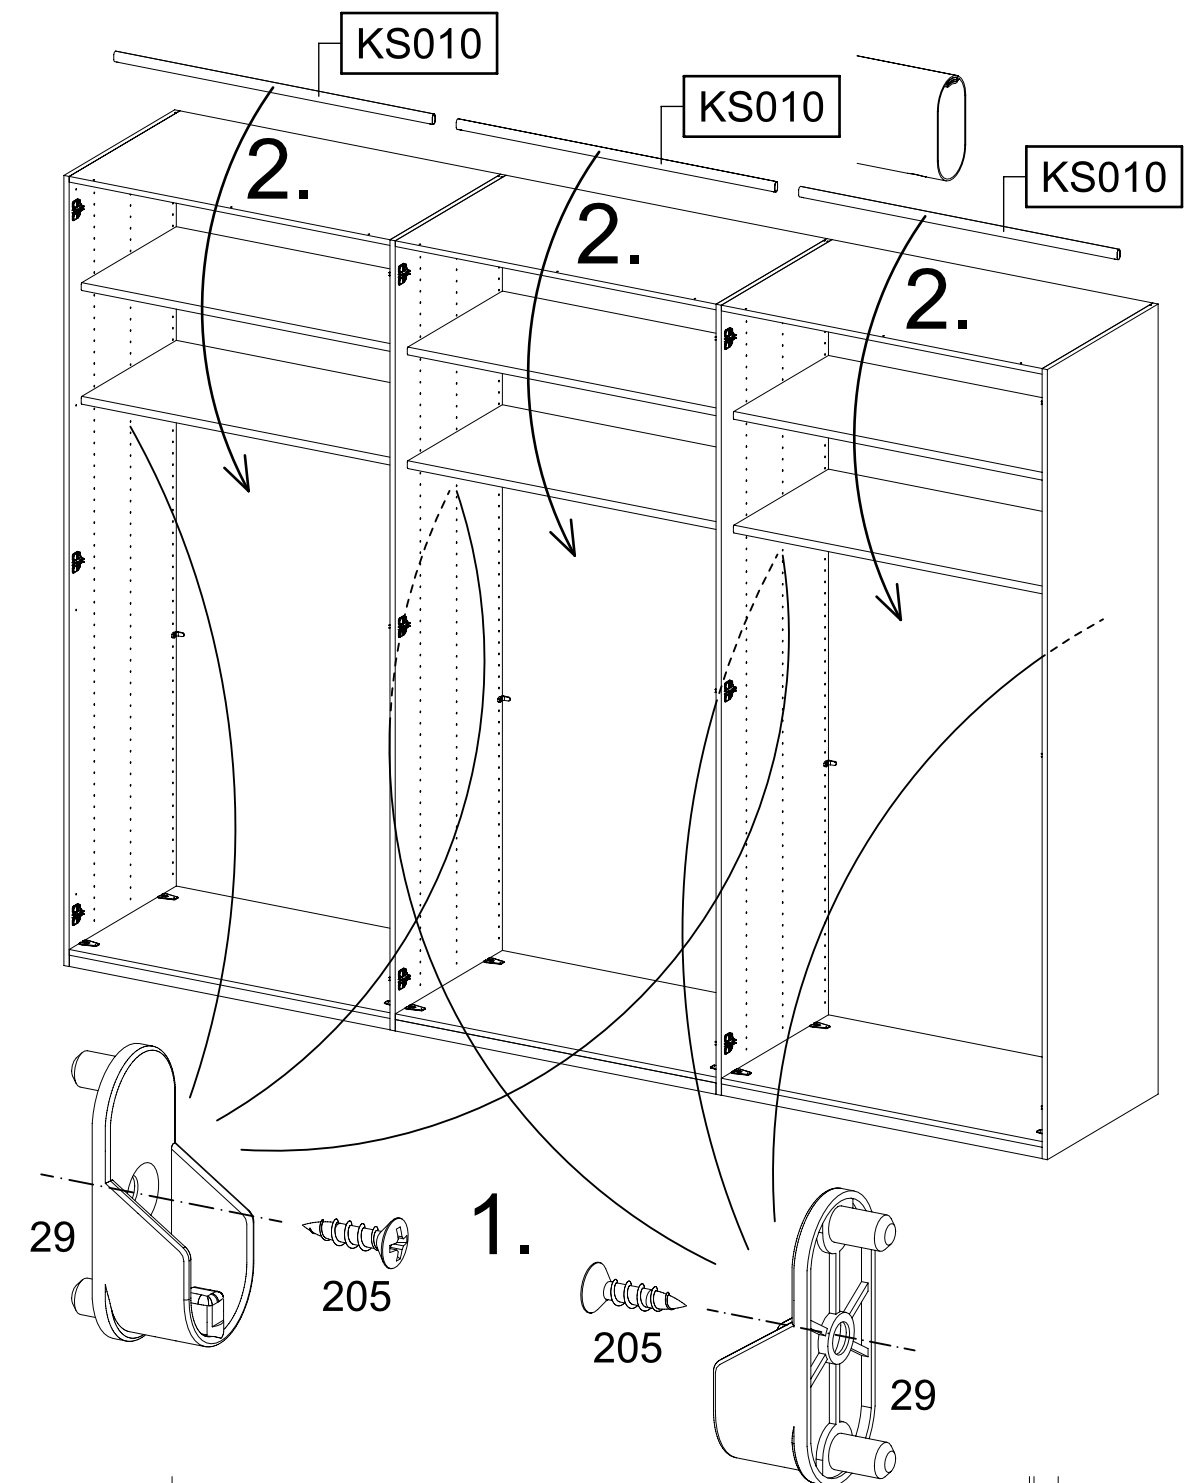



24

18-24x 1292

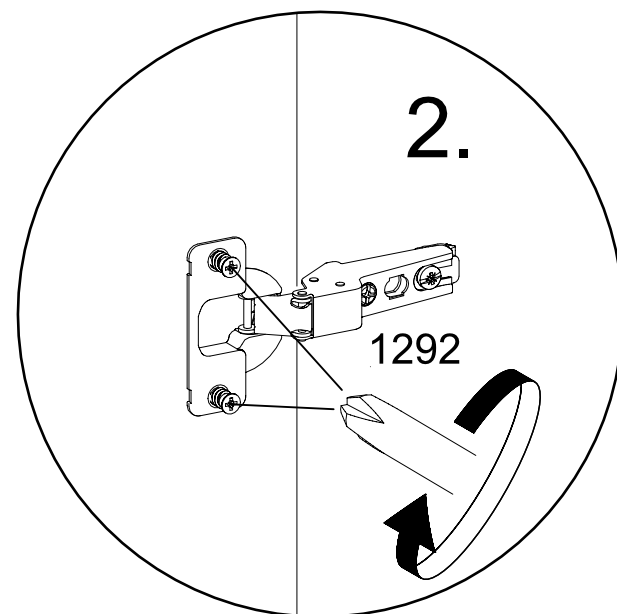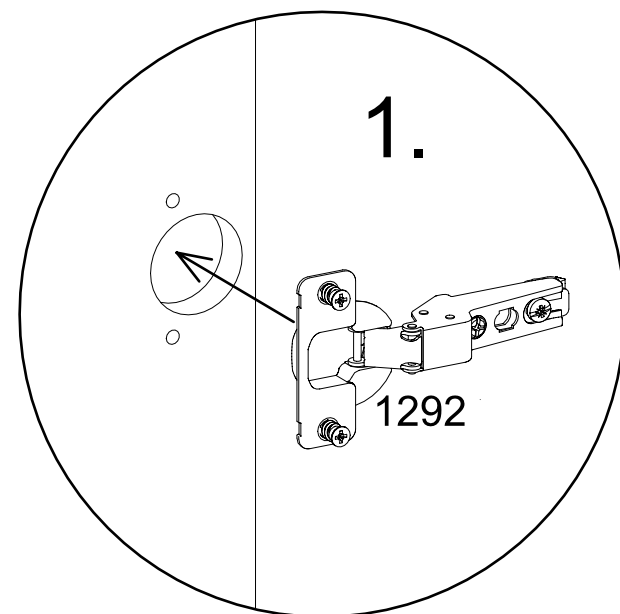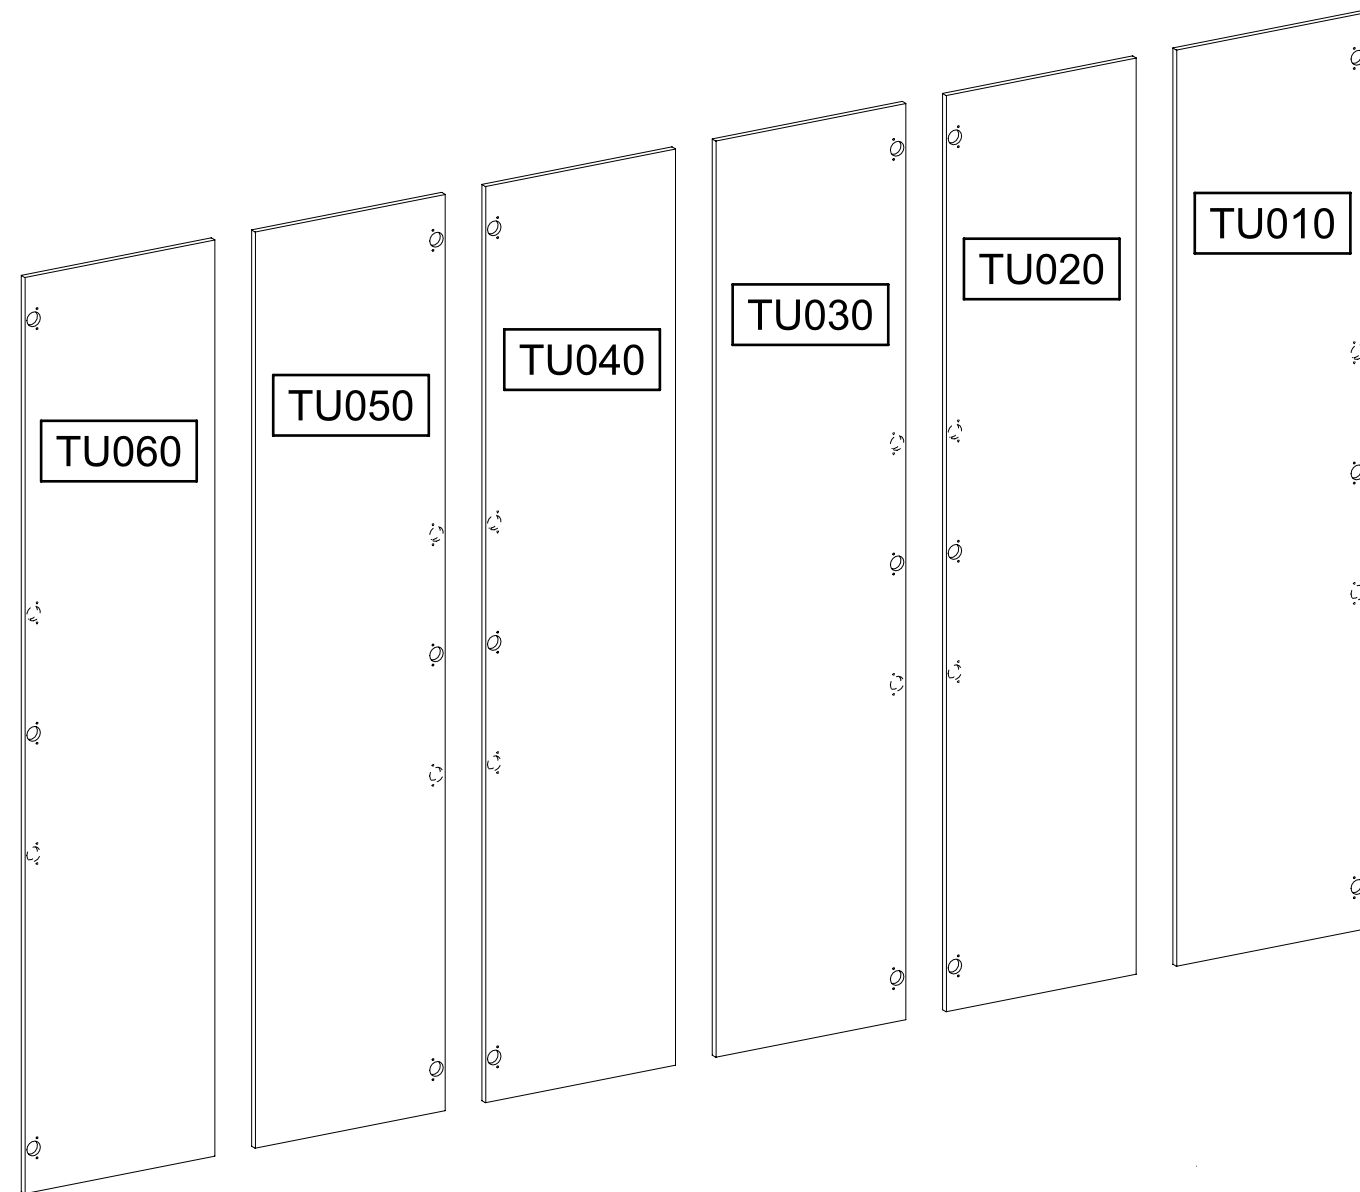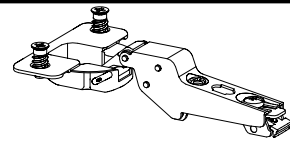

25

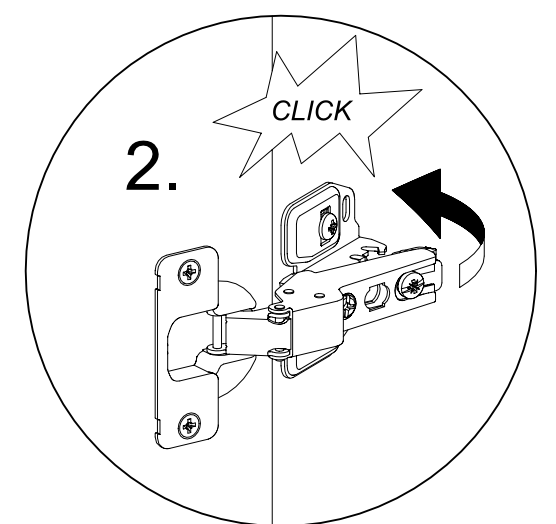
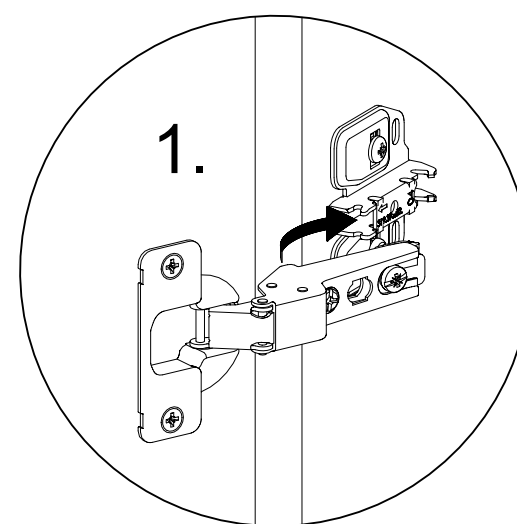
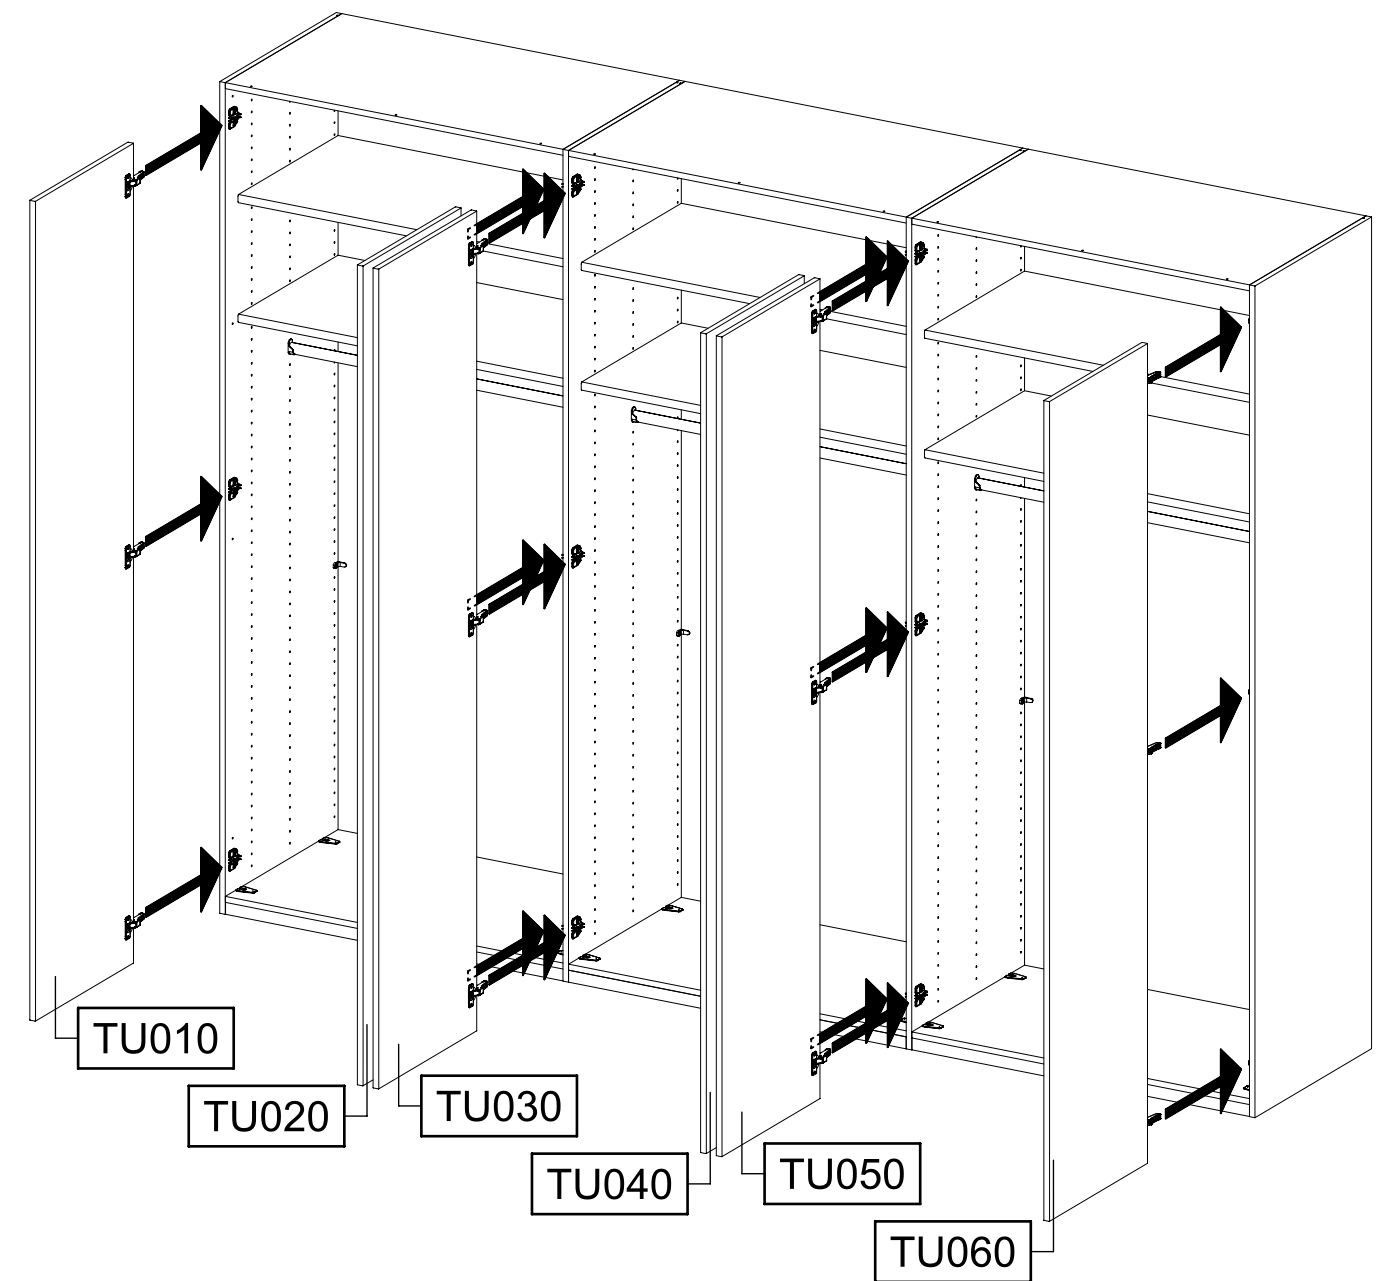


26


0-8x

12








55x16x6,2

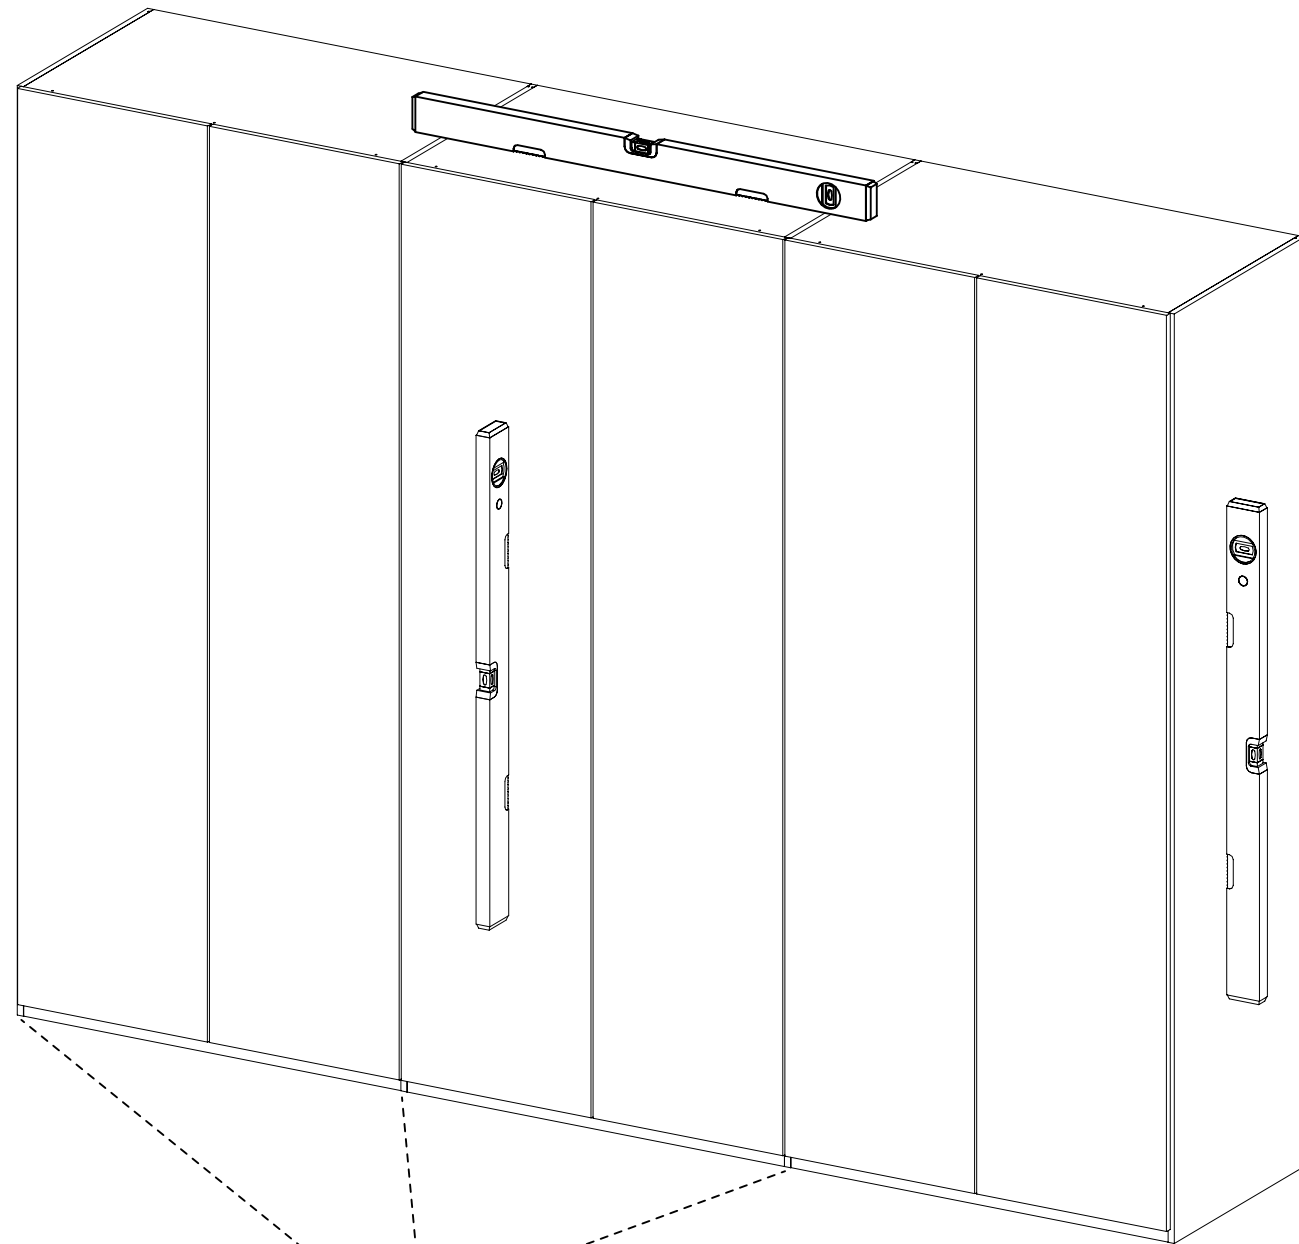

12

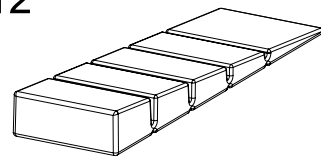

27

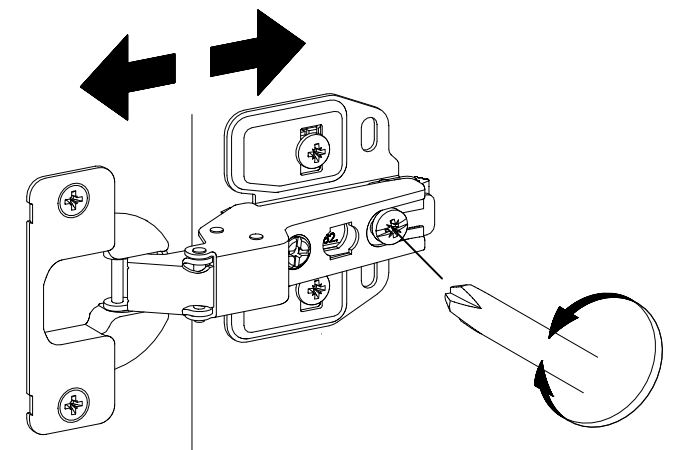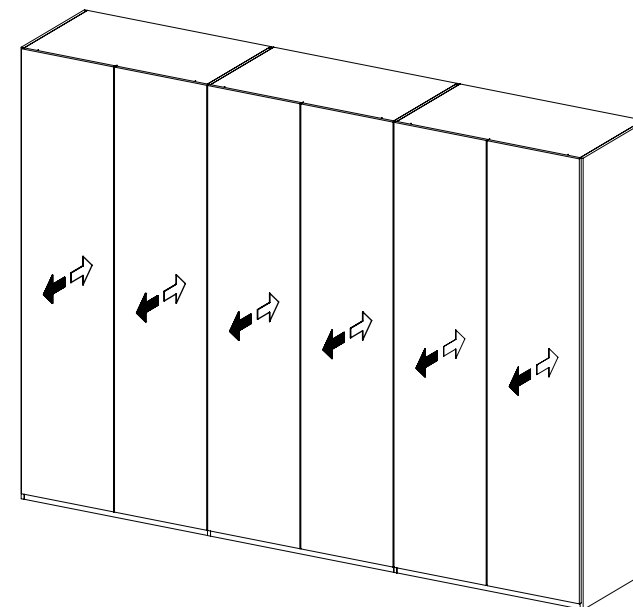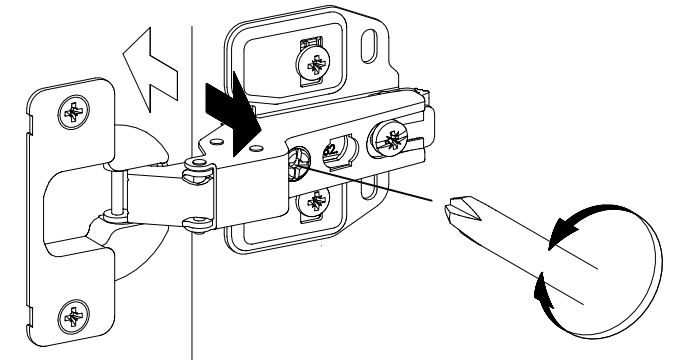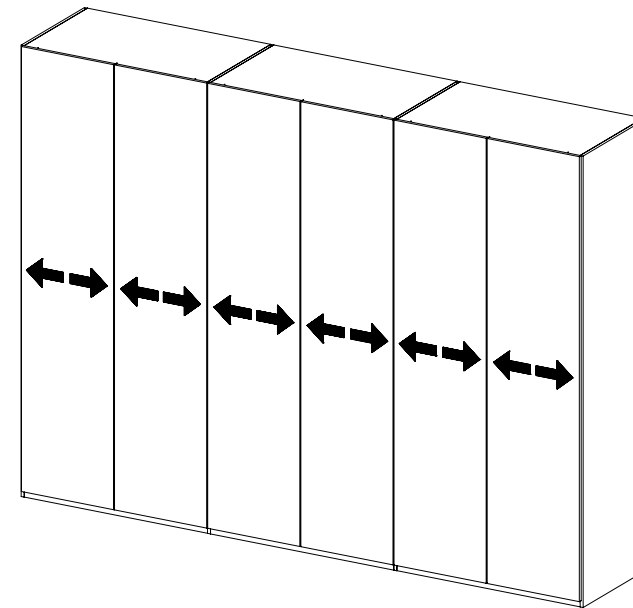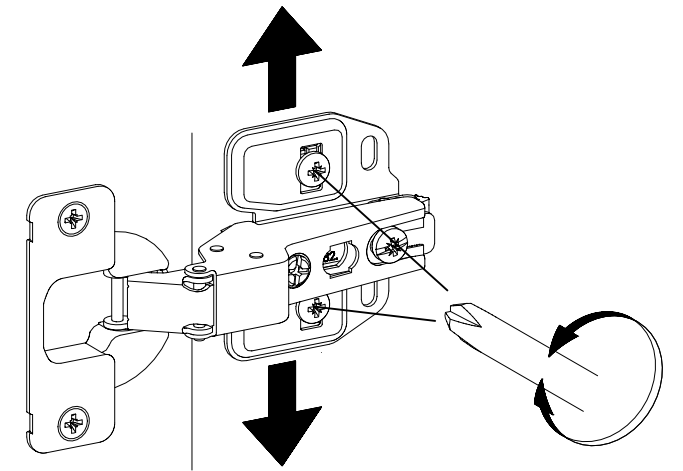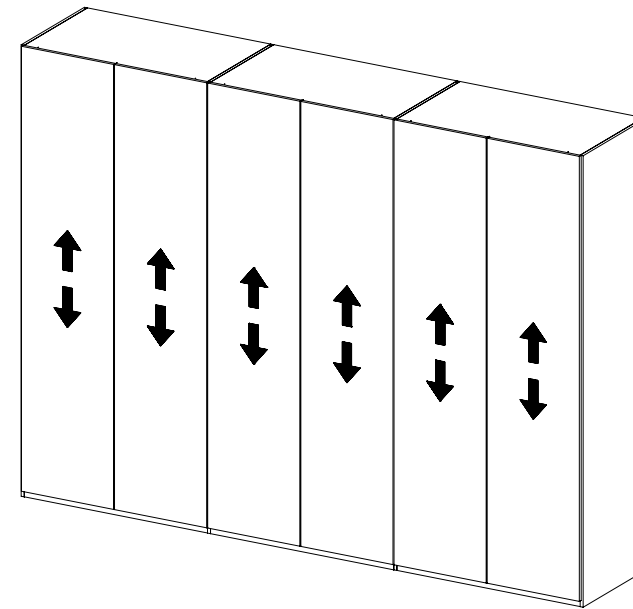


28


36-48x

621

4x13




1291

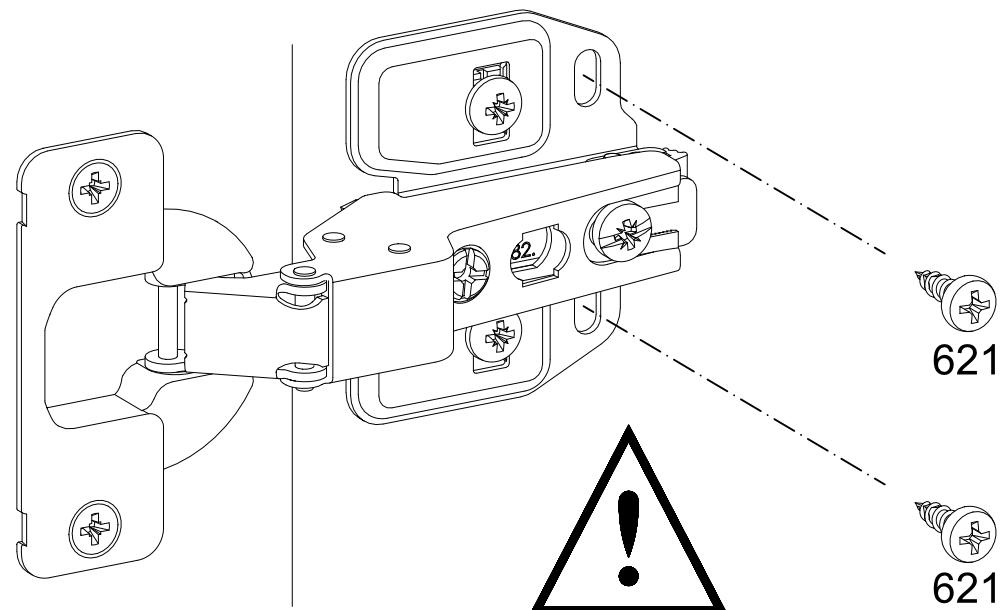

29

2x

68



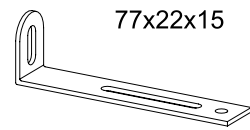





77x22x15

4x

201

4x15

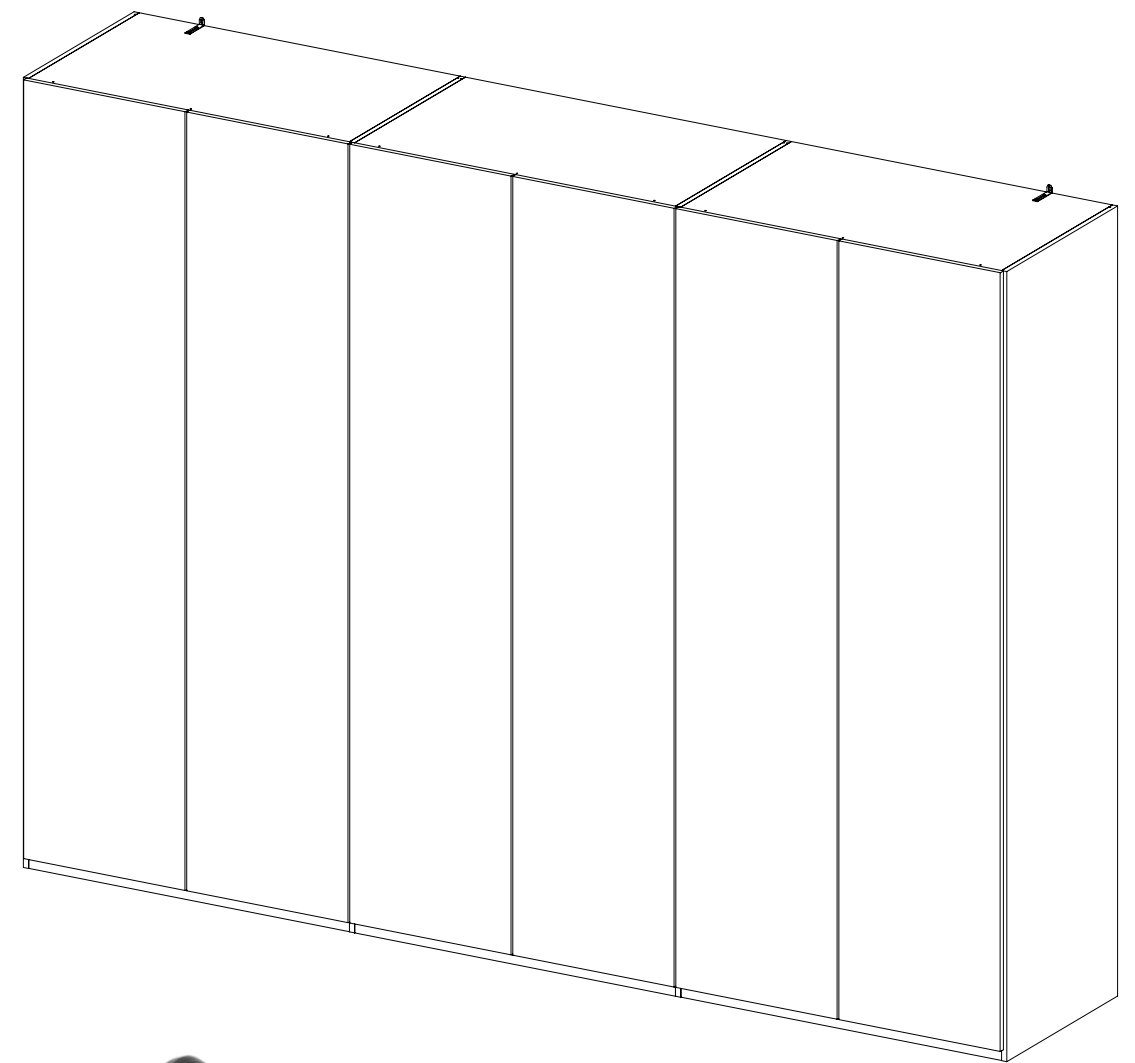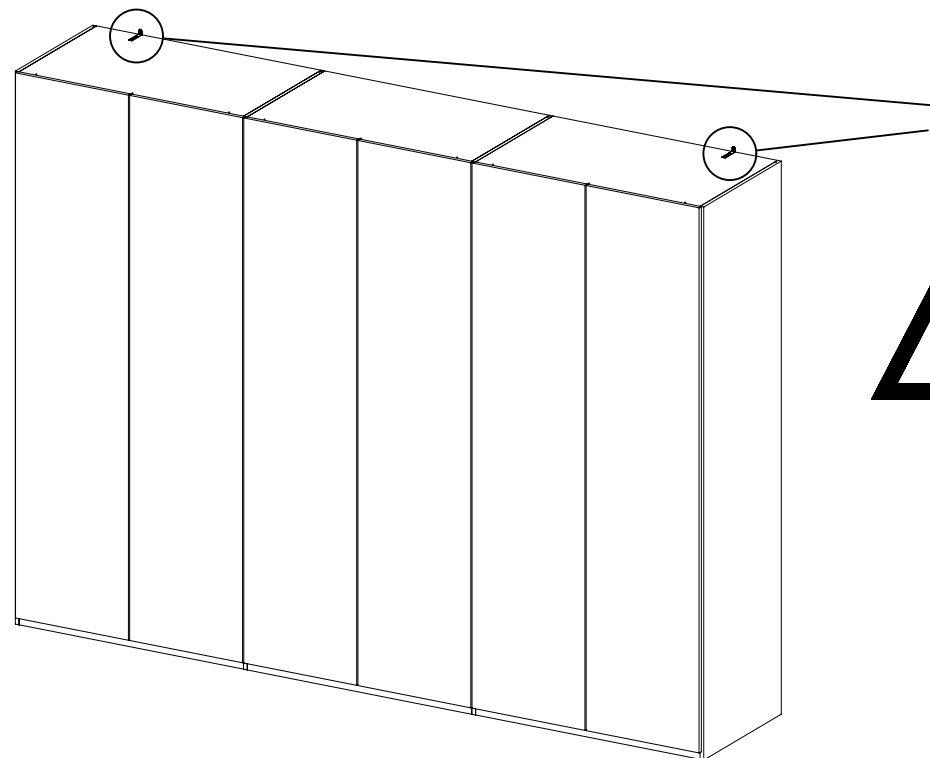



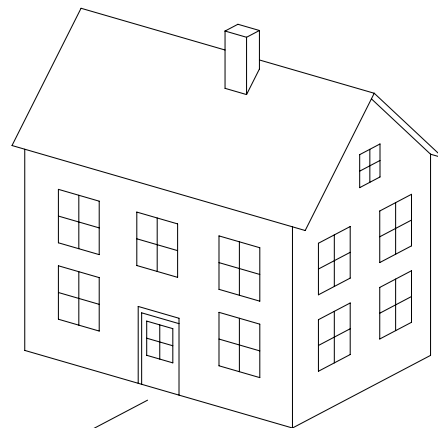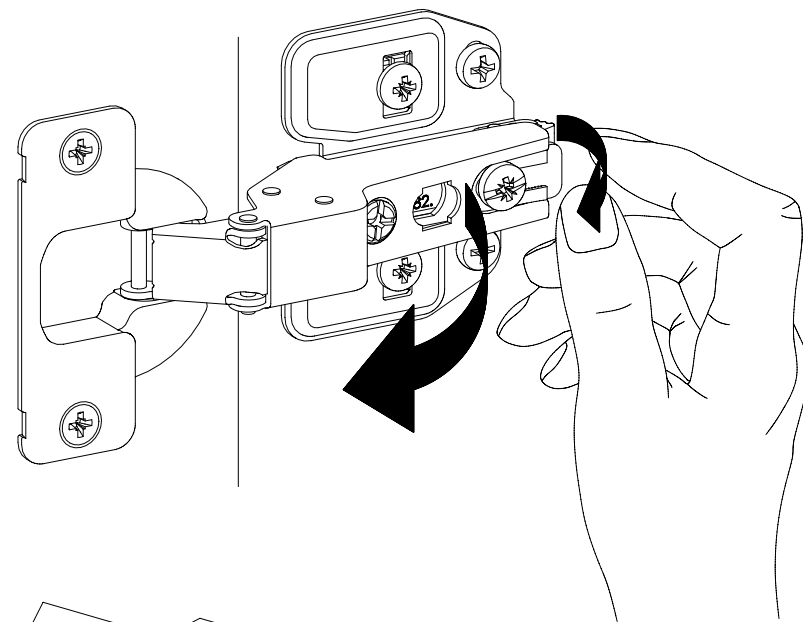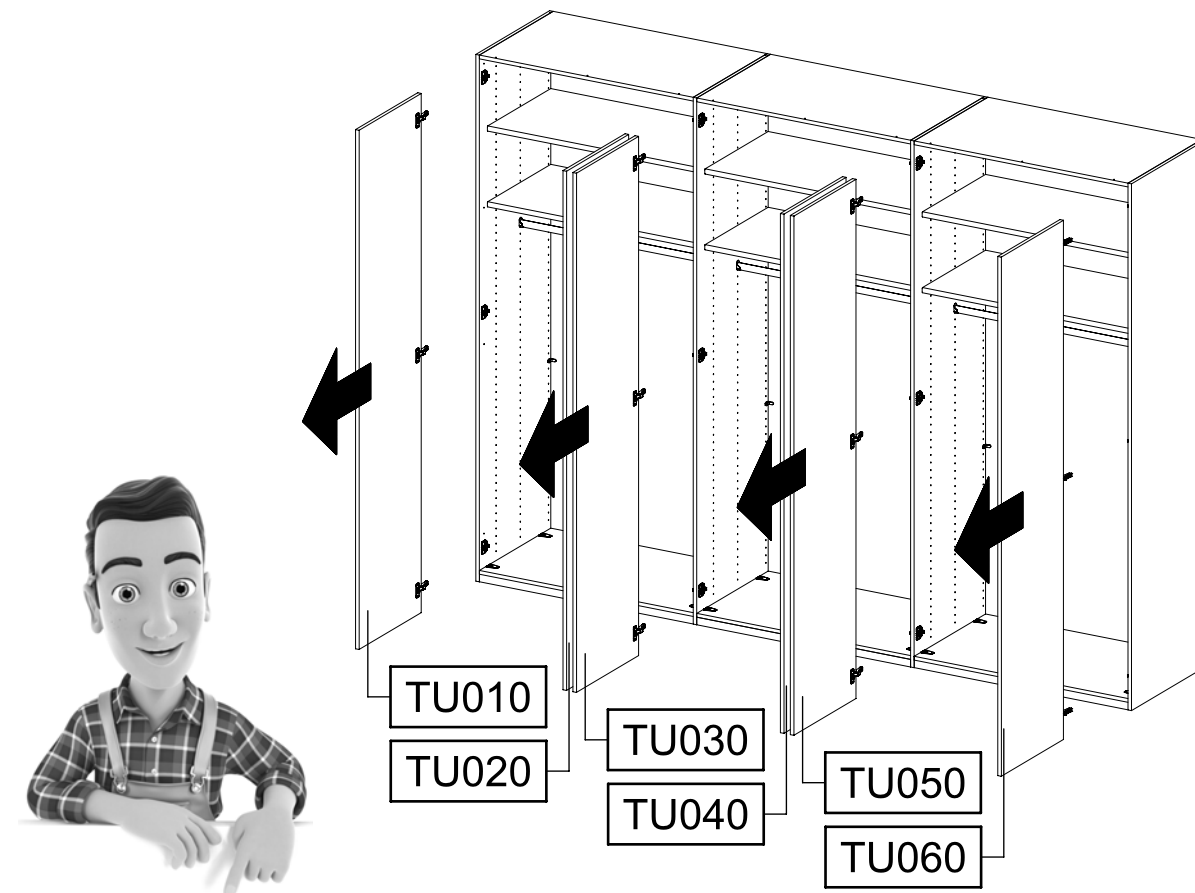

1.

ME190_02


rauch

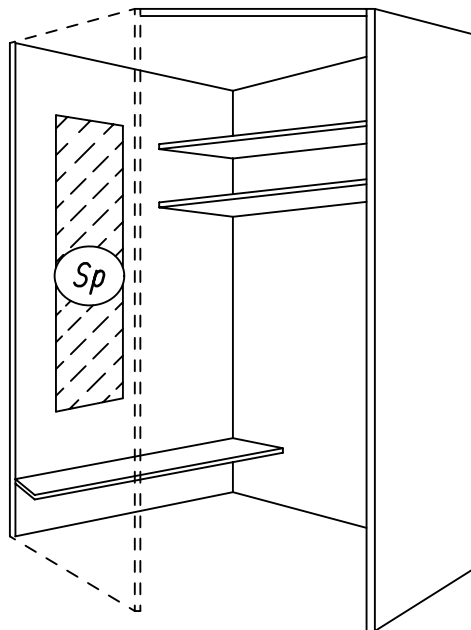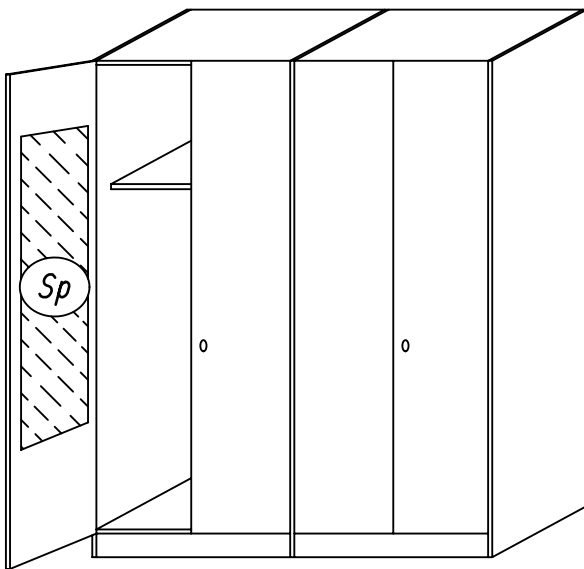

637




492




3x15


1

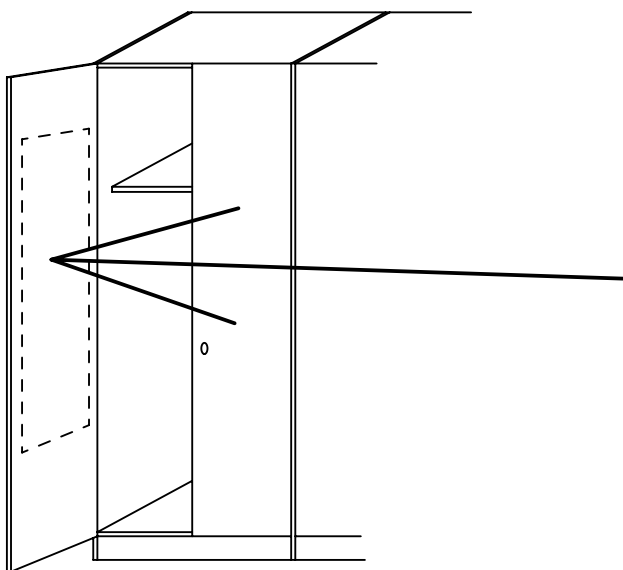



2

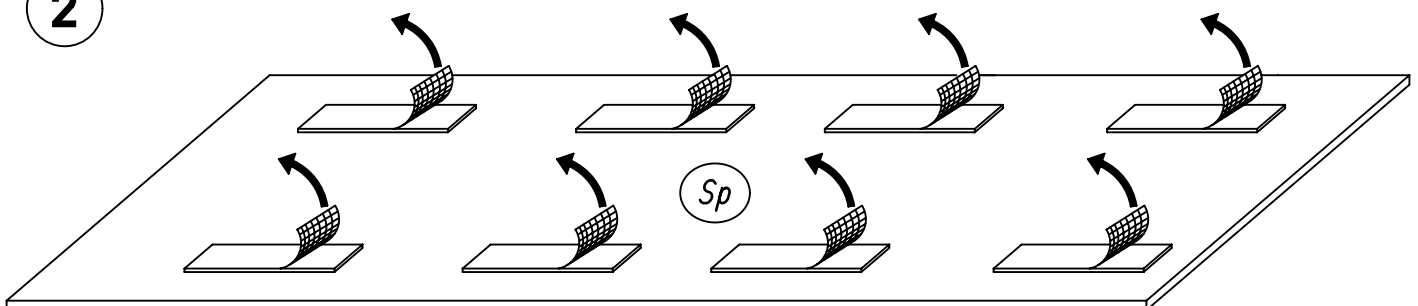

3

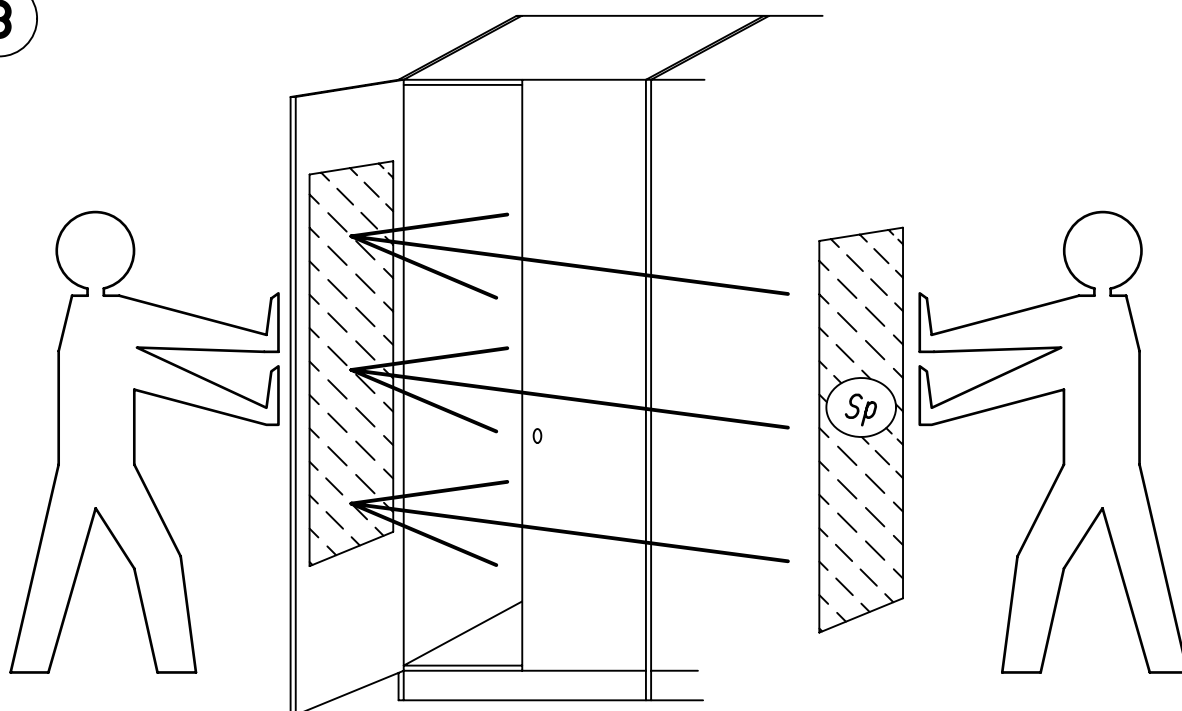


4

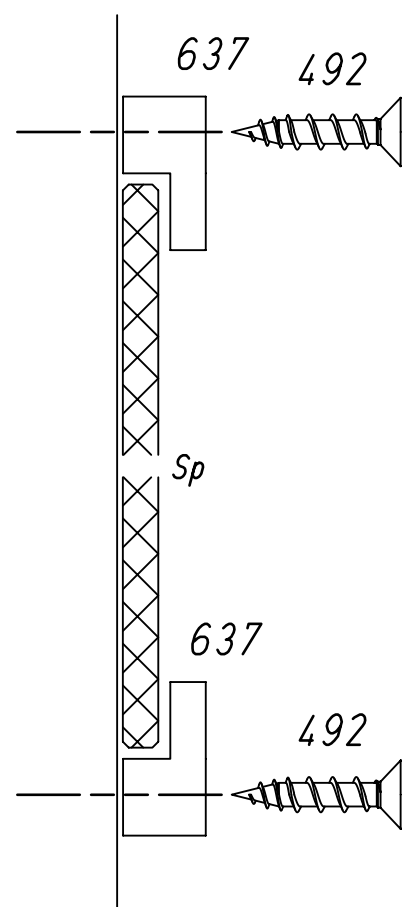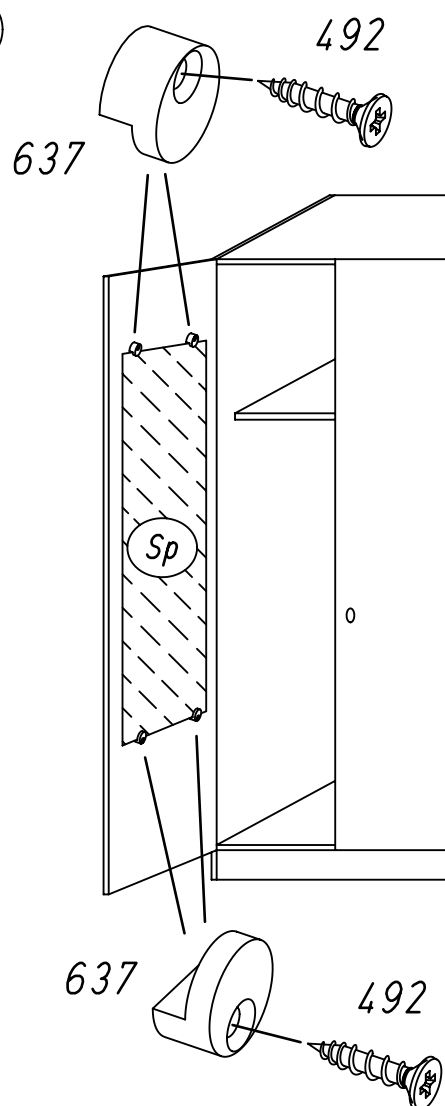



Montageanleitung / Mounting Instruction – Nexis für Nexis Bänder / Nexis for Nexis hinges

Zuerst Türeinrichtungen vornehmen / Make door adjustments first



1

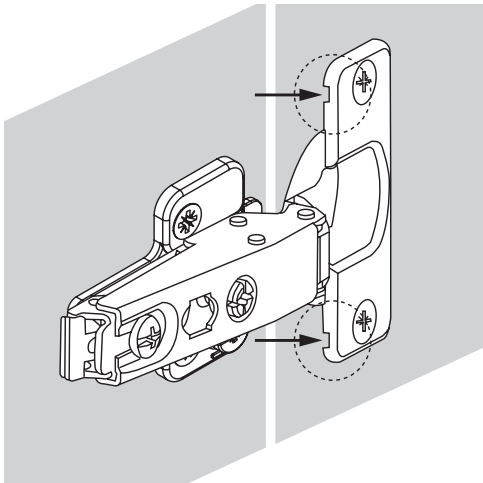



2

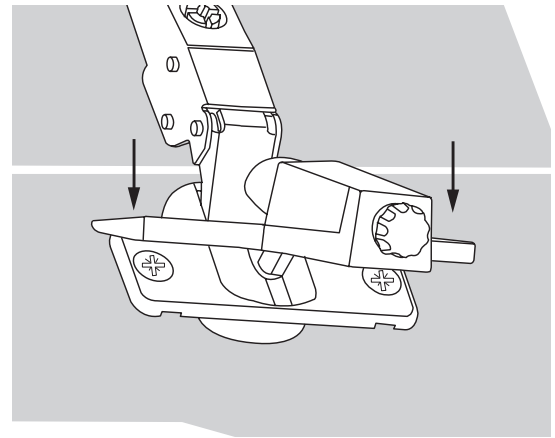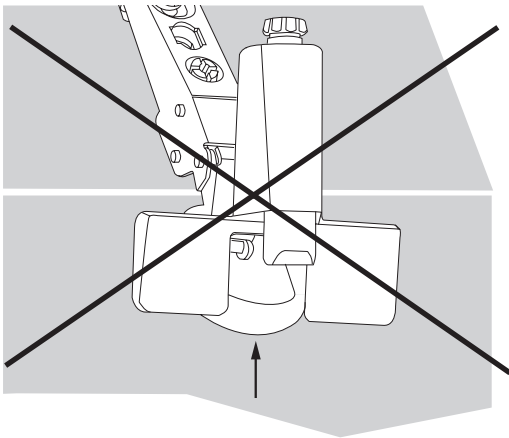


3

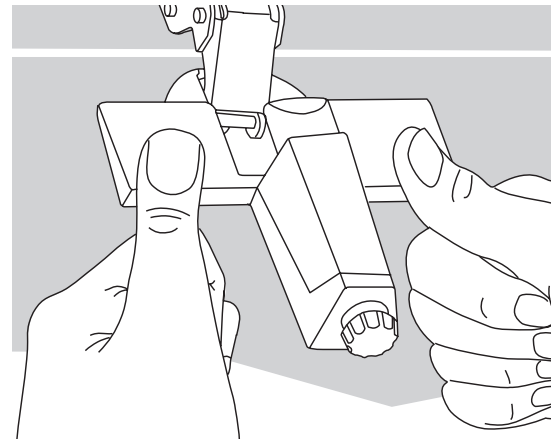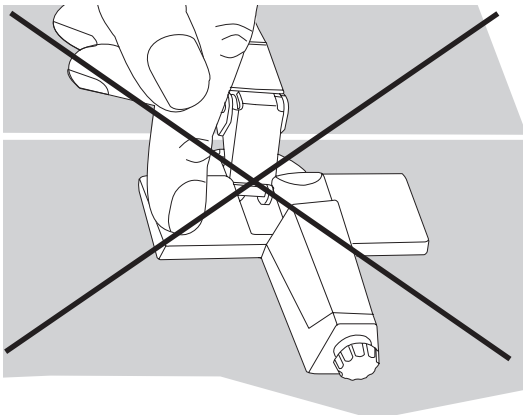

4

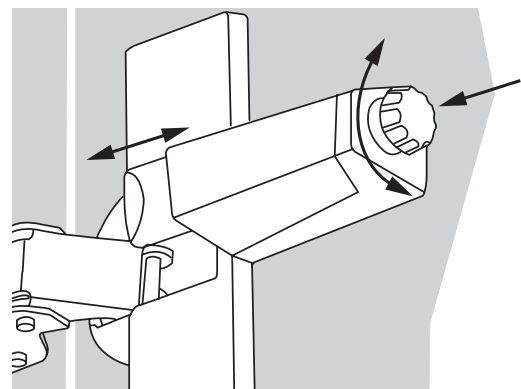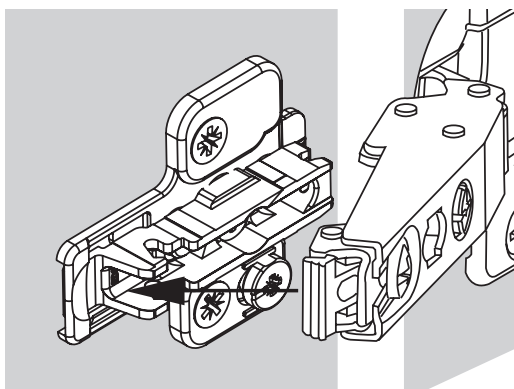





Demontage / Dismounting

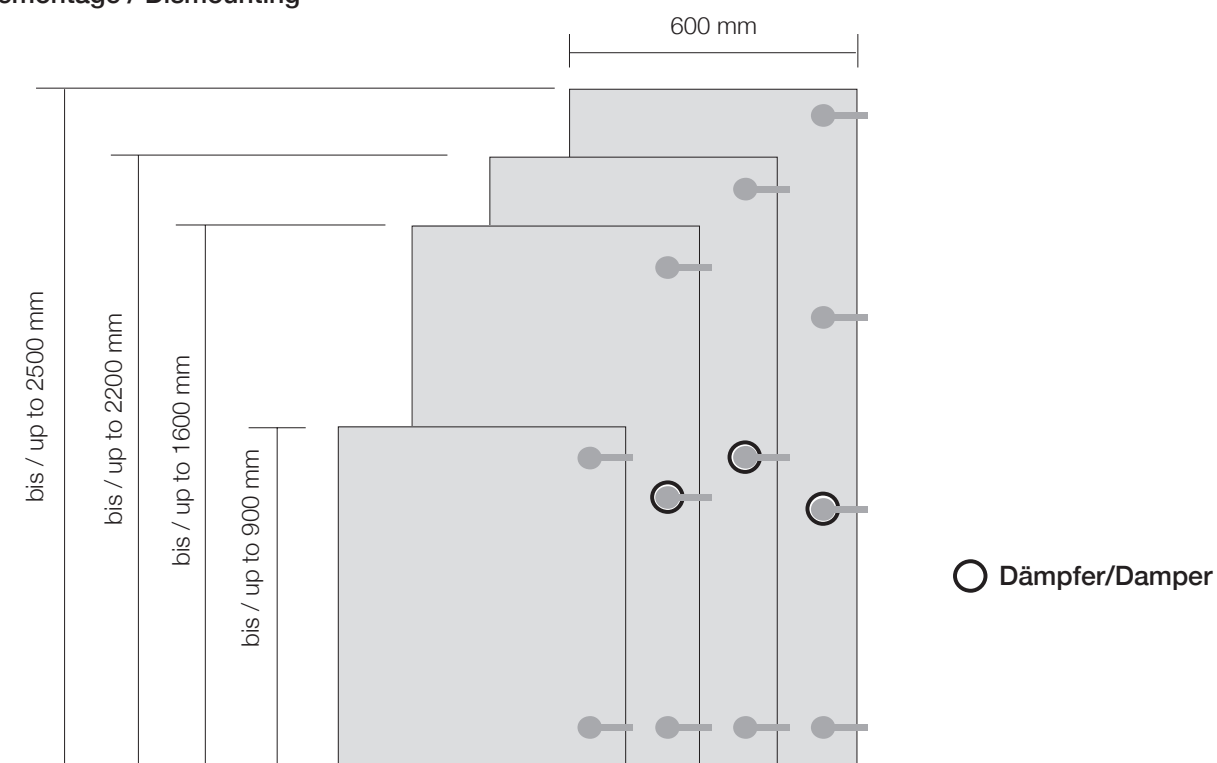

1.

MZ231_01

rauch

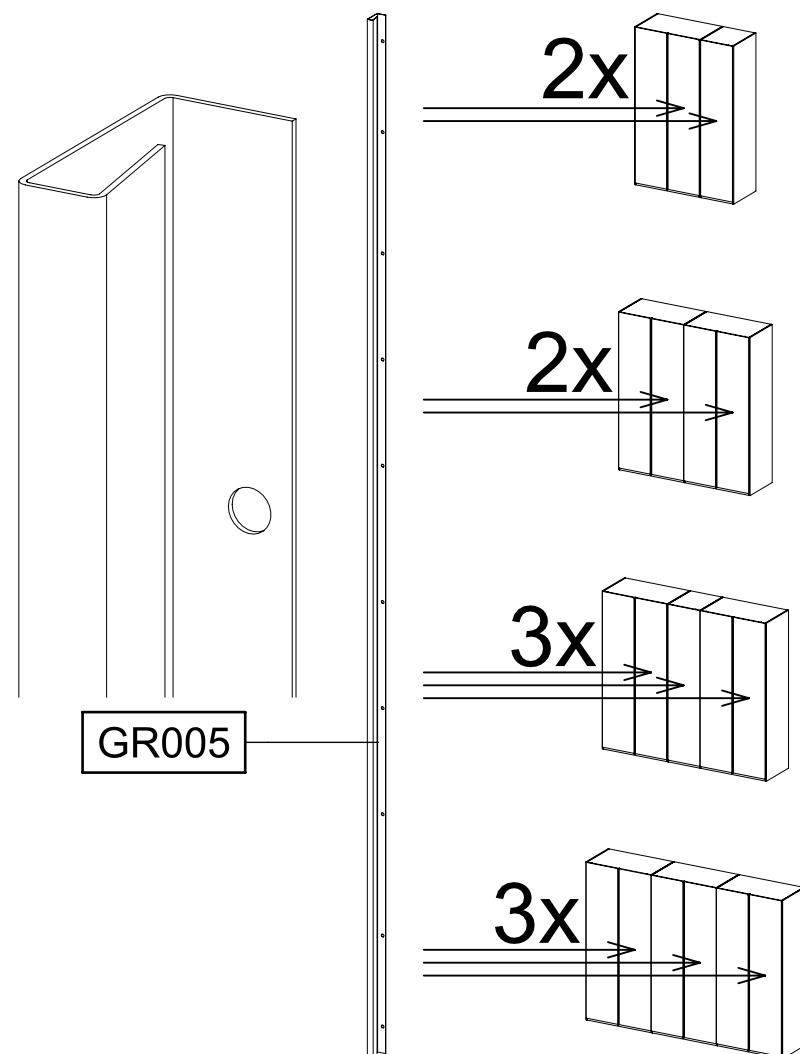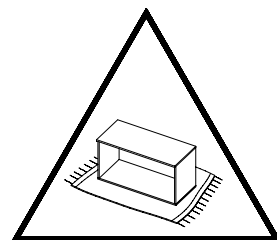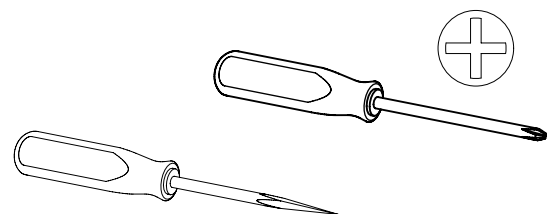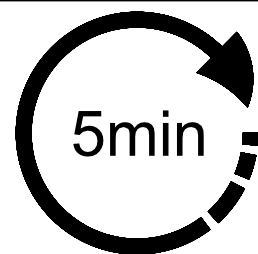


8x






3,5x15



1x

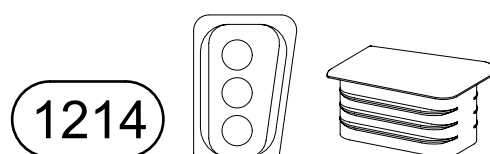



1x

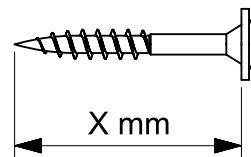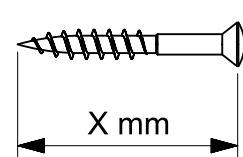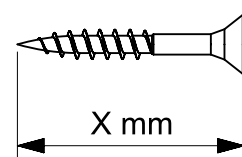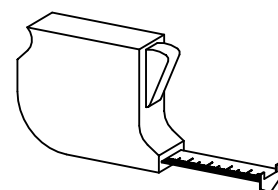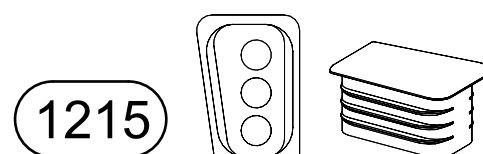



MZ231

2.





1

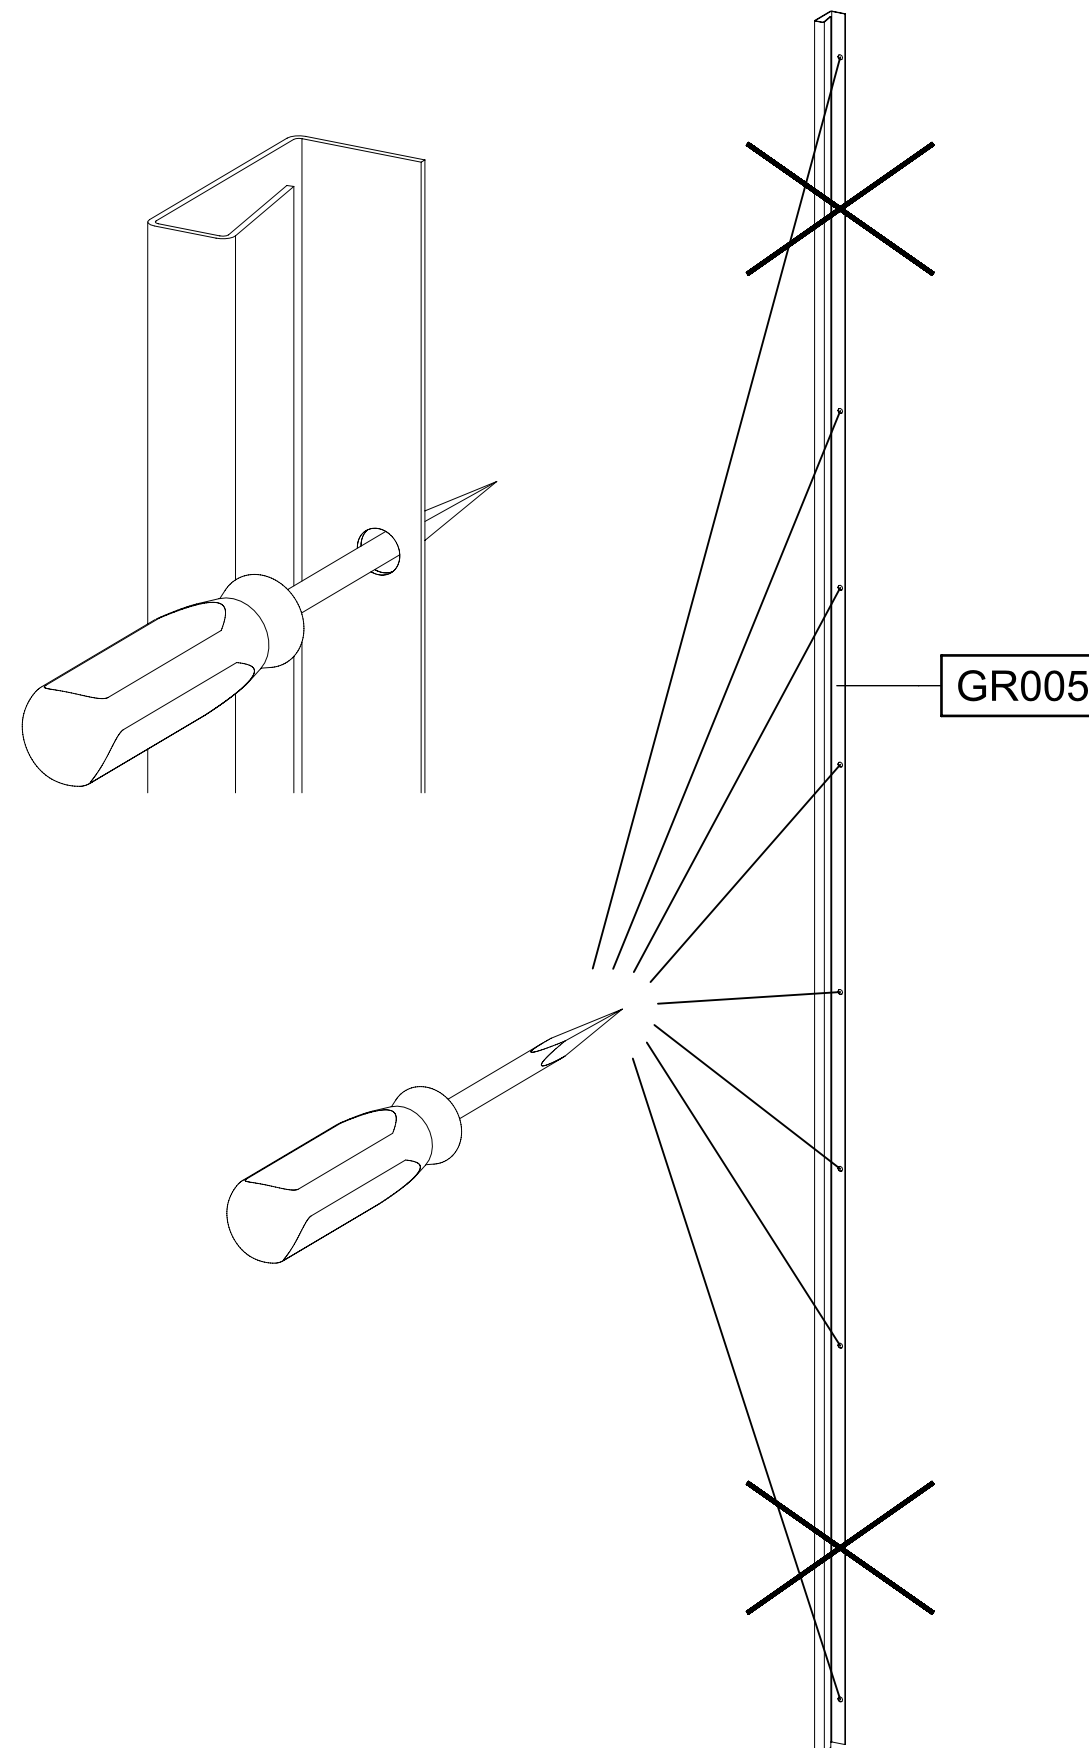



MZ231

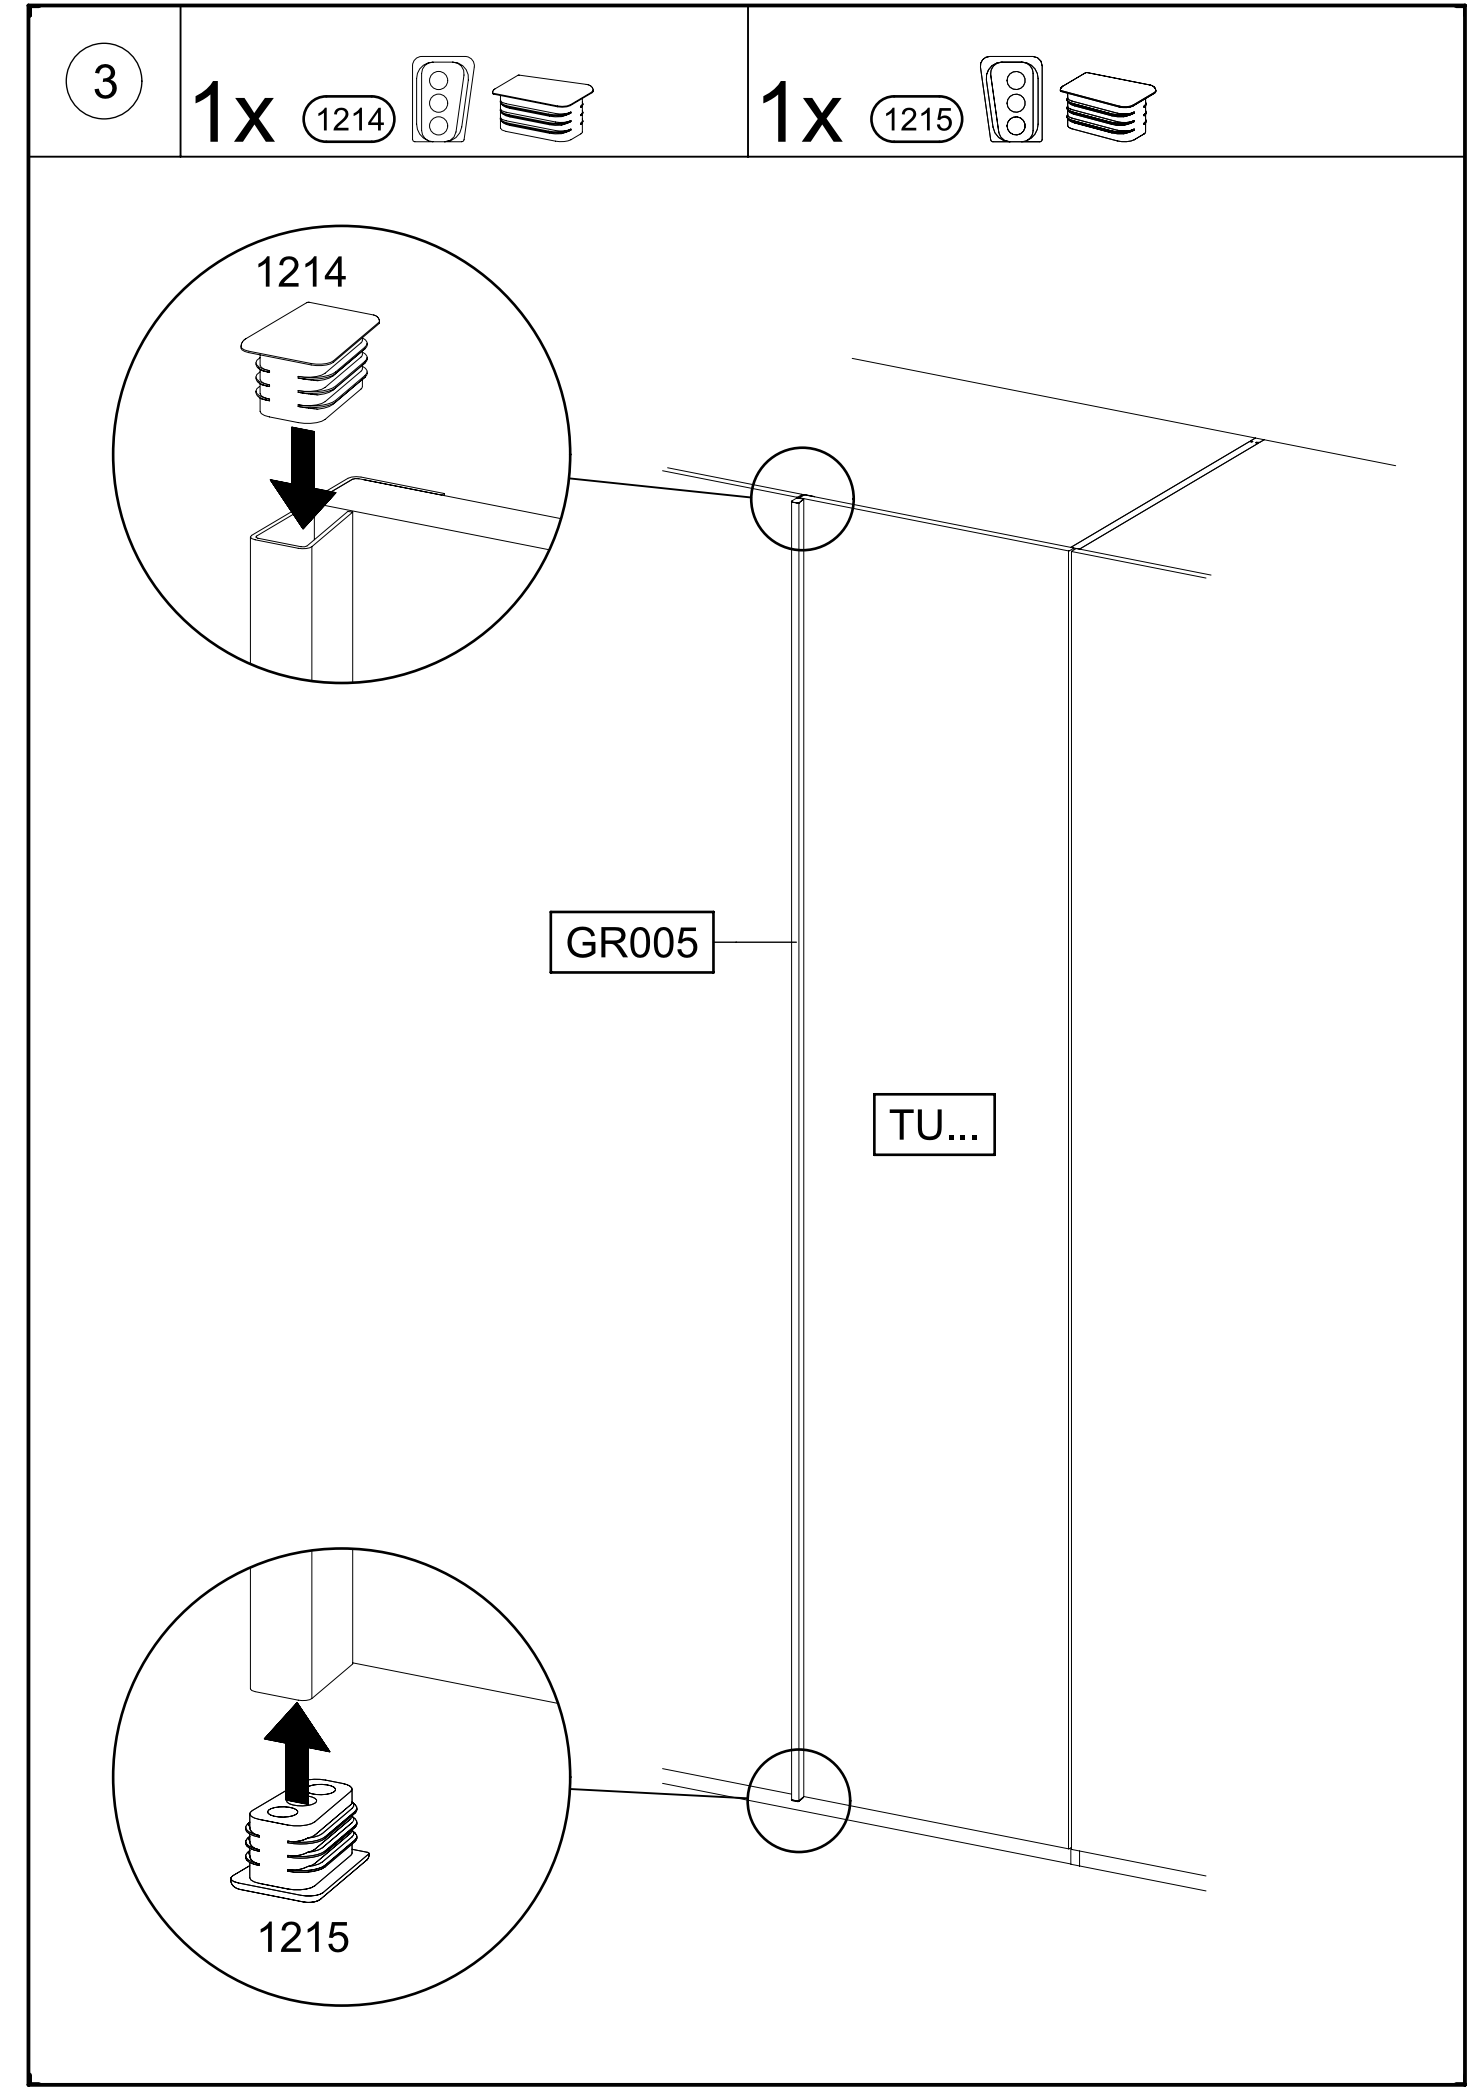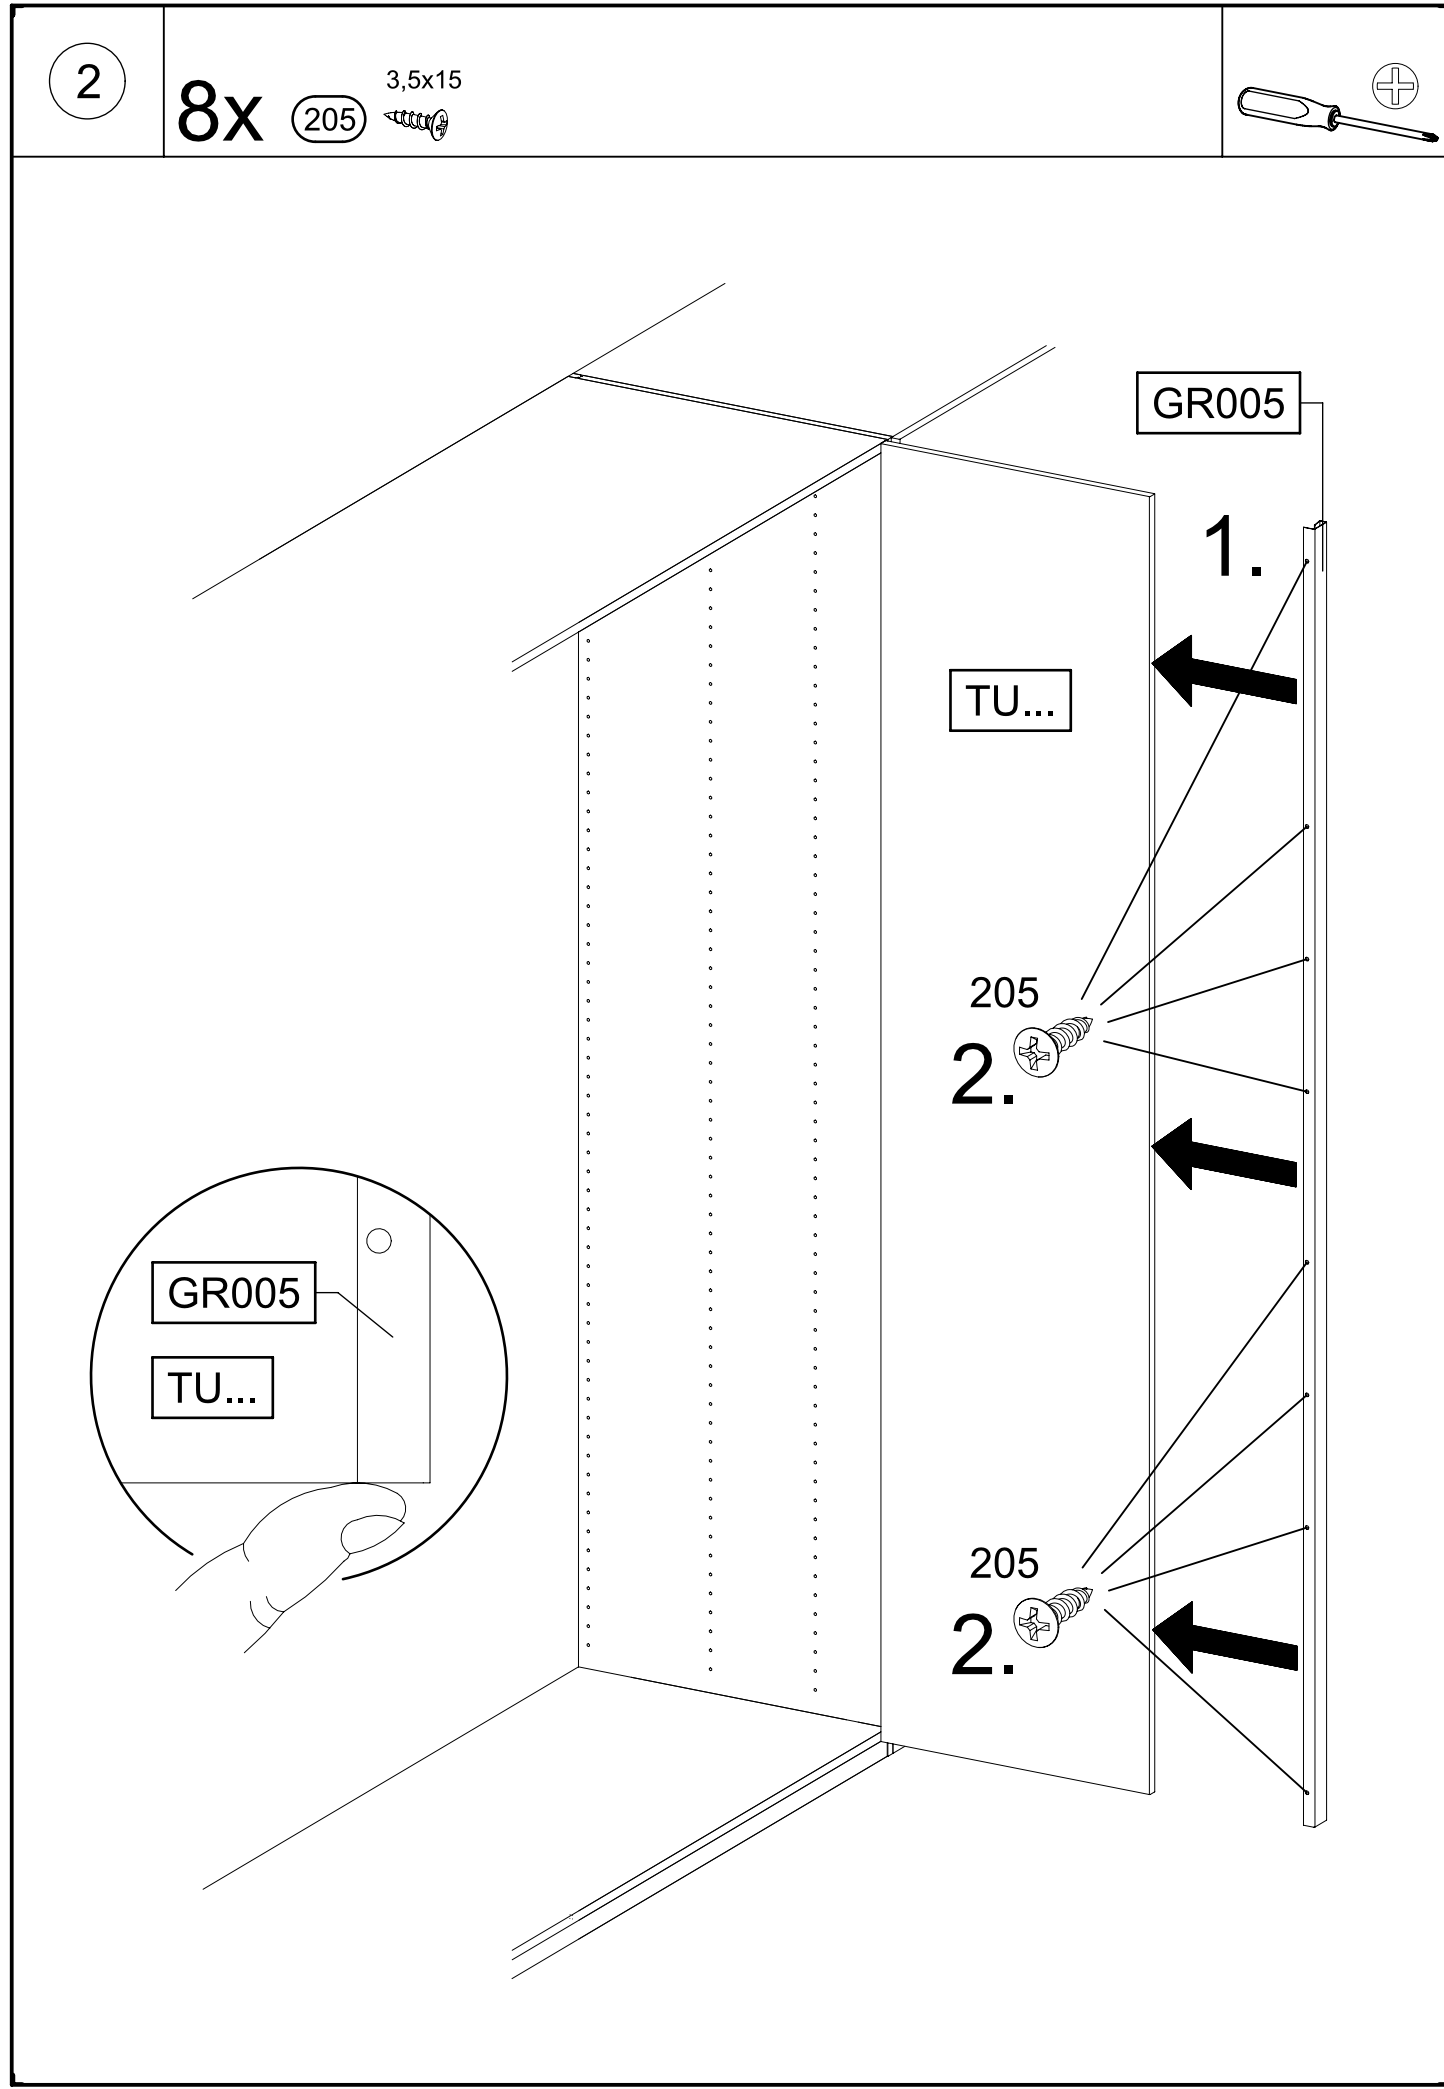



1089

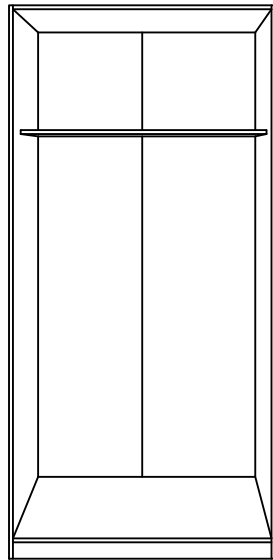



1

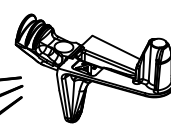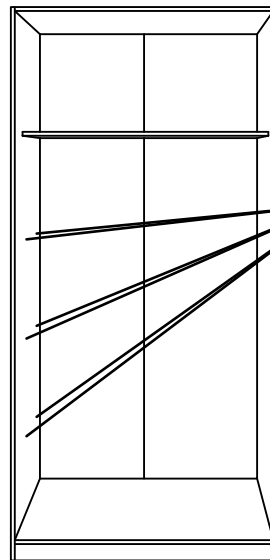

1089

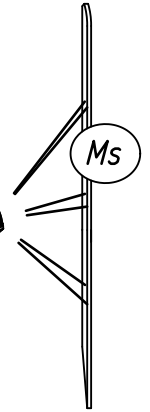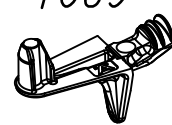

2

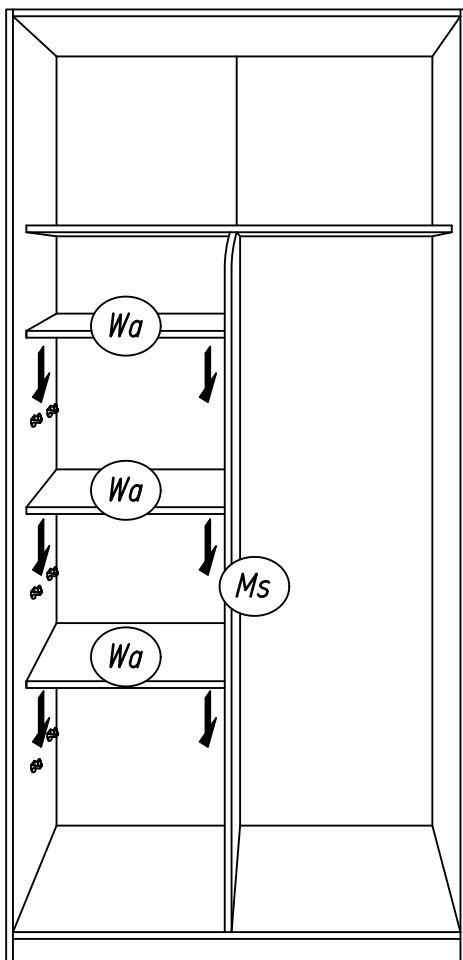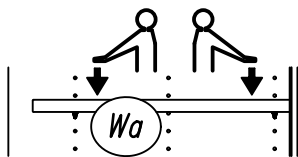

3

