

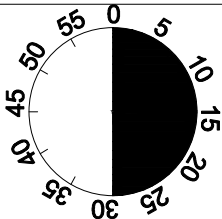
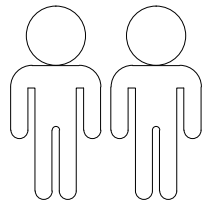



Tomar 1

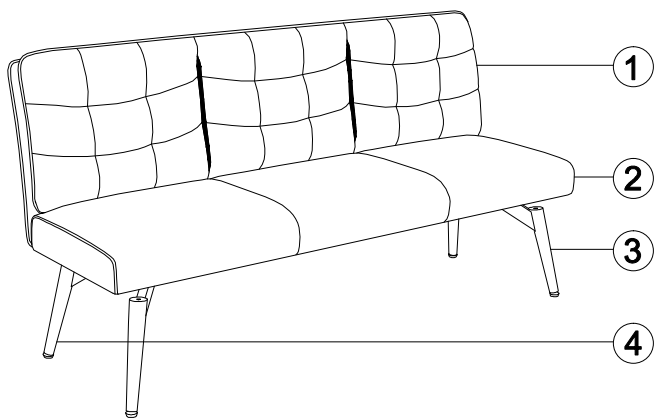


1

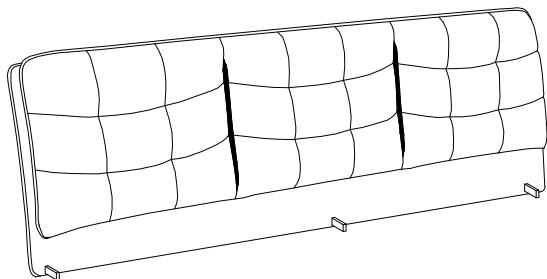


2

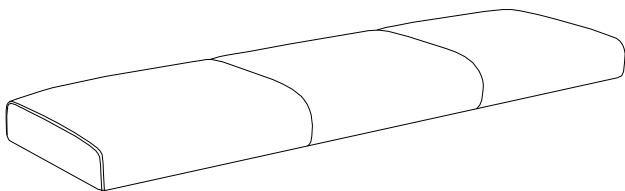

3

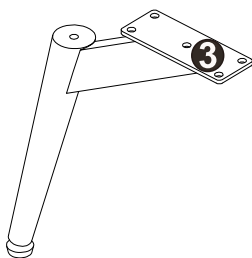



4

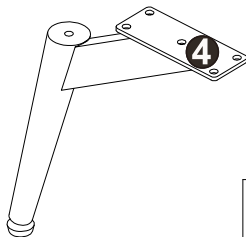

1	1x
2	1x
3	2x
4	2x







1/1

A	M6X12	B	M6X20	C	Ø18xØ6x1.5	D	4MM	E	5MM
									
6x		16x		16x		1x		1x	

I.

1





A		M6x12
		6x
D		4MM
		1x
		

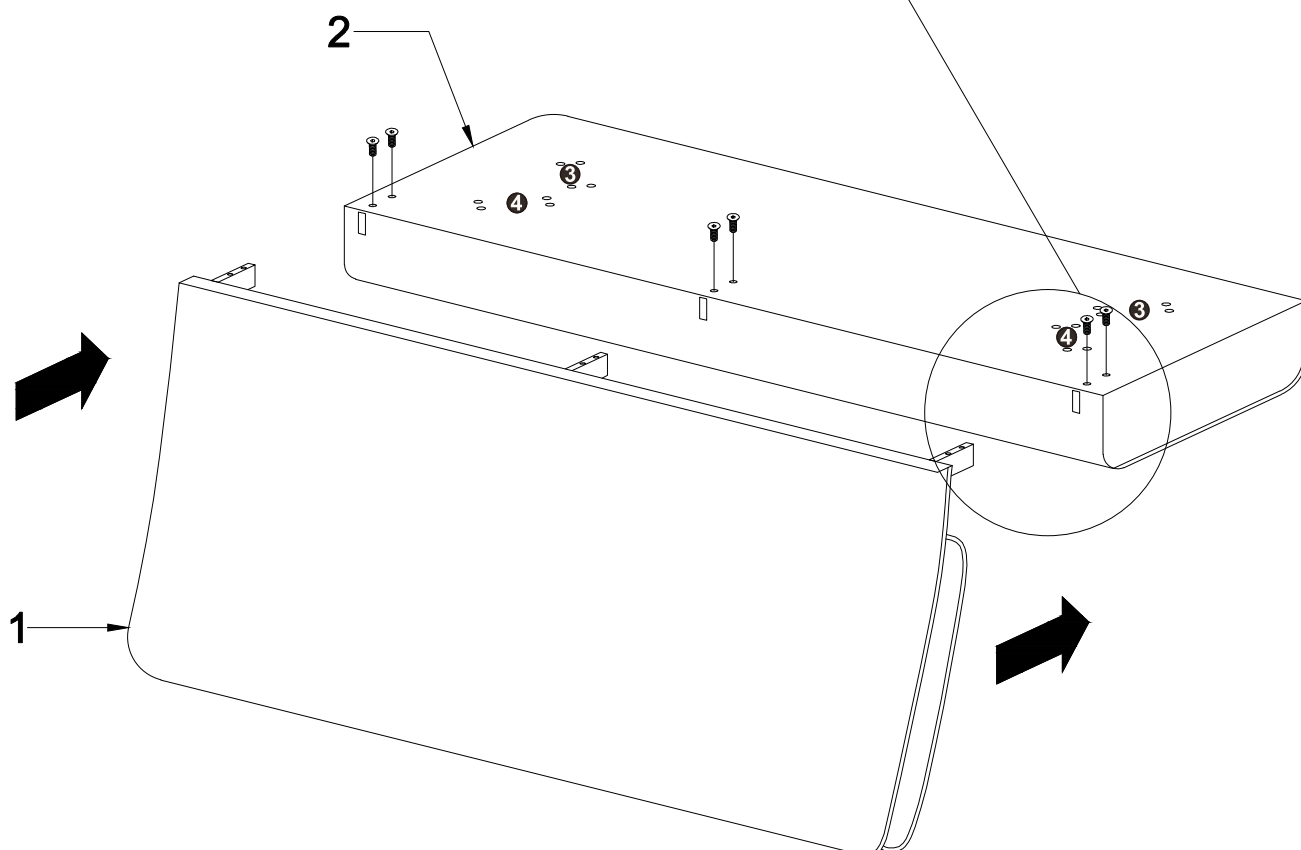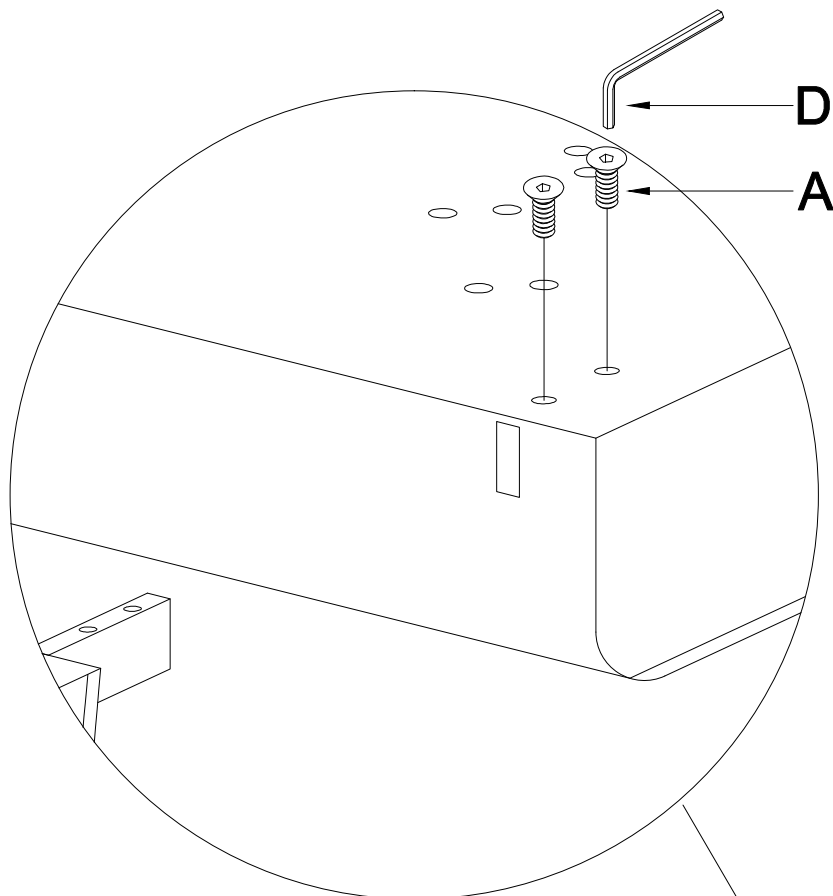


II.

2

B	M6x20
	16x
C	Ø18xØ6x1.5
	16x
E	5MM
	1x
80%	

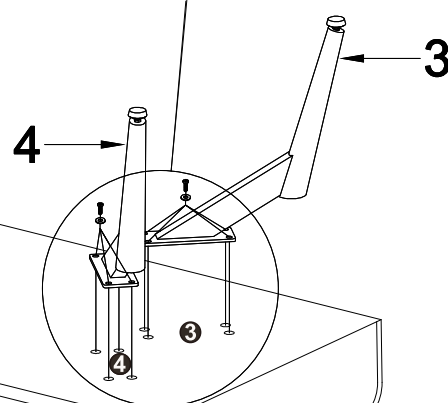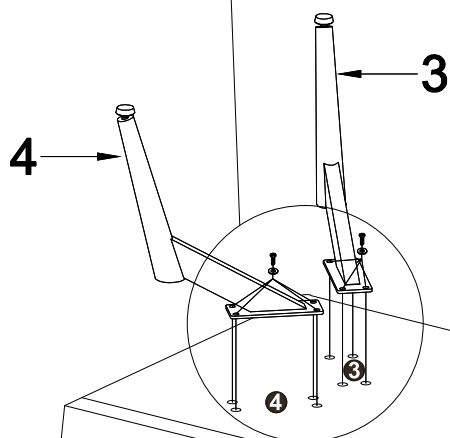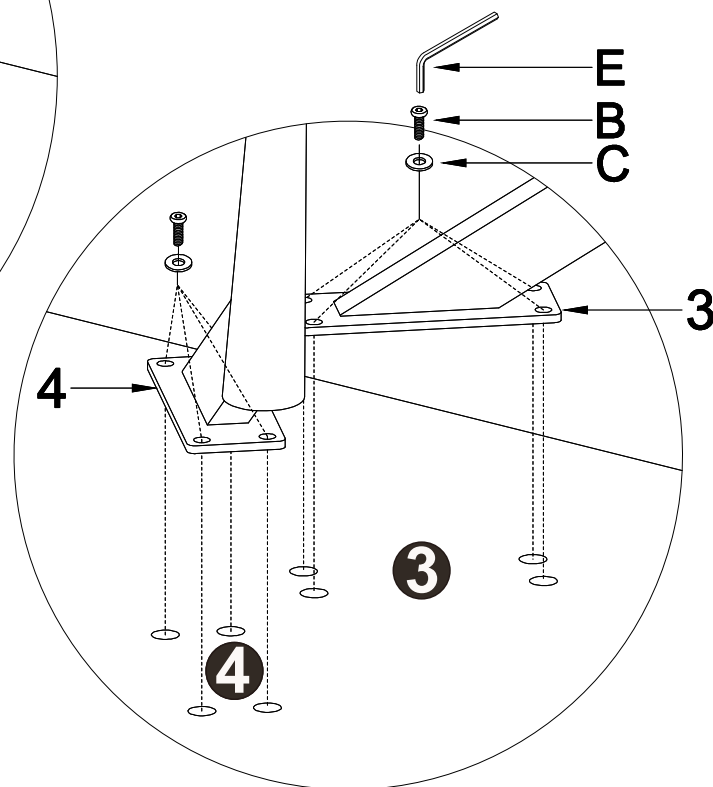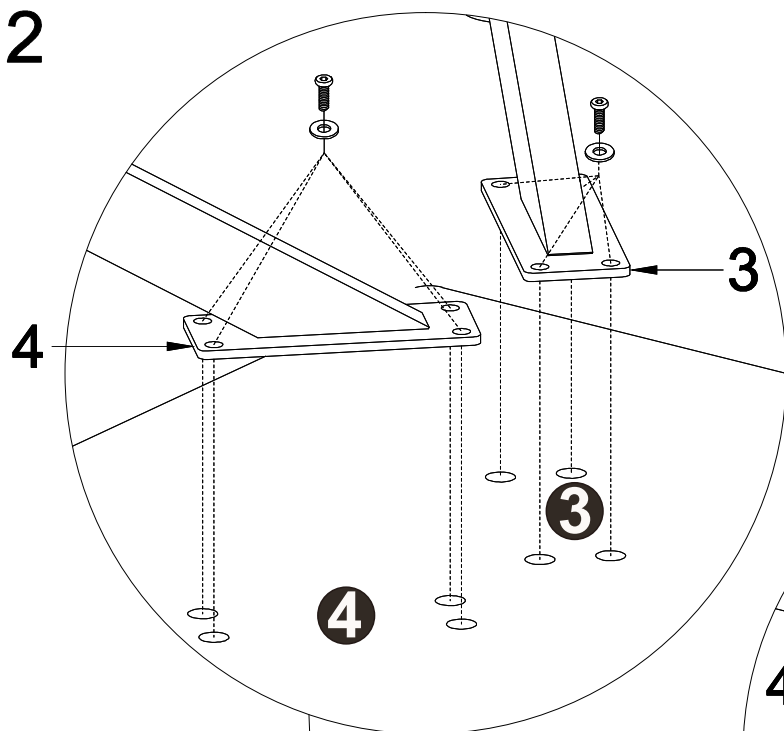

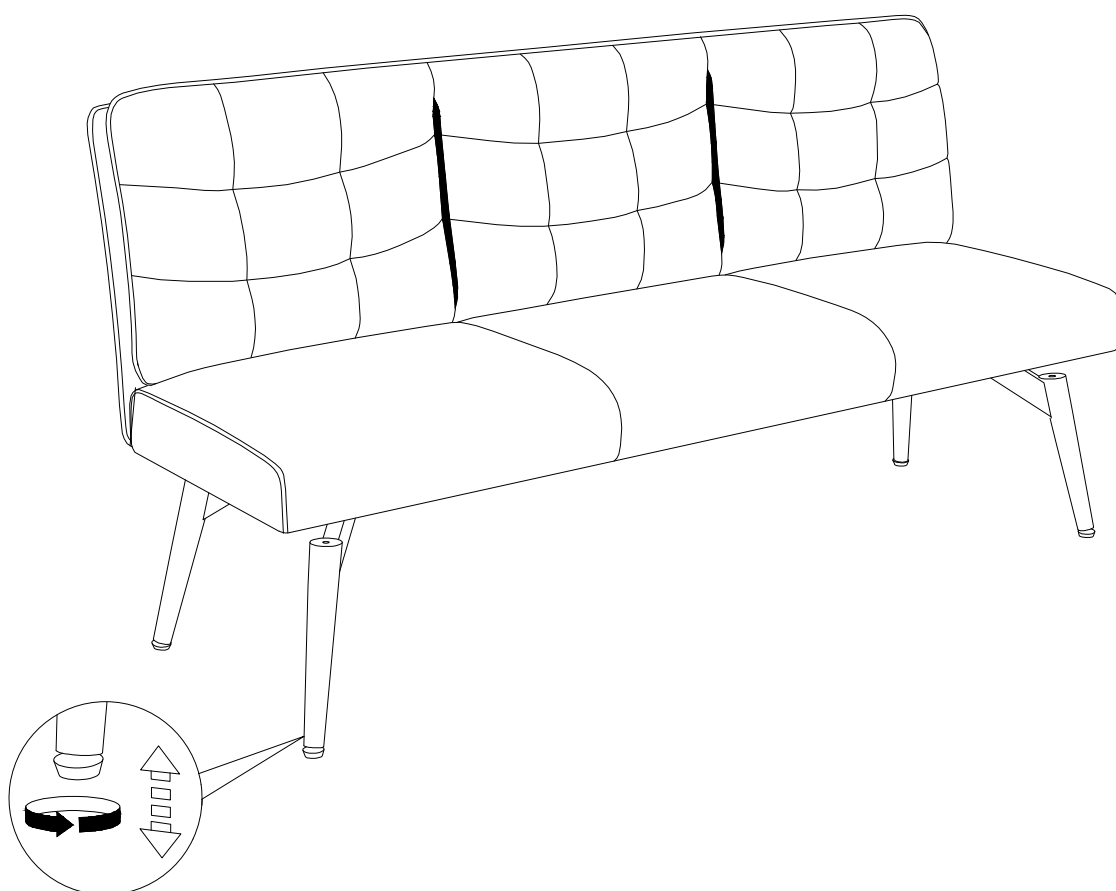

**LE TRI
+ FACILE**



Séparez les éléments avant de trier