
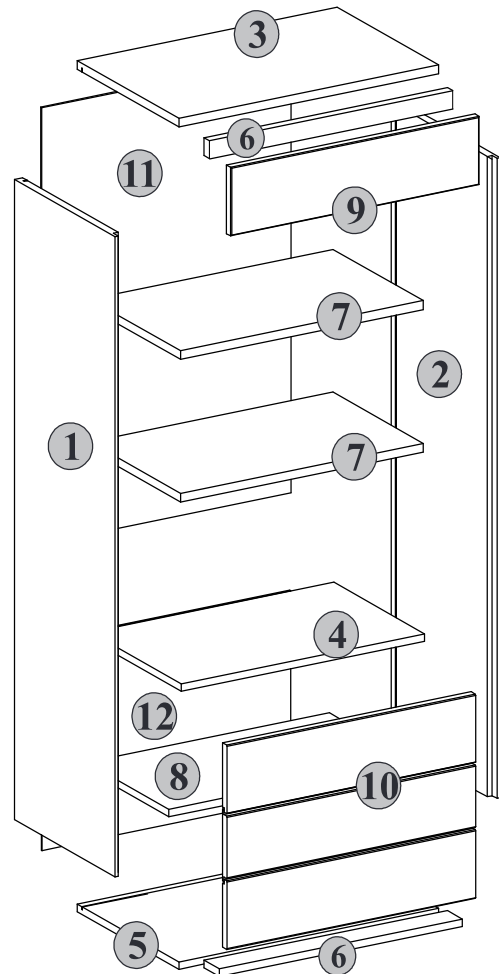
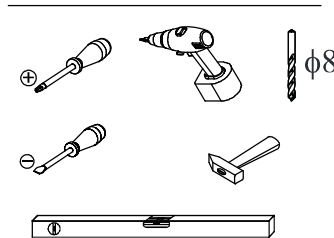
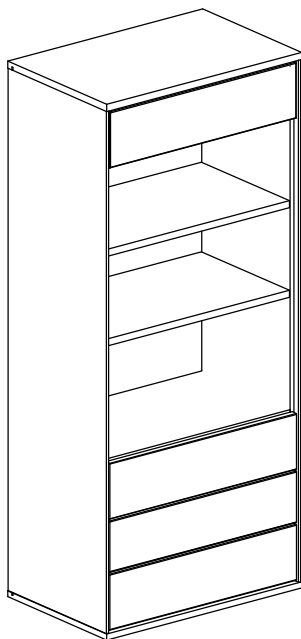




“3990”

versionsnummer: 19.05.2022


Naturholz kann sich werkstoffbedingt verziehen. Durch das Montieren ziehen sich Teile wieder plan.

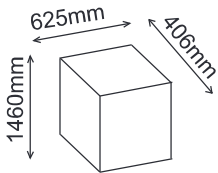


B5

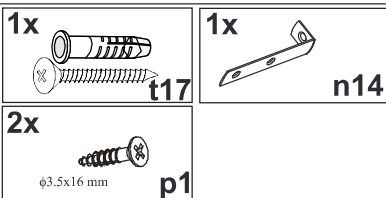


B1

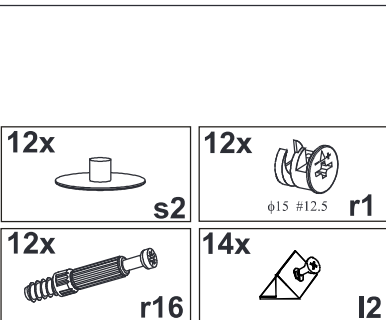


B2





















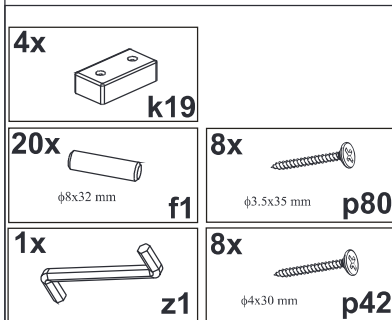


B3

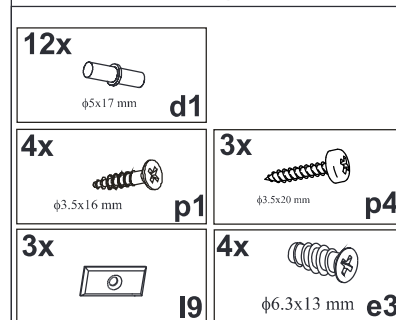

B4

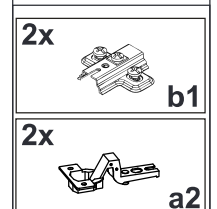

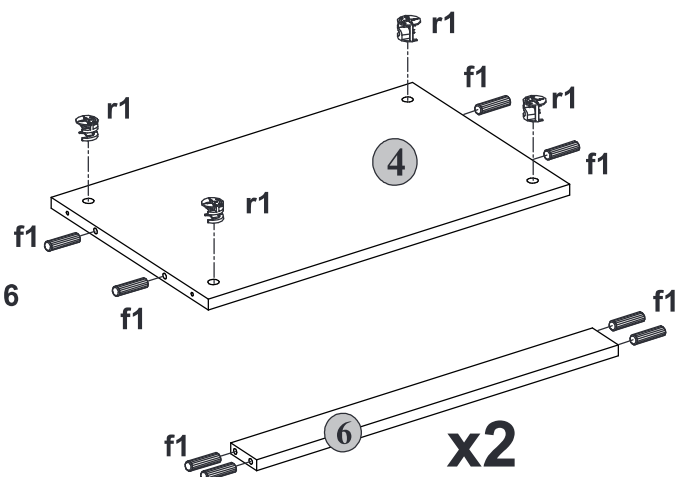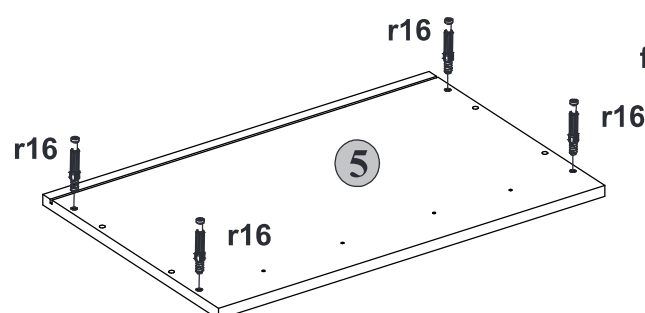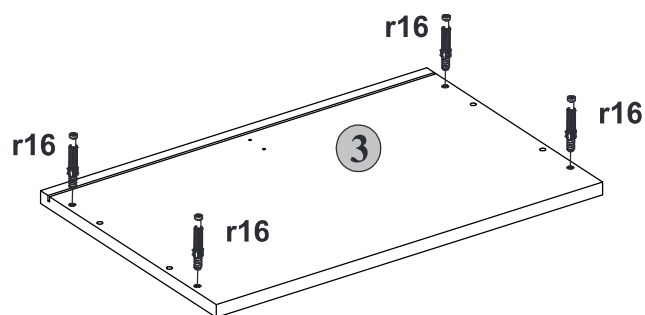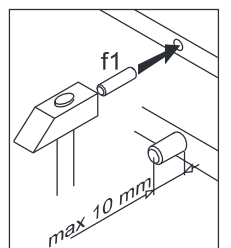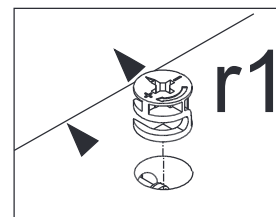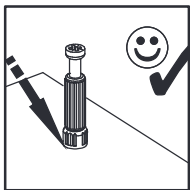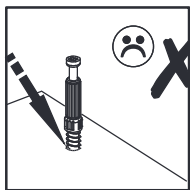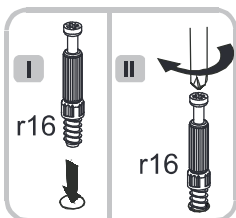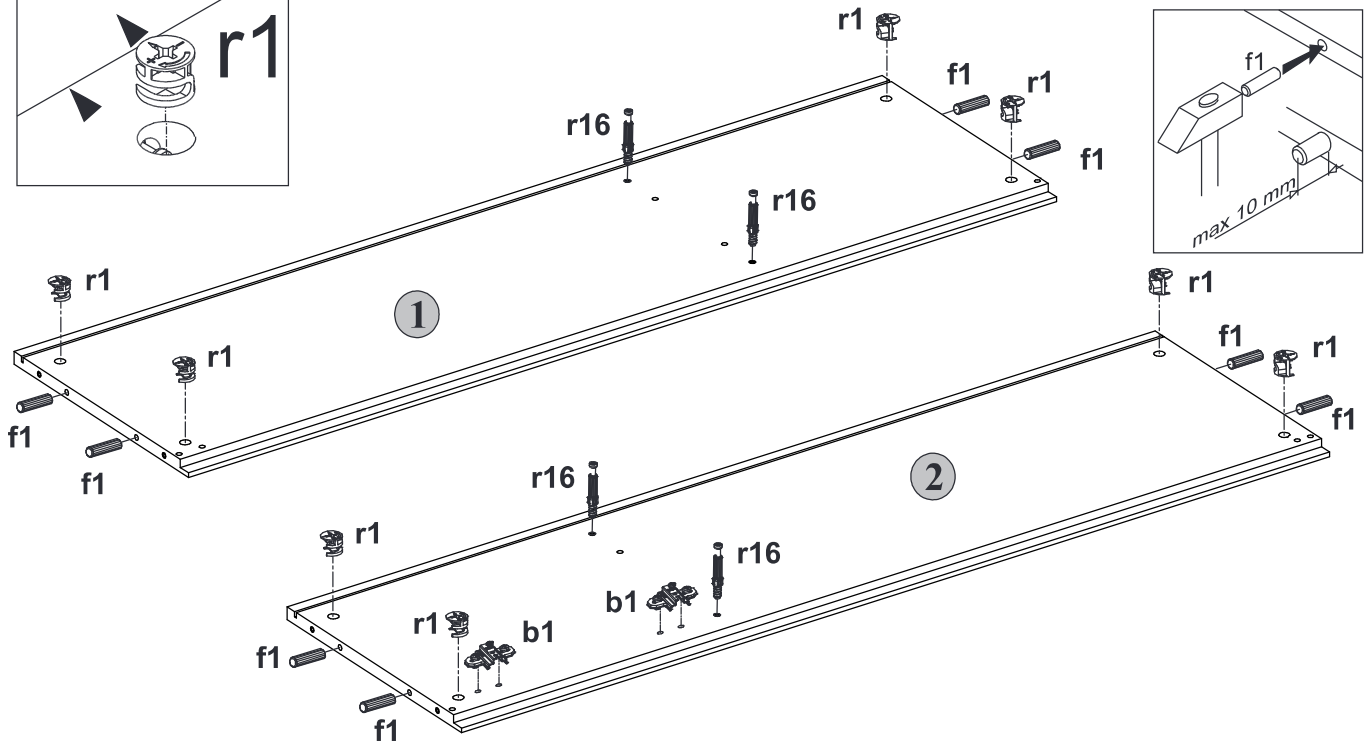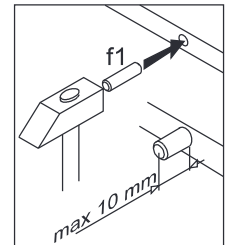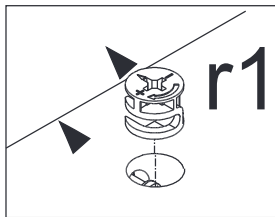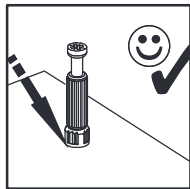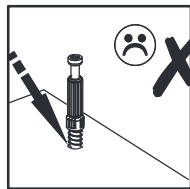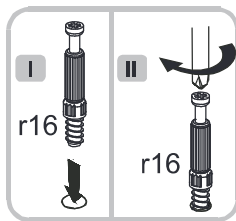

2

3

2x





a2

4x





φ3.5x16 mm

p1


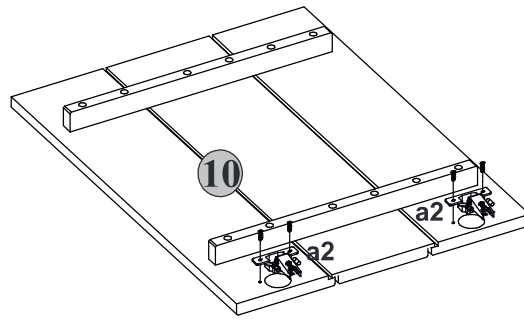
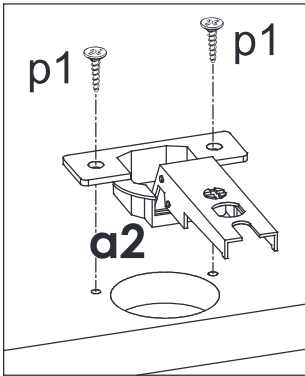


4

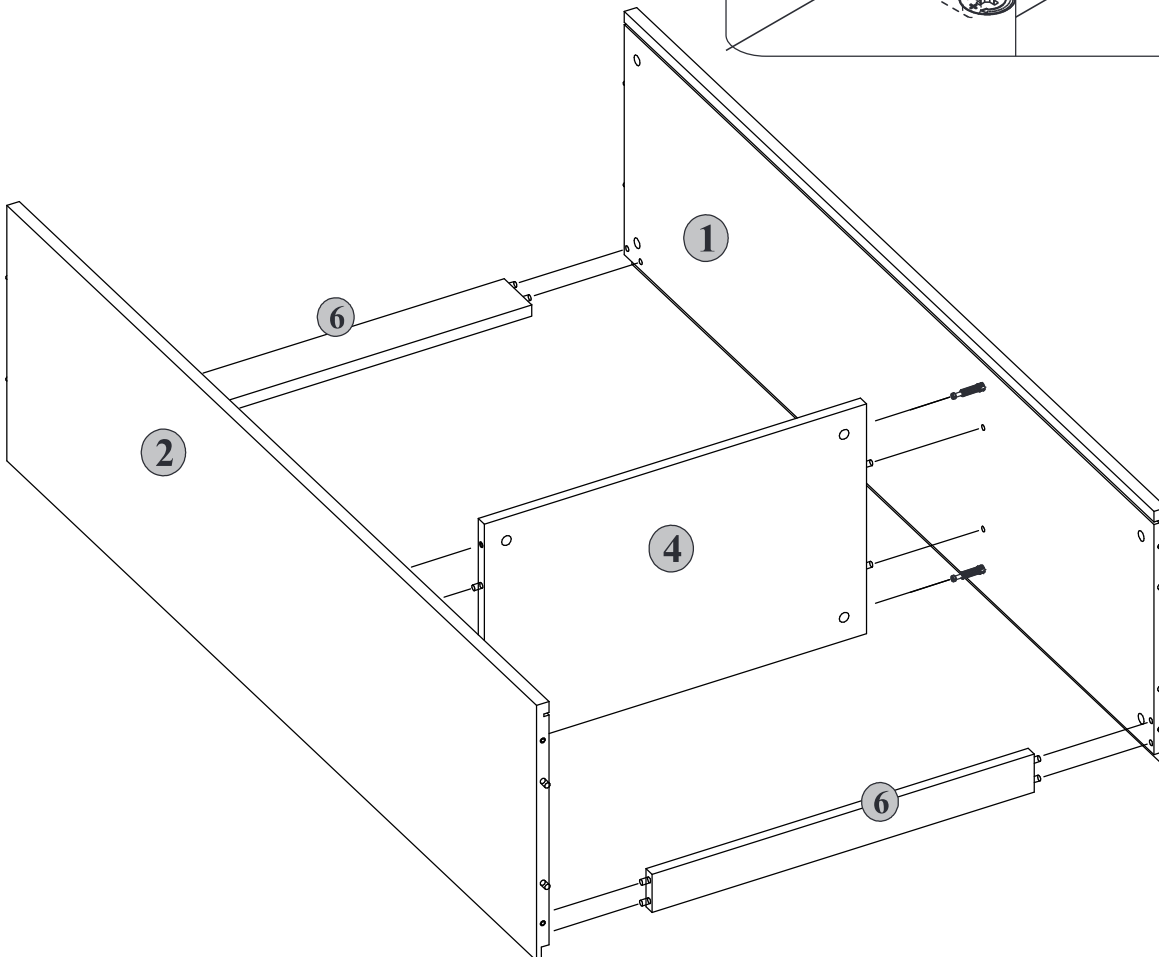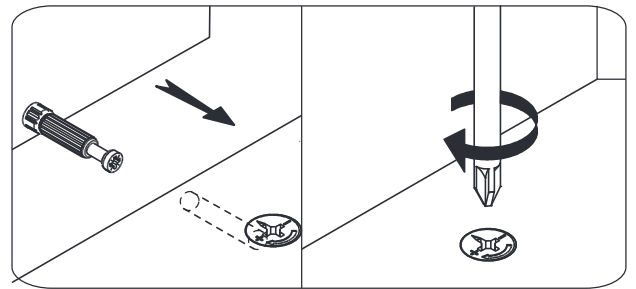



3

5

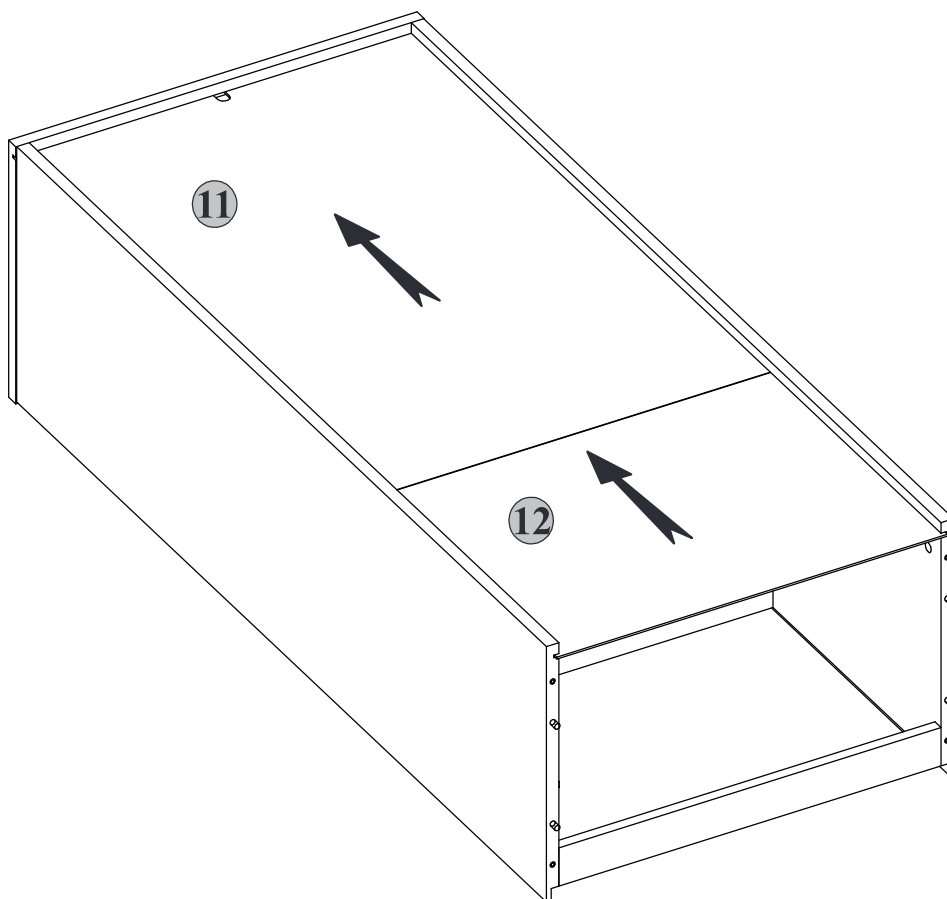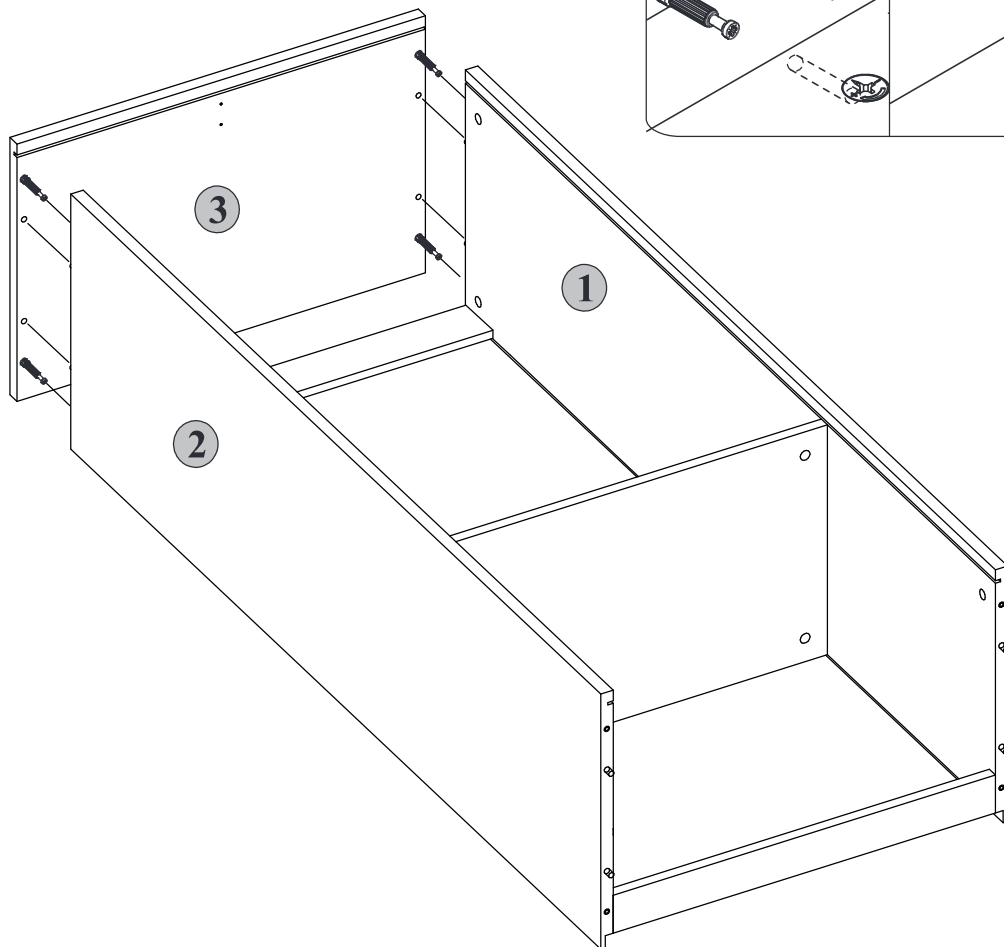
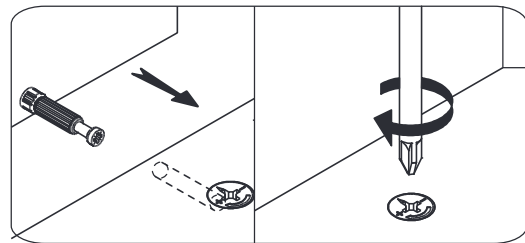


4






6

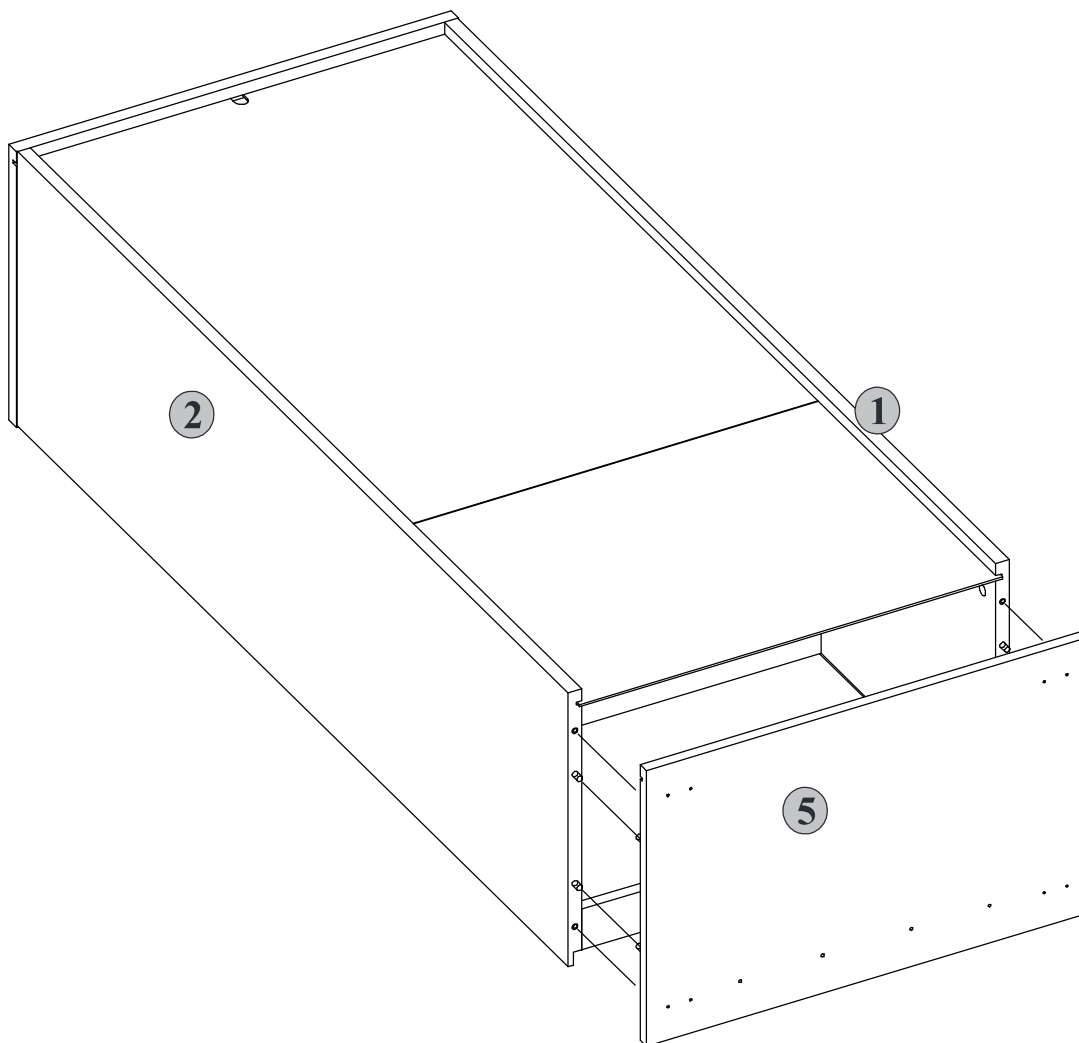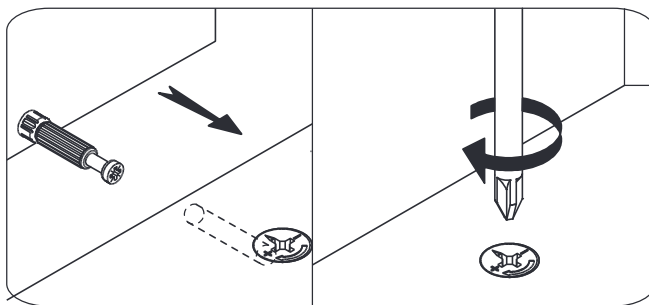

7

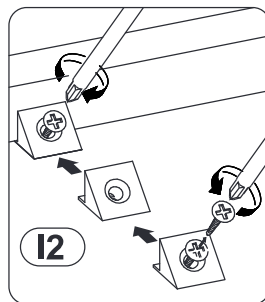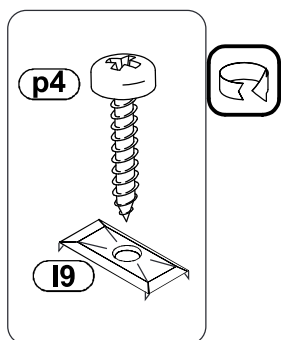

4x k19	14x I2
4x p42 φ4x30 mm	3x p4 3,5x20
8x p80 φ3,5x35 mm	3x I9

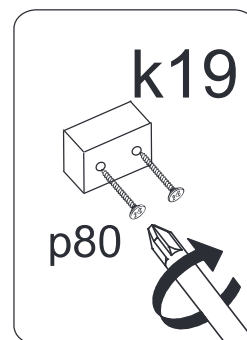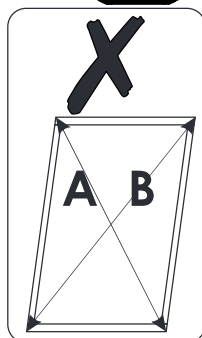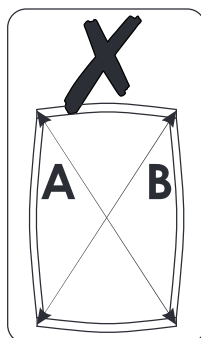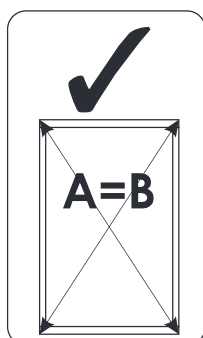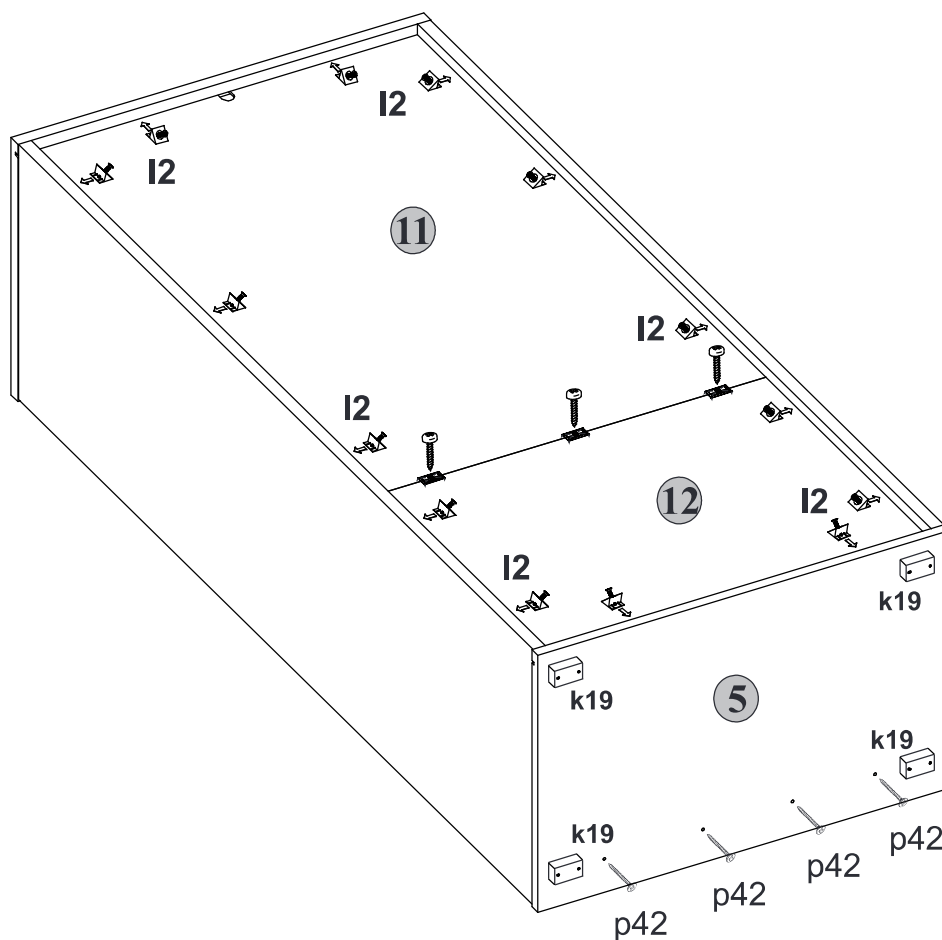


6

8

1x
t17

1x
n14








2x
φ3.5x16 mm
p1

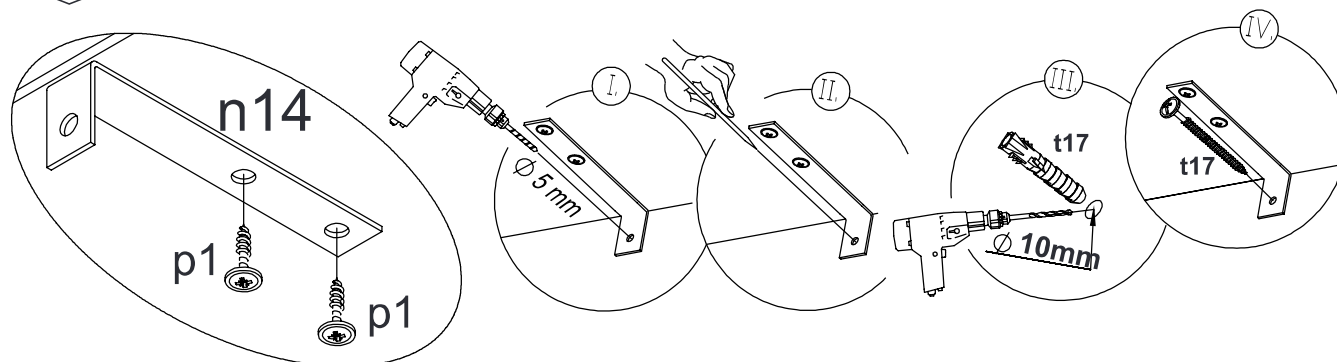

9

4x
φ4x30 mm
p42

12x
φ5x17 mm
d1

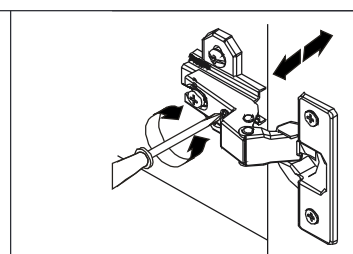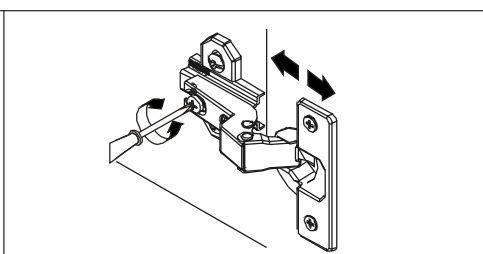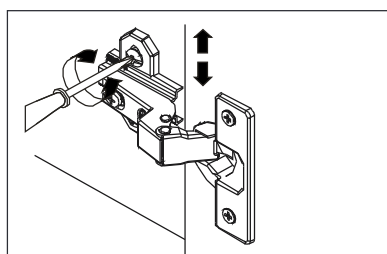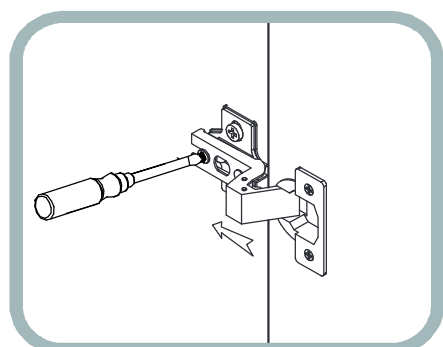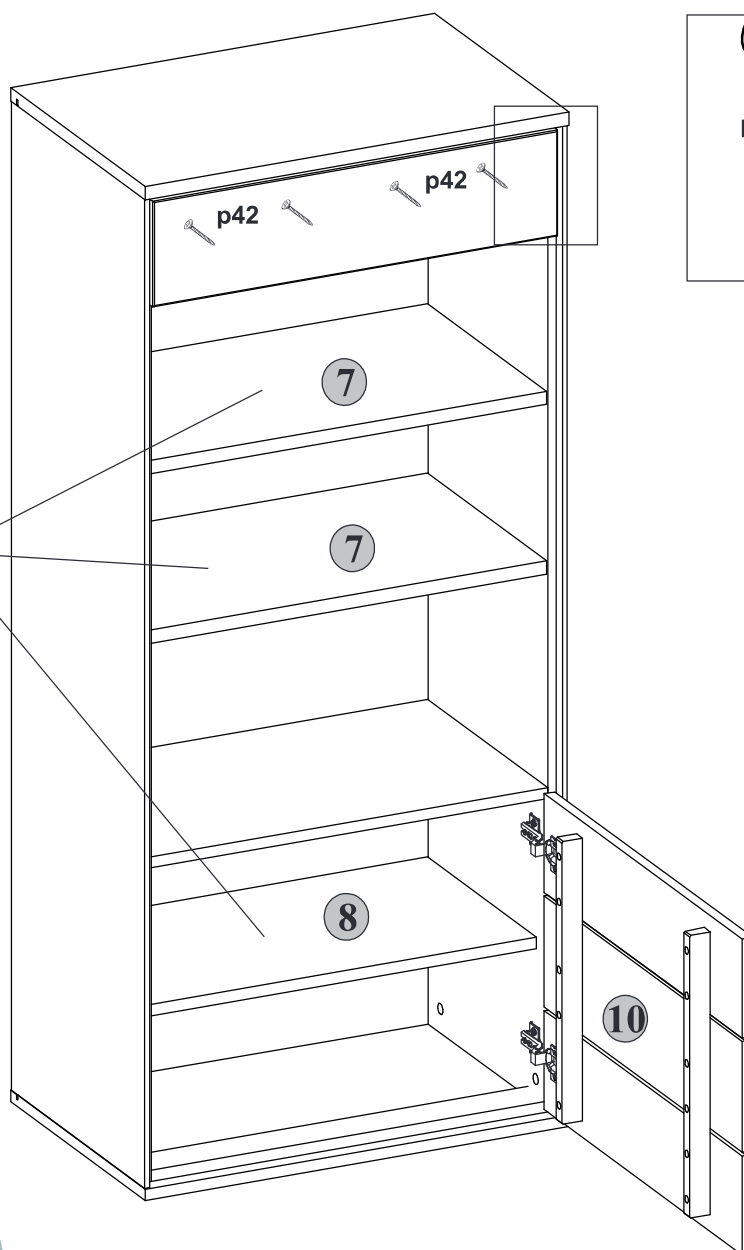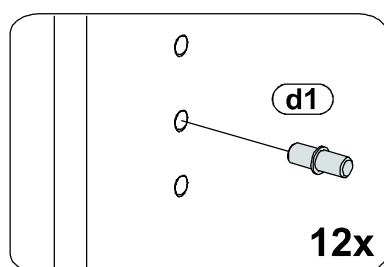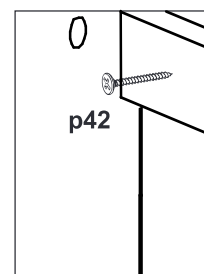

8