


Artikel.-Nr.:


5014-TP-130-170


Montageanleitung.-Nr.:

MA1-00588

REPC-Nr.:

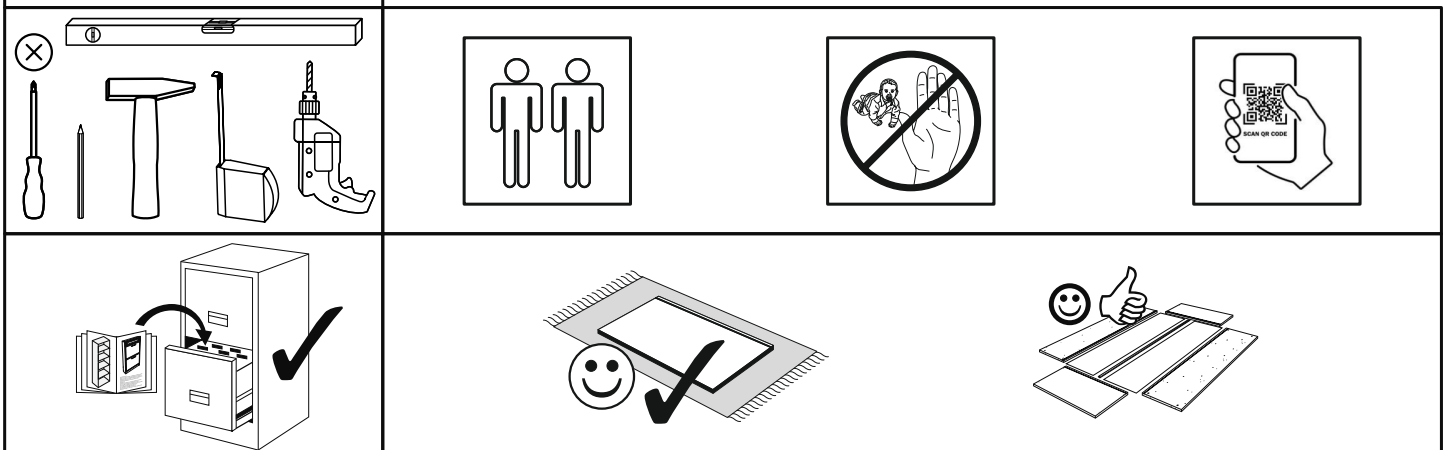

BT1-00689 Colli 1/1											
B05-193		B01-39-16		B01-70		B01-90		B04-61		B03-94	
6x		12x	5x16	4x	3x30	4x	3,5x20	2x		2x	

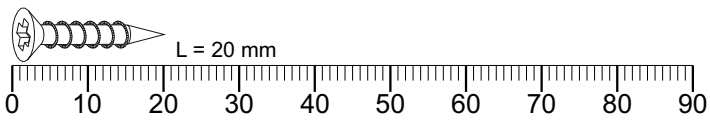

Colli 1/1



FTx-001968
2x




1300x650

FTx-001969
2x

400x650

Z12-07
1x

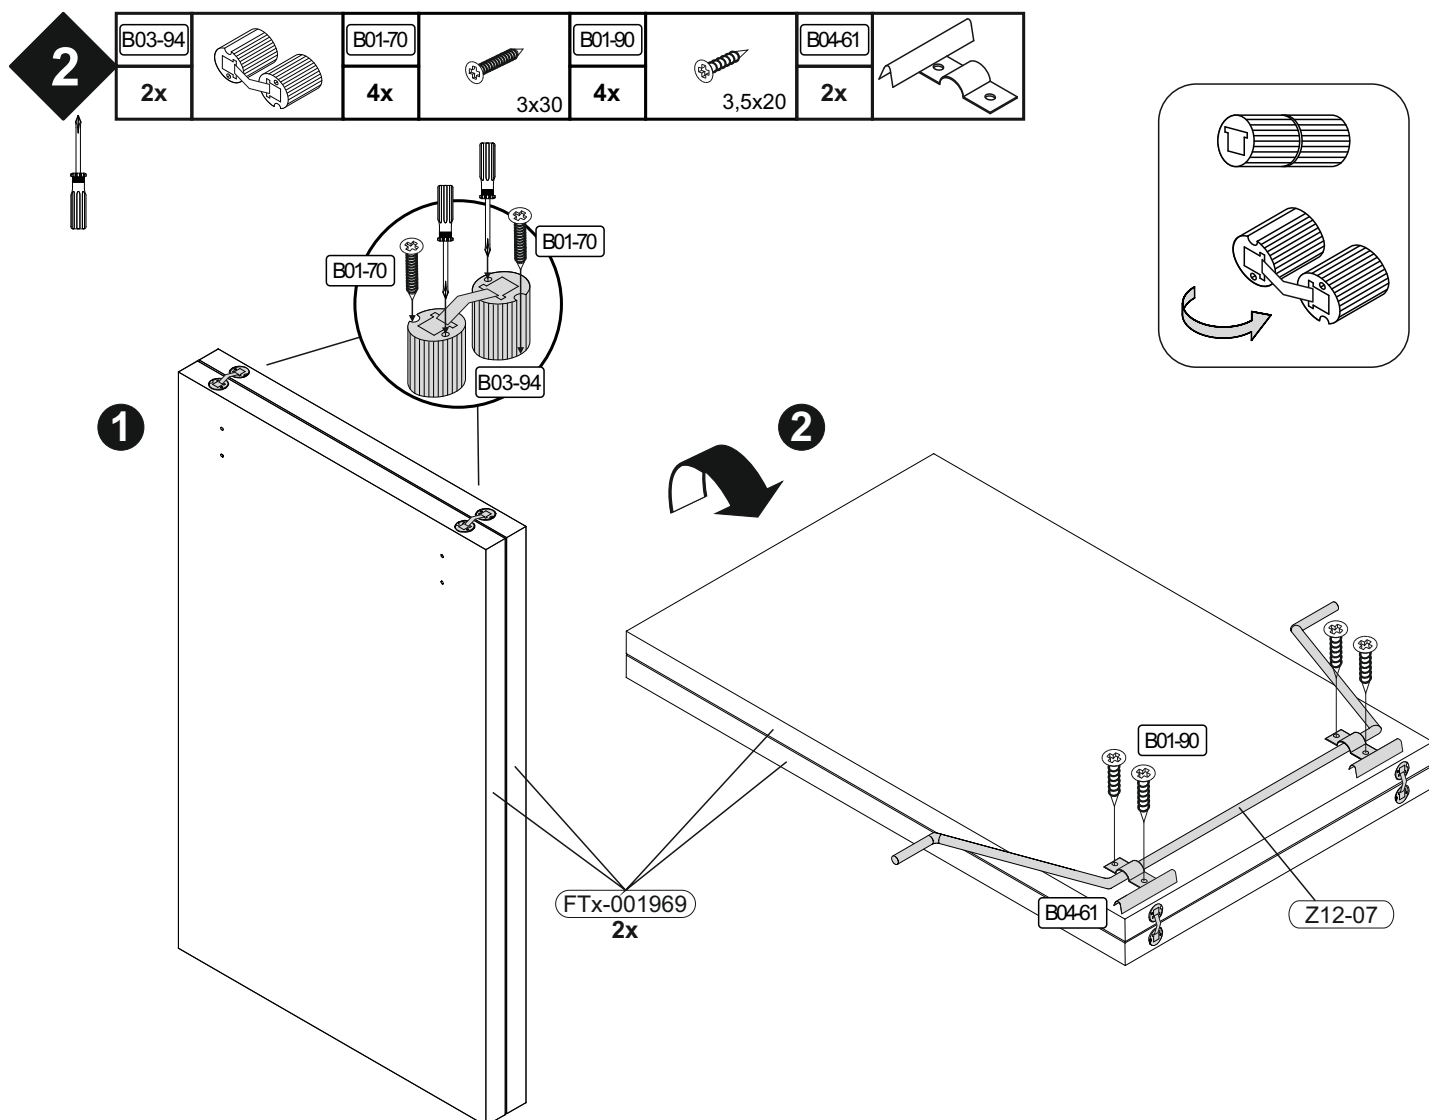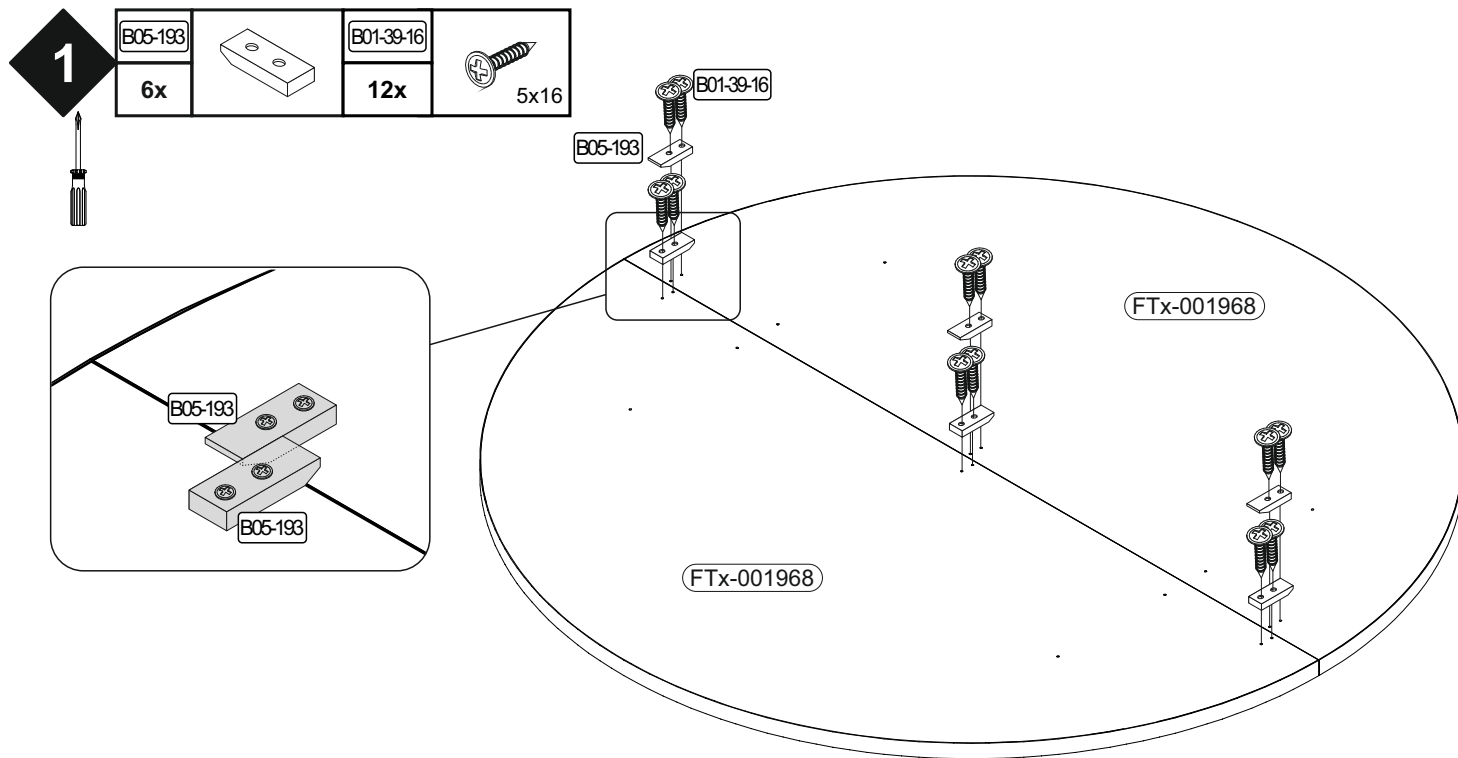

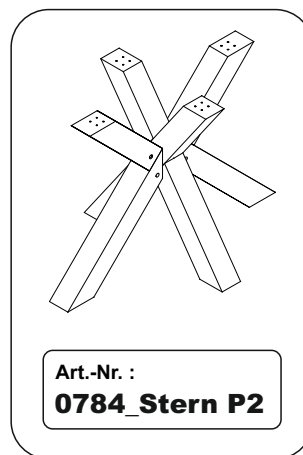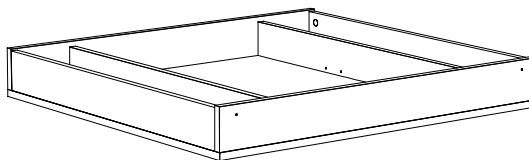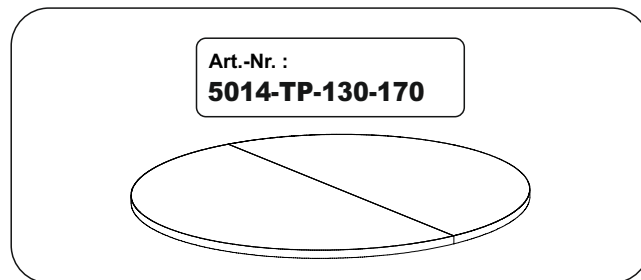

Artikel.-Nr.:





5016-VT

Montageanleitung.-Nr.:

MA1-00592


REPC-Nr.:			

BT1-00689 Colli 1/1


B01-120		B01-39-16		B01-240		B01-90		B02-170	
18x	3,5x45	36x	5x16	1x	SW 4	1x	3,5x20	1x	
B02-90		B04-60		B02-10		B02-20		B05-260	
8x	6x30	2x		8x	ø15x12mm	8x		1x	

BT1-00001 Colli 1/1


B05-265	
1x	Pflegeanweisung




Colli 1/1

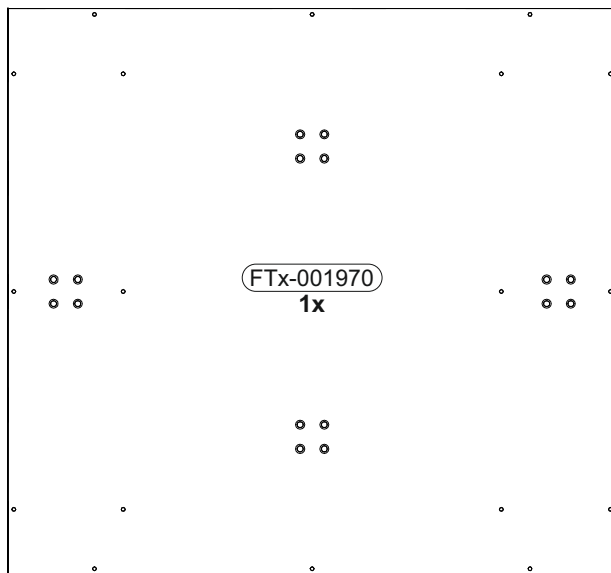


805x749




718x84




718x76



805x88

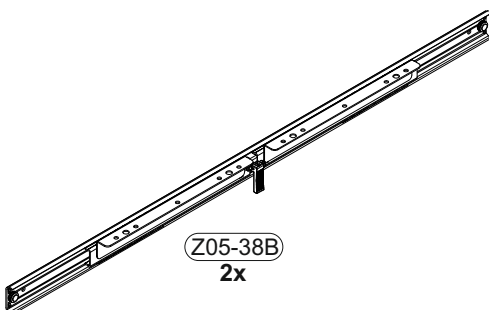


Z05-38B
2x

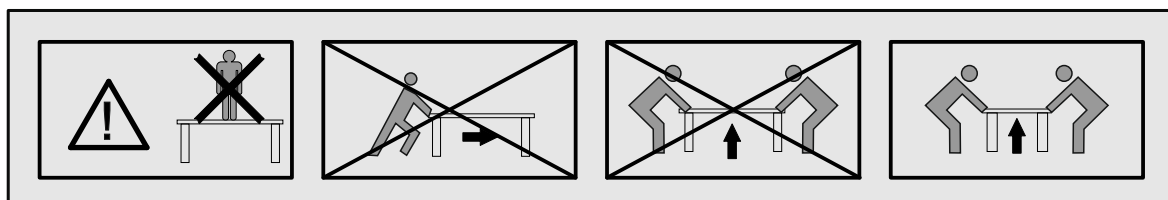

1




B02-10		B02-90	
8x	ø15x12mm	8x	6x30






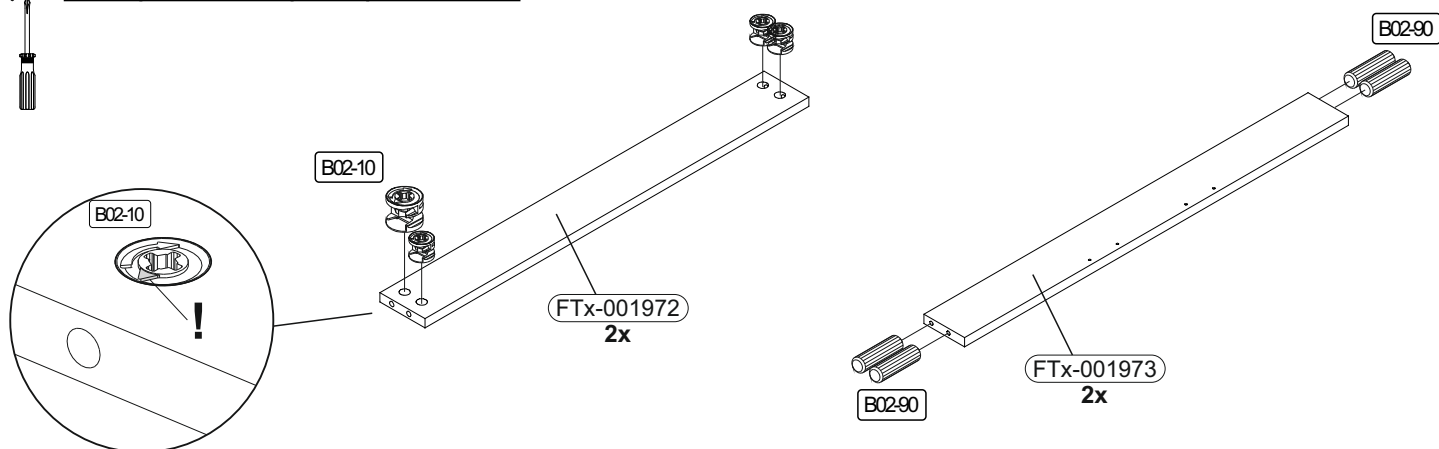


2





B02-20		B01-39-16	
8x		12x	5x16

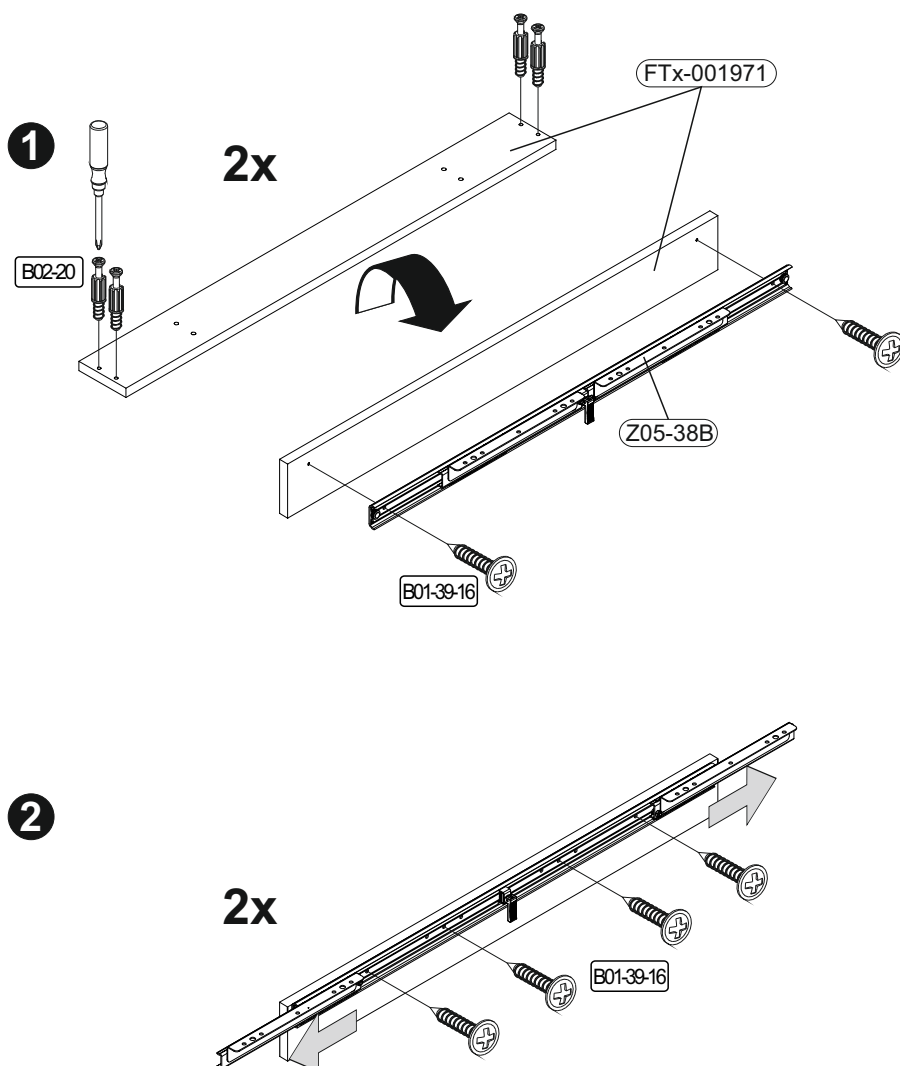

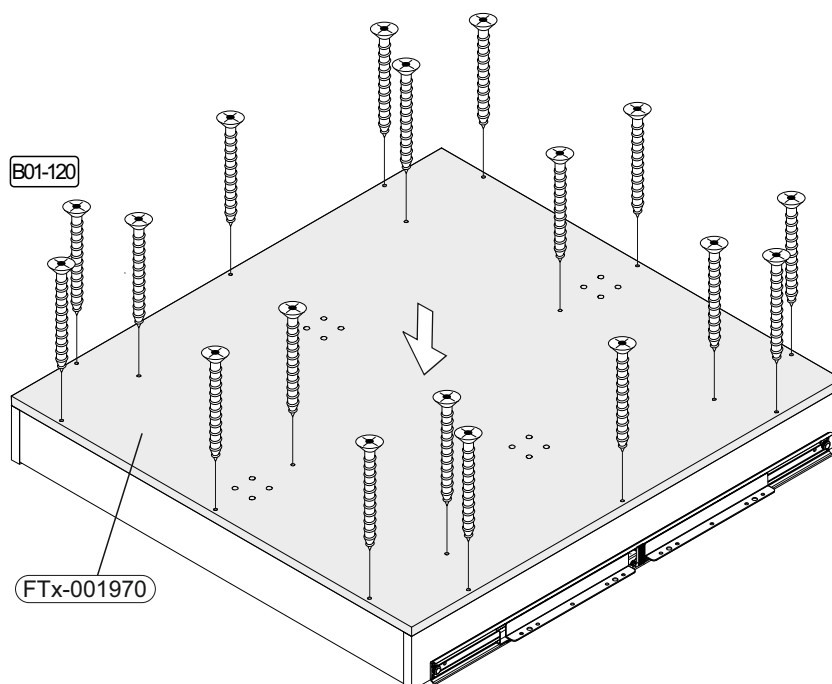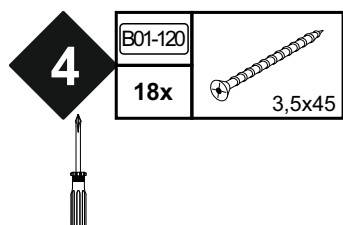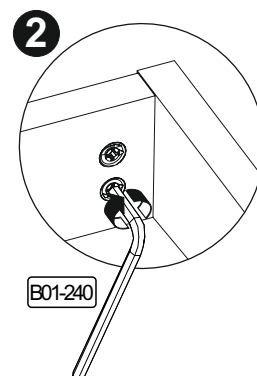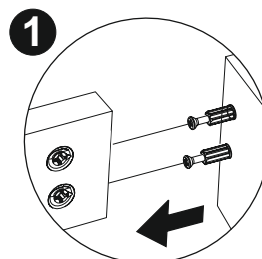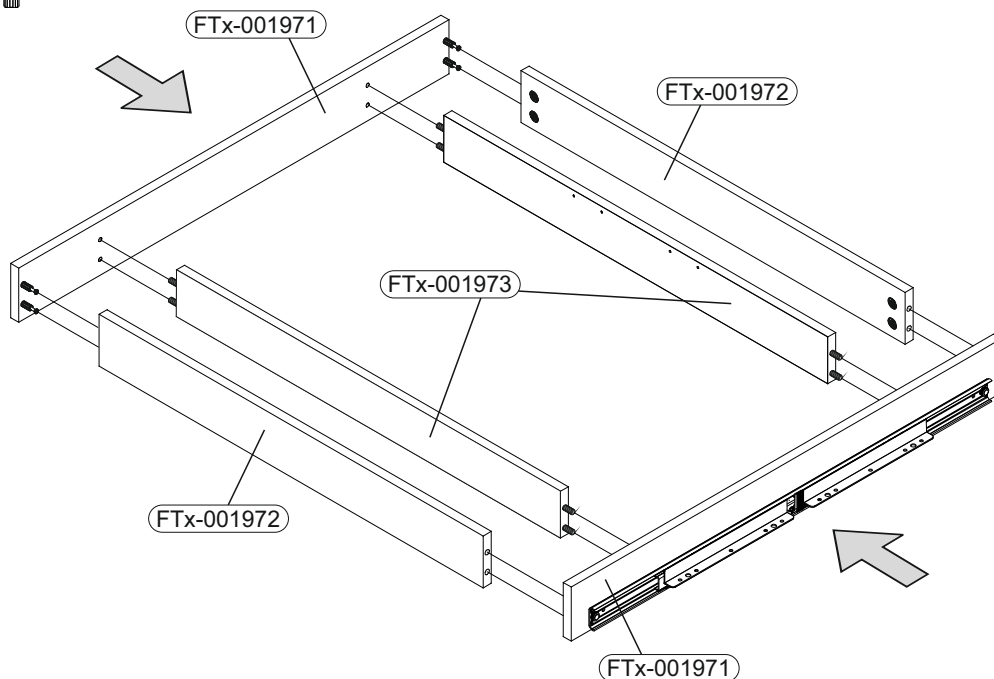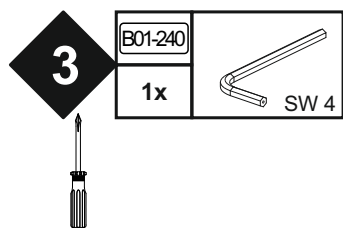



5

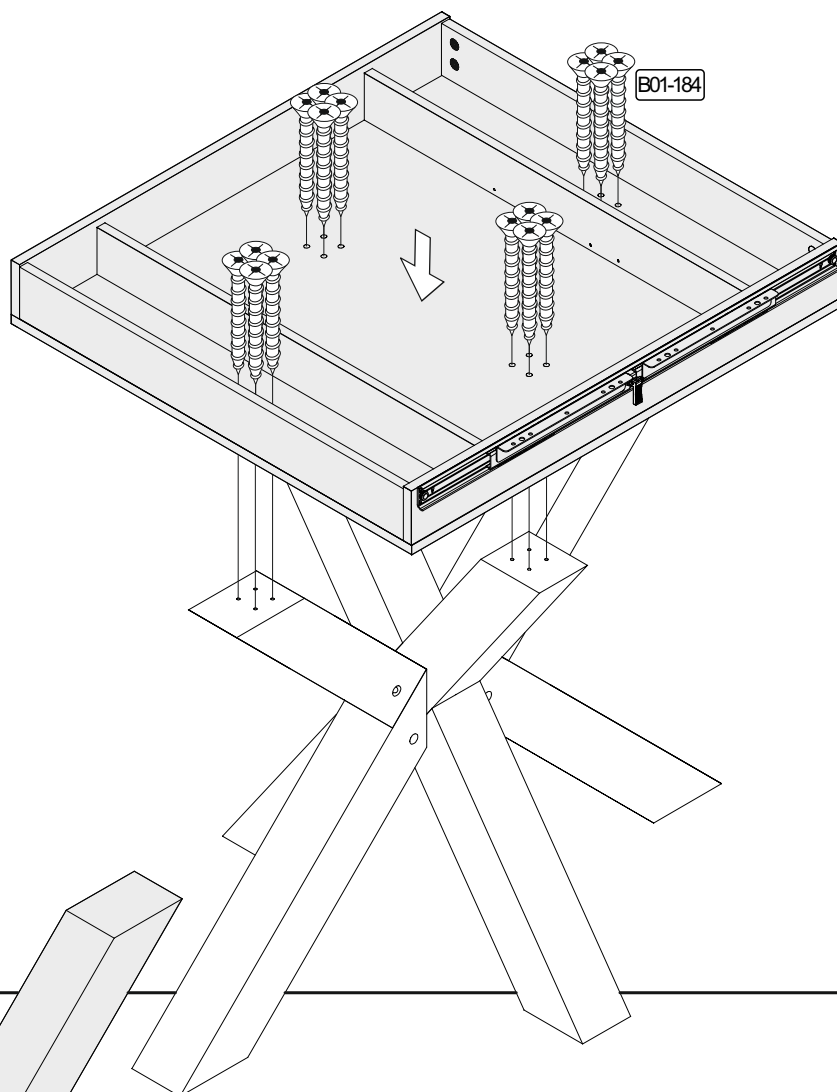


Art.-Nr. :

0784_Stern P2

6

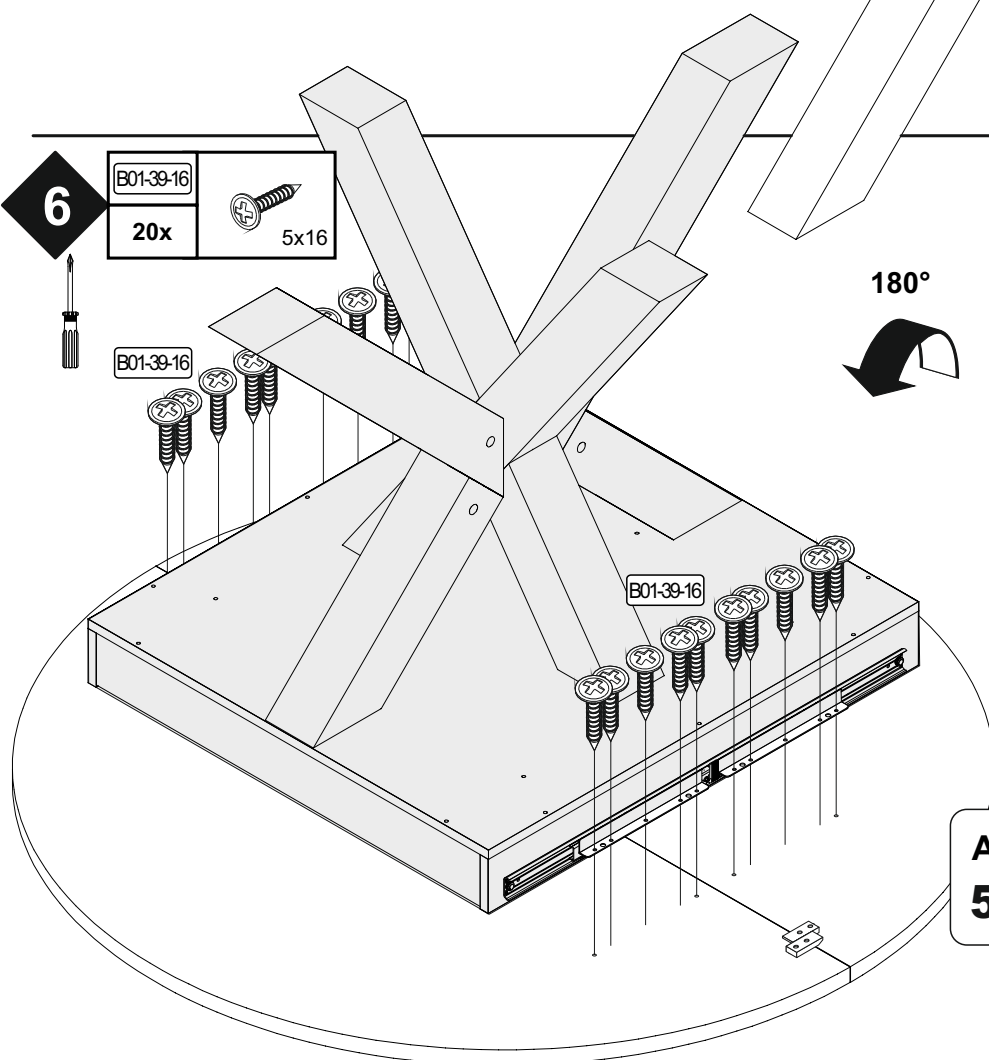

180°

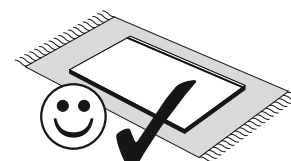



Art.-Nr. :

5014-TP-130-170


7




B02-170	
1x	
B01-90	
1x	3,5x20
B04-60	
2x	
B01-39-16	
4x	5x16

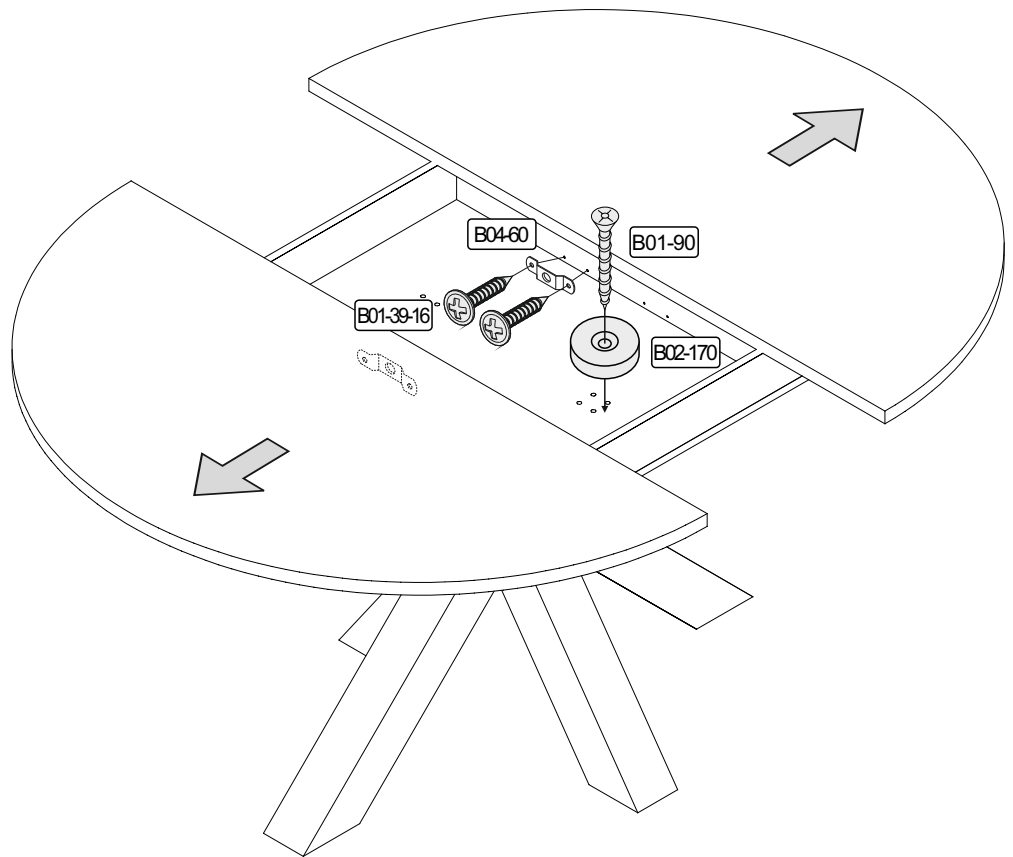


8

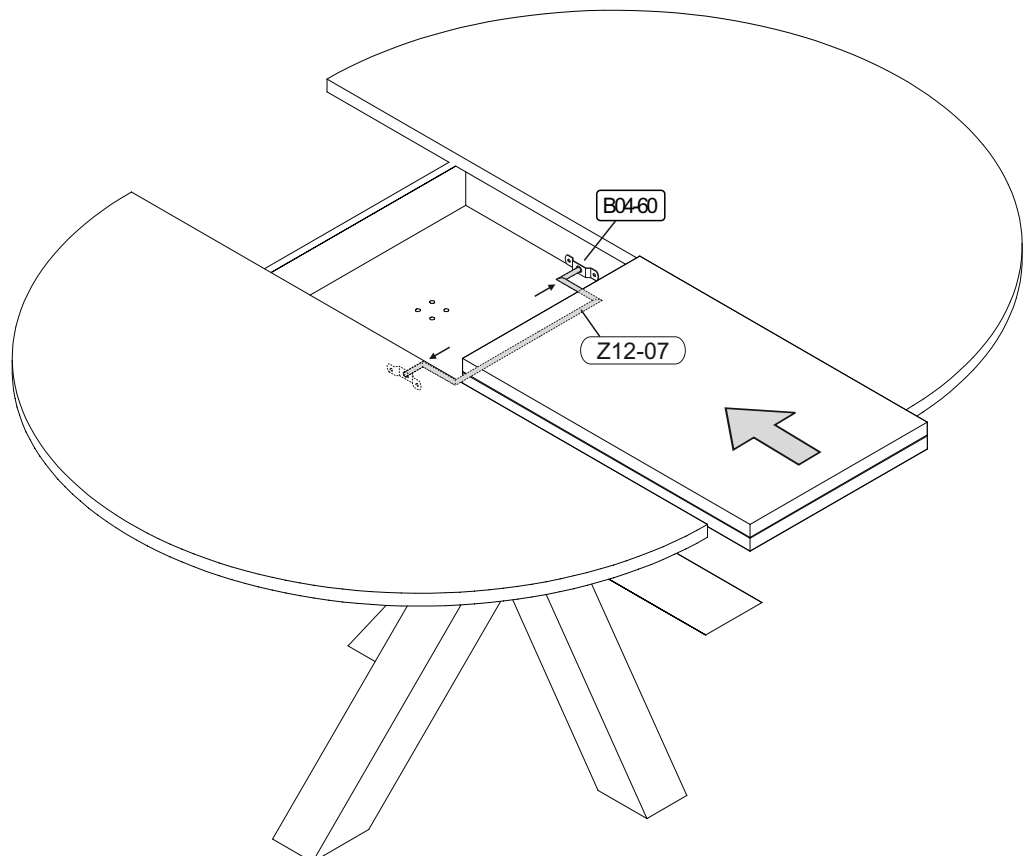





9

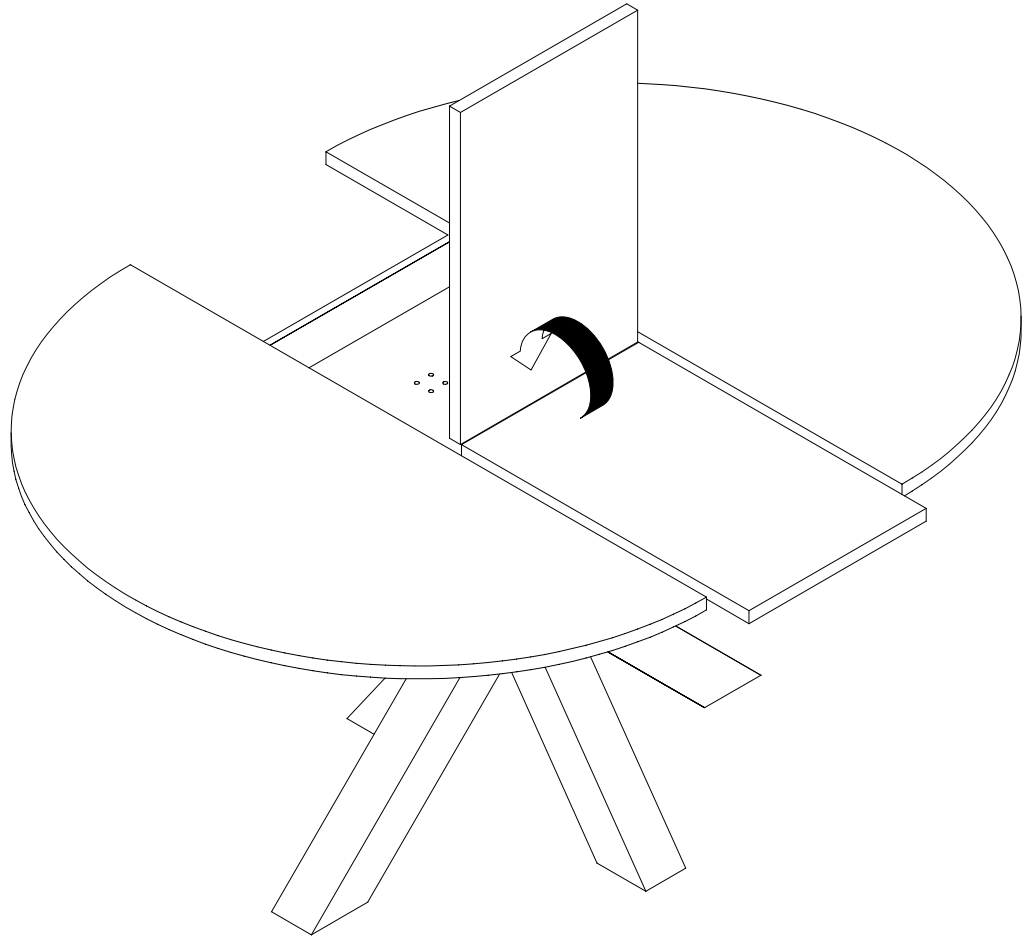

10

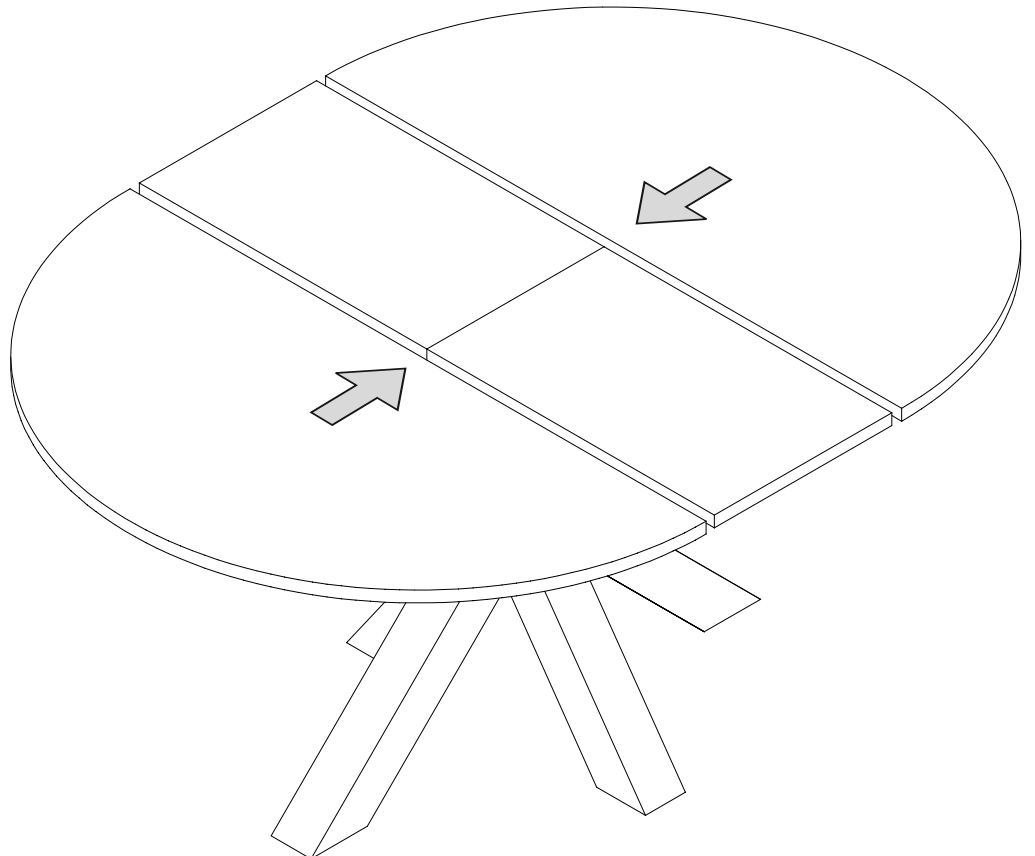

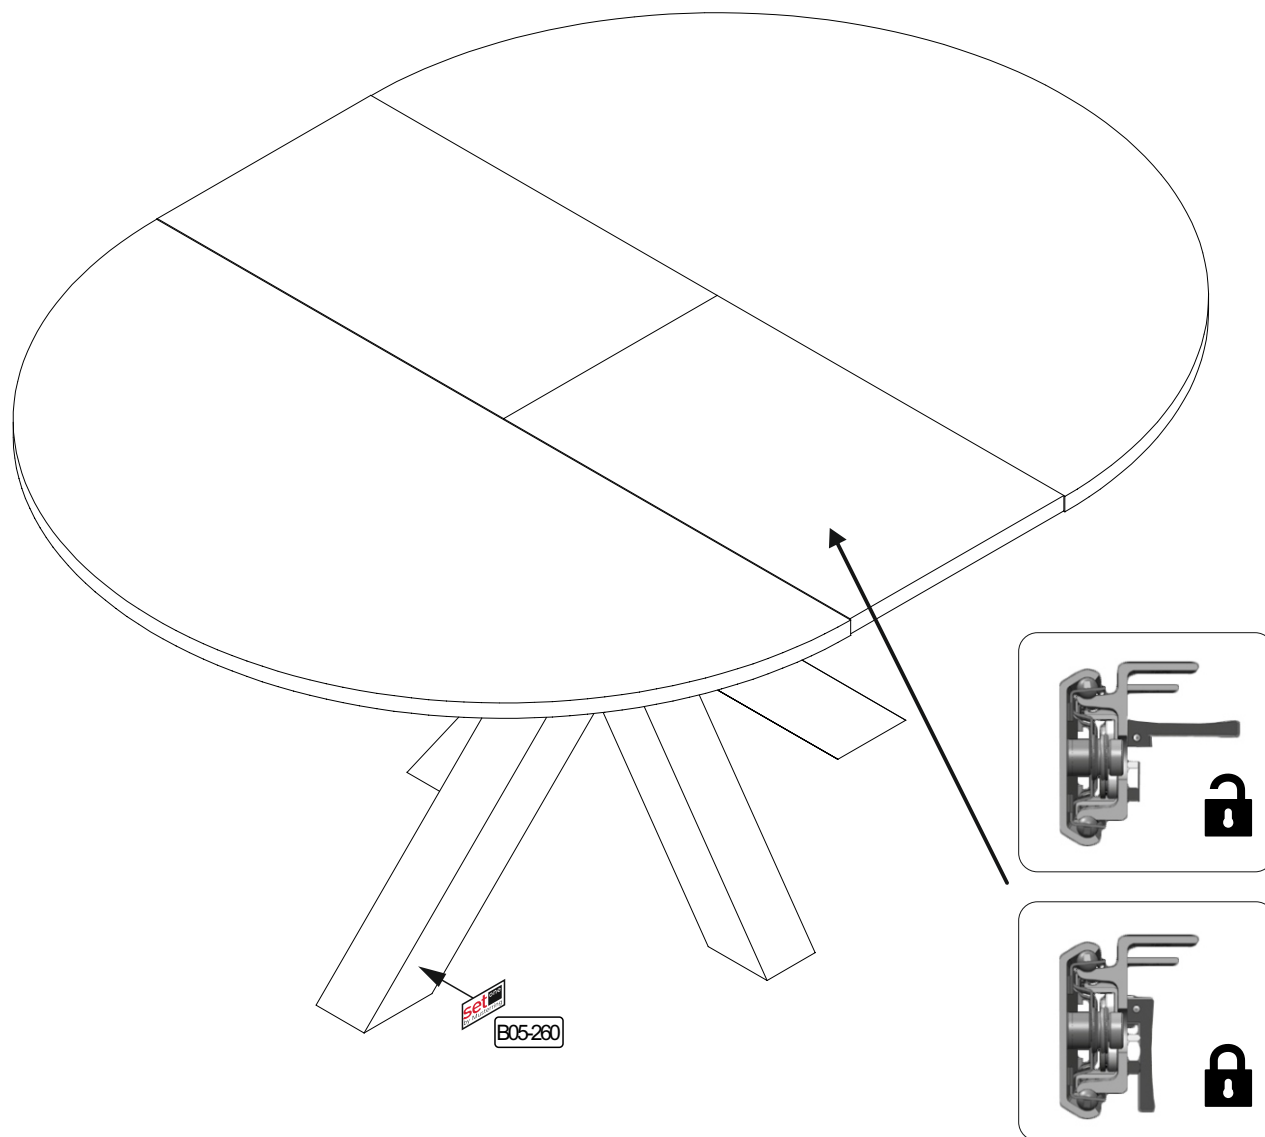

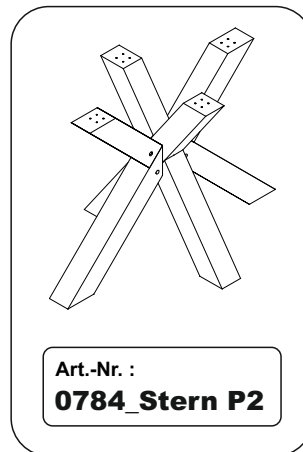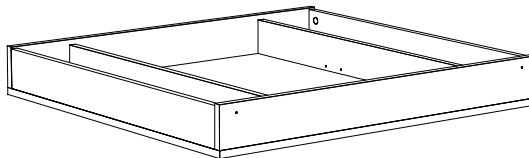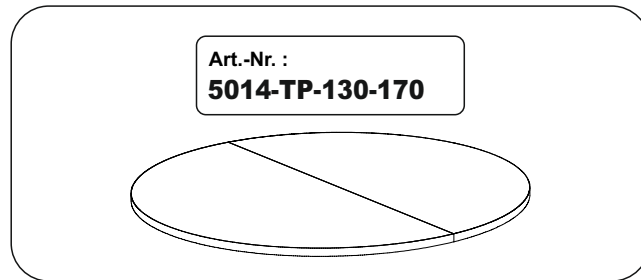







Artikel.-Nr.:

5016-VT





Montageanleitung.-Nr.:

MA1-00592

REPC-Nr.:

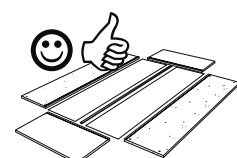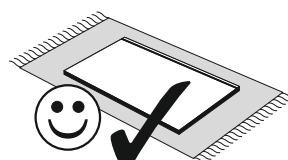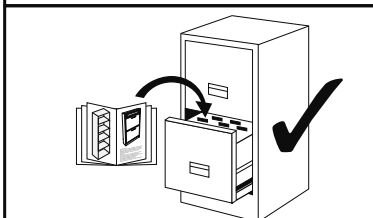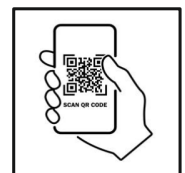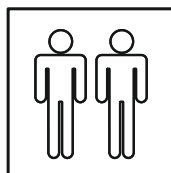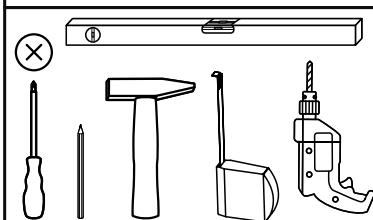


BT1-00689 Colli 1/1


B01-120		B01-39-16		B01-240		B01-90		B02-170	
18x		36x		1x		1x		1x	
B02-90		B04-60		B02-10		B02-20		B05-260	
8x		2x		8x		8x		1x	

BT1-00001 Colli 1/1


B05-265	
1x	Pflegeanweisung




Colli 1/1

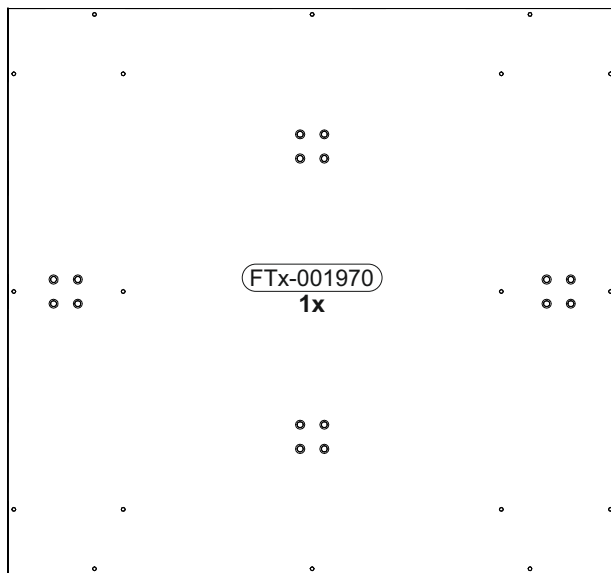


805x749




718x84




718x76



805x88

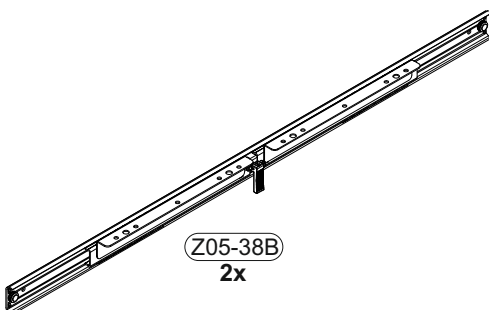


Z05-38B
2x

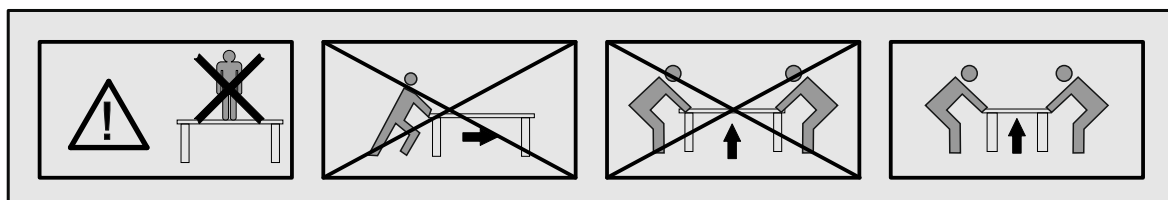

1




B02-10		B02-90	
8x	ø15x12mm	8x	6x30






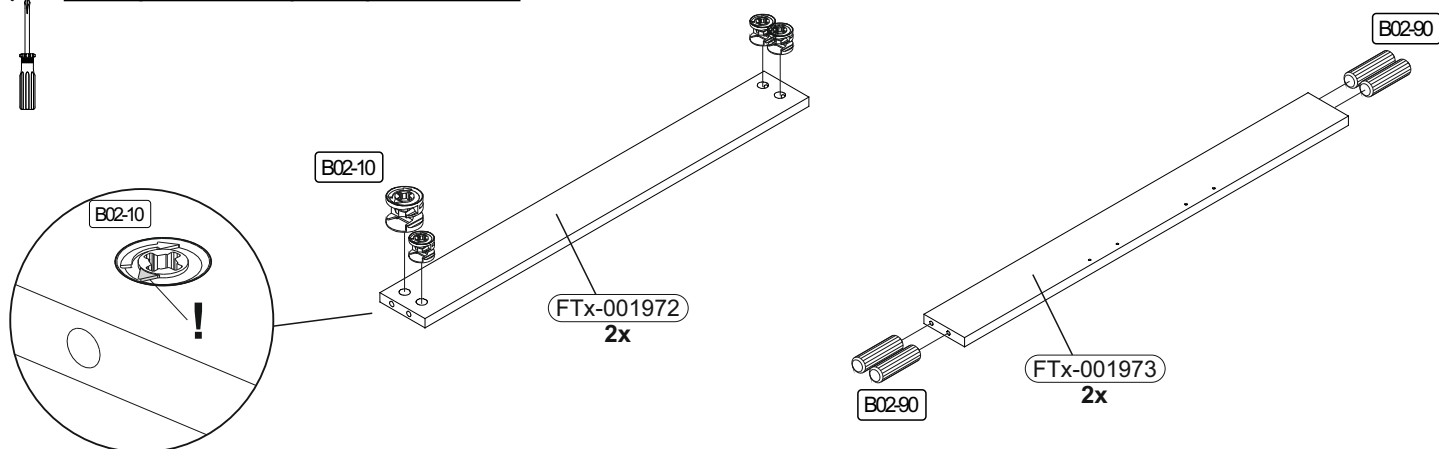


2





B02-20		B01-39-16	
8x		12x	5x16

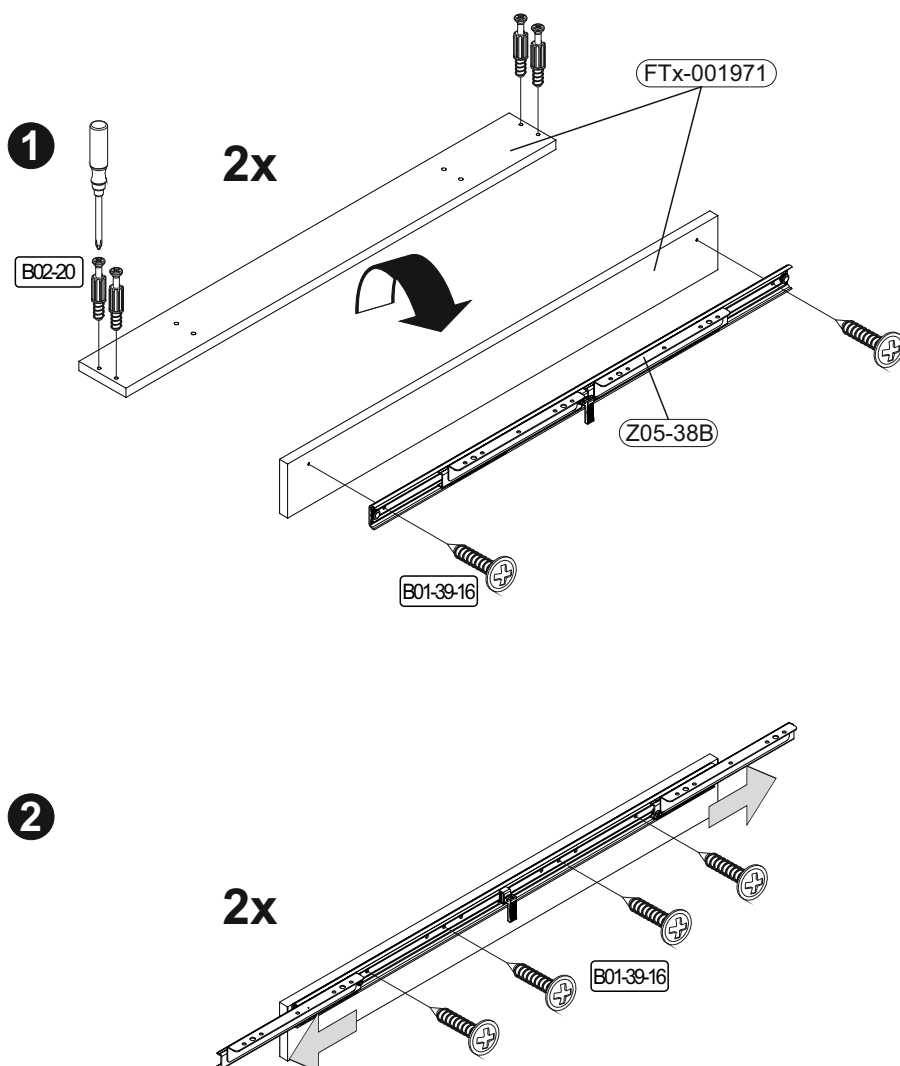

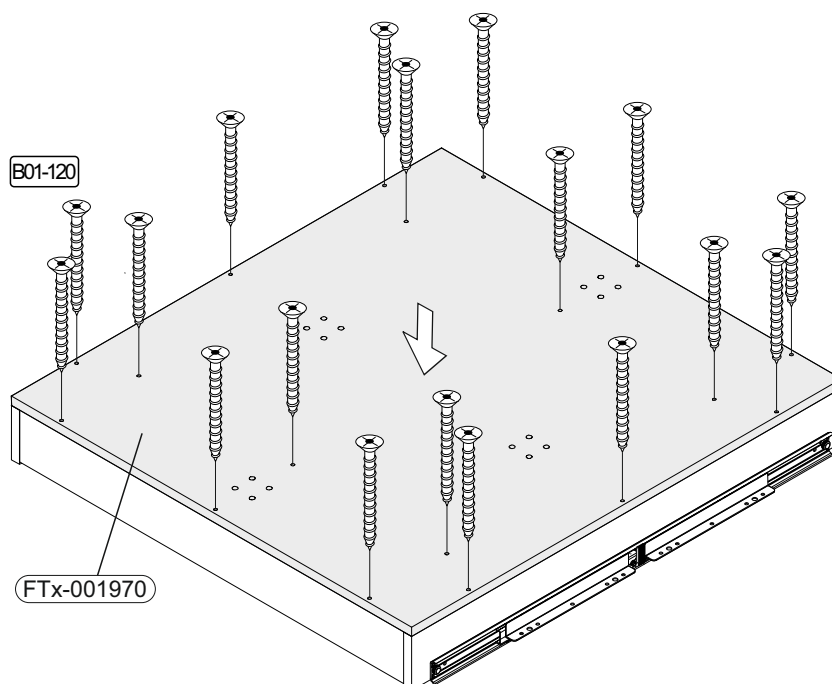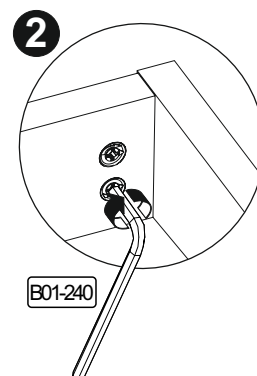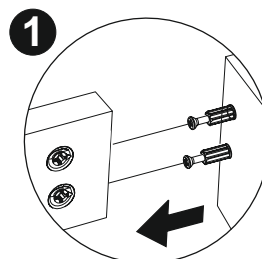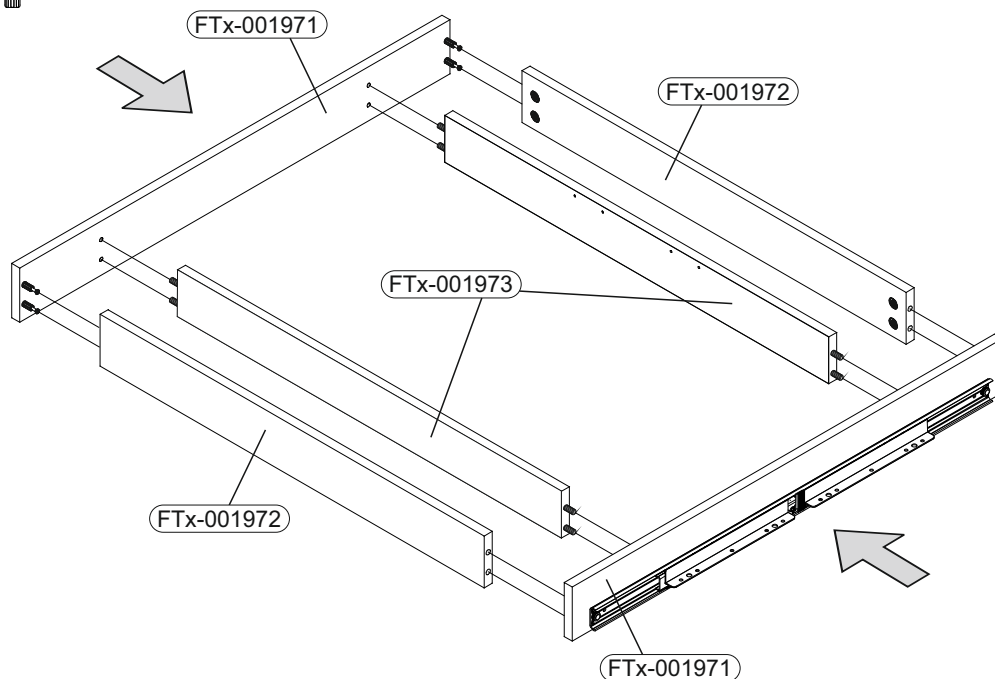



5

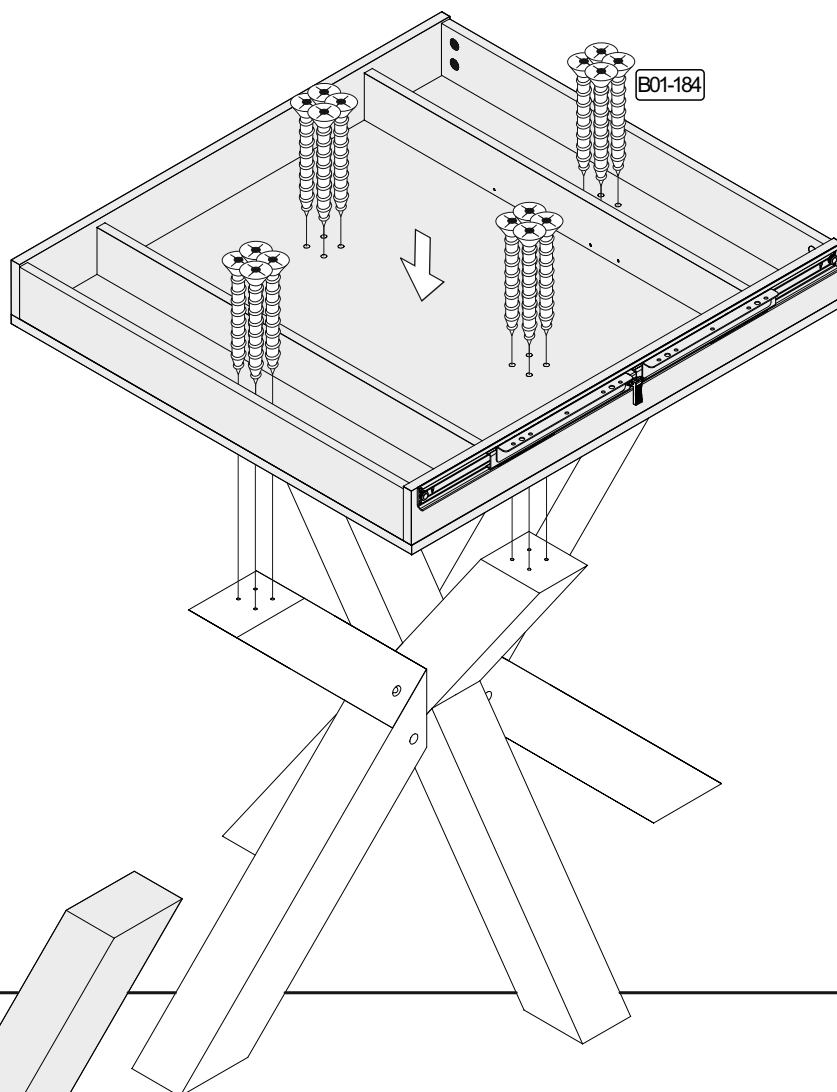


Art.-Nr. :

0784_Stern P2

6

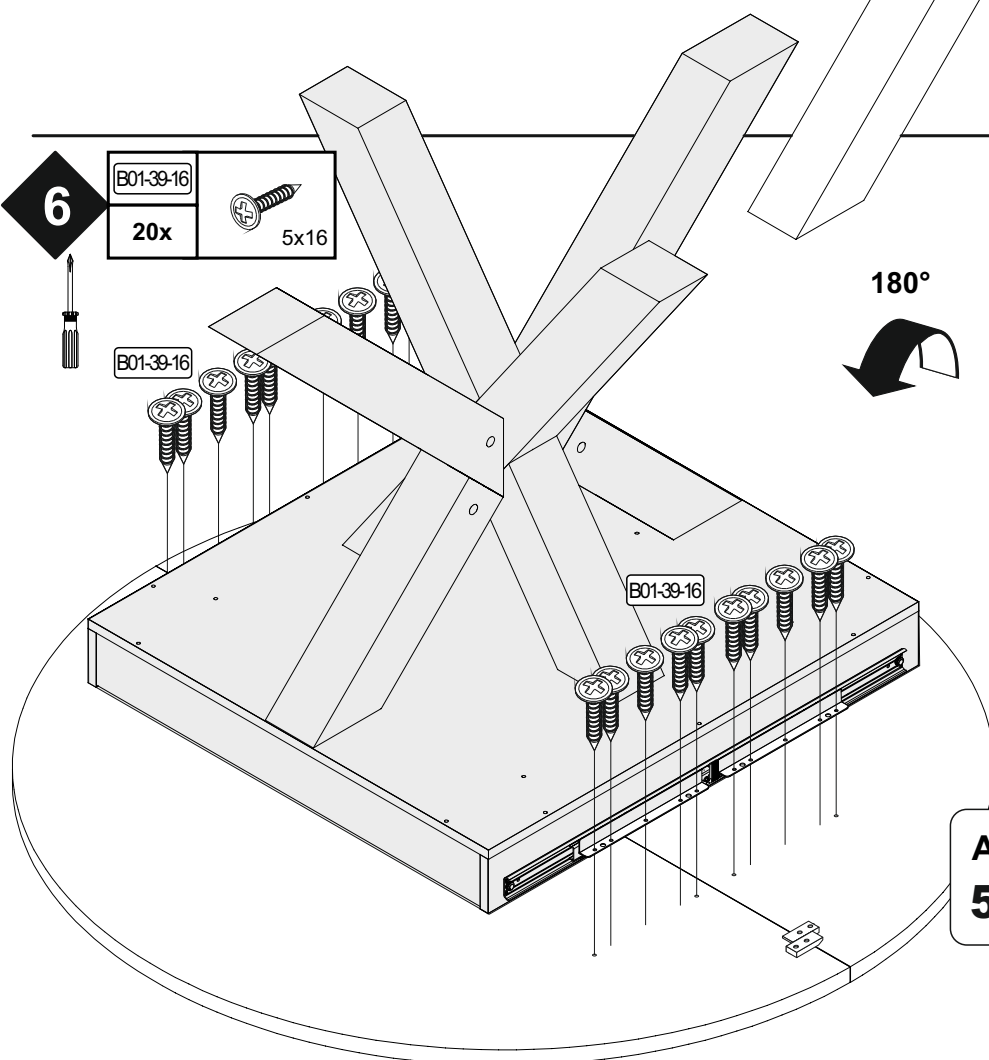

180°

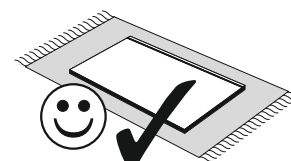


Art.-Nr. :

5014-TP-130-170


7




B02-170	
1x	
B01-90	
1x	3,5x20
B04-60	
2x	
B01-39-16	
4x	5x16

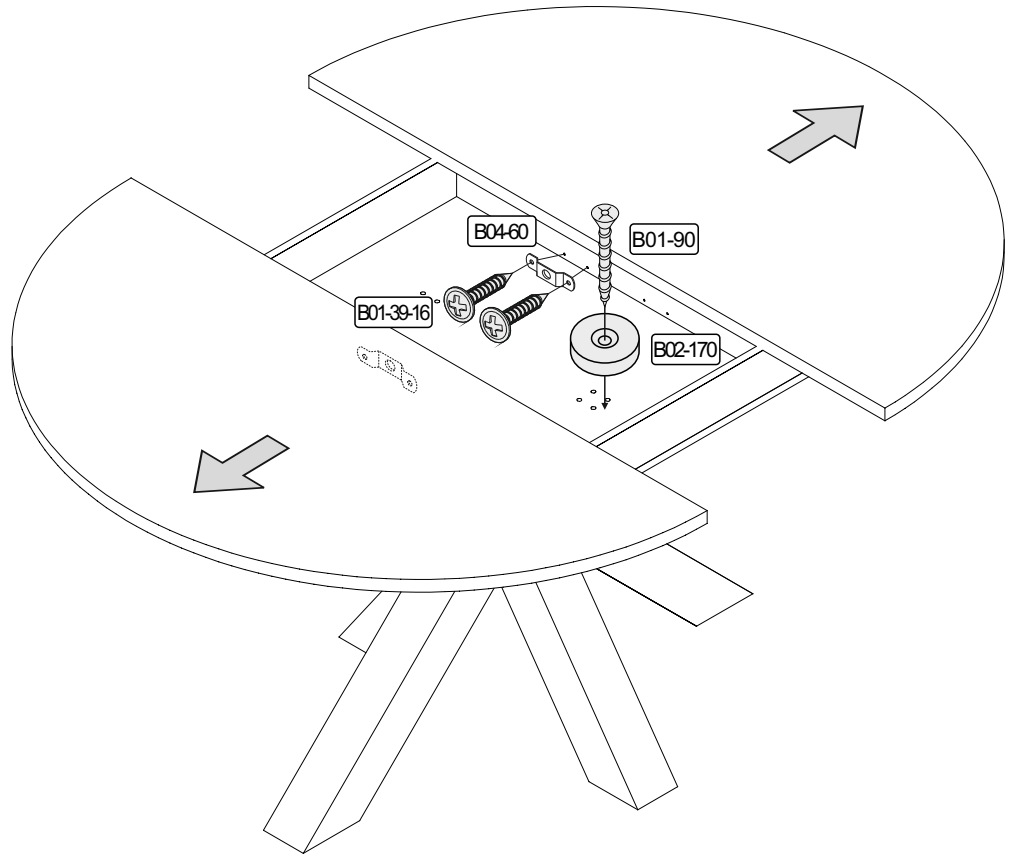


8

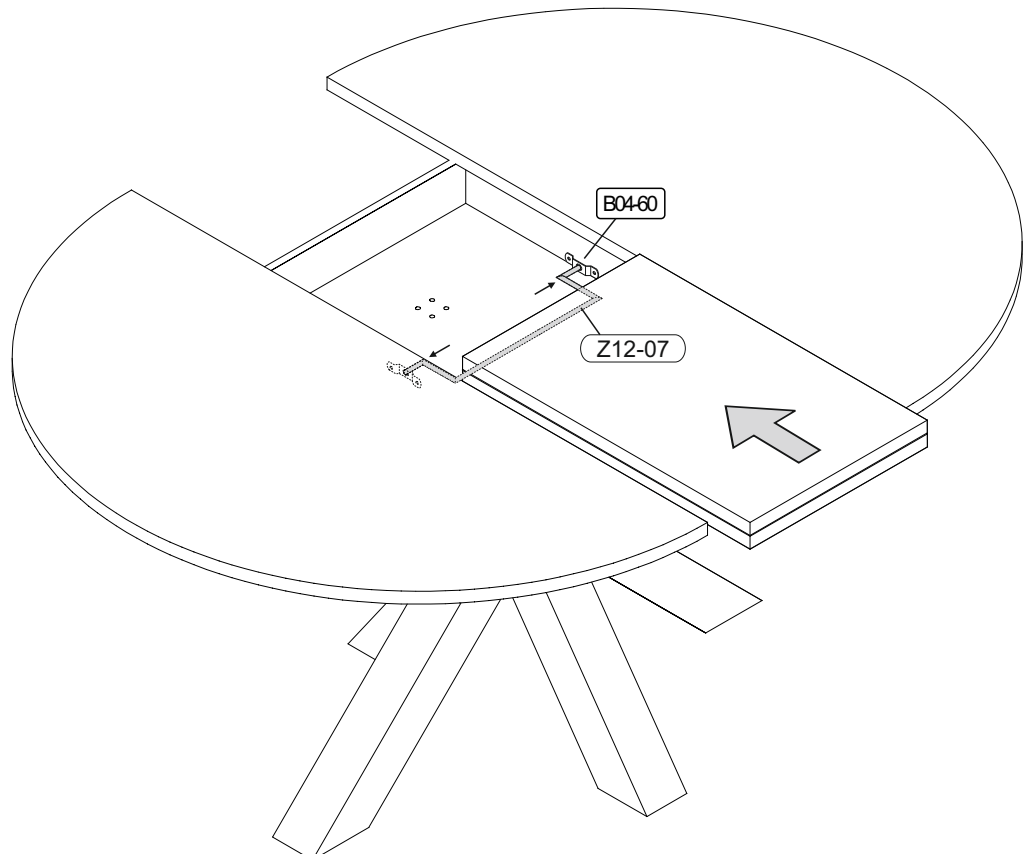


9

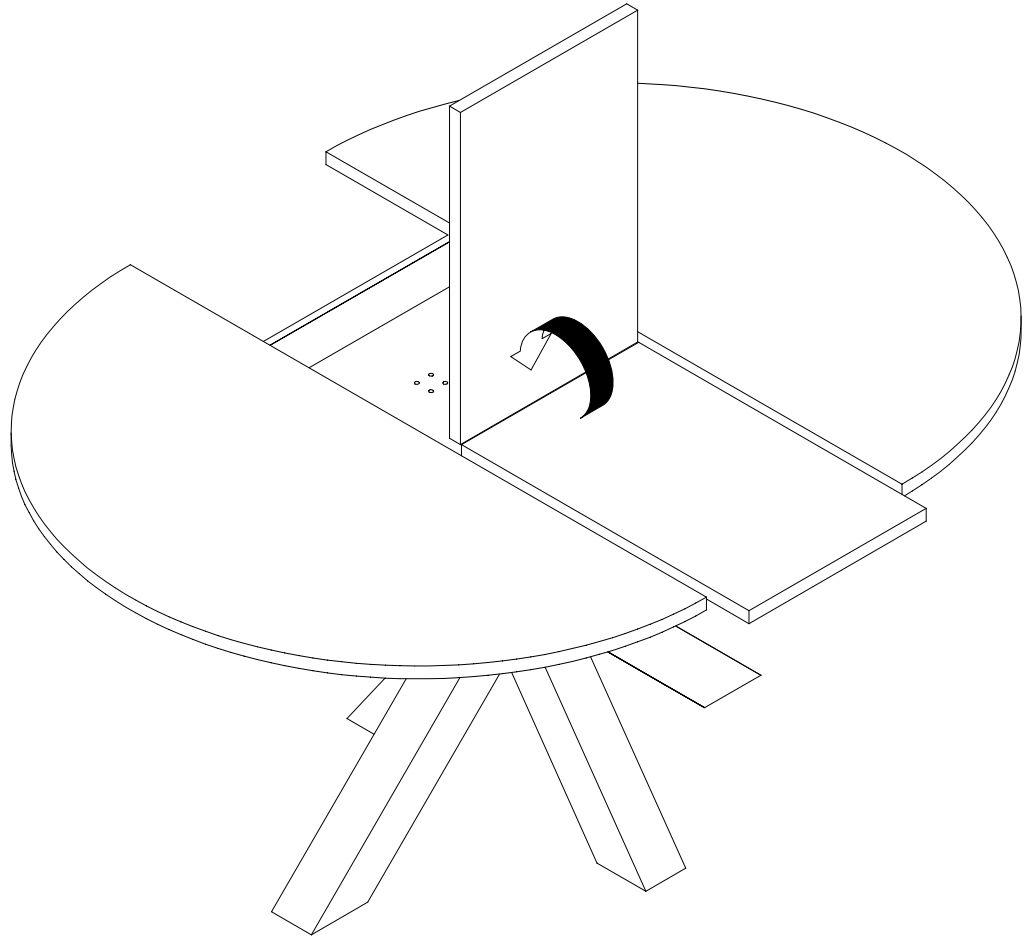


10

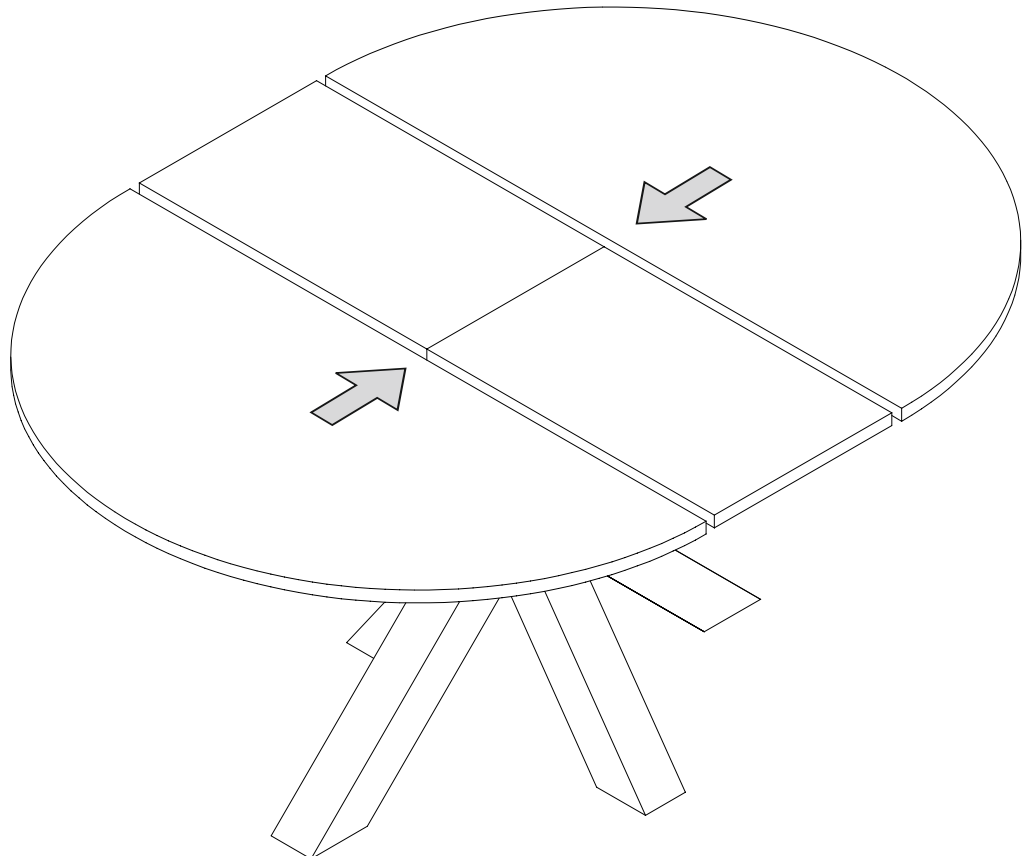

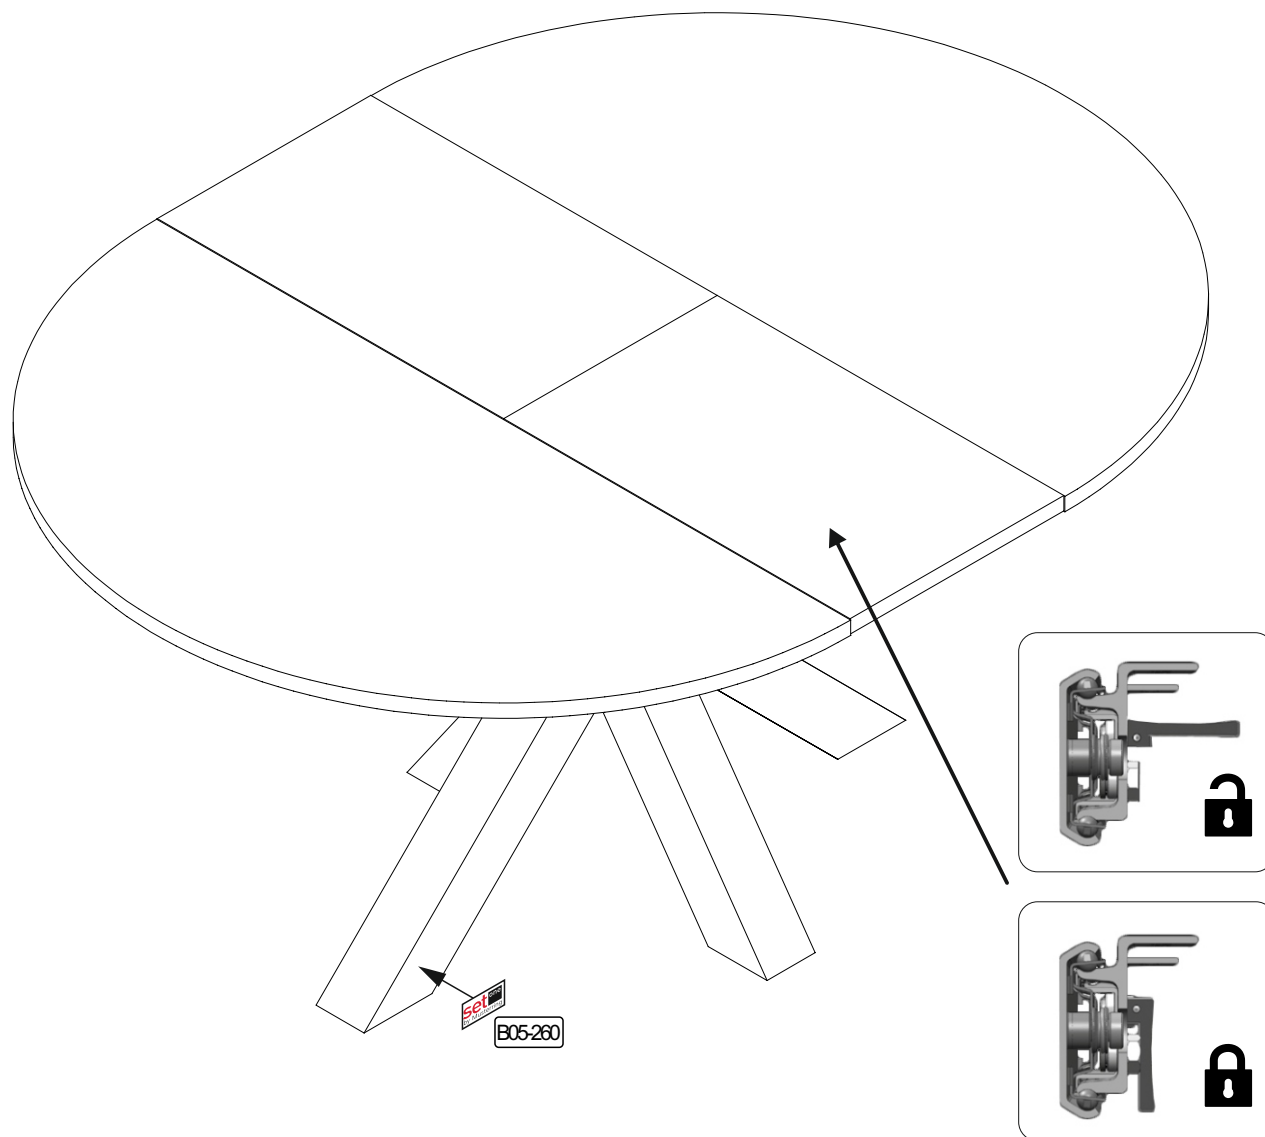

REPC-Nr.:







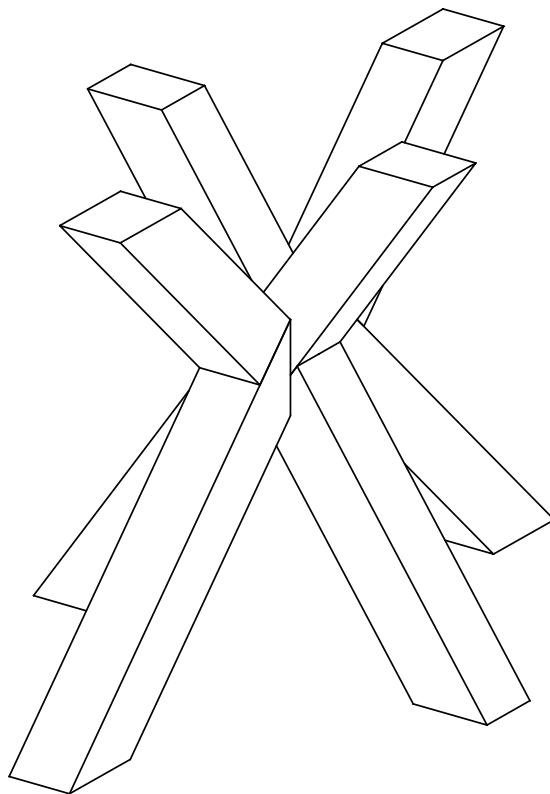


Artikel.-Nr.:

0784_Stern

Montageanleitung.-Nr.:




MA1-00203

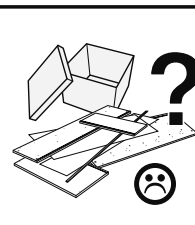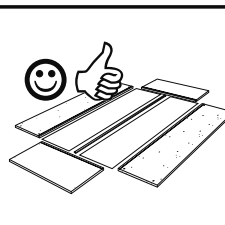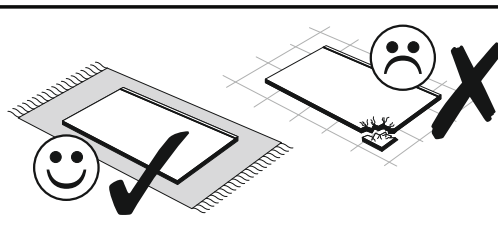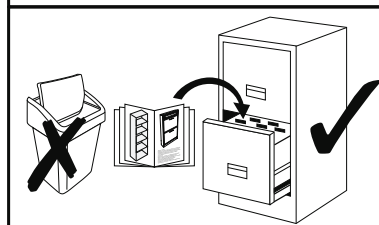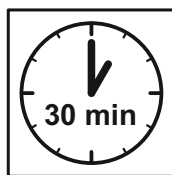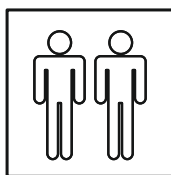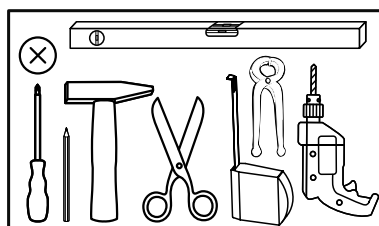

SCAN ME

Das Ersatzteil-Anforderungsformular finden Sie auf
The replacement parts requisition form you find on
<https://www.maeusbacher.de/ersatzteile/>


Beutel 0784_Stern P2 0-11

B01-184		B01-177-50		B01-177-70		B02-10		B02-169	
16x	6x70	2x	5x50	2x	5x70	8x		8x	ø12mm
B05-20		B05-130		B02-20		B02-104			
8x		2x		8x		15x	8x40		




SCAN ME


Colli 1/1

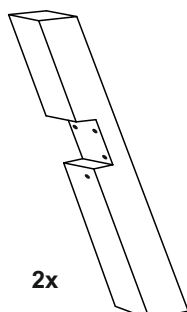








881 x 90
Z99-00489






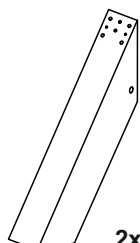


625 x 90
Z99-00490



413 x 90
Z99-00491

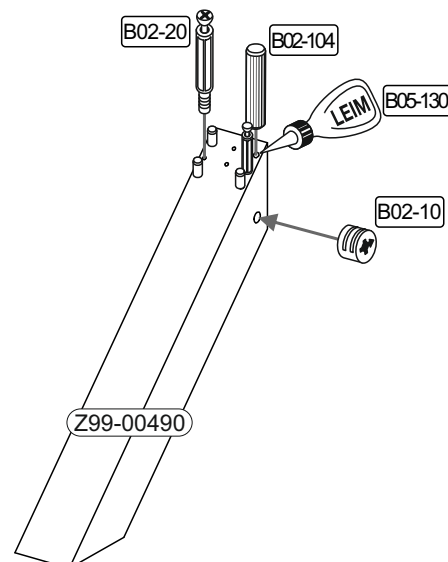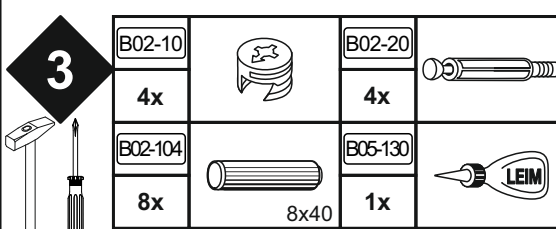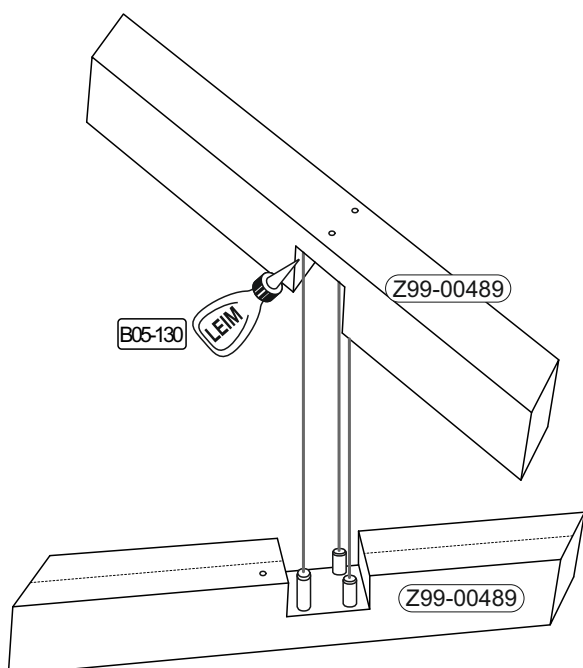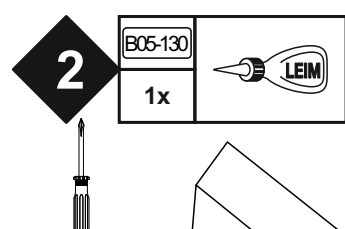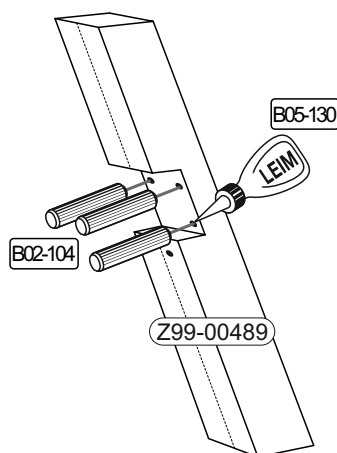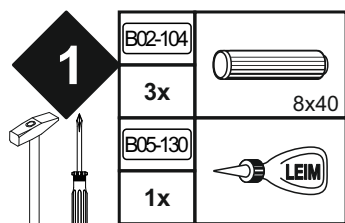

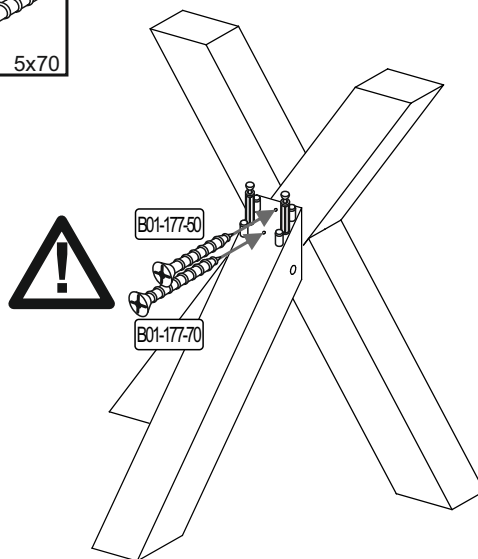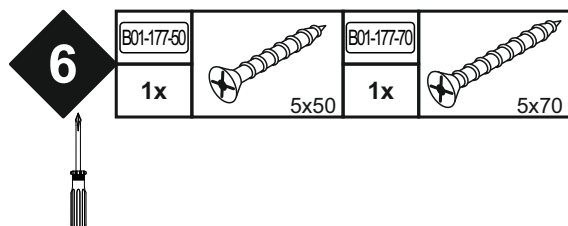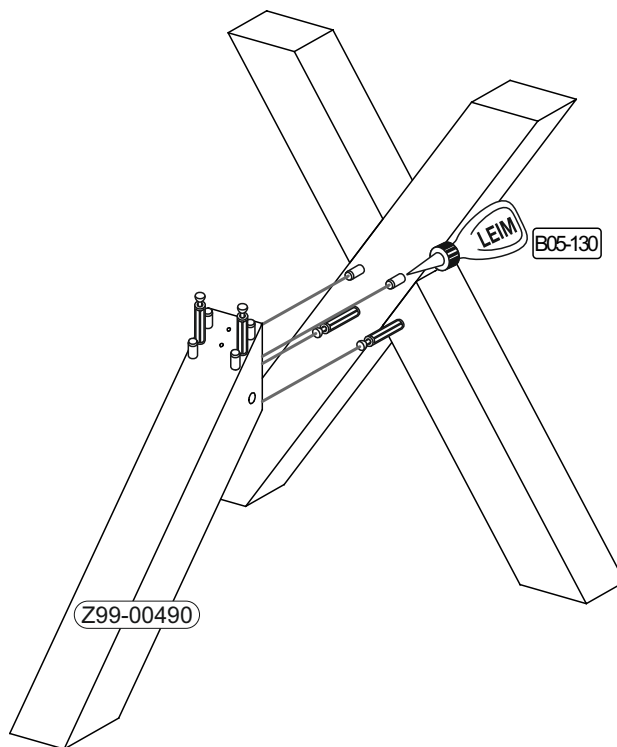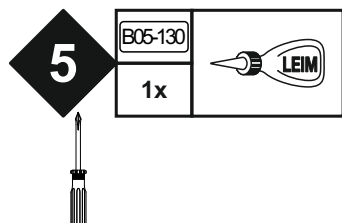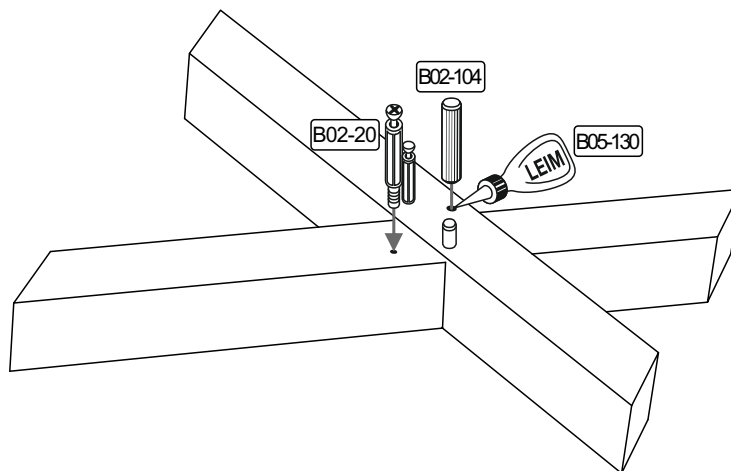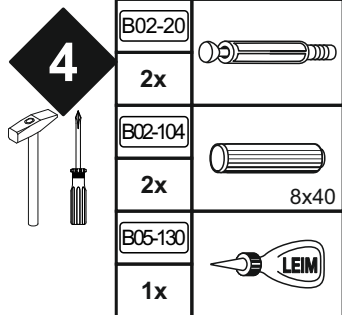


7

B02-10

2x

B05-130

1x

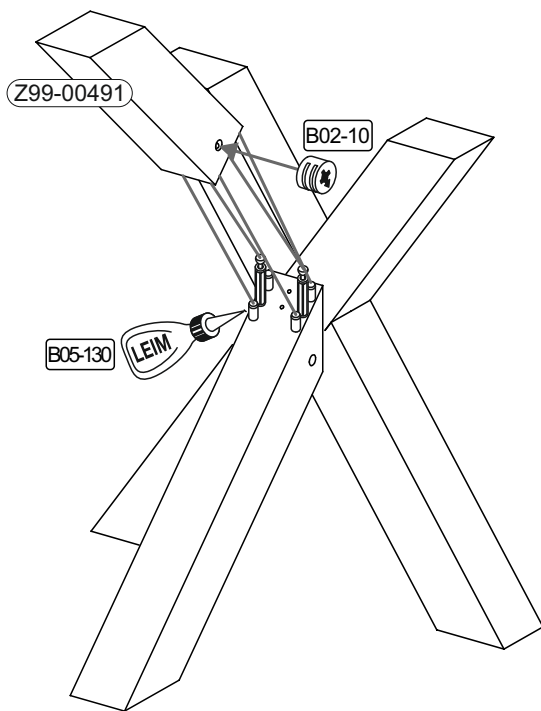

8

B02-20



2x

B02-104

2x

B05-130


1x

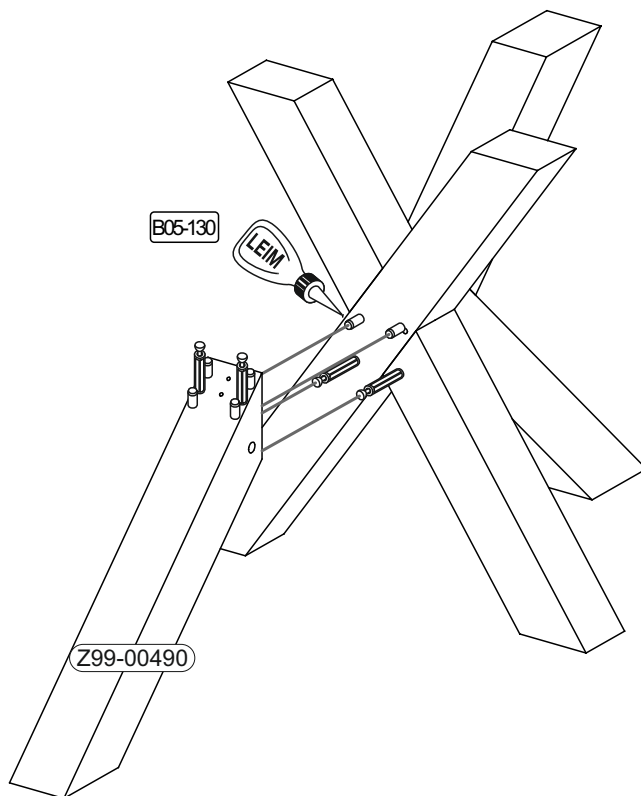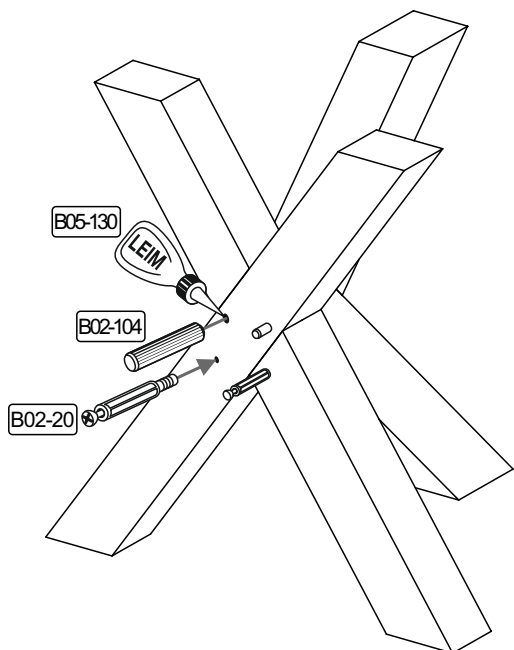

9



B01-177-50		B01-177-70	
1x	5x50	1x	5x70

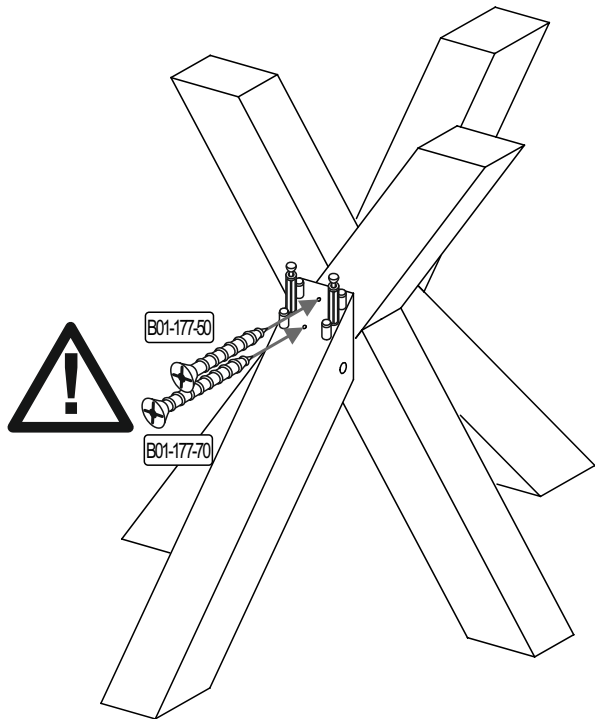

10



B02-10		B05-130		B05-20		B02-169		B02-169	
2x		1x		8x		8x	ø12mm	8x	ø12mm

