ASSEMBLY INSTRUCTION CH-131

	A X2	B X4	C X4	D X1	E X1
		6*30mm			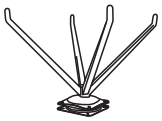

STEP 1

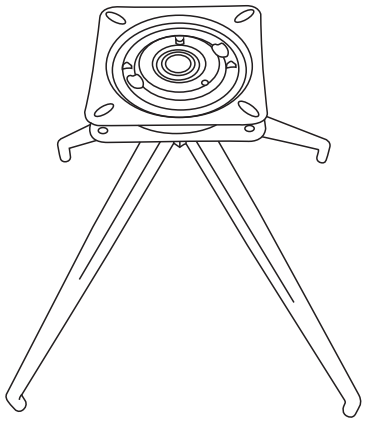

STEP 2

make sure the spanner has locked the system as in the picture

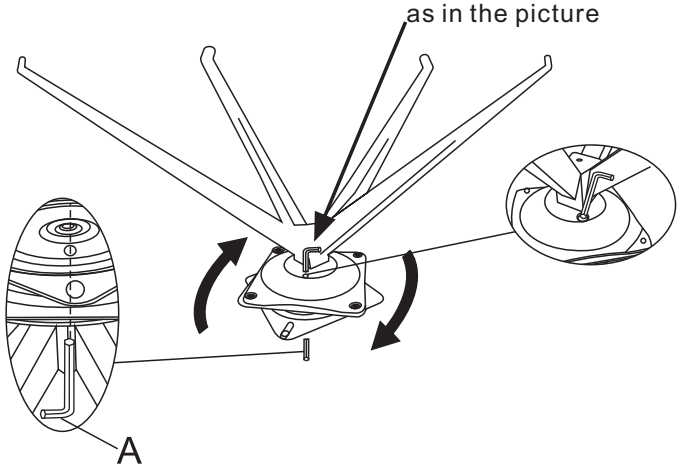

STEP 3

assembly the screws by hand first and than remove the spanner to tighen 100%

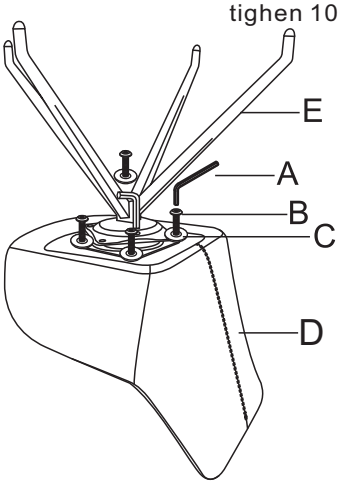

STEP 4

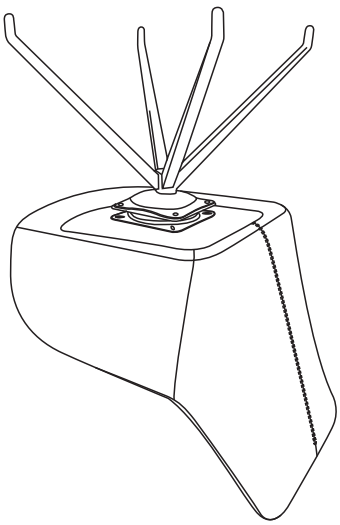
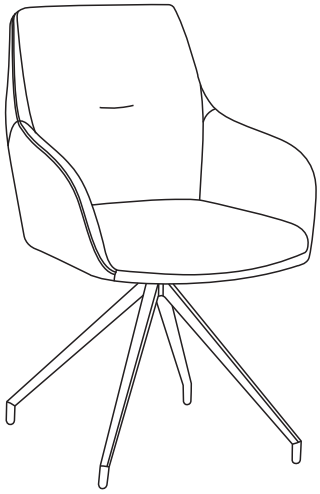
STEP 5