


Redford (2AL-RC)(RC-2AL) variabel



(DE)	Montageanleitung	(FR)	Notice de montage
(PL)	Instrukcja montażu	(RO)	Instrucțiuni de asamblare
(NL)	Handleiding voor de montage	(SK)	Montážny návod
(GB)	Assembly instructions	(CZ)	Montážní návod
(TR)	Montaj talimatı	(HU)	Szerelési útmutató
(RU)	Инструкция по монтажу	(SLO)	Navodila za montažo
(IT)	Istruzioni di montaggio		

Service - Servis - Dienstverlening - Servis - Serwis - Сервисная служба - Servizio - Service
Serviciu - Služby - Szolgáltatás - Storitev

Da es sich hier um ein variables Modell handelt, muss vor Montage entschieden werden, welches Element rechts oder links stehen soll. Entsprechend müssen dann die Arm- bzw. Rückenlehnen angebracht werden. Hierzu den Reißverschluss an der Unterseite öffnen und anhand der vorhandenen Bohrungen in den Seitenwänden die Löcher im Stoff freilegen (Schere, Cuttermesser o.ä.).

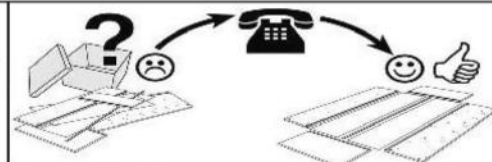


2x 74x47	1x 122x47	2x 50x50	51x9 M8x80	U1x9	52x8 M6x20
B1x2	B2x2	2AL	RC	RC	x1 13






2AL-RC
L=2-3





RC-2AL
R=4-5

30-06-2025

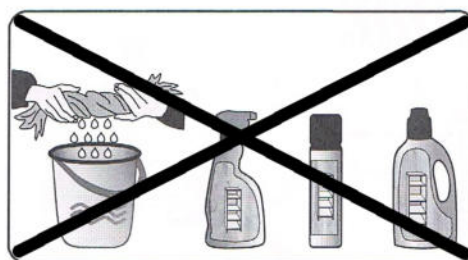

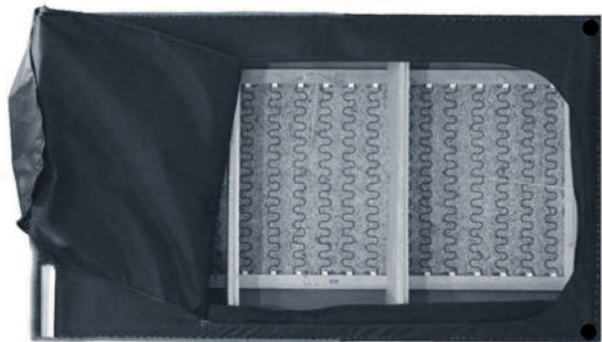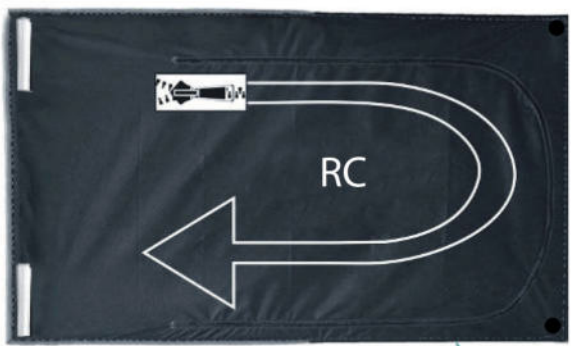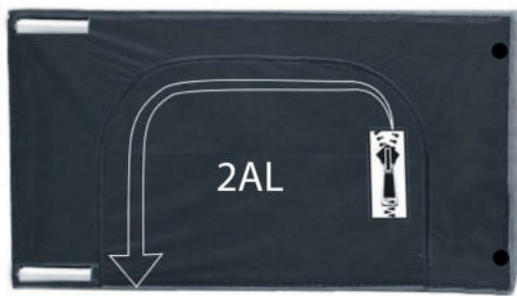


S1x3	U1x3	S2x4	B2x2	2AL	L	L 2AL-RC
-------------	-------------	-------------	-------------	------------	----------	-----------------

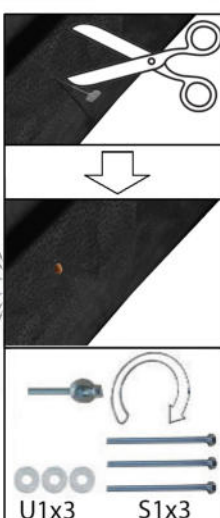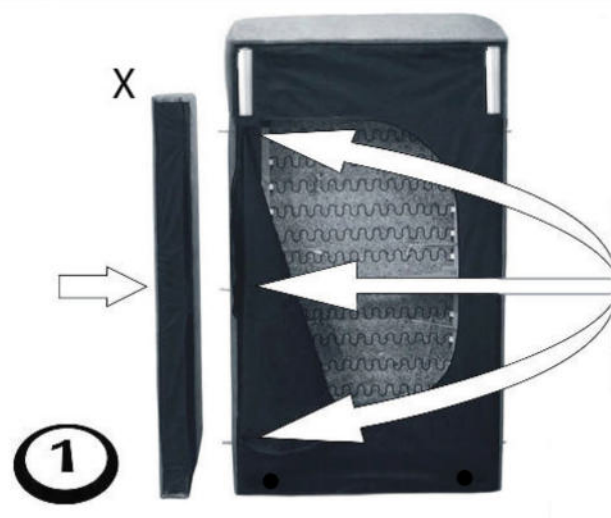

2AL

②

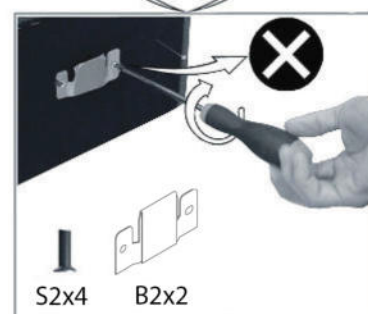

③



30-06-2025	
1h	

S1x6

U1x6

S2x4

B1x2

Y

RC

Z

RC

L 2AL-RC

4

S1x3

U1x3

Y

RC

6

B1x2

S2x4

7

8

30-06-2025

1h

L 2AL-RC

3

S1x3

U1x3

S2x4

B2x2

X

2AL

R

RC-2AL

1

2

3

S1x6

U1x6

Y

Z

RC

RC

R

RC-2AL

4

5

30-06-2025

1h

4

