
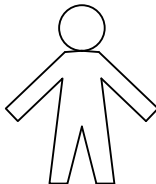


1.



M0861_02

rauch






Typ I

Typ II

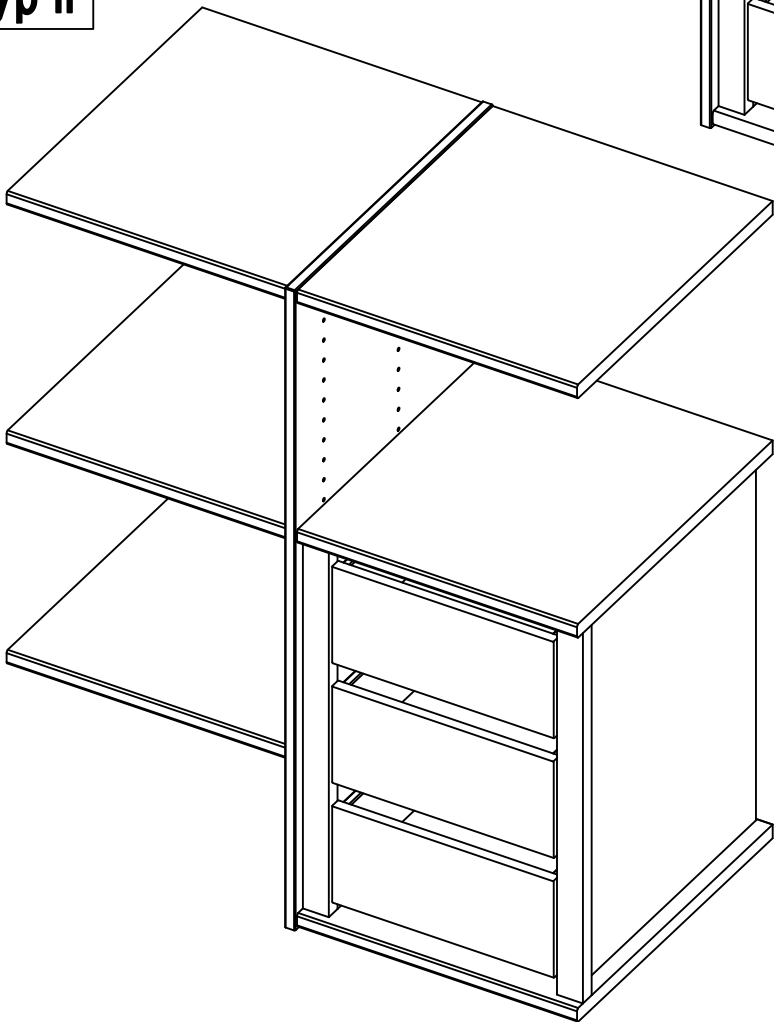
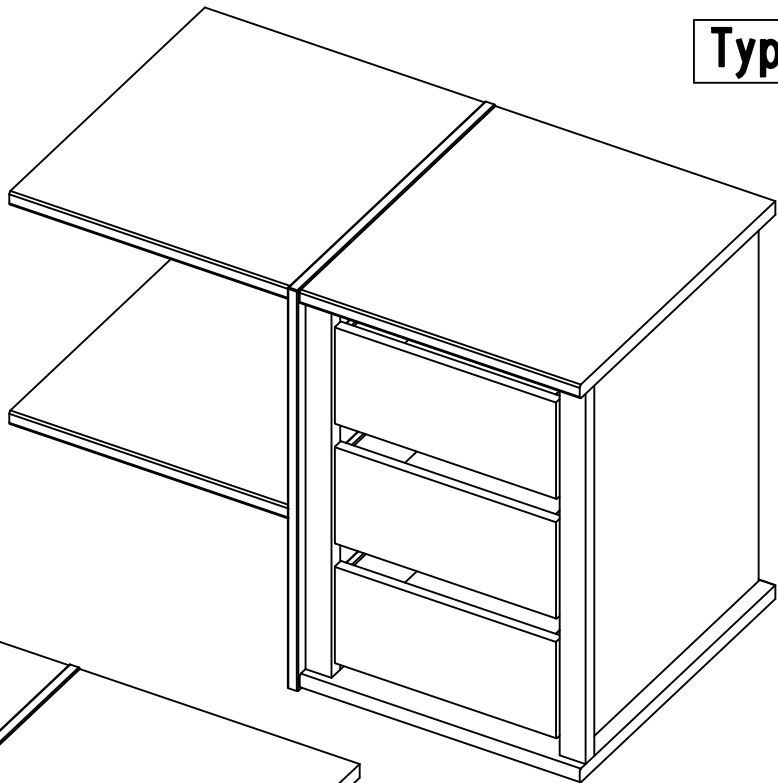


2.

Typ I

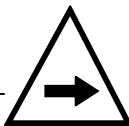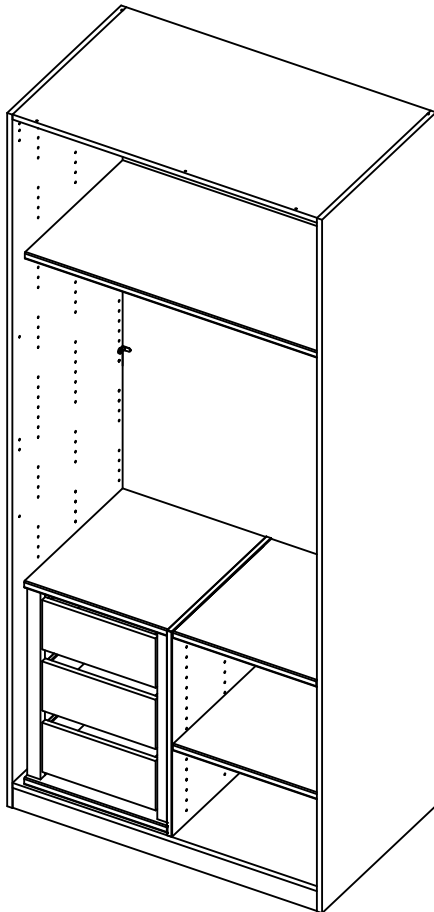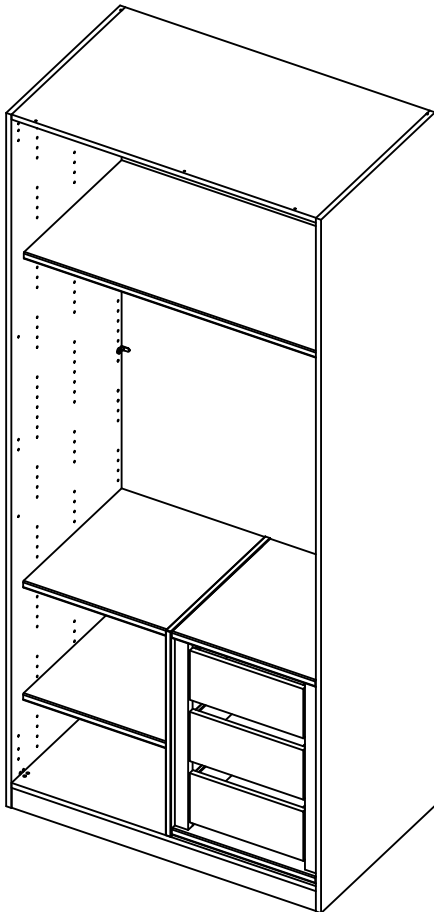


Typ II

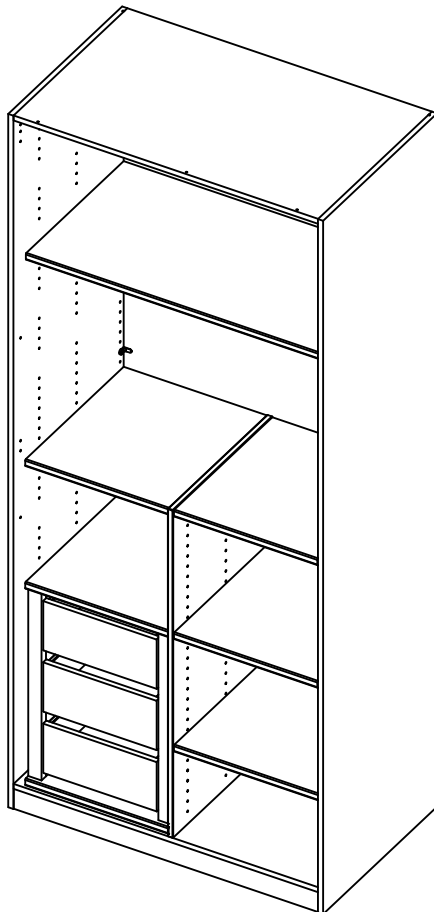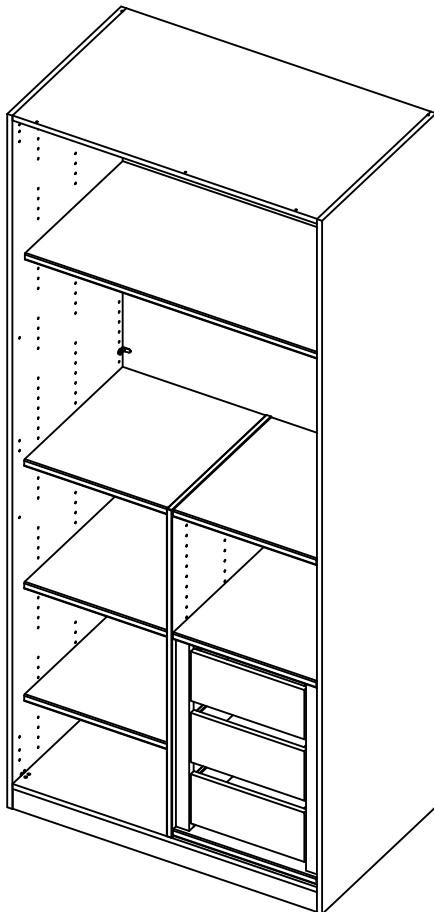


3.

Typ I

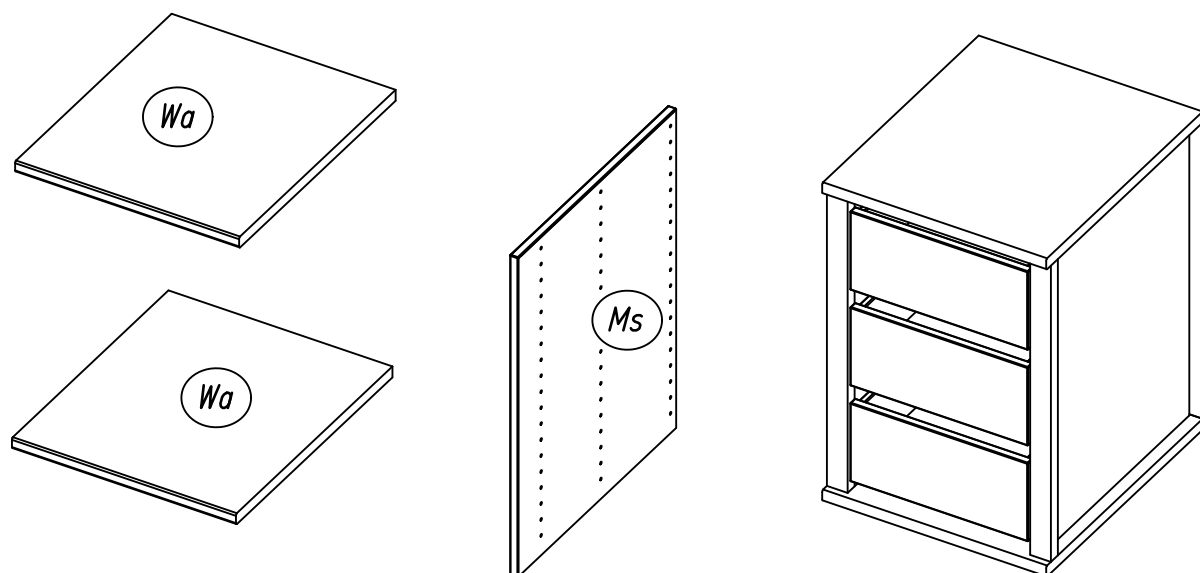

Typ II

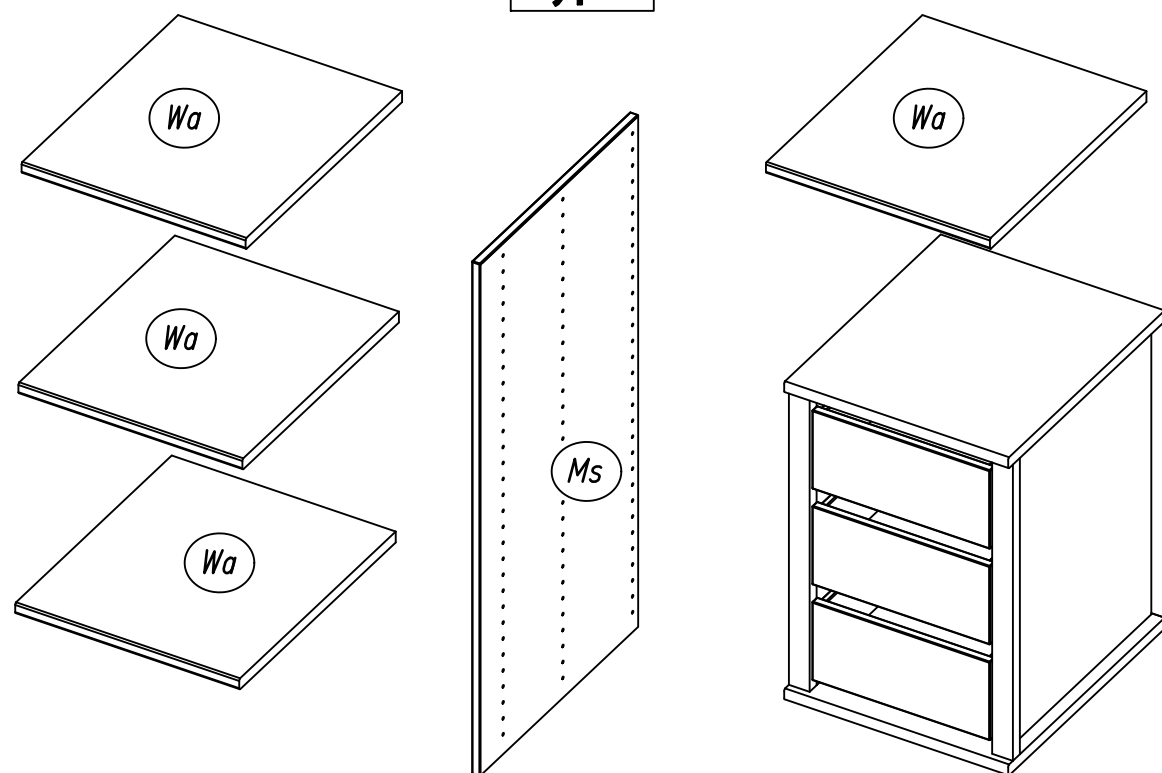


M0861

4.



1089




Kn



1


Kn



Typ I

Typ II



1.

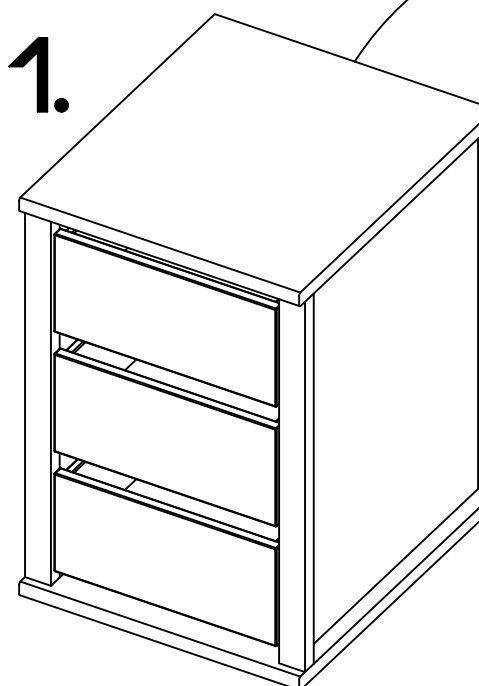

2.

4x


Kn

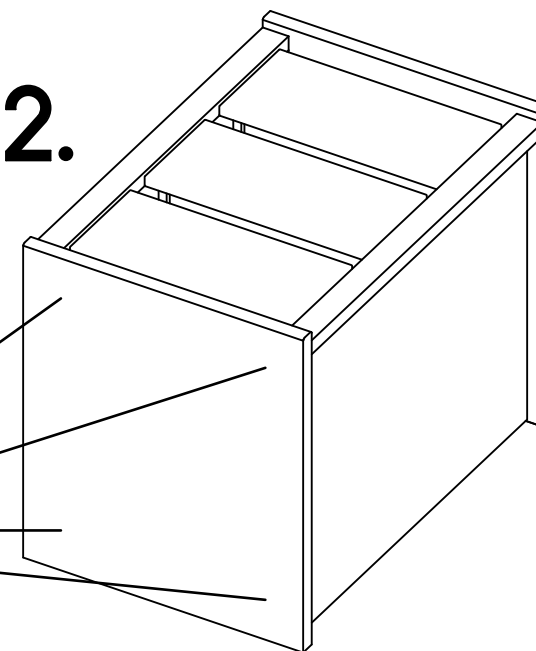

M0861

5.

2


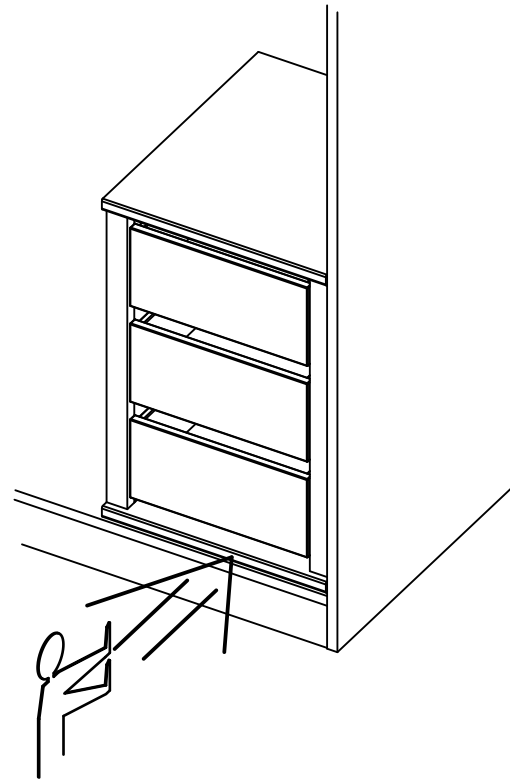


Typ I

Typ II

3

1089

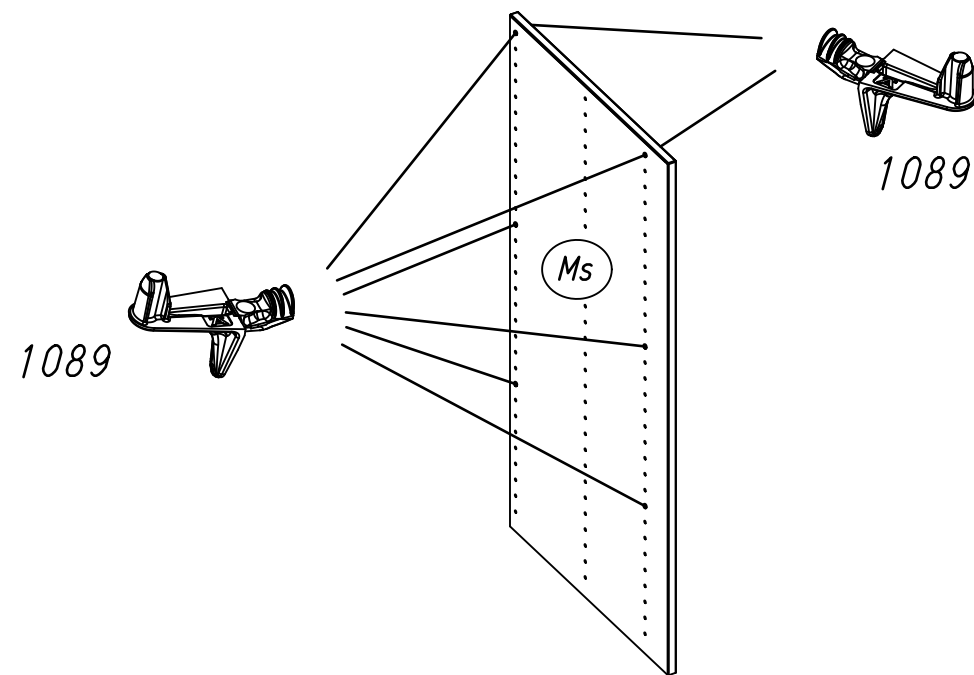


Typ I

Typ II

M0861

6.

4

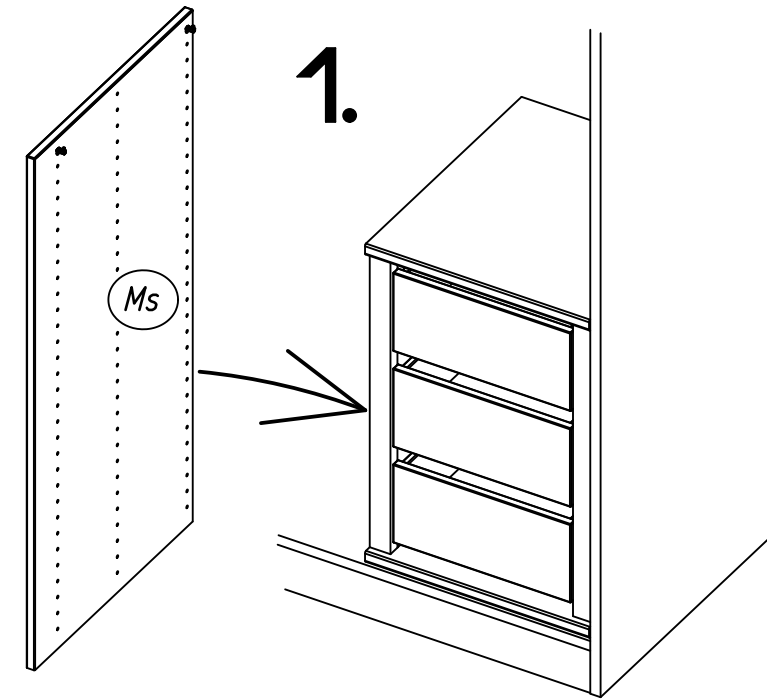


1.

Typ I

Typ II

2.

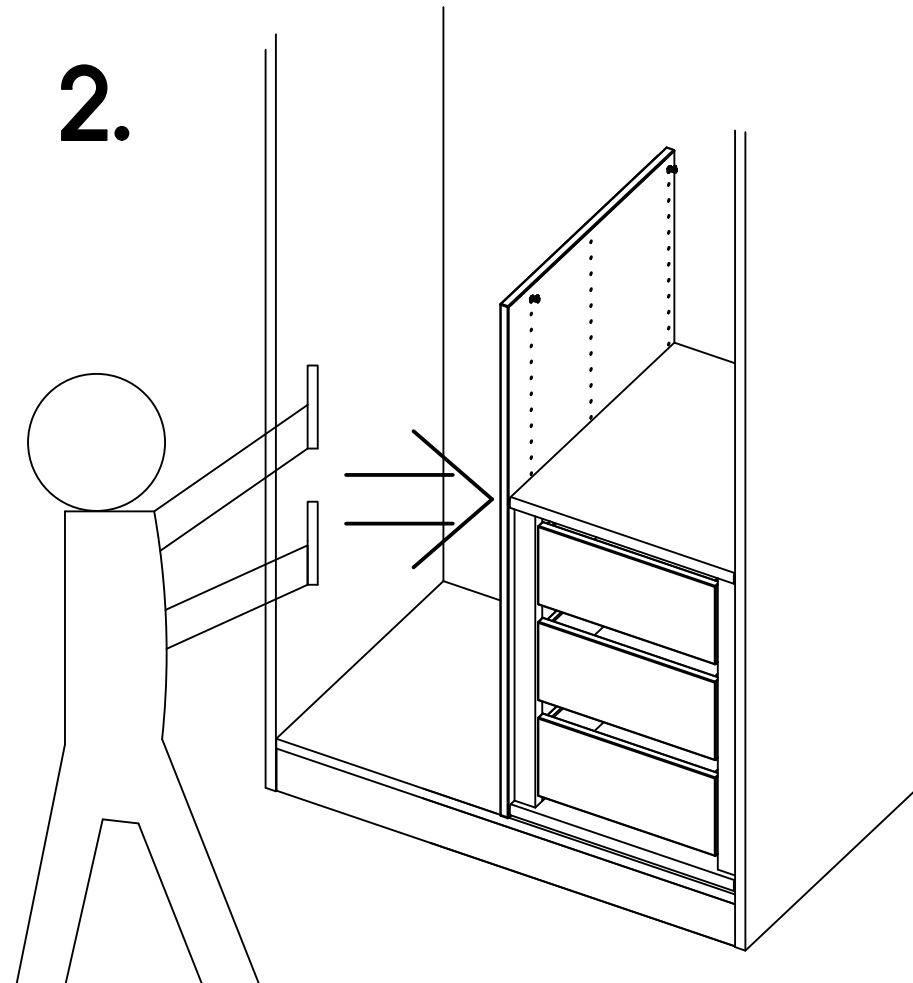


M0861

7.


5

1089



Typ I

Typ II

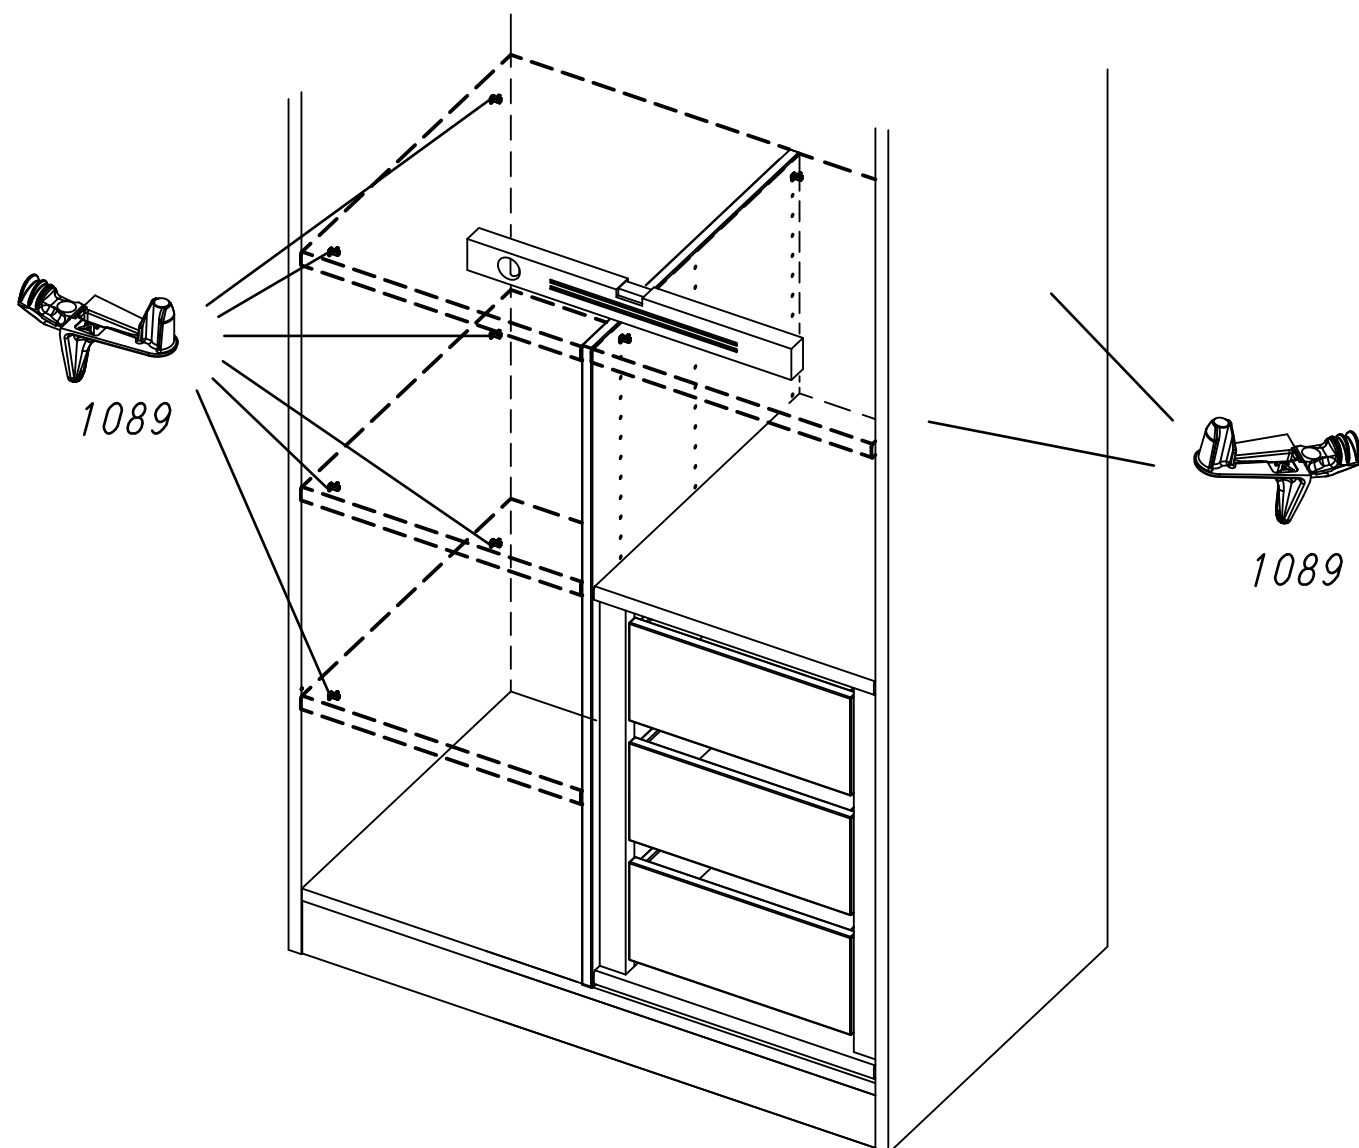


M0861

8.

6

Typ I



Typ II

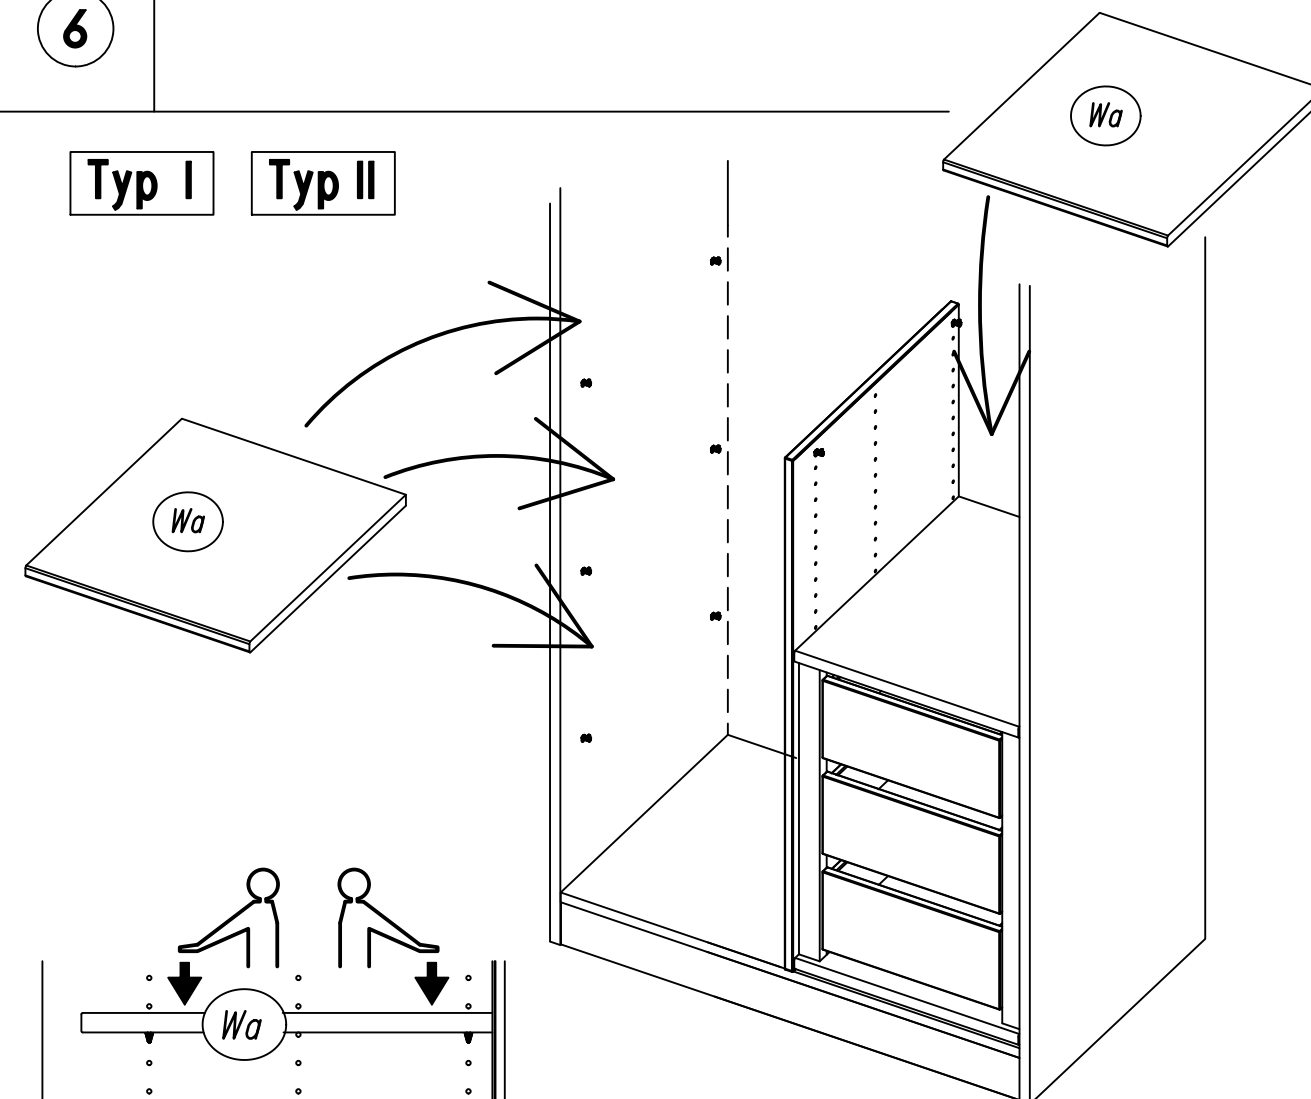

7

Typ I

Typ II


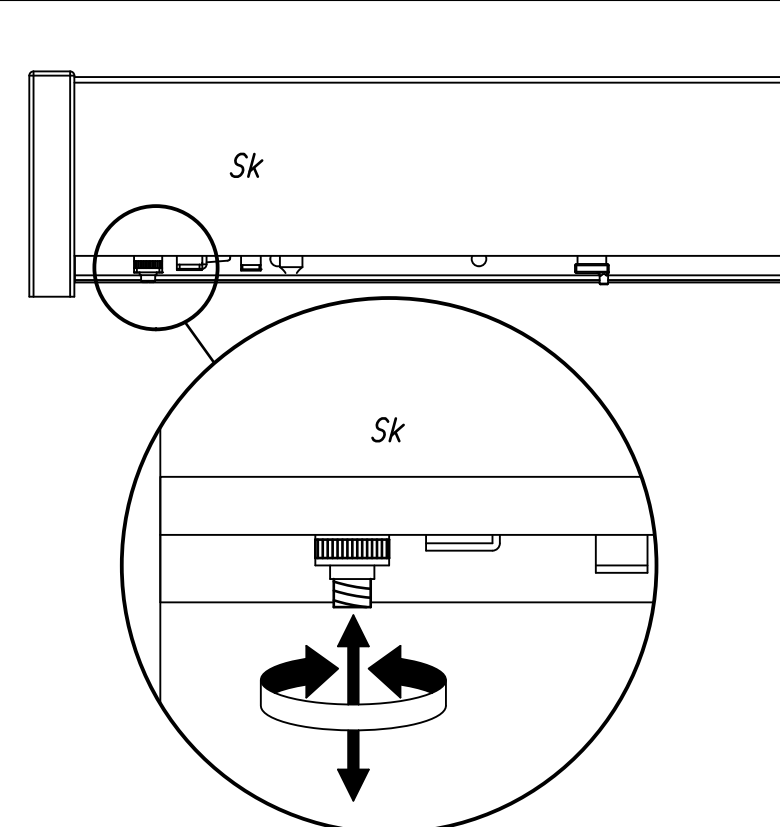
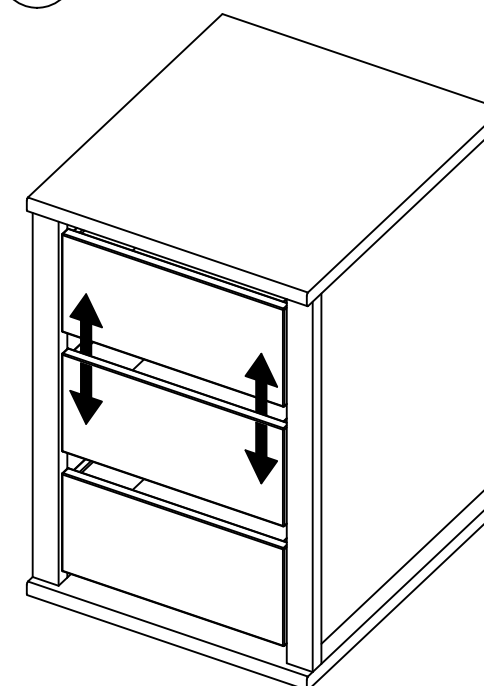


M0861

1.









MD106_03

rauch

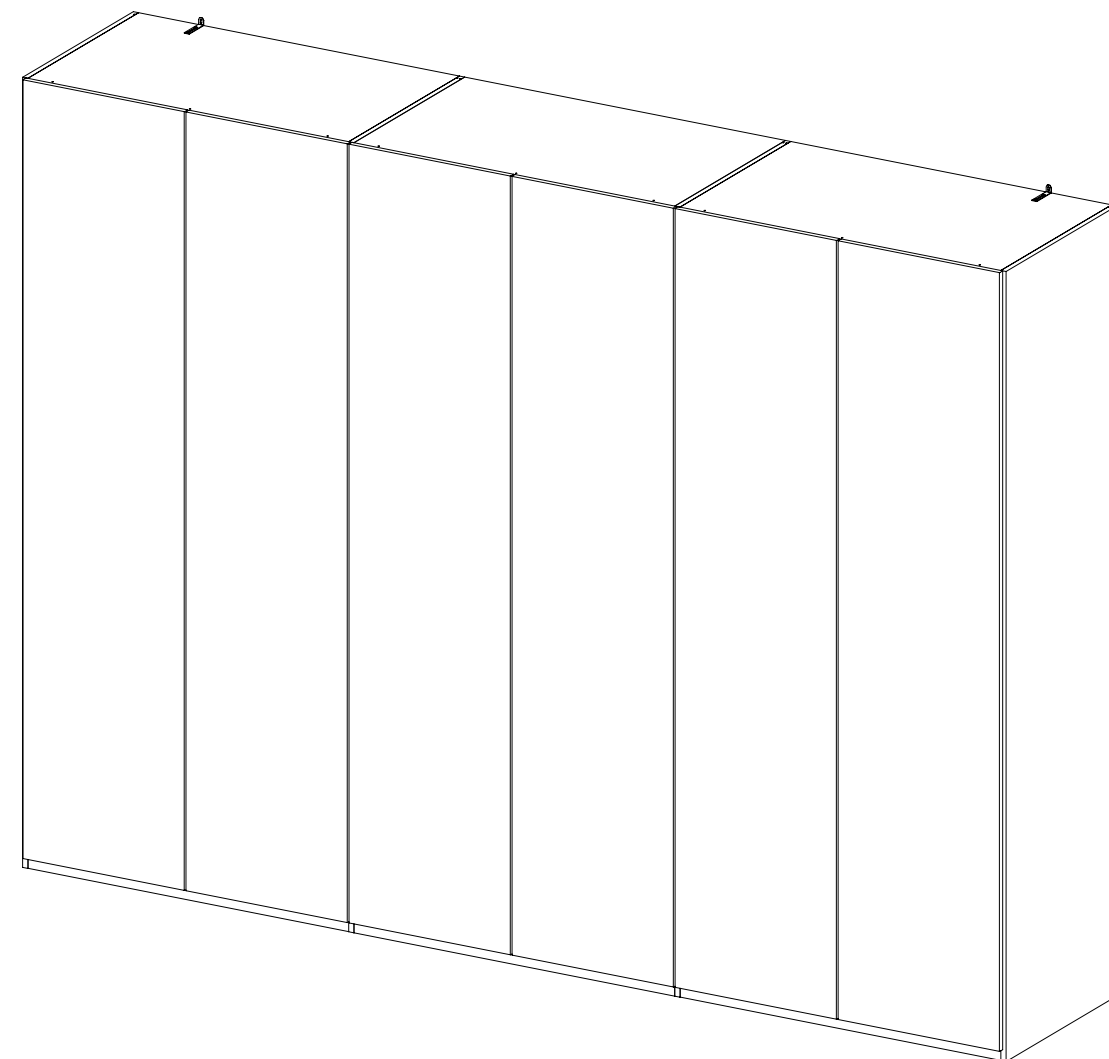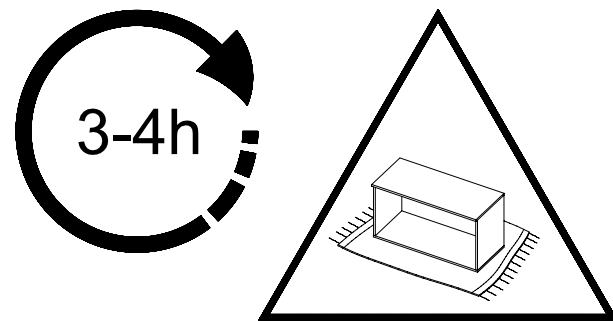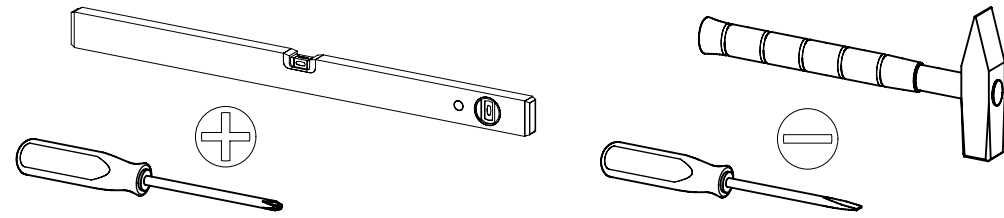







MD106

2.

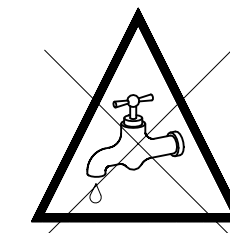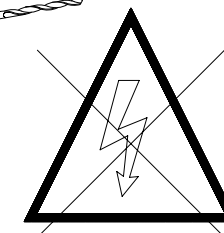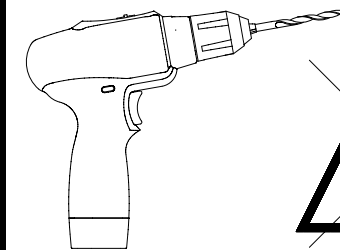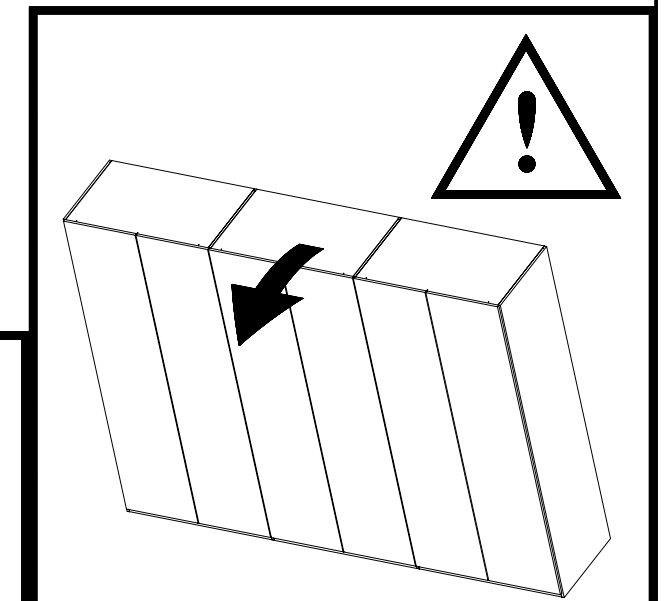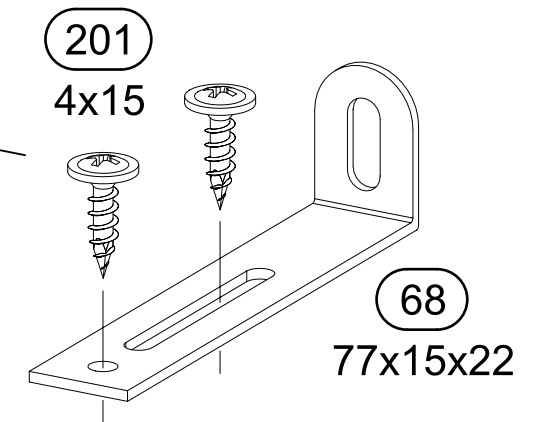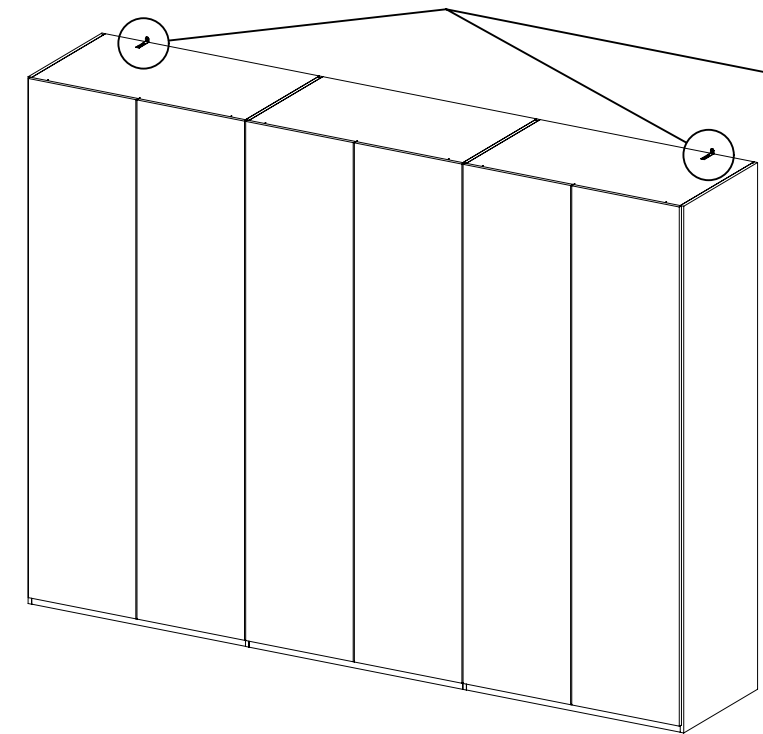


?

ØXmm

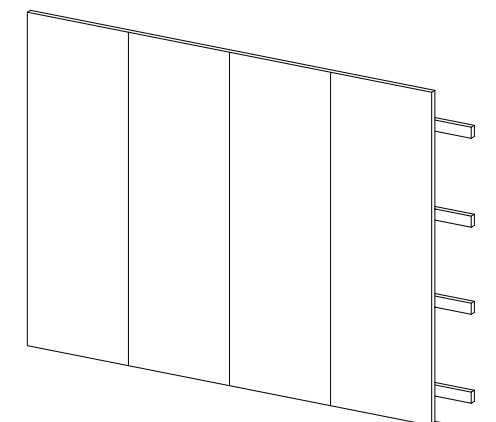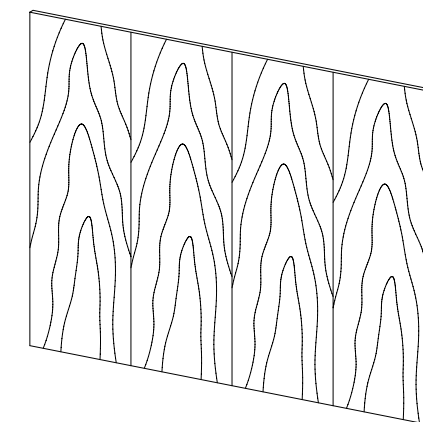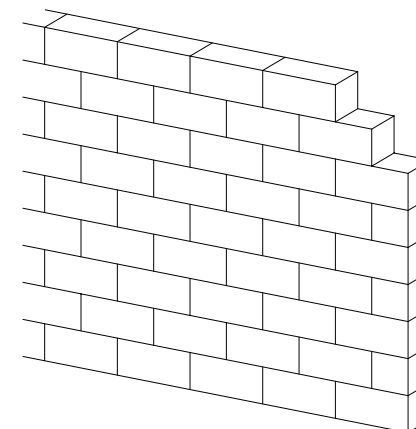














MD106



3.

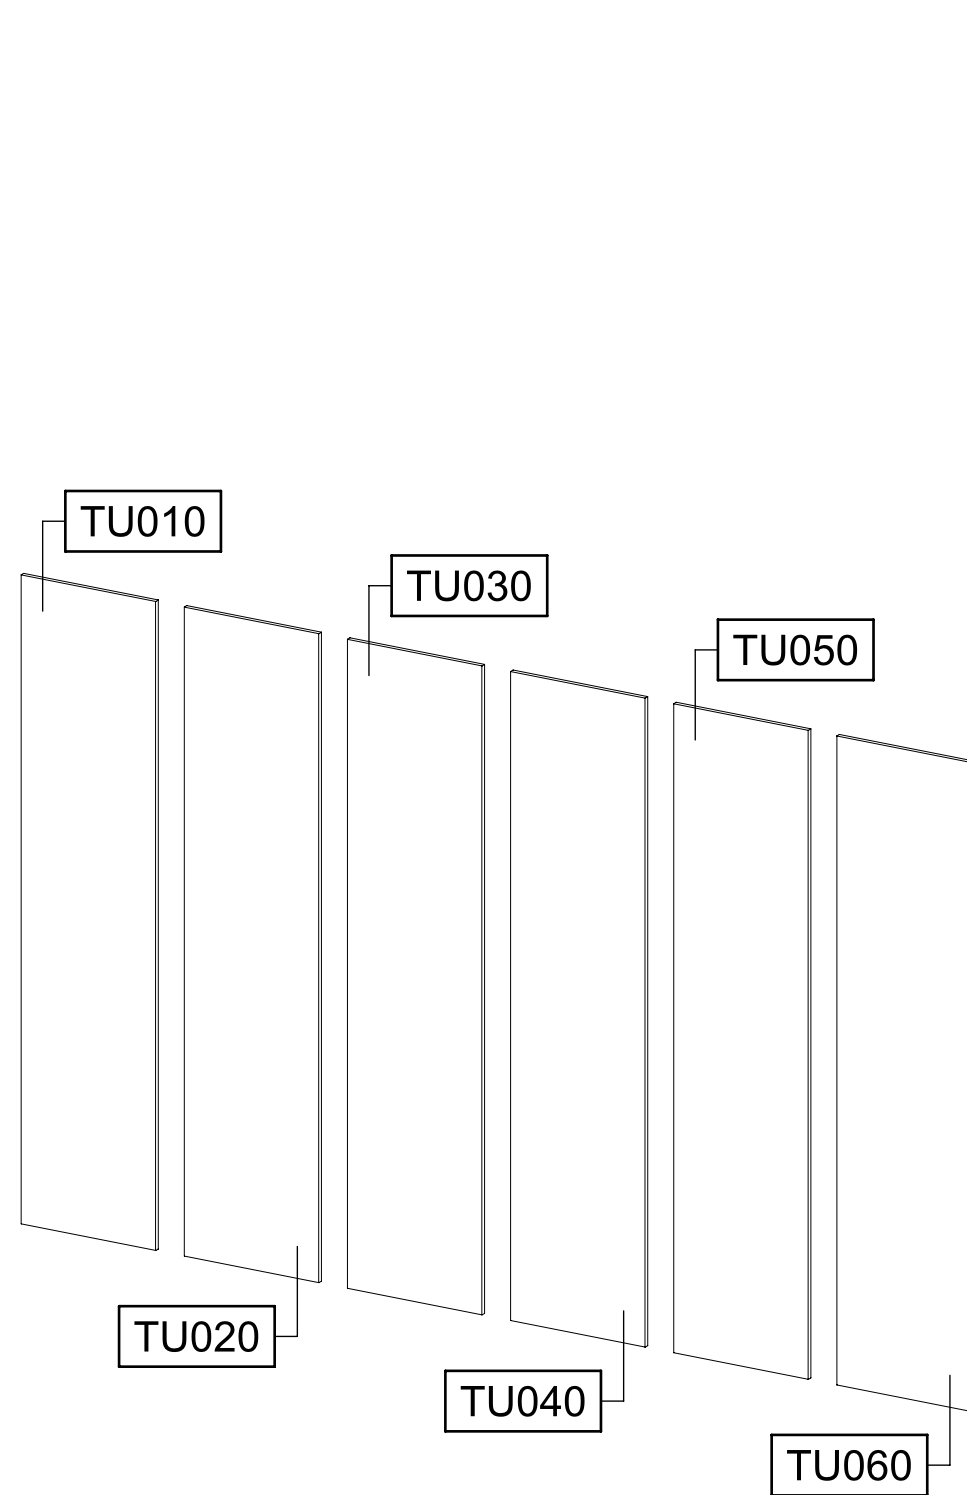


4.

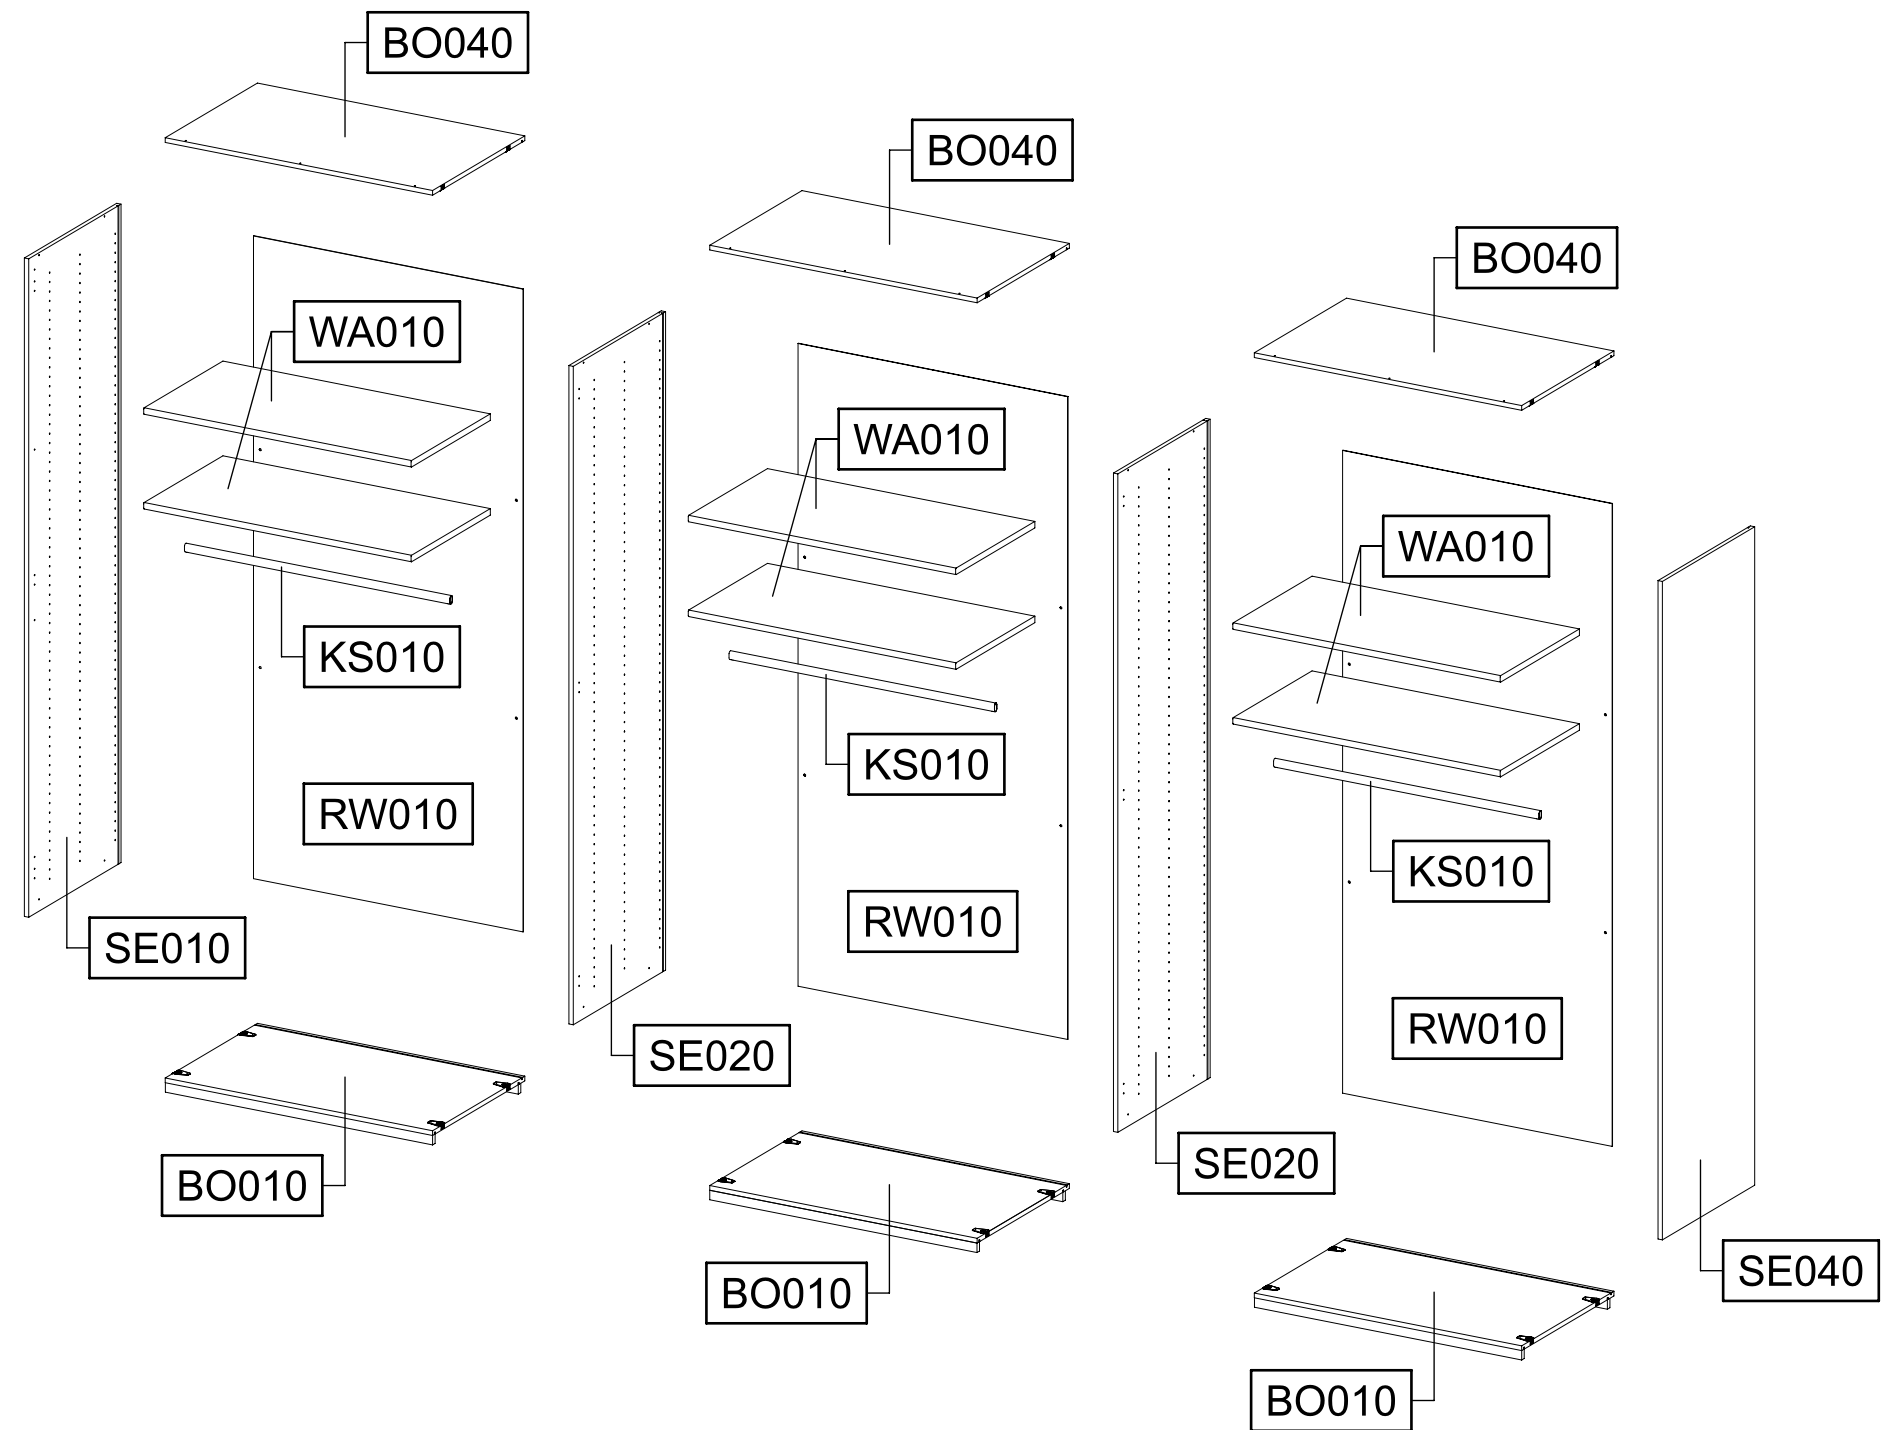

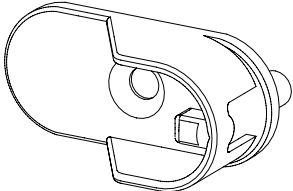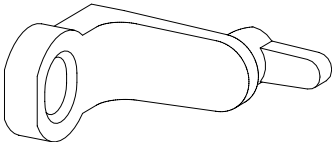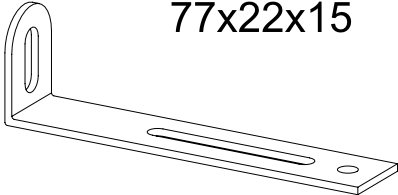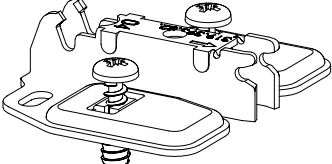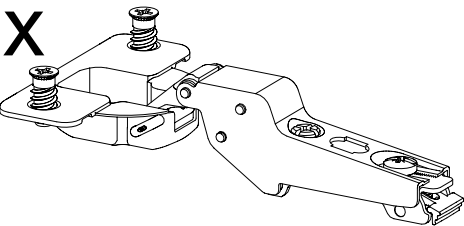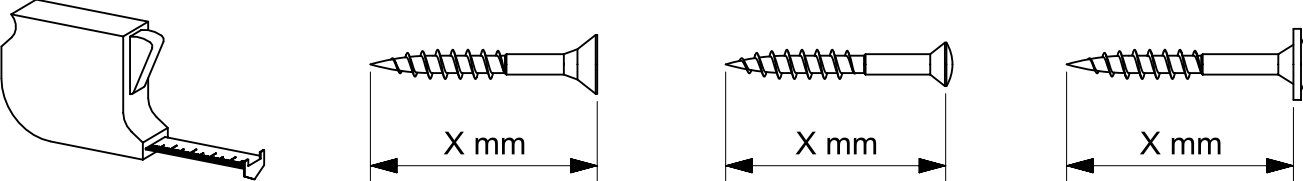
8x 55x16x6,2 12 	6x 29 
12x 47 	2x 77x22x15 68 
4x 4x15 201 	6x 3,5x15 205 
36-48x 4x13 621 	12x 6,5x12 779 
8x 1085 	8x 1086 
24x 1089 	18-24x 1291 
18-24x 1292 	
	


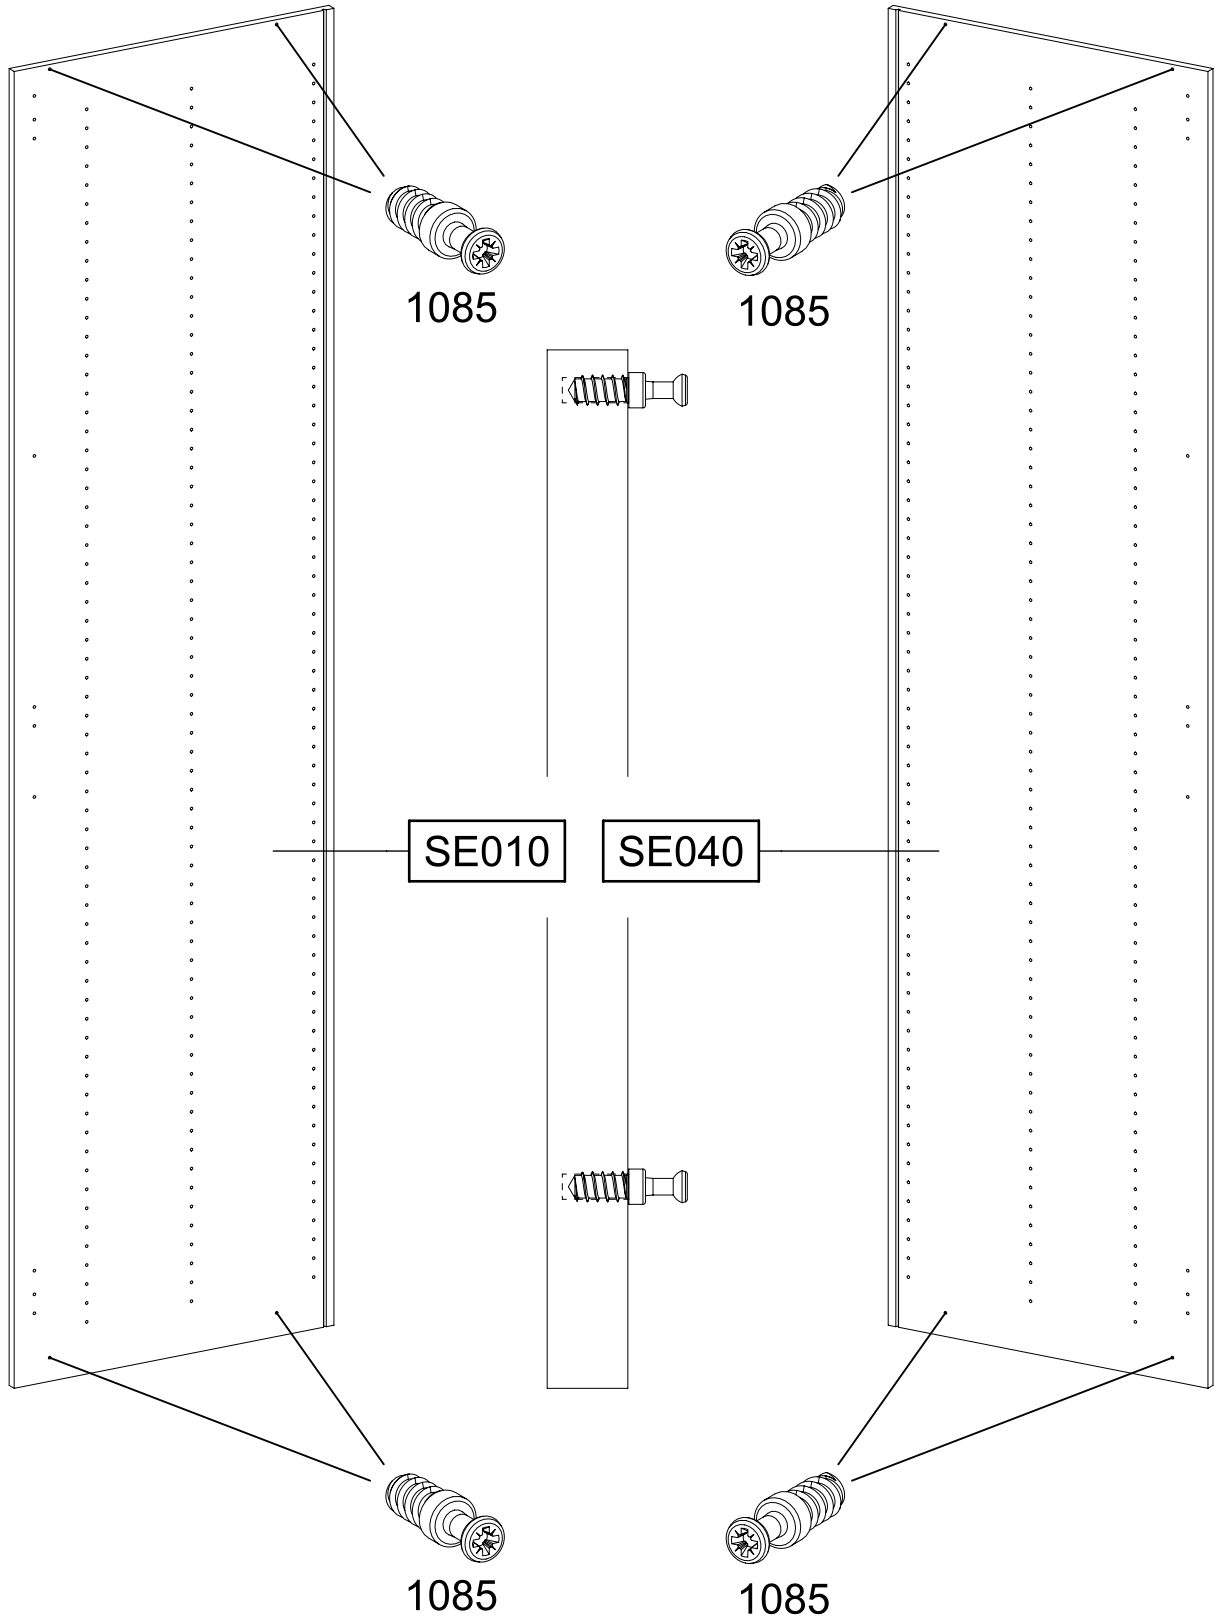
1	8x 1085 	
		



7.


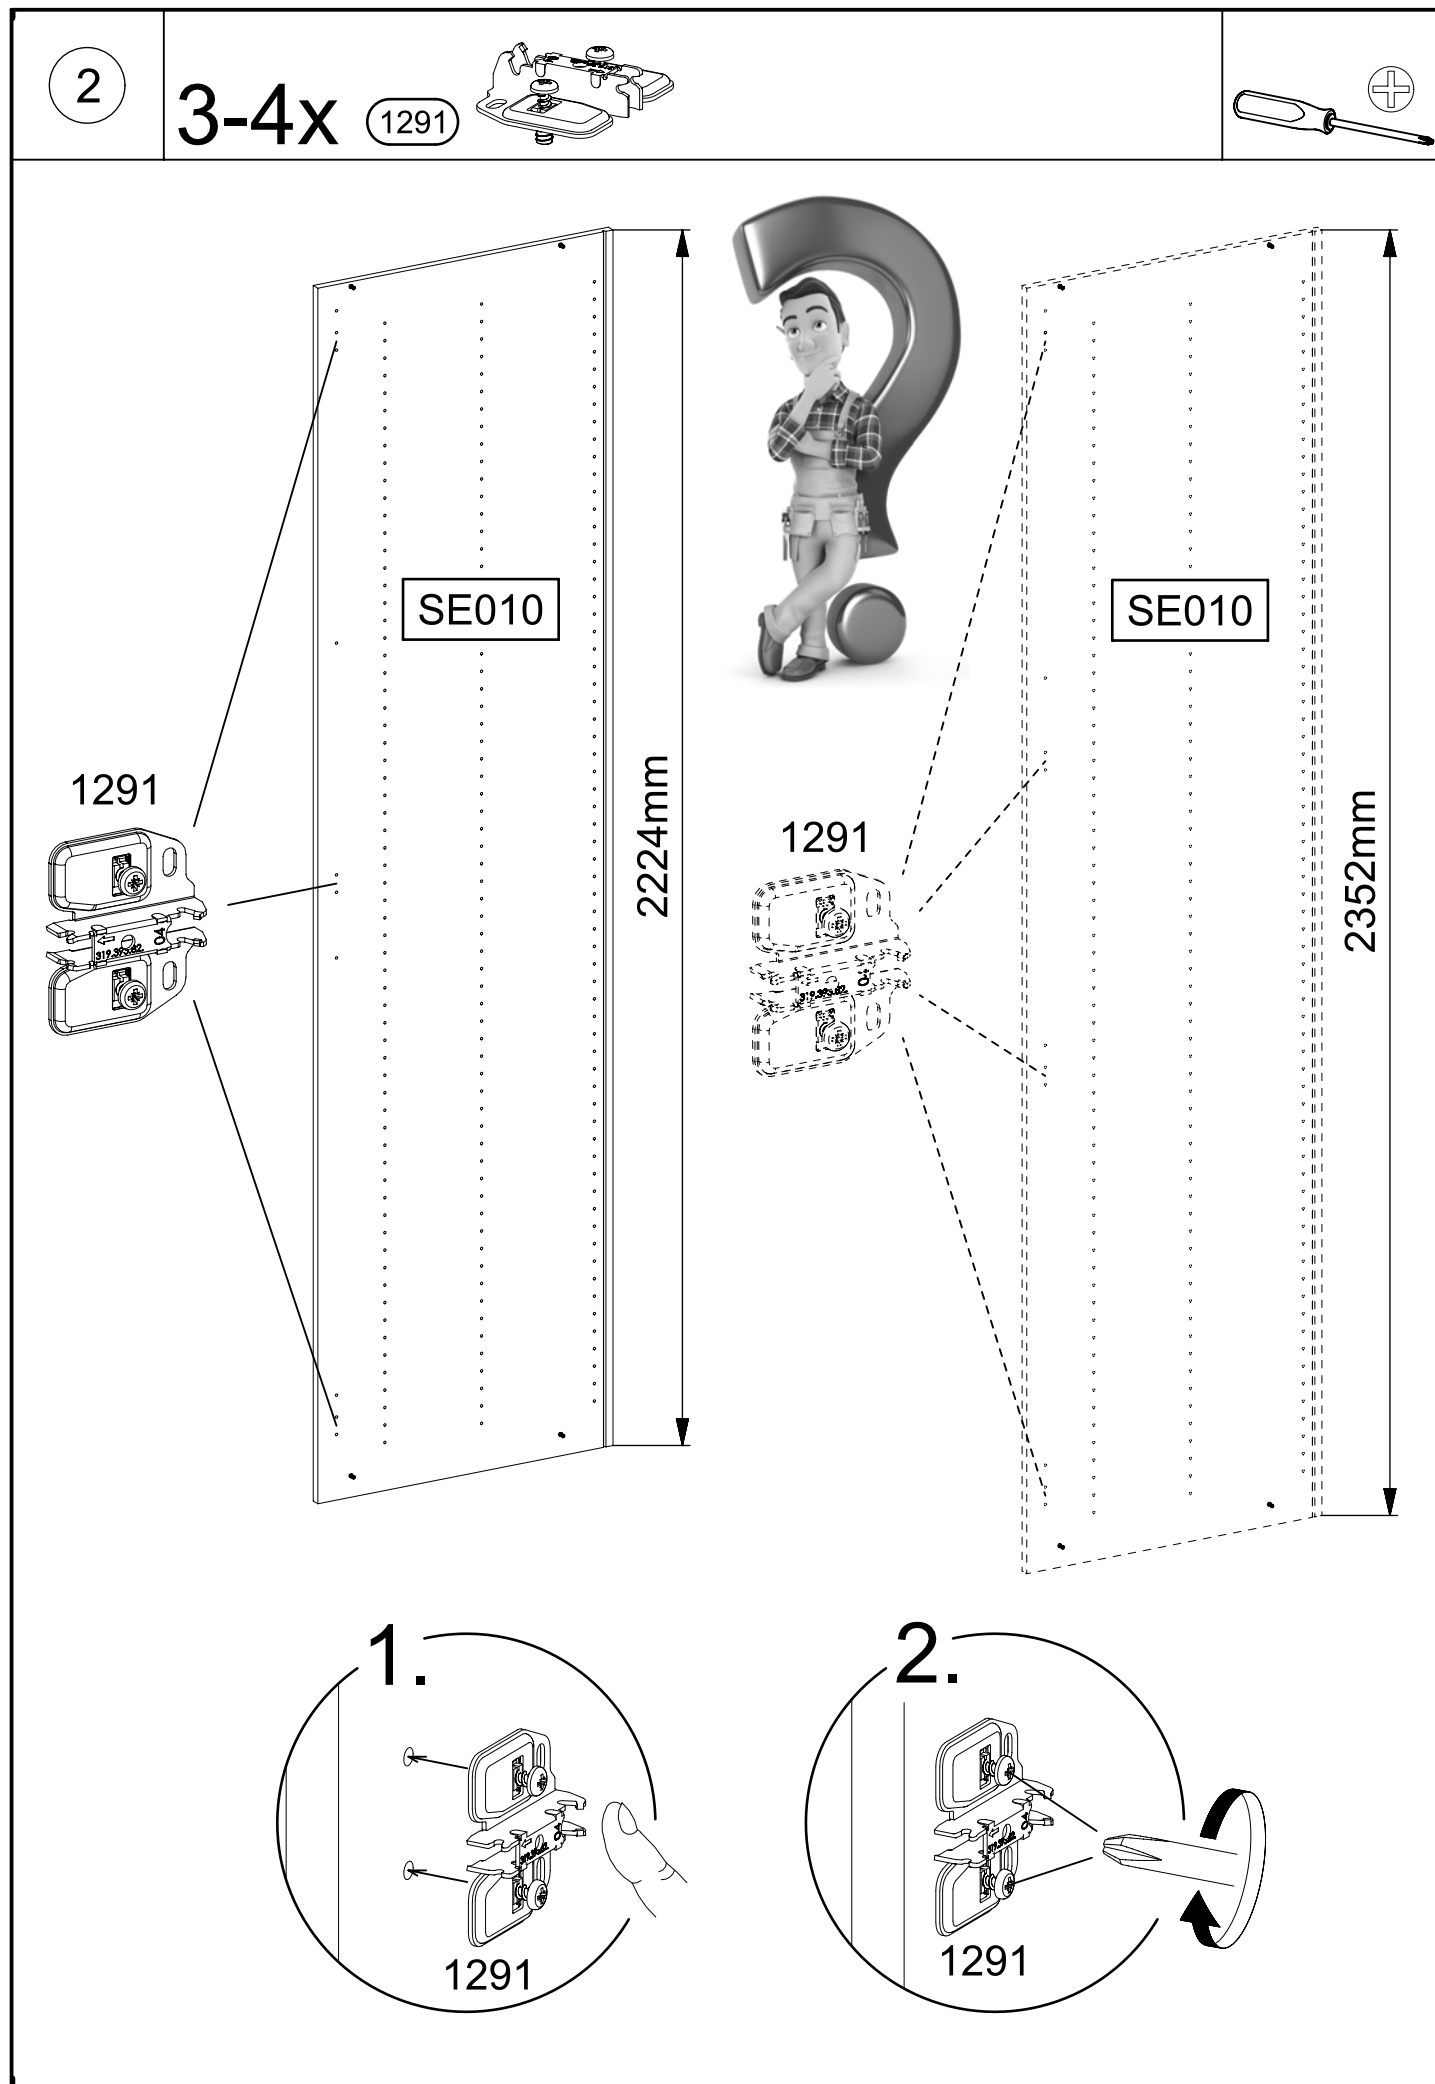




8.


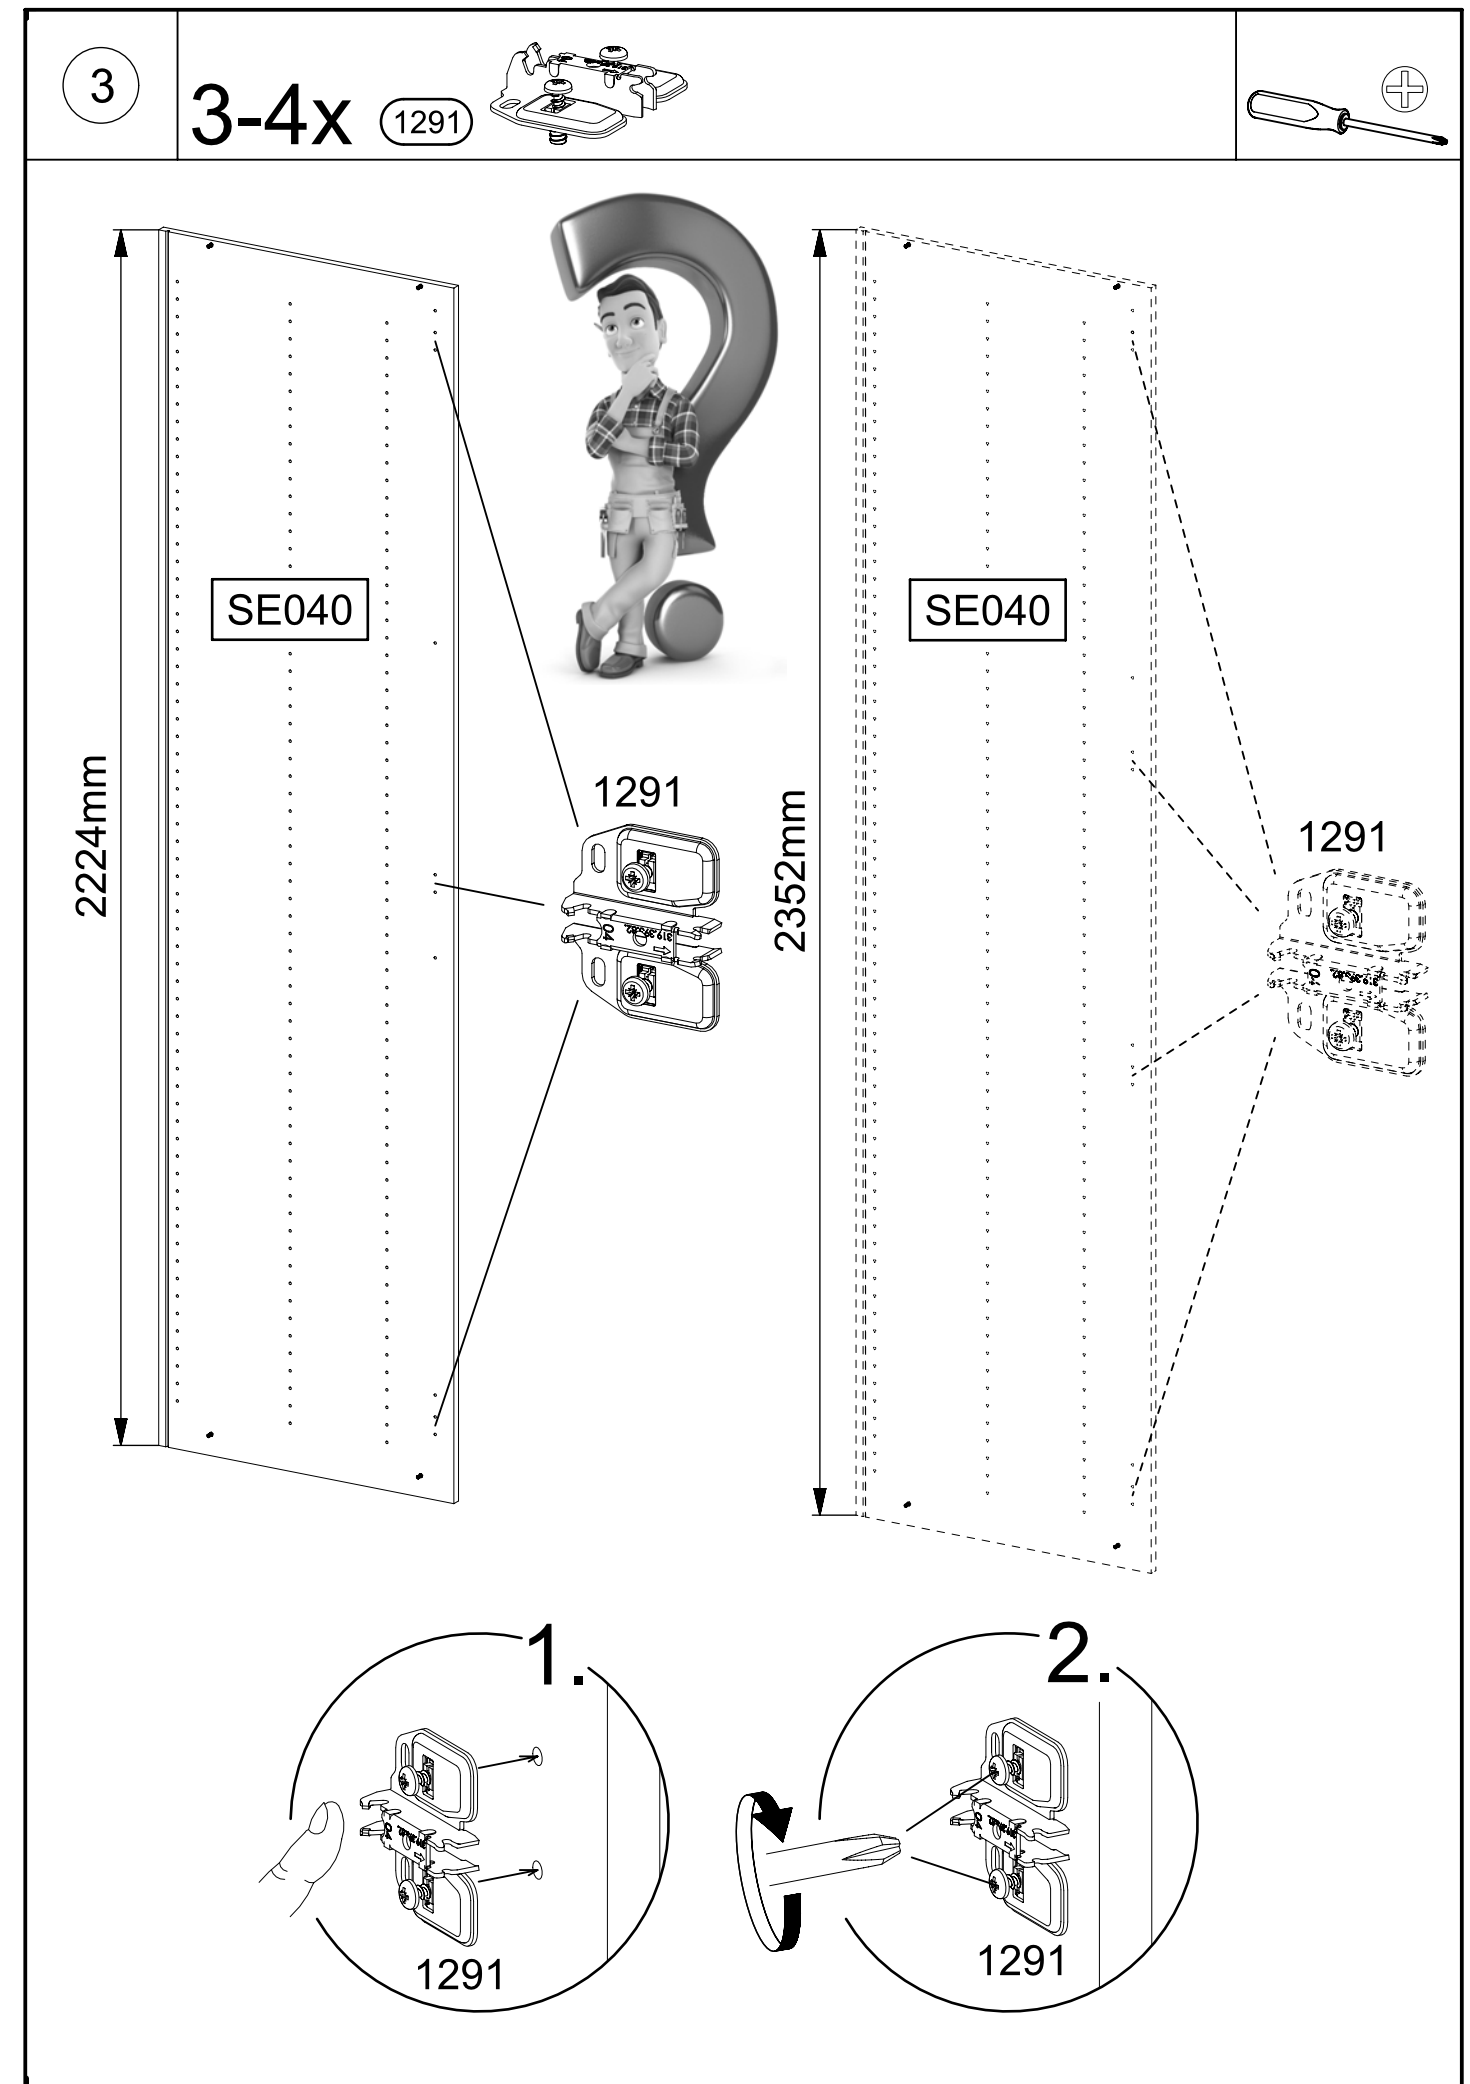


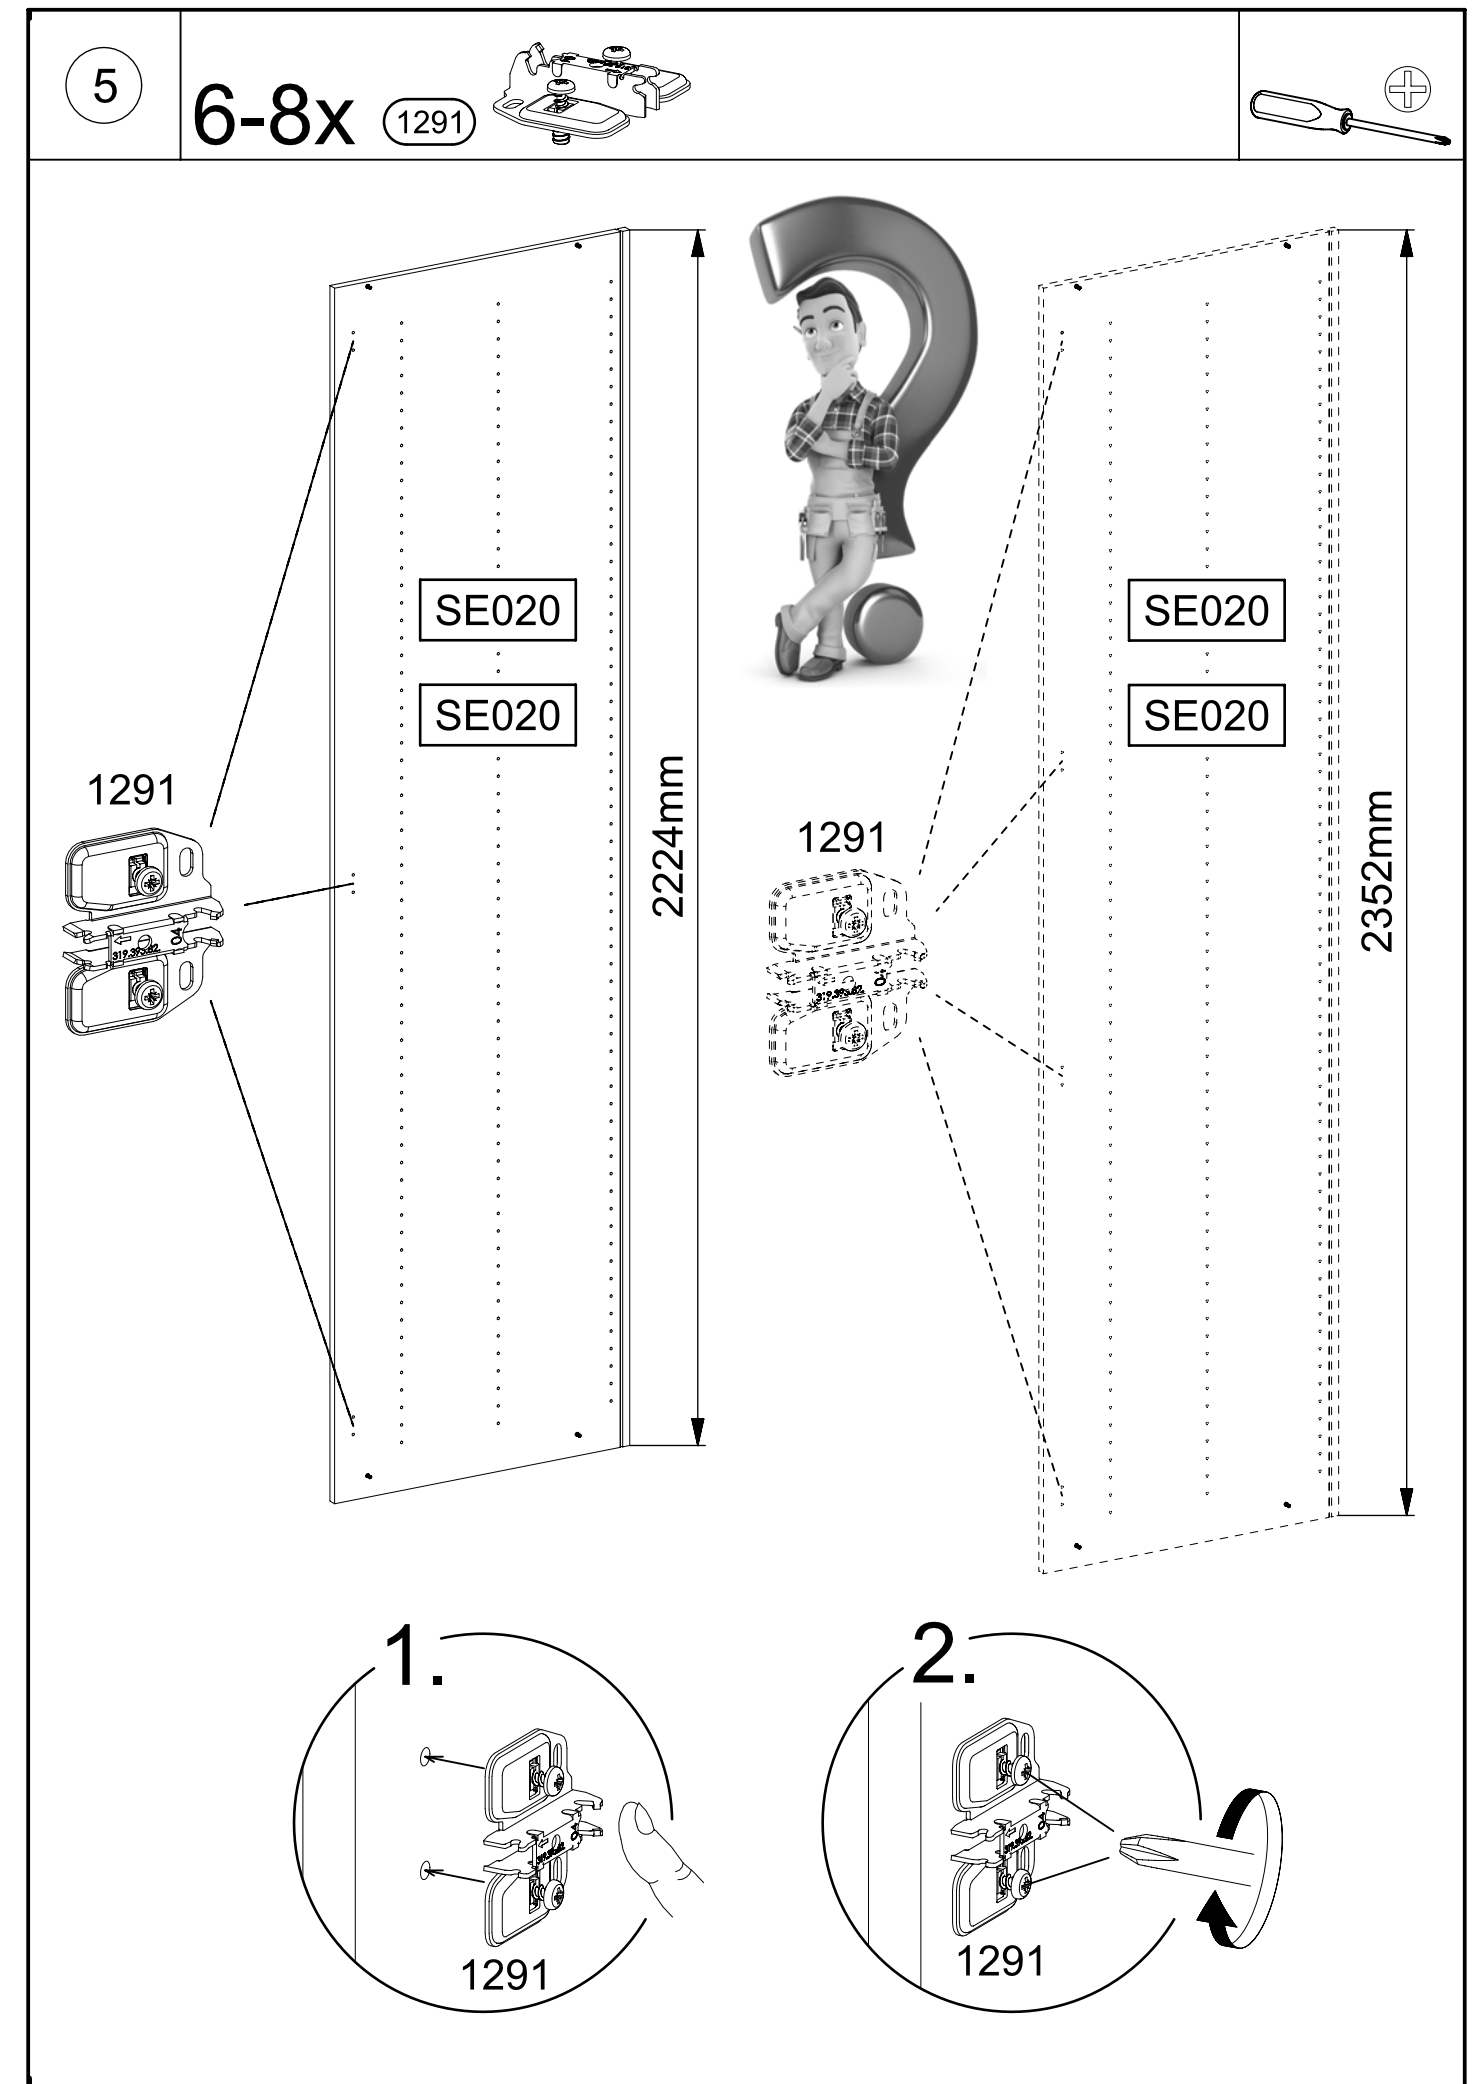
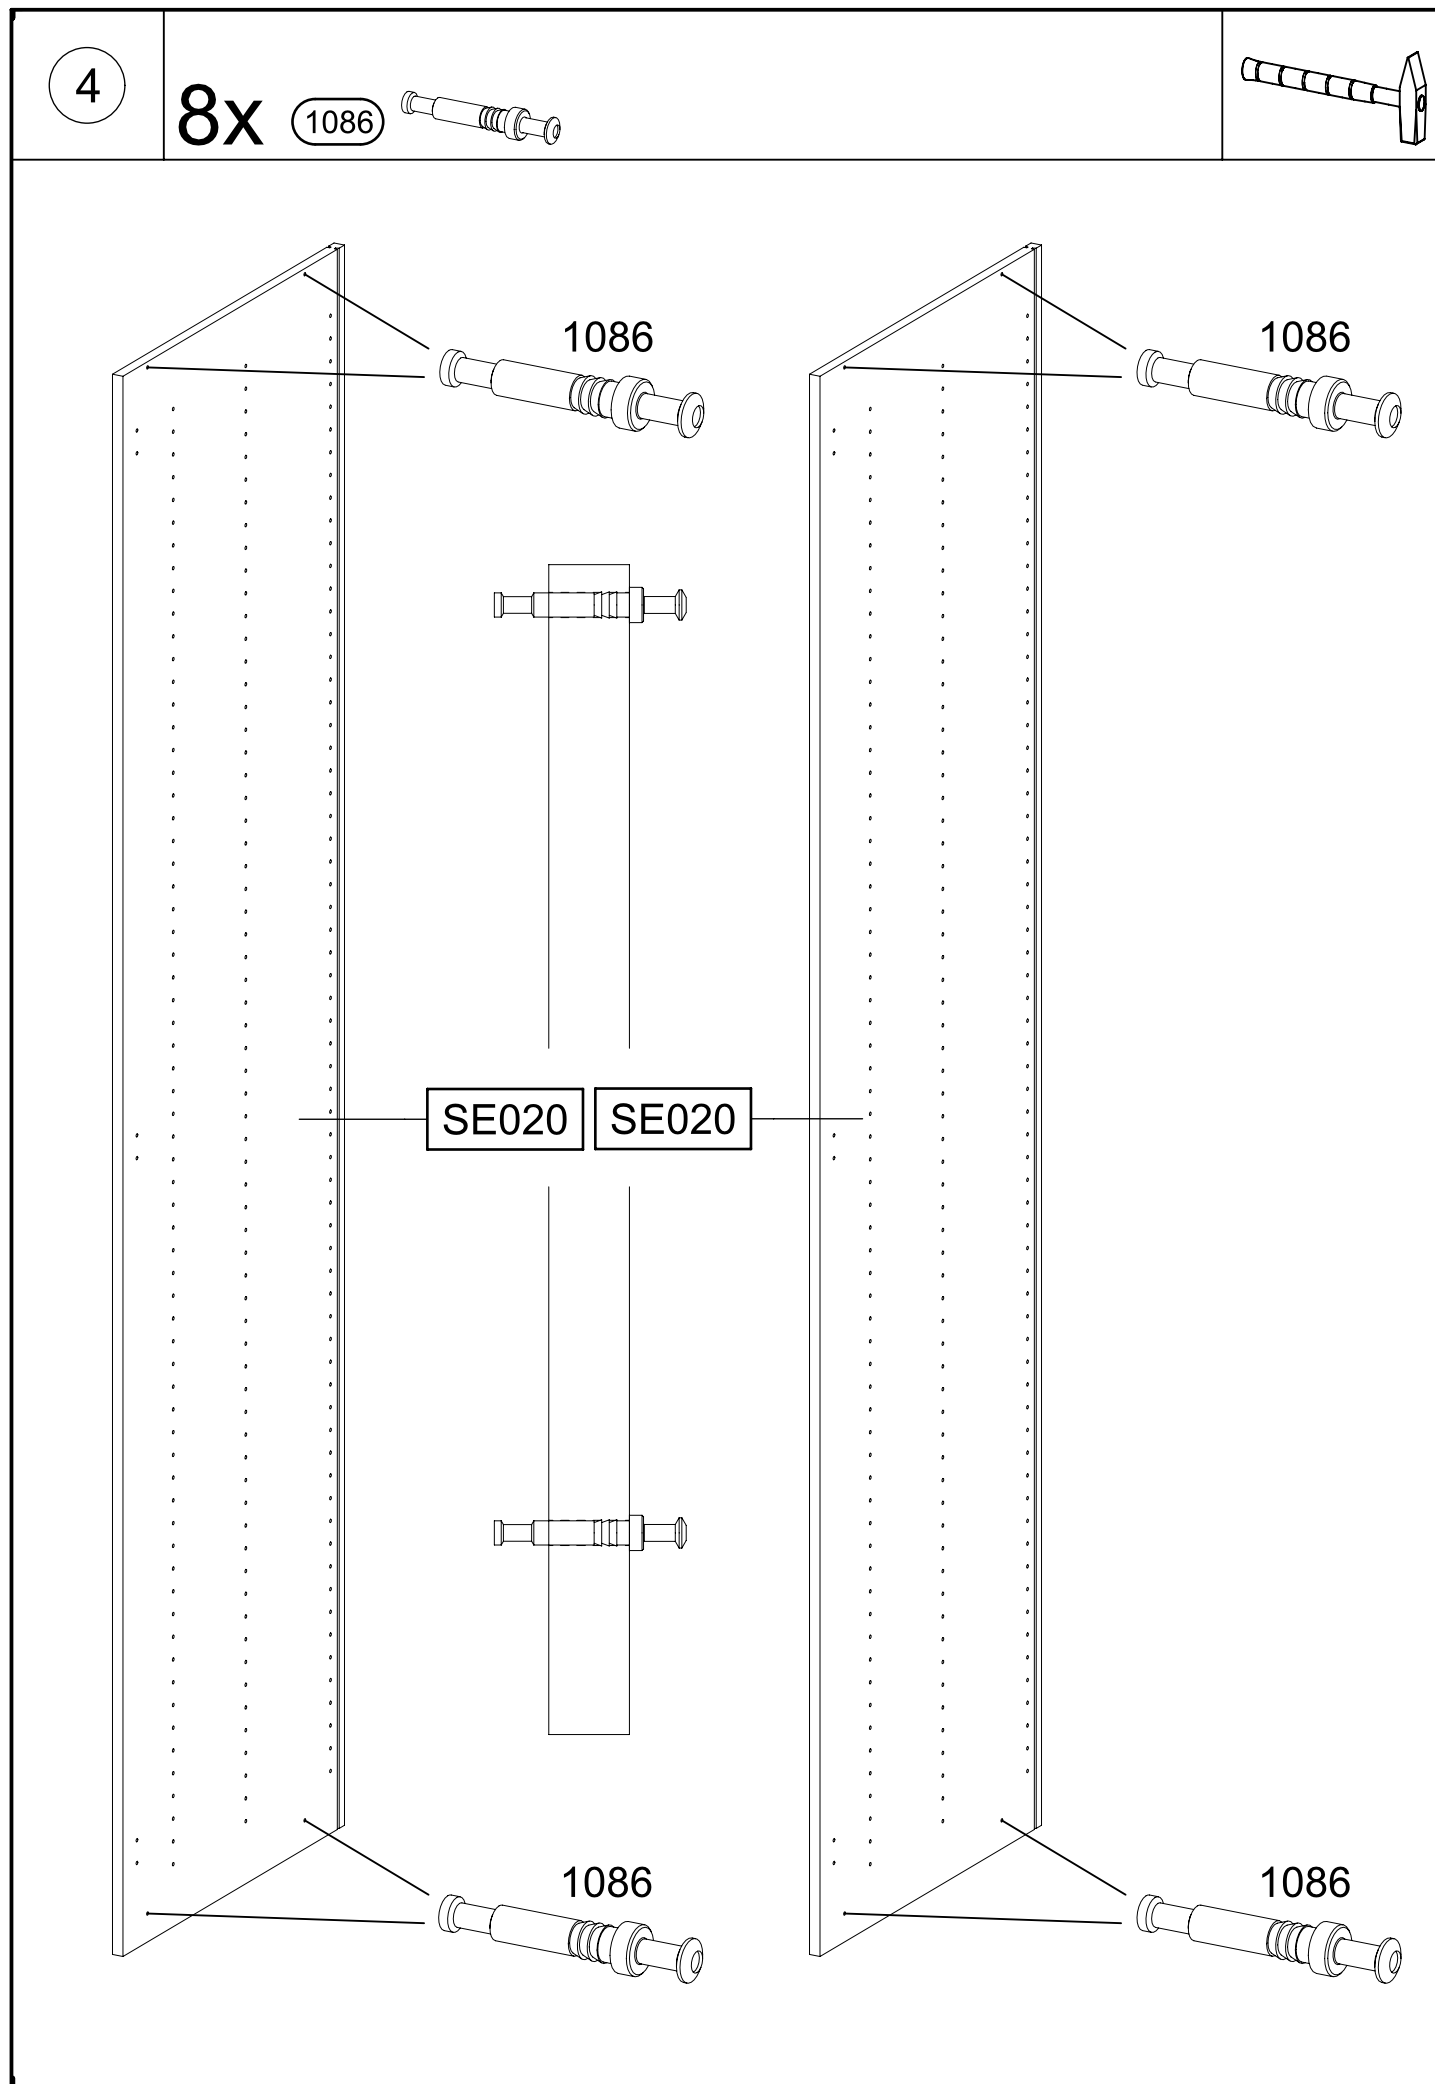


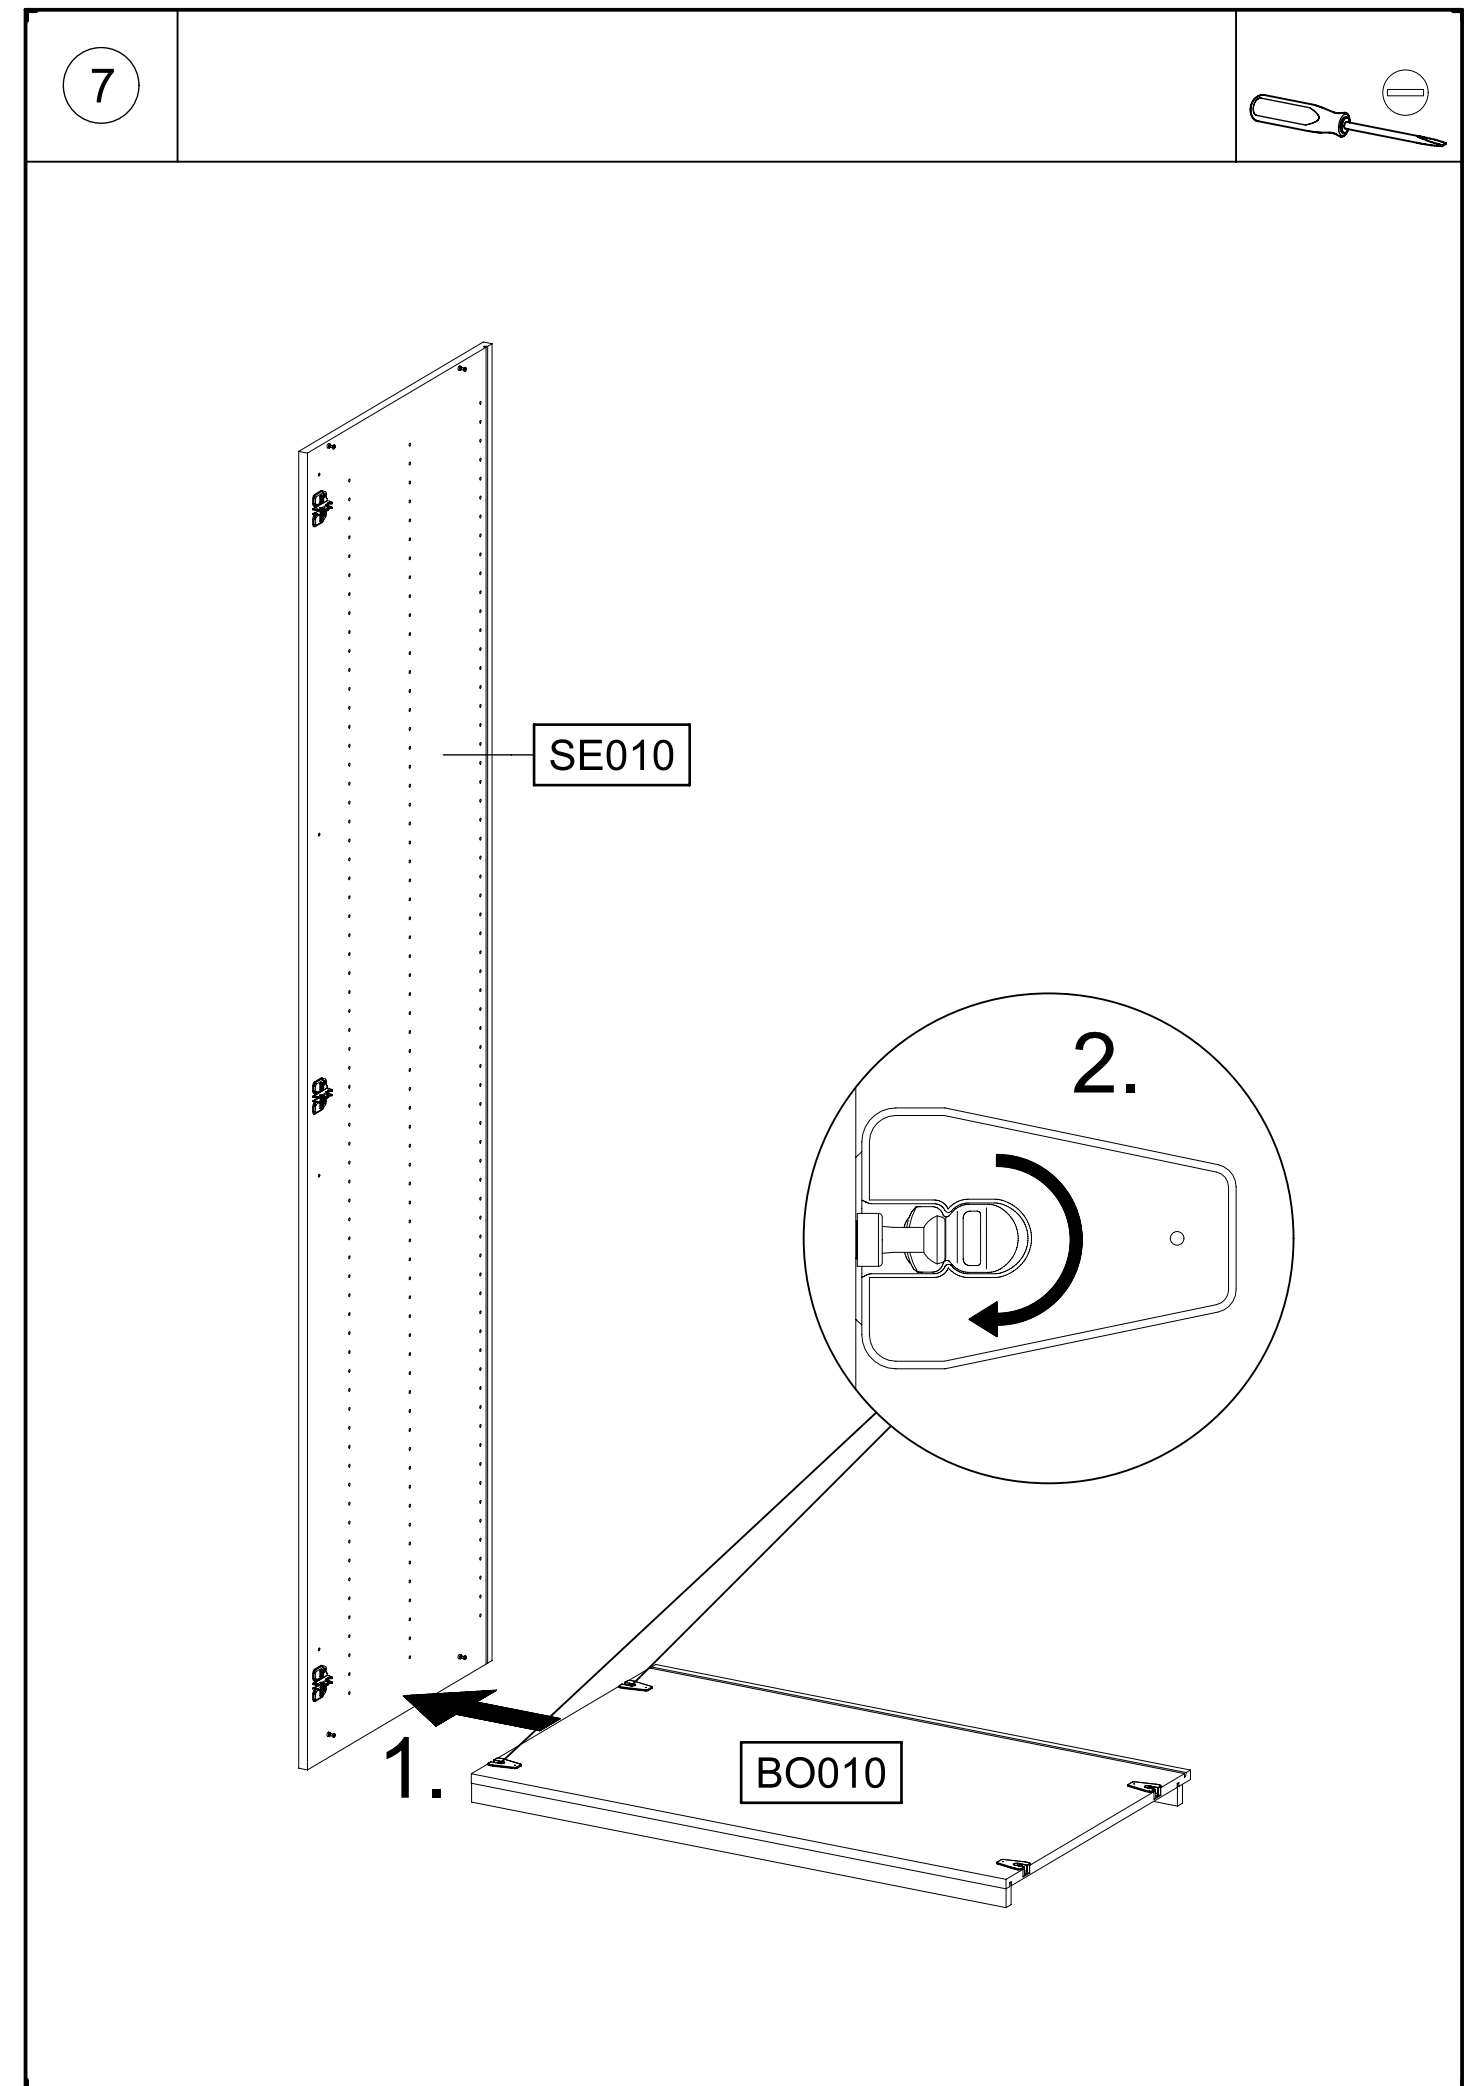
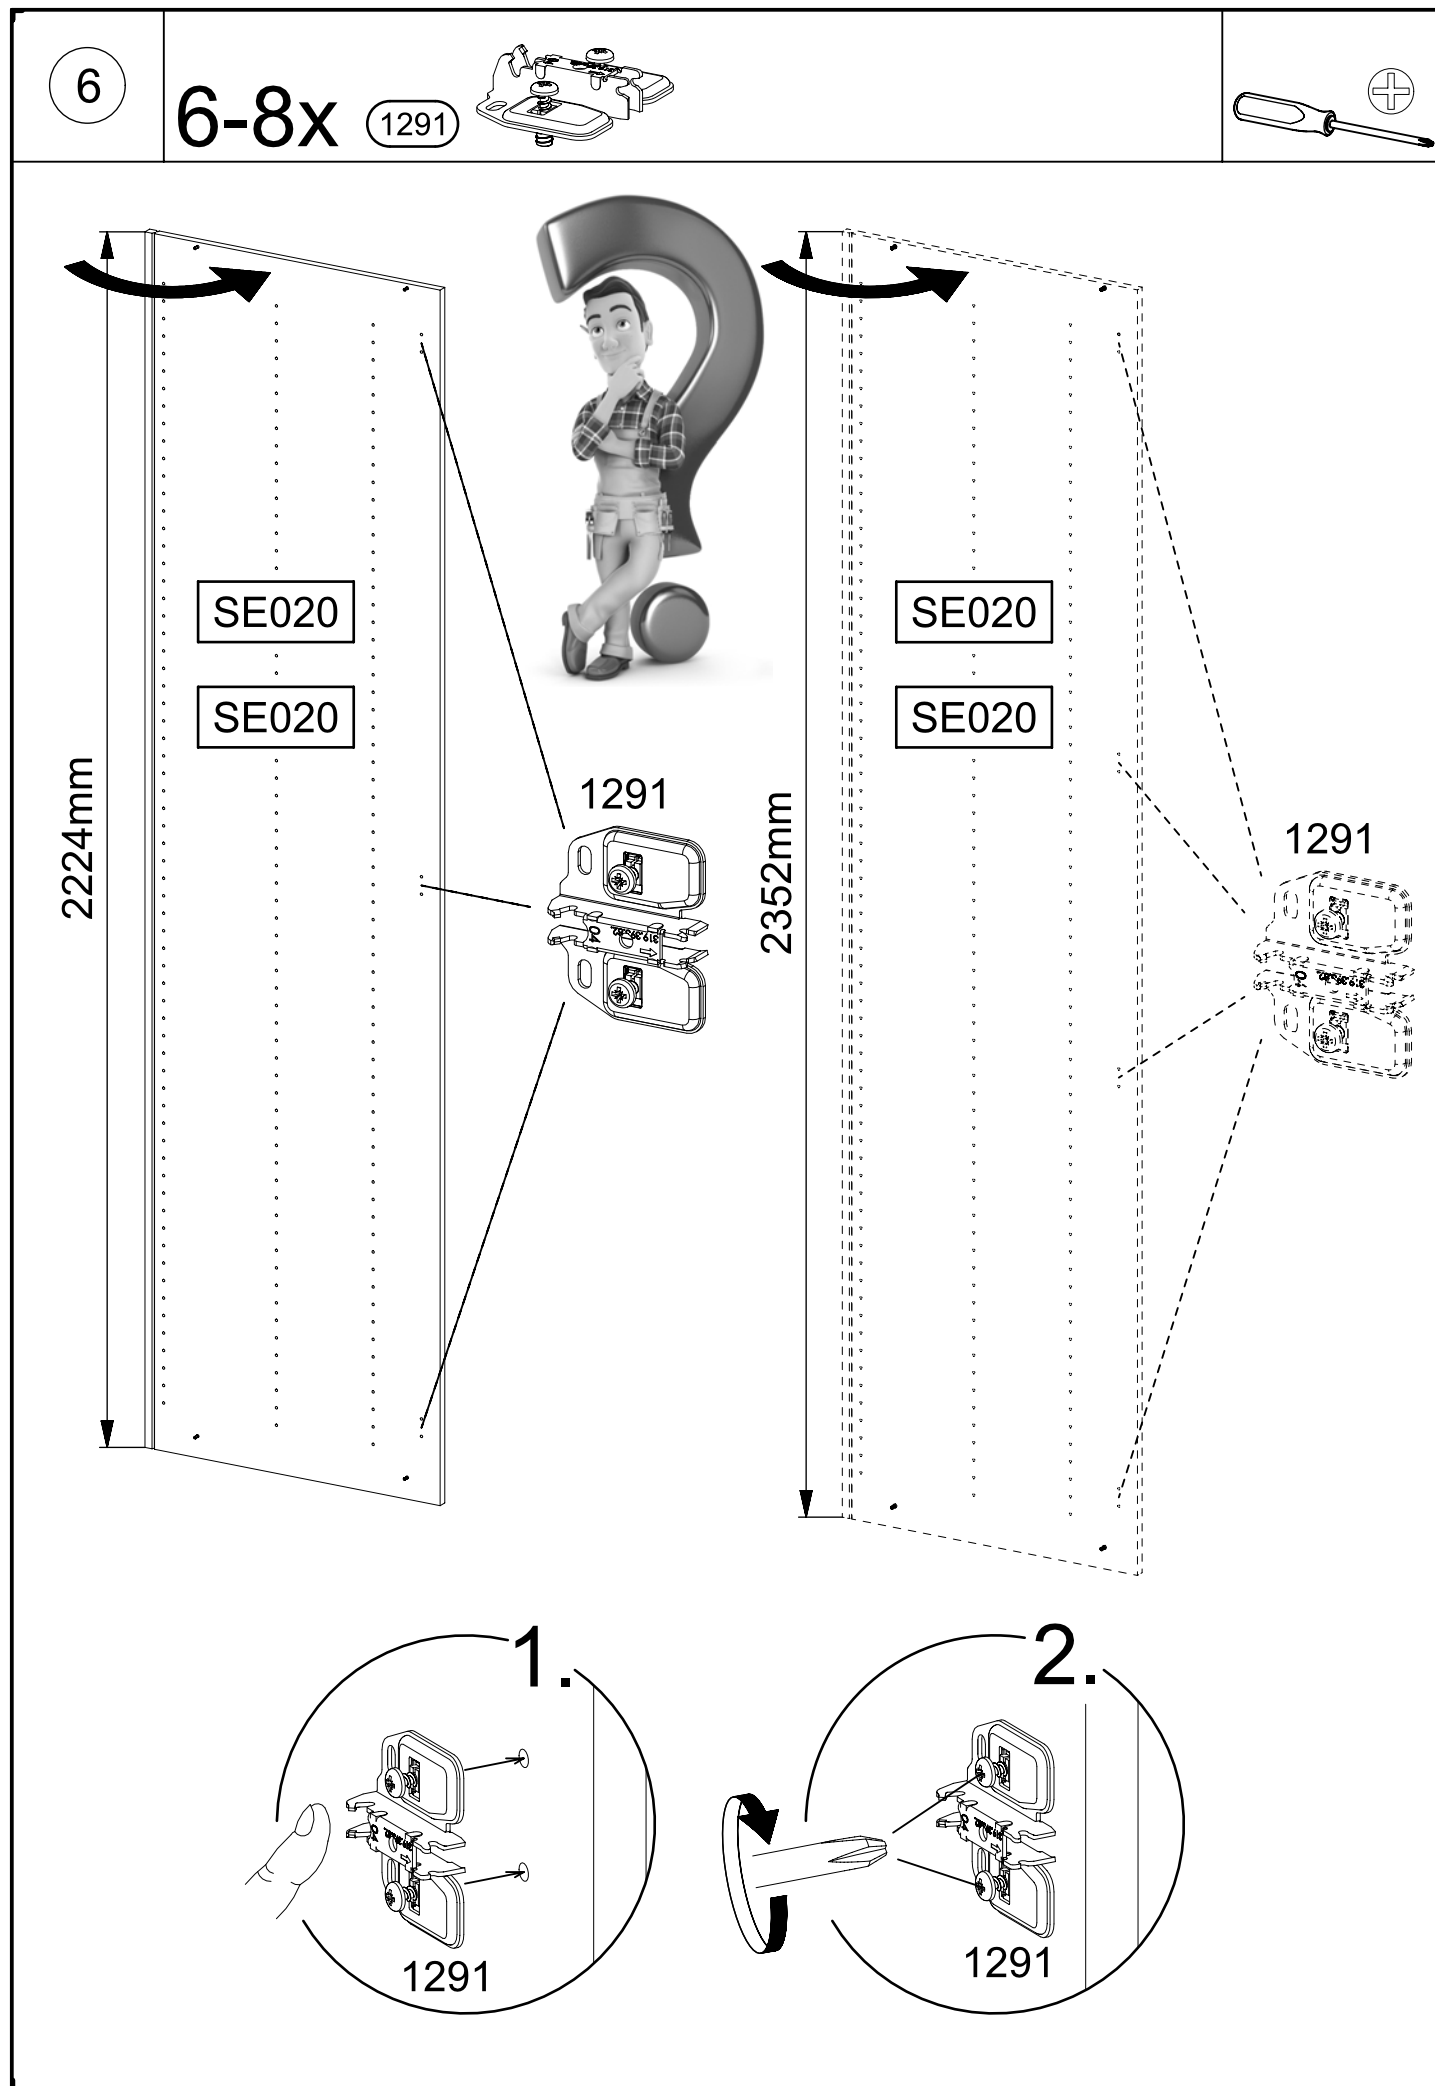


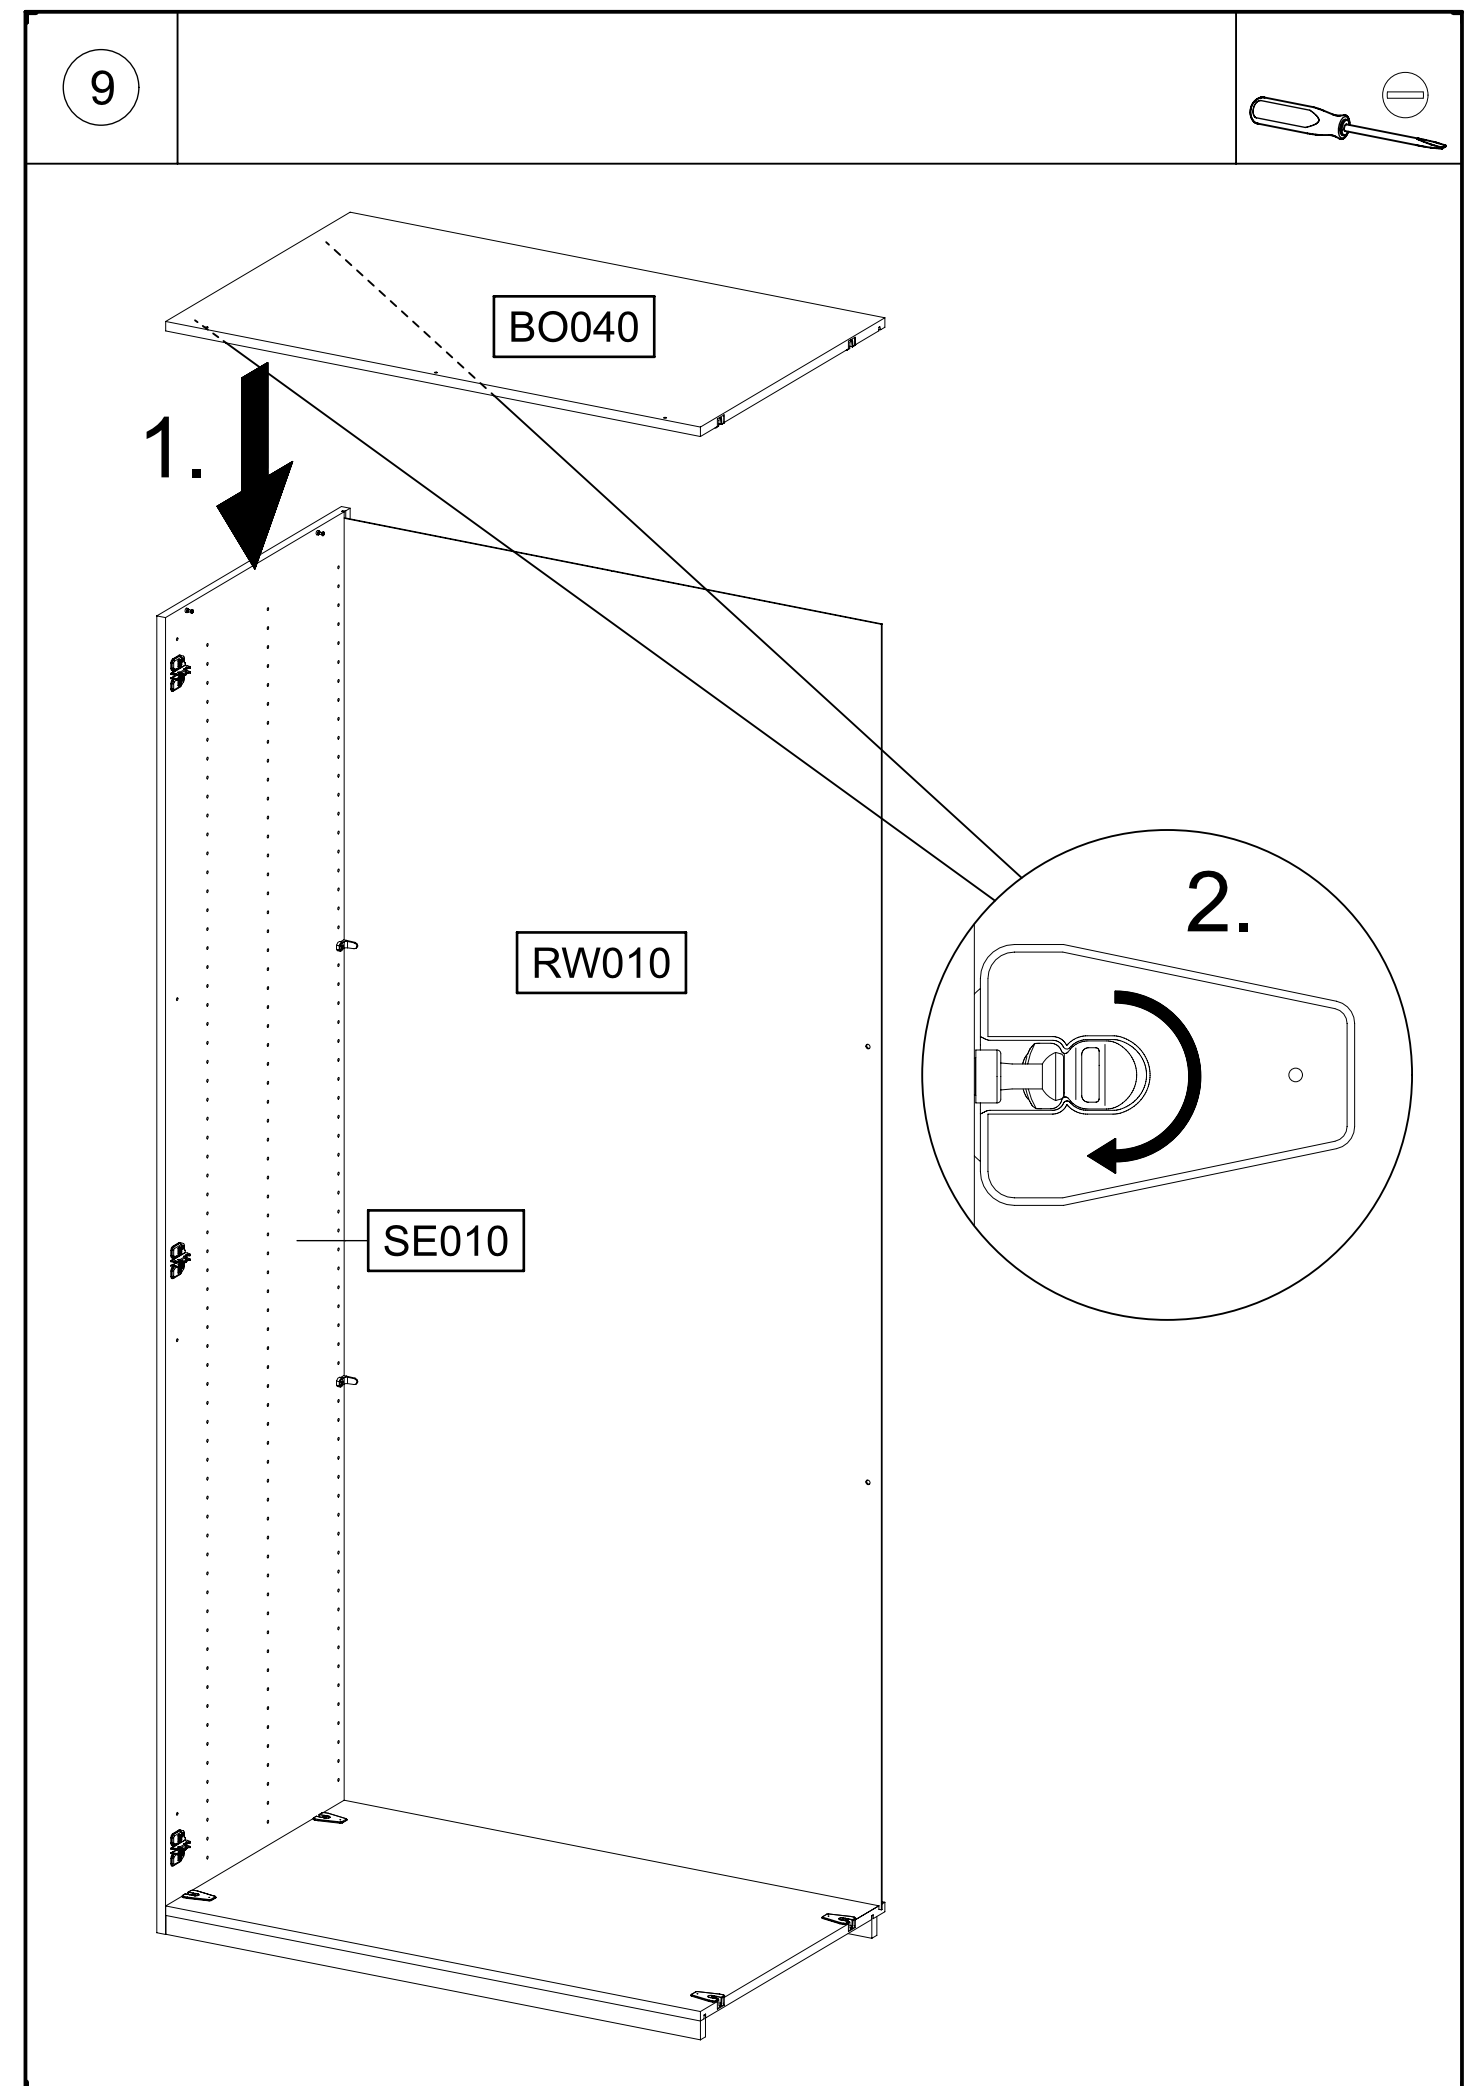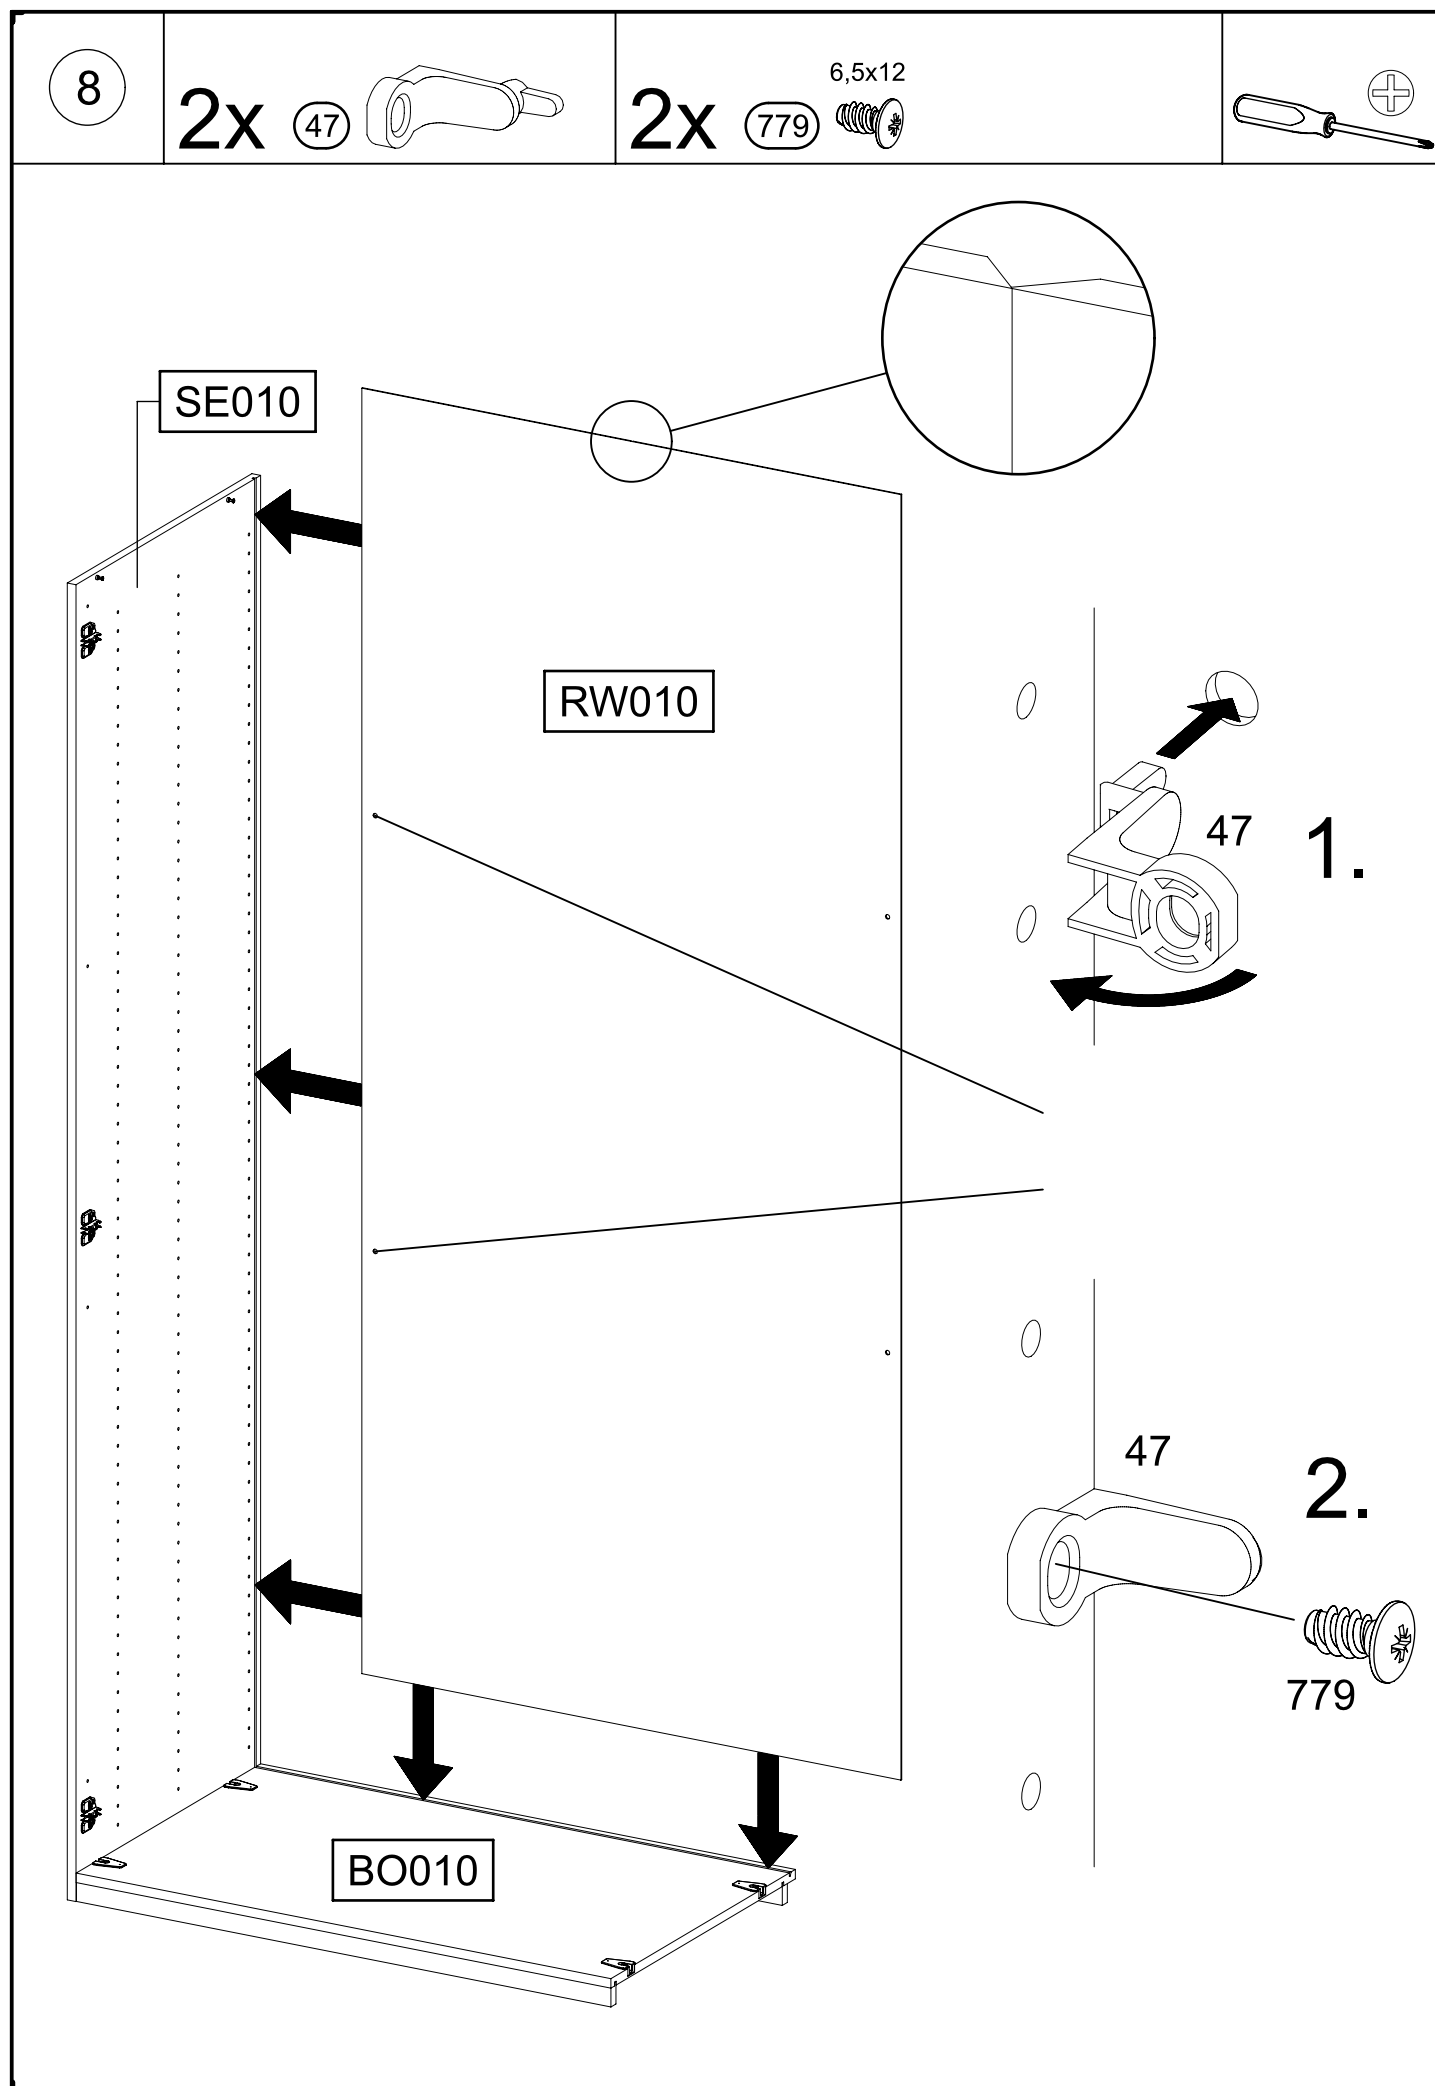

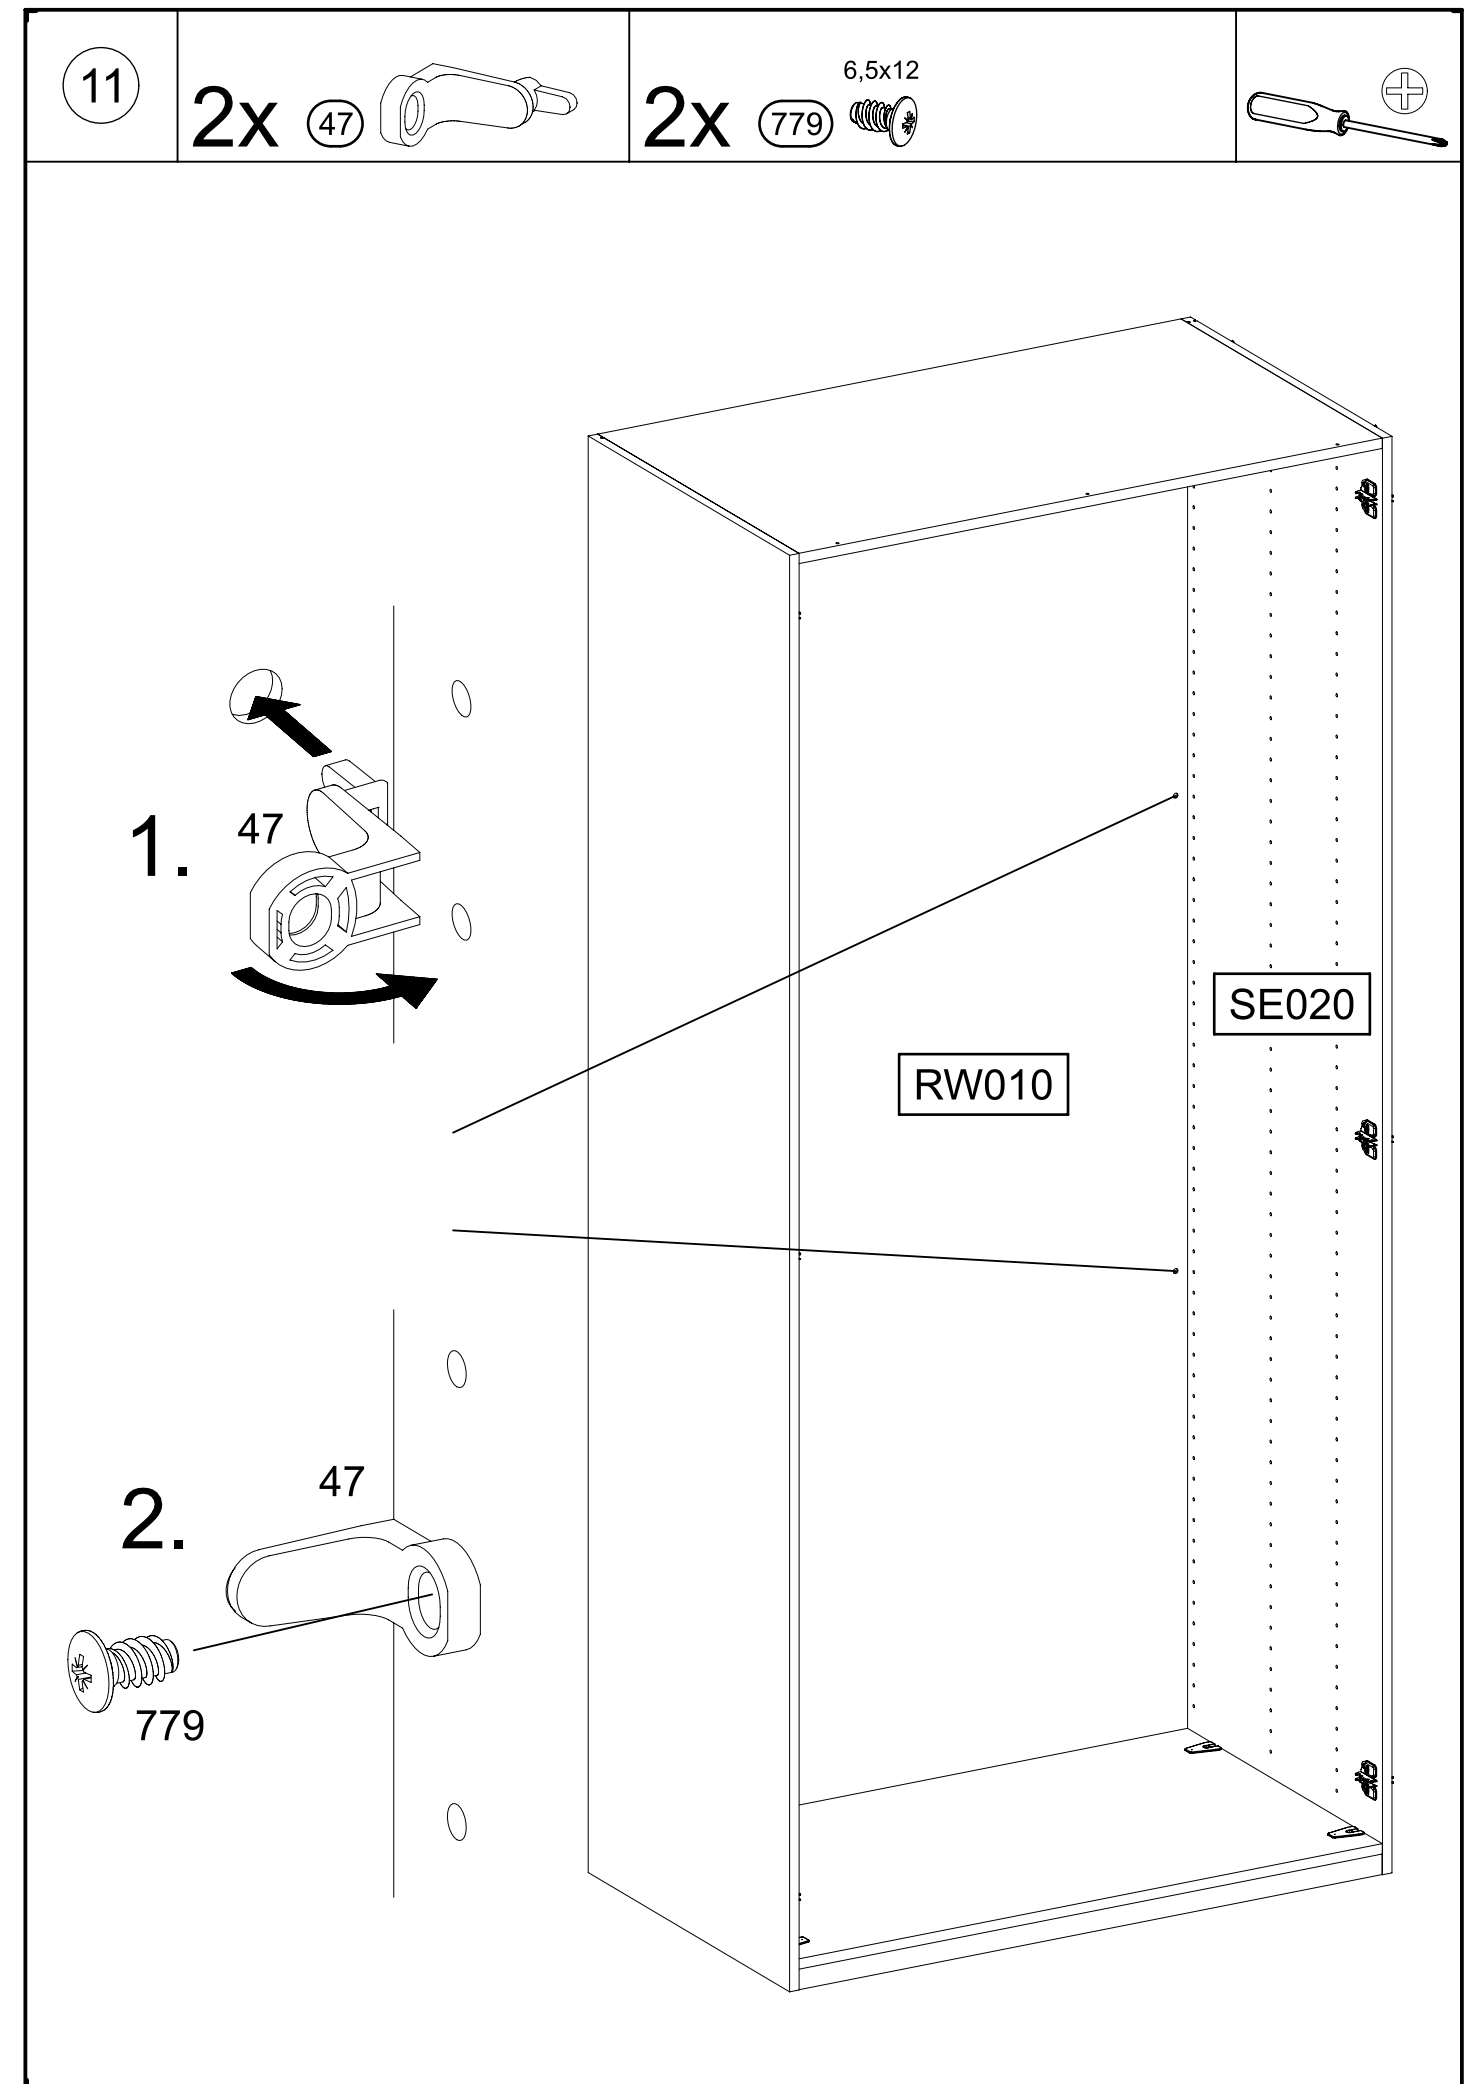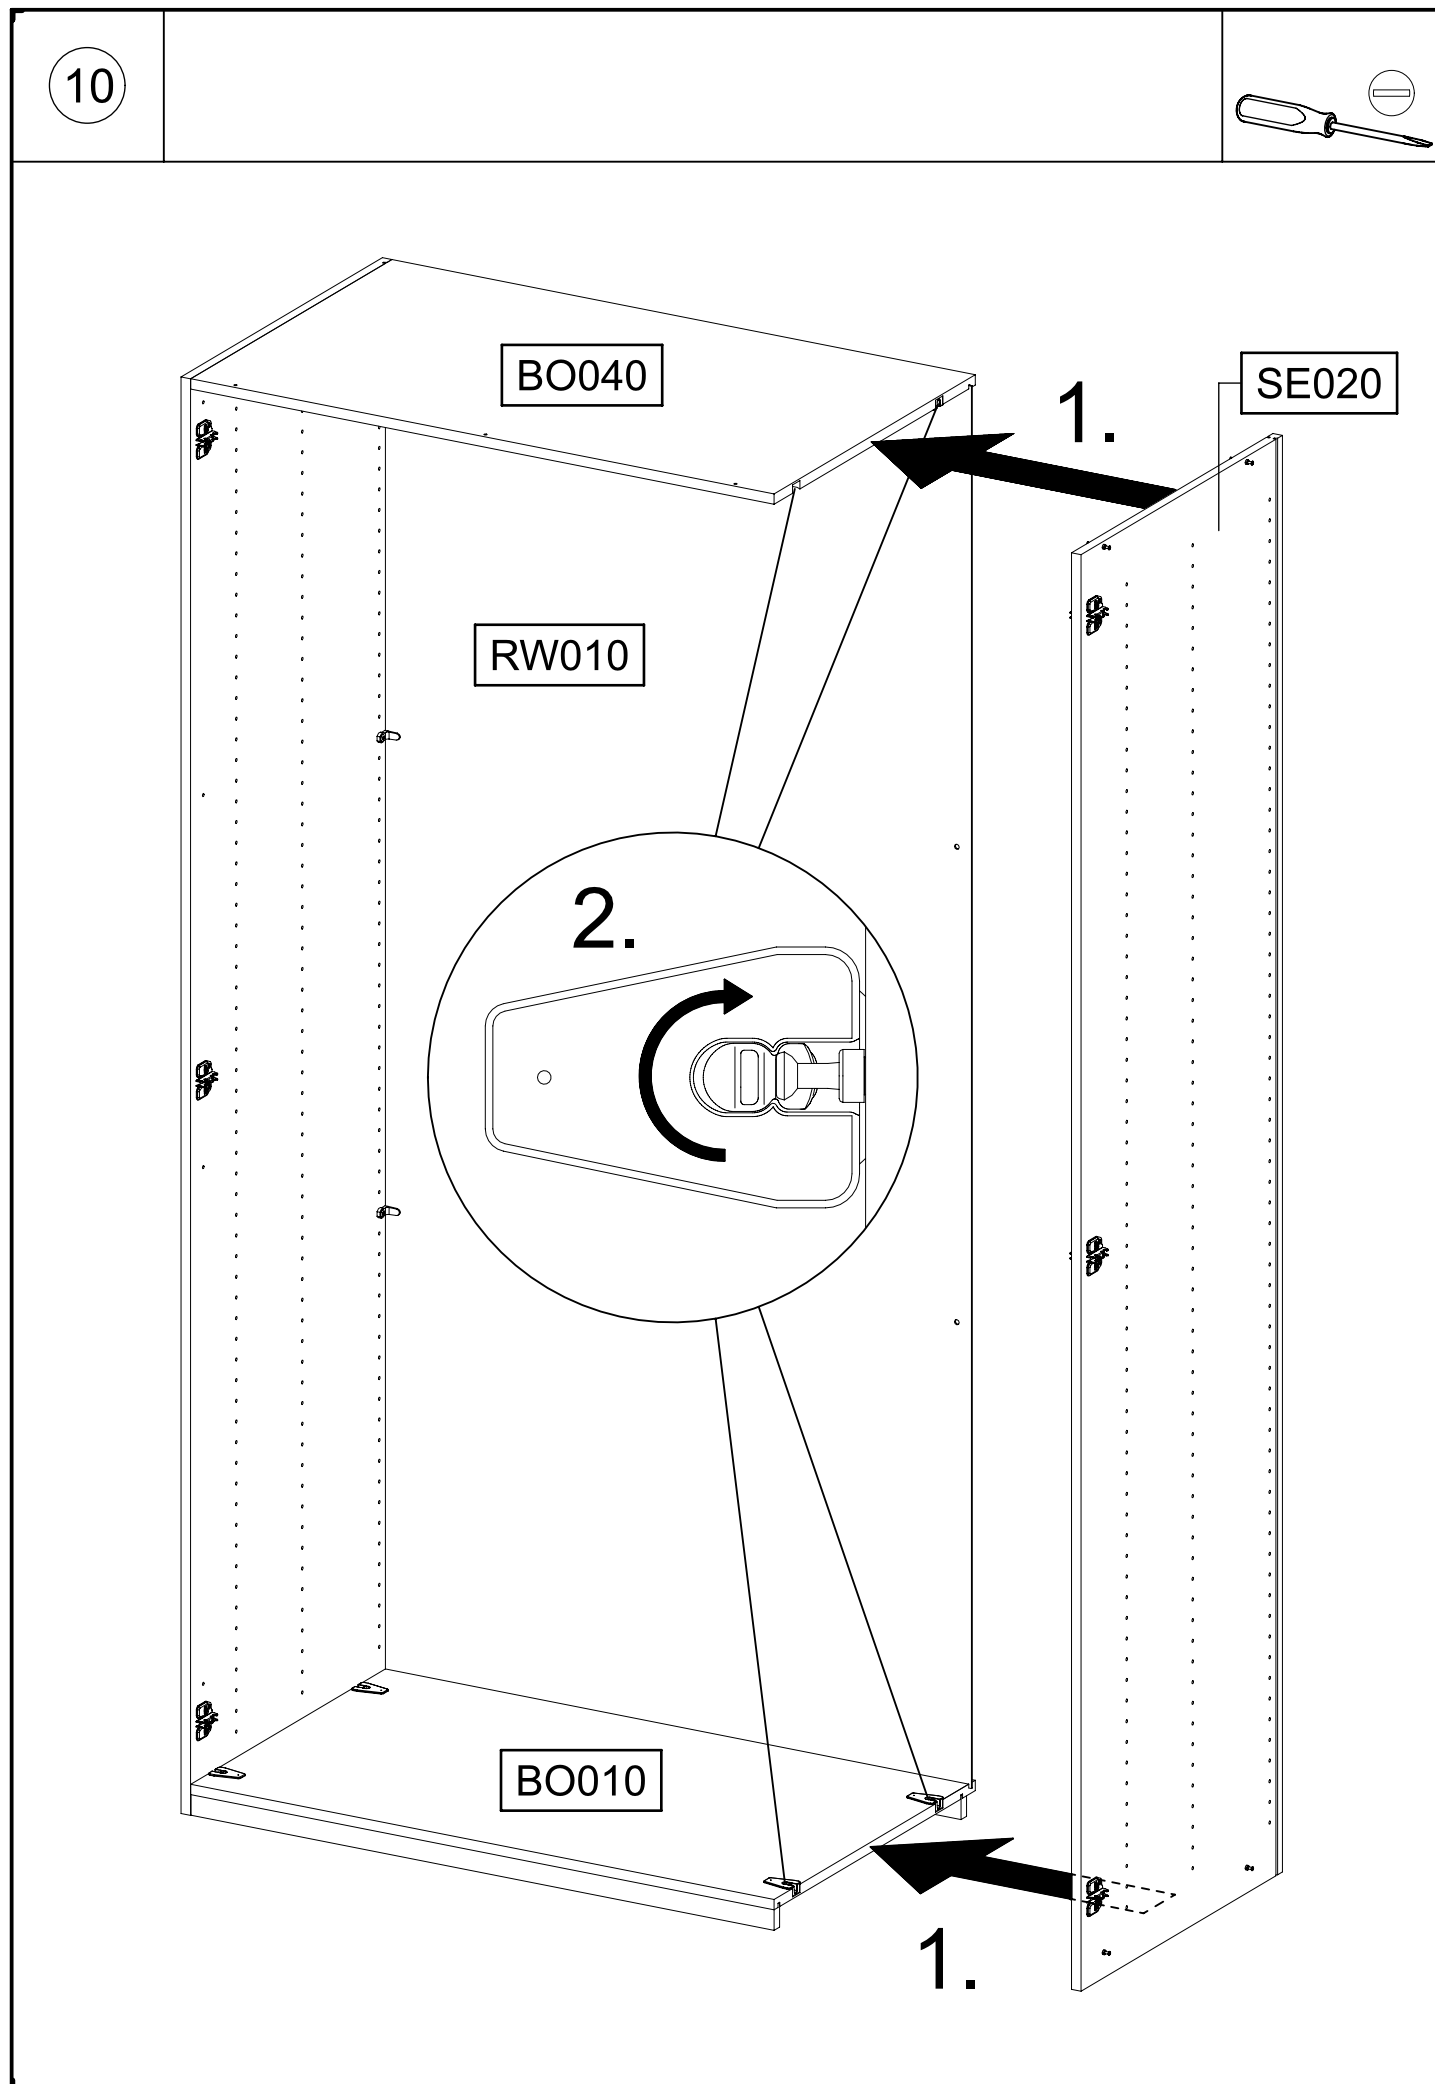

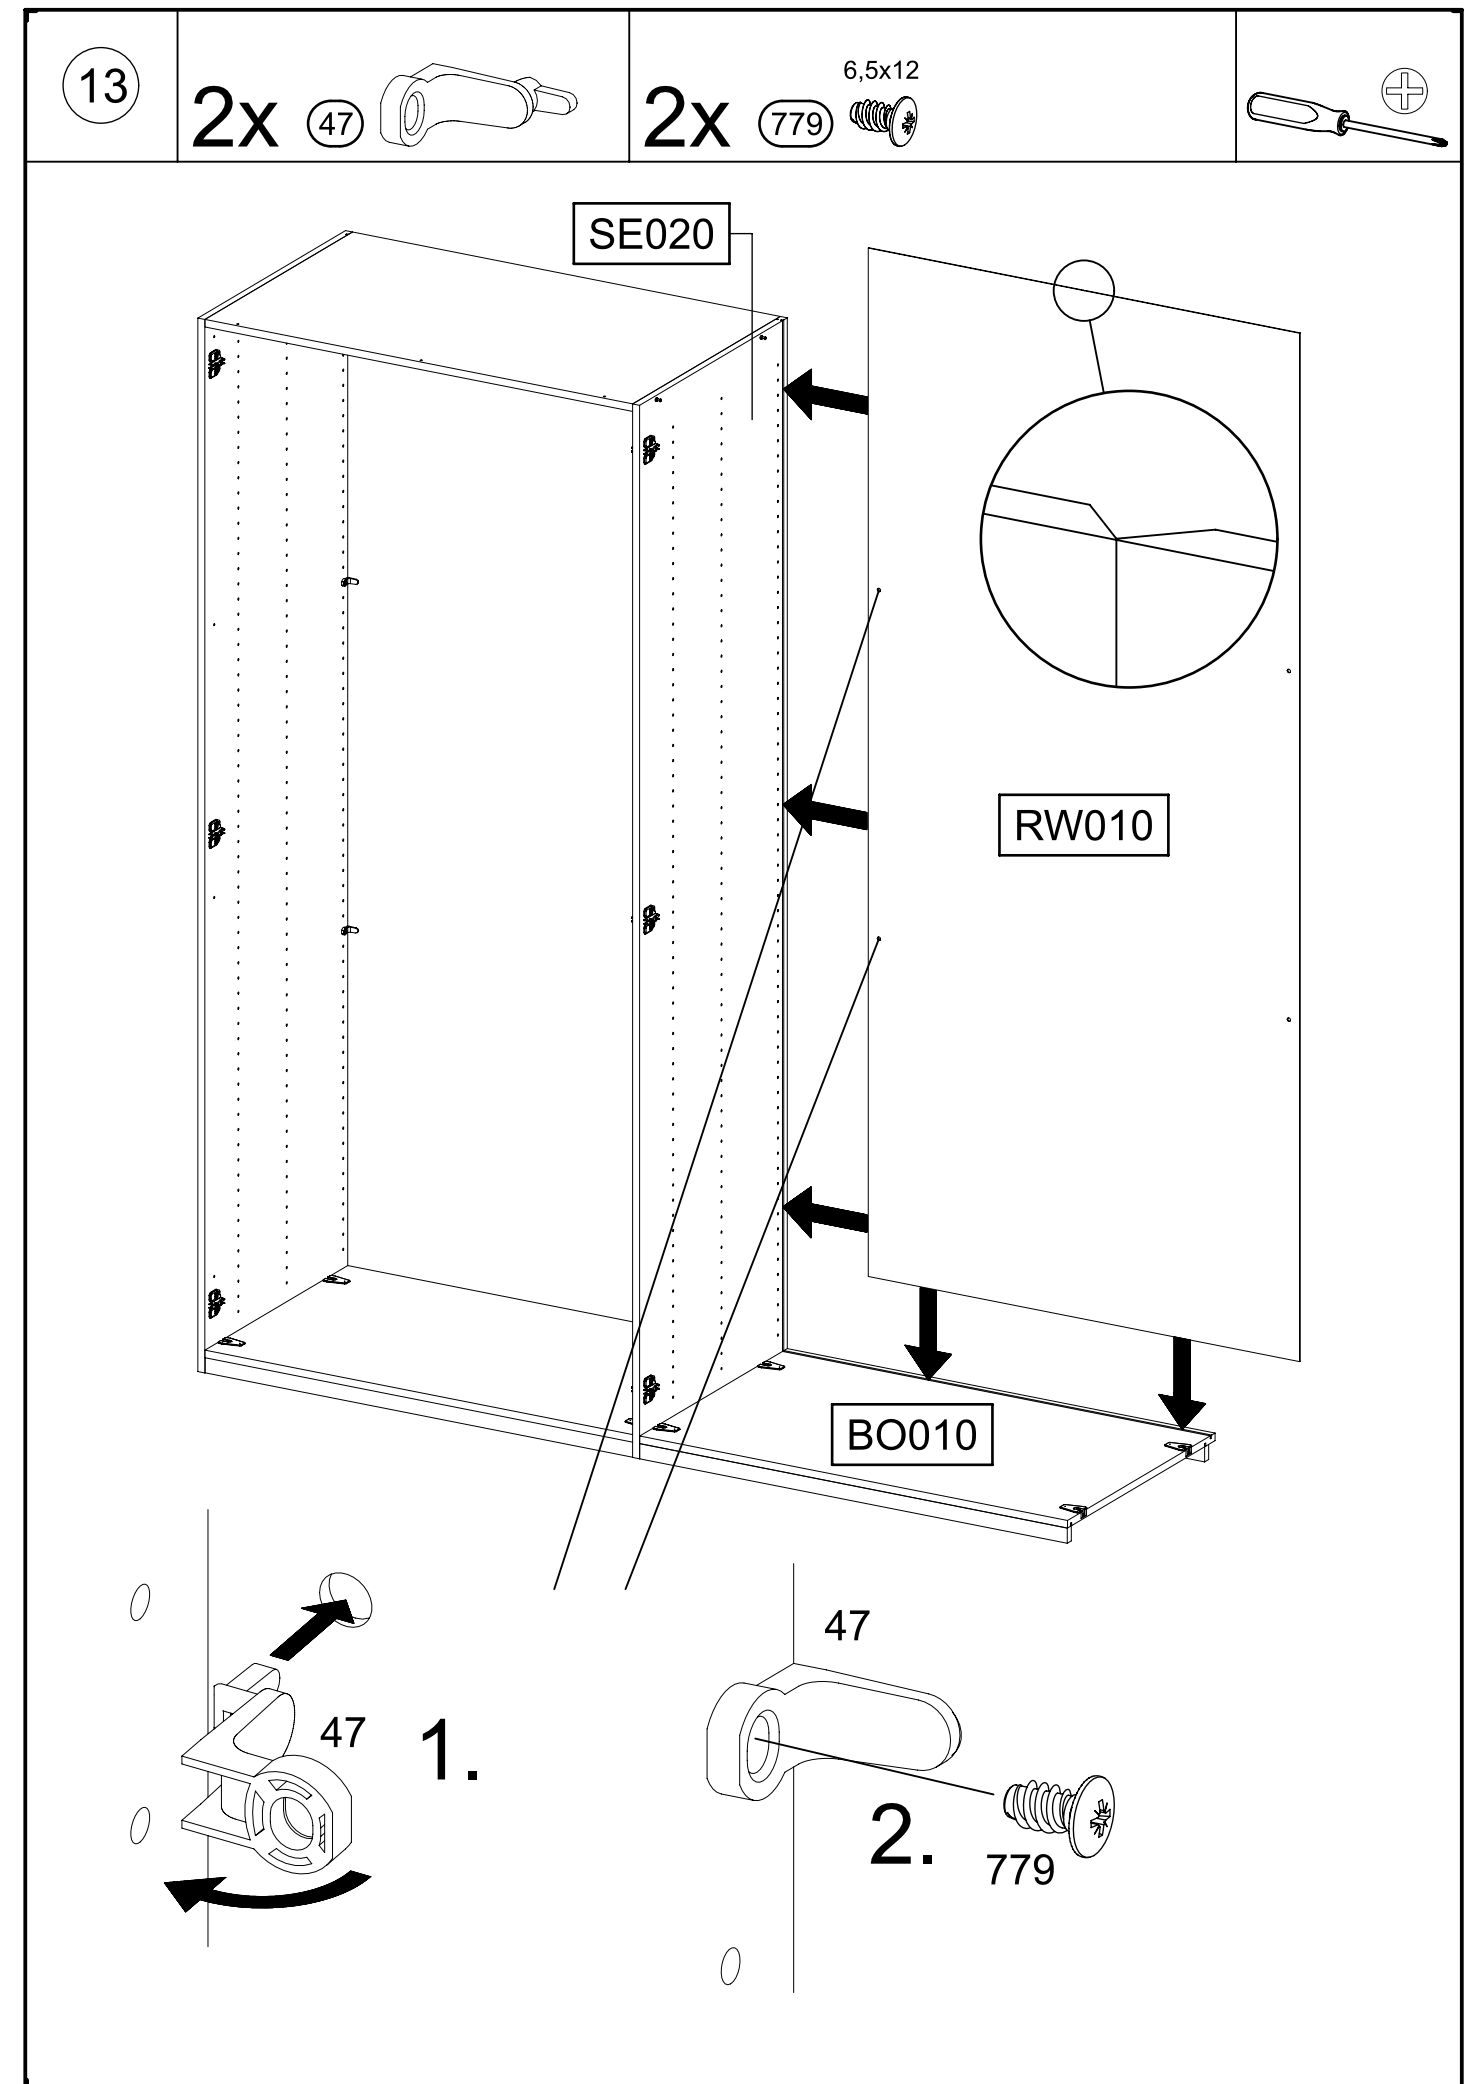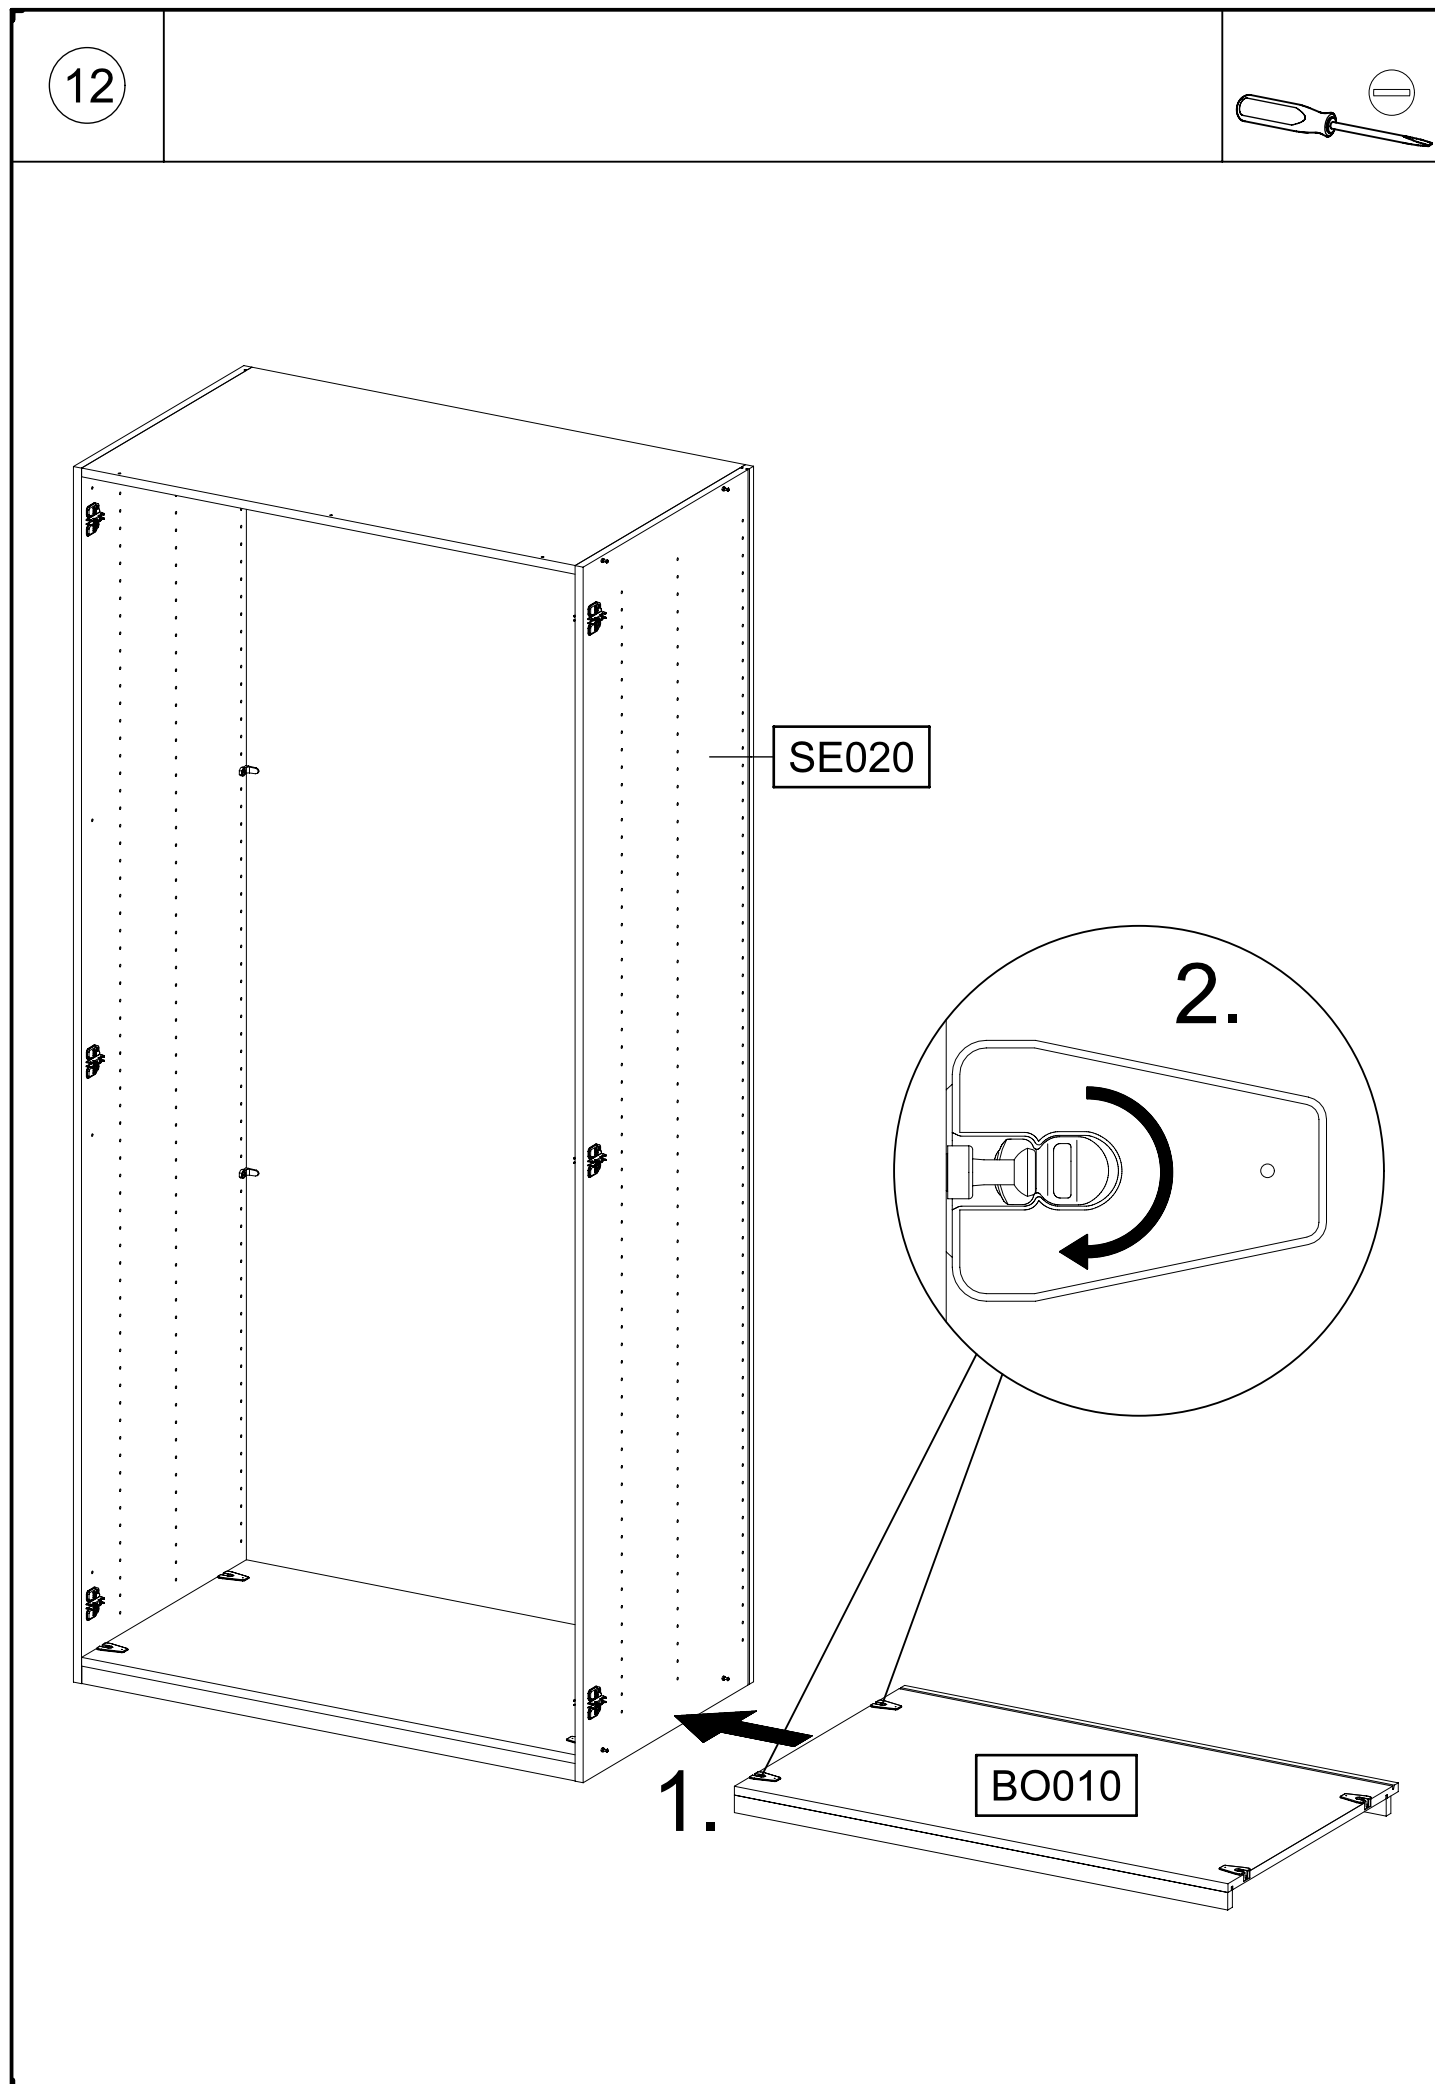

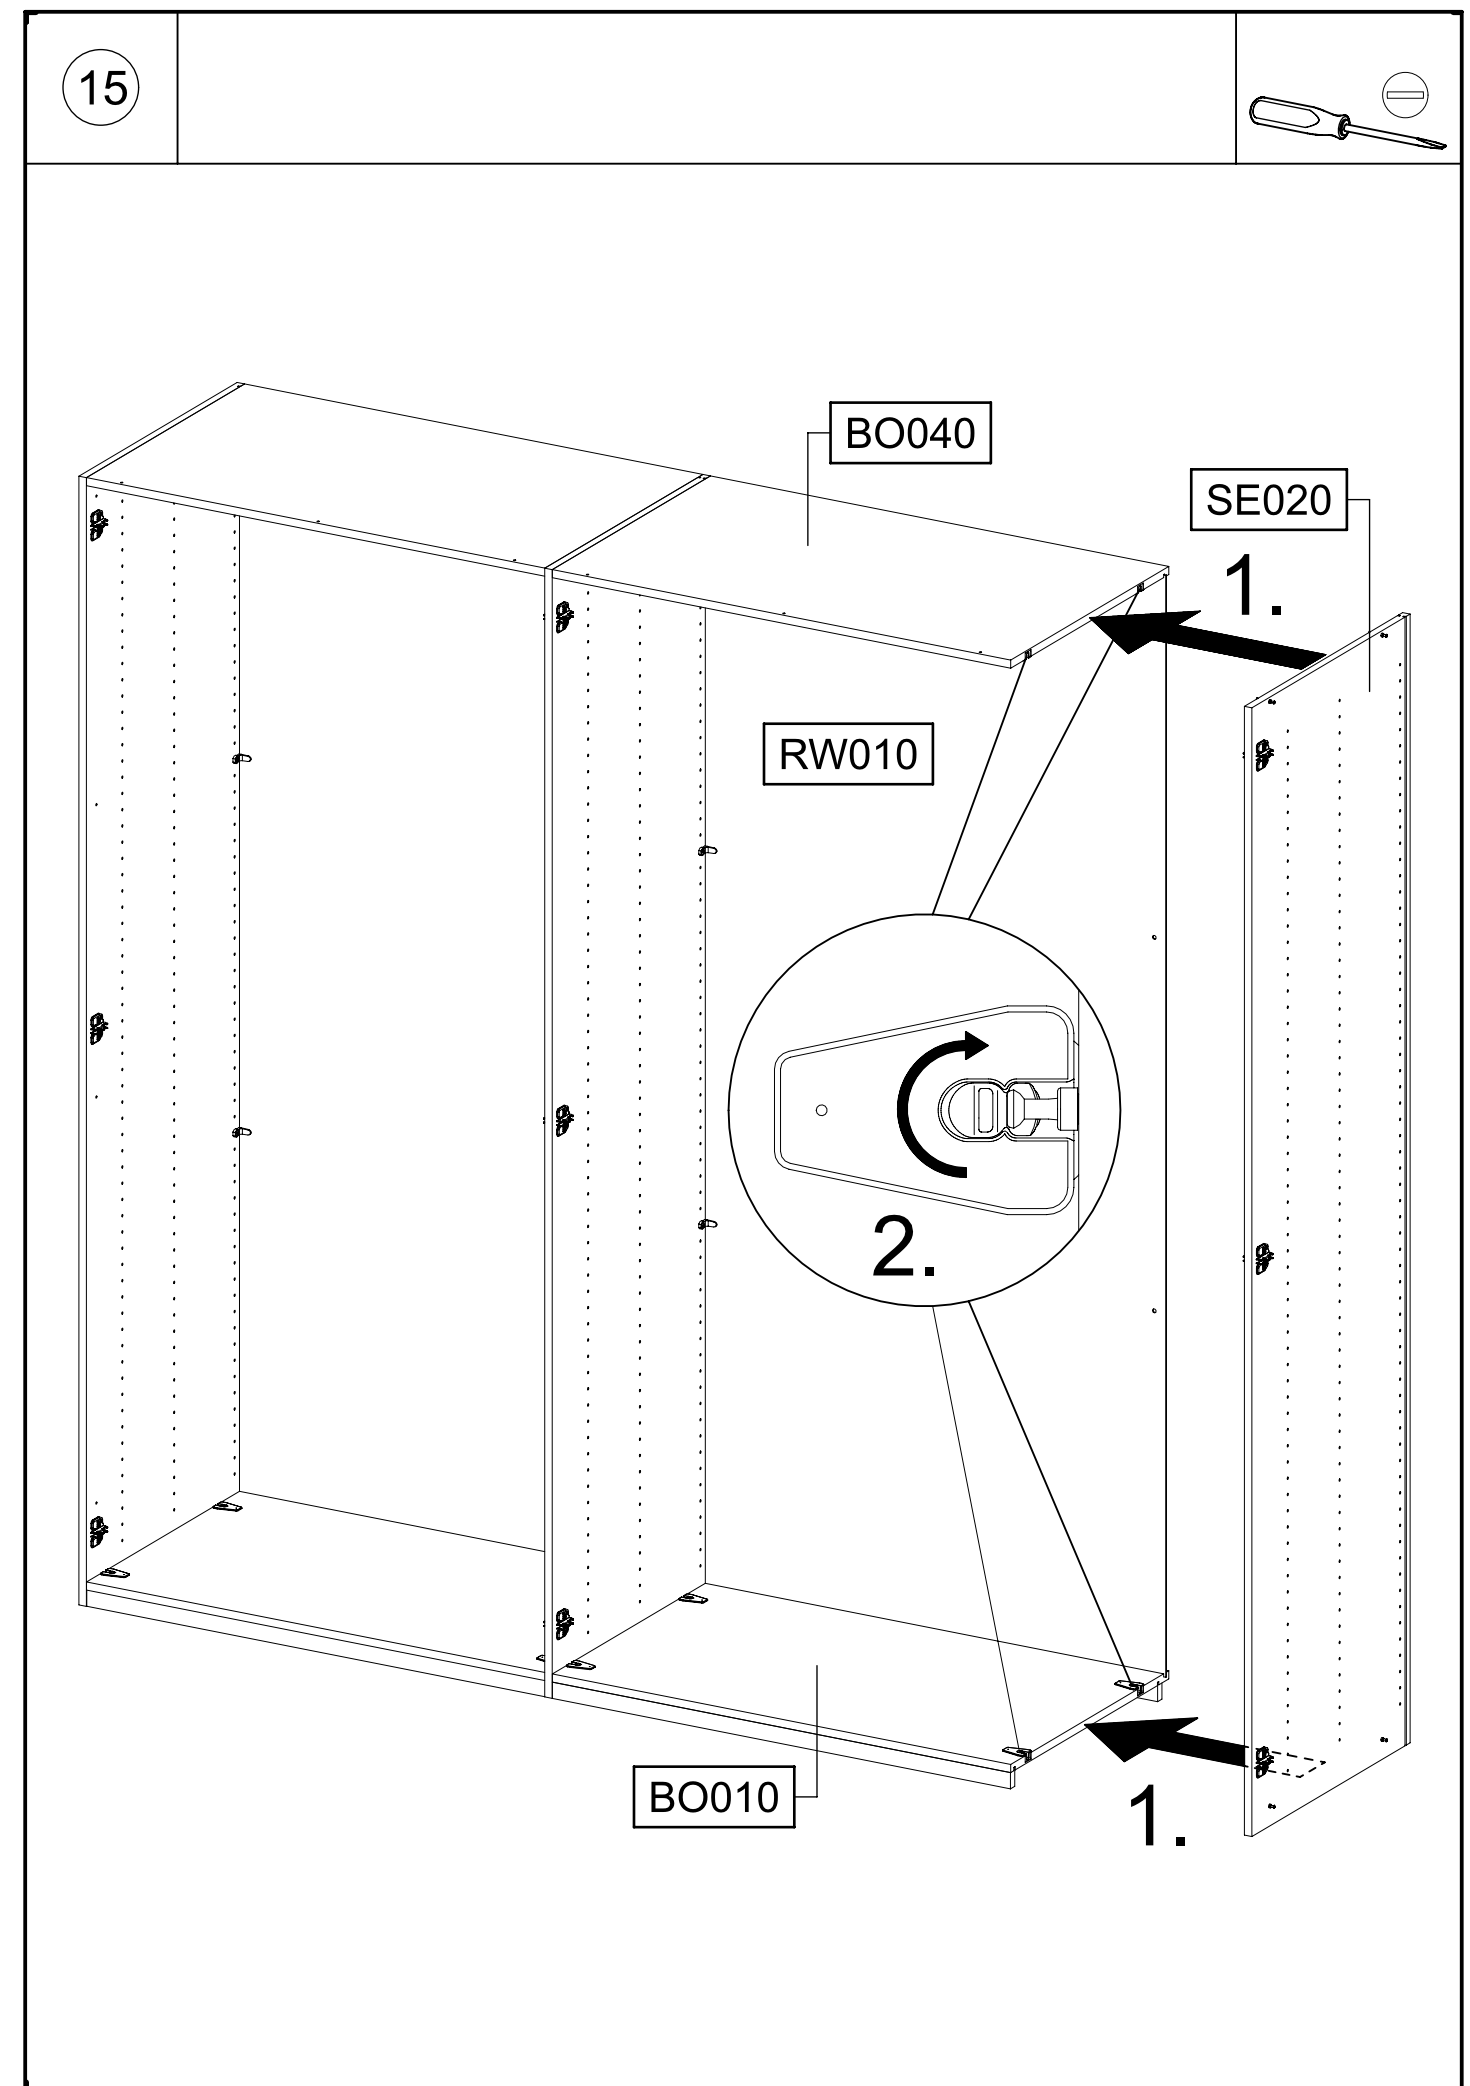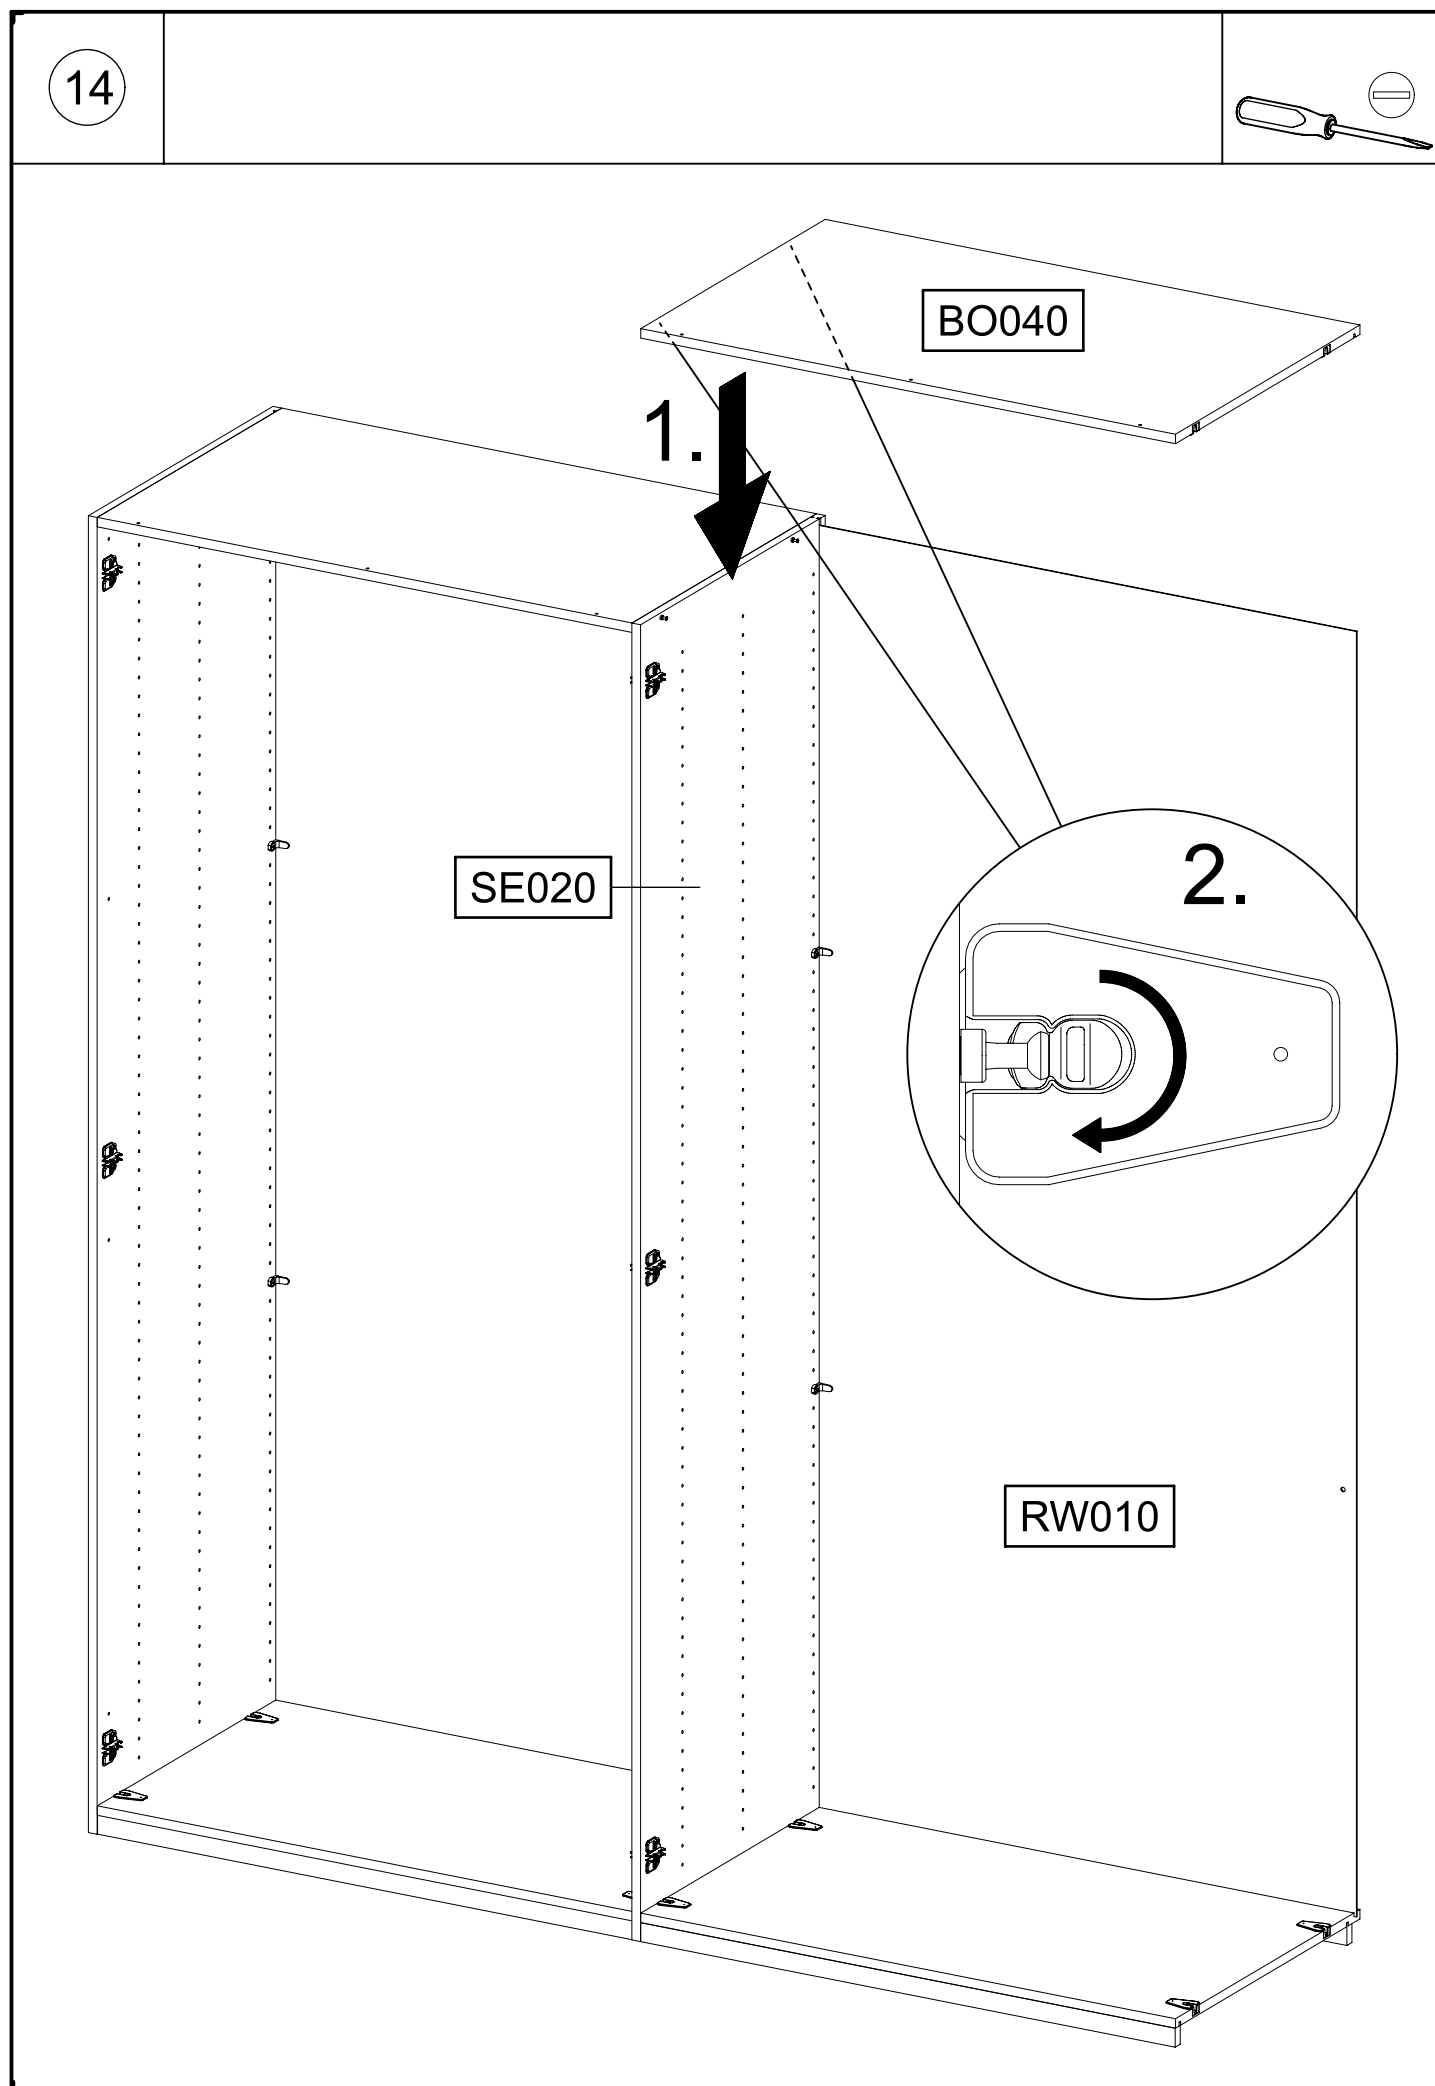

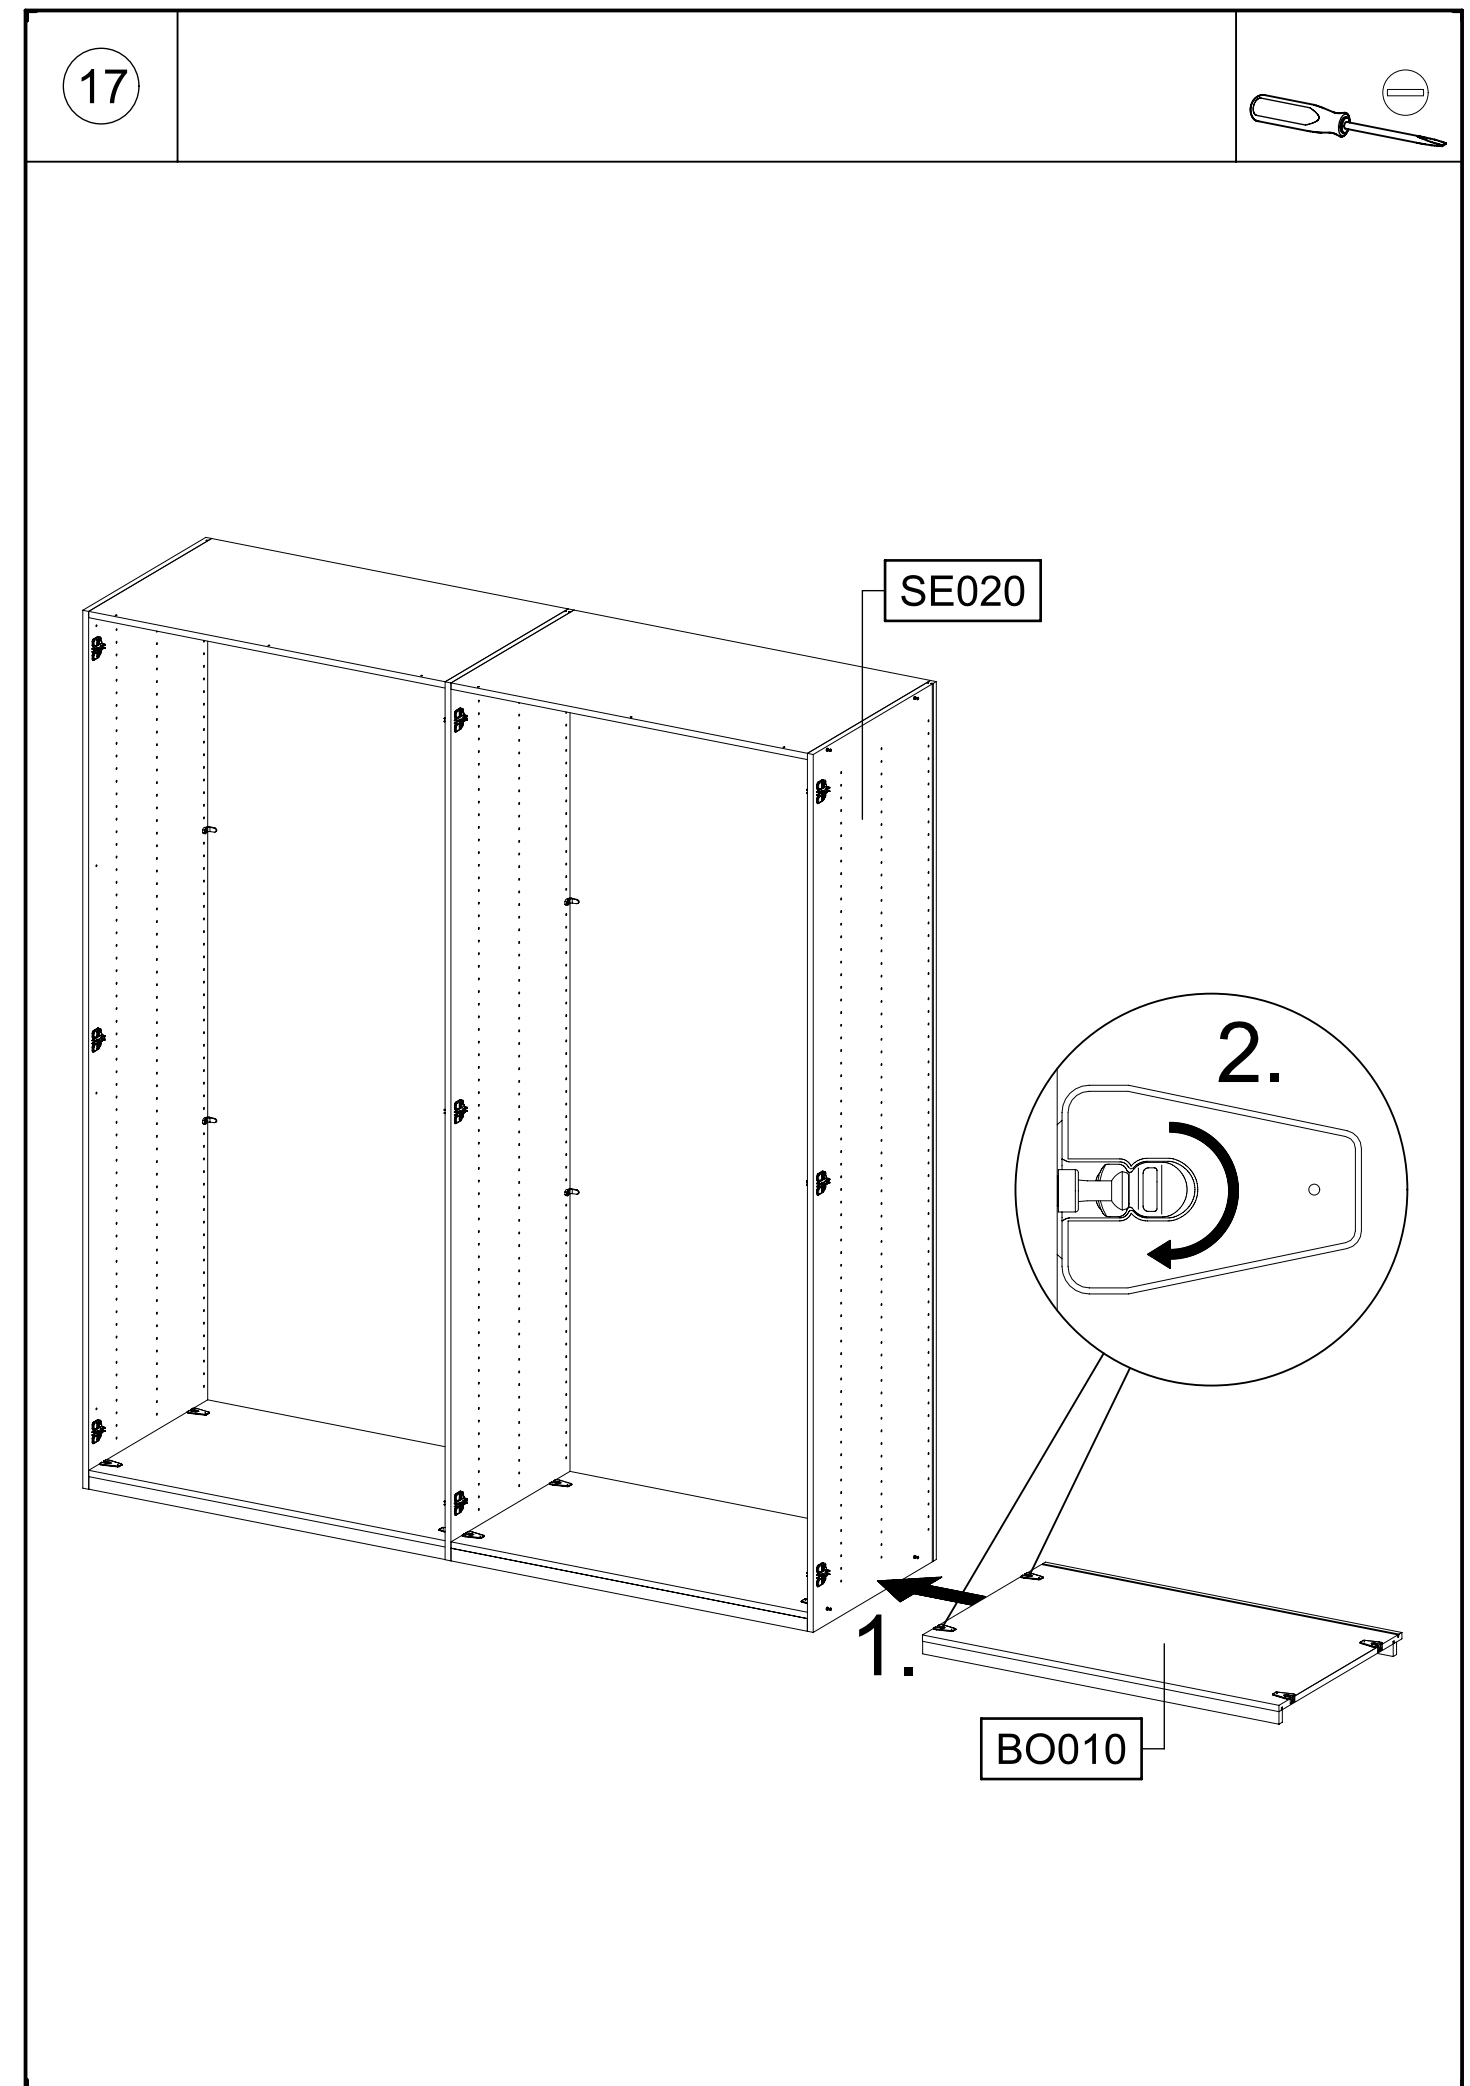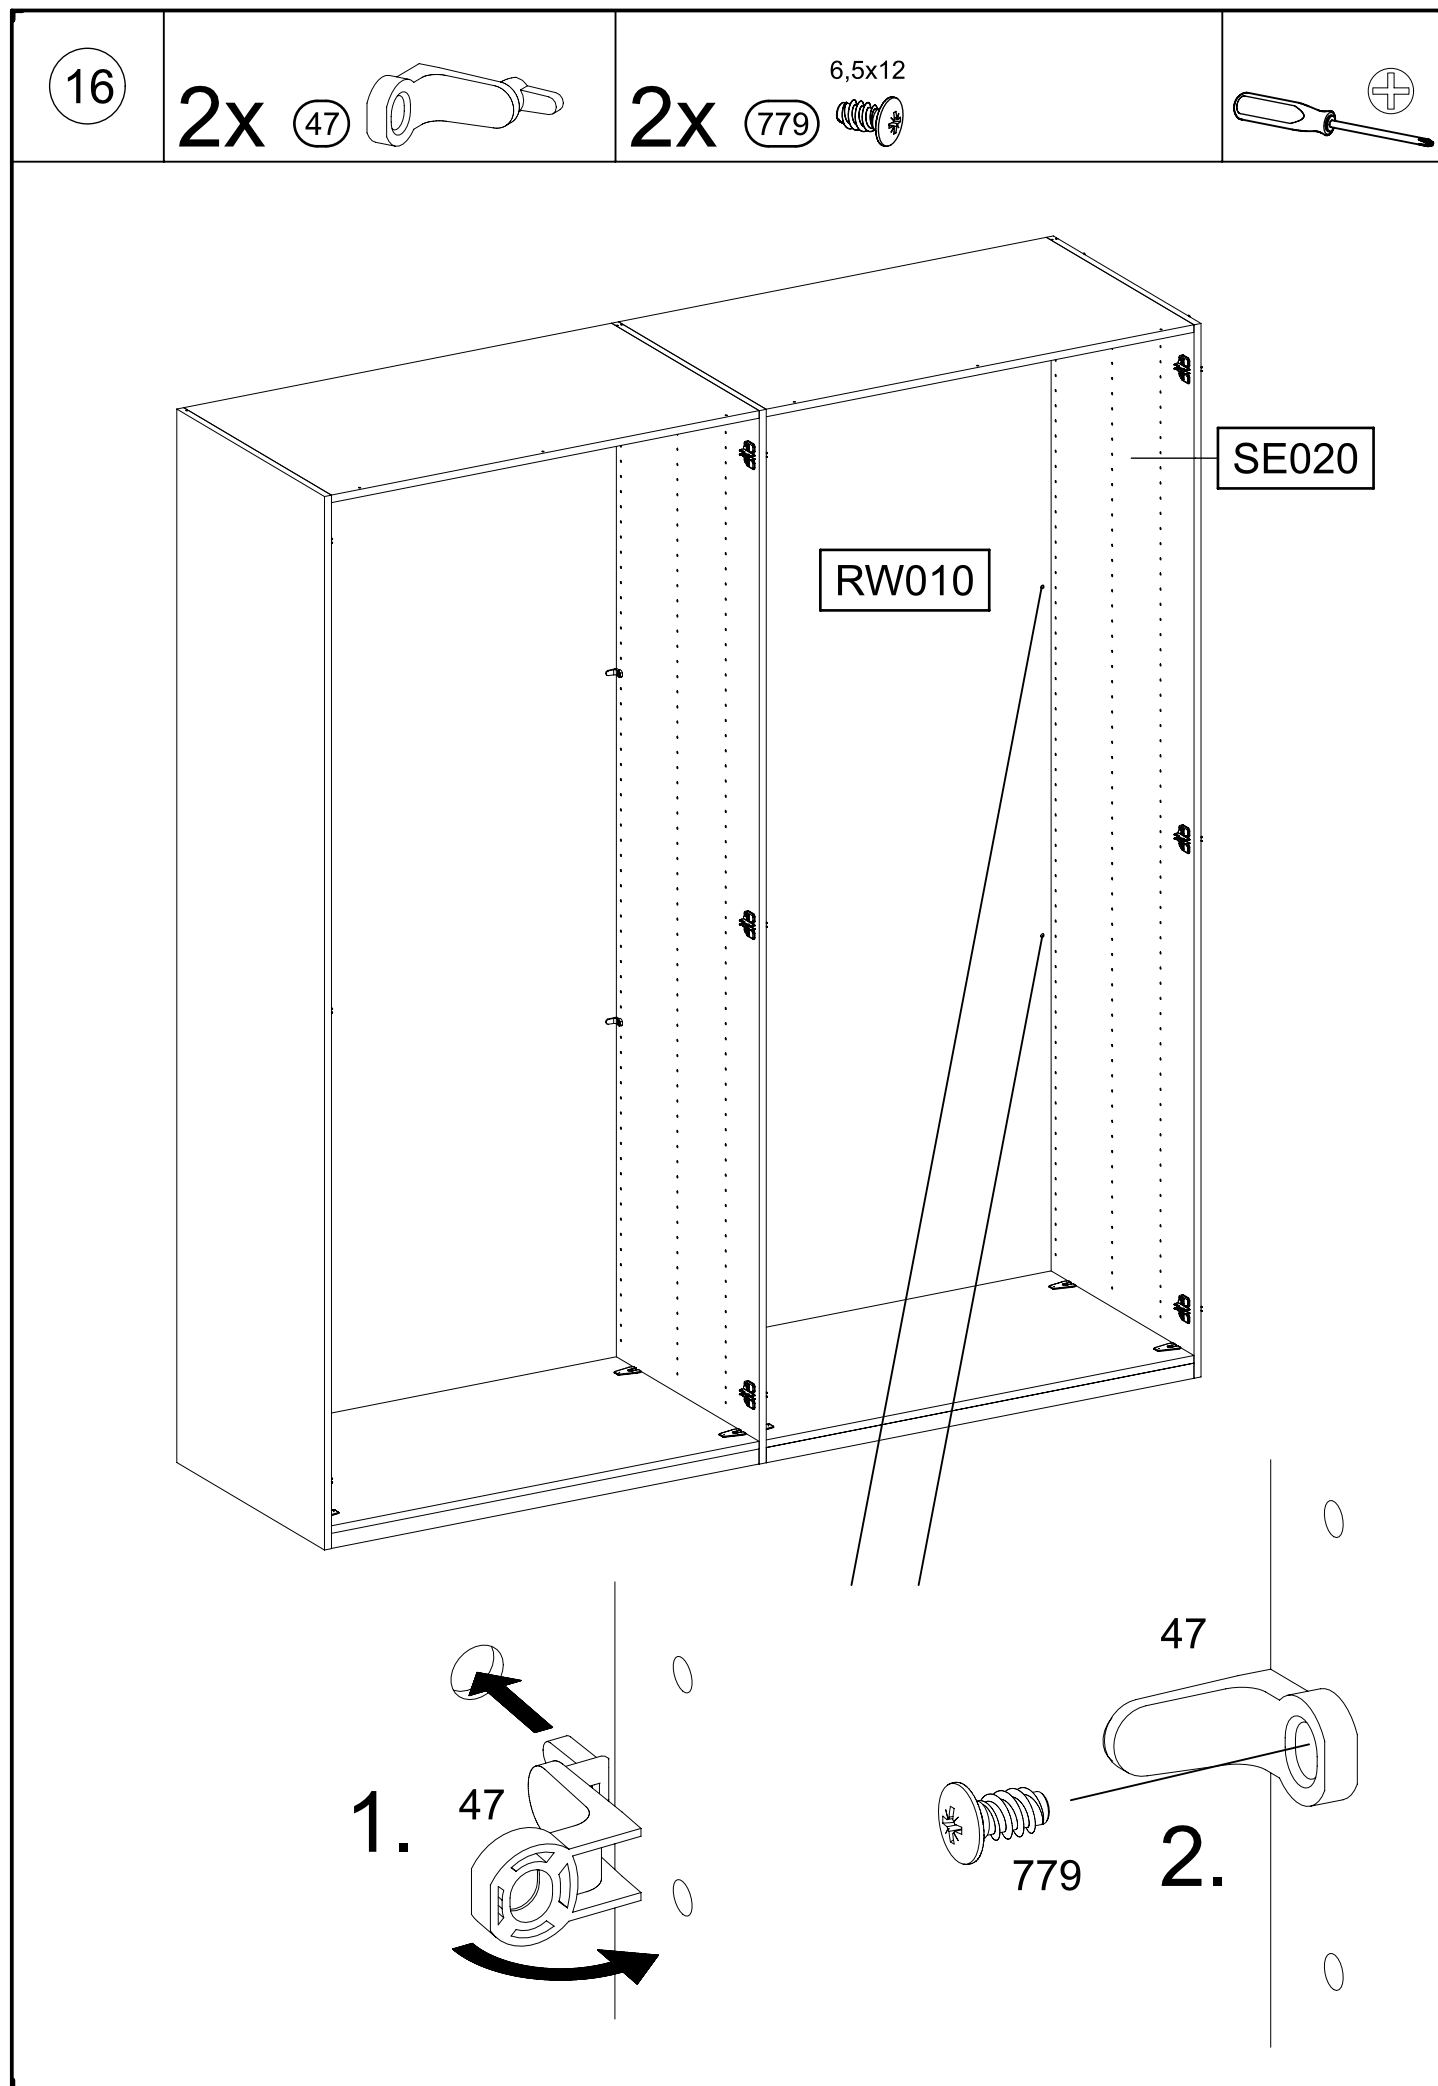

18

2x


47



2x

779


6,5x12




SE020

RW010

BO010

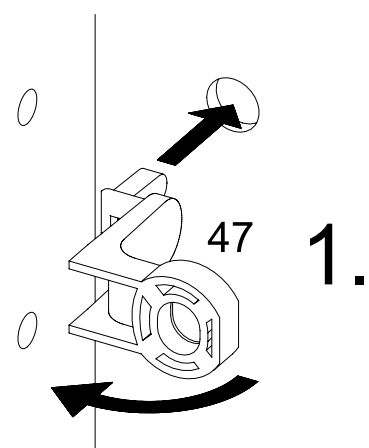


1.

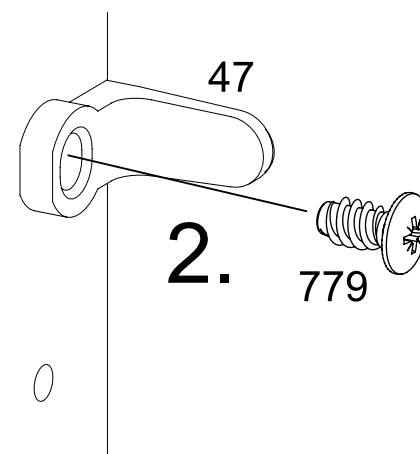

2.

779

19




BO040

1.


2.

SE020

RW010

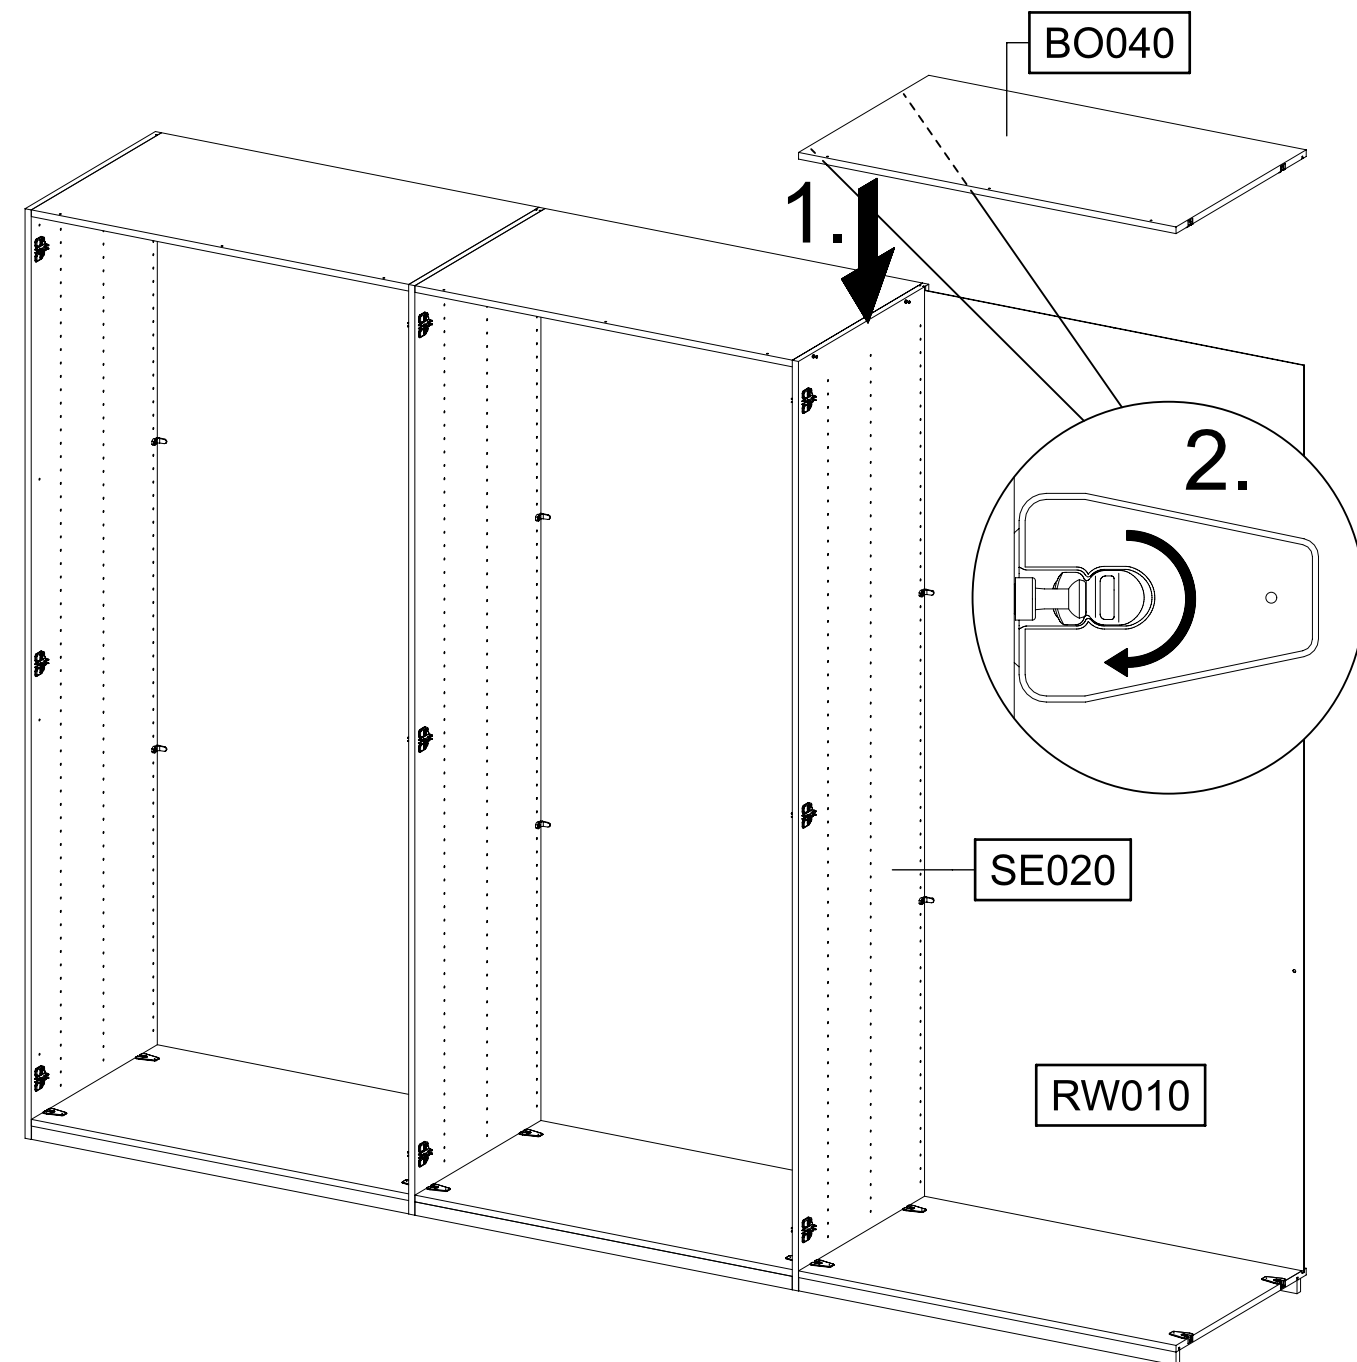


25.

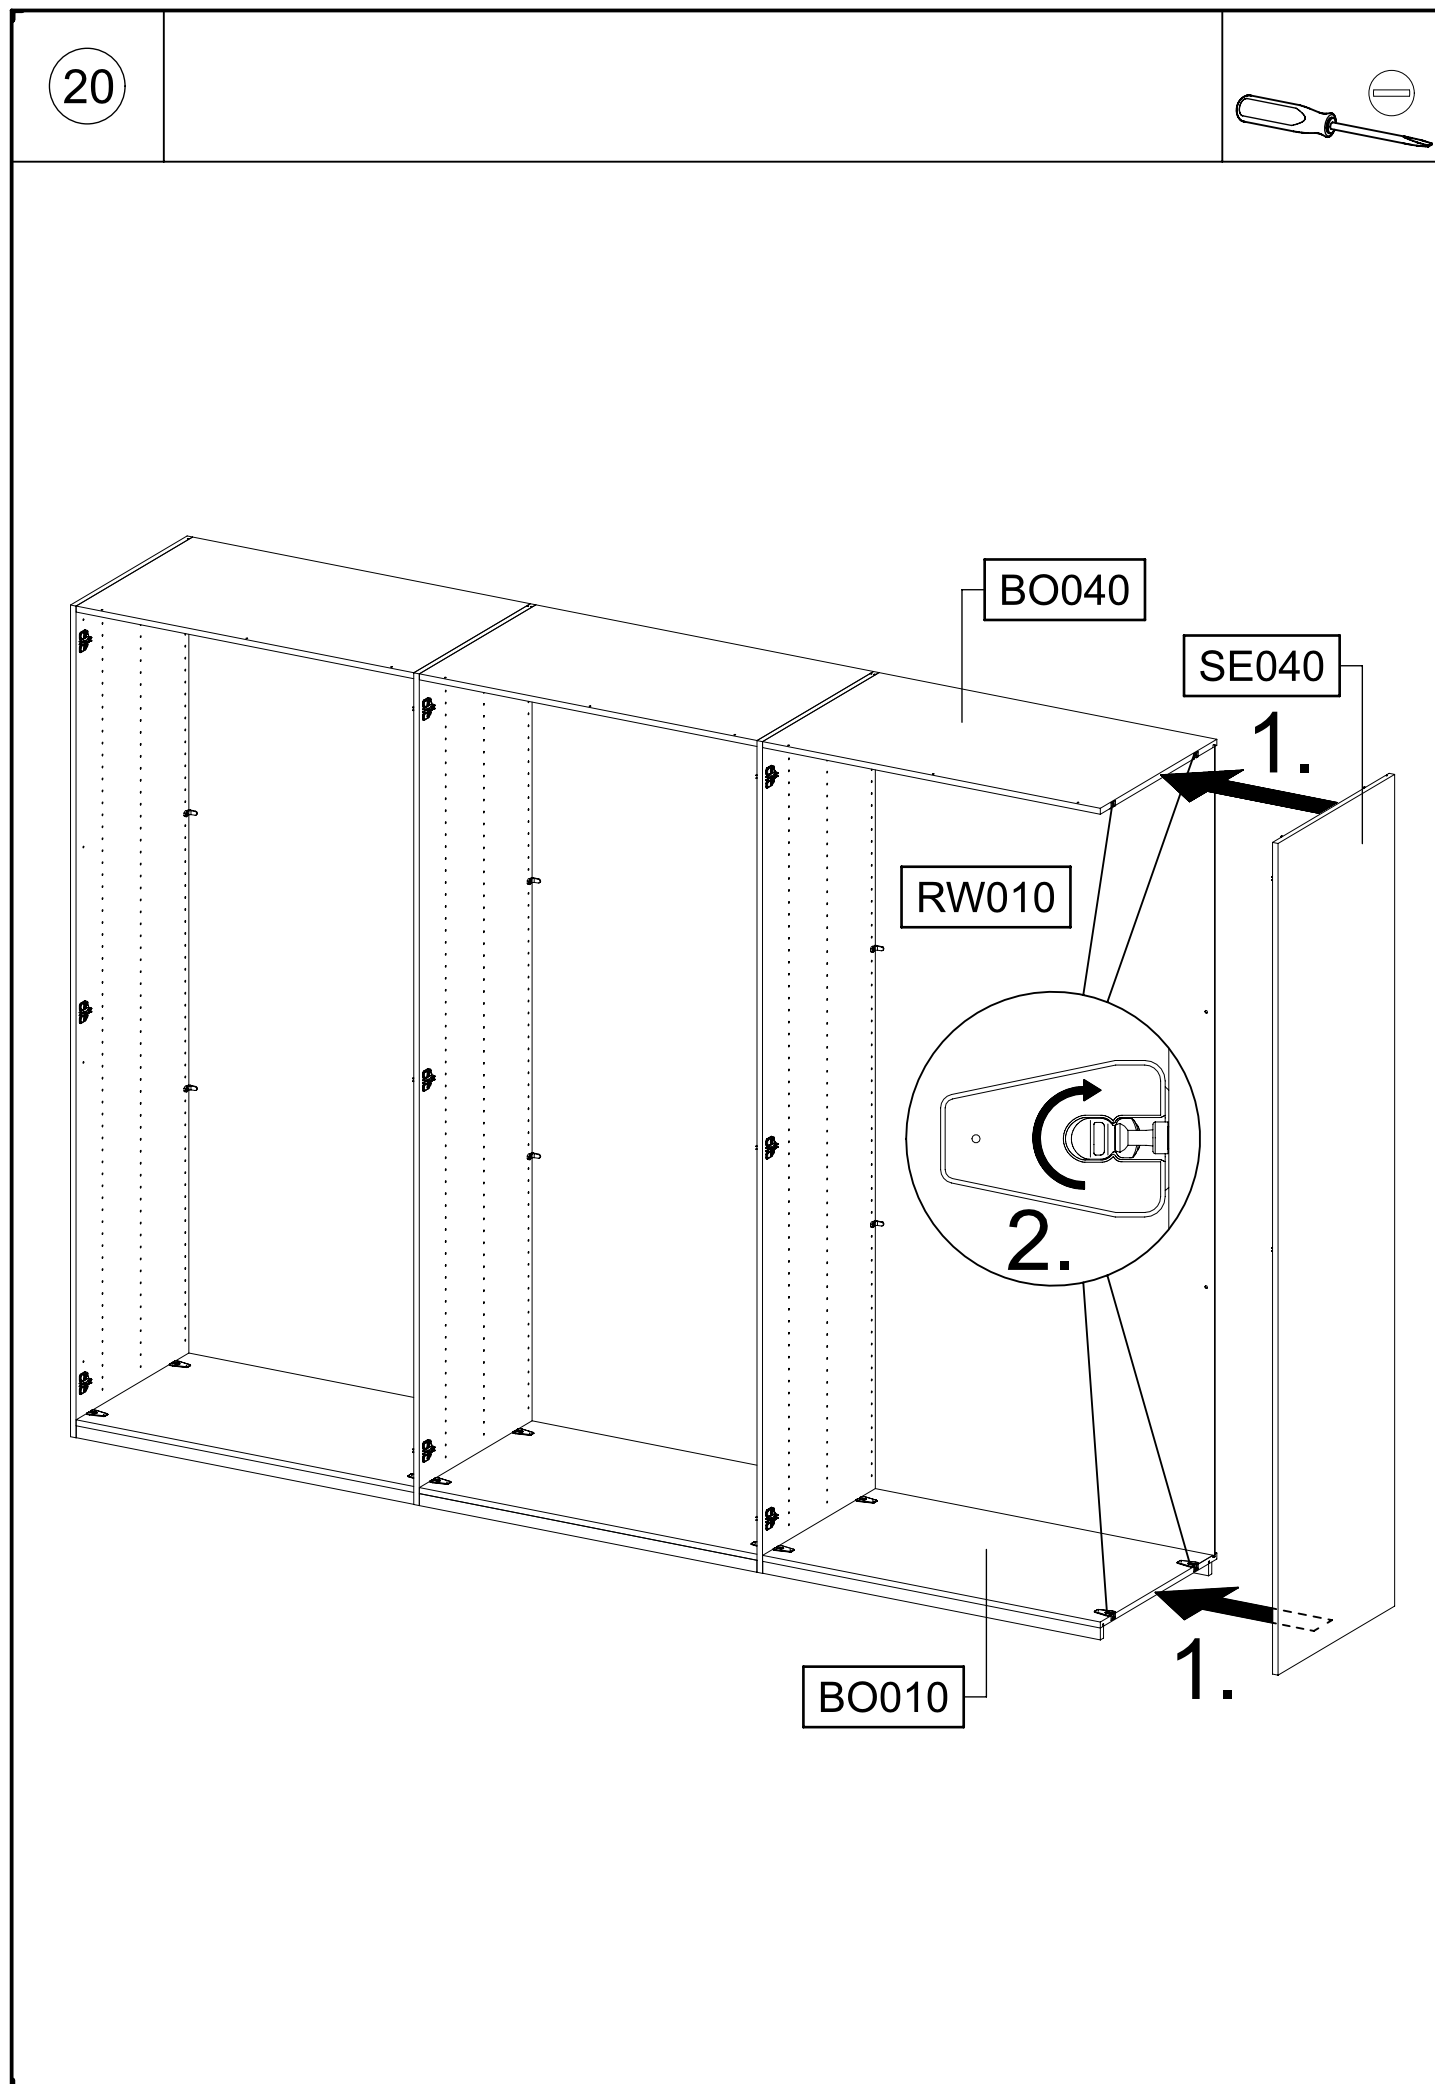

MD106

26.


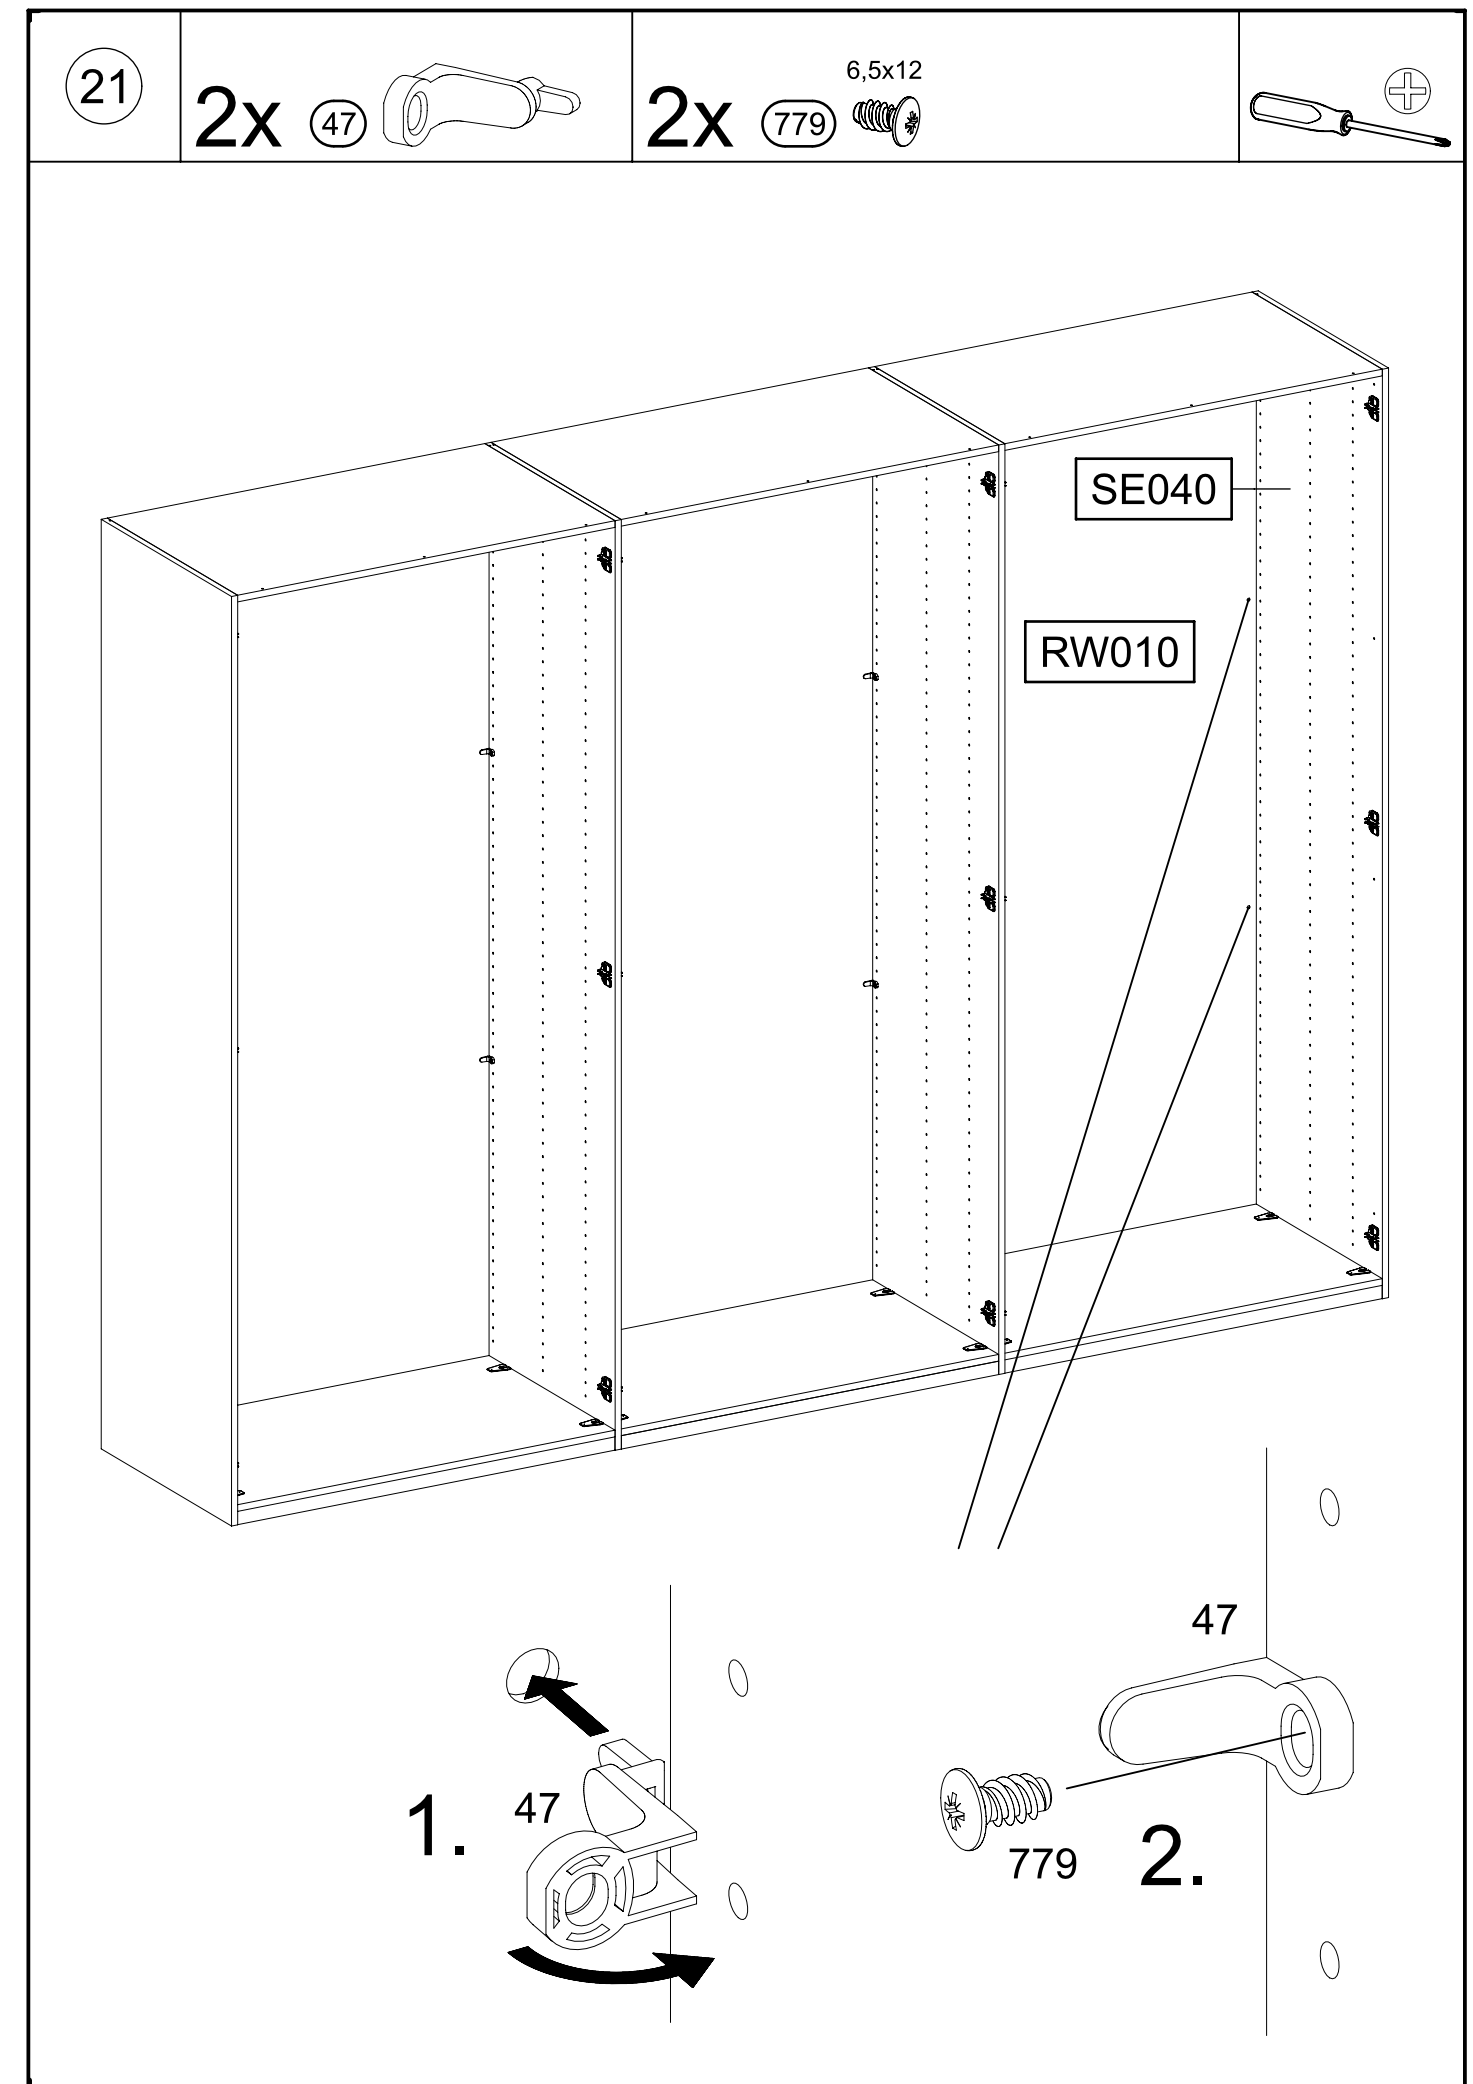


MD106

22

24x


1089

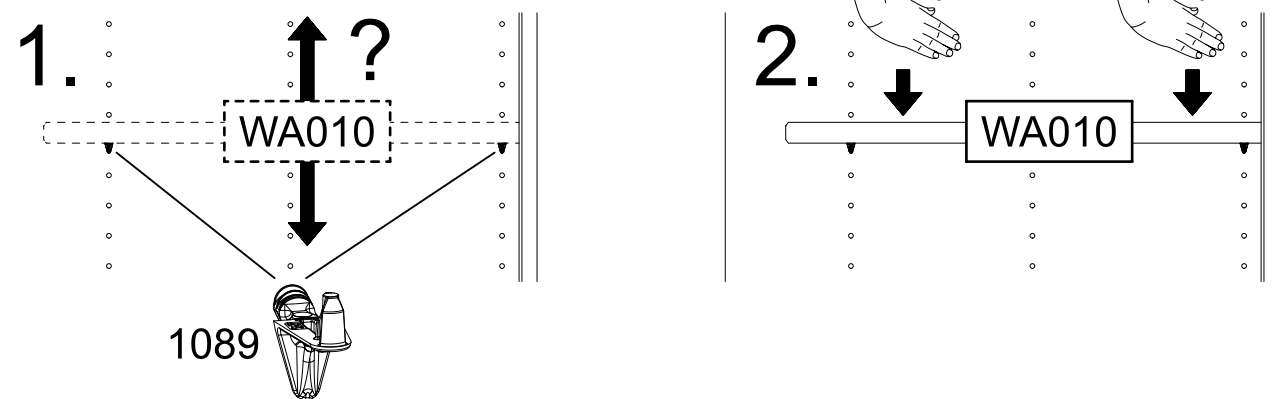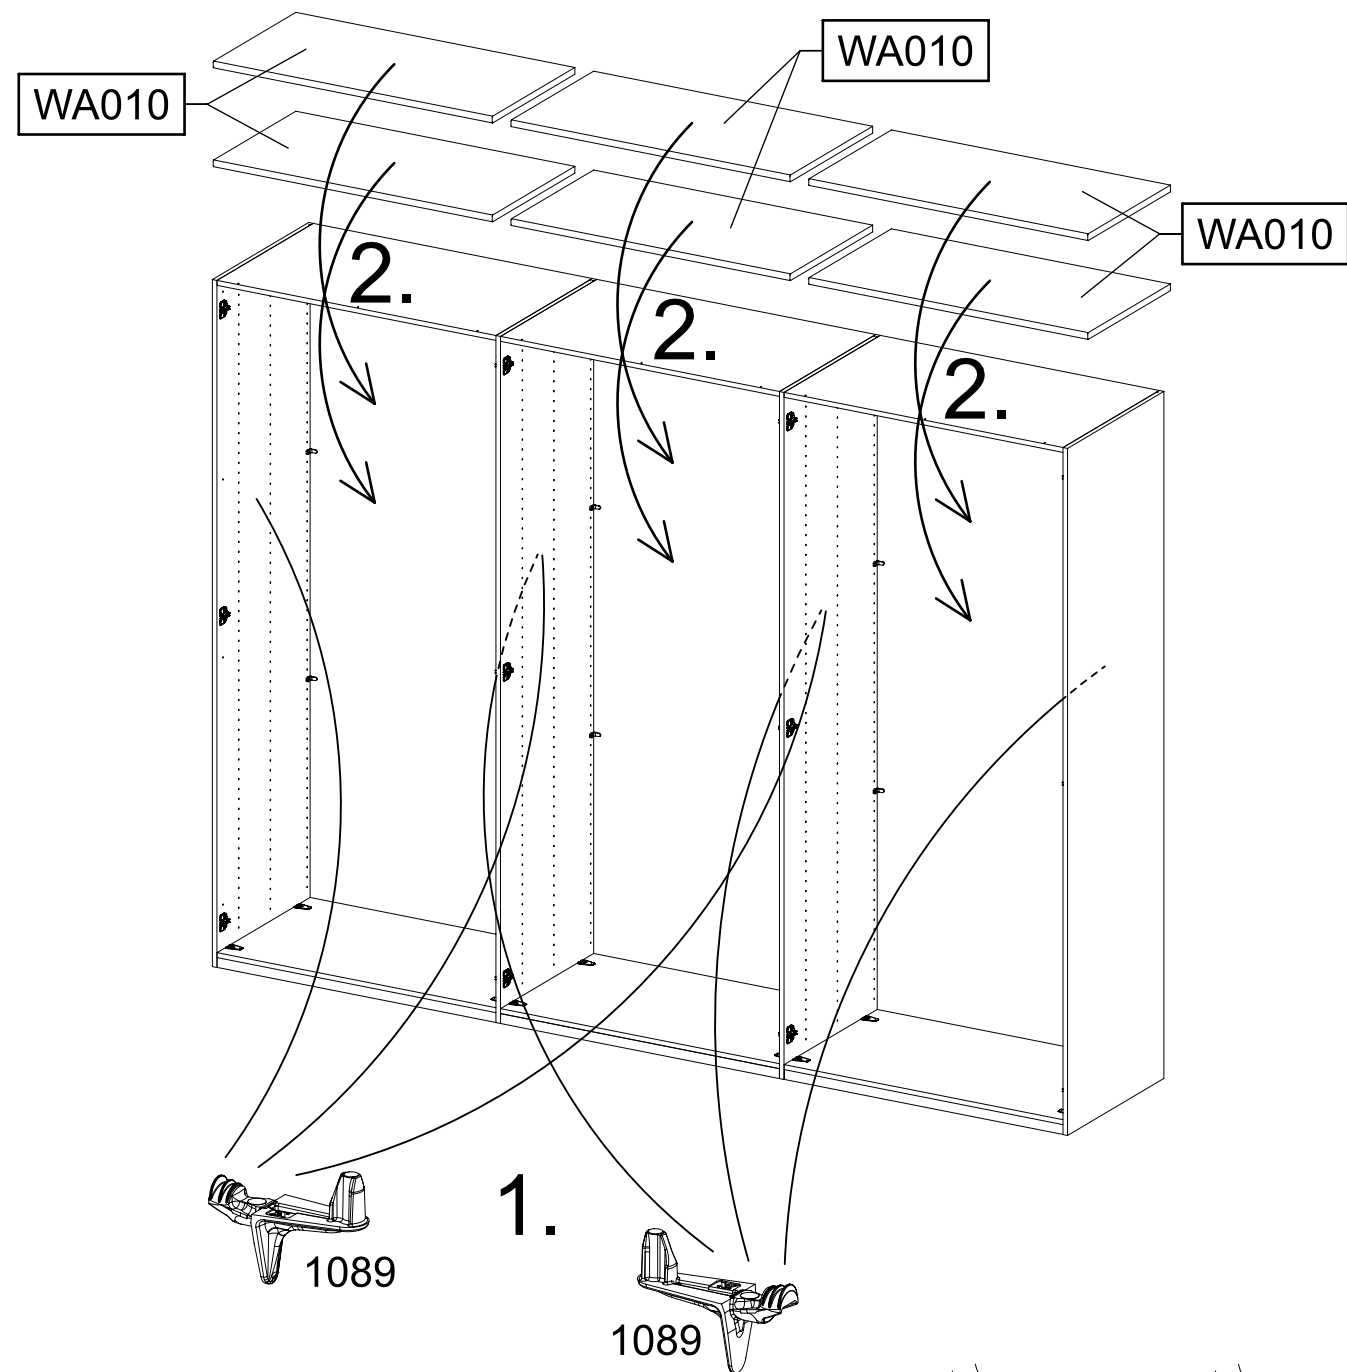

23

6x




29

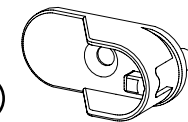

6x






205

3,5x15

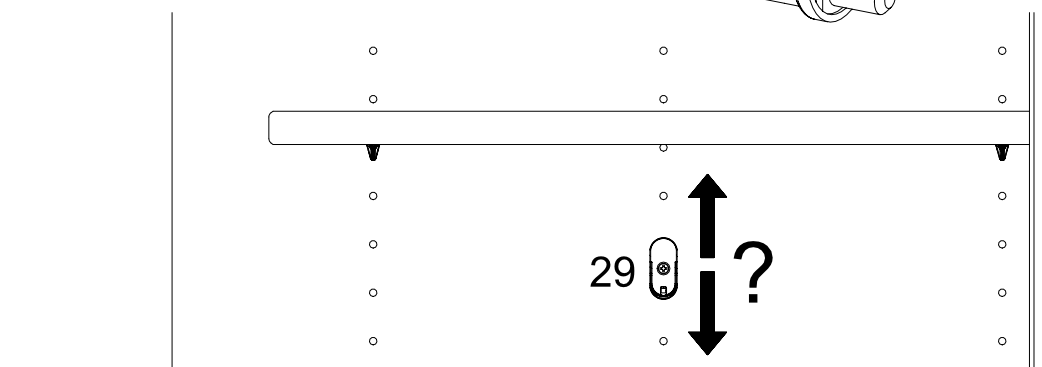
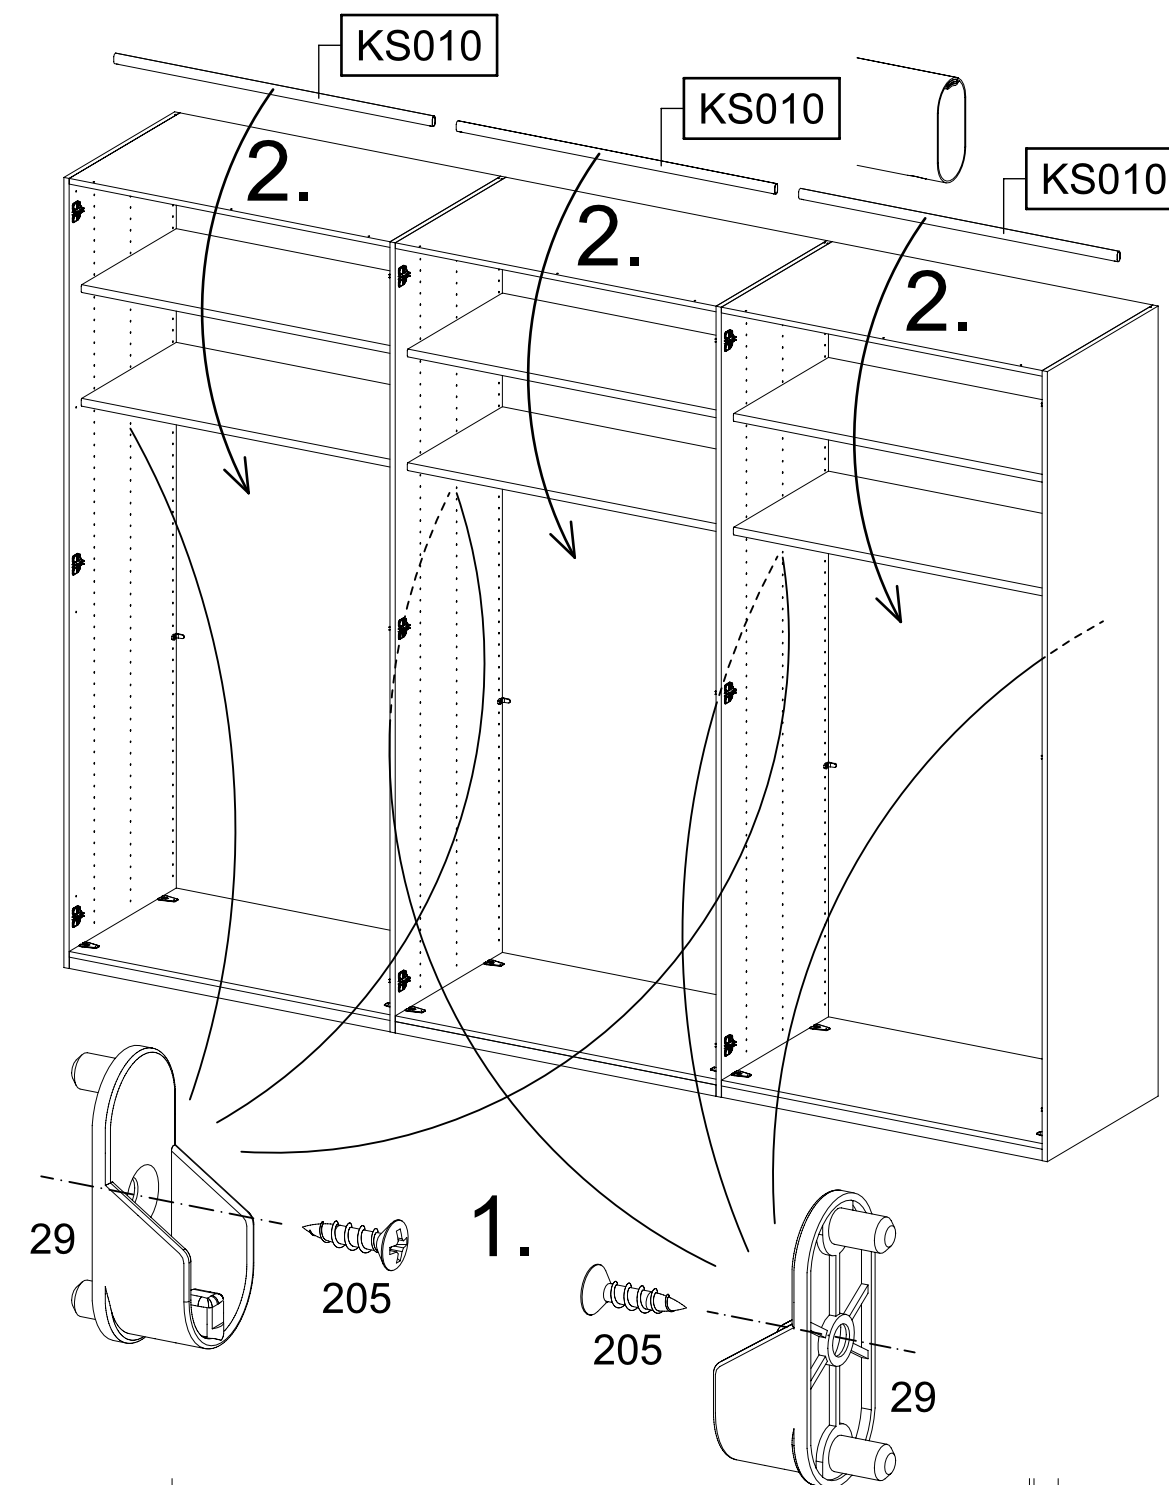



24

18-24x 1292

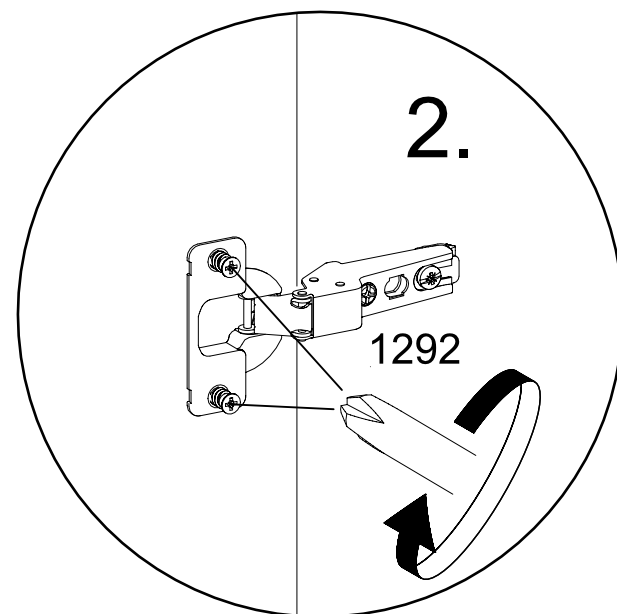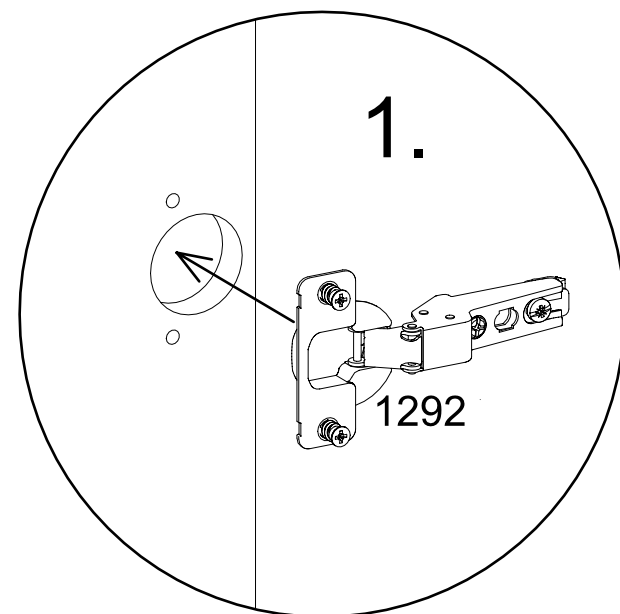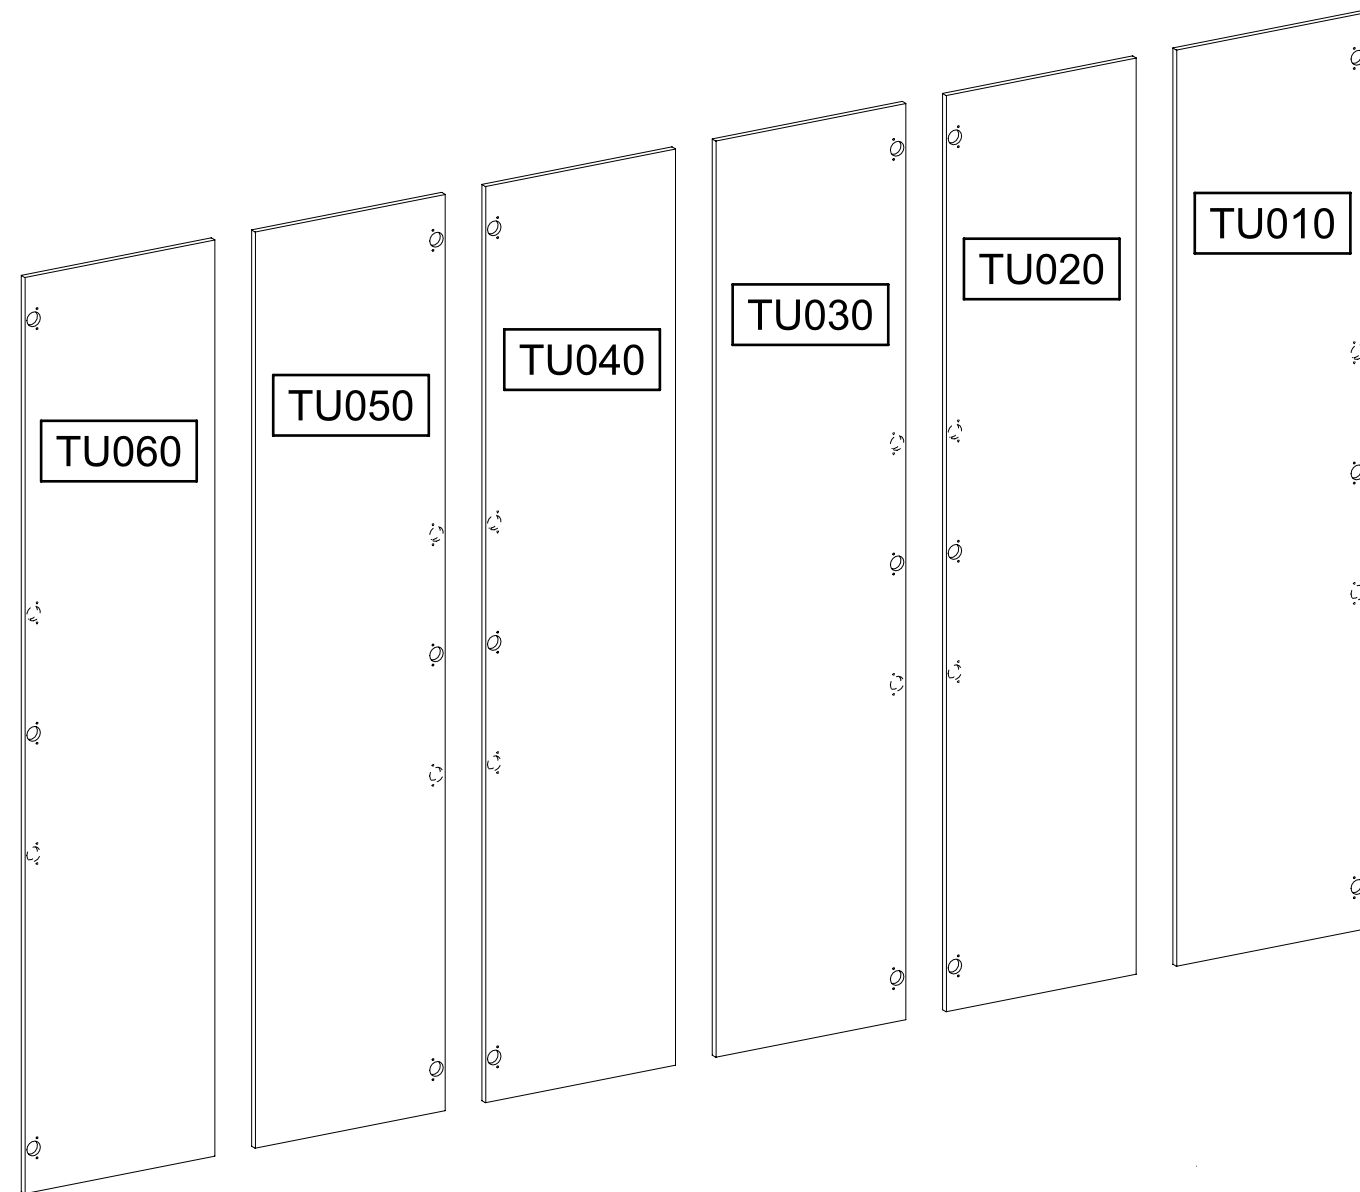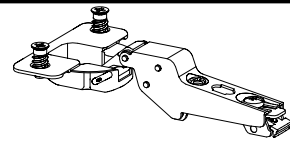

25

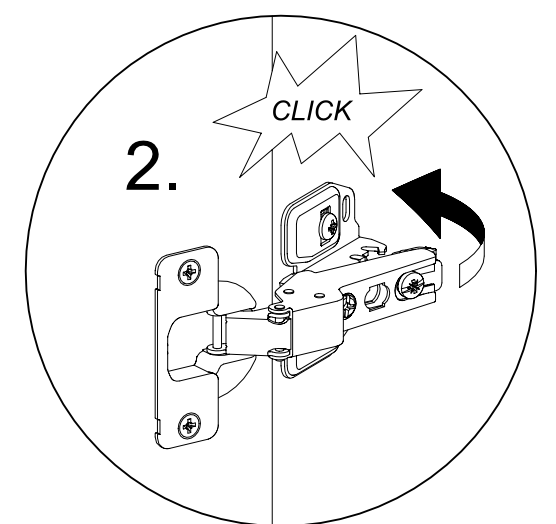
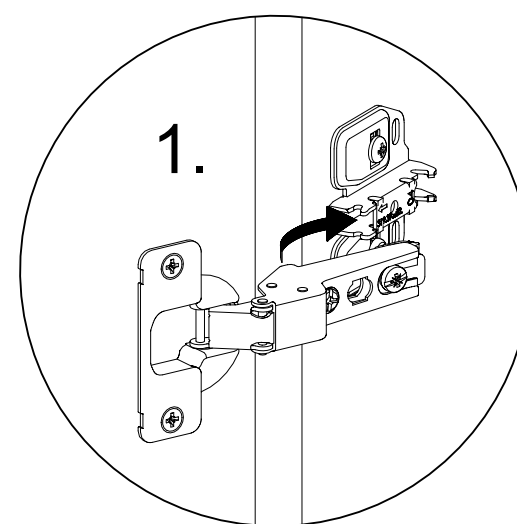
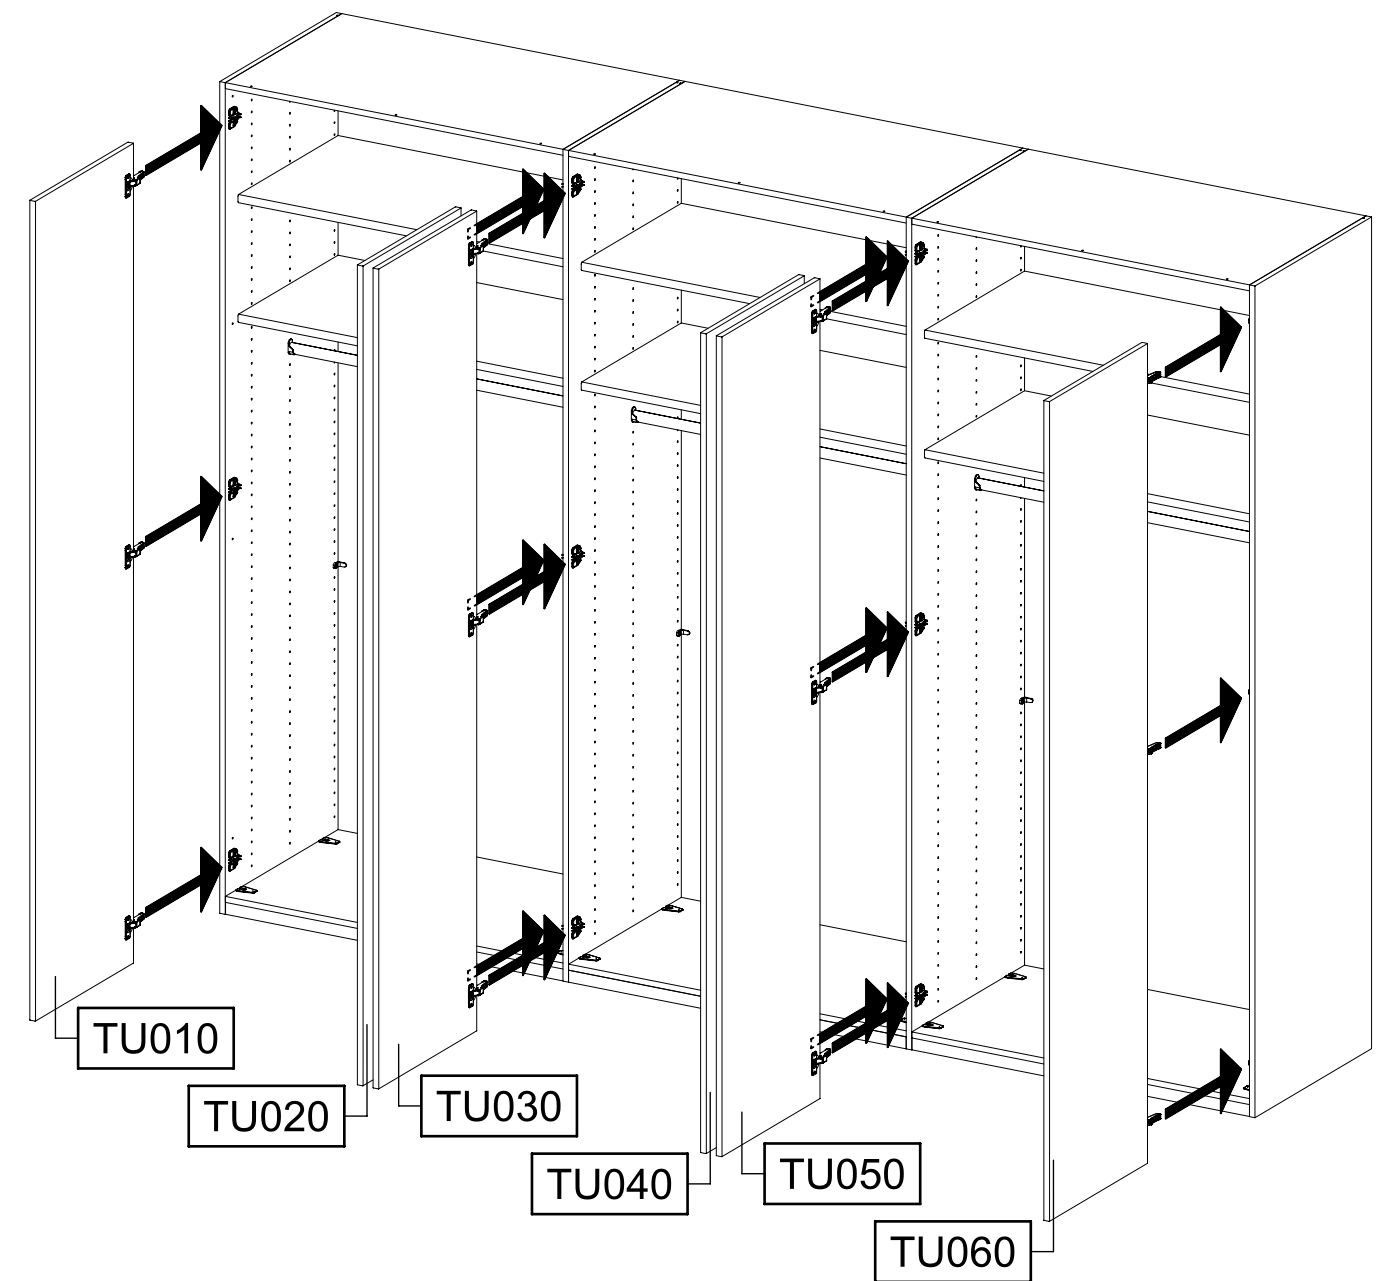


26


0-8x

12








55x16x6,2

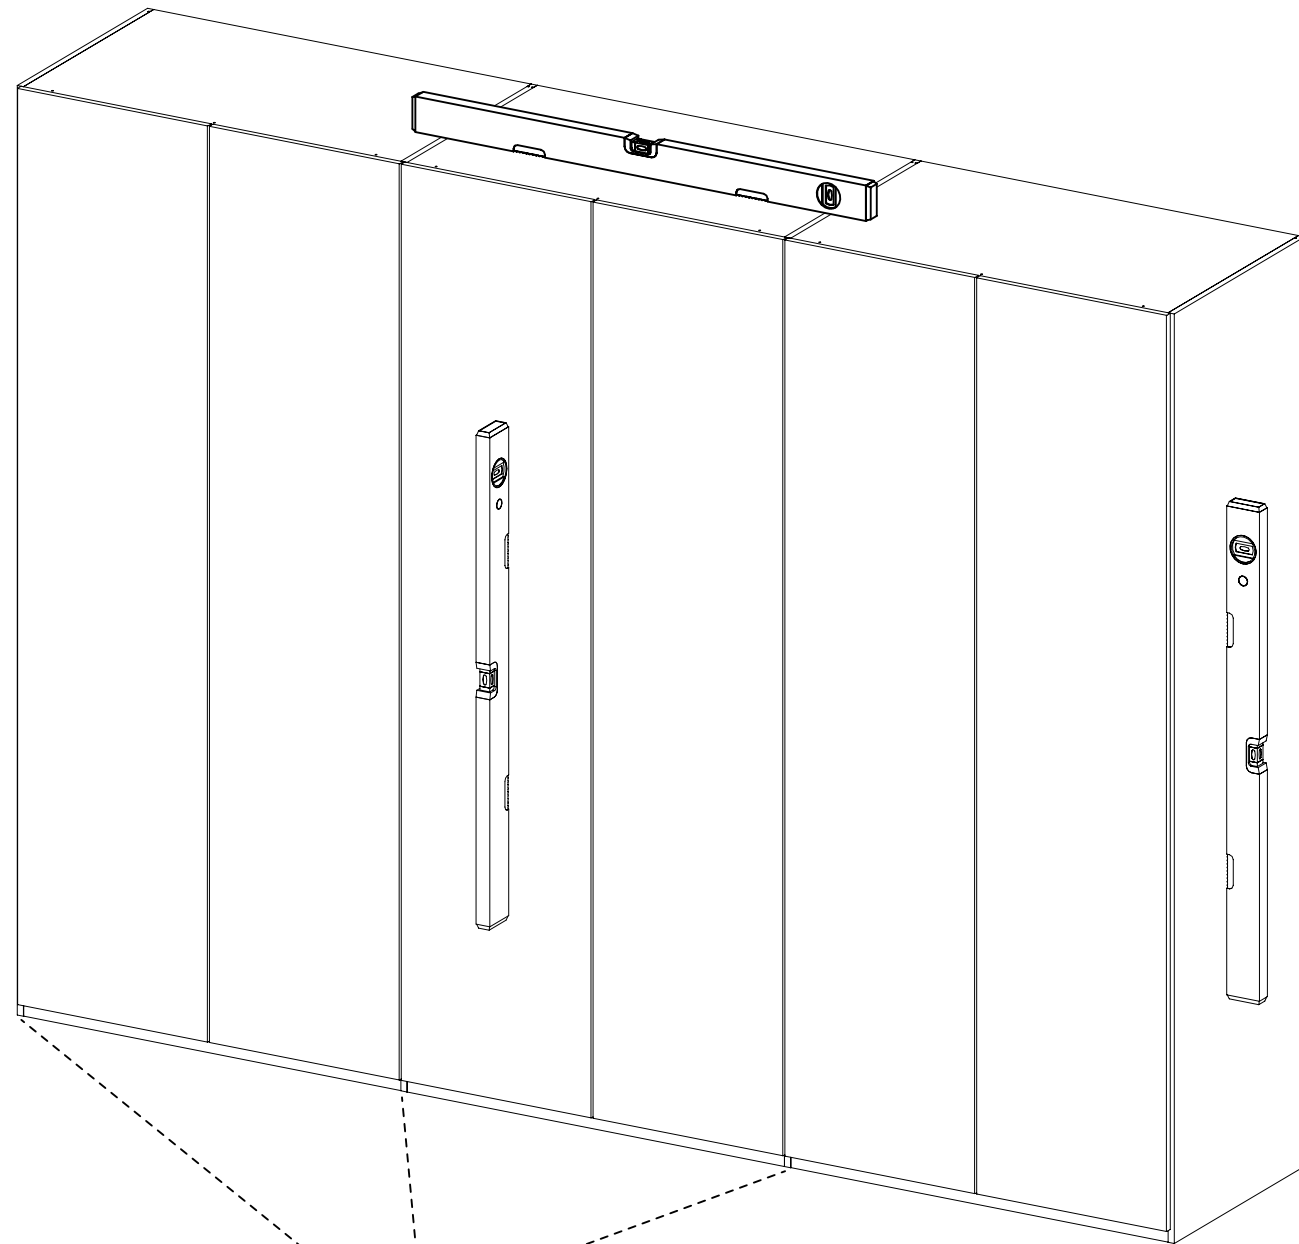

12

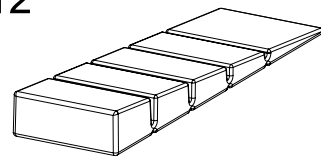

27

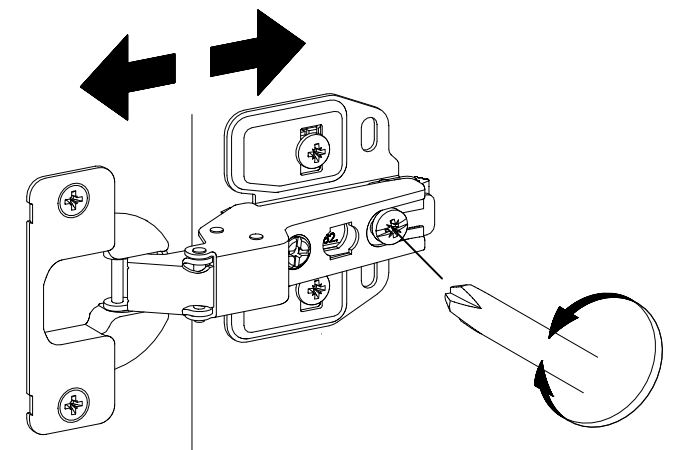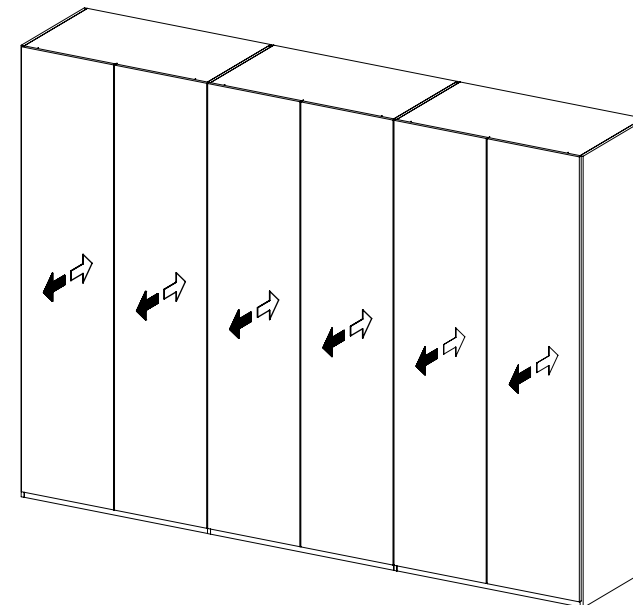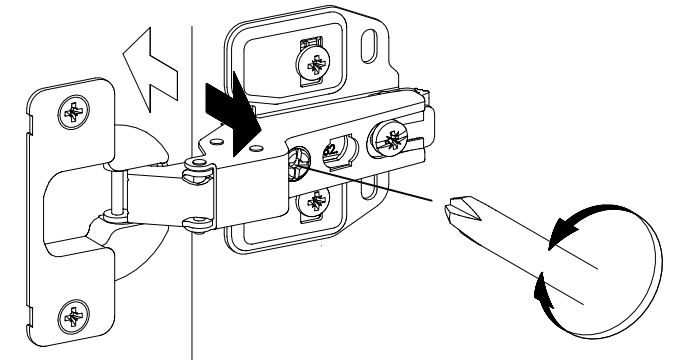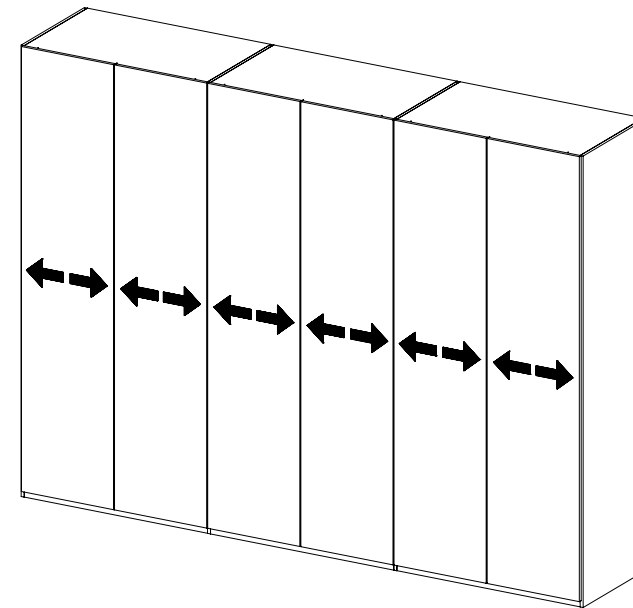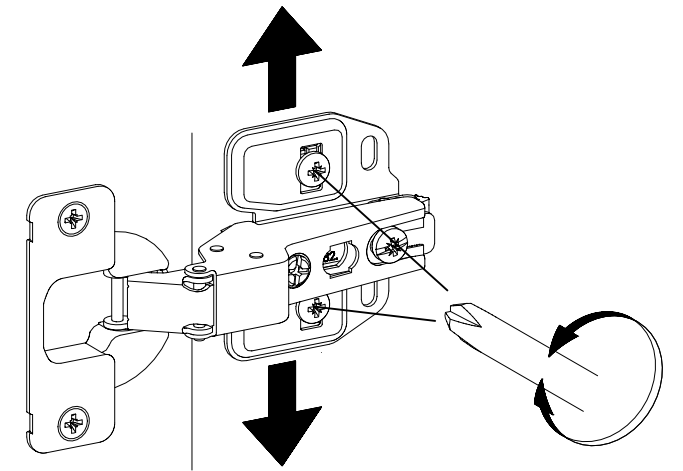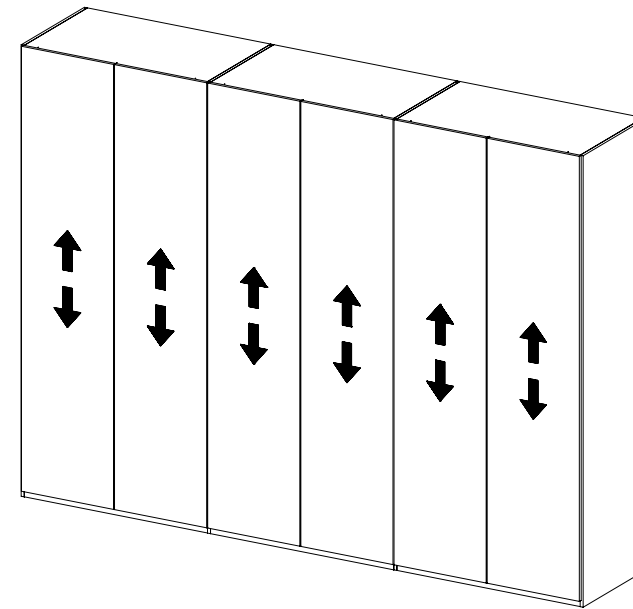


28


36-48x

621

4x13




1291

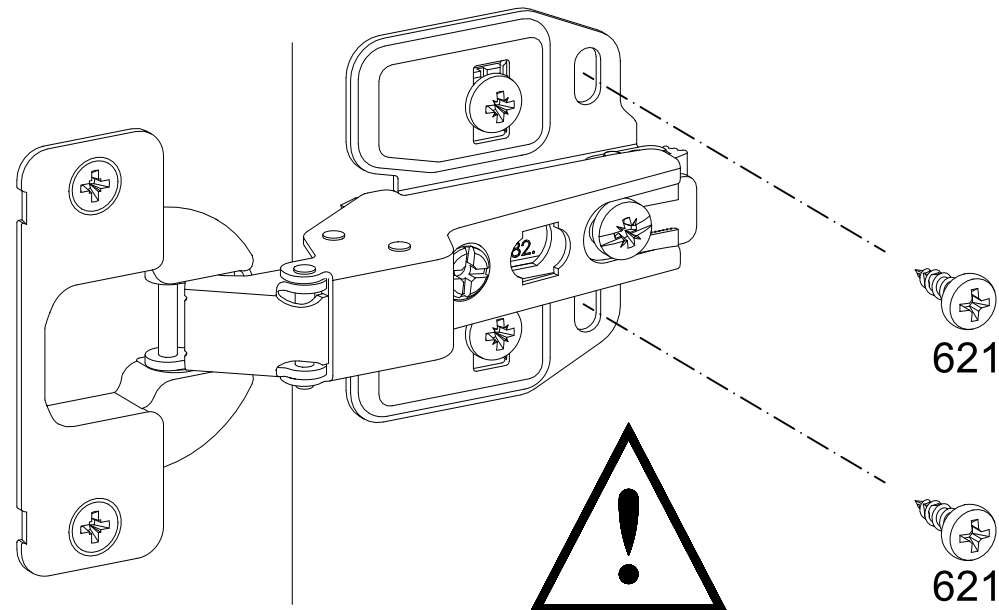

29

2x

68



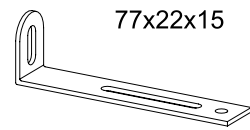





77x22x15

4x

201

4x15

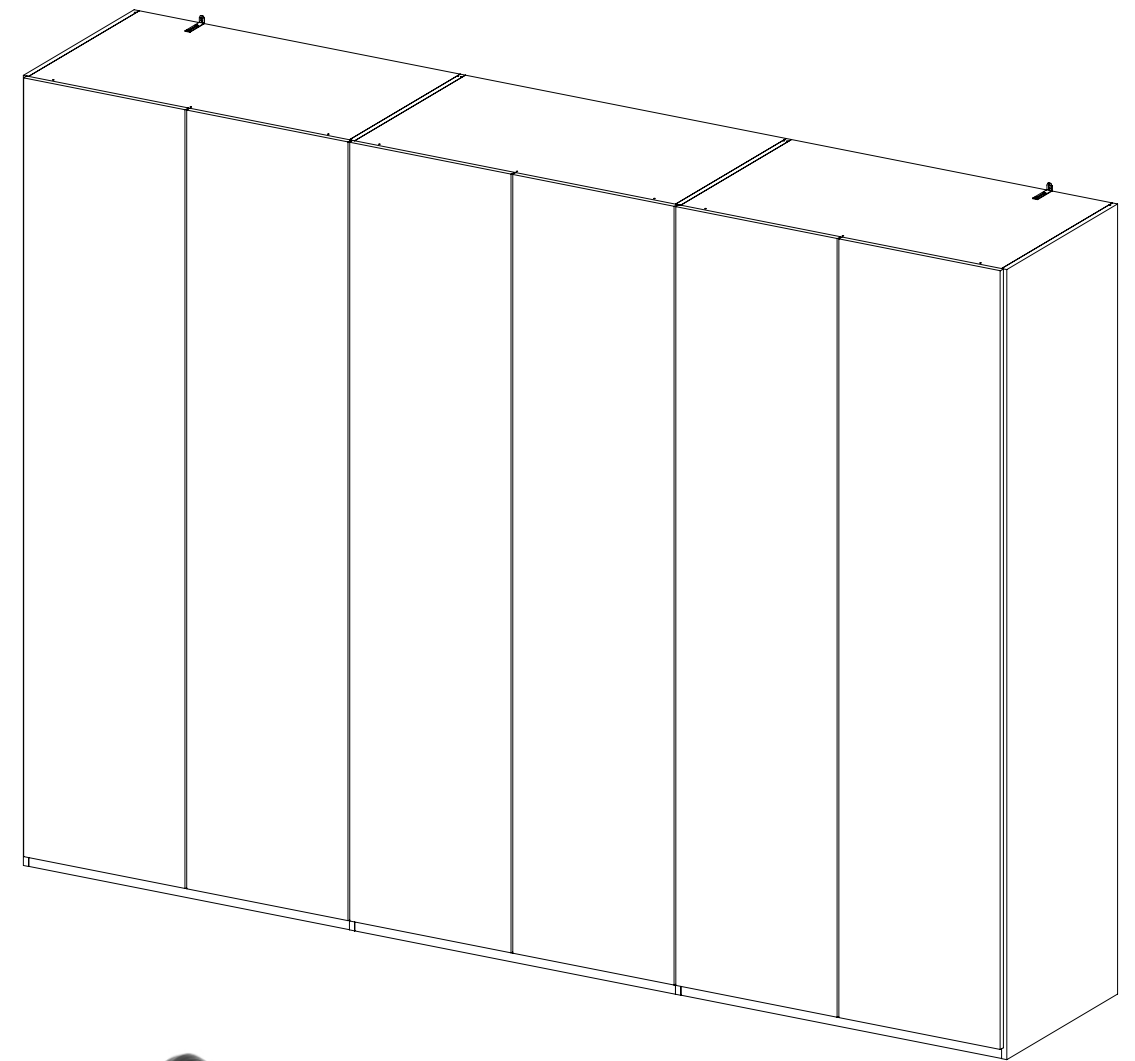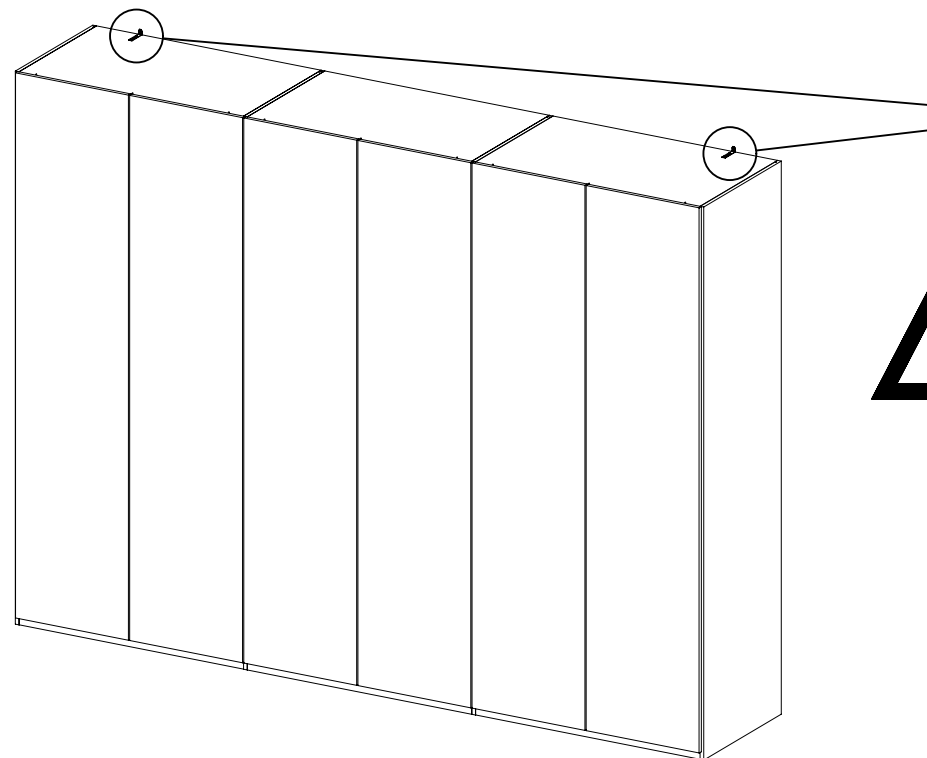



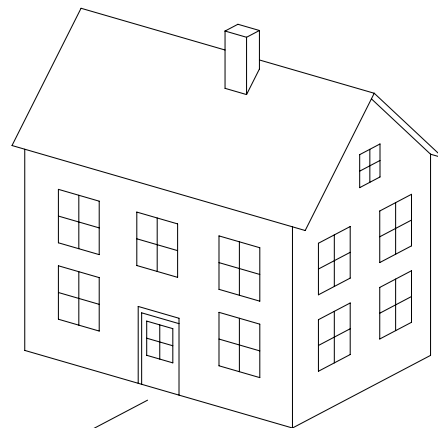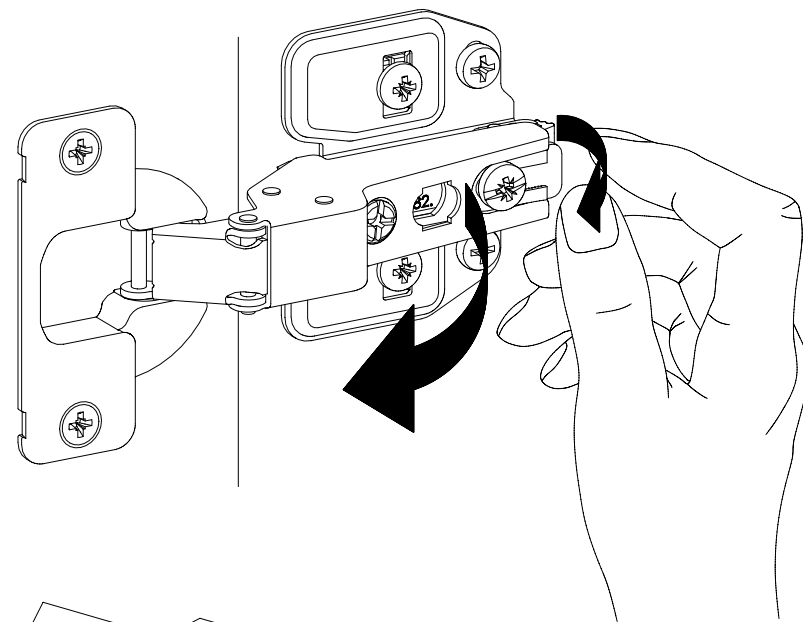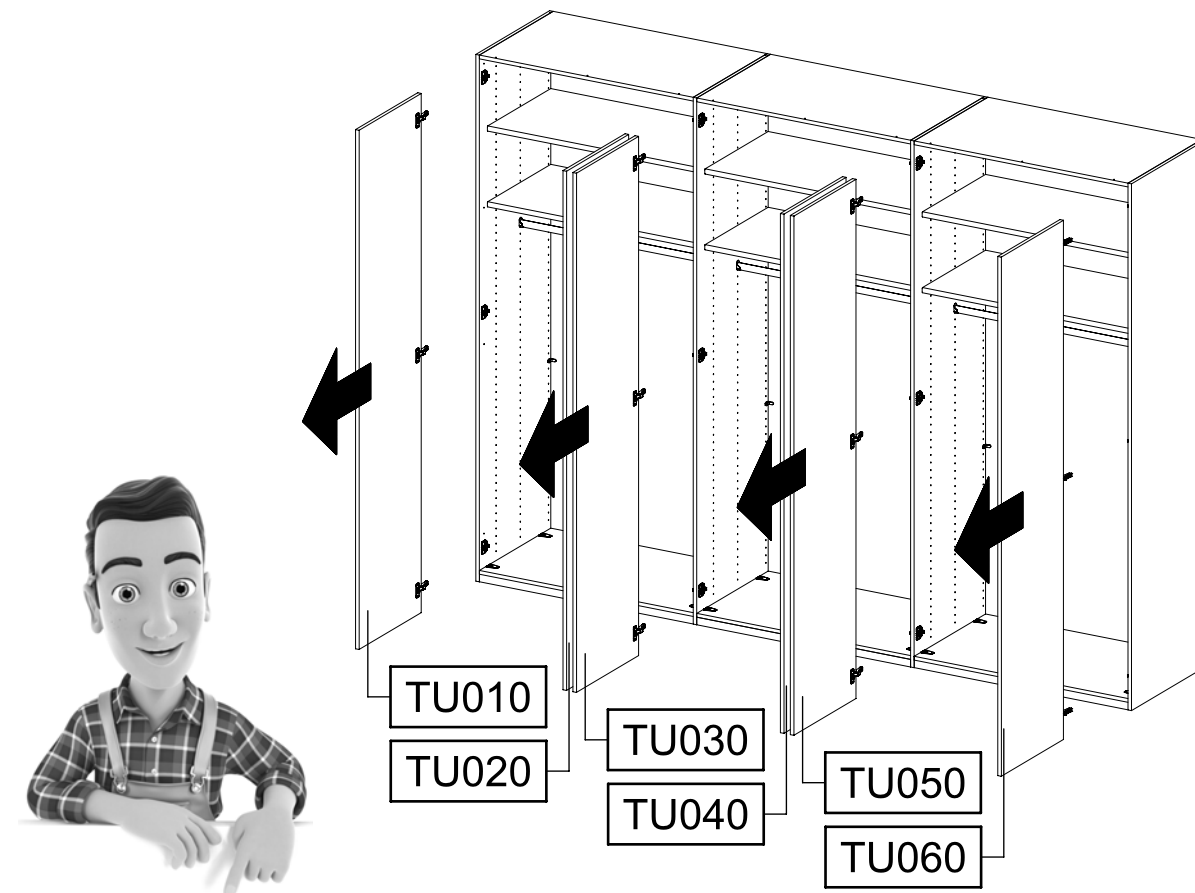


1.

ME190_02


rauch

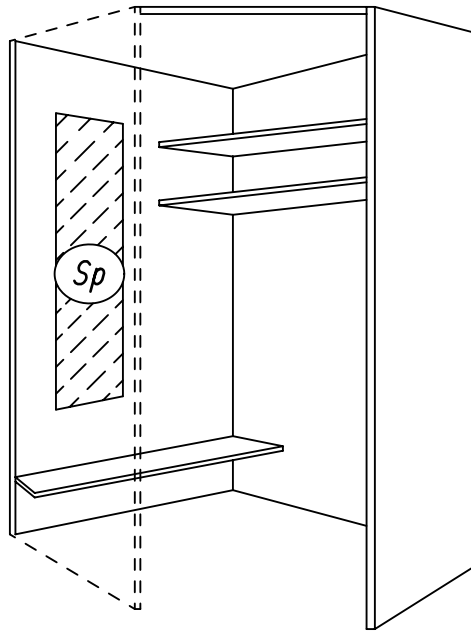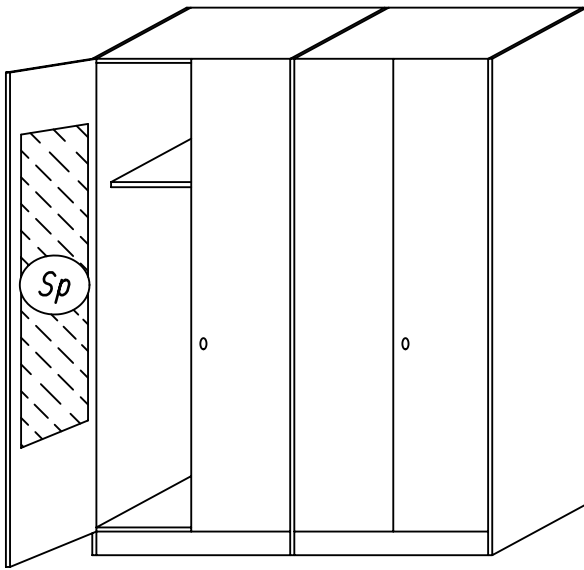

637




492




3x15


1

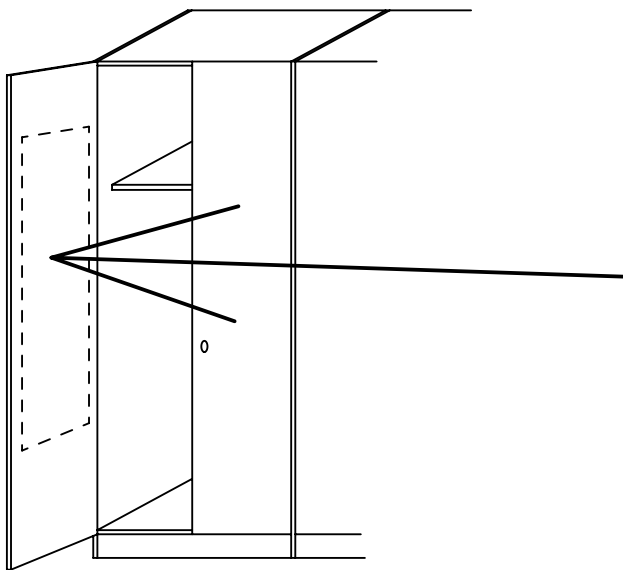


2

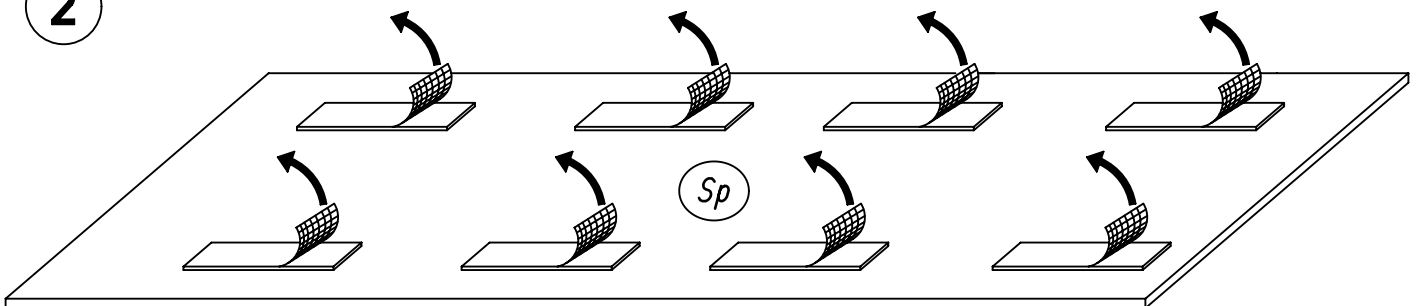

3

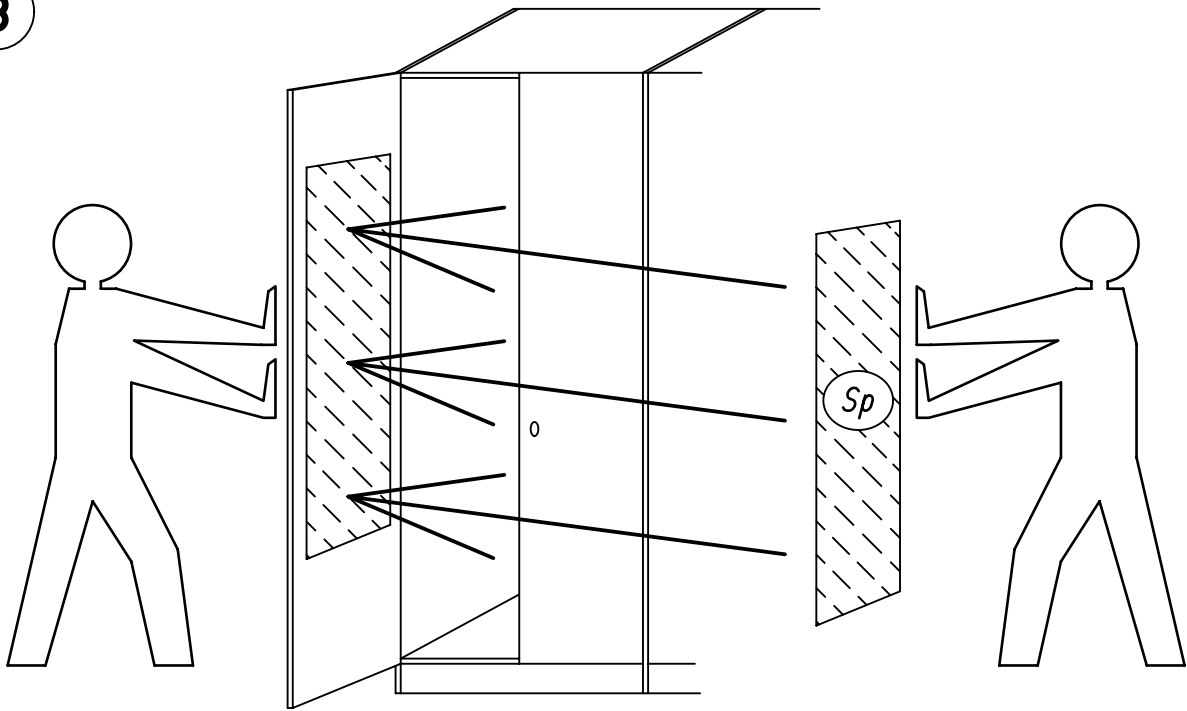


4

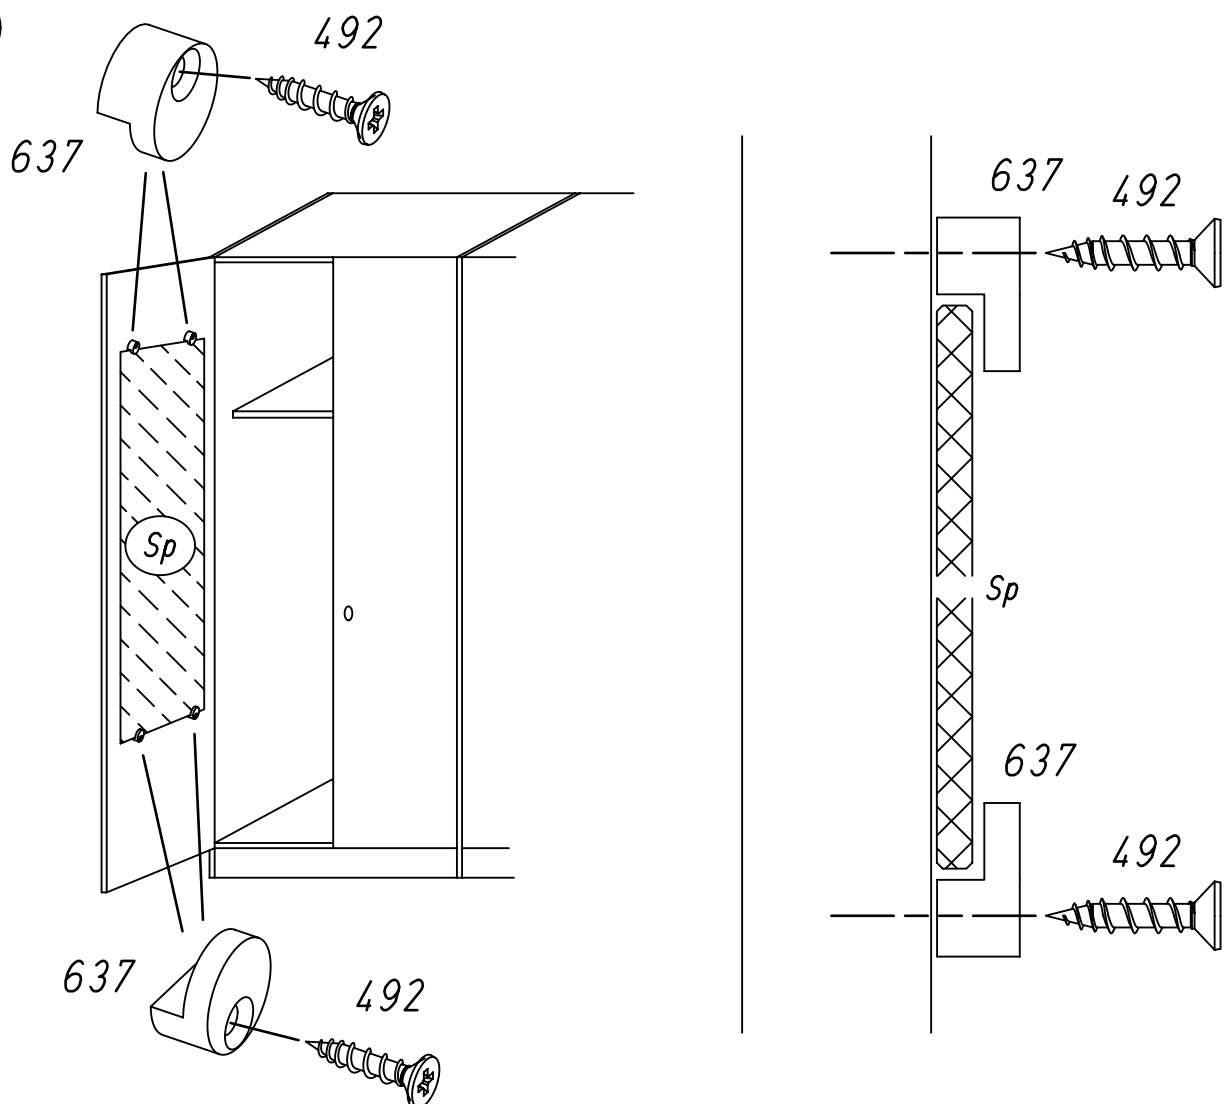



Montageanleitung / Mounting Instruction – Nexis für Nexis Bänder / Nexis for Nexis hinges

Zuerst Türeinrichtungen vornehmen / Make door adjustments first



1

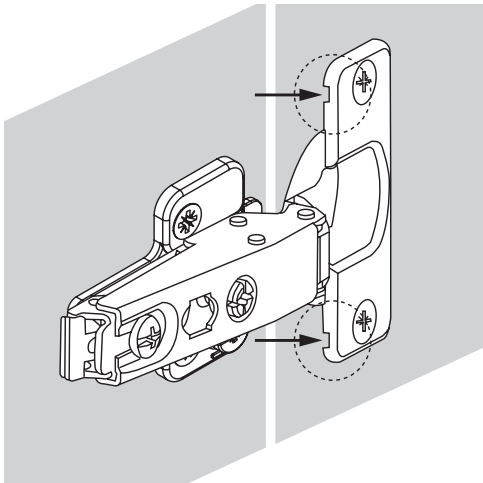



2

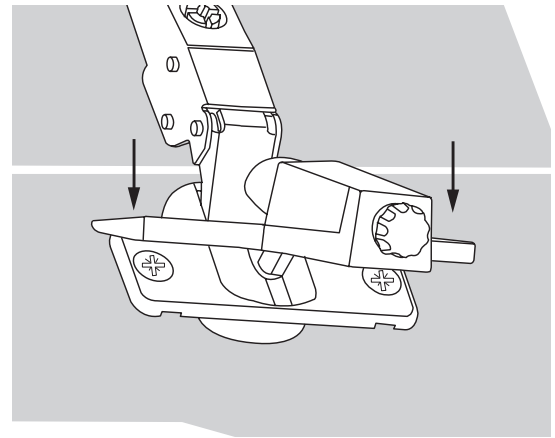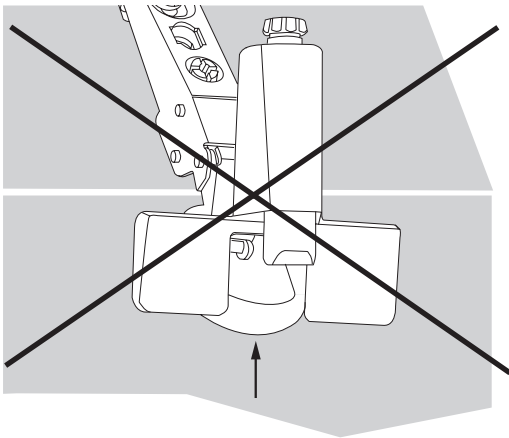


3

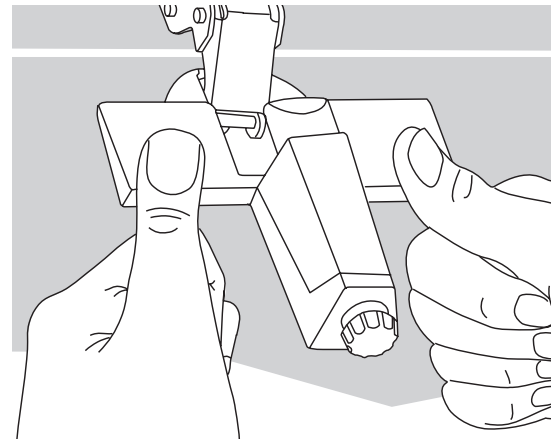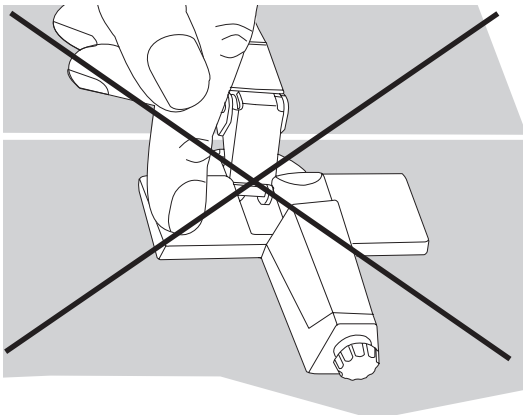

4

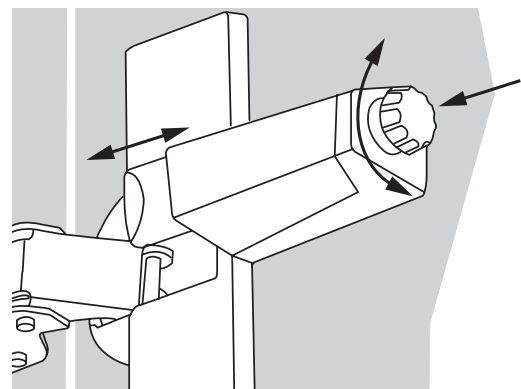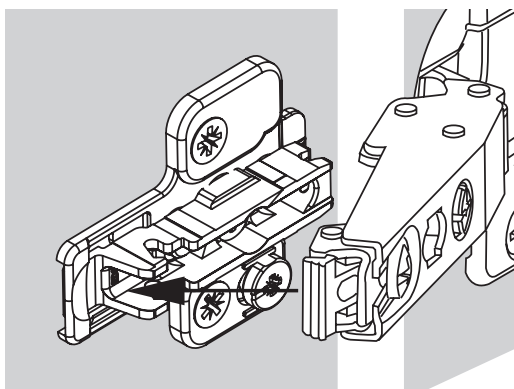

Demontage / Dismounting

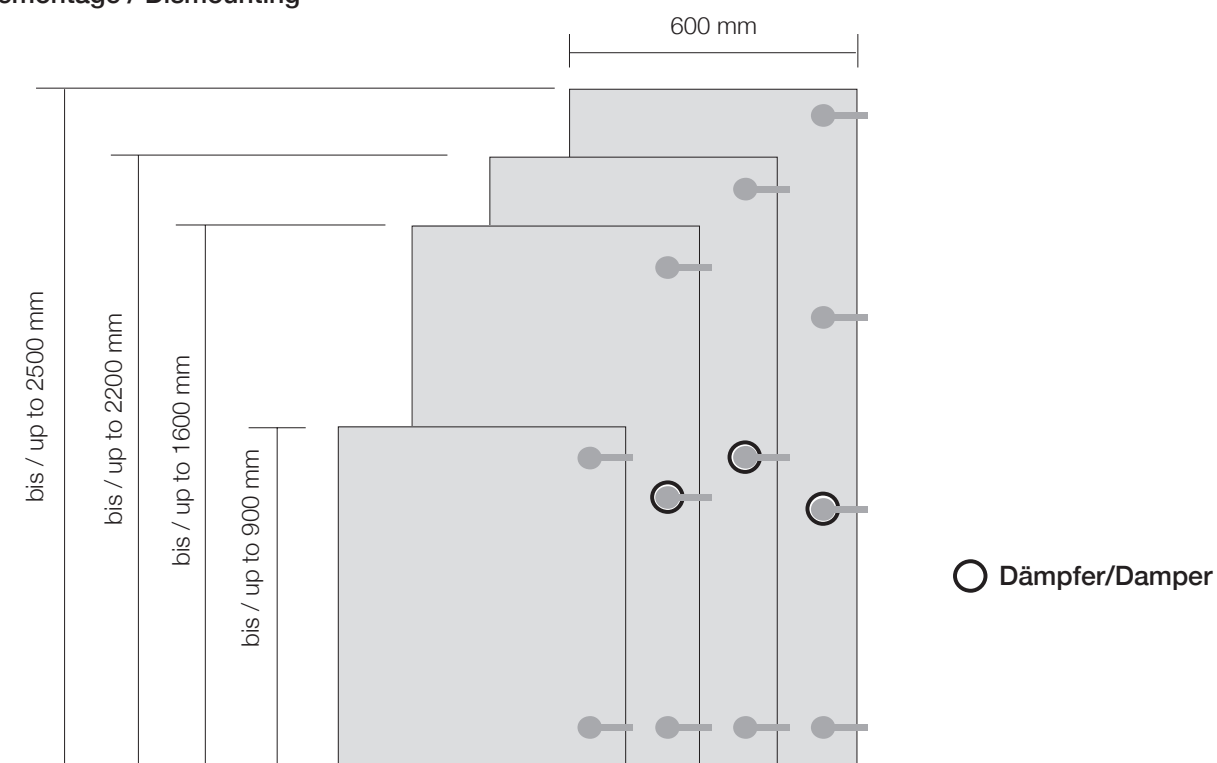

1.

MZ231_01

rauch

5min

GR005

2x

2x

3x

3x

8x

3,5x15

205

1x

1214

1x

1215

X mm



X mm

X mm




2.

1



GR005

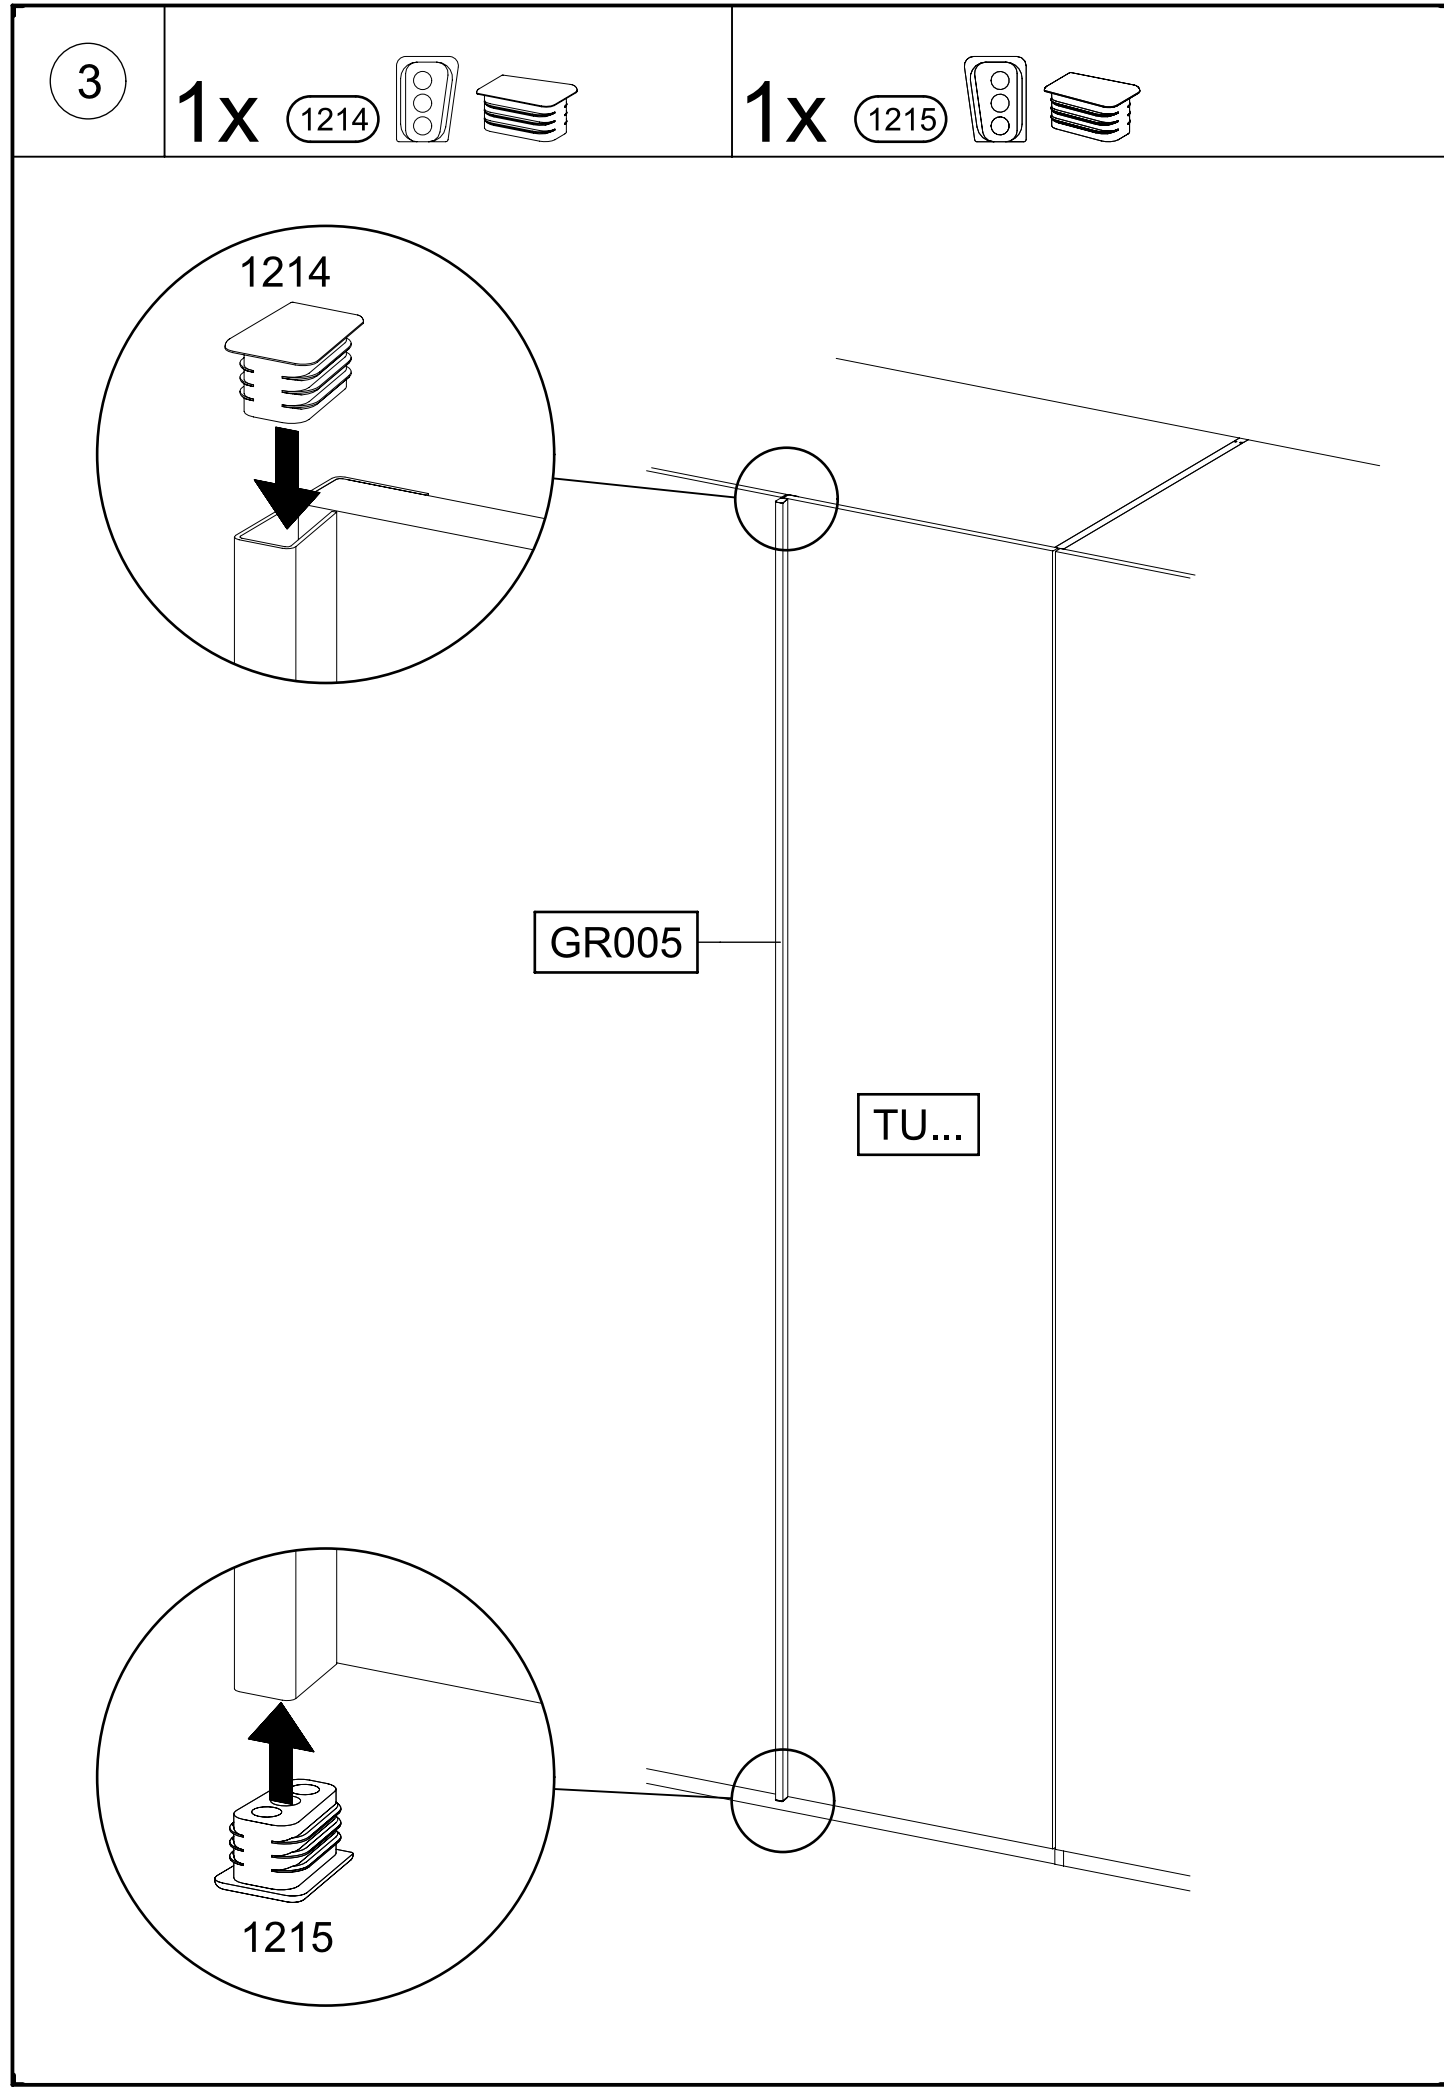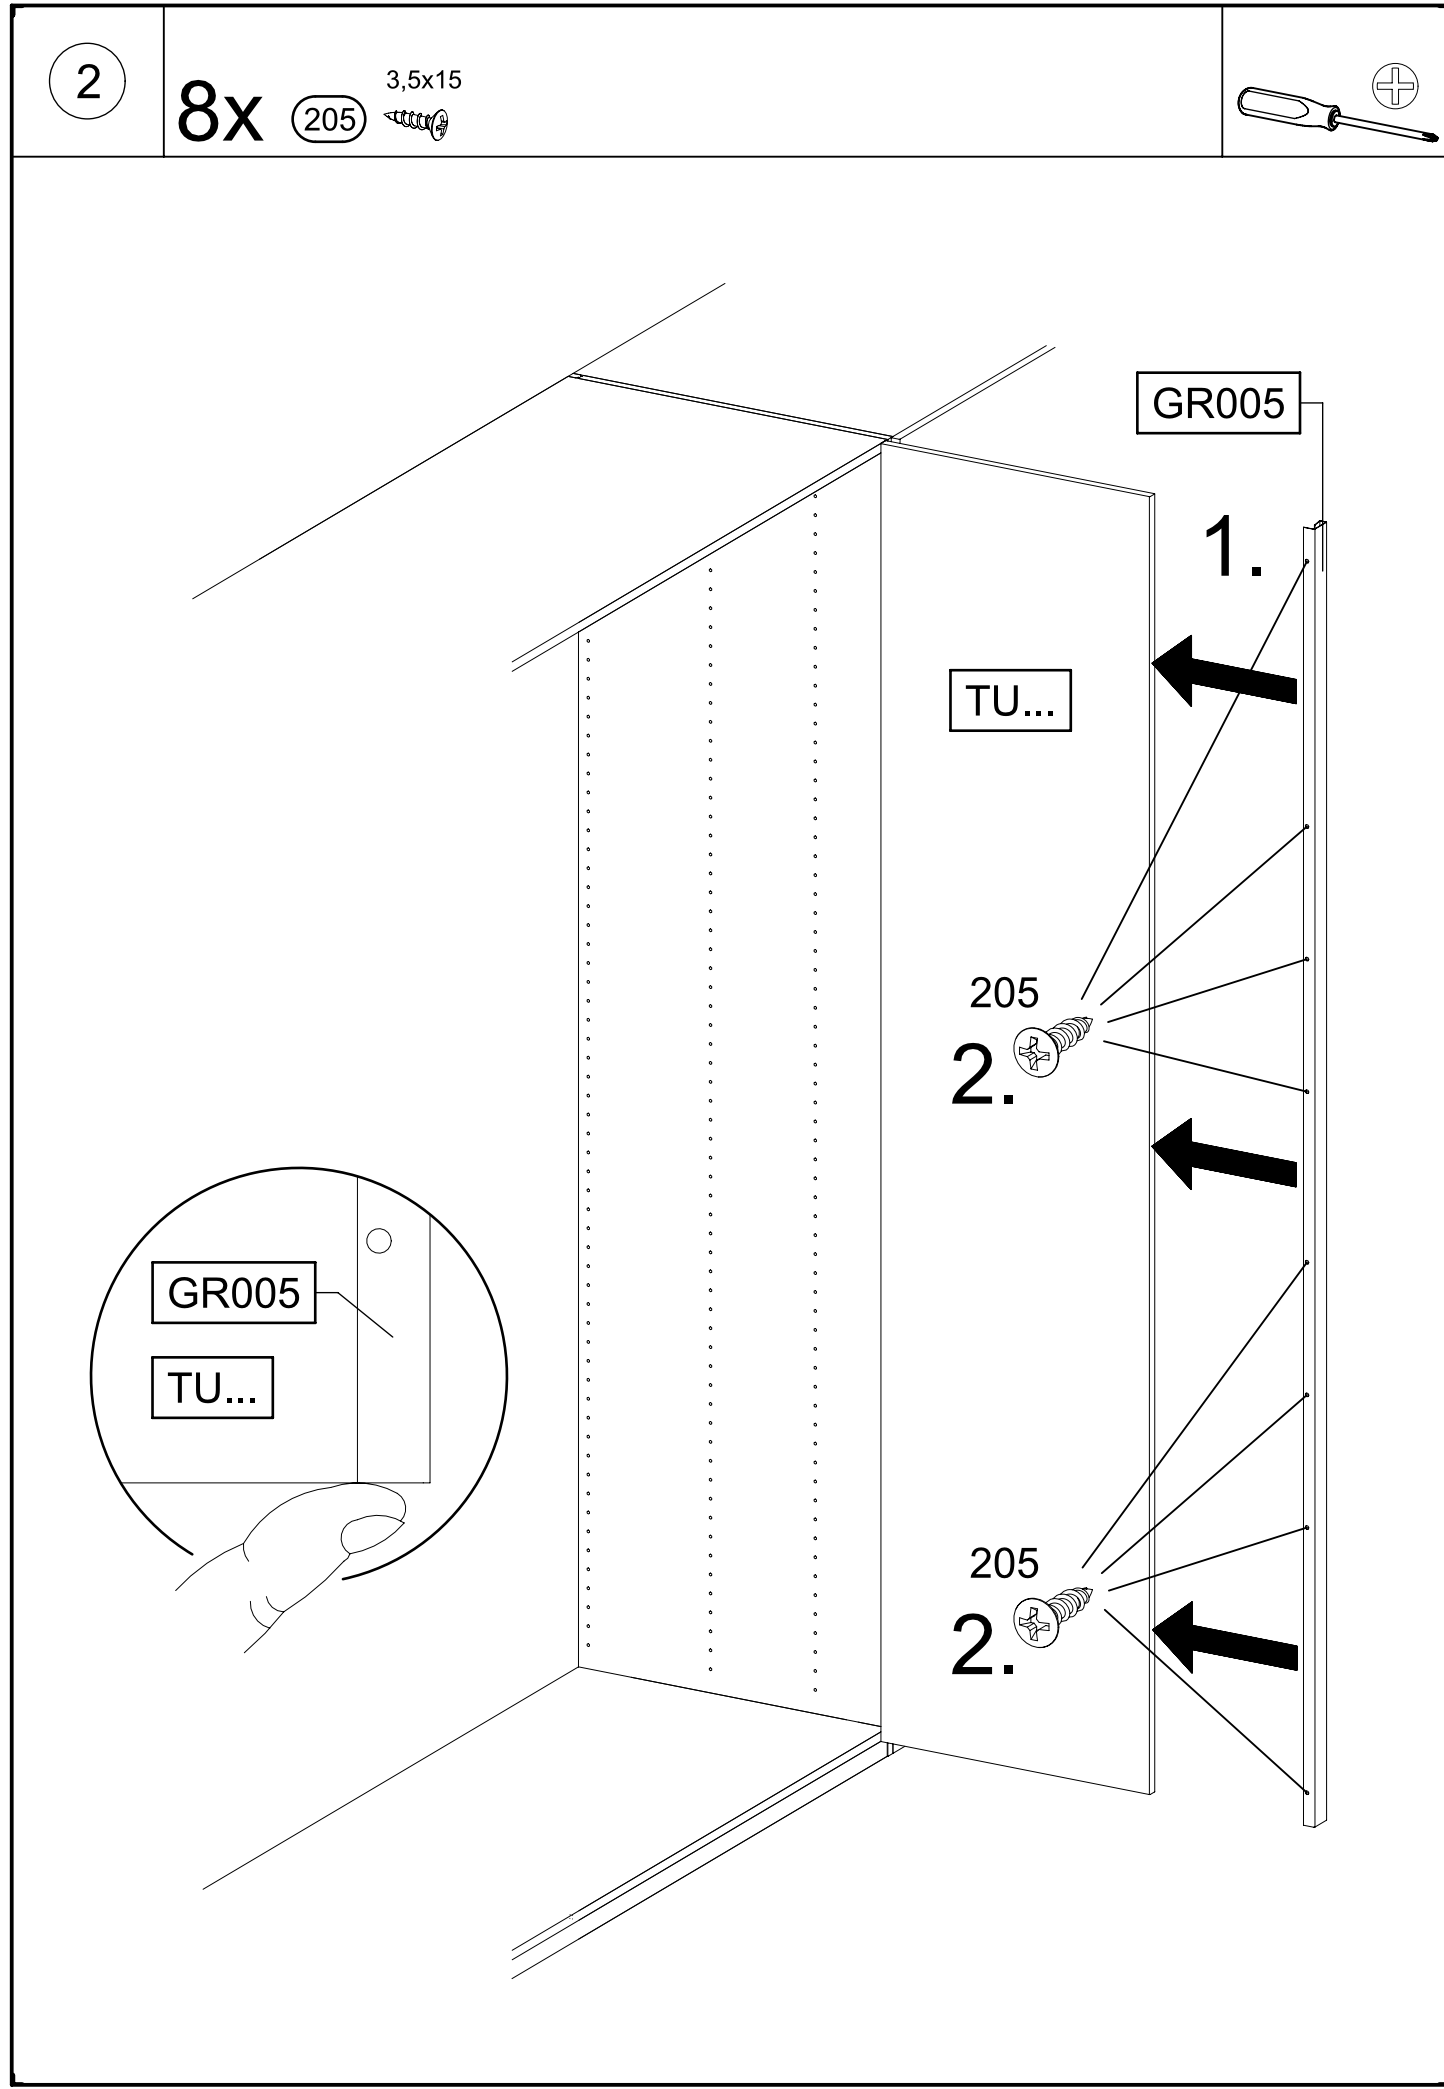



1089

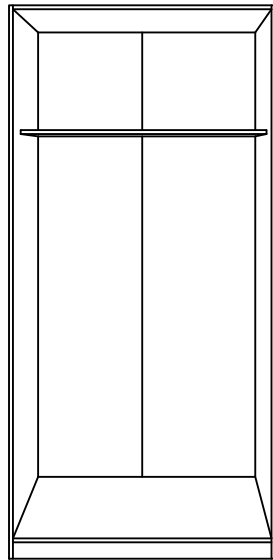



1

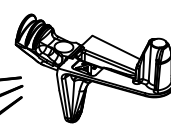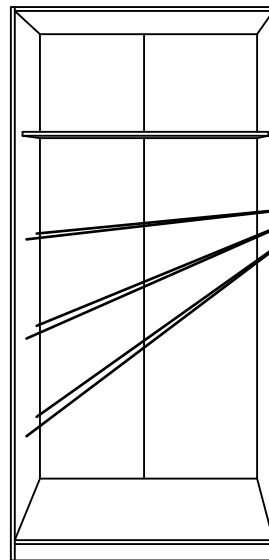

1089

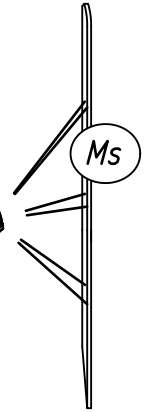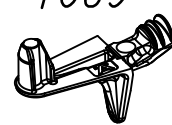

2

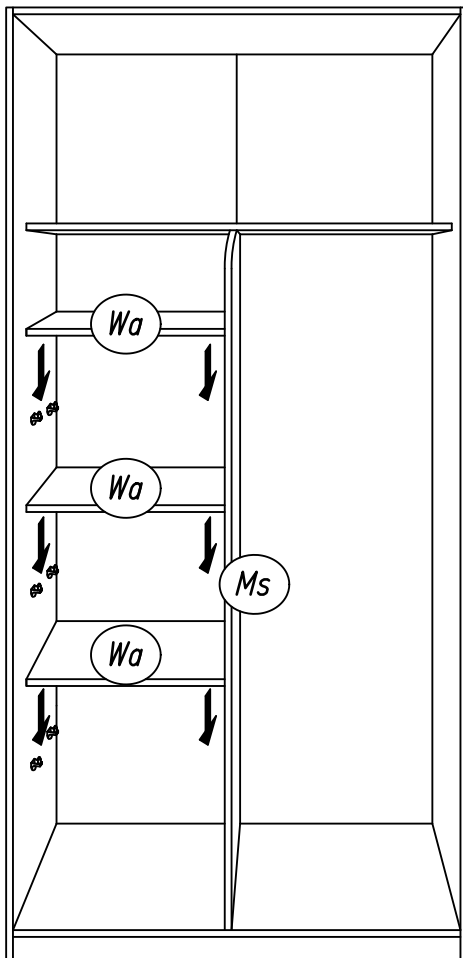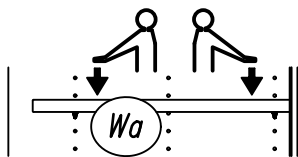

3

