

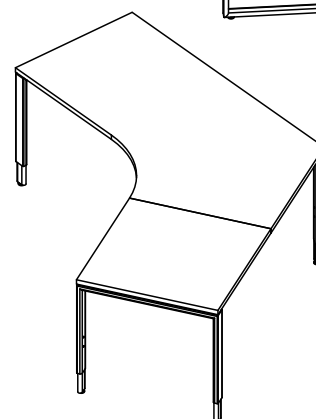
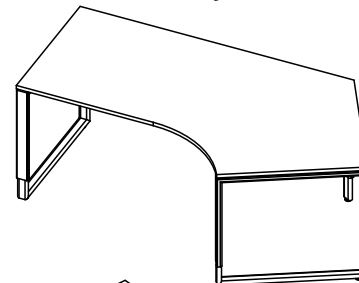
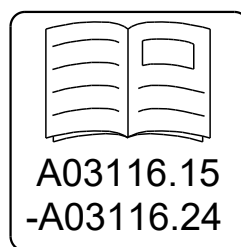
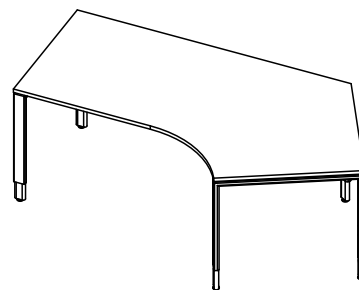
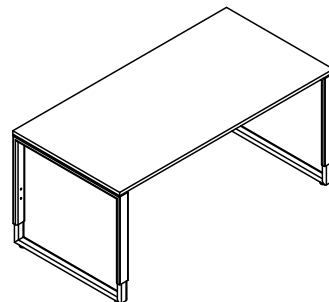
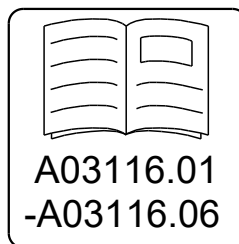
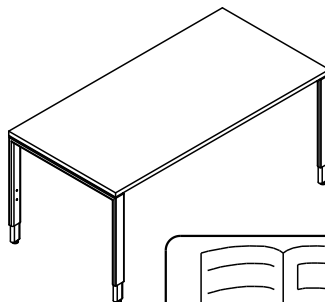
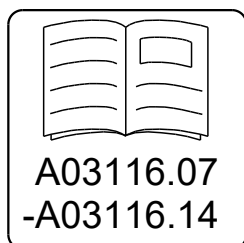
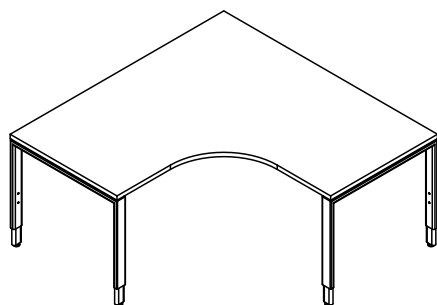


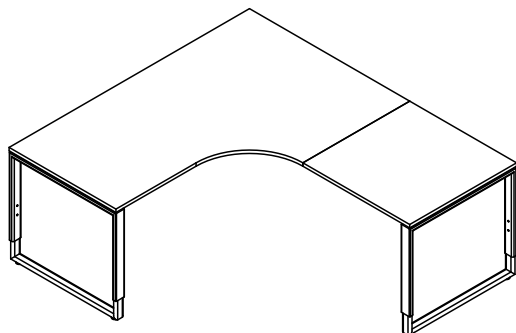

# Montageanleitung A03116.01

Röhr-Bush GmbH & Co.KG  
Dammstraße 32  
33397 Rietberg  
Germany  
Fon +49 (0) 2944 981 198  
Fax +49 (0) 2944 981 310

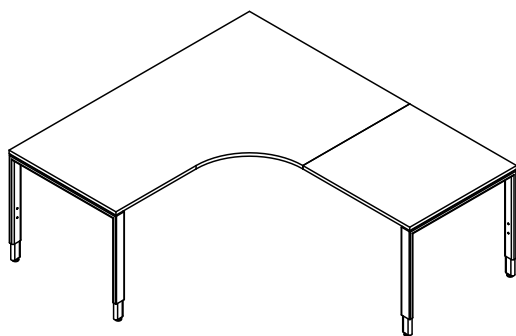


Bitte unbedingt lesen. Bei Nichtbeachtung können wir keine Gewährleistung übernehmen!  
Bitte bewahren Sie diese Montageanleitung für die Produkterkennung (Produktsicherheitsgesetz) und für evtl. spätere Rückfragen (wie z.B. Demontage) auf.  
Bei Weitergabe bzw. Übergabe des Artikels übergeben Sie auch diese Montageanleitung.  
Attention! It is essential to read this. In case of non-compliance we can not accept any liability.  
Please retain these assembly instructions for product identification and all future references i.e. disassembling.  
With all transfers or deliveries of this item these assembly instructions should always be forwarded.

# Montageanleitung A03116.02

02 961575


8 x



M8 x 20

02 960029


6 x

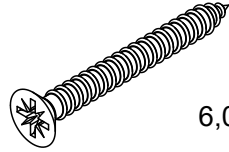

6,0 x 55

02 096274


1 x

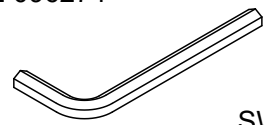





SW 4

02 096548


1 x

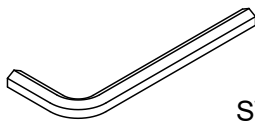



SW 5

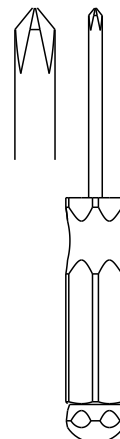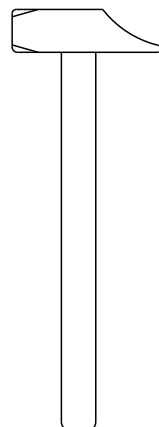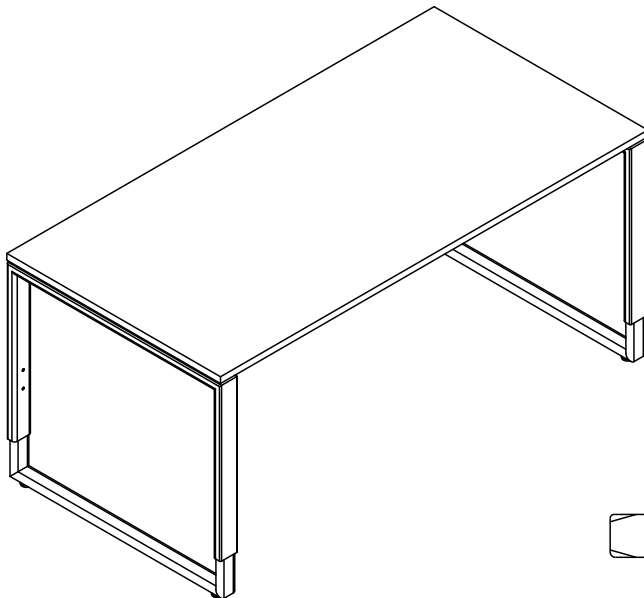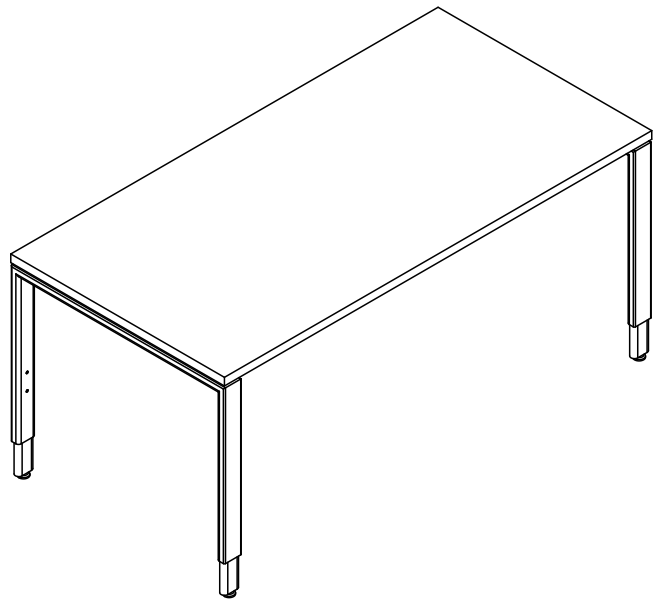


# Montageanleitung A03116.03

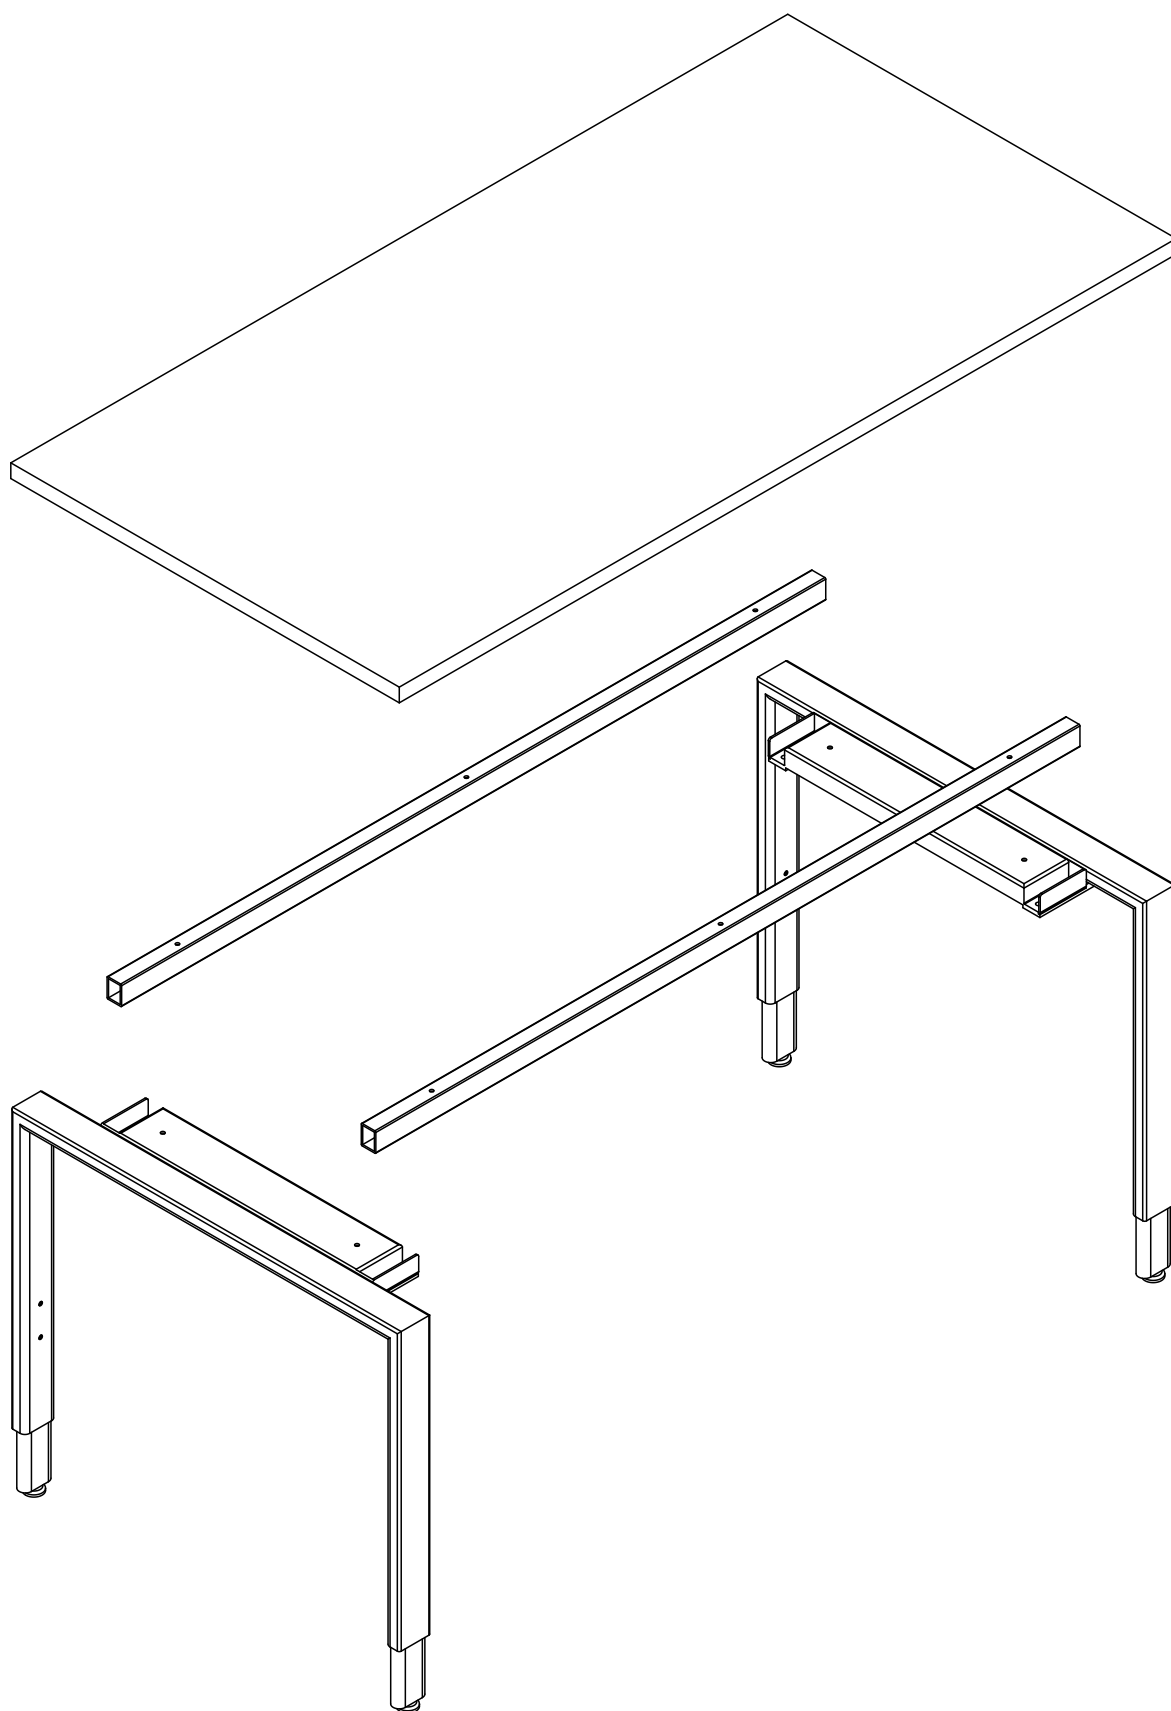

# Montageanleitung A03116.04

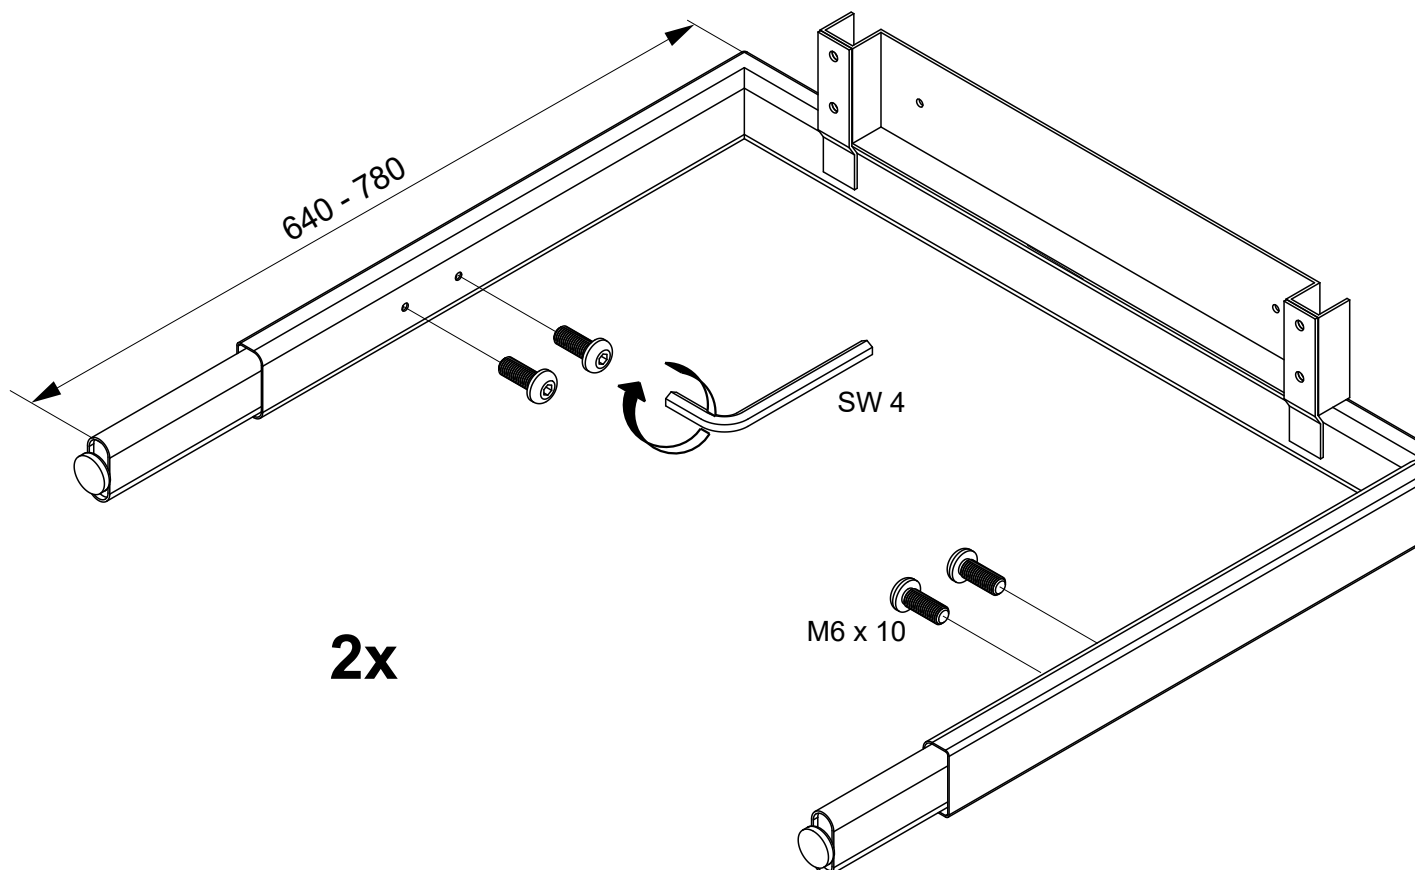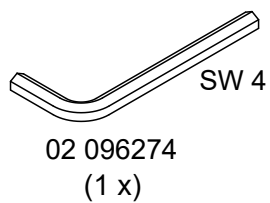


# Montageanleitung A03116.05




M8 x 20

02 961575  
(8 x)




SW 5


02 096548  
(1 x)

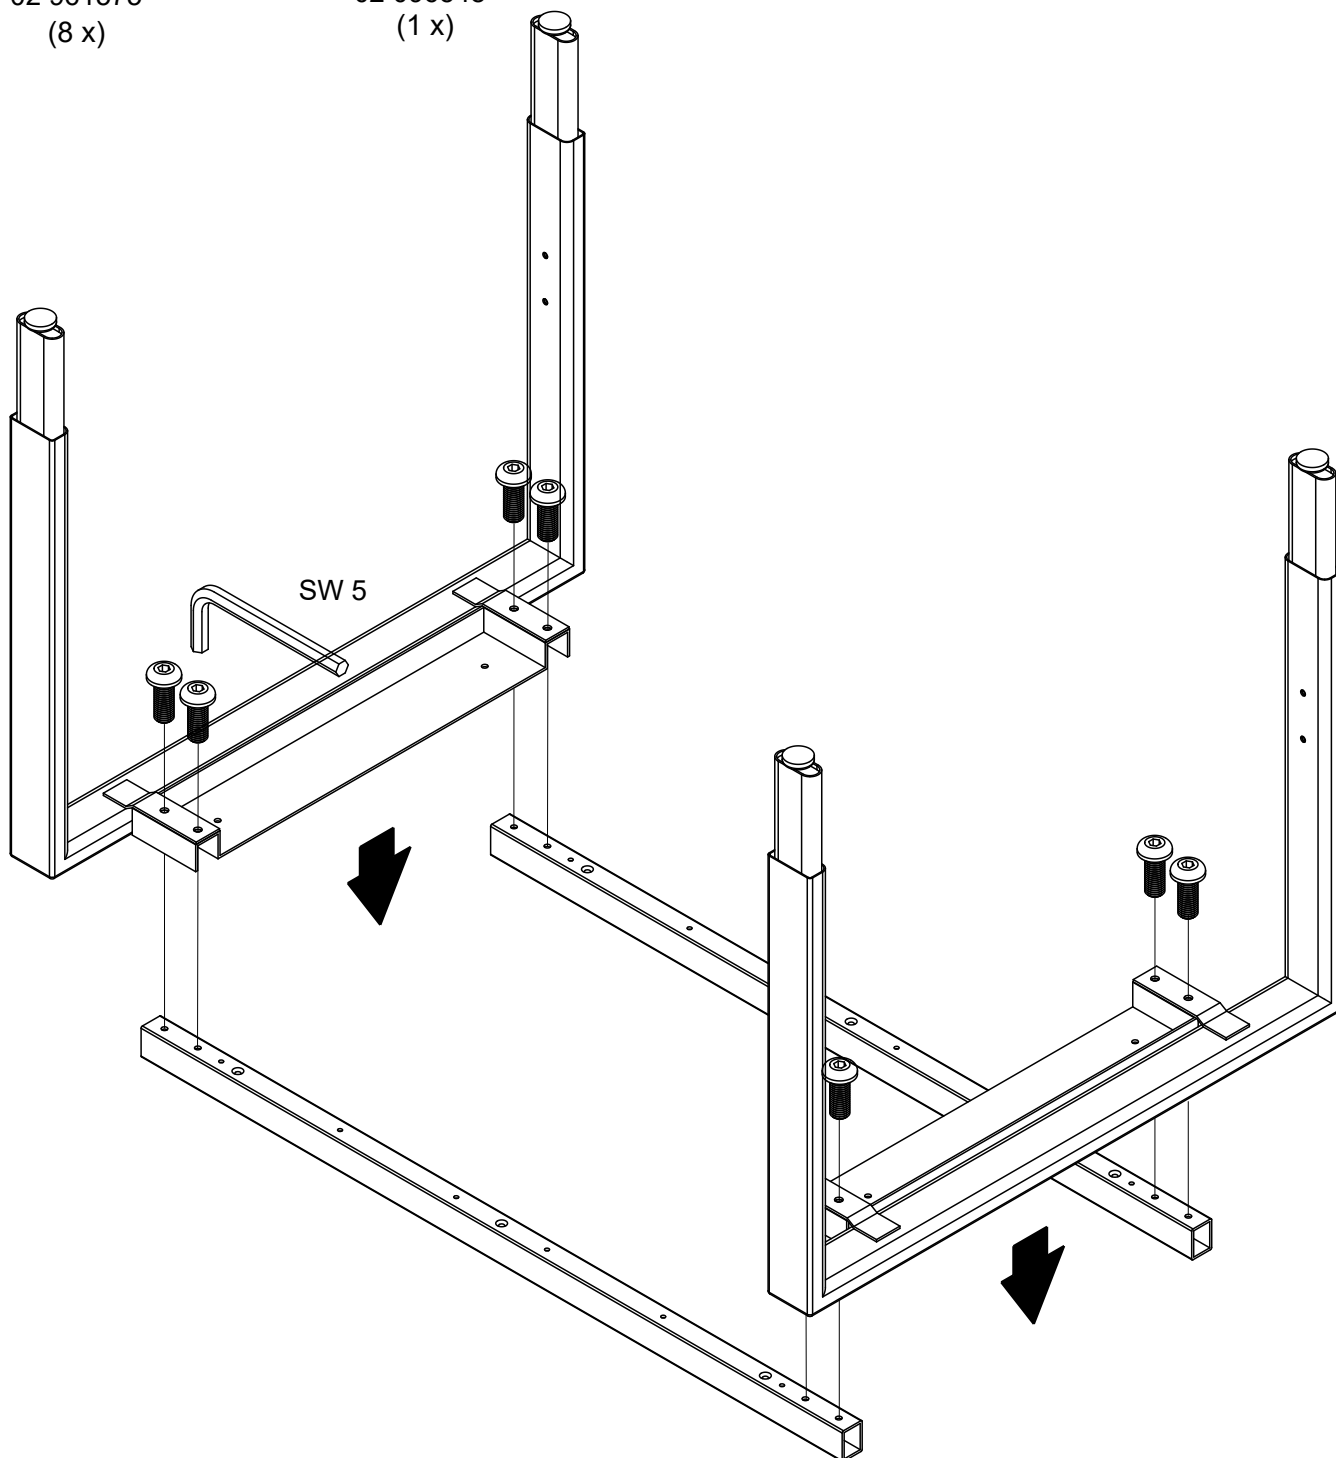

# Montageanleitung A03116.06

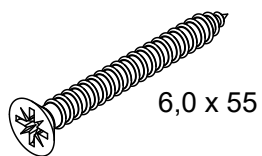


02 960029  
(6 x)

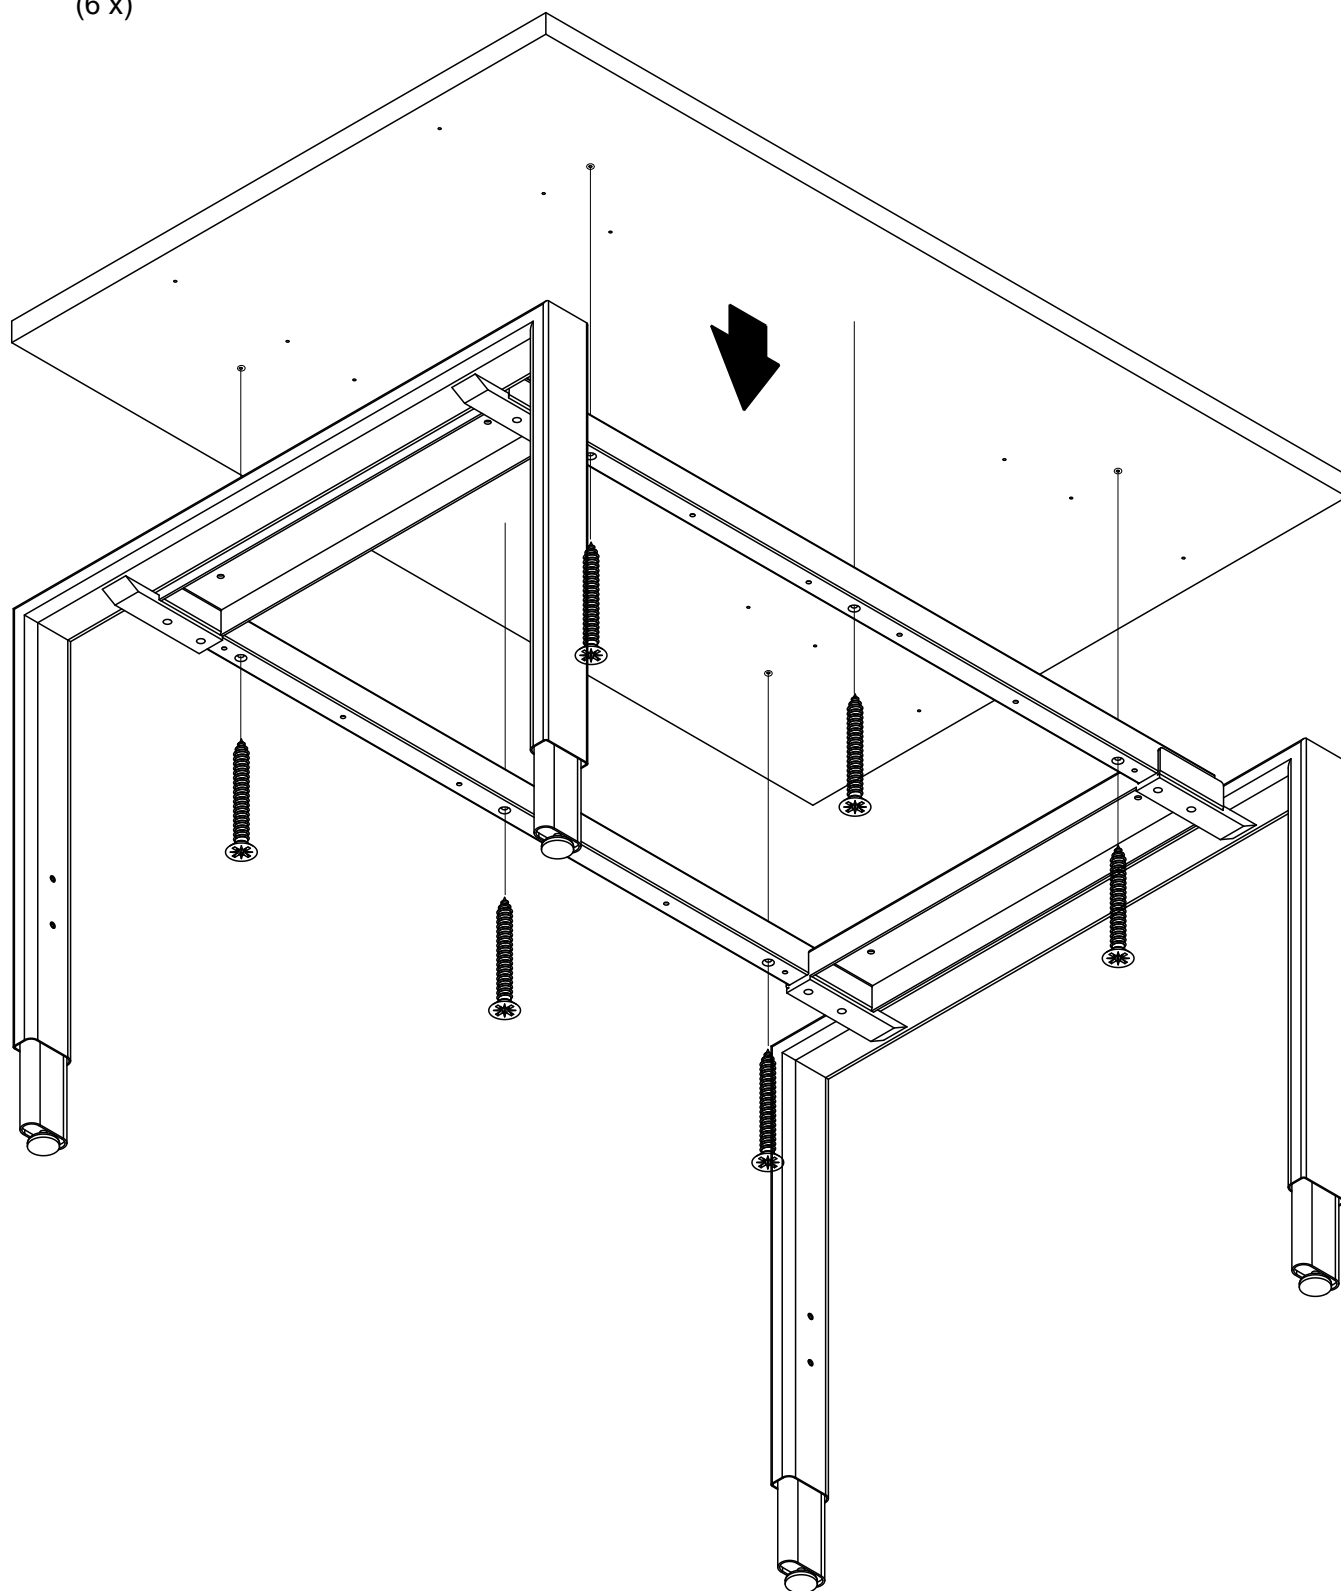

# Montageanleitung A03116.07

02 961575


20 x



M8 x 20

02 960029


17 x

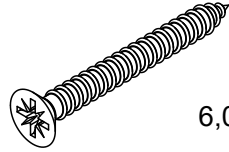

6,0 x 55

02 096274


1 x

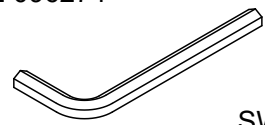






SW 4

02 096548


1 x

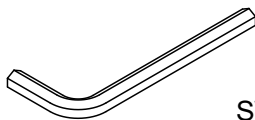

SW 5

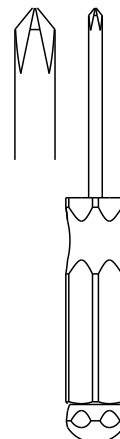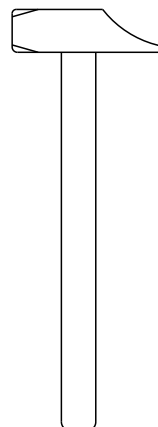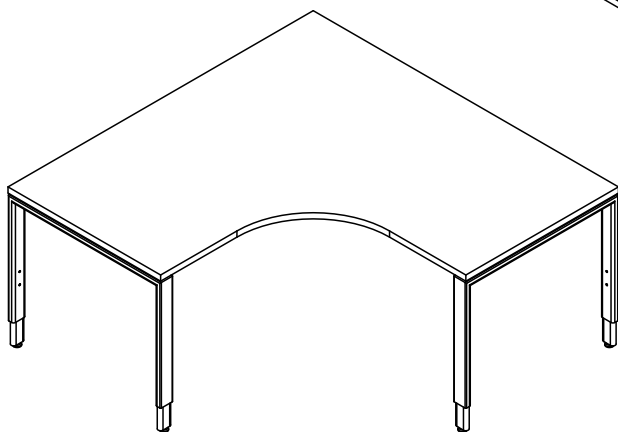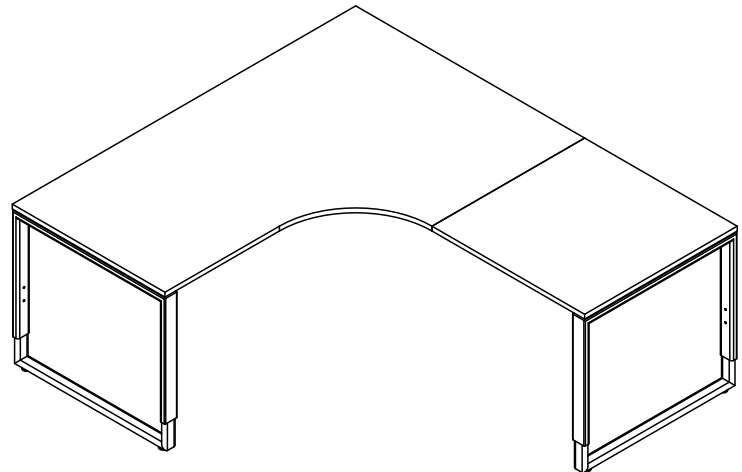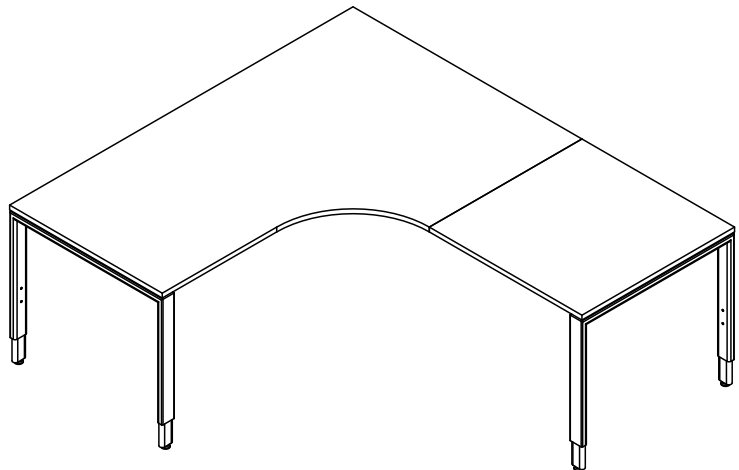


# Montageanleitung A03116.08


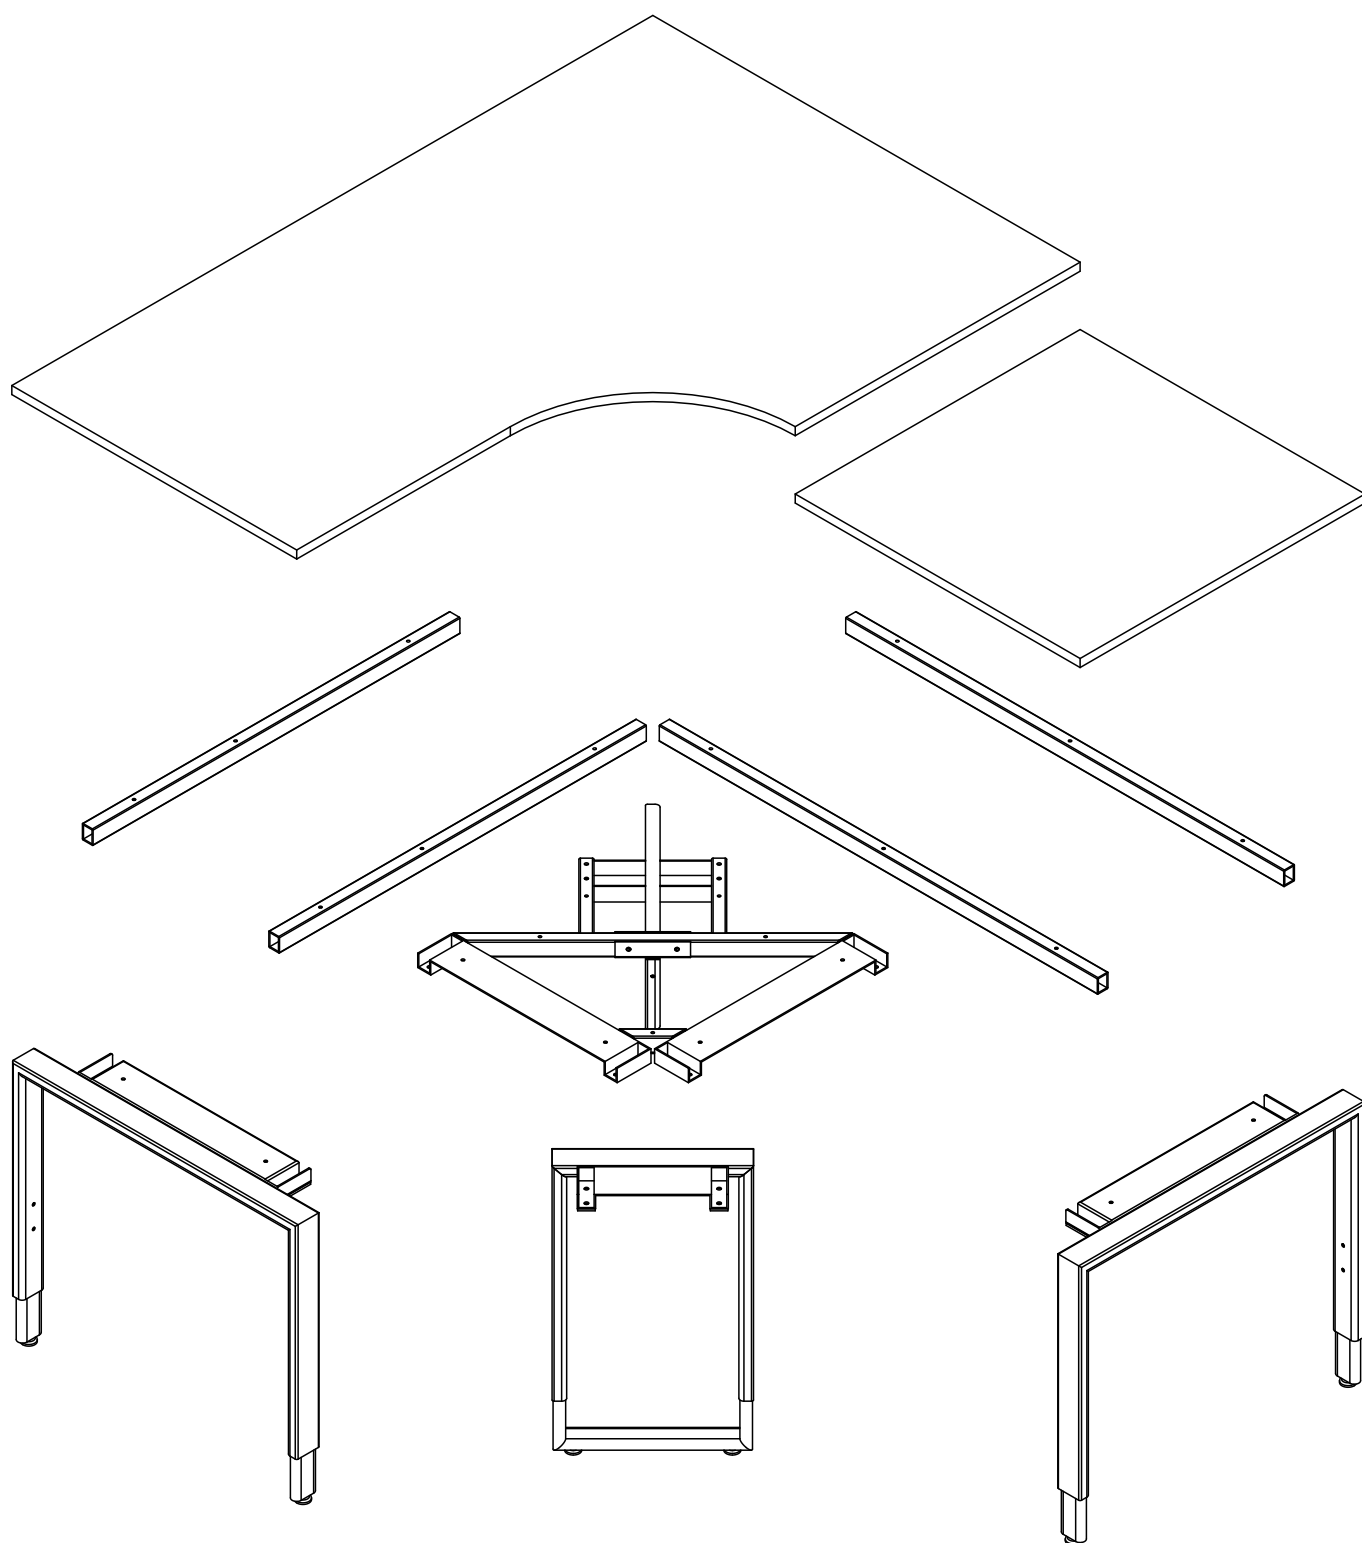





# Montageanleitung A03116.09

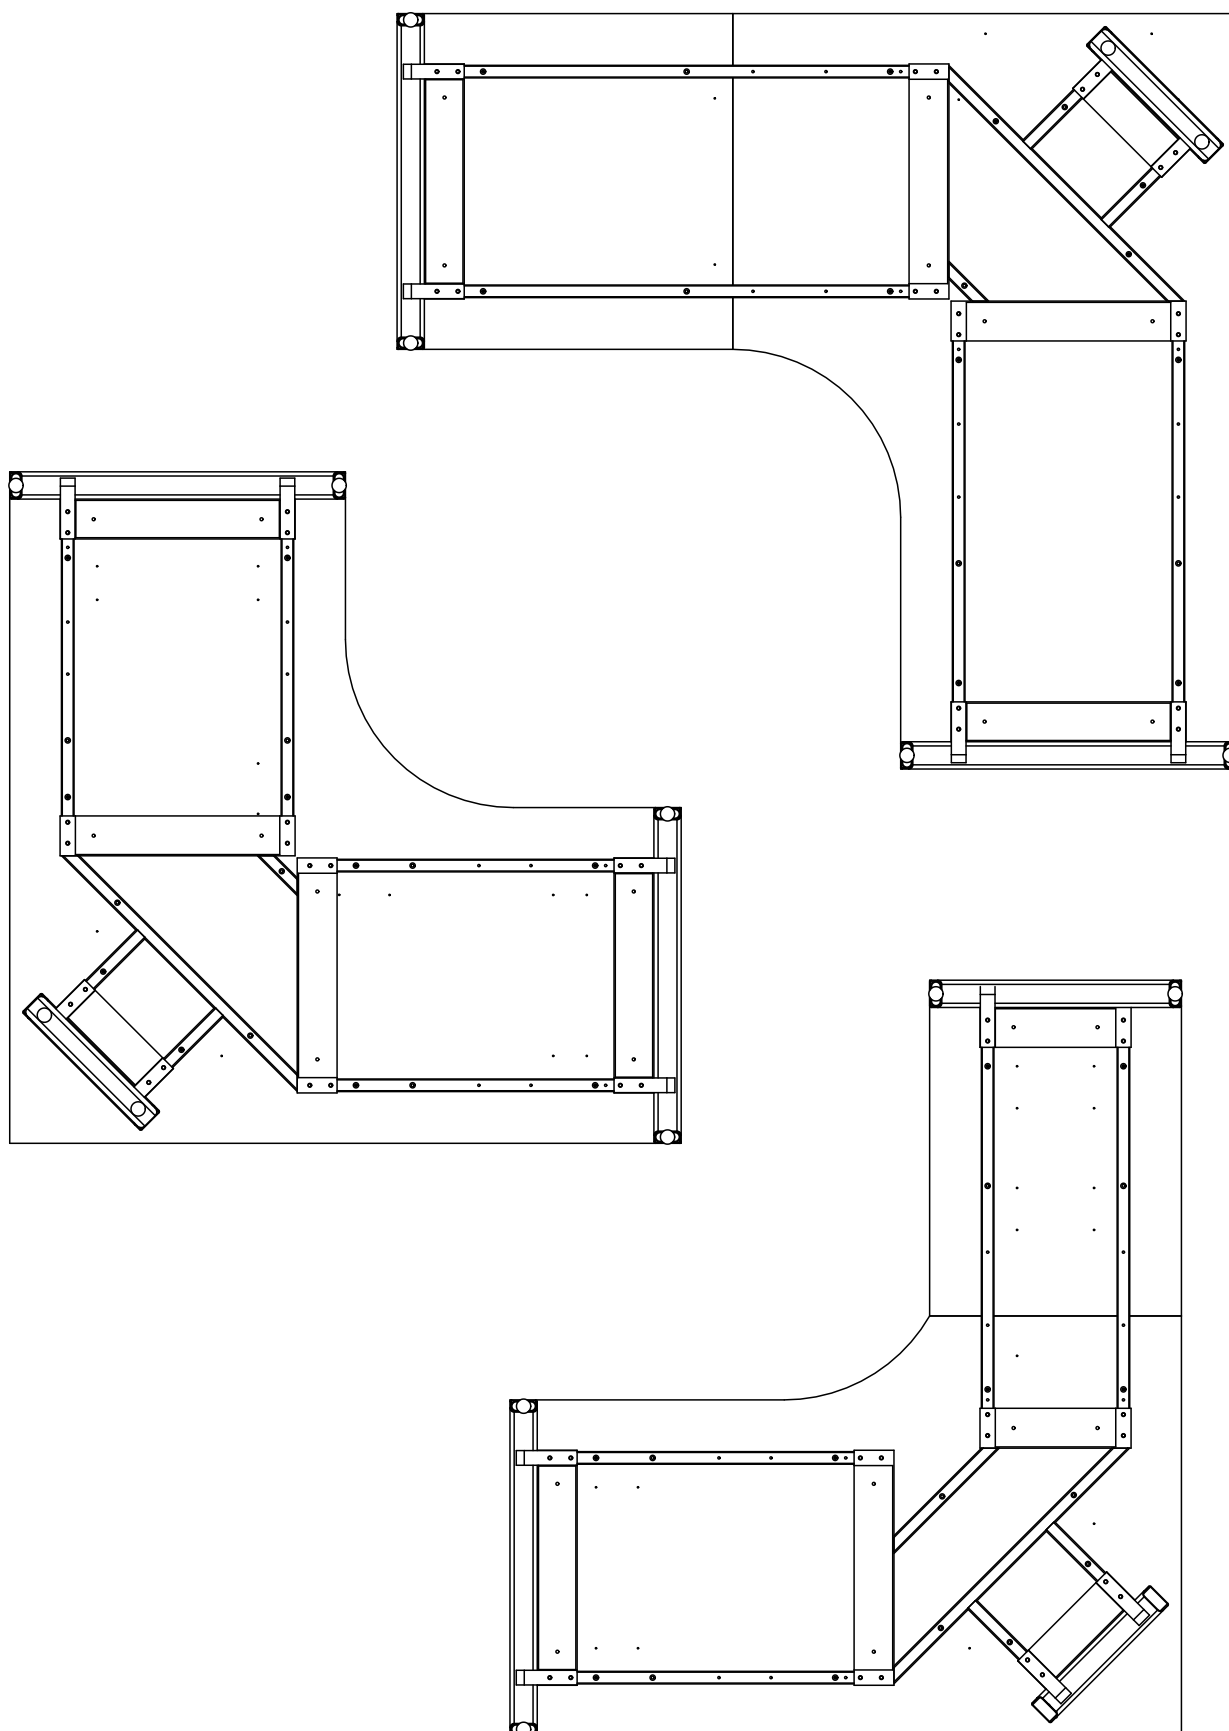

# Montageanleitung A03116.10

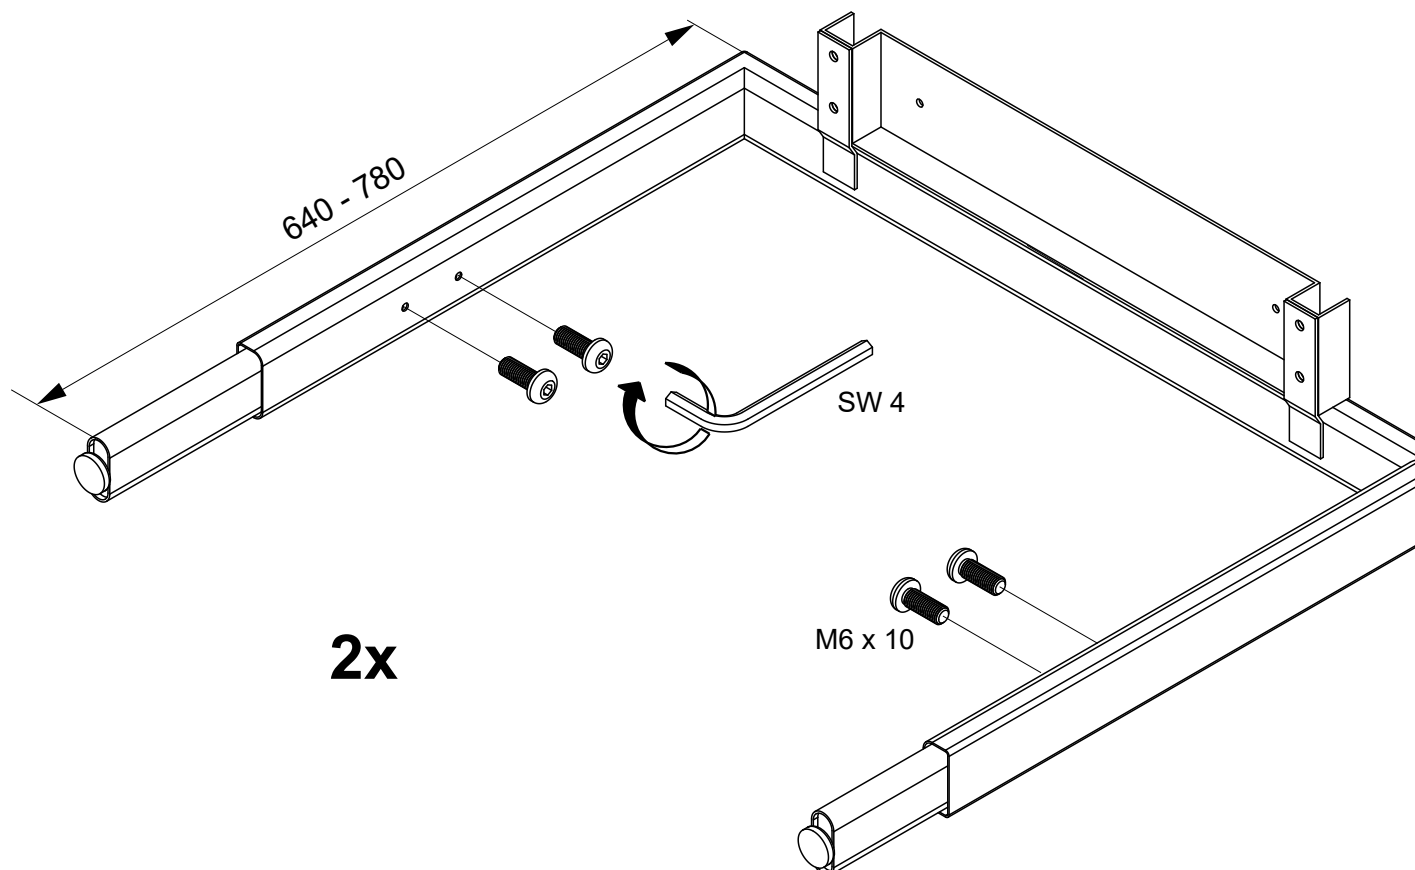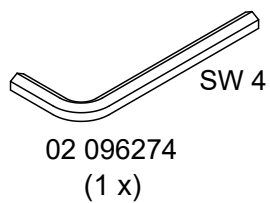


# Montageanleitung A03116.11




M8 x 20

02 961575  
(8 x)




SW 5

02 096548  
(1 x)

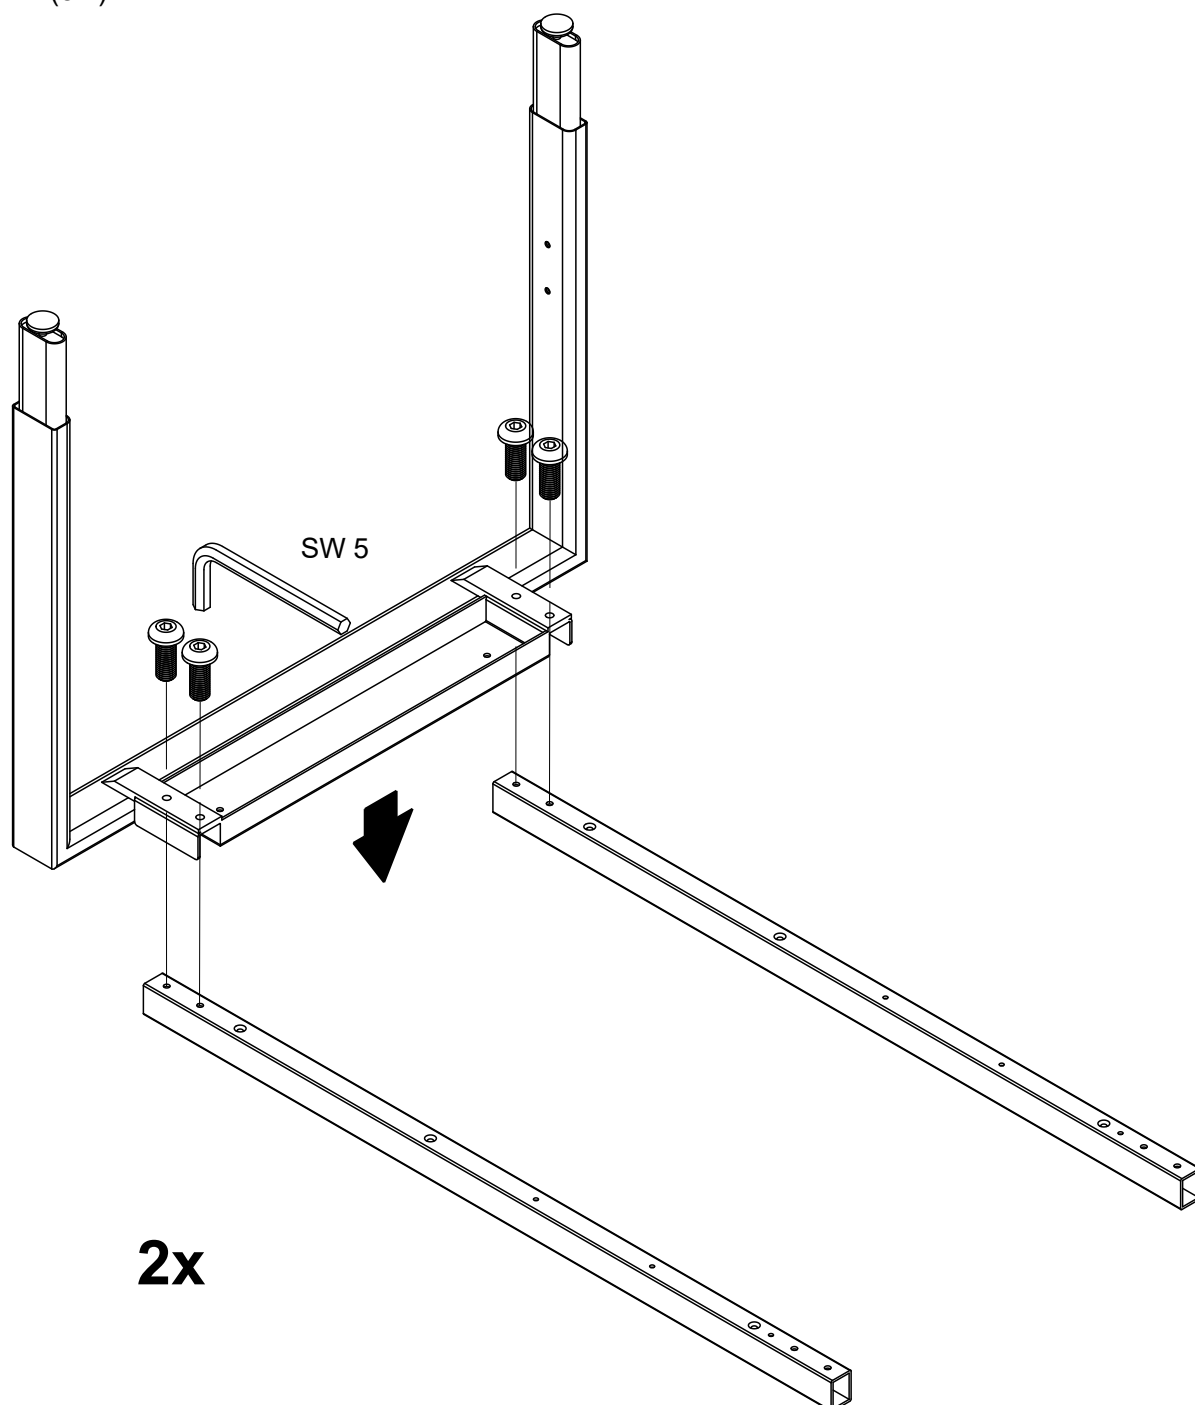

# Montageanleitung A03116.12





M8 x 20

02 961575  
(12 x)




SW 5

02 096548  
(1 x)

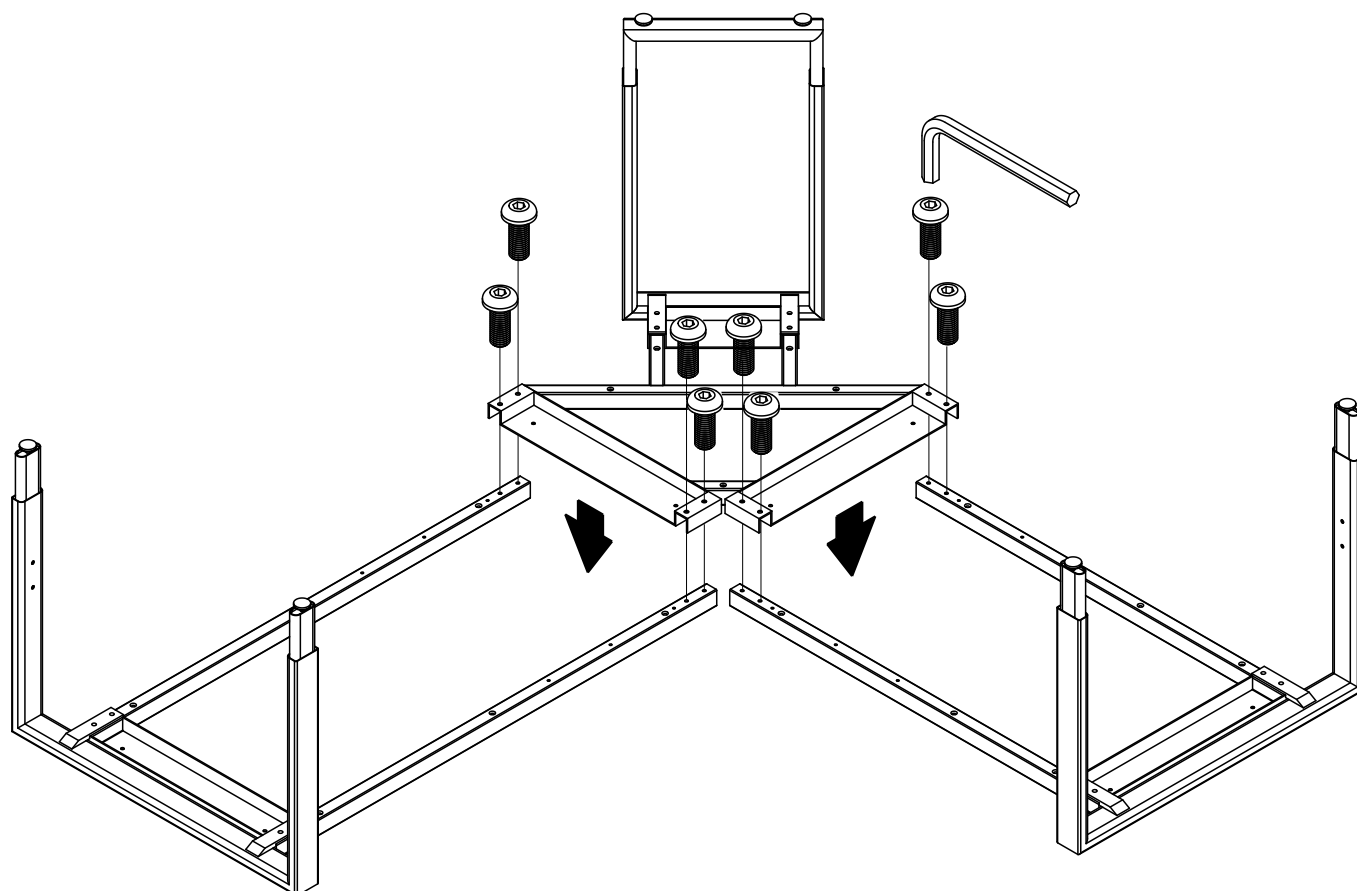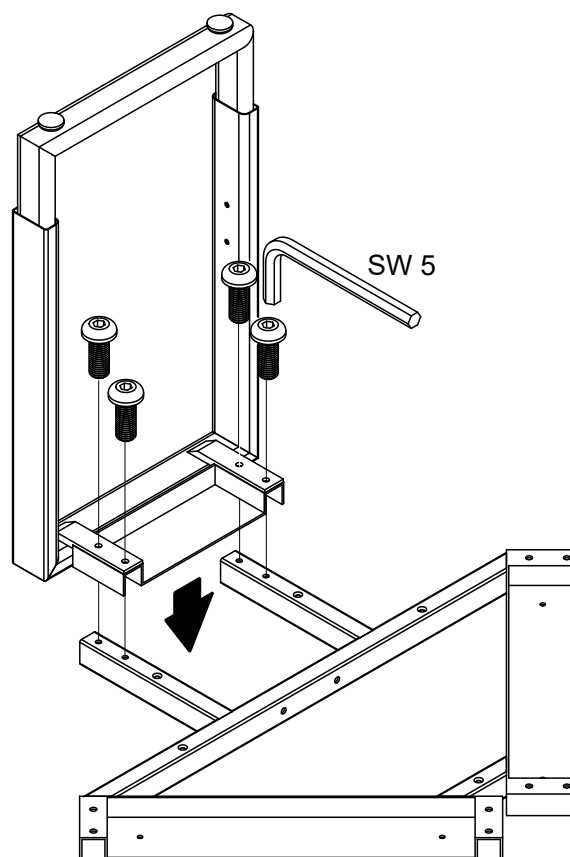


**röhr®**


# Montageanleitung A03116.13

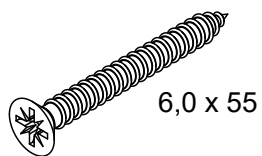


02 960029  
(13 x)

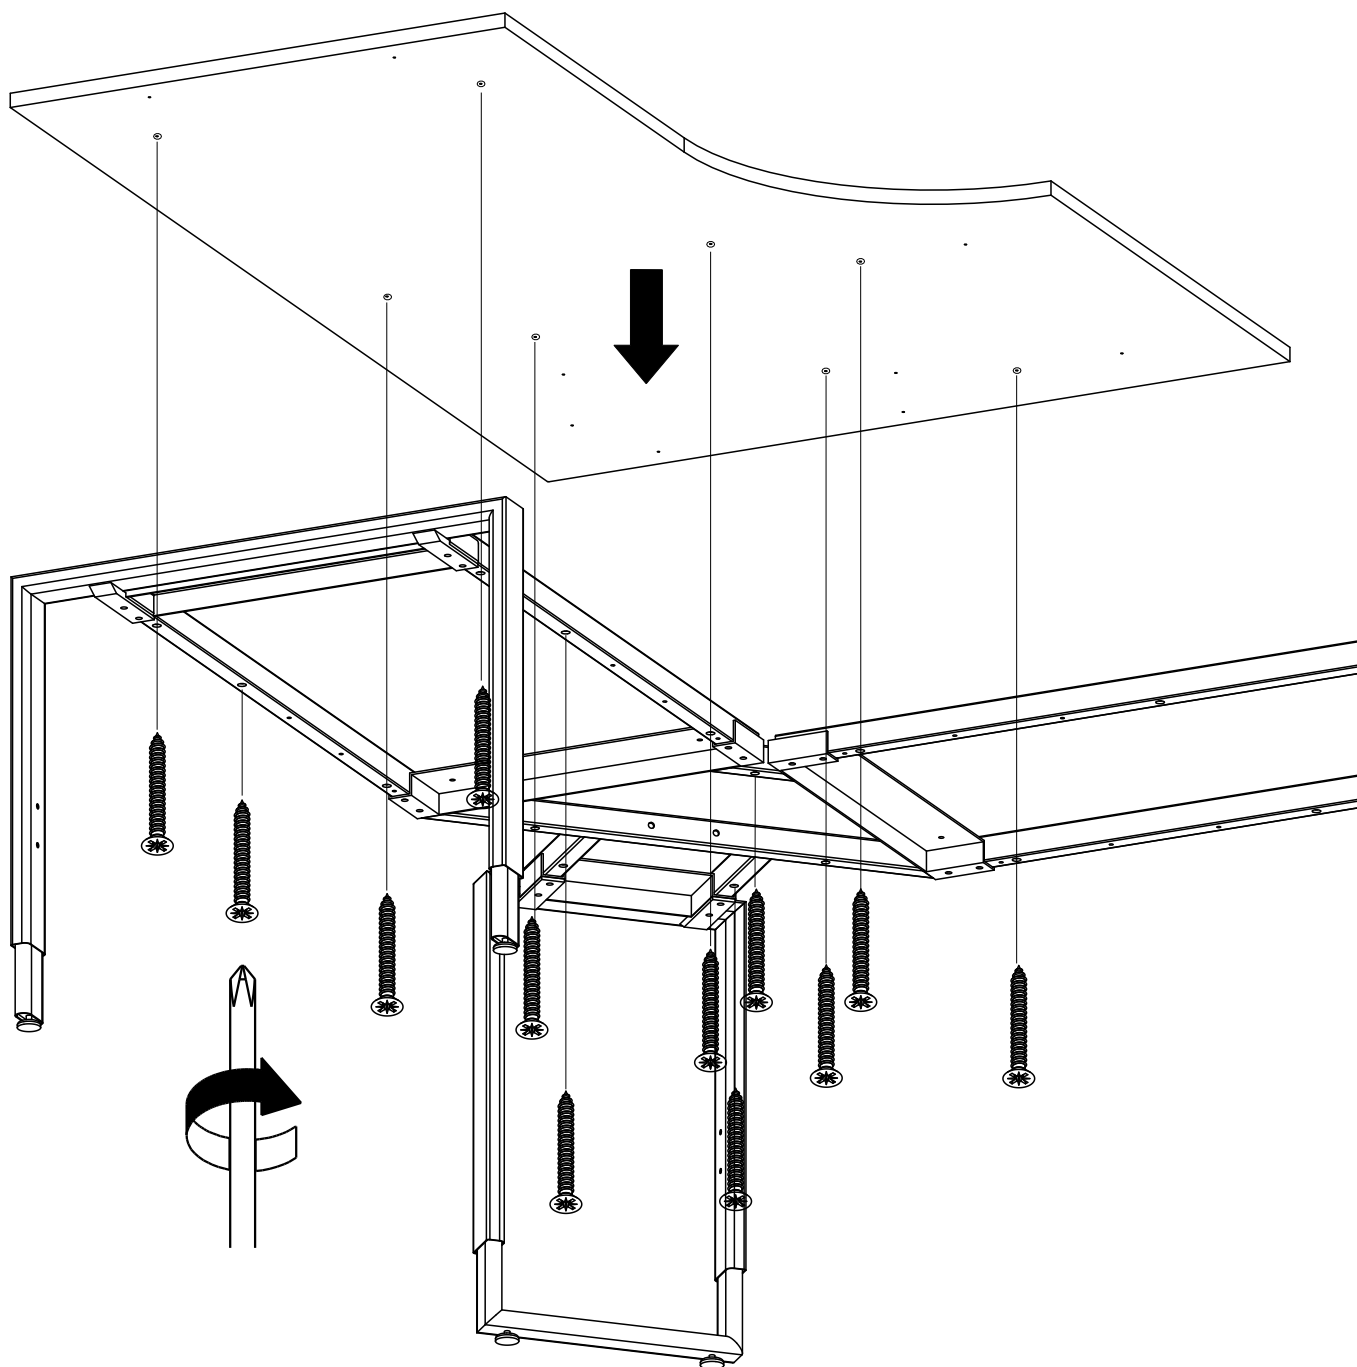

# Montageanleitung A03116.14

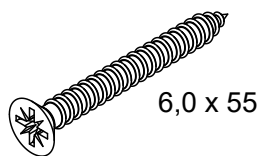


02 960029  
(4 x)

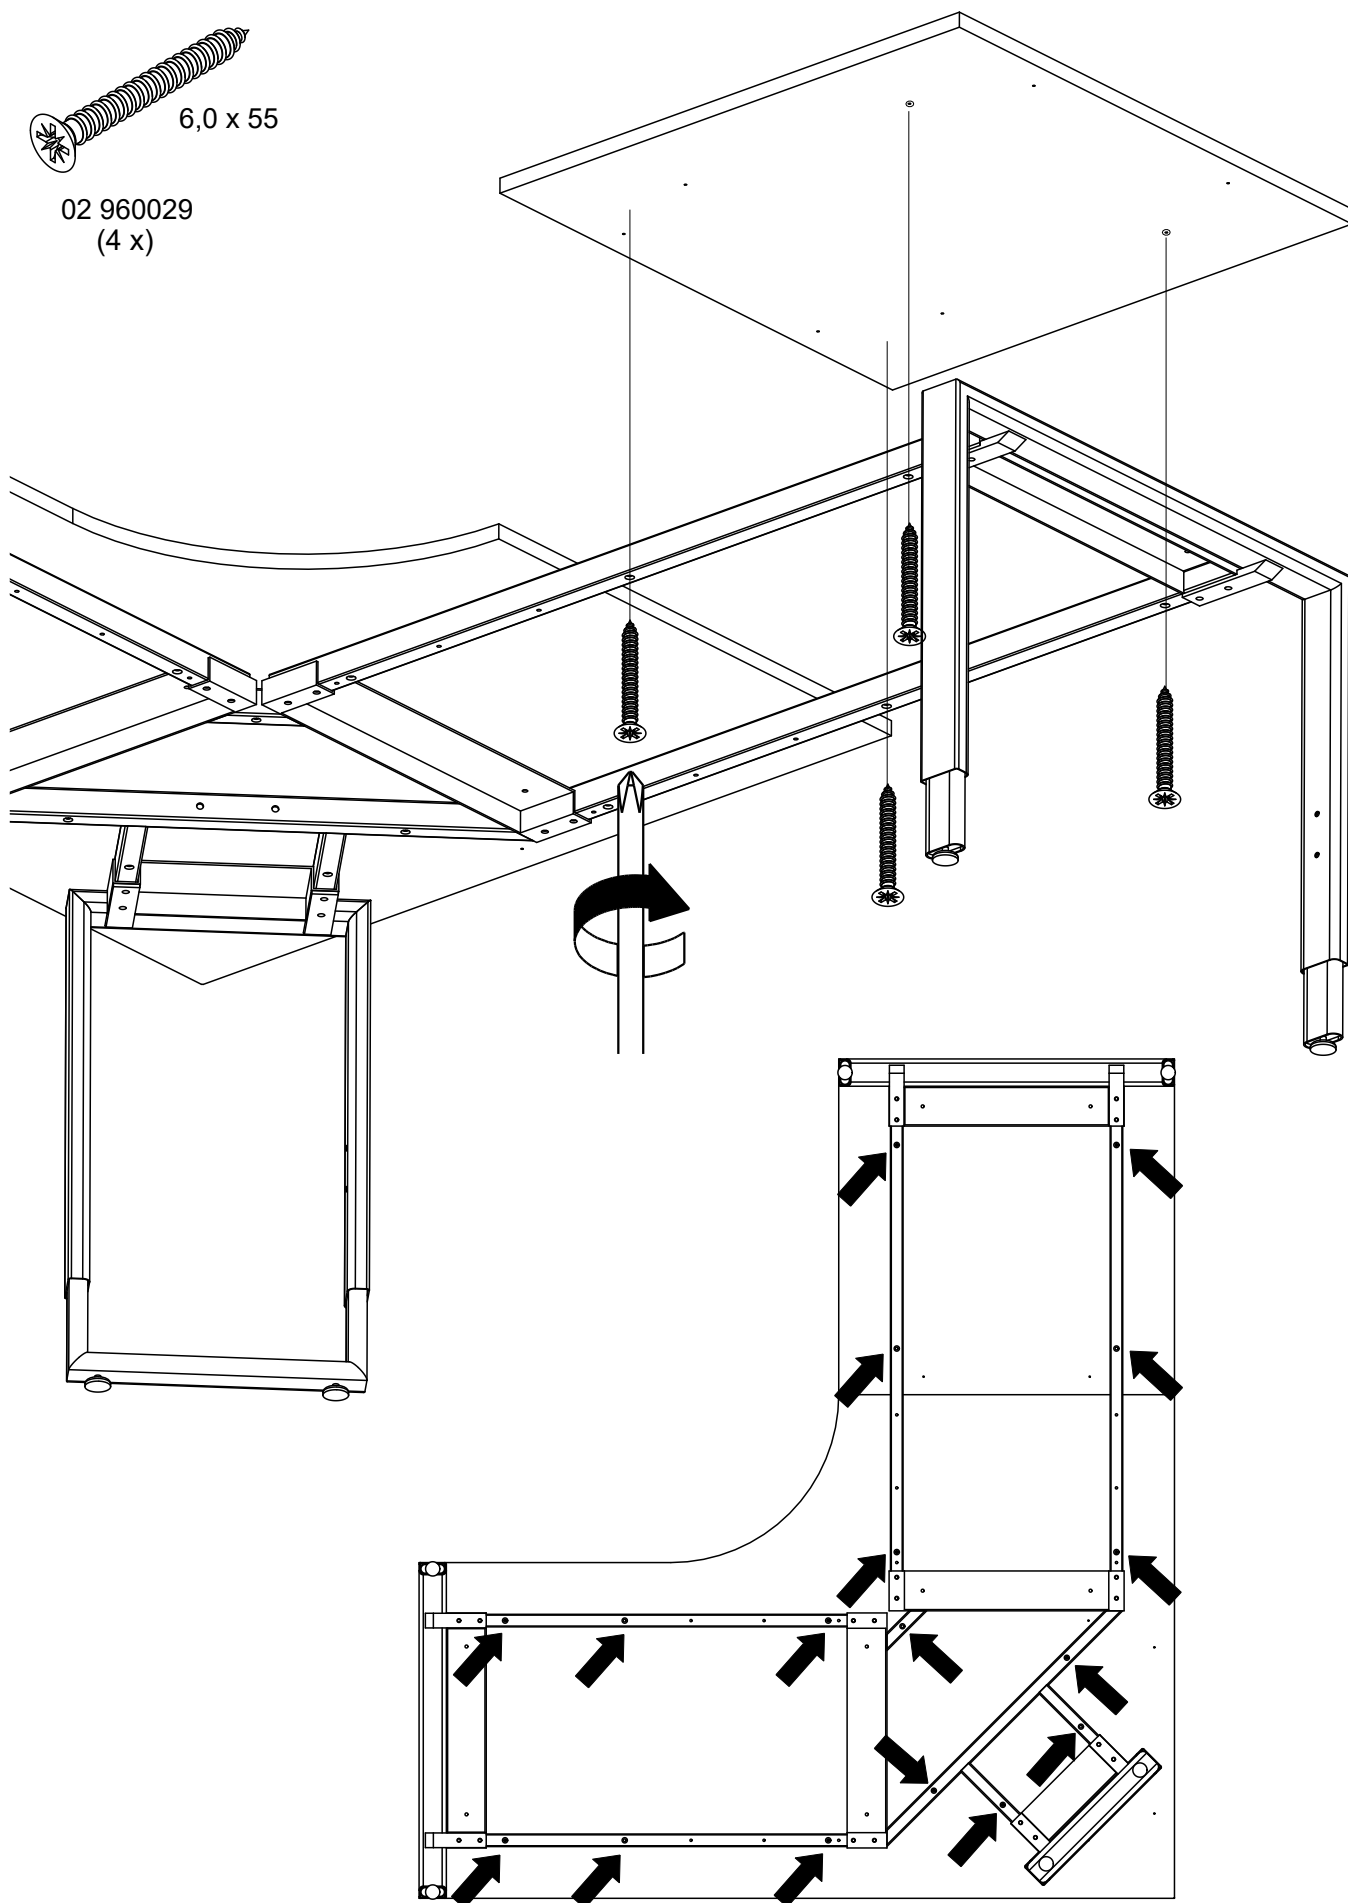

# Montageanleitung A03116.15

02 961575


16 x



M8 x 20

02 960029

18 x

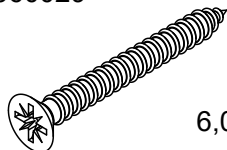

6,0 x 55

02 096274


1 x



SW 4

02 096548


1 x

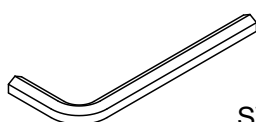

SW 5

02 096443


1 x

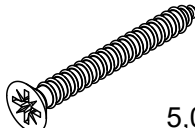

5,0 x 50

02 961496


1 x









20 x 8mm

02 961576


2 x



M6 x 20

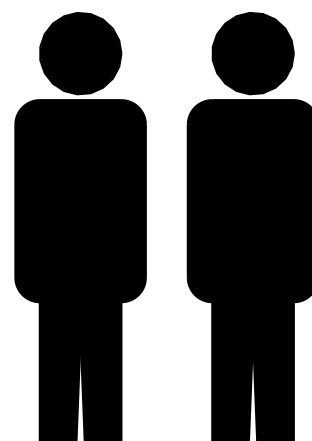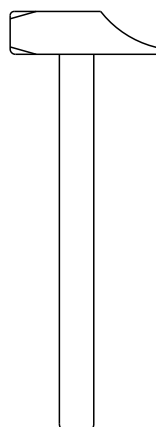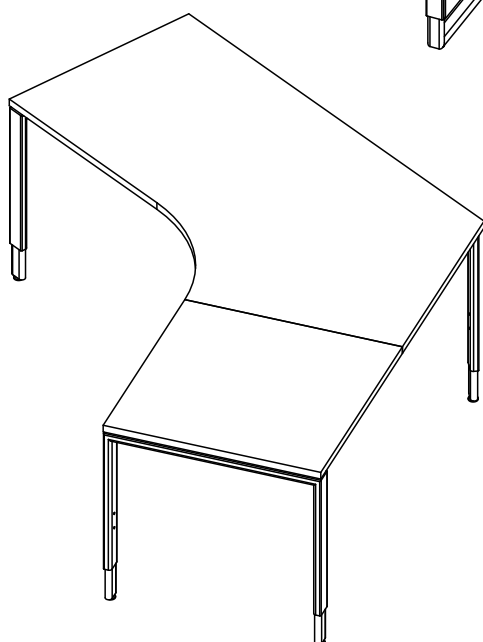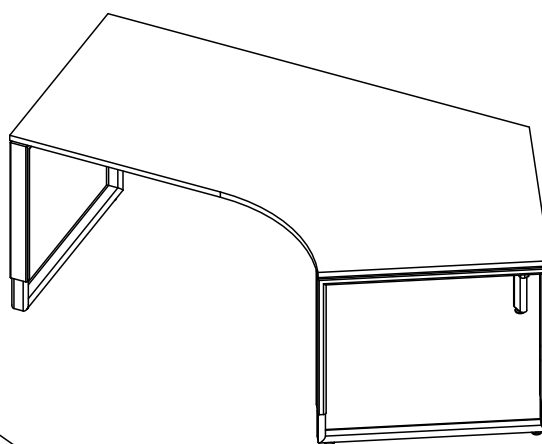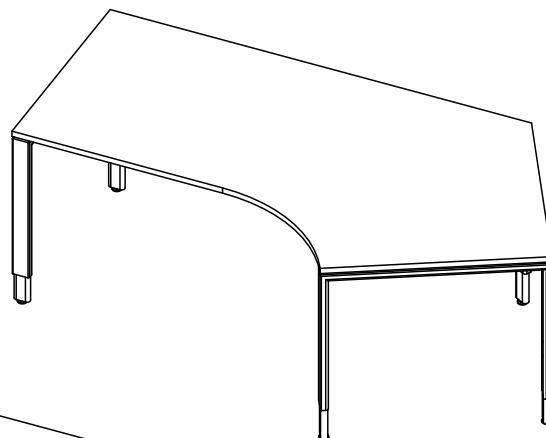


# Montageanleitung A03116.16


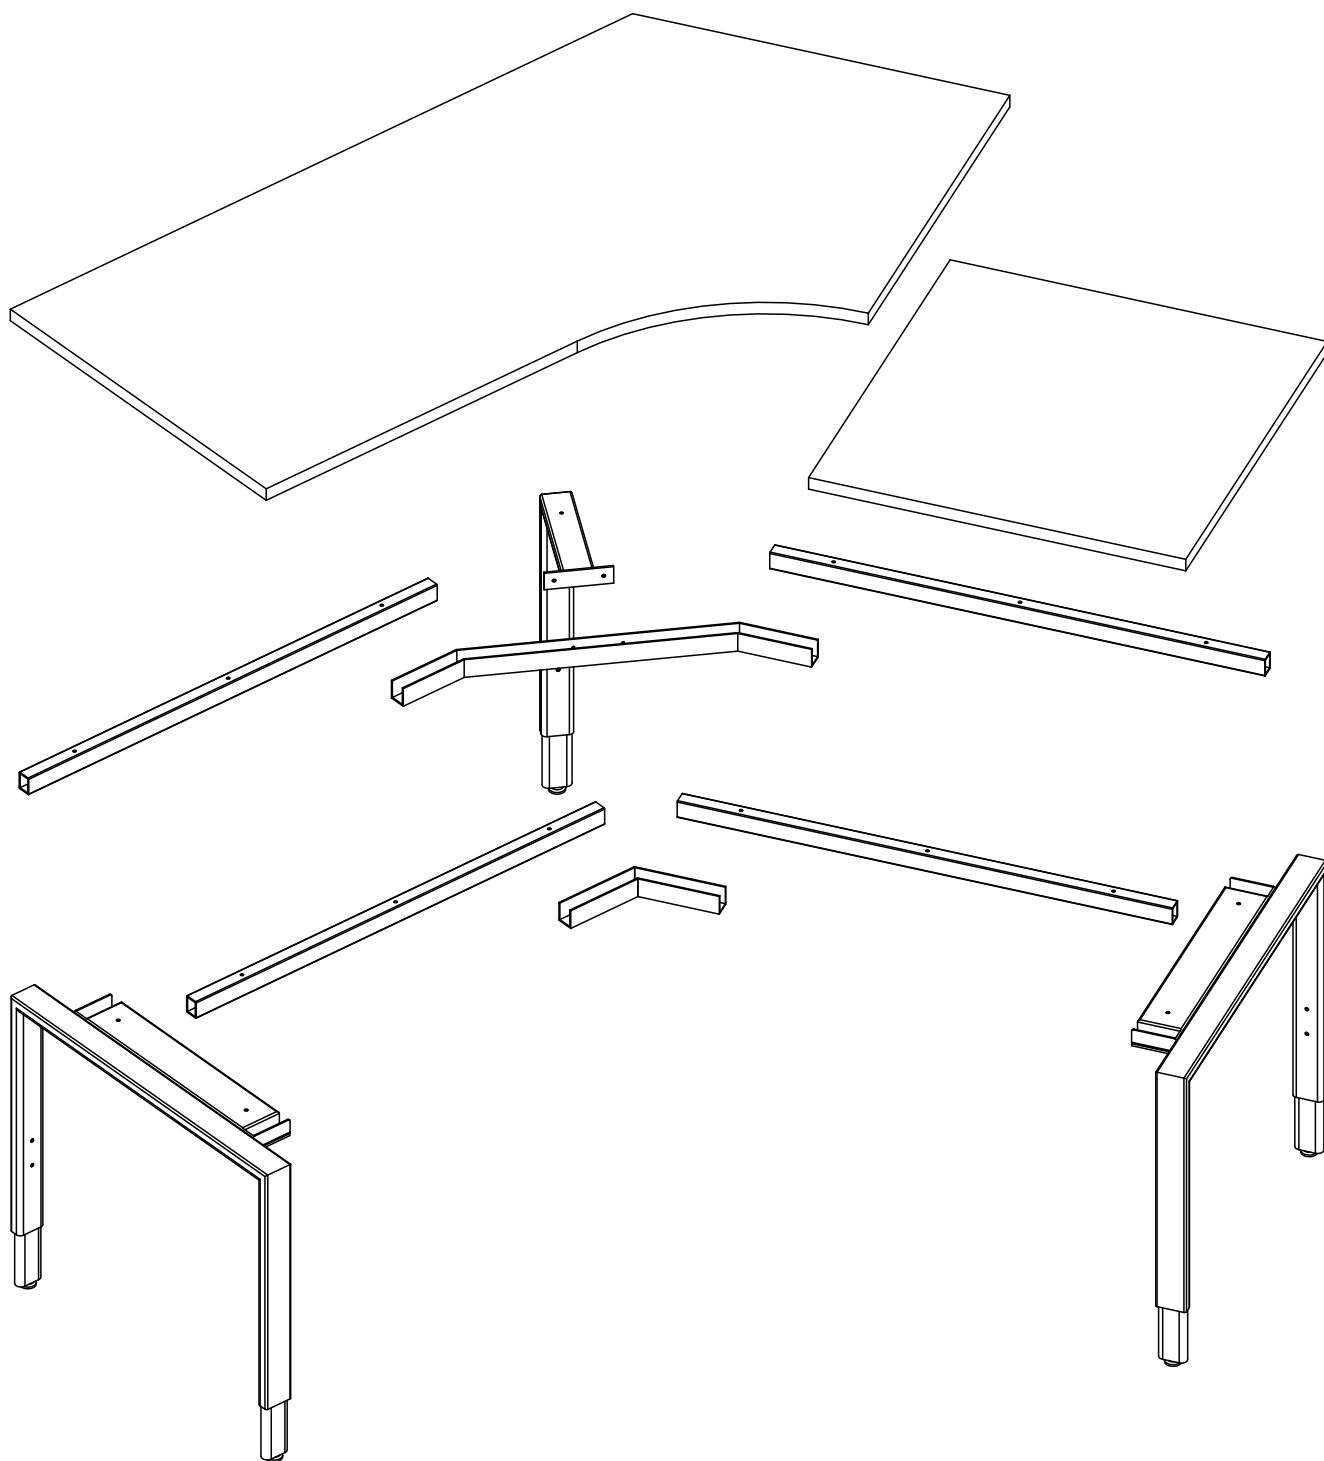





# Montageanleitung A03116.17

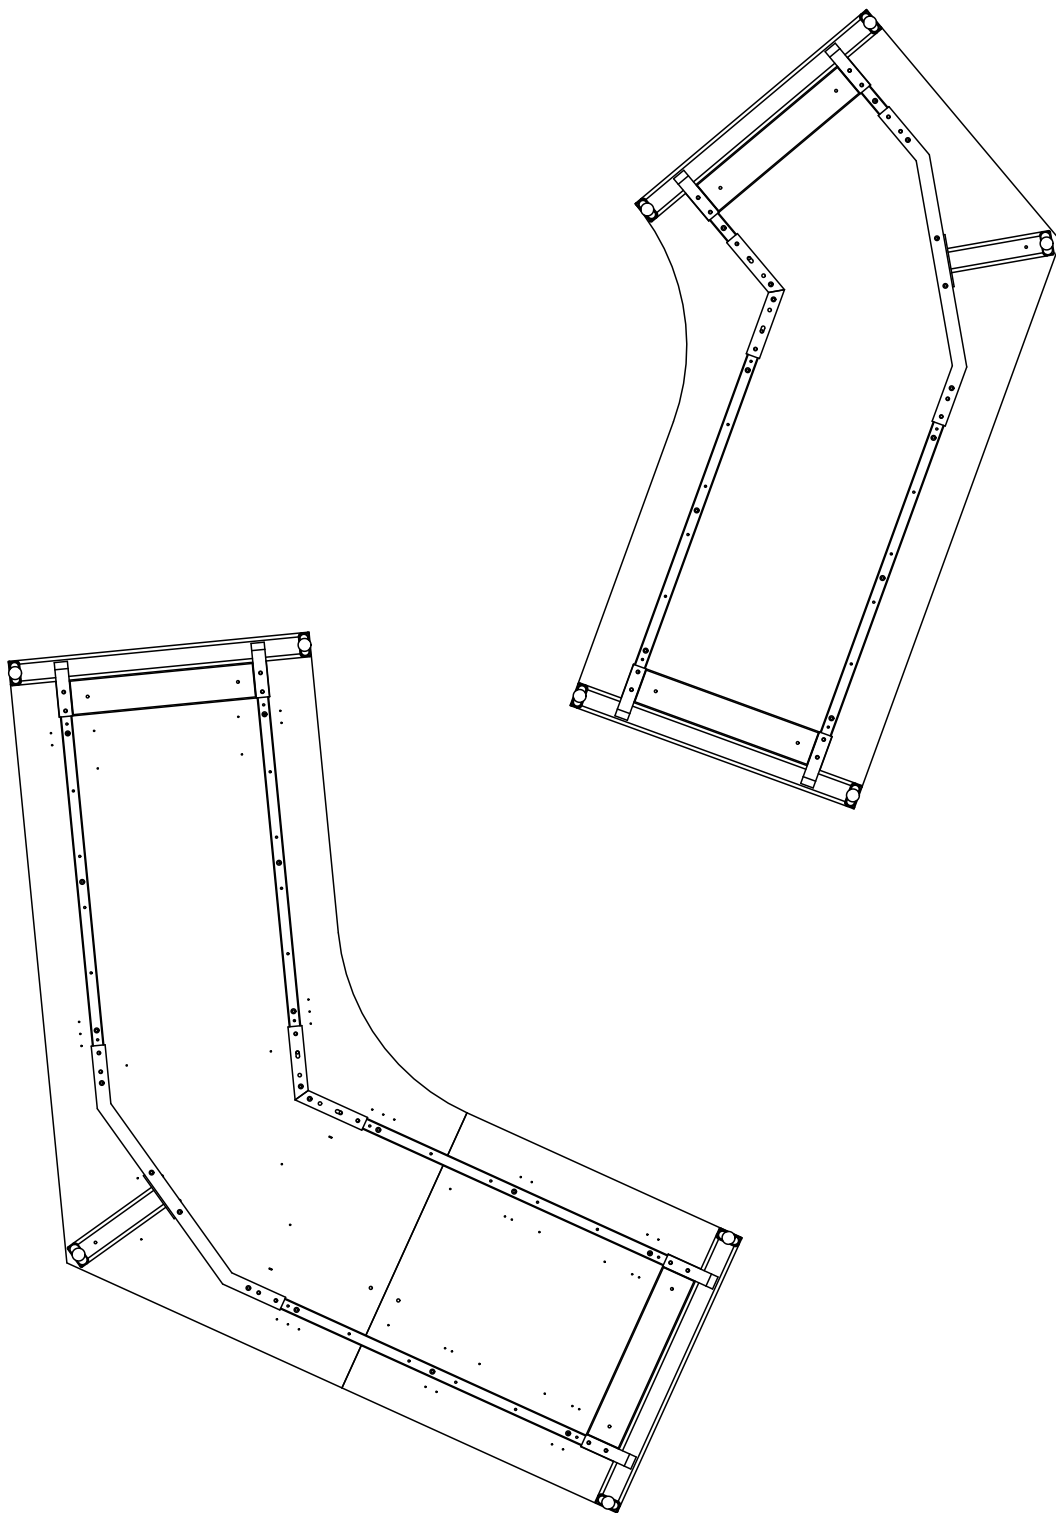

# Montageanleitung A03116.18

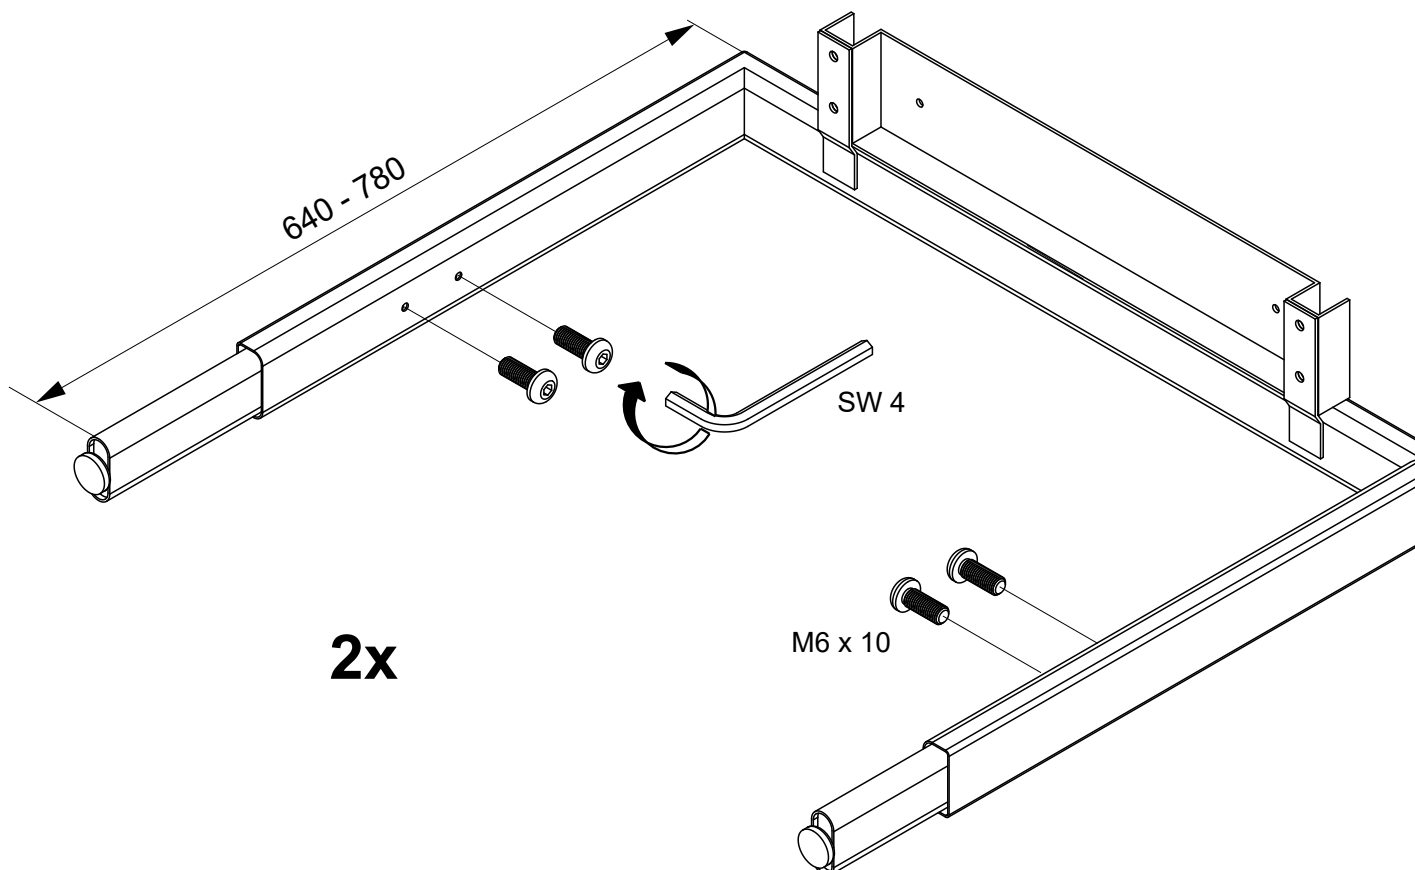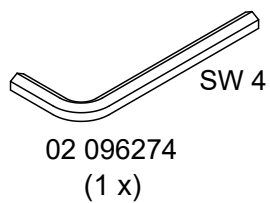

# Montageanleitung A03116.19




M8 x 20

02 961575  
(8 x)




SW 5

02 096548  
(1 x)

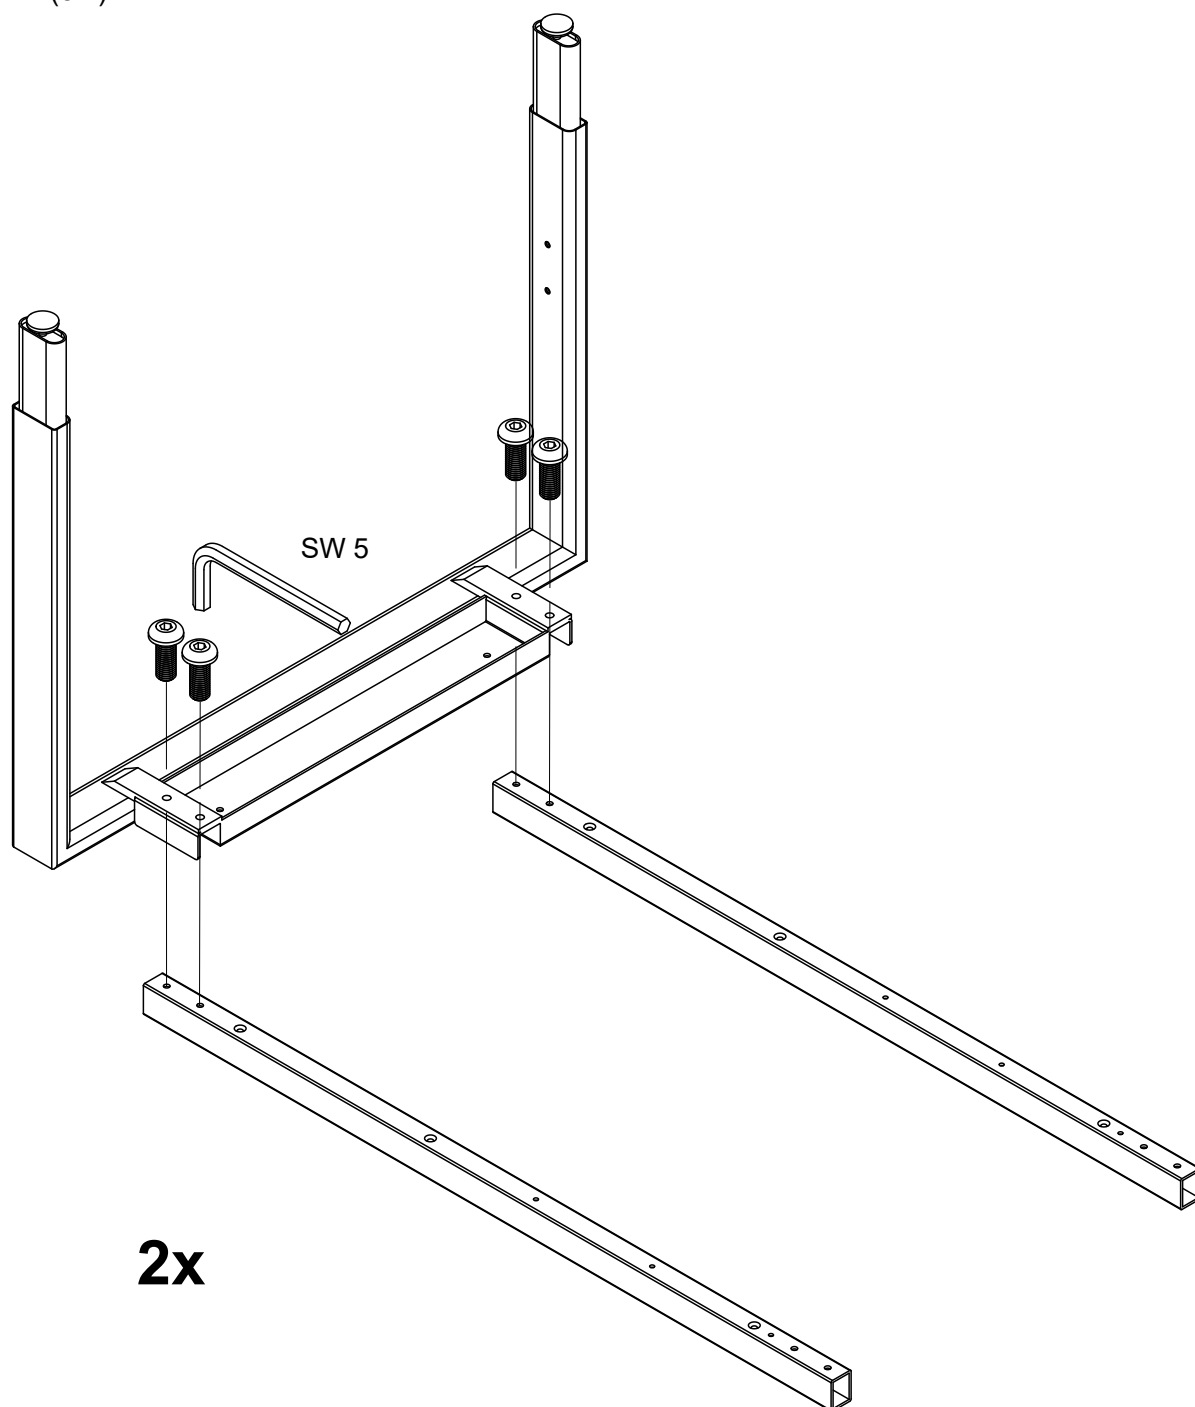

# Montageanleitung A03116.20




M8 x 20

02 961575  
(8 x)



SW 5

02 096548  
(1 x)





M6 x 20

02 961576  
(2 x)




SW 4


02 096274  
(1 x)

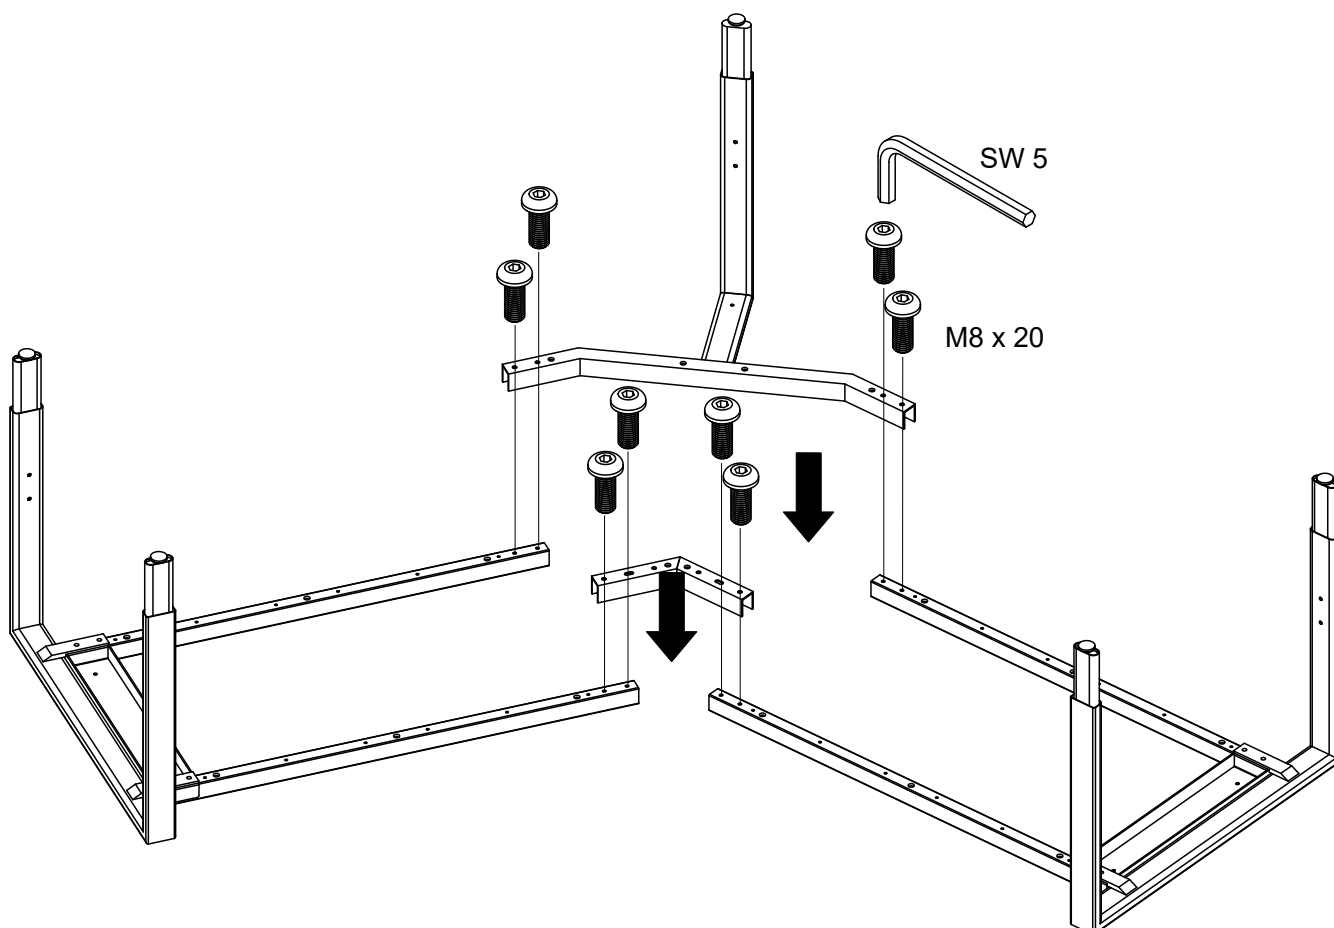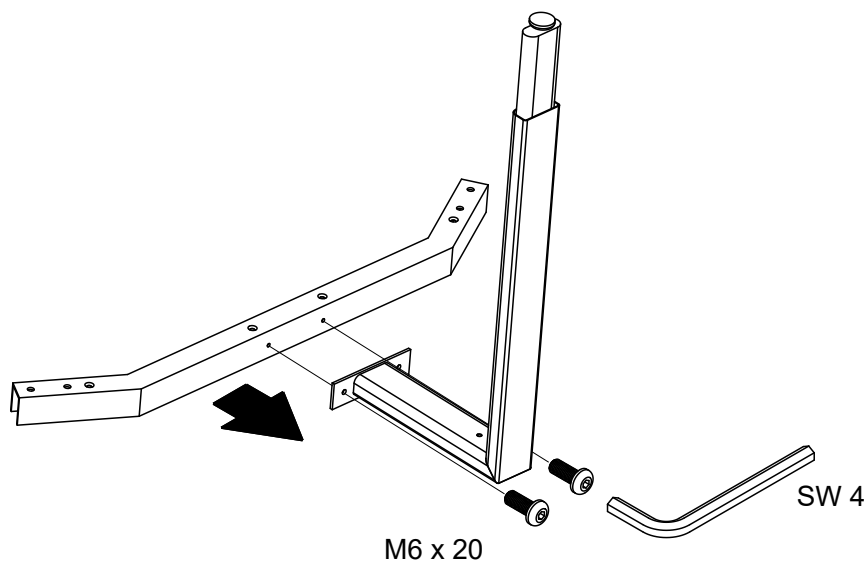


# Montageanleitung A03116.21

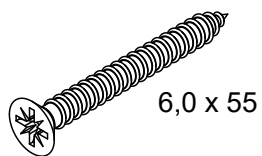


02 960029  
(2 x)

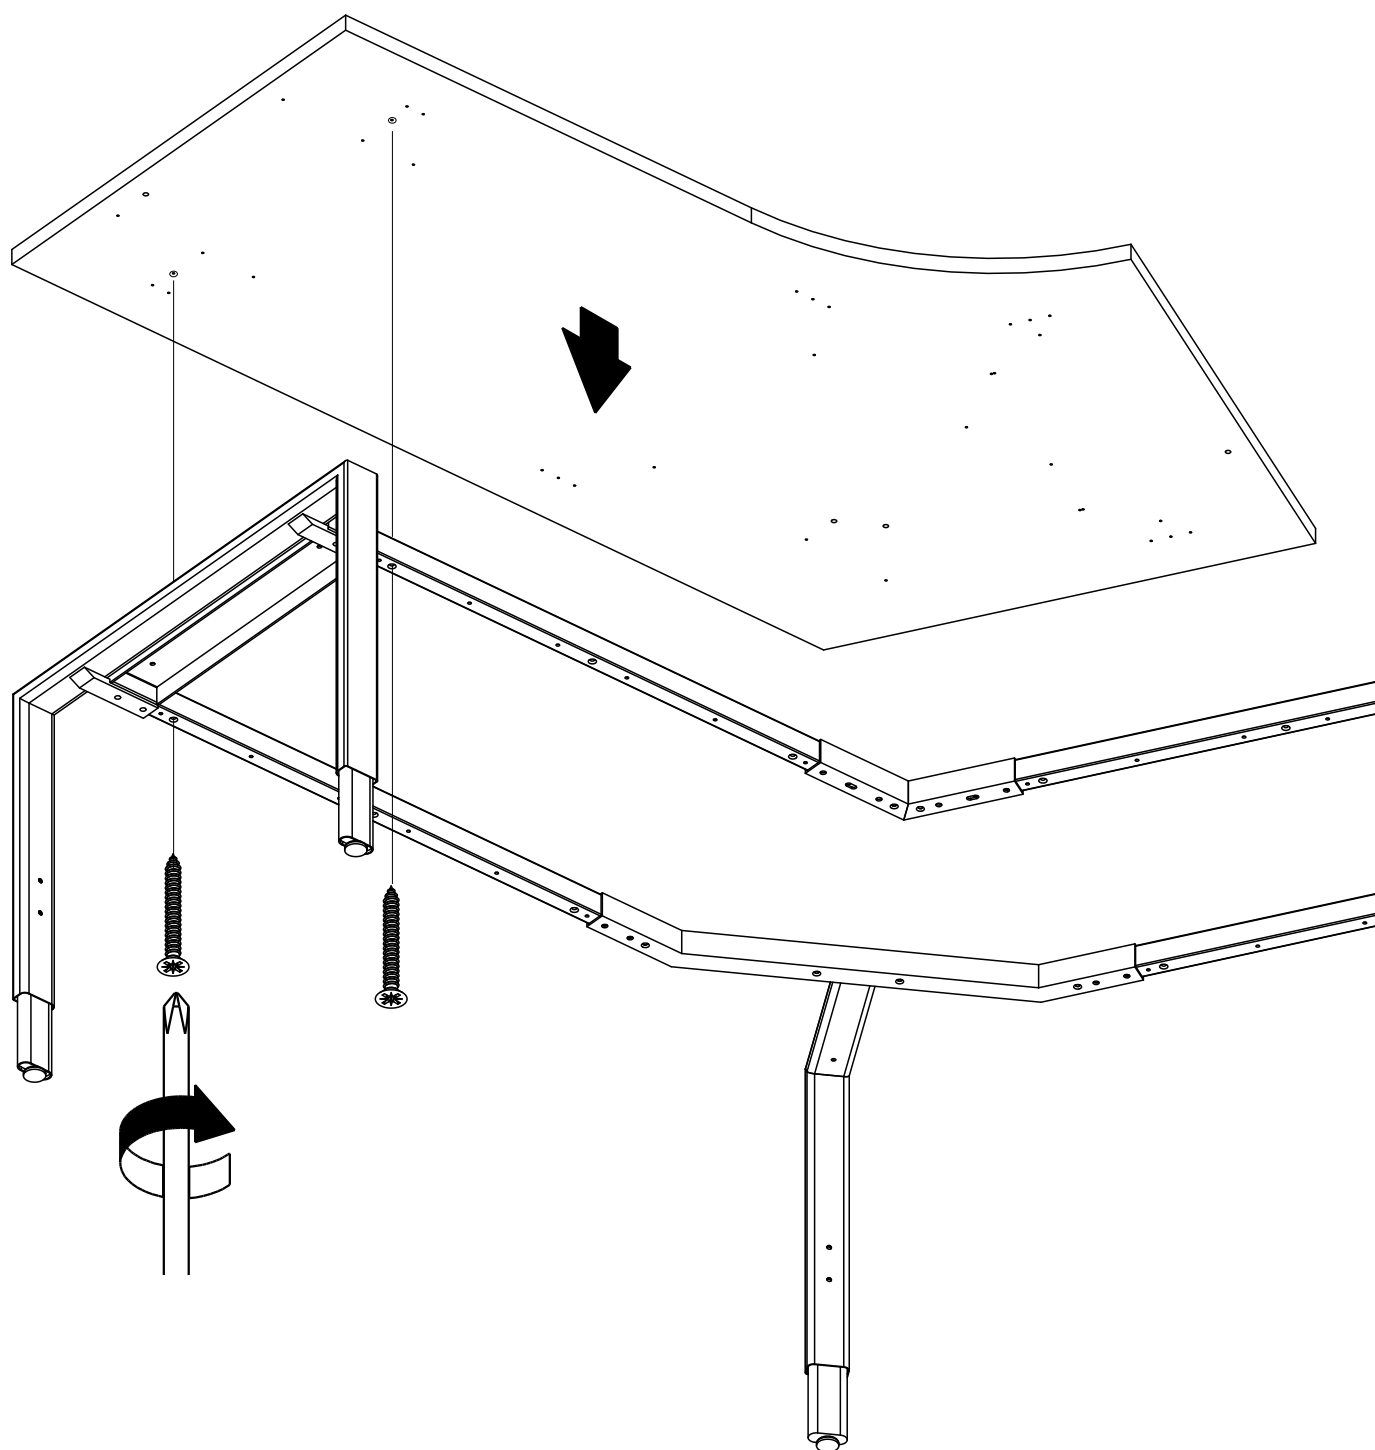

# Montageanleitung A03116.22

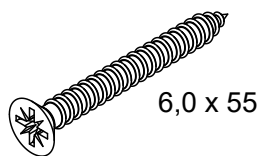


02 960029  
(2 x)

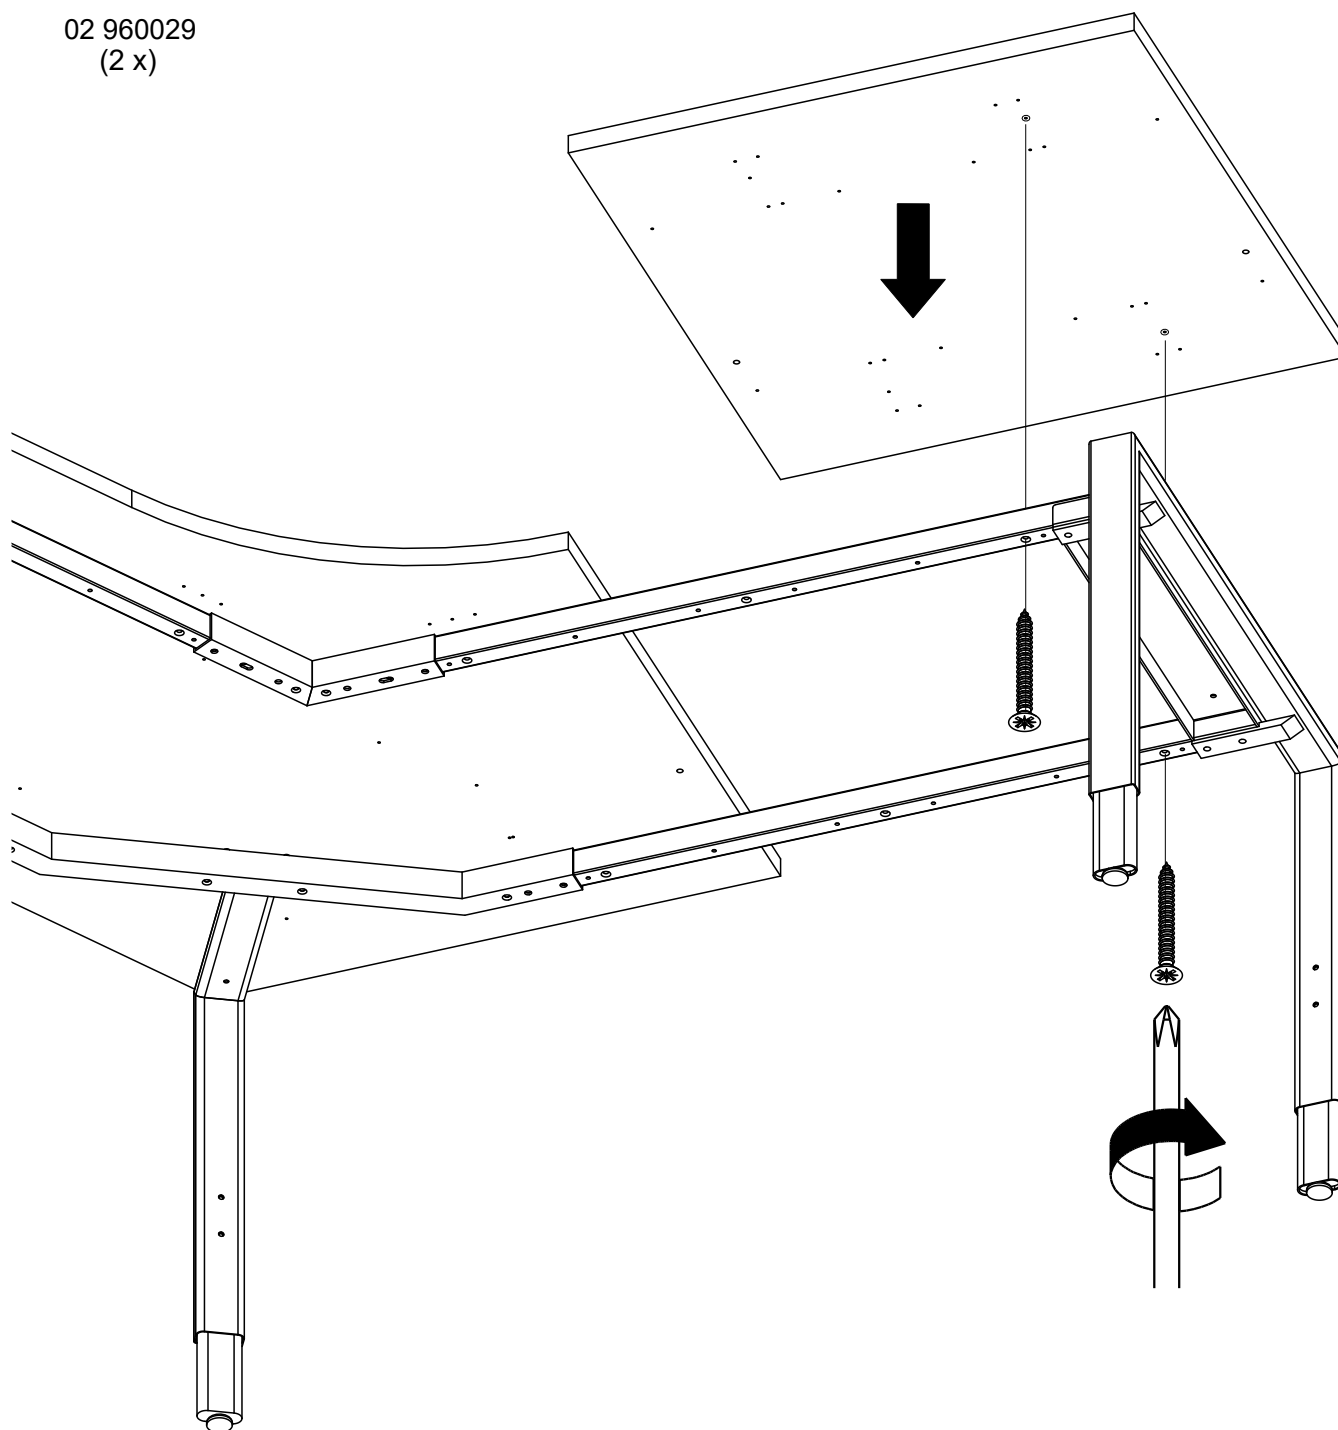


**röhr®**


# Montageanleitung A03116.23

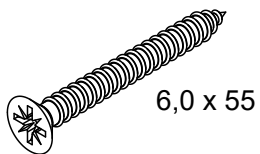


02 960029  
(14 x)

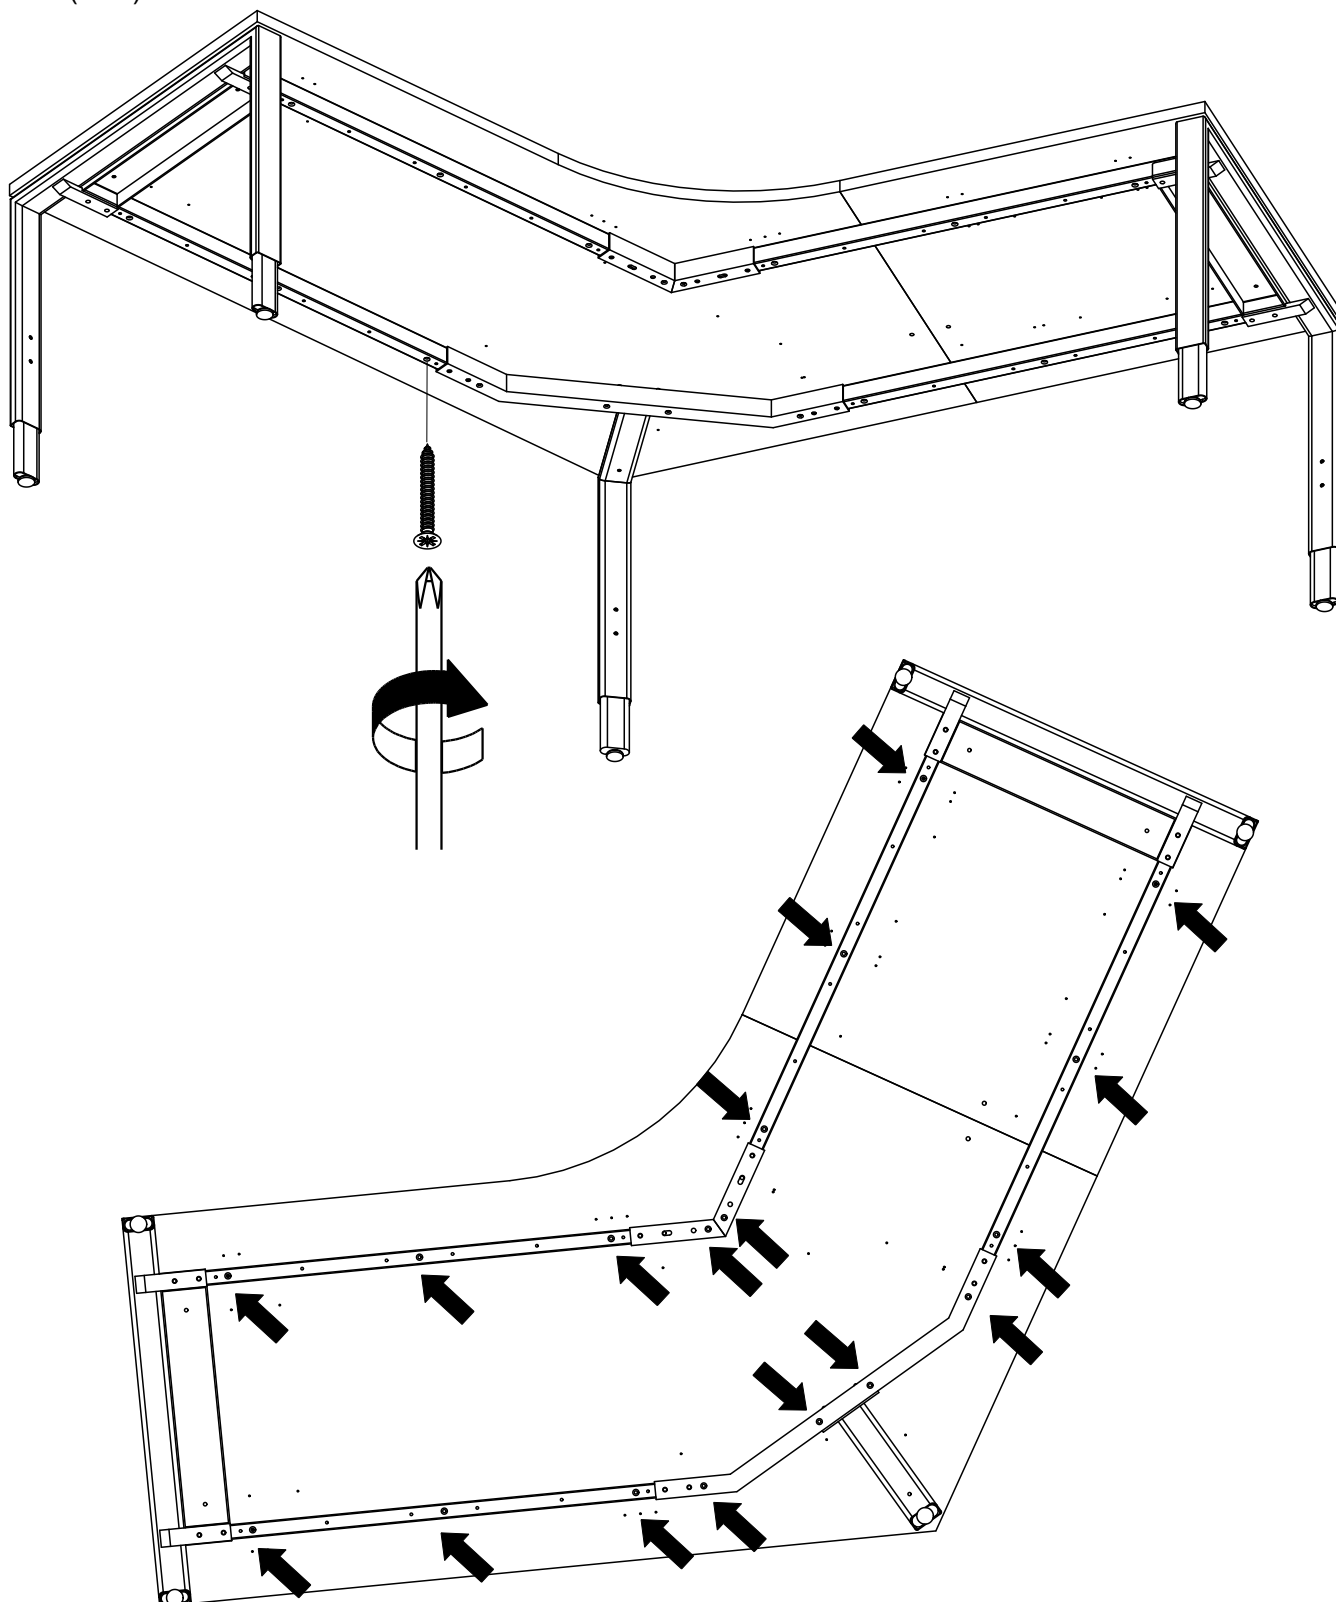

# Montageanleitung A03116.24

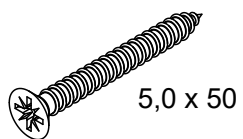

02 096443  
(1 x)



02 961496  
(1 x)

