


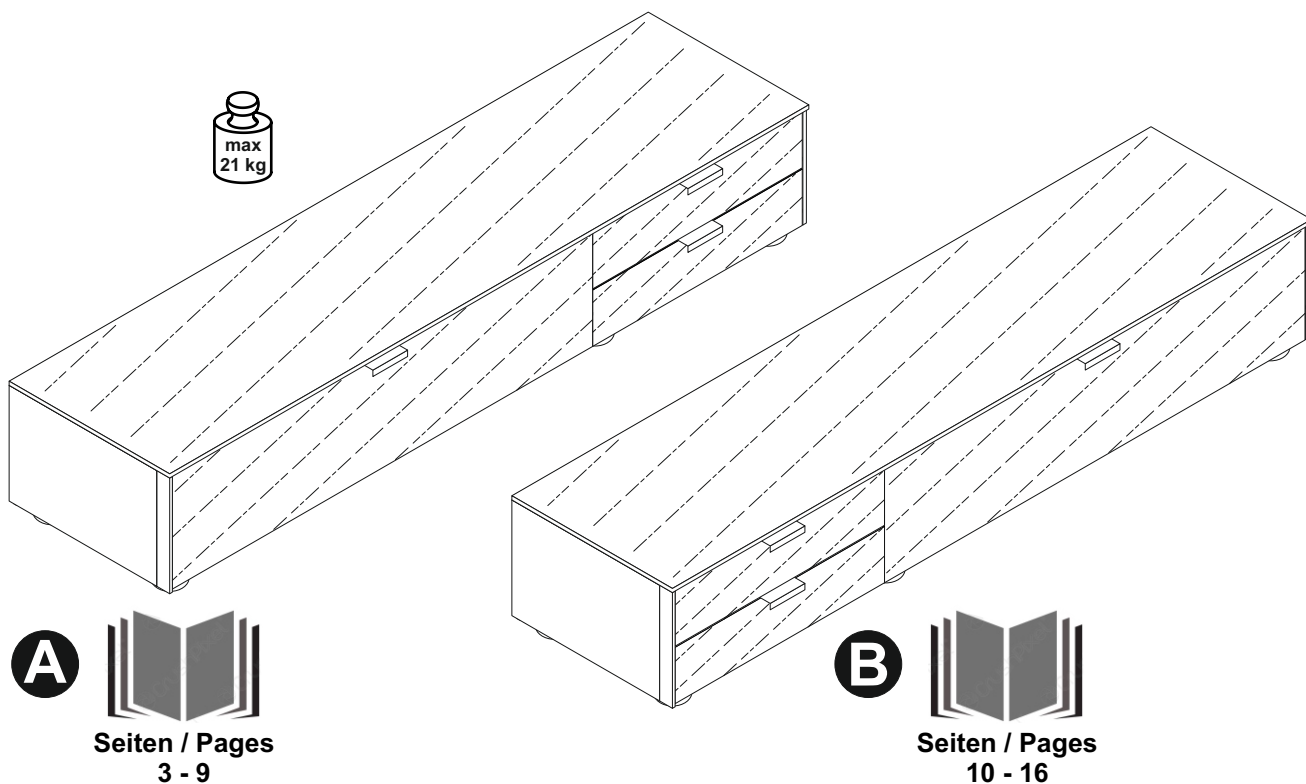

Das Lowboard kann spiegelbildlich montiert werden!

Artikel.-Nr.:



0772-LB_021 GL

Montageanleitung.-Nr.:

MA1-00360

REPC-Nr.:	Service • Assistenza • Dienstverlening • Serwis Servis • Szerviz • Сервисная служба			

Beutel 0772-LB_021 GL 0-15 Colli 2/3

B01-10 2x	 6,3x50	B01-30 32x	 3x16	B01-70 4x	 3x30	B01-80 8x	 3,5x13	B01-90 8x	 3,5x20
B01-200 16x	 6,3x13	B02-08 8x	 h=10mm	B02-10 14x	 h=12mm	B02-20 22x			




SCAN ME

Beutel BT1-00005 Colli 2/3 (2x)

B01-123 12x	 4x15	B02-173 6x		
----------------	--	---------------	---	--


Beutel 0772-LB_021 0-45 Colli 2/3

B02-103 12x	 8x30	B05-01 10x		B05-130 2x	 LEIM
B05-185 8x		B05-260 1x	 set one by Musterring	B05-280 1x	
B06-425 3x					

Beutel 0772-LB_021 0-35 Colli 2/3


B03-07 1x		B03-11 3x		B03-41 3x	 0er
--------------	--	--------------	---	--------------	---

Beutel 0772-LB_021 0-55 Colli 1/3


B01-36 4x	 4x40
--------------	---

Beutel BT1-00001 Colli 2/3


B05-265 1x	 set one by Musterring Pflegeanweisung
---------------	--




Colli 1/3


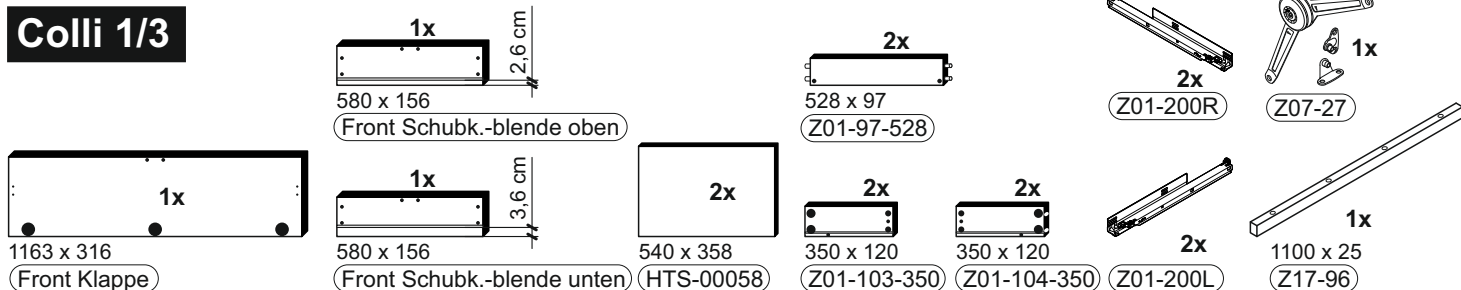


Colli 2/3









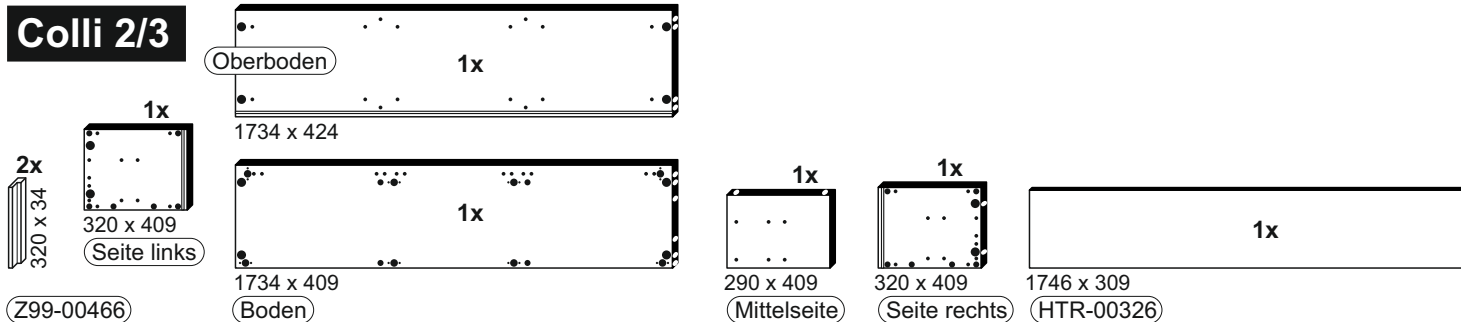


Colli 3/3

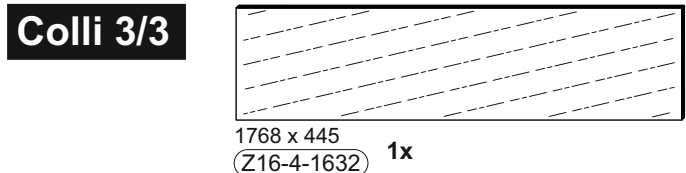

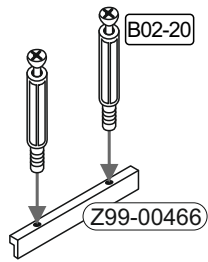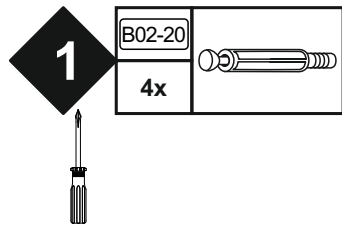

2x

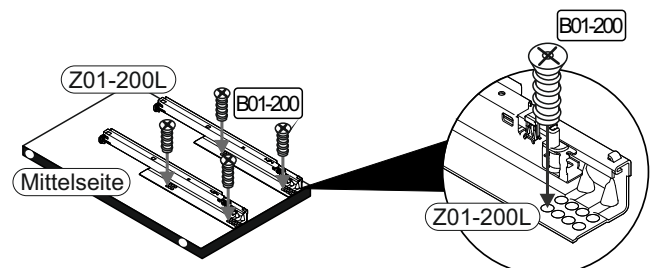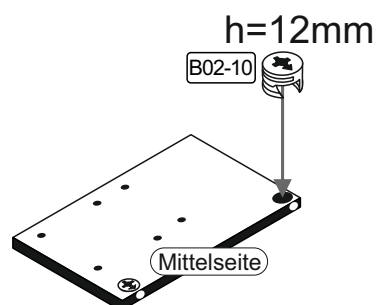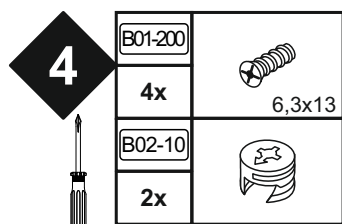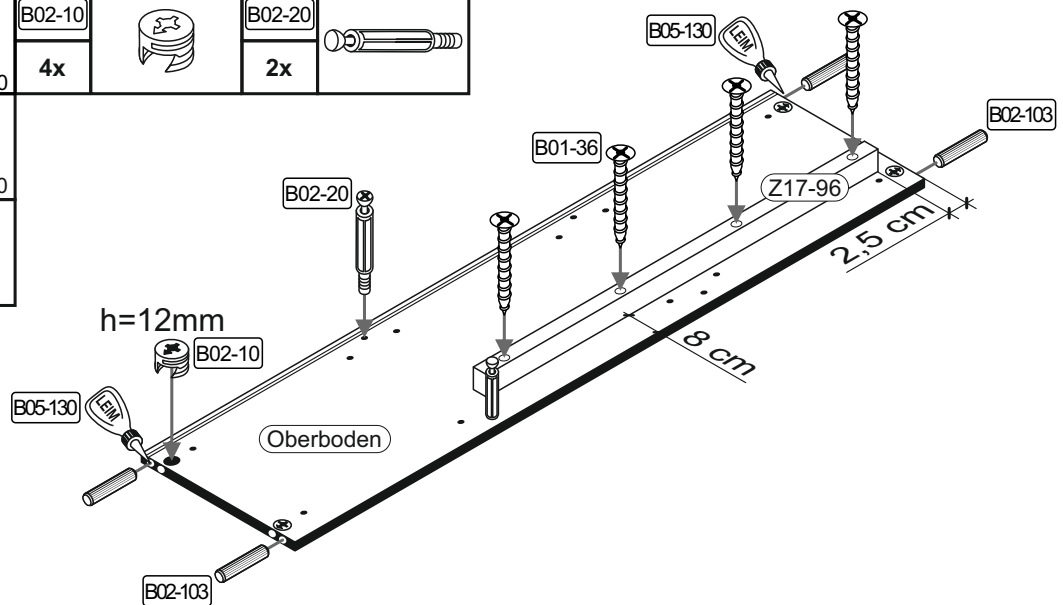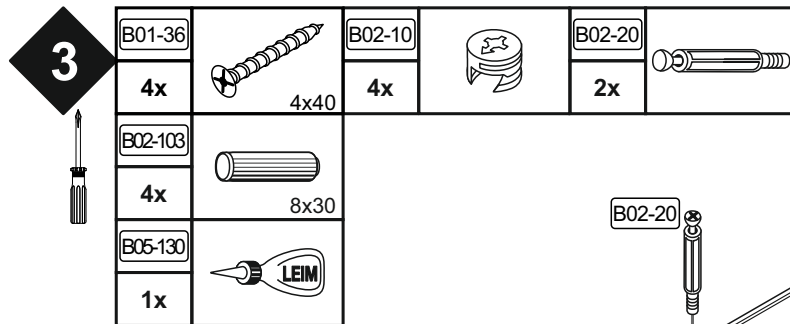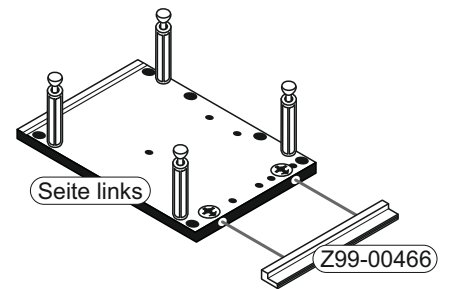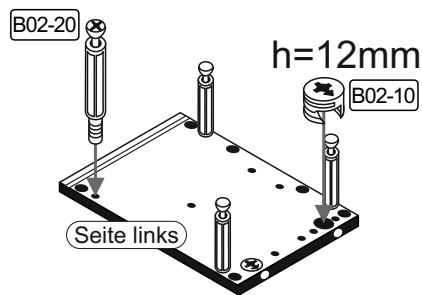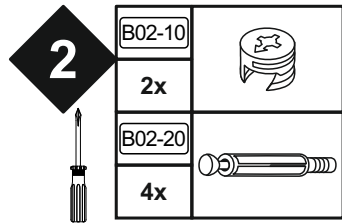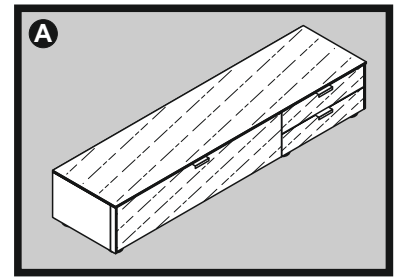

CHICAGO

5




B02-10		B02-103	
4x		8x	8x30
B05-130			
1x			

6




B01-200		B02-10		B02-20	
4x	6,3x13	2x		4x	

7

B01-200		B02-08		B02-20		B06-425	
4x	6,3x13	8x		8x		2x	

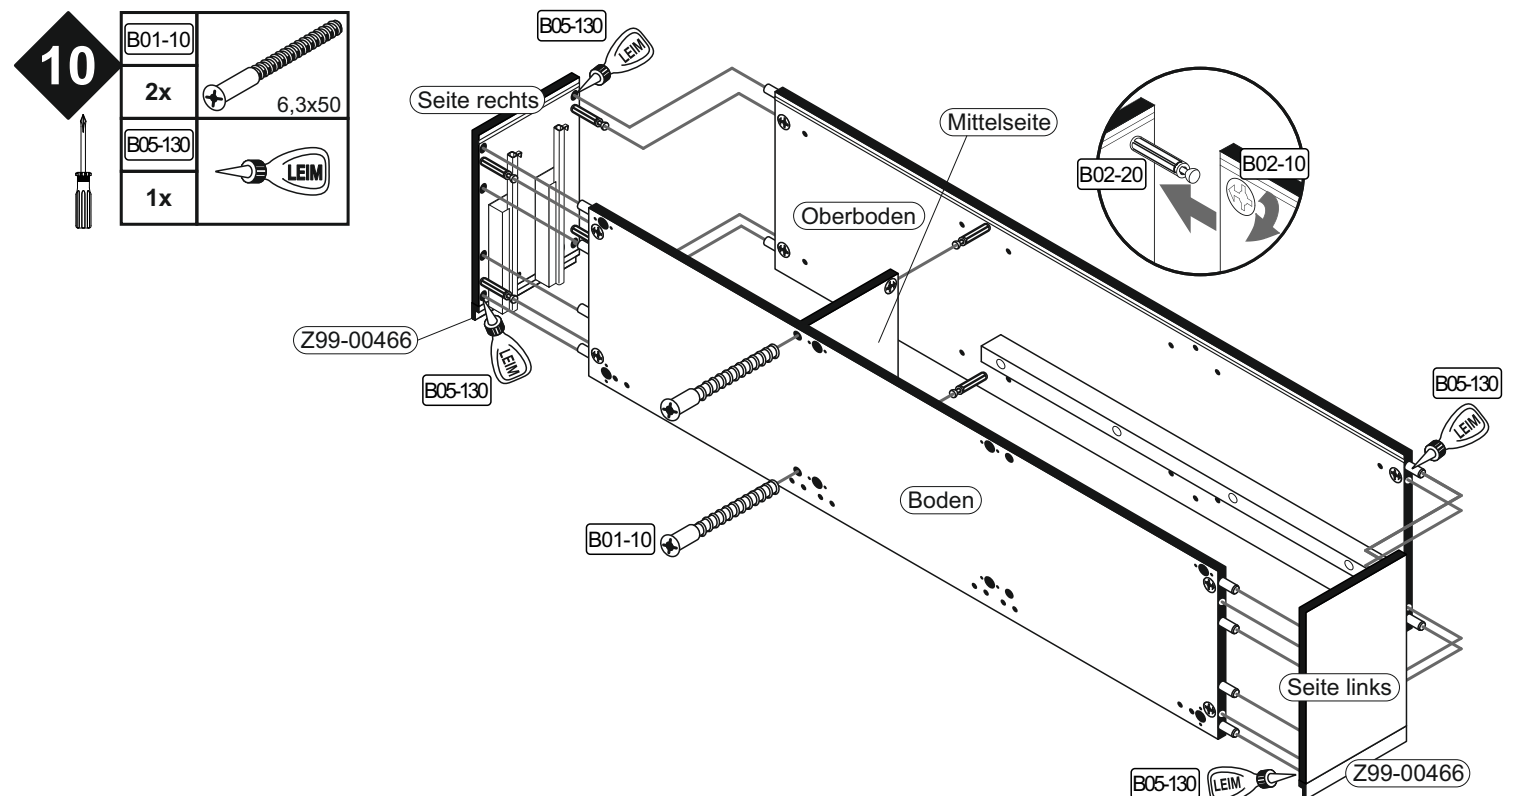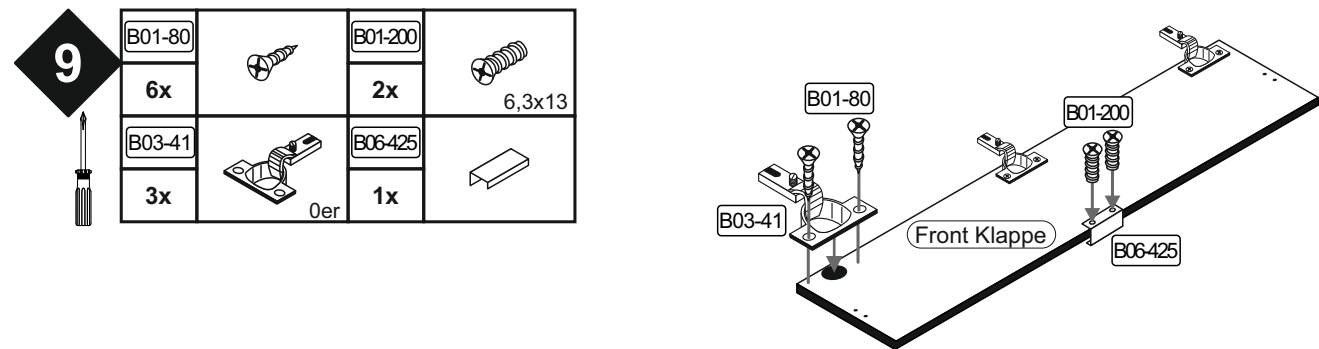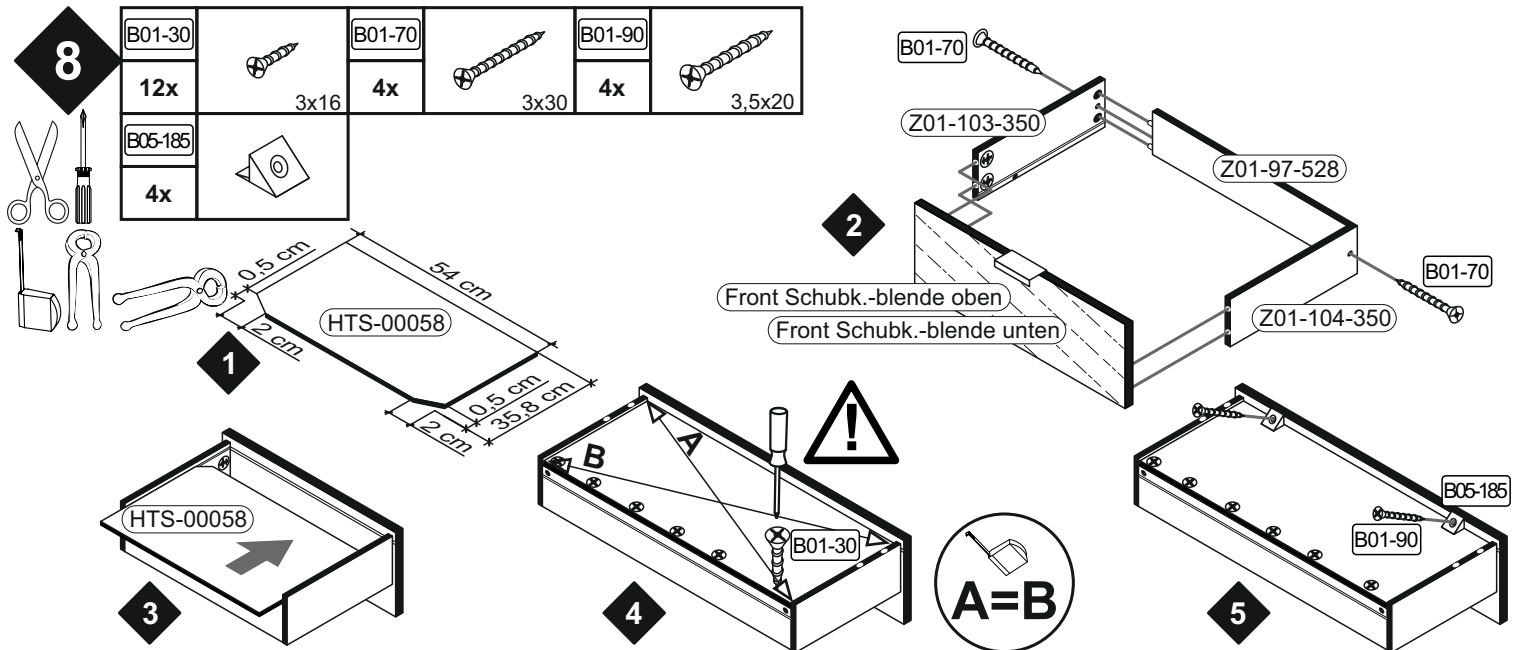



	B01-30 20x	3x16
	B01-90 4x	3,5x20
	B01-123 12x	4x15
	B05-185 4x	
	B02-173 6x	

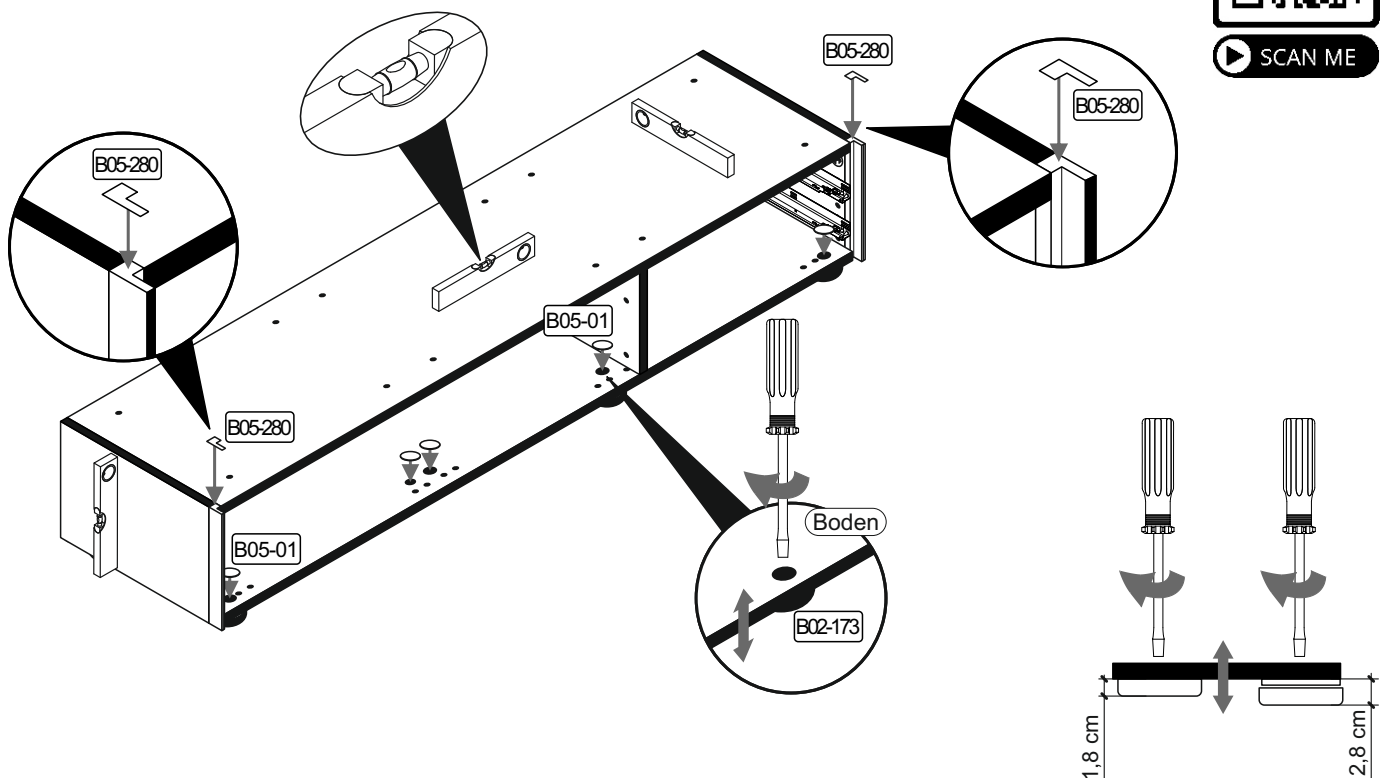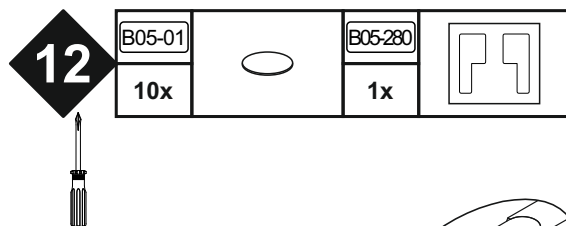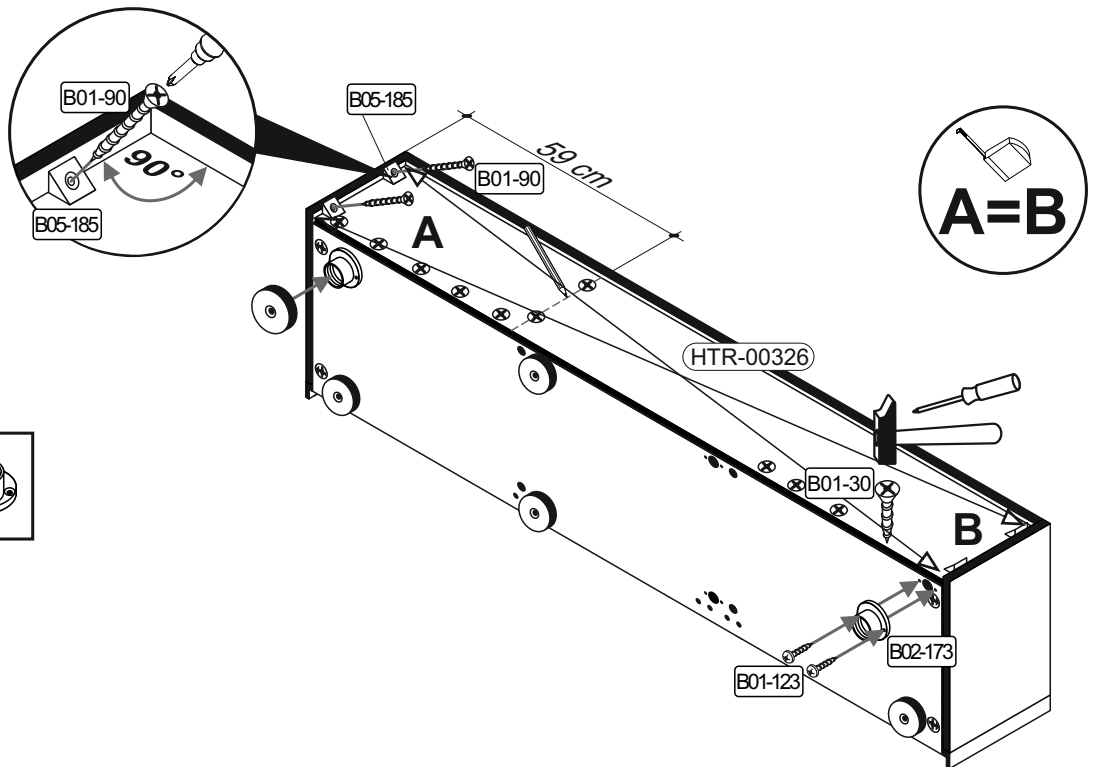



6

13





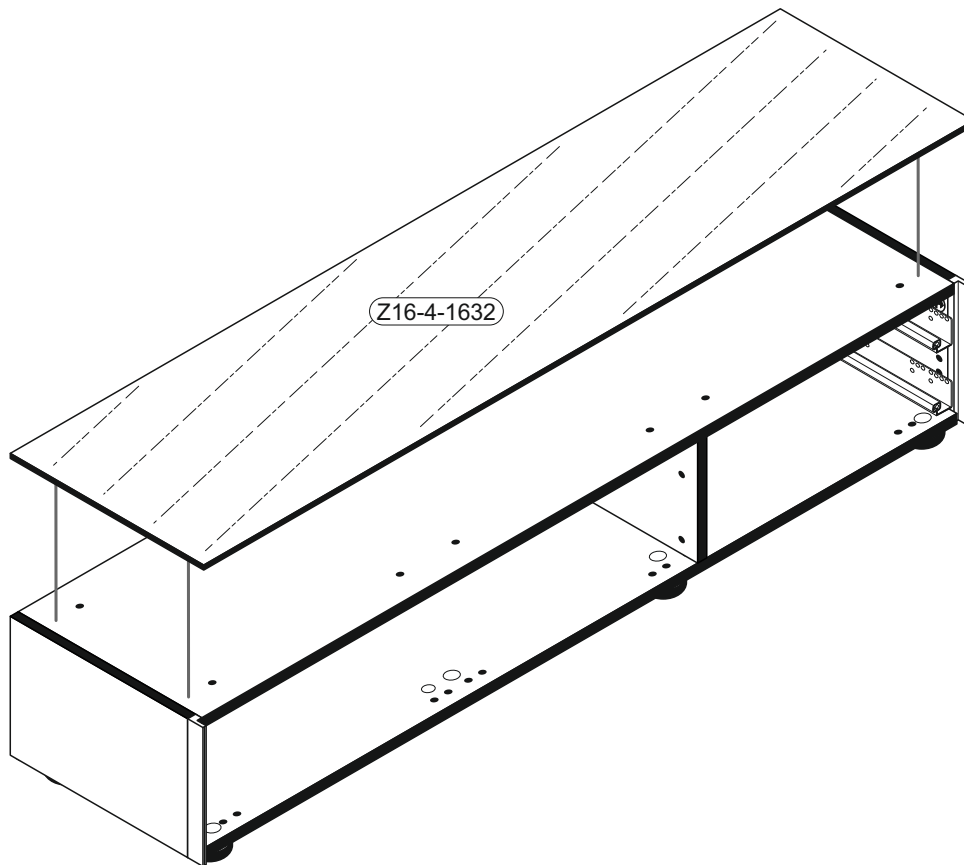


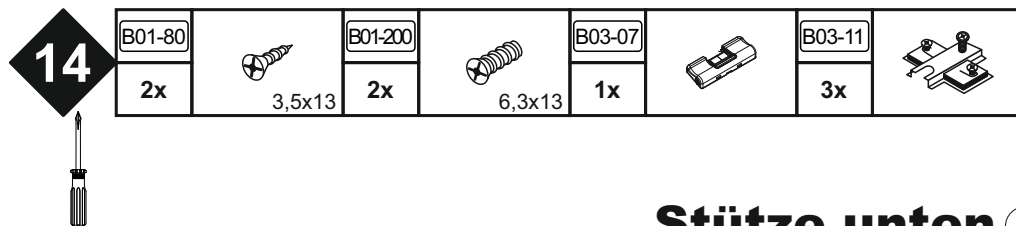


Stütze unten (Z07-27) überdrehen

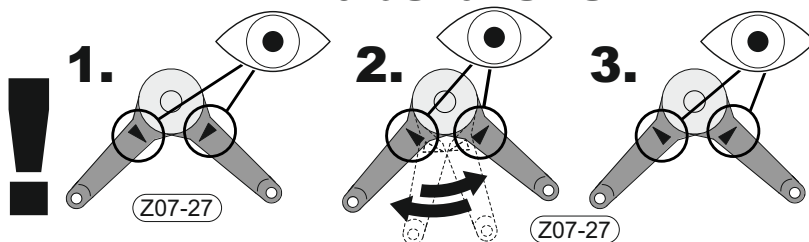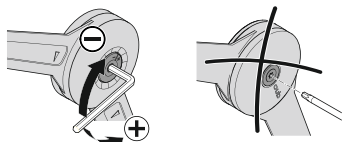

Montage der Türdämpfung

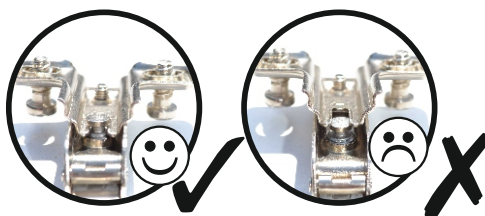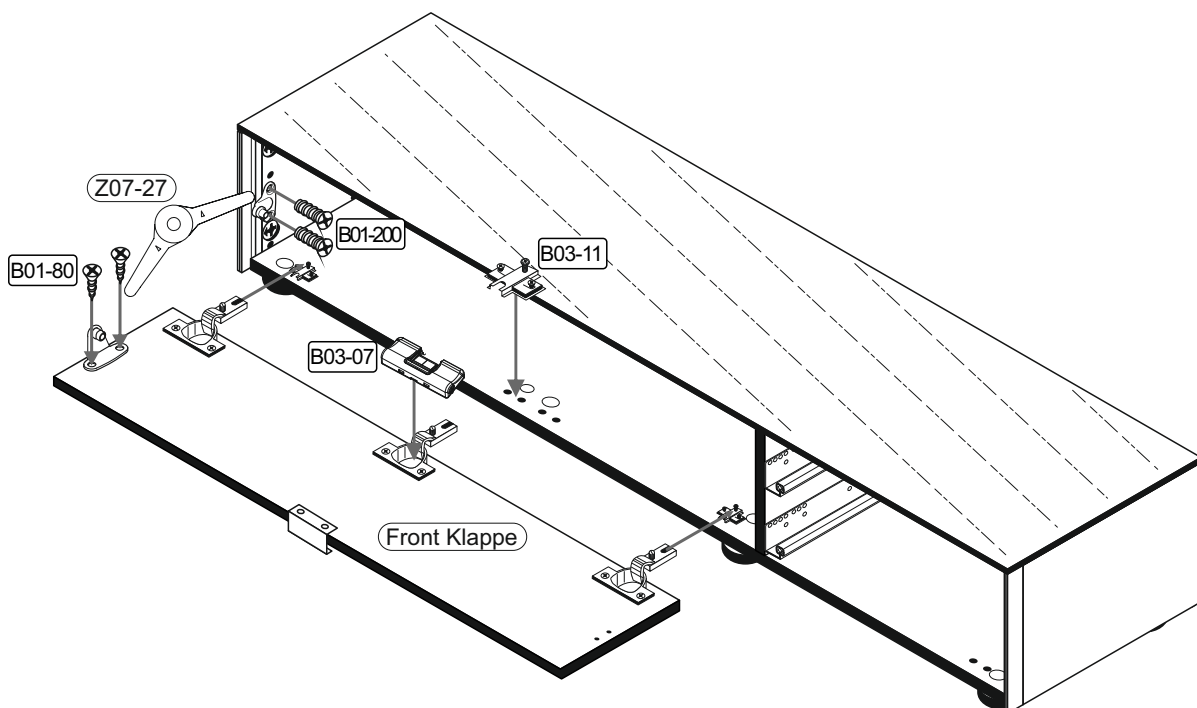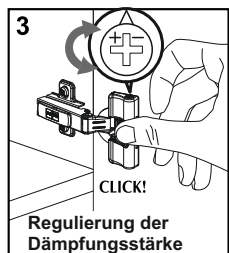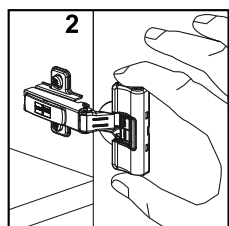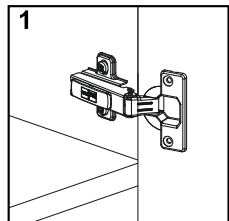


Türen einstellen (Scharniere justieren)
Adjusting the doors (adjusting the hinges)
Régler les portes (ajuster les charnières)
Sistemare le porte (regolare le cerniere)
Deuren instellen (scharnieren afstellen)
Nastawić drzwi (wyregulować zawiasy)
Vyrovnajte dviřka (seřid'te závěsy)
Nastavenie dverí (nastavenie závesov)
Állítsa be az ajtókat (állítsa be a zsanérokot)
Reglare usi (ajustare balamale)
Kapıların ayarlanması (menteselerin seviye ayarı)
Регулировка дверей (регулировка шарнира)

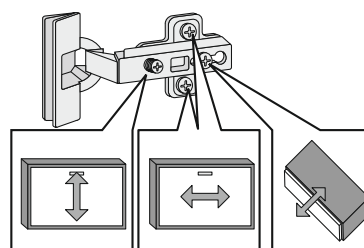






Einbau des Schubkastens

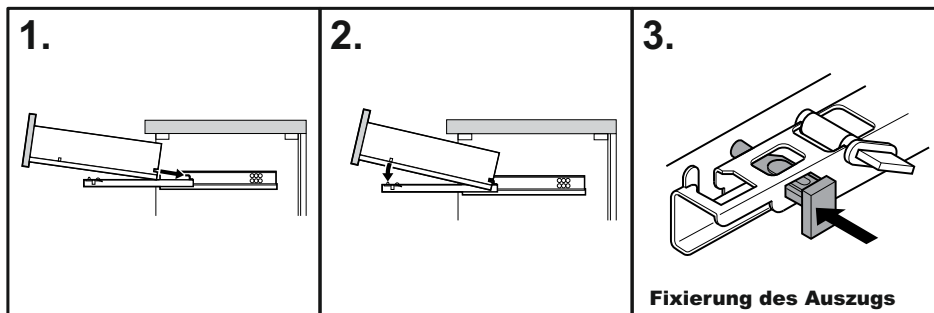








Ausbau des Schubkastens

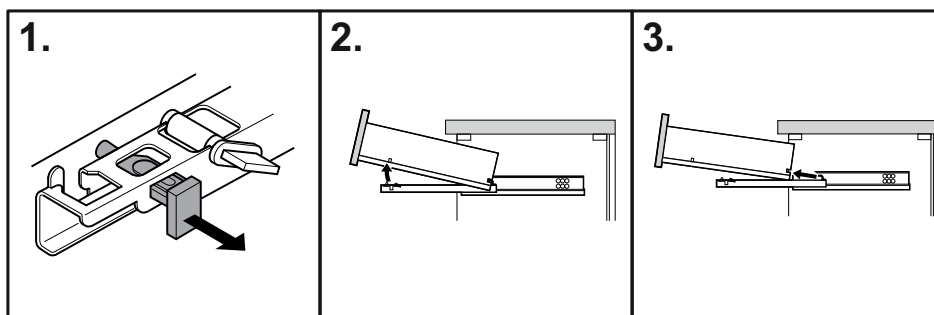




Höhenverstellung des Schubkastens

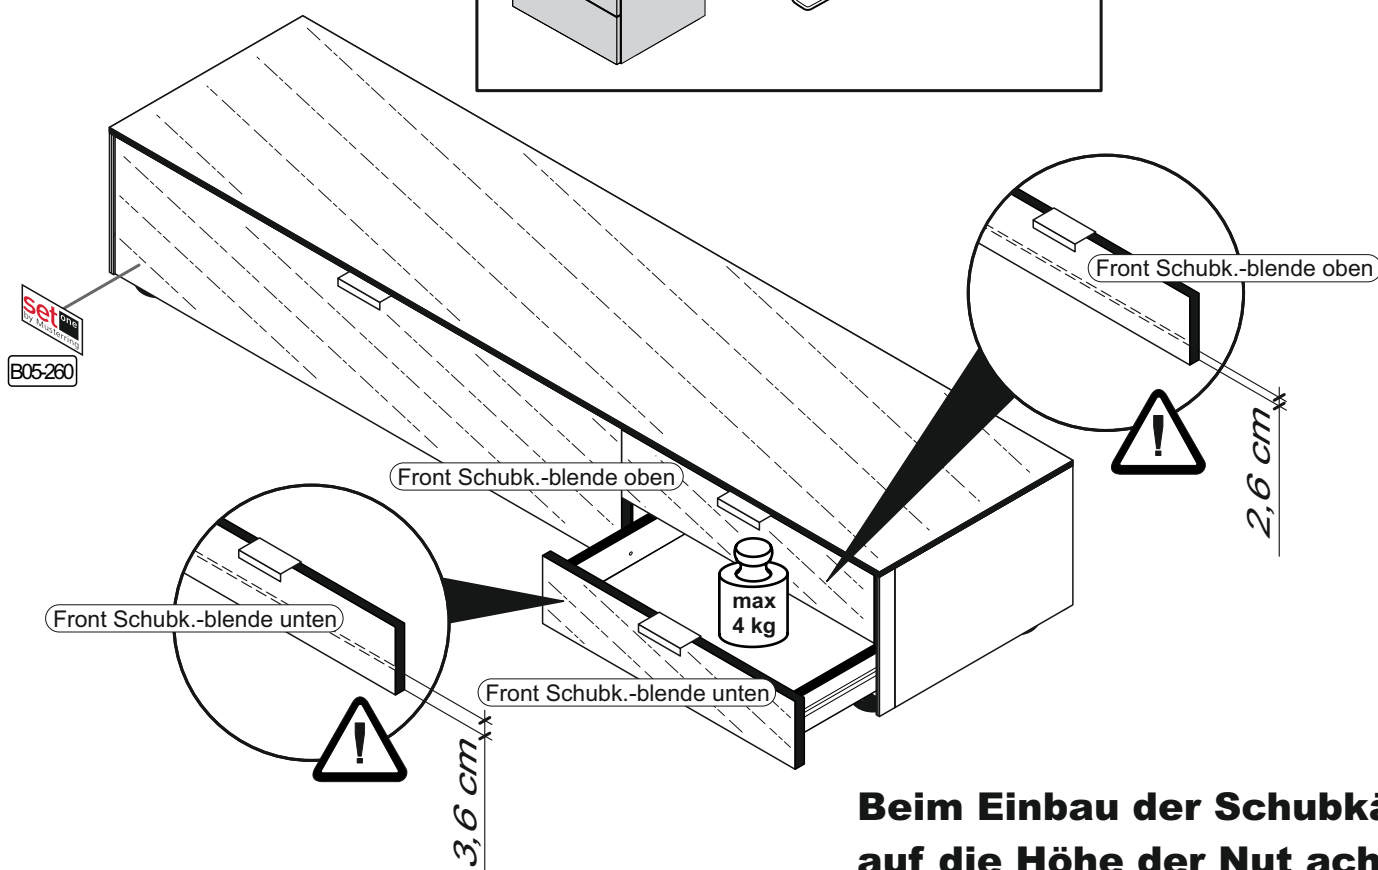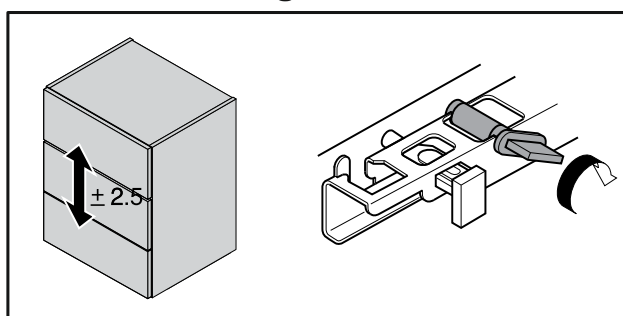

**Beim Einbau der Schubkästen
auf die Höhe der Nut achten.**

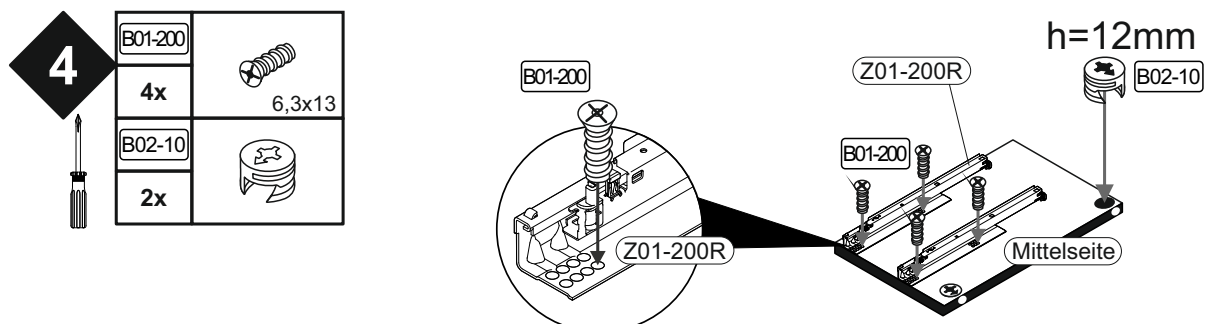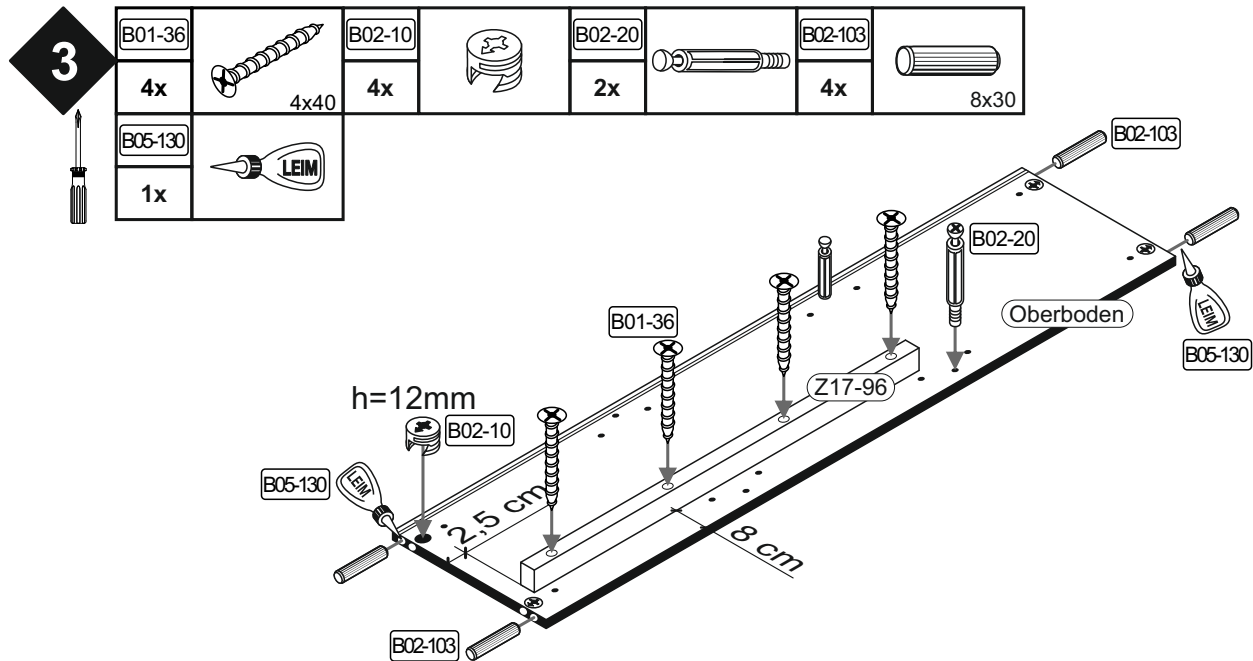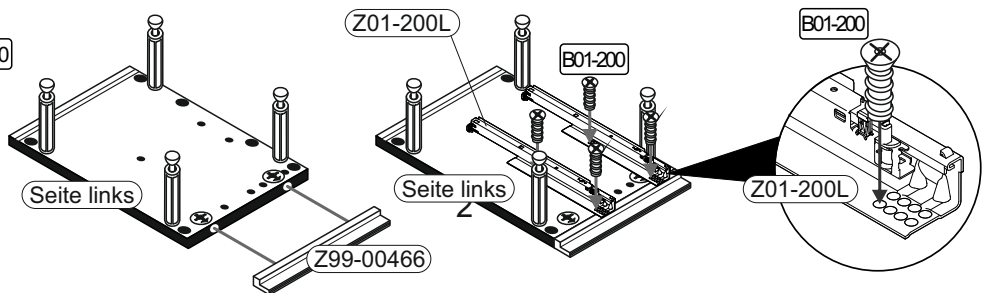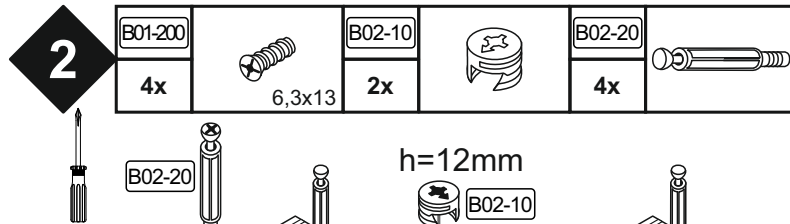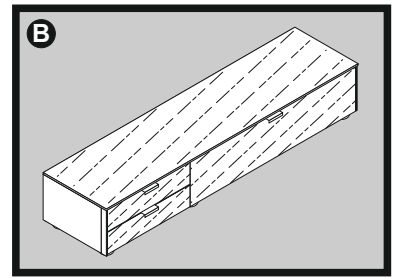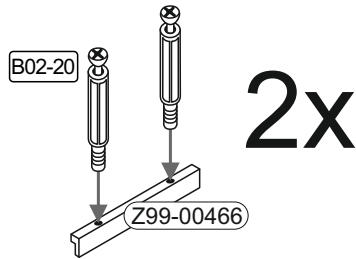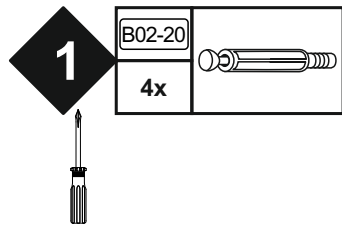




CHICAGO

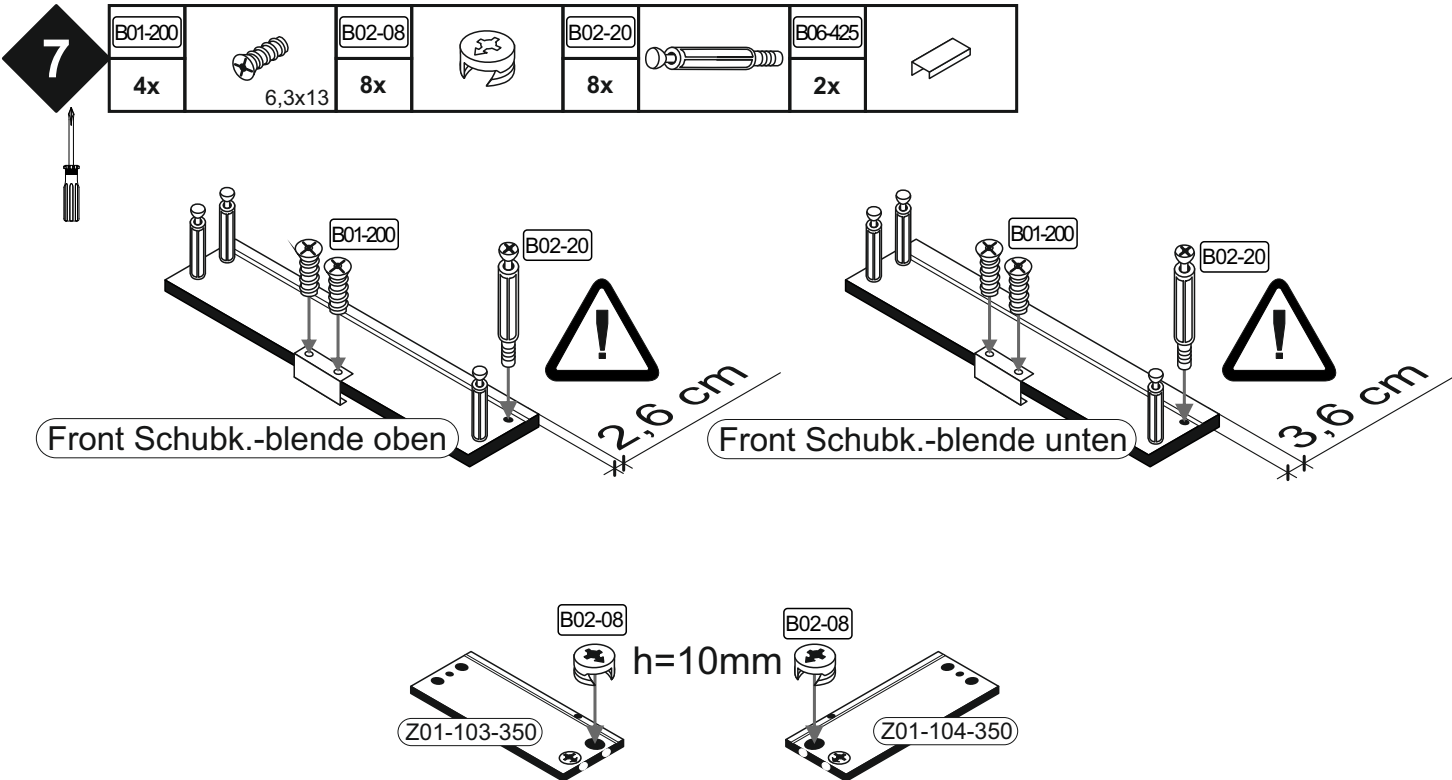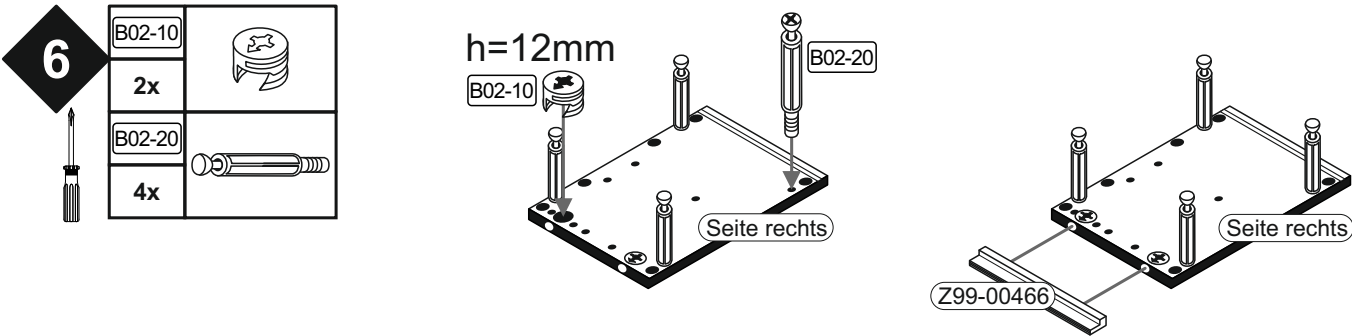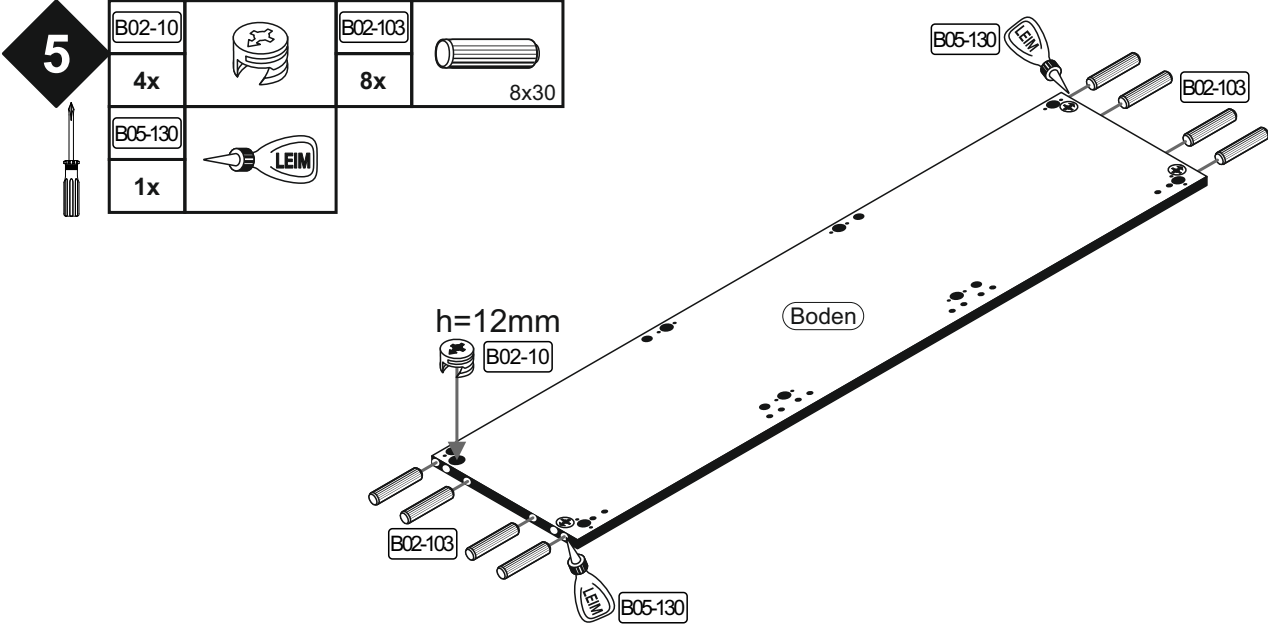

8



B01-30		B01-70		B01-90	
12x	3x16	4x	3x30	4x	3,5x20

B05-185	
4x	

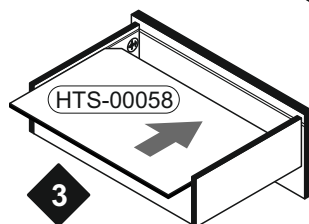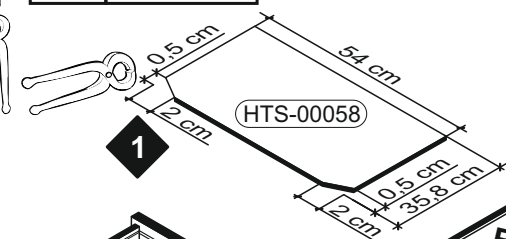


2

Front Schubk.-blende oben
Front Schubk.-blende unten

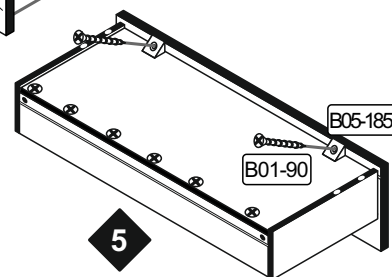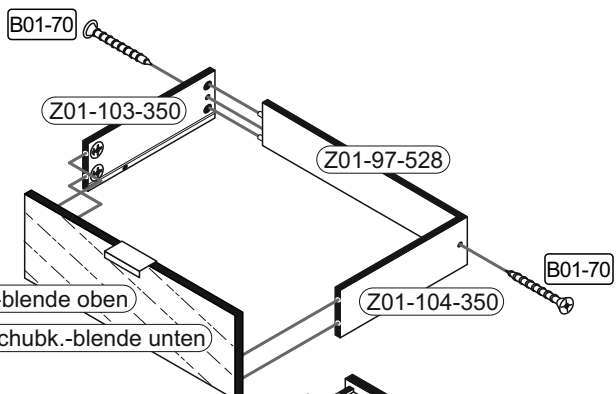


9

B01-80		B01-200	
6x		2x	6,3x13
B03-41		B06-425	
3x	0er	1x	

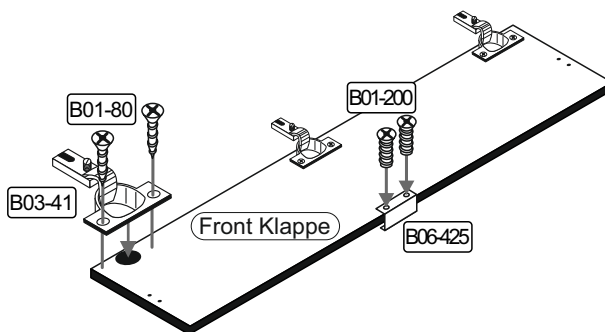

10

B01-10	
2x	6,3x50
B05-130	
1x	

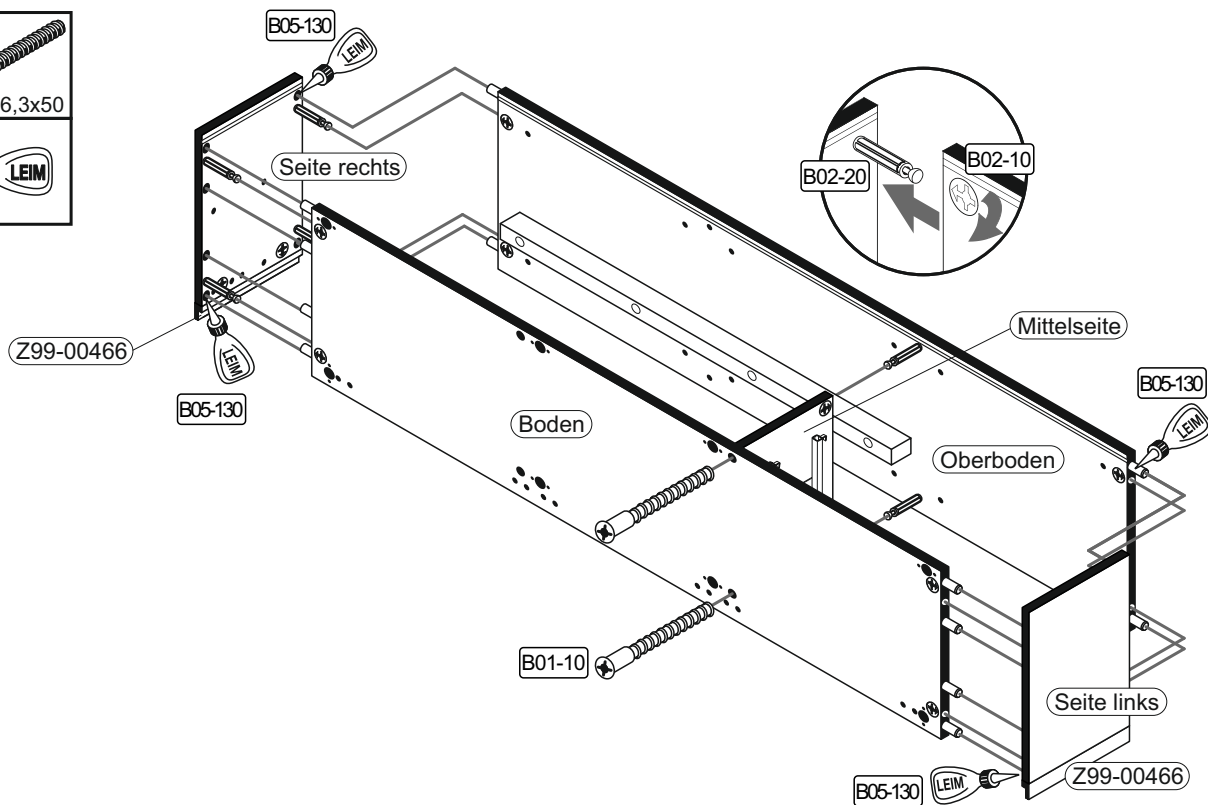

CHICAGO

11


B01-30	
20x	3x16
B01-90	
4x	3,5x20
B01-123	
12x	4x15
B05-185	
4x	
B02-173	
6x	

12

B05-01		B05-280	
10x		1x	

Höhenverstellung der Möbelfüße

13




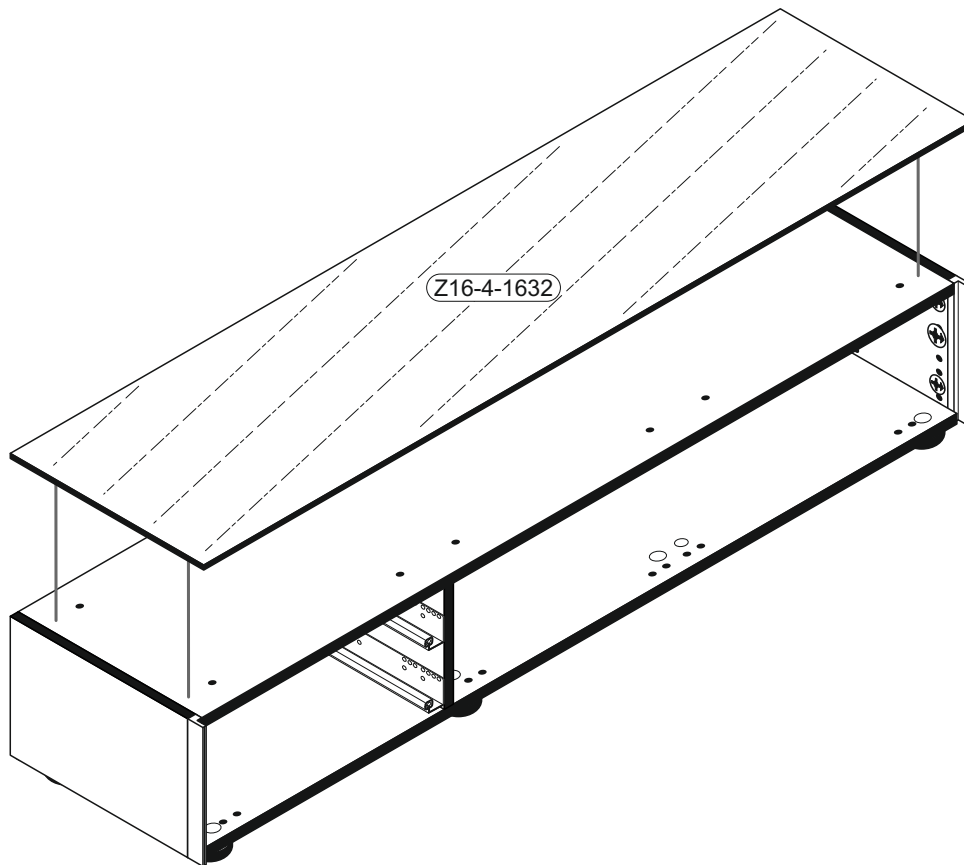


14







B01-80		B01-200		B03-07		B03-11	
2x		2x		1x		3x	
	3,5x13		6,3x13				


Stütze unten (Z07-27) überdrehen

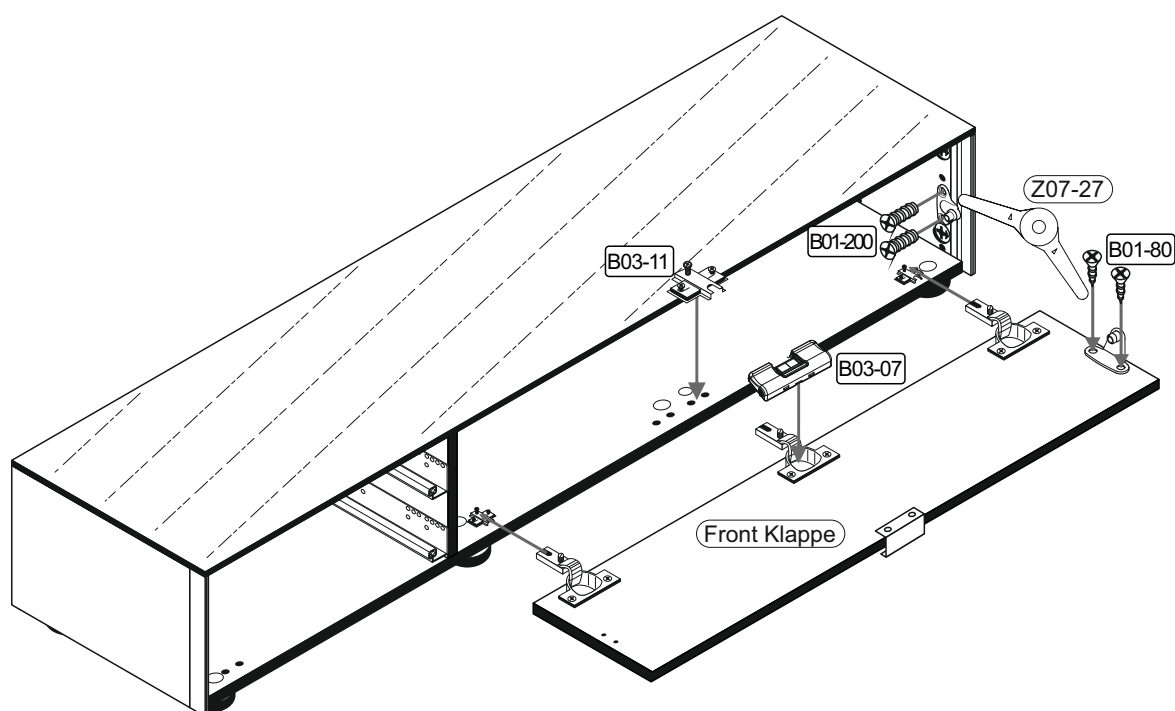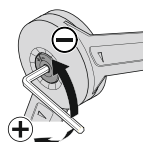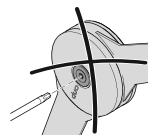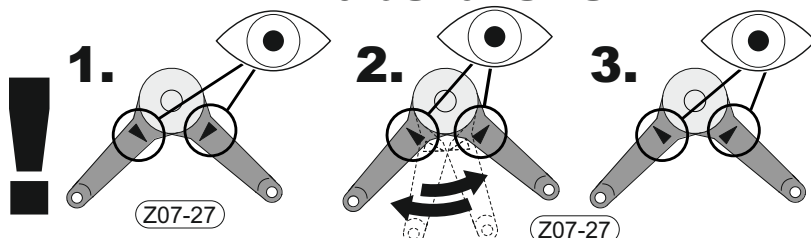

Montage der Türdämpfung

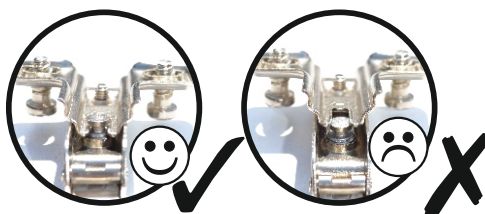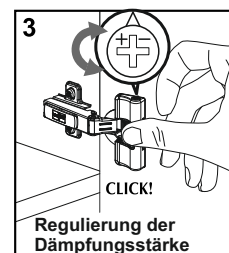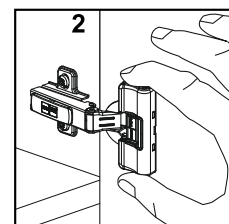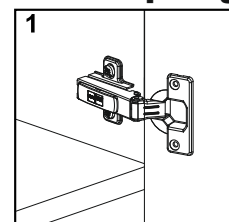


Türen einstellen (Scharniere justieren)
Adjusting the doors (adjusting the hinges)
Régler les portes (ajuster les charnières)
Sistemare le porte (regolare le cerniere)
Deuren instellen (scharnieren afstellen)
Nastawić drzwi (wyregulować zawiasy)
Vyrovnajte dviřka (seřid'te závěsy)
Nastavenie dverí (nastavenie závesov)
Állítsa be az ajtókat (állítsa be a zsanérokot)
Reglare uși (ajustare balamale)
Kapıların ayarlanması (menteselerin seviye ayarı)
Регулировка дверей (регулировка шарнира)

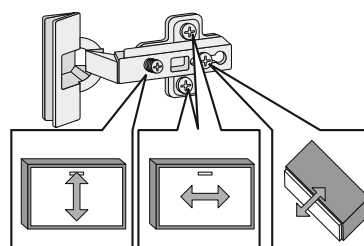


SCAN ME





Einbau des Schubkastens

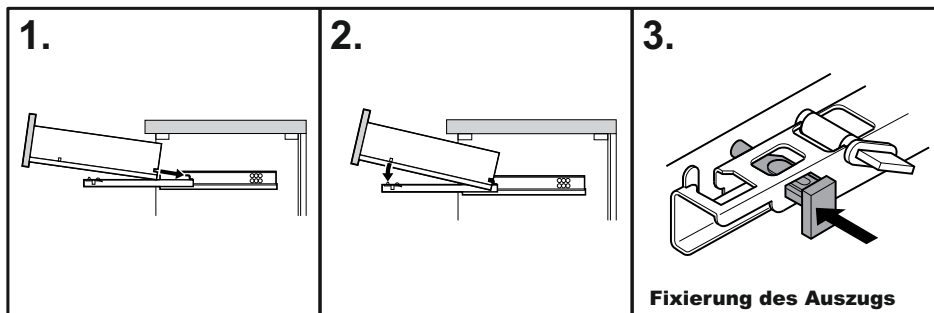

Ausbau des Schubkastens

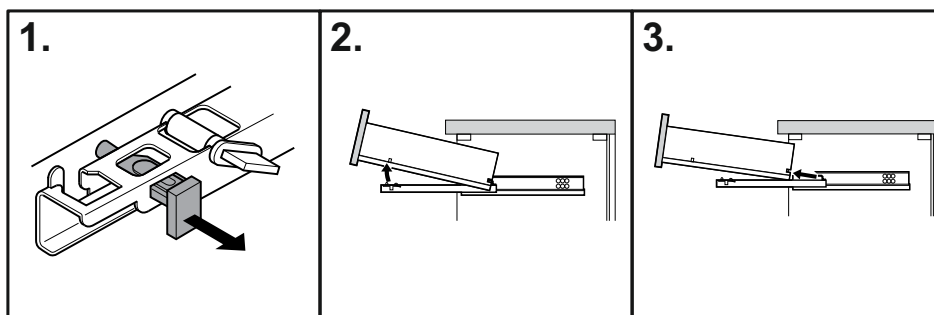

Höhenverstellung des Schubkastens

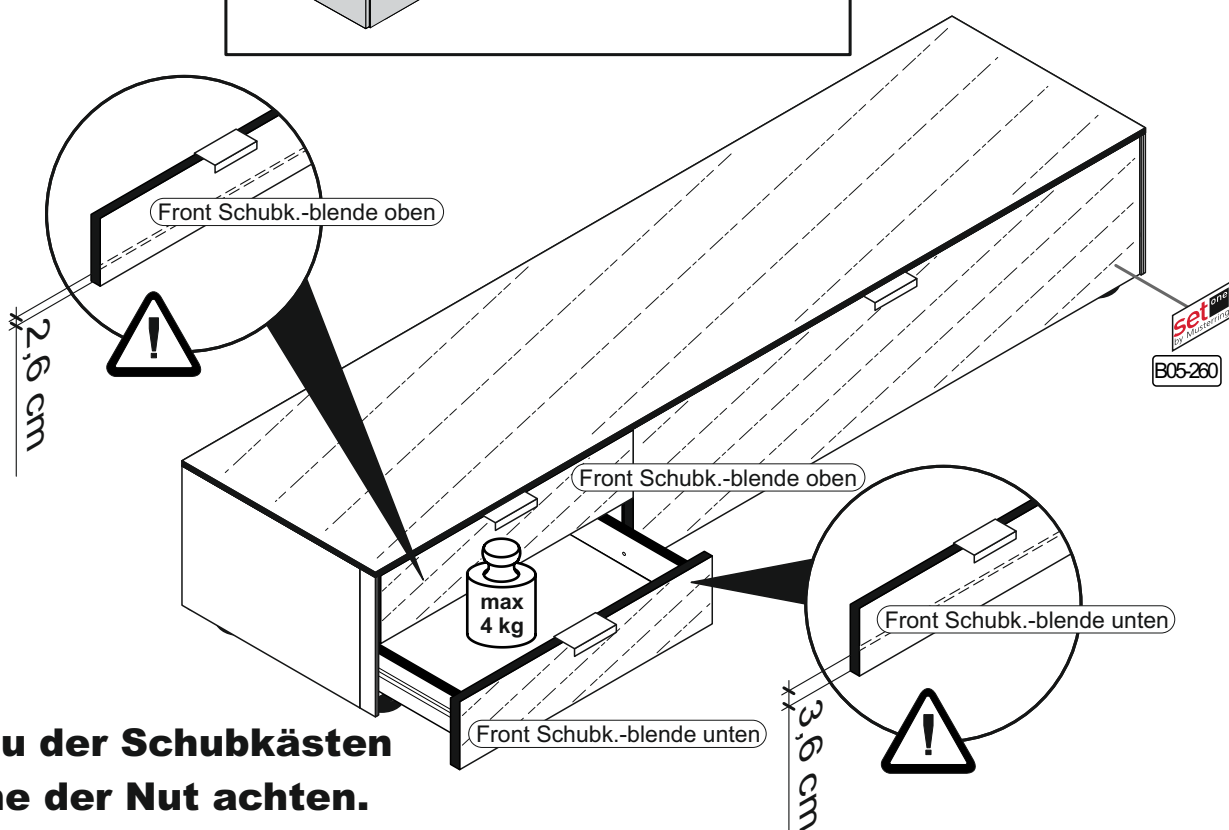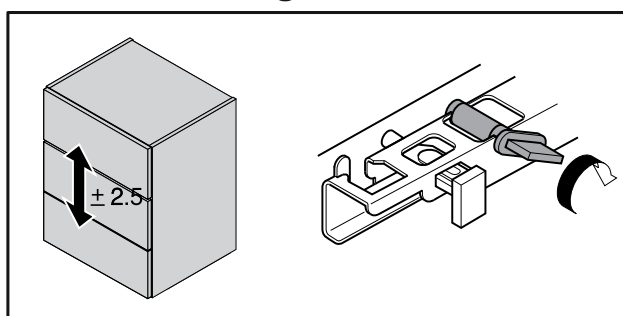

**Beim Einbau der Schubkästen
 auf die Höhe der Nut achten.**