


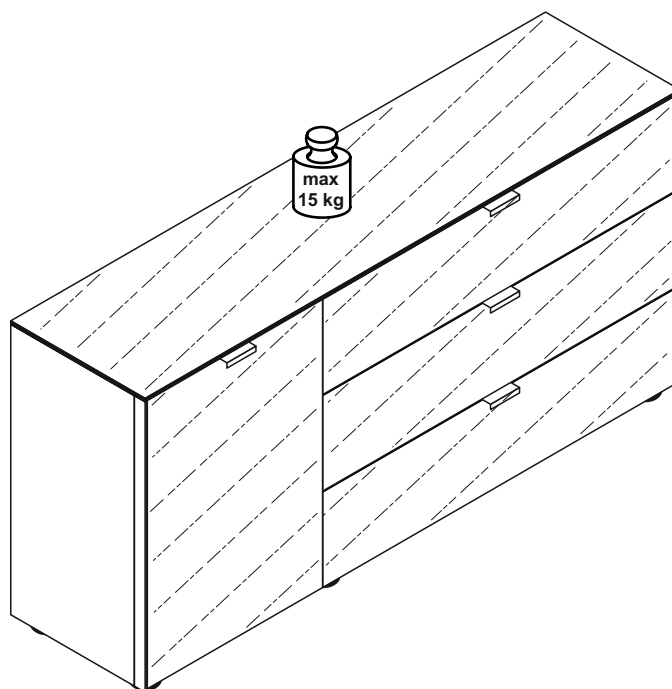

Artikel.-Nr.:

0772-KO_121 GL

Montageanleitung.-Nr.:

MA1-00374

REPC-Nr.:	Service • Assistenza • Dienstverlening • Serwis Servis • Szerviz • Сервисная служба



SCAN ME

Beutel 0772-KO_121 GL 0-15 Colli 3/4

B01-10 2x	 6,3x50	B01-30 64x	 3x16	B01-70 4x	 3x30	B01-80 14x	 3,5x13	B01-90 4x	 3,5x20
B01-122 4x	 4x13	B01-200 18x	 6,3x13	B02-08 8x	 h=10mm	B02-10 20x	 h=12mm	B02-20 28x	B02-160 8x

Beutel 0772-KO_121 0-35 Colli 3/4

B03-07 2x	 2x	B03-11 6x	 6x	B03-42 6x	 8er
--------------	--------	--------------	--------	--------------	---------

Beutel 0772-KO_121 0-55 Colli 1/4

B01-36 4x	 4x40
--------------	----------

Beutel BT1-00001 Colli 2/4


B05-265 1x	 set one by Musterring Pflegeanweisung
---------------	---

Beutel BT1-00005 Colli 3/4

B01-123 12x	 4x15	B02-173 6x	 6x
----------------	----------	---------------	--------

Beutel 0772-KO_121 0-45 Colli 3/4

B02-103 12x	 8x30	B05-01 6x	 LEIM
B05-185 4x	 1x	B05-260 1x	 set one by Musterring
B06-425 4x	 1x	B05-280 1x	 1x



Colli 1/4

1x 0772-KO_121 -Front Tür	2x HTS-00057 1123 x 358	2x 1111 x 146 Z01-99-1111	1x Z17-96 1100 x 25	2x Z01-200L	2x Z01-200R
956 x 580	2x 1163 x 316 0772-KO_121-Front Schubk.-blende	2x 350 x 160 Z01-105-350	2x 350 x 160 Z01-106-350	2x Z01-72	1x Z07-27
				1x 1163 x 316 0772-KO_121-Front Klappe	

Colli 2/4





1x Mittelboden 1151 x 407	1x Oberboden 1734 x 424	1x HTR-00324 1163 x 309
	1x Boden 1734 x 409	2x HTR-00325 1163 x 320
		5x Z02-500 500 x 50

Colli 3/4




2x Einlegeboden 568 x 397	1x Mittelseite 930 x 409	2x Z99-00464 960 x 34	1x Seite links 960 x 409	1x Seite rechts 960 x 409	2x HTR-00327 950 x 291
---------------------------------	--------------------------------	-----------------------------	--------------------------------	---------------------------------	------------------------------

Colli 4/4

1x Z16-4-1632 1768 x 445

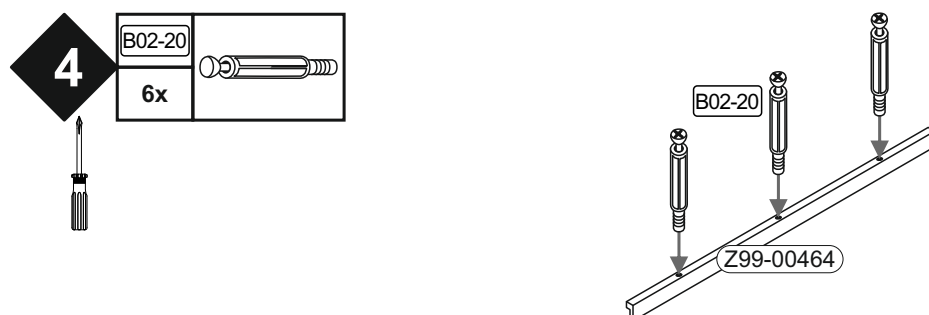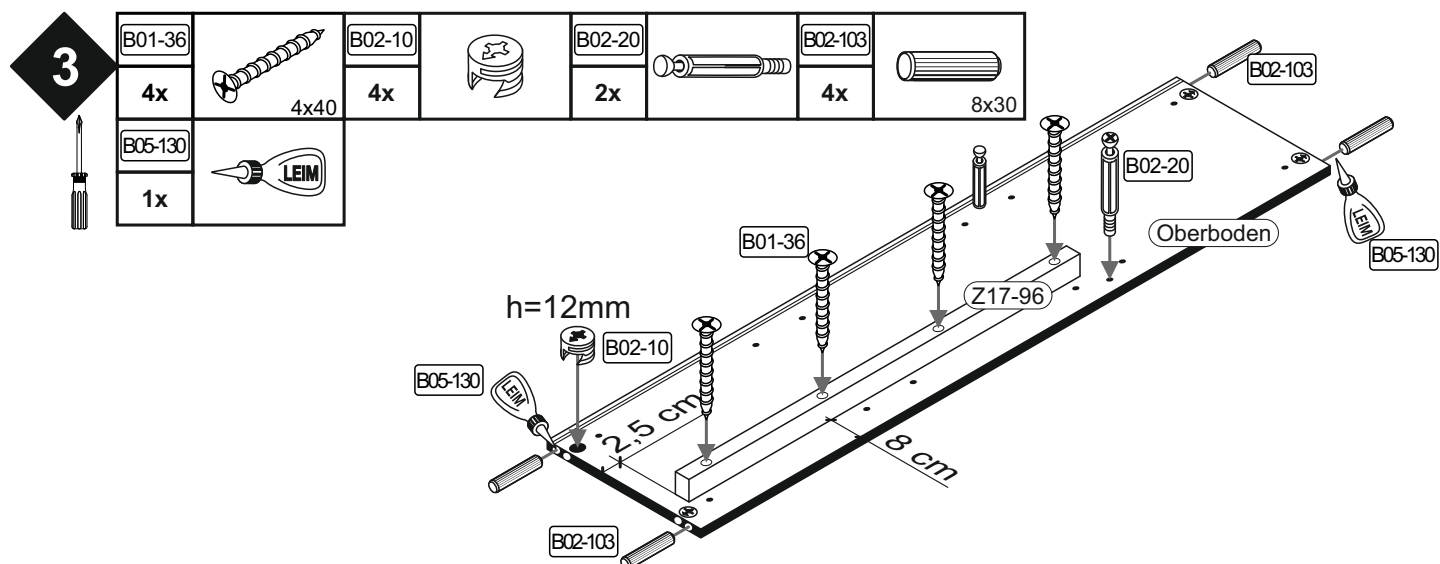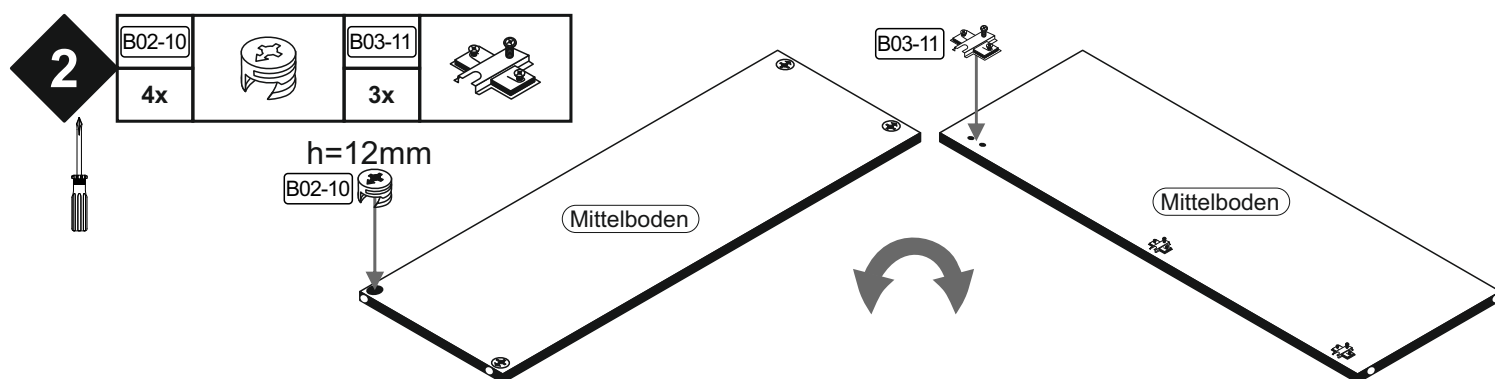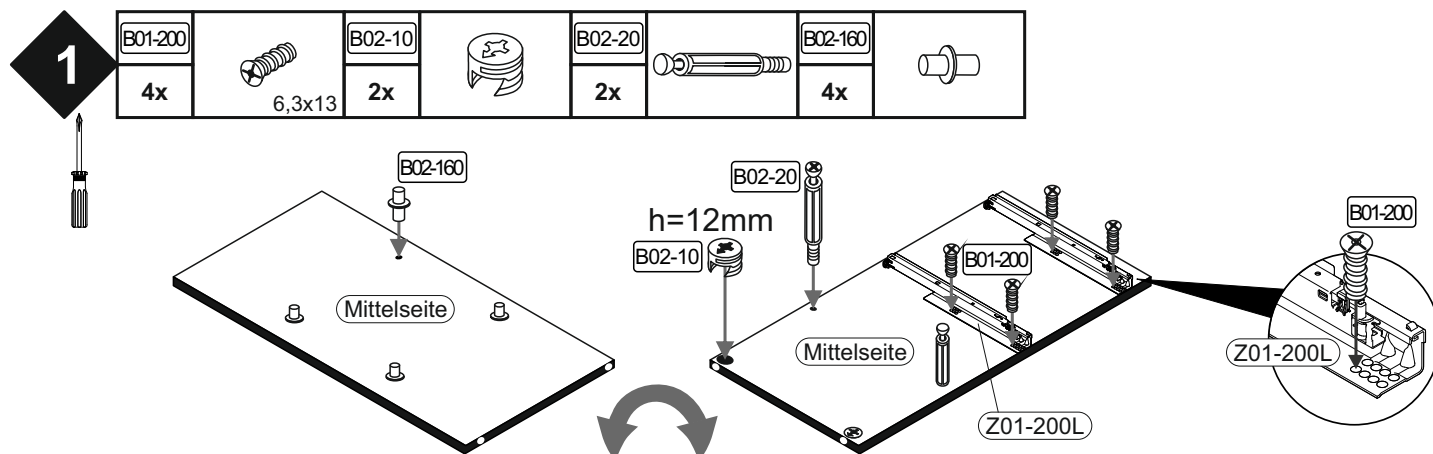


CHICAGO

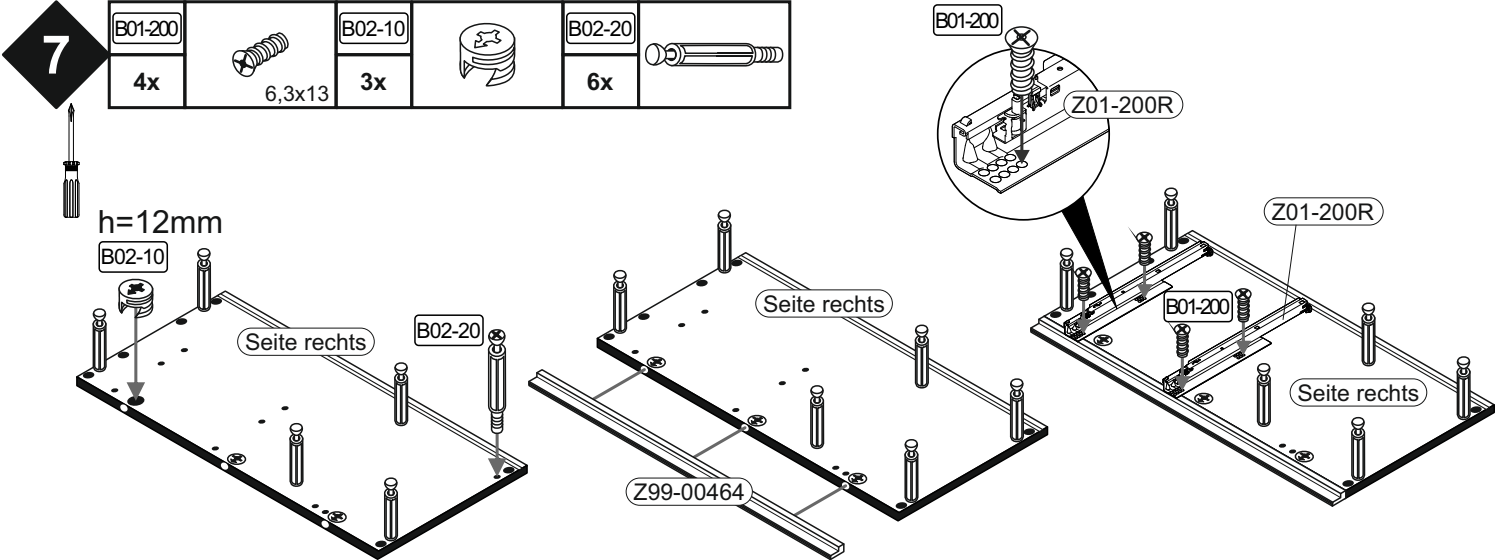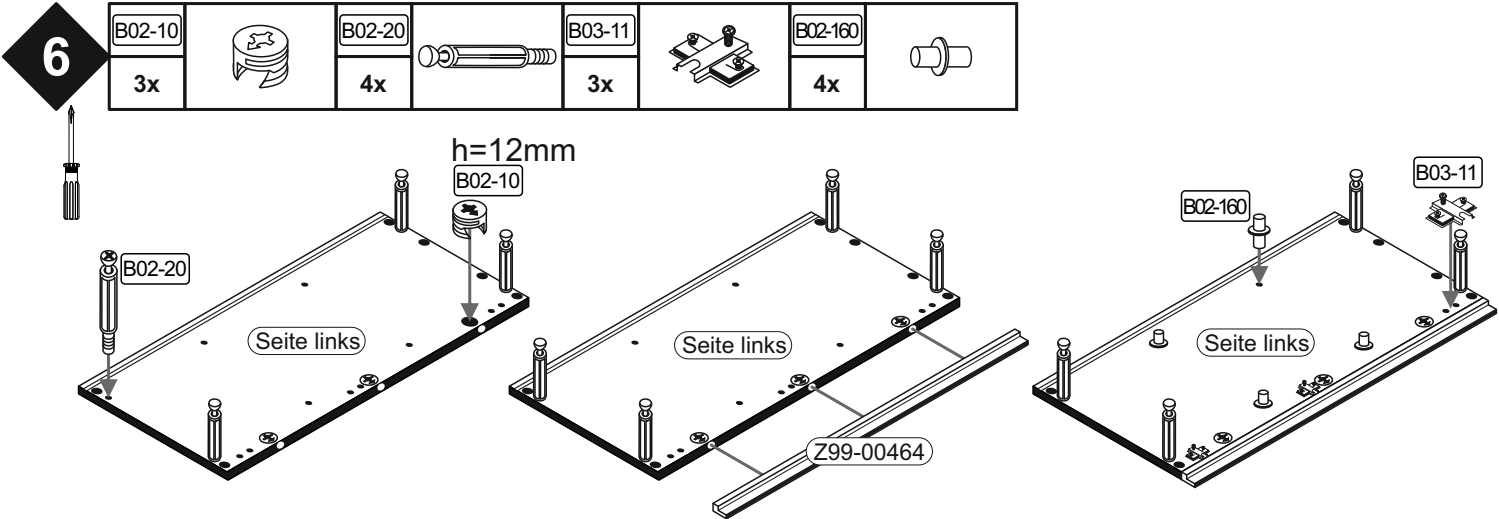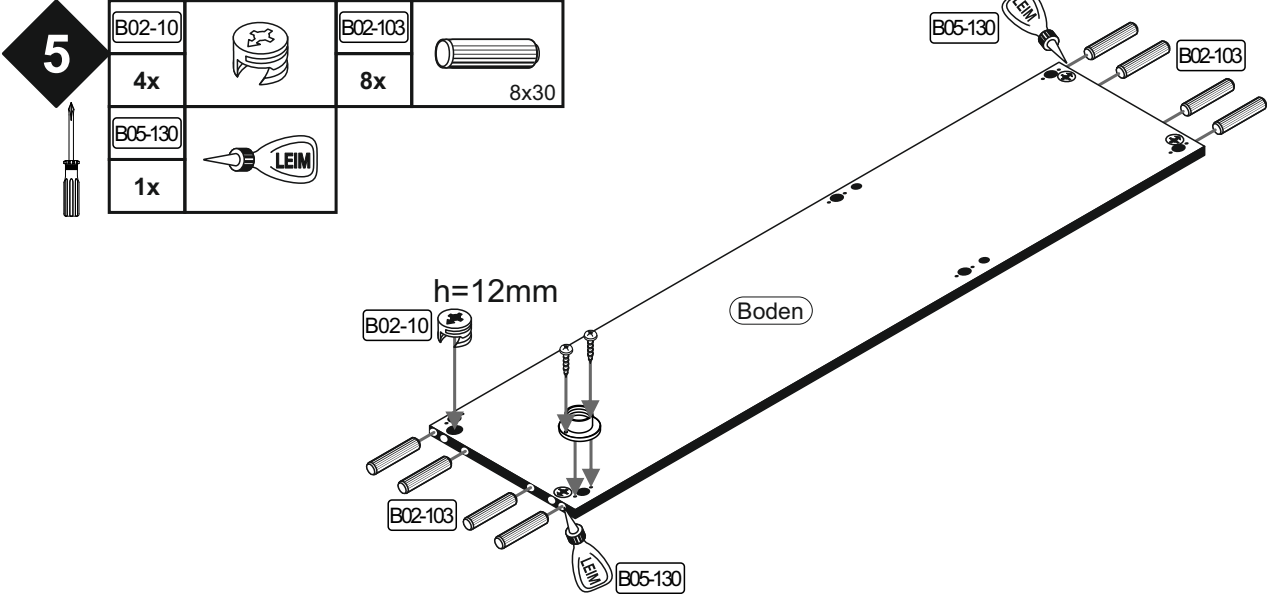




8

B01-80		B03-42	
6x	3,5x13	3x	8er

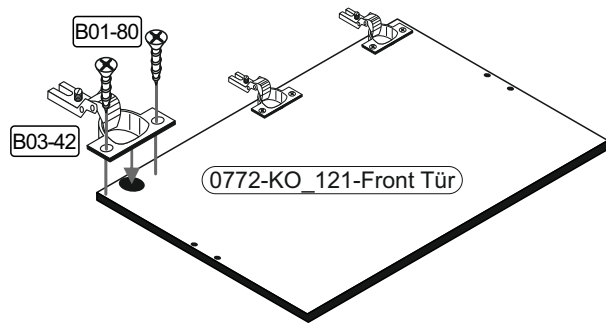

9







B01-200		B02-08		B02-20		B06-425	
4x	6,3x13	8x		8x		2x	

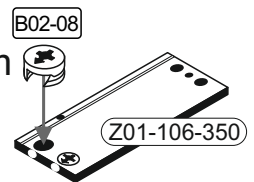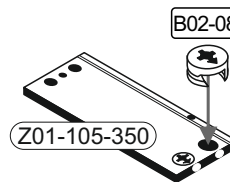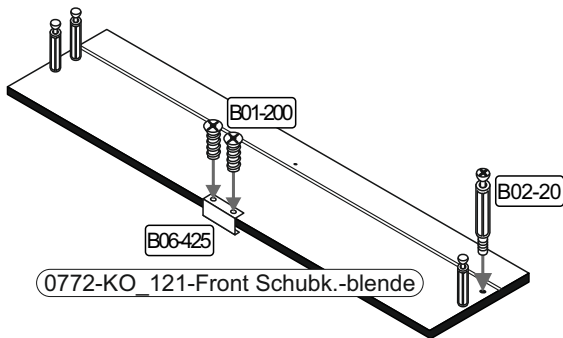

h=10mm

10


B01-30		B01-70	
26x	3x16	4x	3x30
B01-122			
4x	4x13		

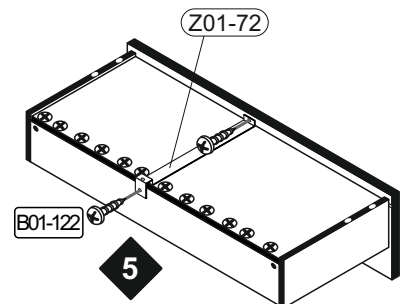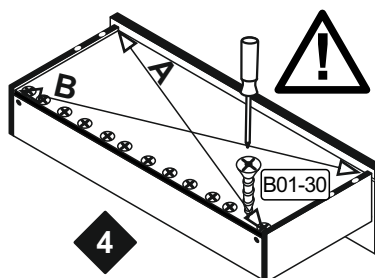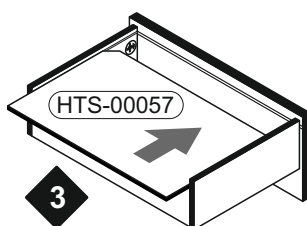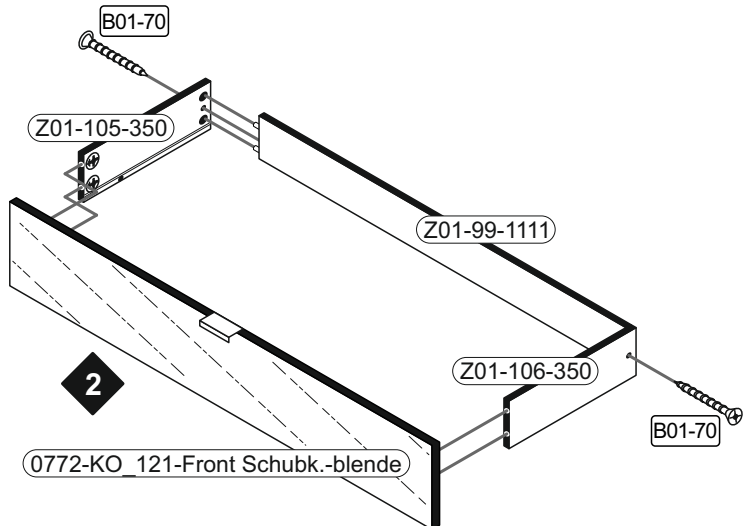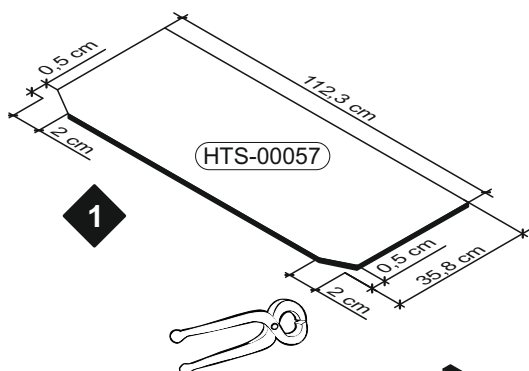

CHICAGO



11

B01-80		B01-200	
6x	3,5x13	2x	6,3x13
B03-42		B06-425	
3x	8er	1x	

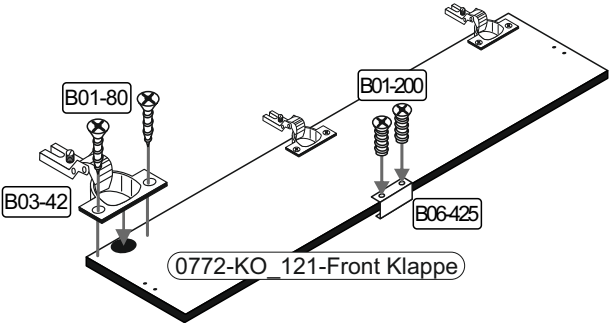


12



B01-10		B05-130	
2x	6,3x50	1x	

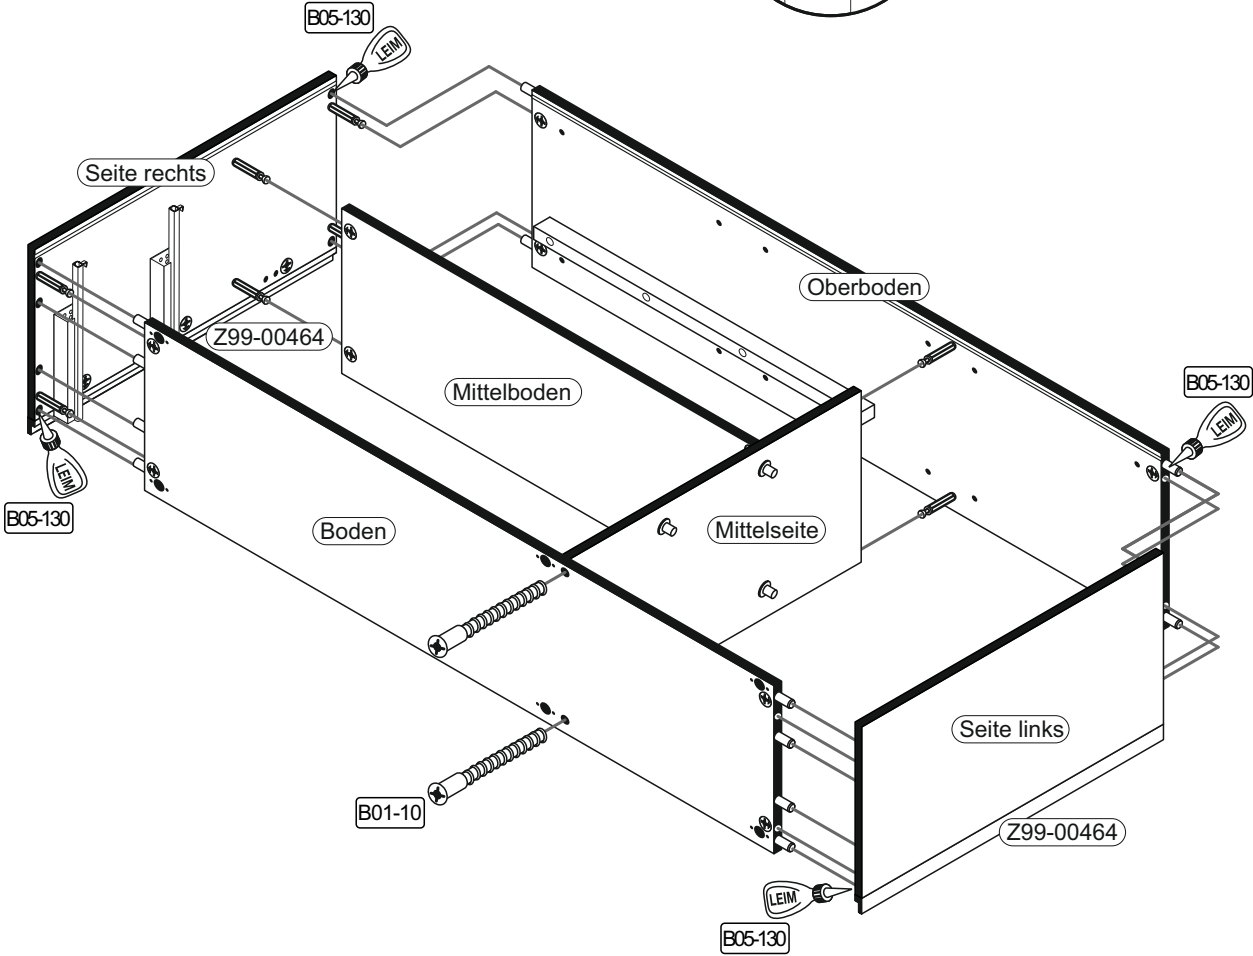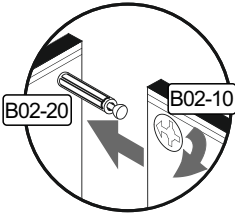

13




B01-30		B01-90	
38x	3x16	4x	3,5x20
B01-123			
12x	4x15		
B05-185			
4x			
B02-173			
6x			

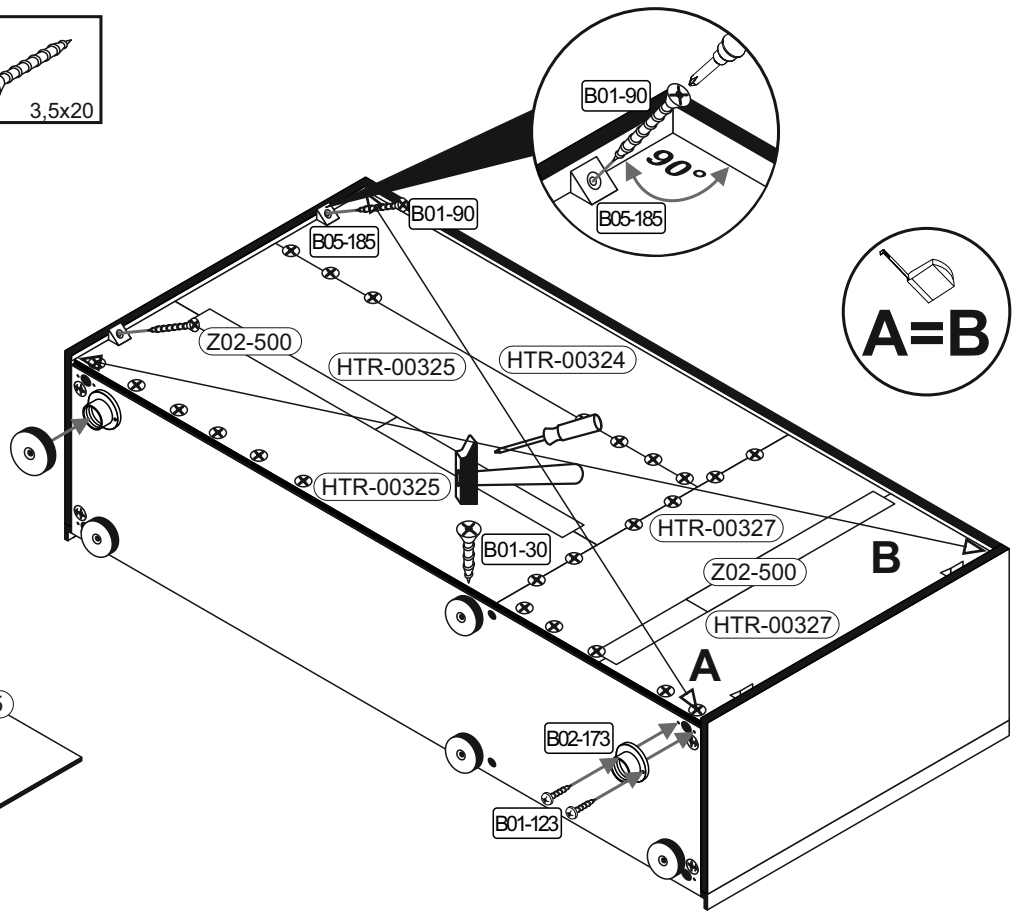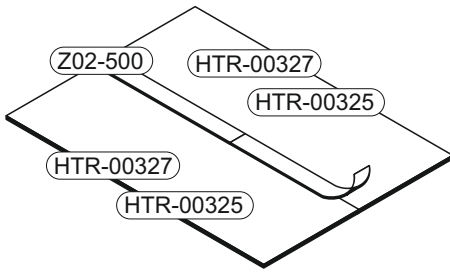


14



B05-01		B05-280	
6x		1x	

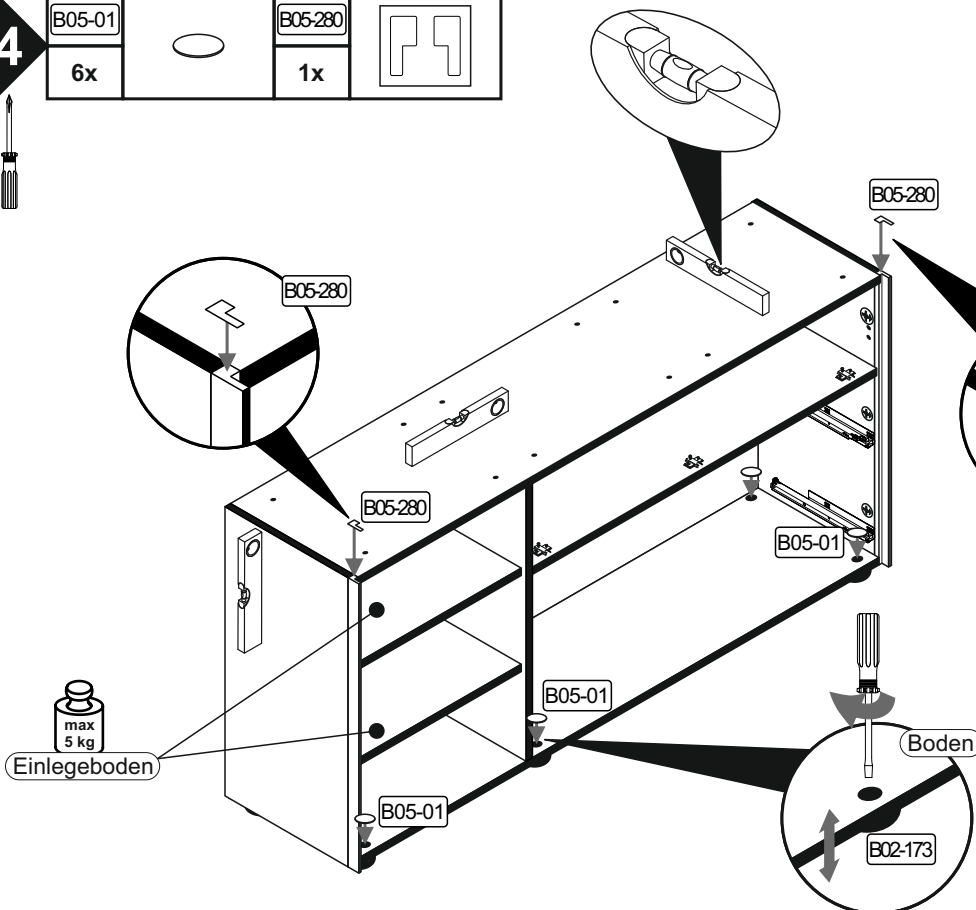


SCAN ME

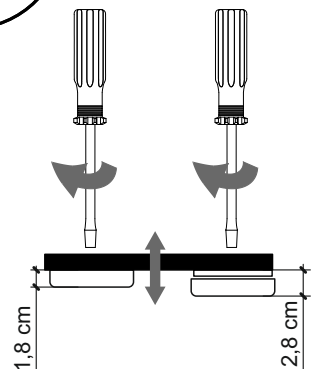


Höhenverstellung der Möbelfüße

15



Einbau des Schubkastens

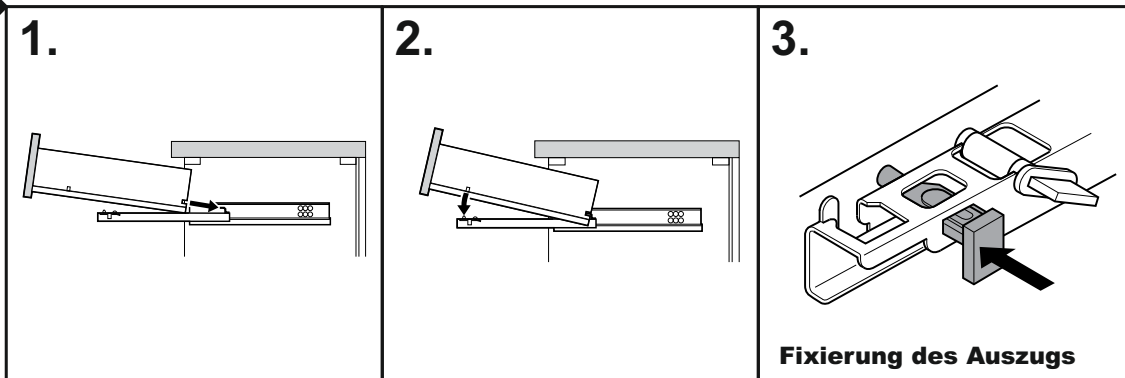


Ausbau des Schubkastens

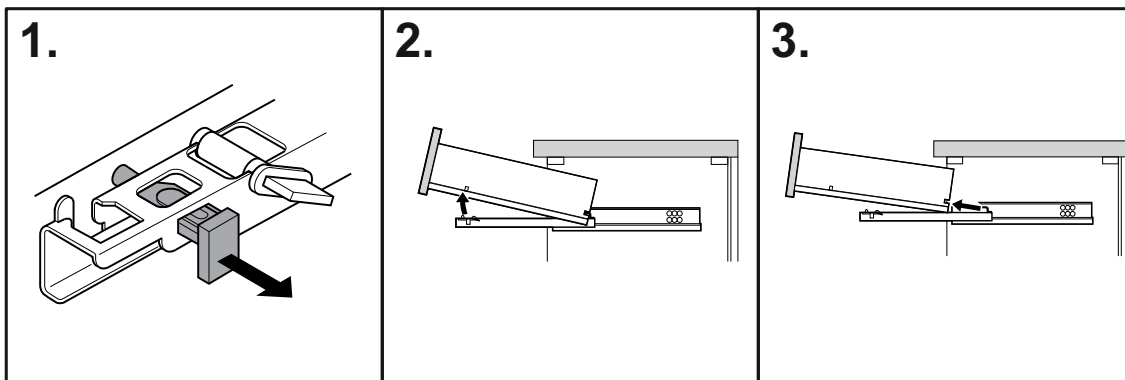

Höhenverstellung des Schubkastens

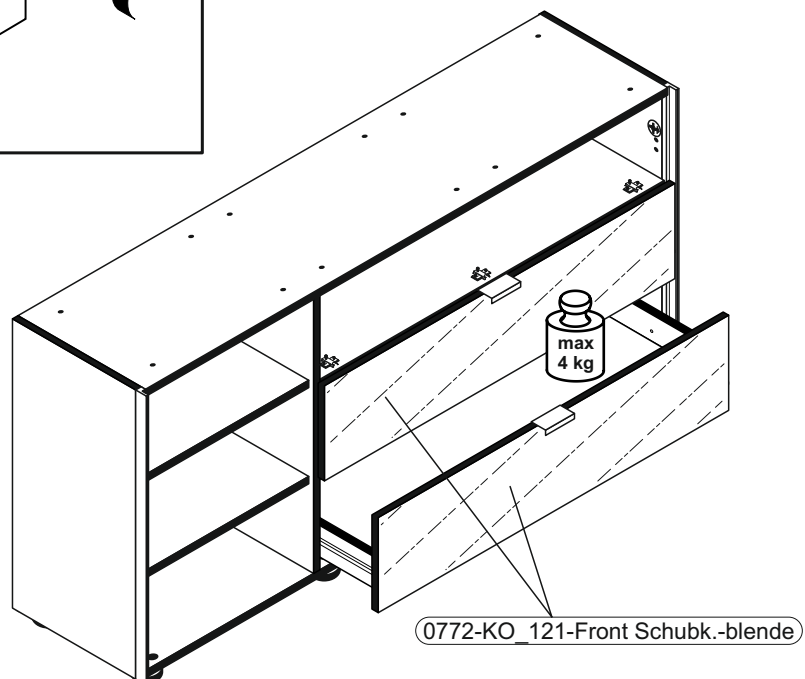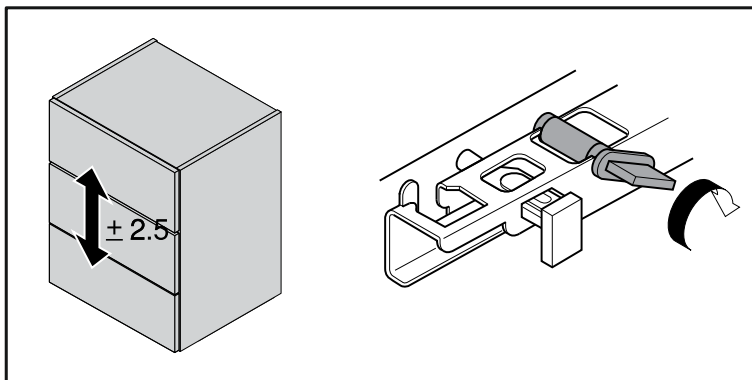


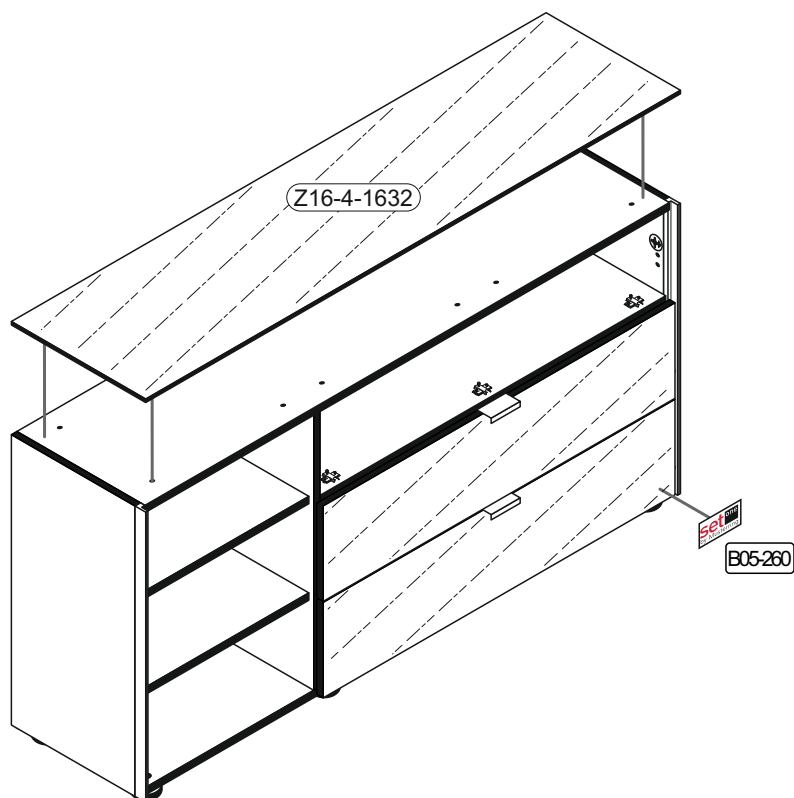


17	B01-80		B01-200		B03-07		B06-425	
	2x	3,5x13	4x	6,3x13	2x		1x	





SCAN ME

Montage der Türdämpfung

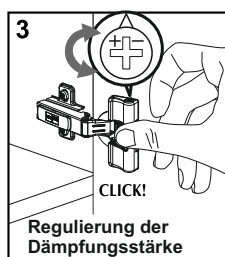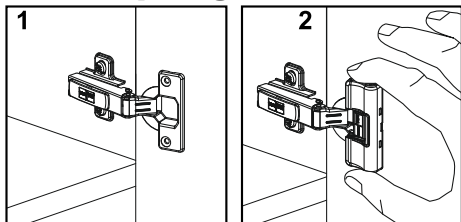

Stütze unten (Z07-27) überdrehen

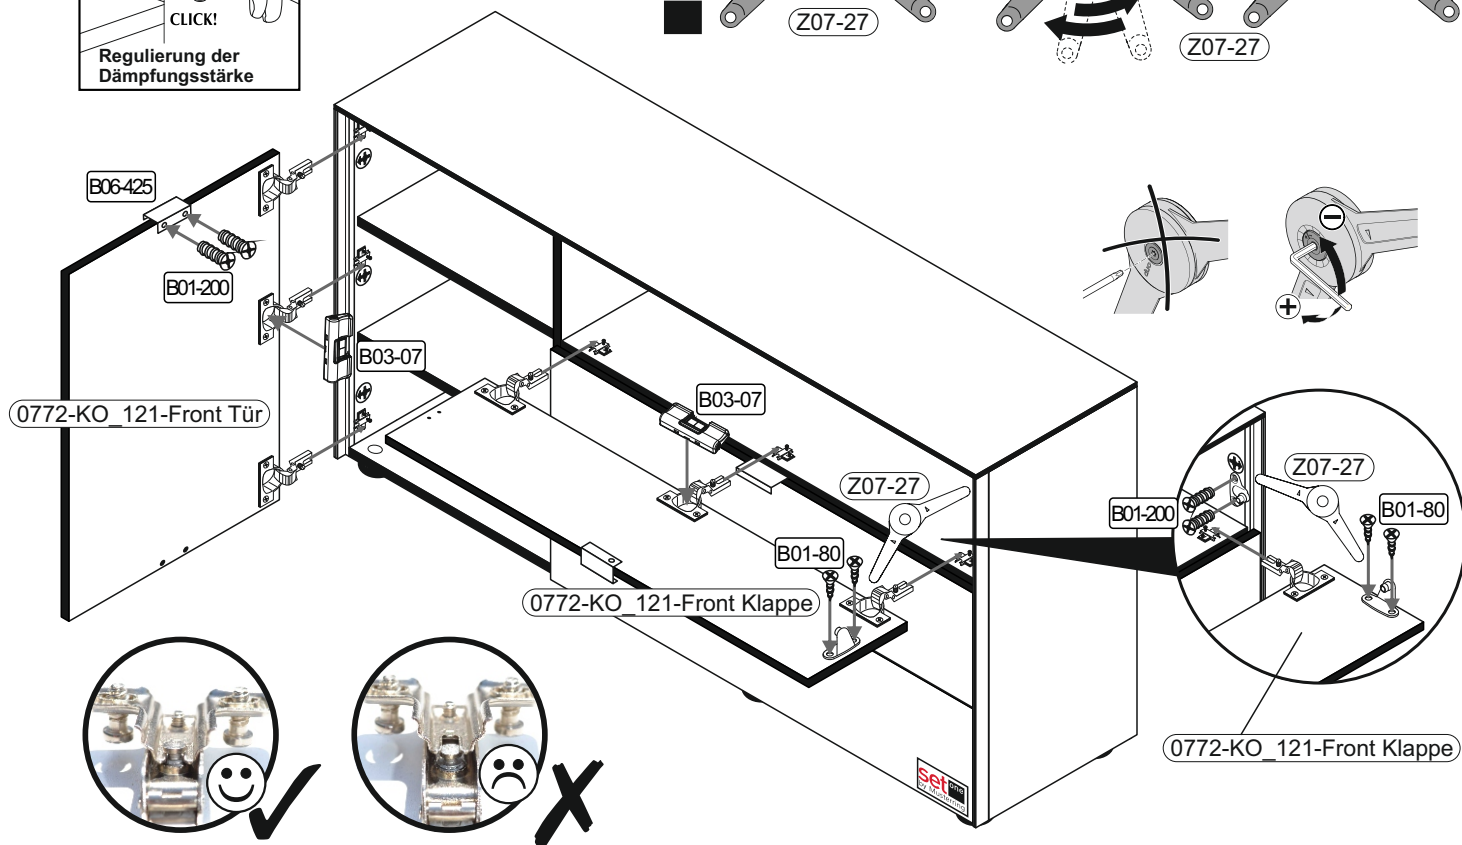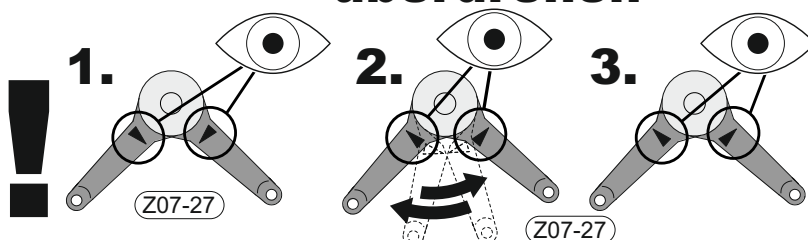

Türen einstellen (Scharniere justieren)

Adjusting the doors (adjusting the hinges)

Régler les portes (ajuster les charnières)

Sistemare le porte (regolare le cerniere)

Deuren instellen (scharnieren afstellen)

Nastawić drzwi (wyregulować zawiasy)

Vyrovnejte dvířka (seříd'te závěsy)

Nastavenie dverí (nastavenie závesov)

Állítsa be az ajtókat (állítsa be a zsanérokot)

Reglare usi (ajustare balamale)

Kapıların ayarlanması (menteselerin seviye ayarı)

Регулировка дверей (регулировка шарнира)

