


# LB4802B80305










FSC  
www.fsc.org

MIX  
Wood from  
responsible sources  
FSC® C011298

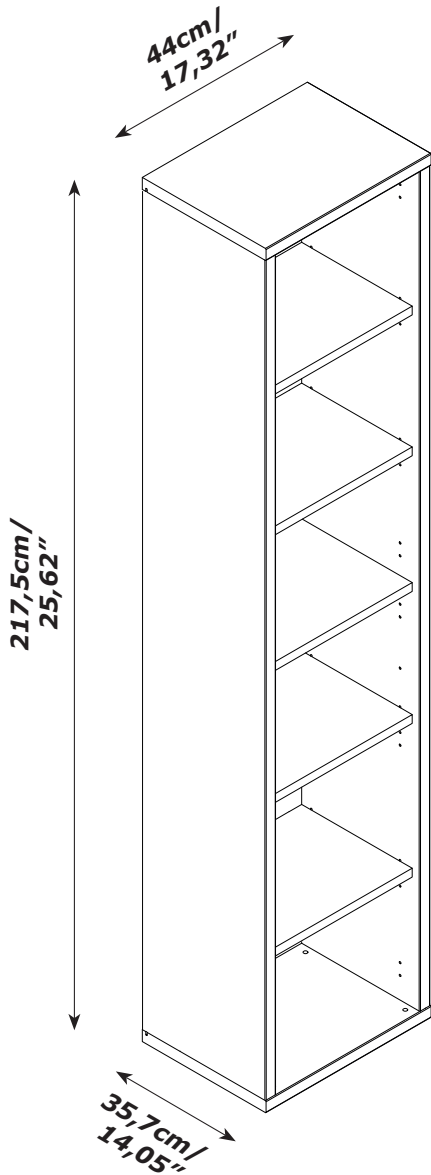

QF5959

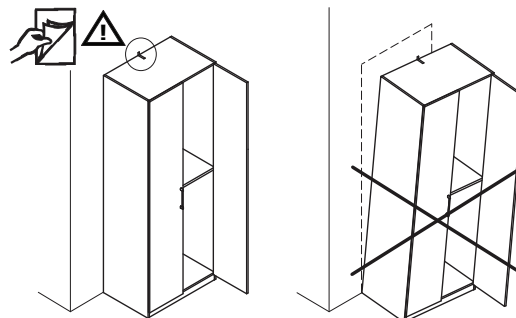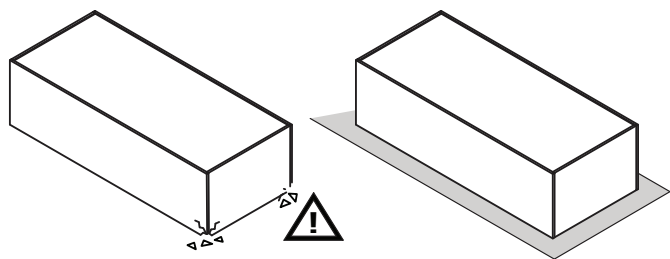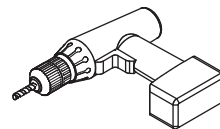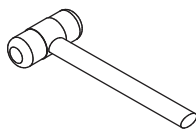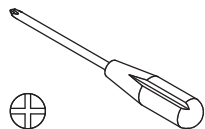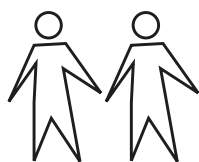


IT IS RECOMMENDED THAT THE ANTI-TIP KIT INCLUDED WITH THIS PRODUCT BE INSTALLED FOR ADDED SAFETY AND STABILITY.

IT IS ESSENTIAL TO USE WALL ANCHORS APPROPRIATE FOR YOUR WALL TYPE (I.E. PLASTER, DRY-WALL, CONCRETE, ETC.), ALONG WITH APPROPRIATE SCREWS, FOR PROPER MOUNTING.

THE SCREWS INCLUDED IN THIS ANTI-TIP KIT MAY NOT BE SUITED FOR ALL WALL TYPES. MOUNTING TO WOOD STUDS IS RECOMMENDED.

CONSULT A QUALIFIED PROFESSIONAL OR YOUR LOCAL HARDWARE STORE FOR APPROPRIATE MOUNTING HARDWARE SUITED FOR YOUR SPECIFIC WALL MEDIUM.


## BU4885

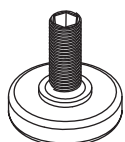

**P25**  
x4




**H118**  
x4




**T97**  
x4




**T7**  
x4




**T28**  
x8

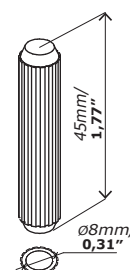


**H325**  
x12

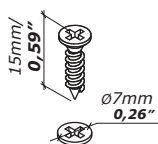

**V5**  
x20

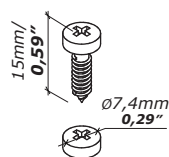

**V81**  
x2

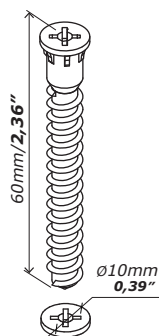


**V57**  
x4



**R40**  
x16




**H2**  
x20

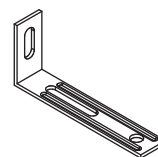

**H185**  
x1



**H129**  
x2




**G171**  
x22




**G198**  
x4




**G199**  
x4




**H138**  
x1

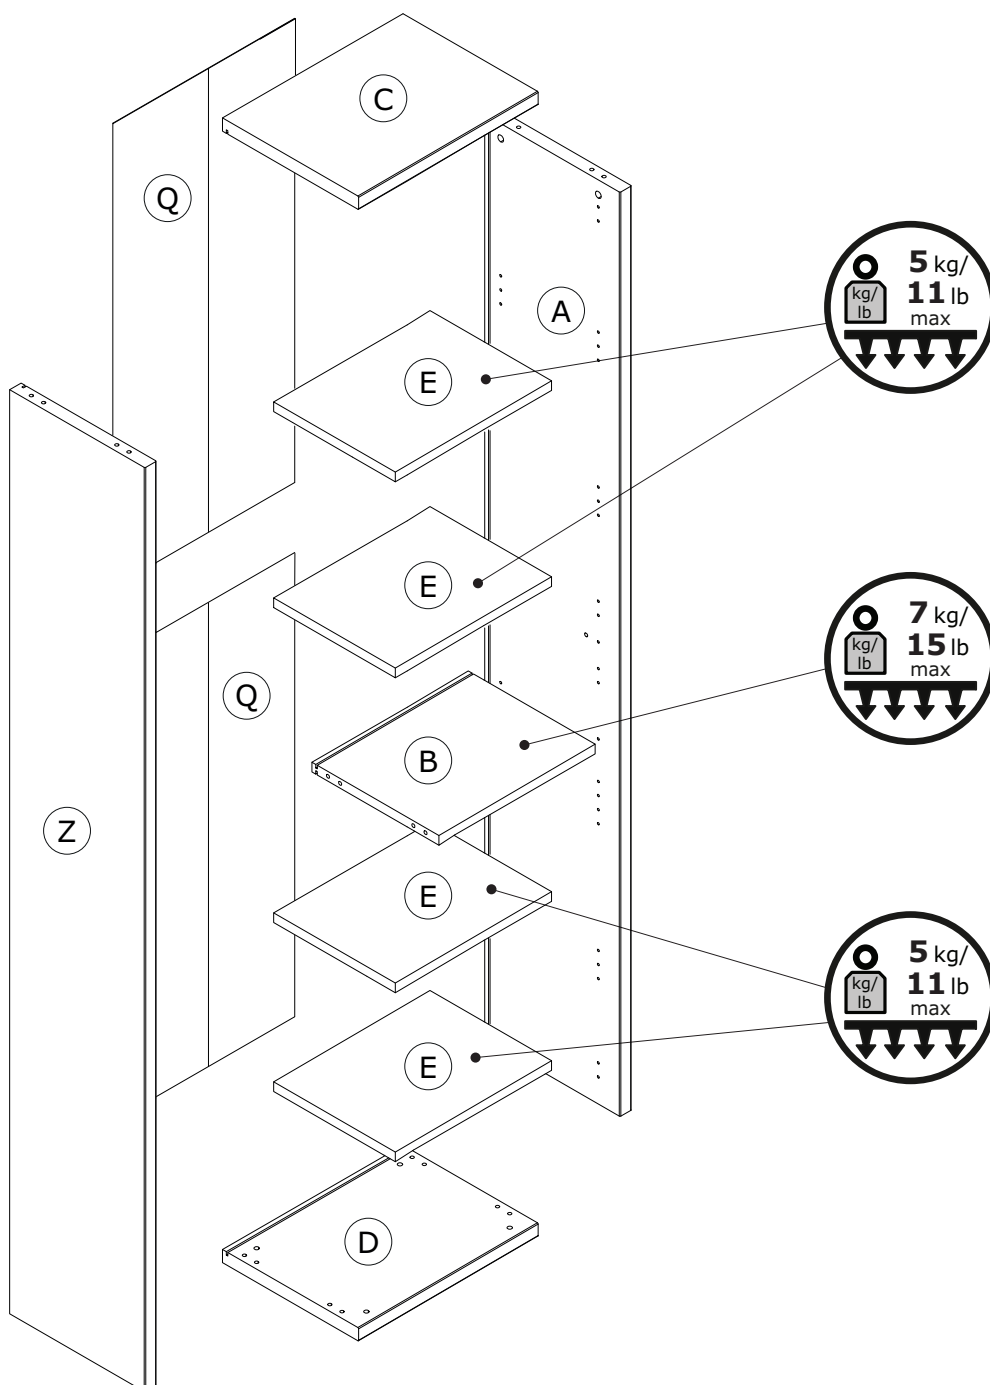


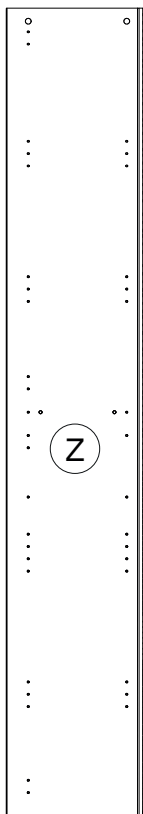

**FI9452**  
2100x355x30mm/  
**82,67"x13,97"x1,18"**

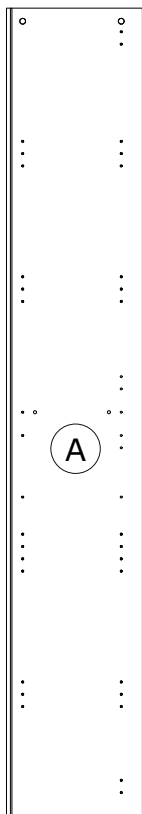


**FI9451**  
2100x355x30mm/  
**82,67"x13,97"x1,18"**

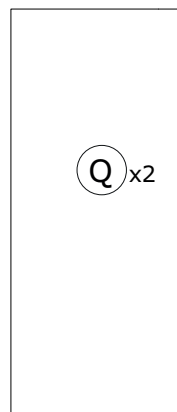


**SH3850**  
1053x392x2mm/  
**41,45"x15,43"x0,08"**


**BOX 1/2**

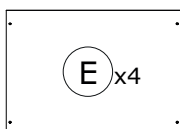


**PI7646**  
379x319x22mm/  
**14,92"x12,56"x0,86"**

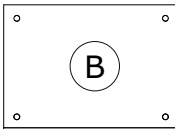


**PI7644**  
379x333x22mm/  
**14,92"x13,11"x0,86"**

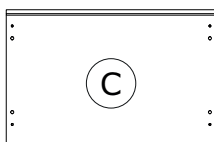

**CA3965**  
440x357x30mm/  
**17,32"x14,05"x1,18"**

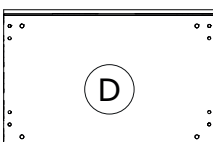

**BA2430**  
440x357x30mm/  
**17,32"x14,05"x1,18"**

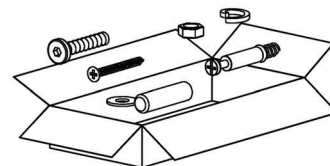

**BOX 2/2**


1

8x

H325

A

Z

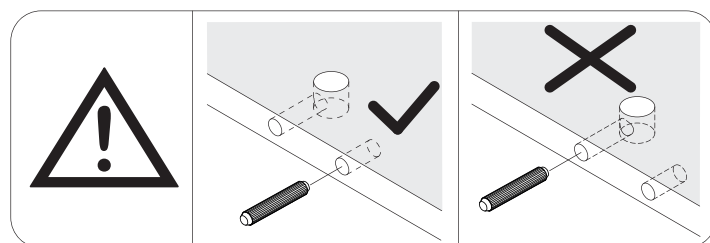


2

4x




T28

A




Z

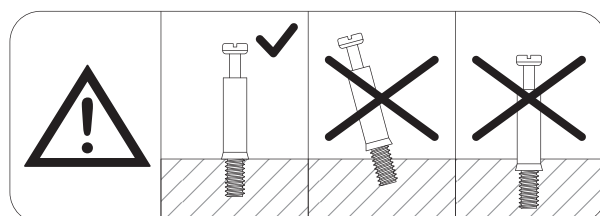





3

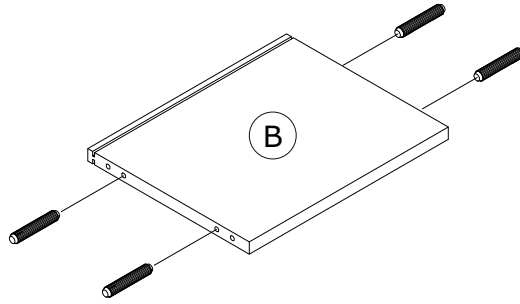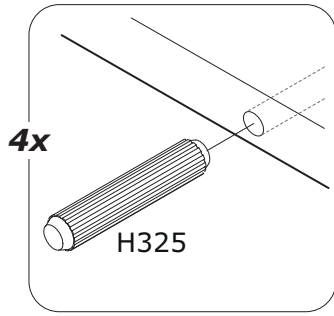




4

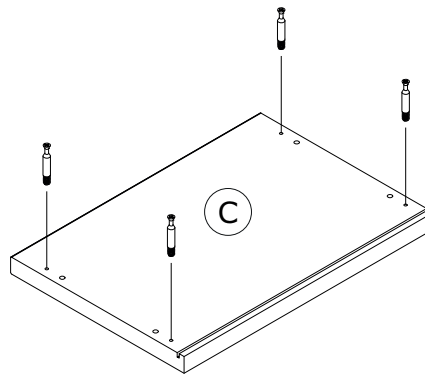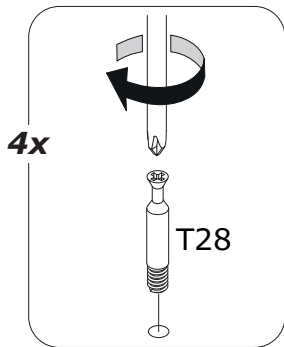


5

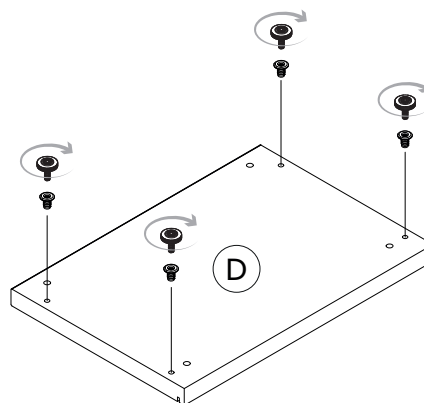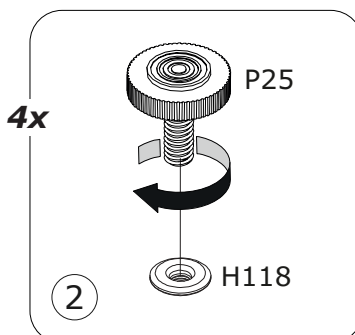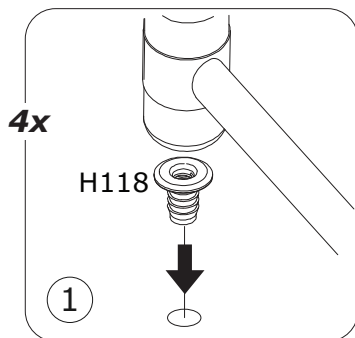




6

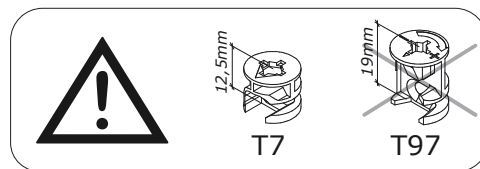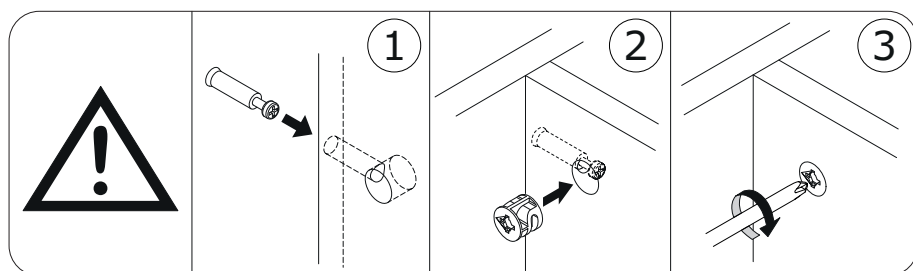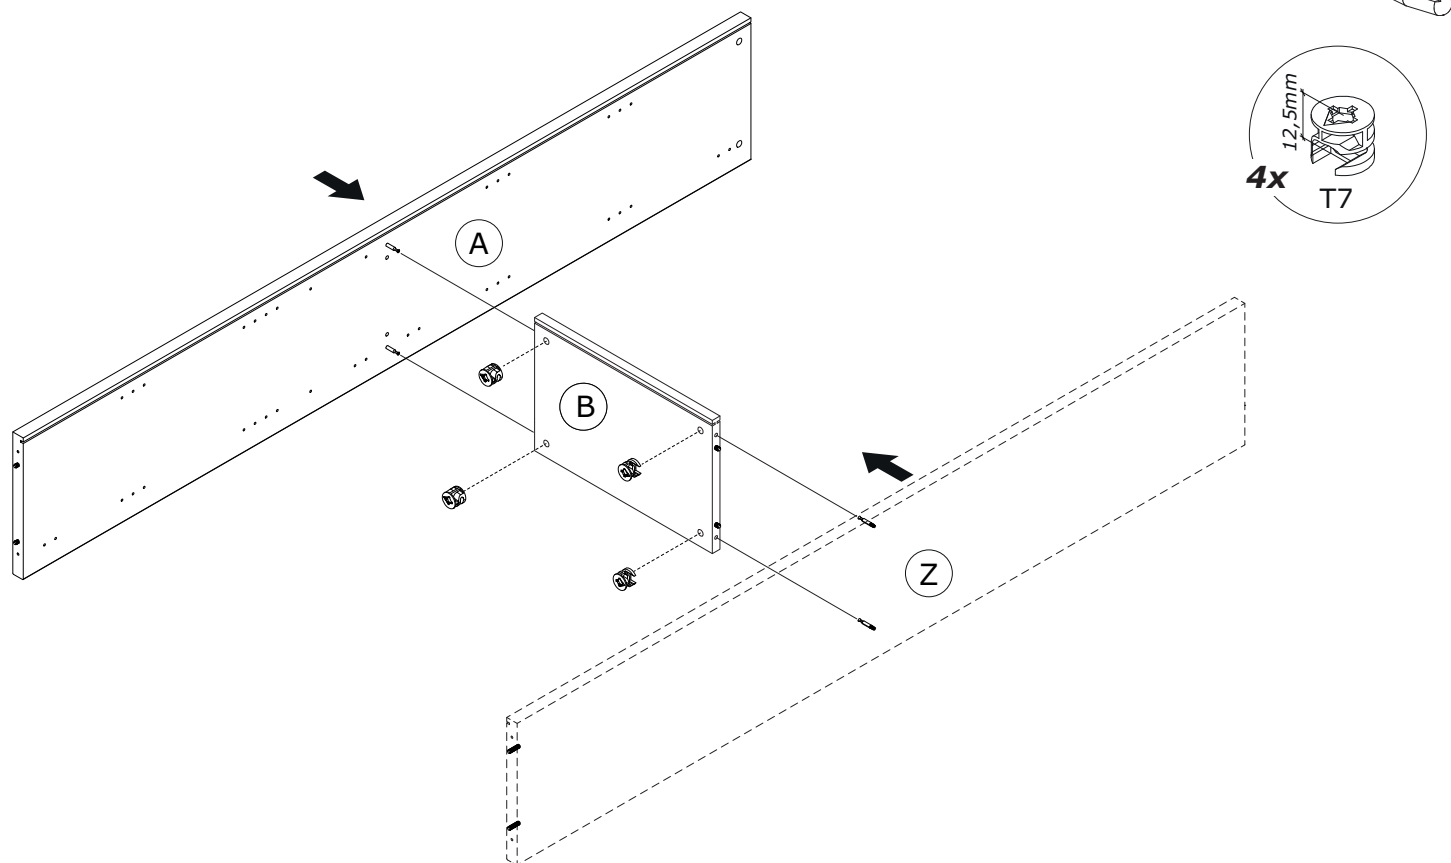




7

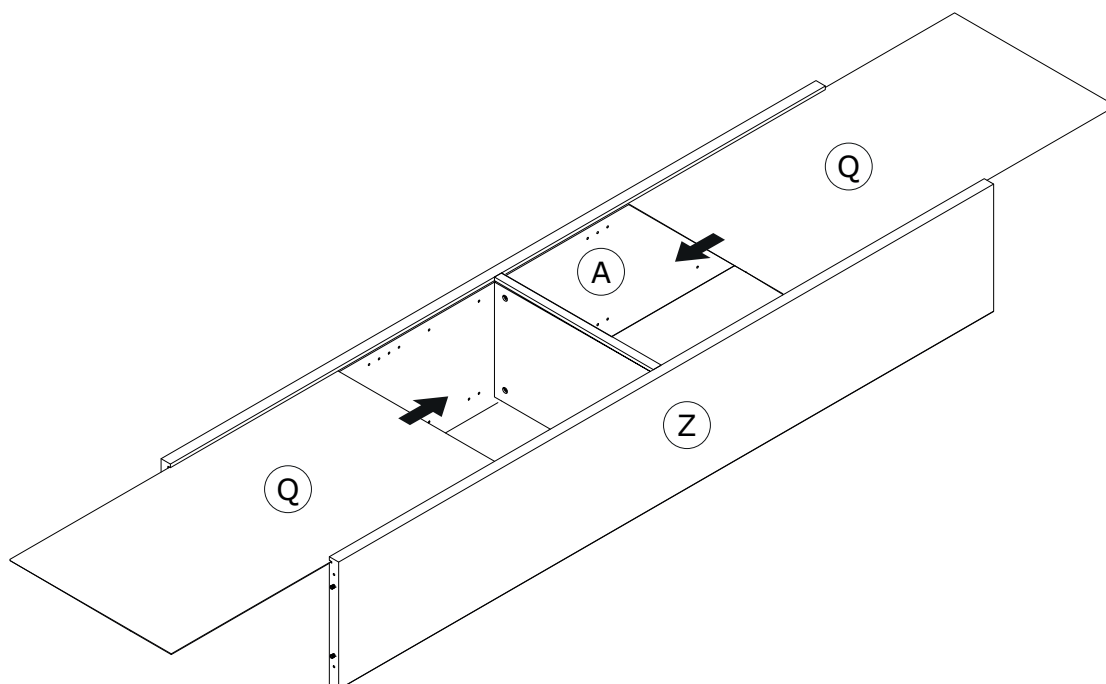






8

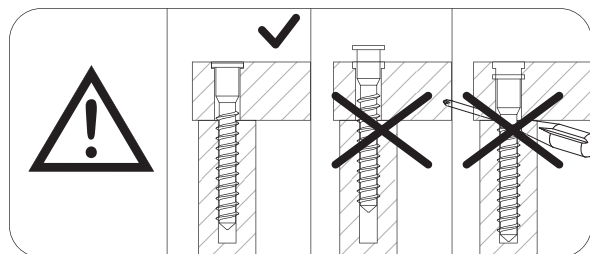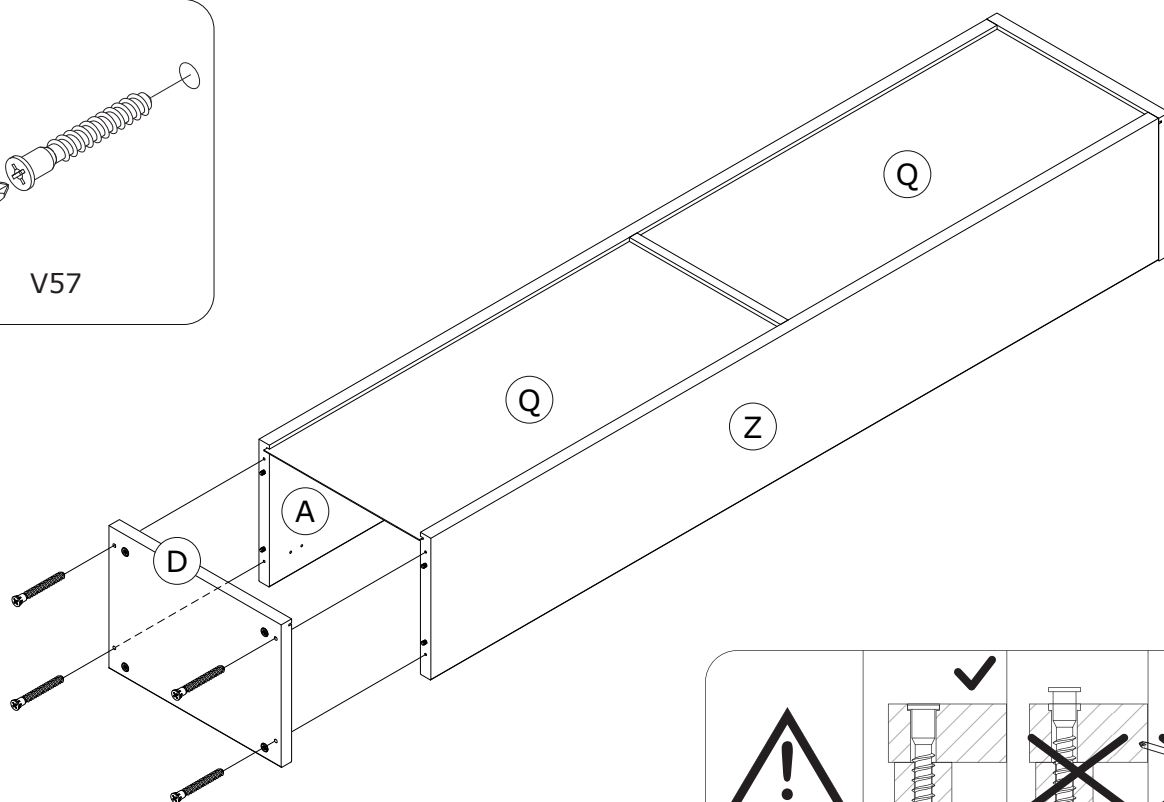
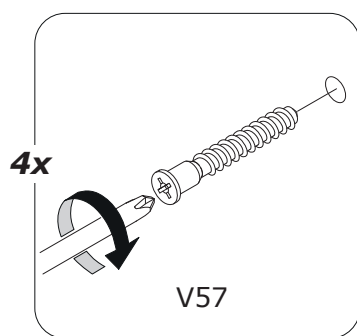


9

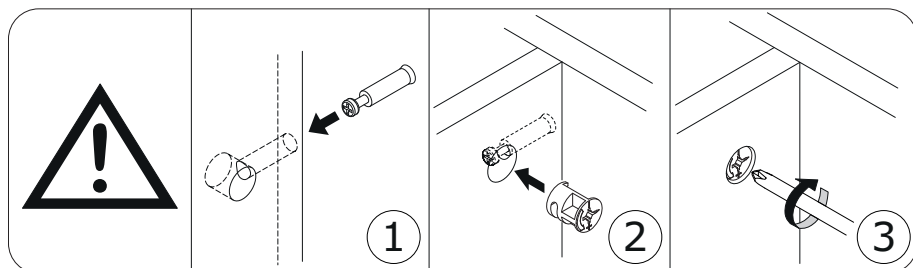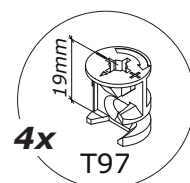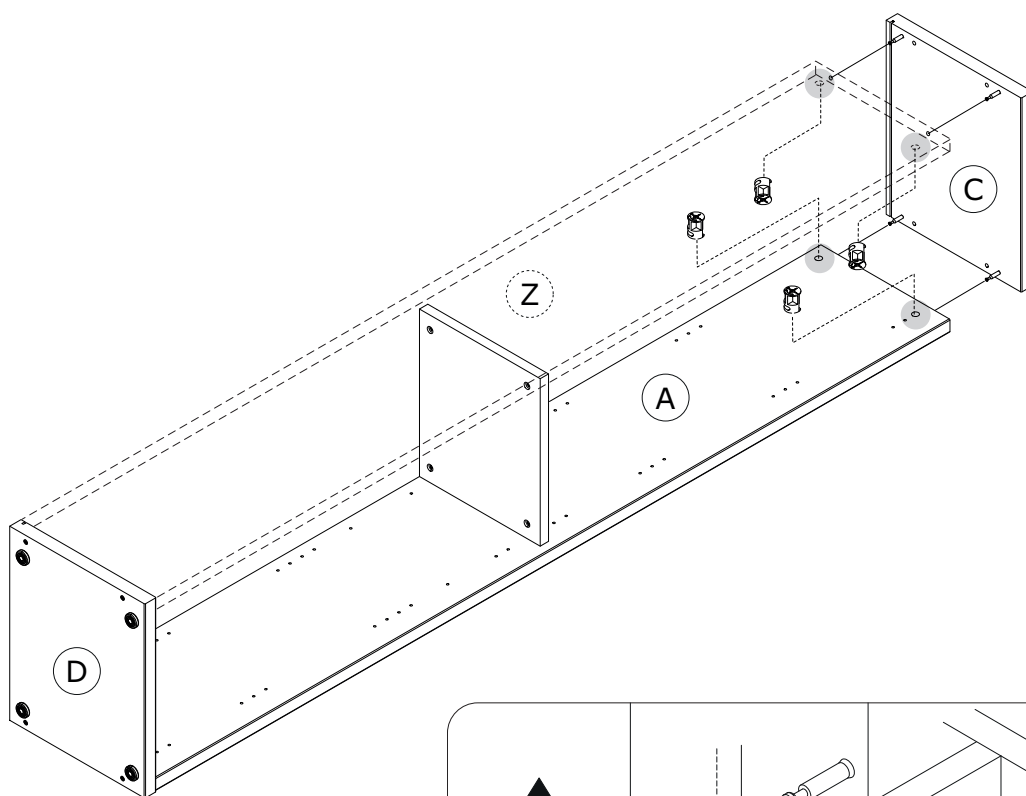



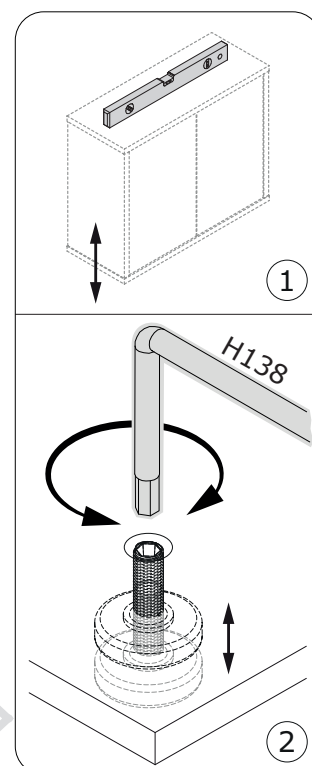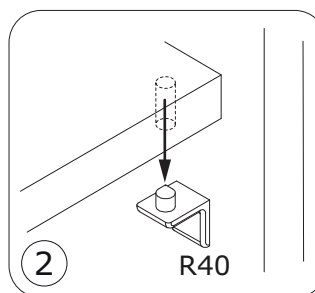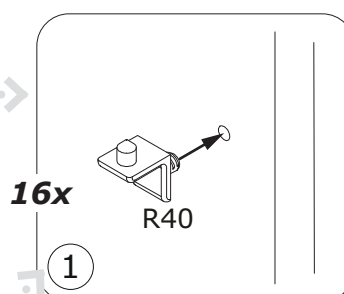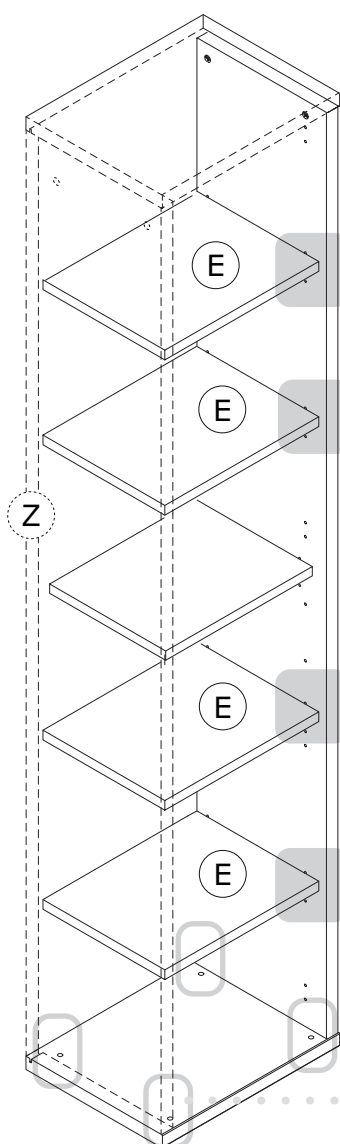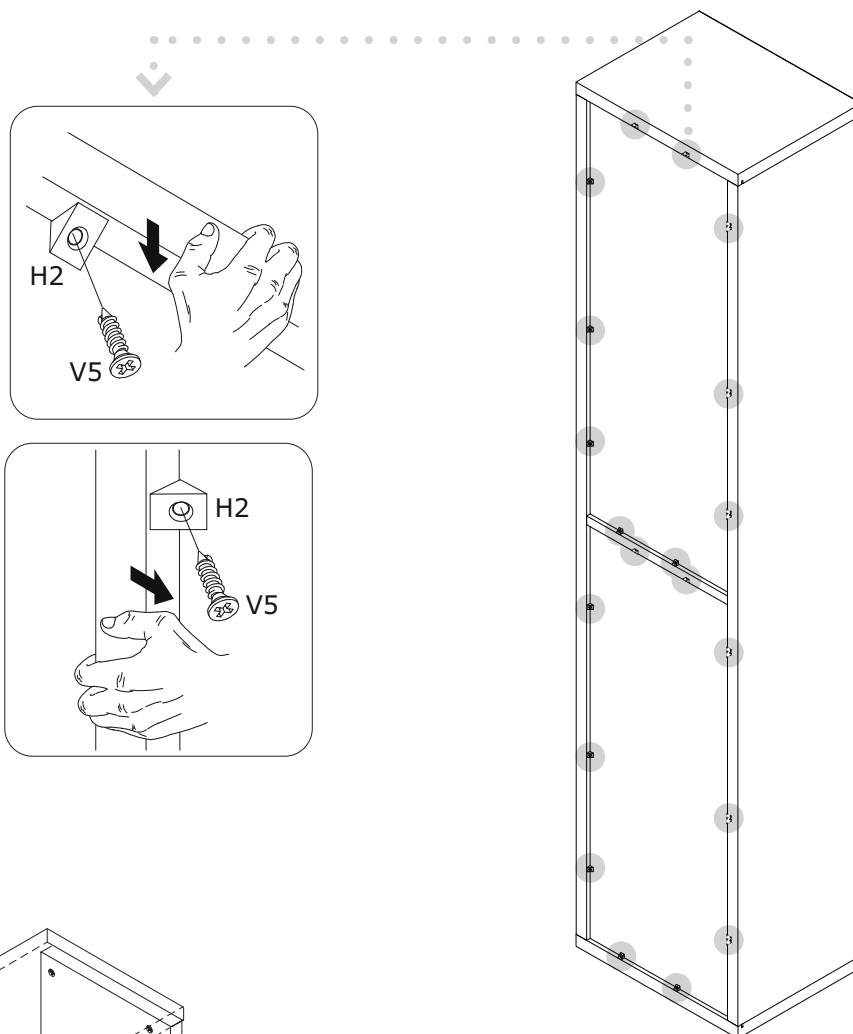



IT IS RECOMMENDED THAT THE ANTI-TIP KIT INCLUDED WITH THIS PRODUCT BE INSTALLED FOR ADDED SAFETY AND STABILITY.

IT IS ESSENTIAL TO USE WALL ANCHORS APPROPRIATE FOR YOUR WALL TYPE (I.E. PLASTER, DRY-WALL, CONCRETE, ETC.), ALONG WITH APPROPRIATE SCREWS, FOR PROPER MOUNTING.

THE SCREWS INCLUDED IN THIS ANTI-TIP KIT MAY NOT BE SUITED FOR ALL WALL TYPES.

MOUNTING TO WOOD STUDS IS RECOMMENDED.

CONSULT A QUALIFIED PROFESSIONAL OR YOUR LOCAL HARDWARE STORE FOR APPROPRIATE MOUNTING HARDWARE SUITED FOR YOUR SPECIFIC WALL MEDIUM.

