




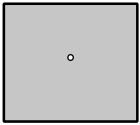



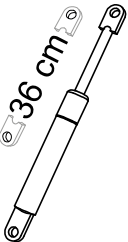


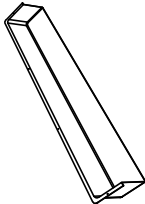


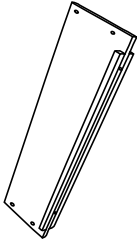

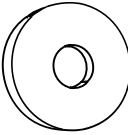
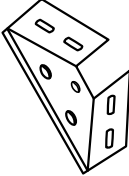

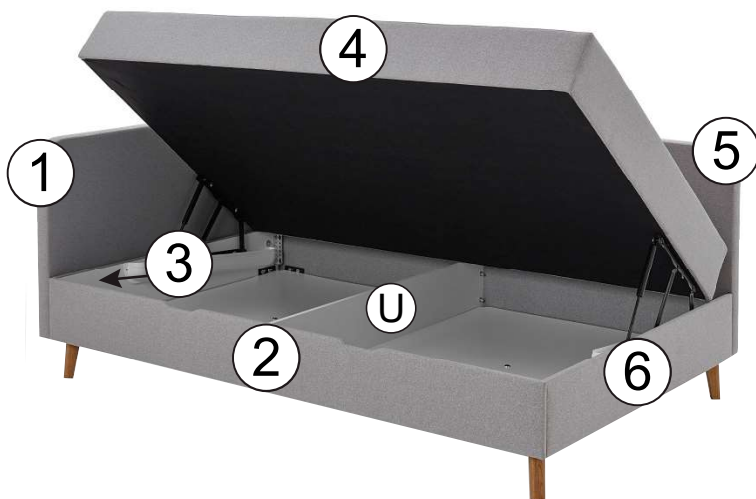
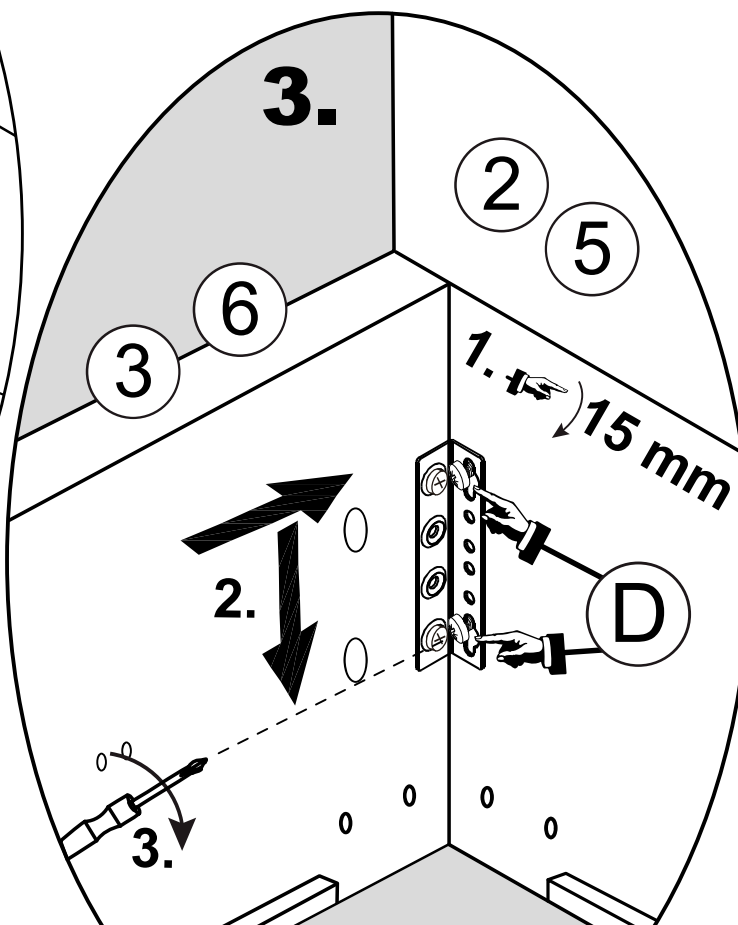


Meise Möbel GmbH & KG Klosterbauerschafter Straße 27 D-32278 Kirchlengern		CABANA by meise Bettkasten / storage						90 cm 120 cm
A-82	B-82	C-82	D-82	E-82	F-82	G-82	H-82	I-82
4	2	6	22	4	4	4	2	2
 H 140	 H 140		 M6*20	 M6*25	 M6	 M6	 H 160	 90: 970*878 120: 970*1178
J-82	K-82	L-82	M-82	N-82	OL/OR-82	P-82	Q-82	R-82
8	8	8	2	4	1 / 1	22	2	24
	 M8*50	 M8	 90: 350 N 120: 850 N	 M8*16		 M8*20	 820*95*60	 3,5*16
S-82	T-82	U-82	V-82	W-82	X-82	Y-82	Z-82	AA-82
8	-	1	-	1	4	4	4	-
 M8	-	 885 / 1185* 200	-	 5	 M8*35	 M8		-
AB-82	AC-82	AD-82	AE-82	AF-82	AG-82	AH-82	AI-82	AJ-82
-	-	-	-	-	-	-	-	-
-	-	-	-	-	-	-	-	-
		 60 min	 10/13 cm	 < 120 KG				


1

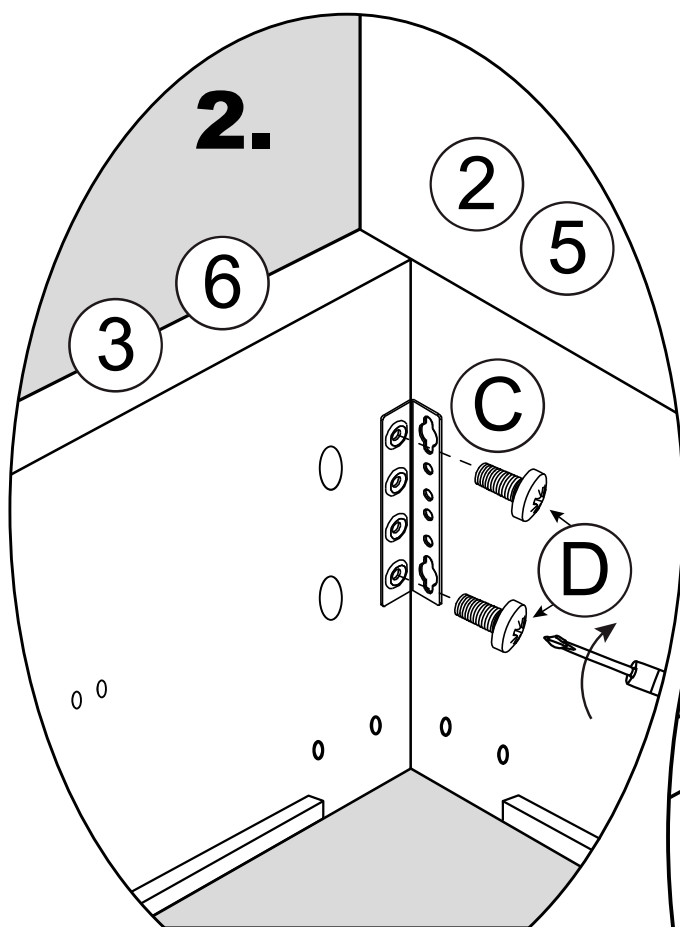


1.

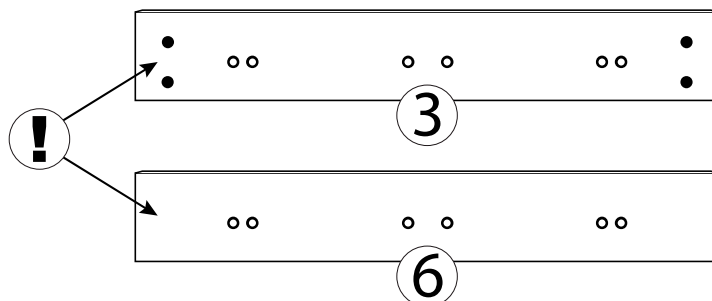





2

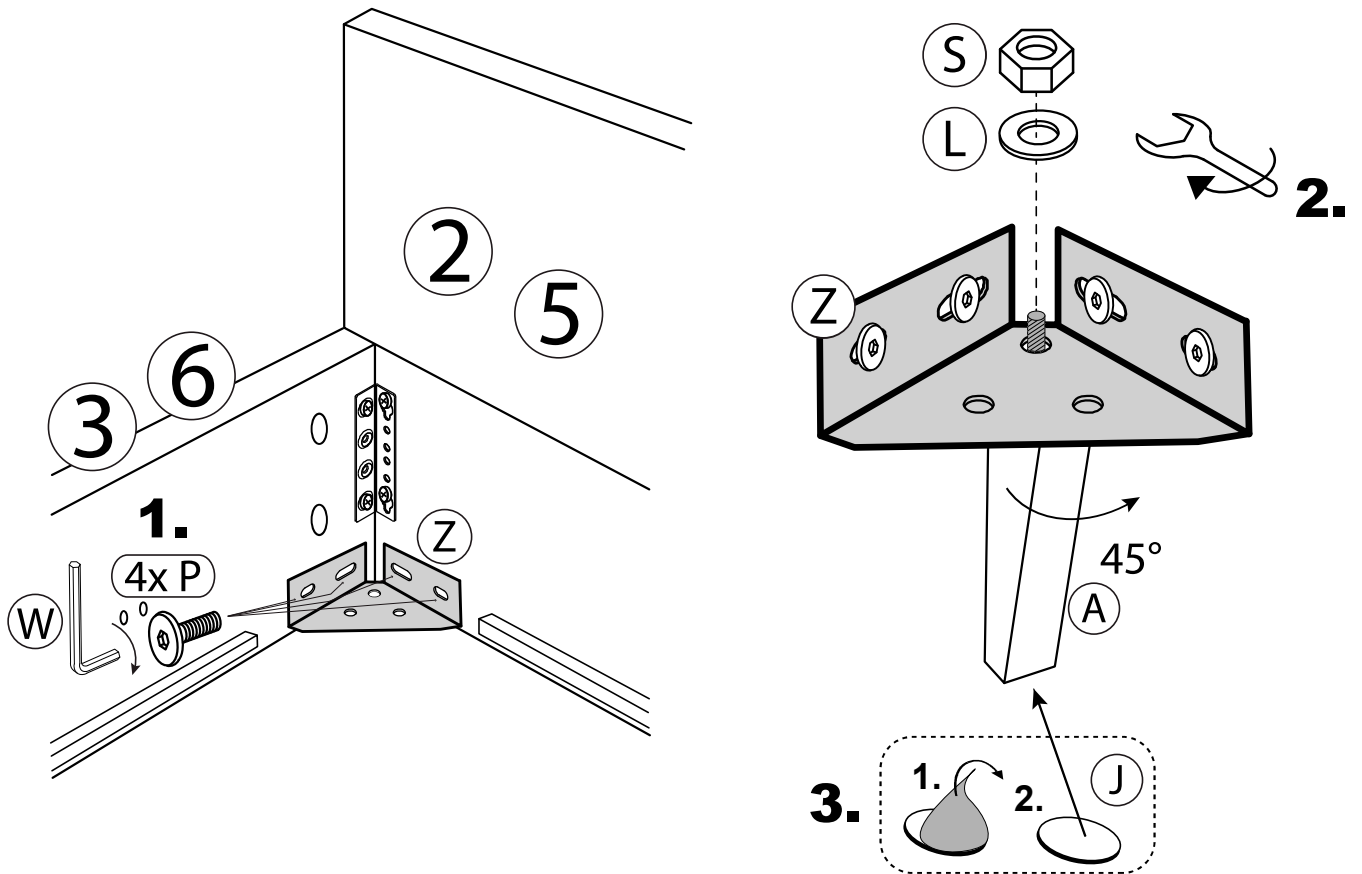





3

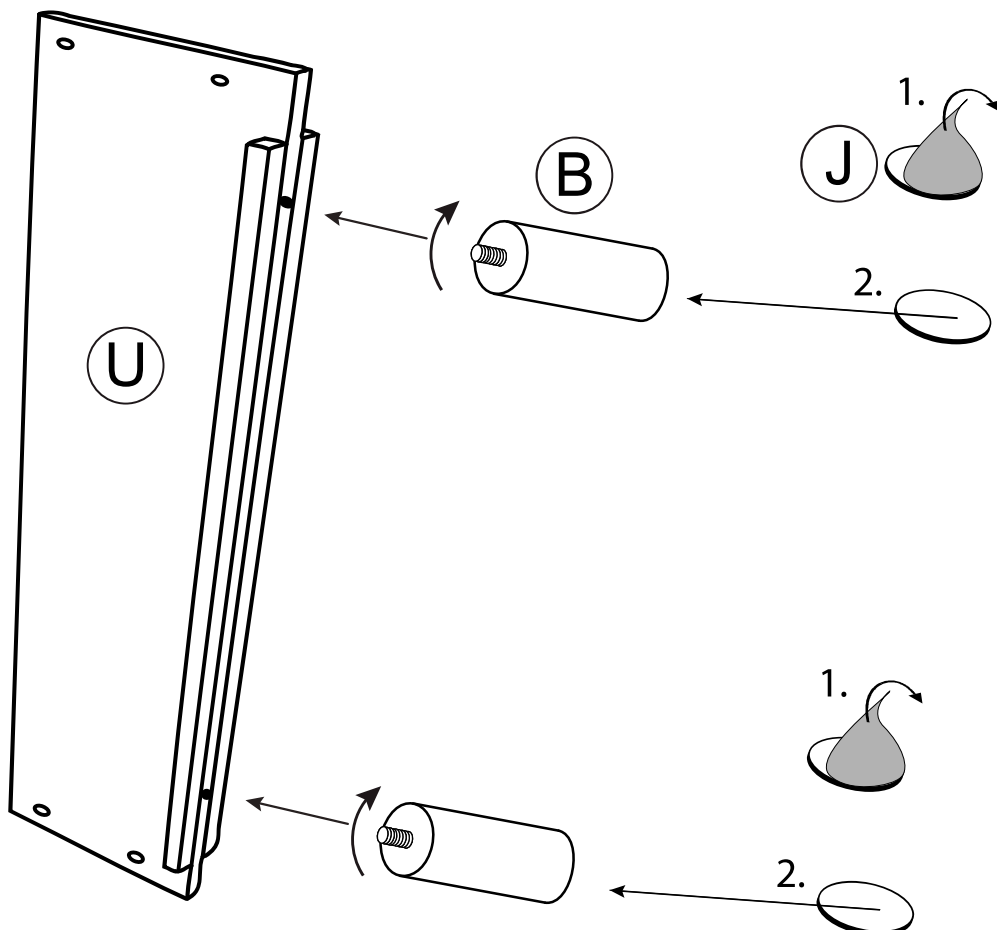

4

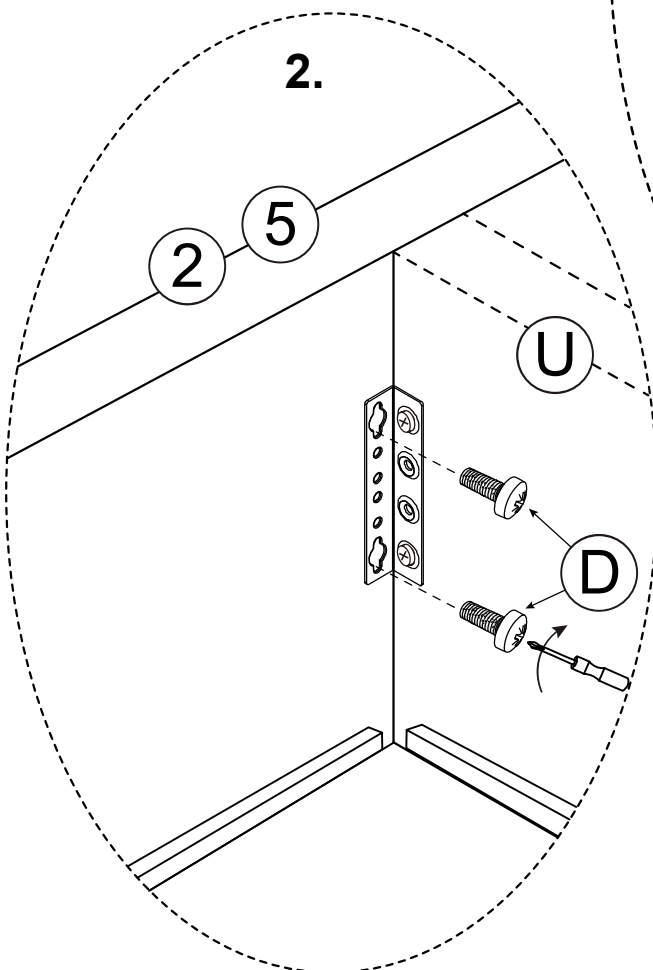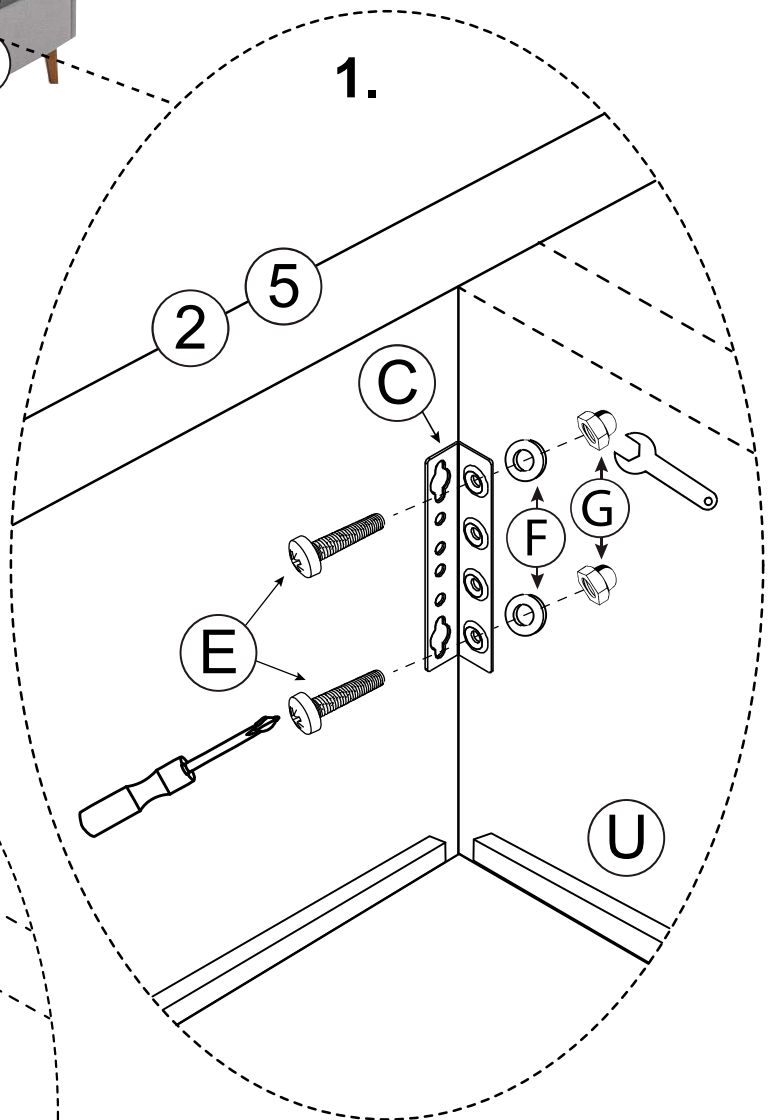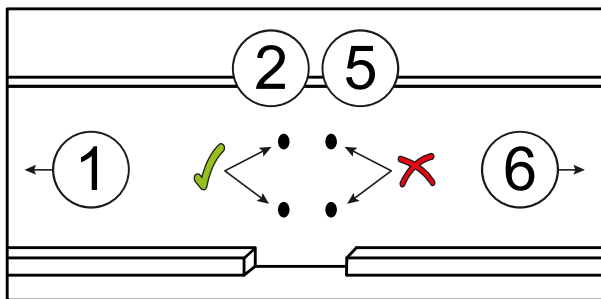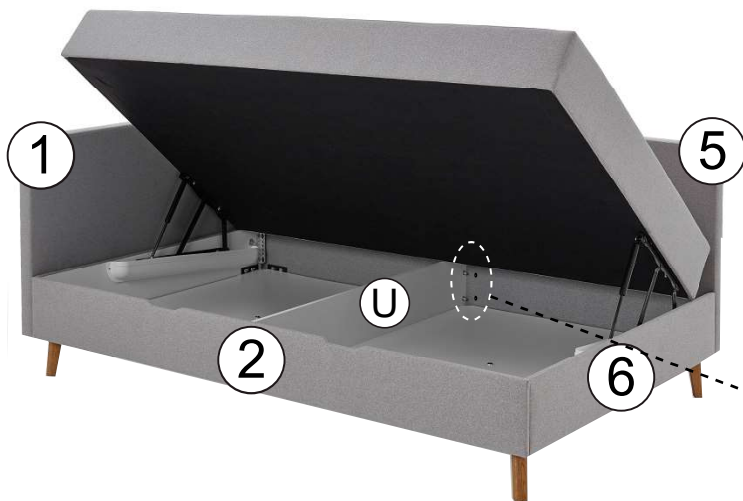

5

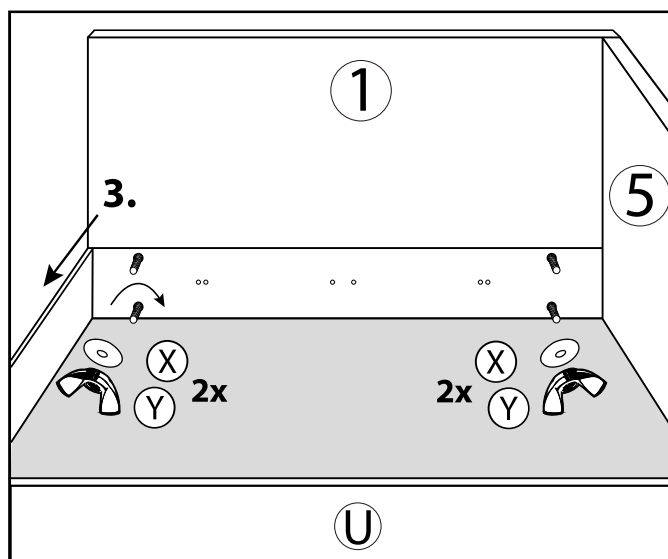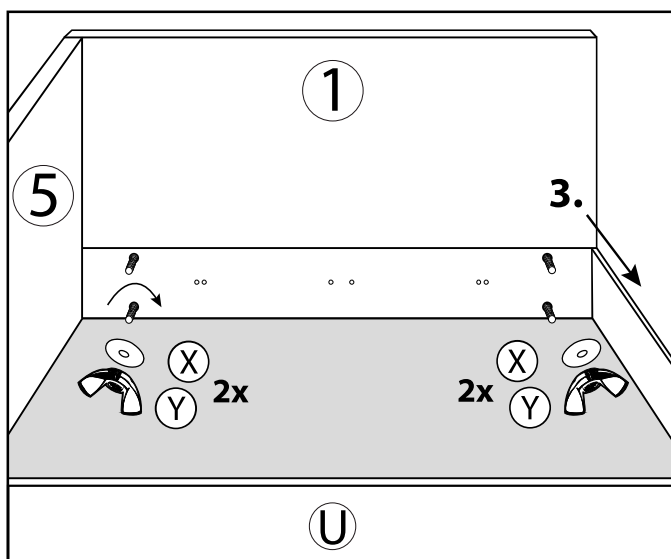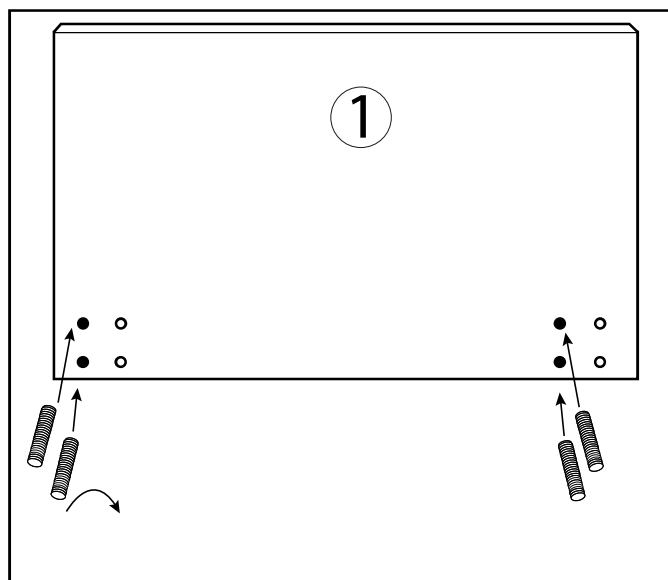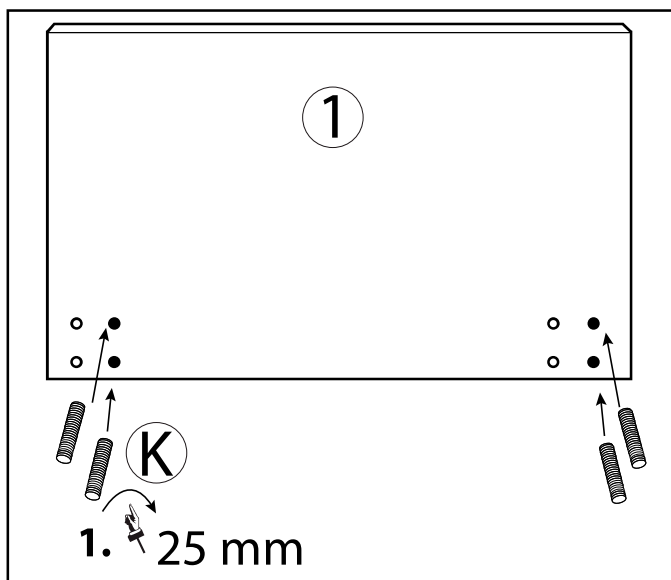

5

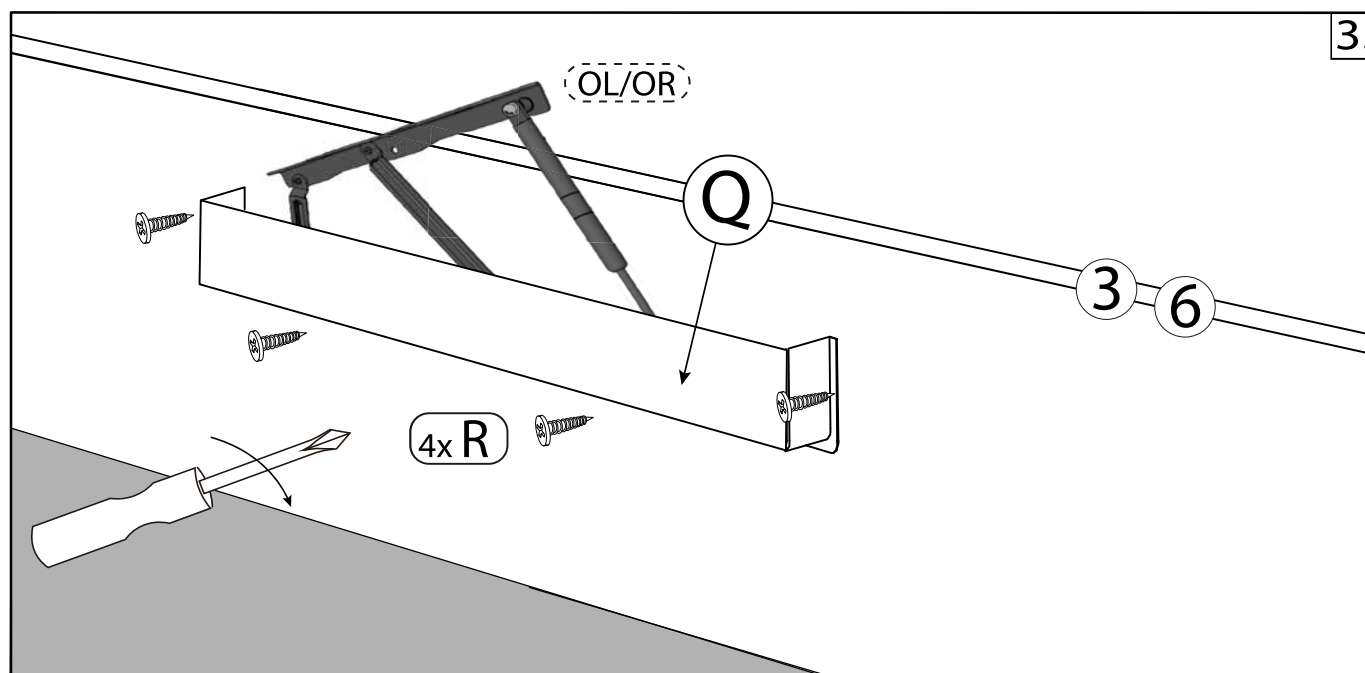
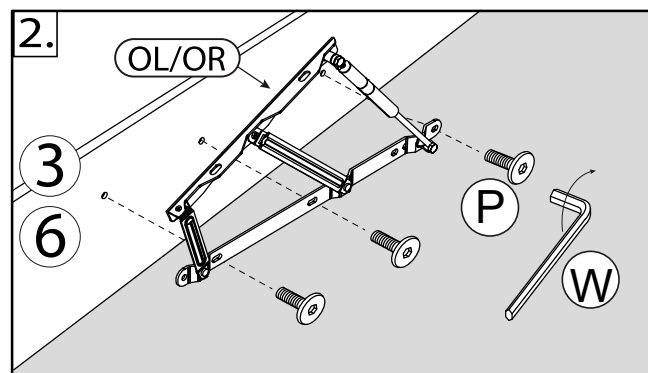
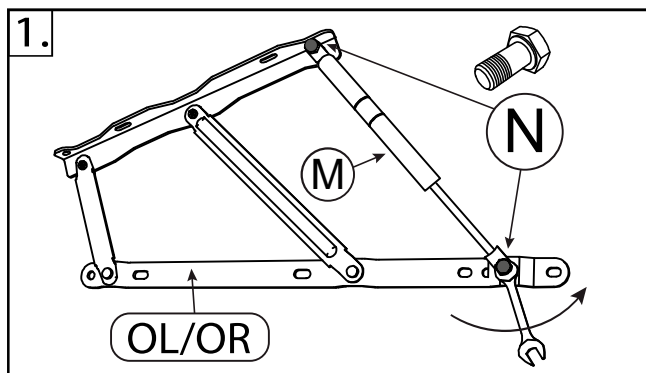
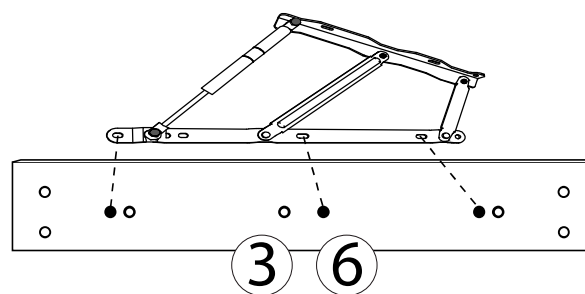
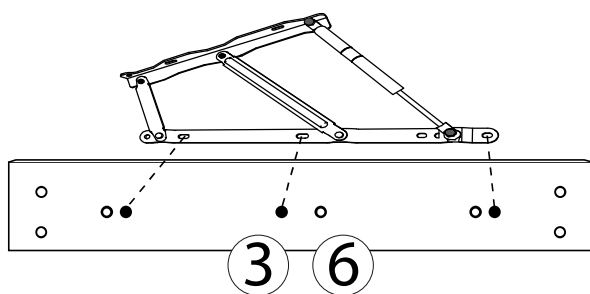


Diagram illustrating the assembly of the bed base (4) to the frame (Q). The side rail (4) is attached to the frame (Q) using screws (K) and washers (L). The assembly is shown in three steps: 1. Inserting the screw (K) into the side rail (4). 2. Inserting the washer (L) into the frame (Q). 3. Tightening the screw (K) into the frame (Q) using a screwdriver (S) and a wrench (L). The diagram also shows the side rail (4) being attached to the frame (Q) using a screwdriver (S) and a wrench (L). A warning diagram indicates the correct lifting technique: use proper posture (upward arrows) and avoid incorrect posture (downward arrows) to prevent injury.