




Villeroy & Boch  
1748

# Instruction manual

Art.-No.: 96230

Name: OSLO

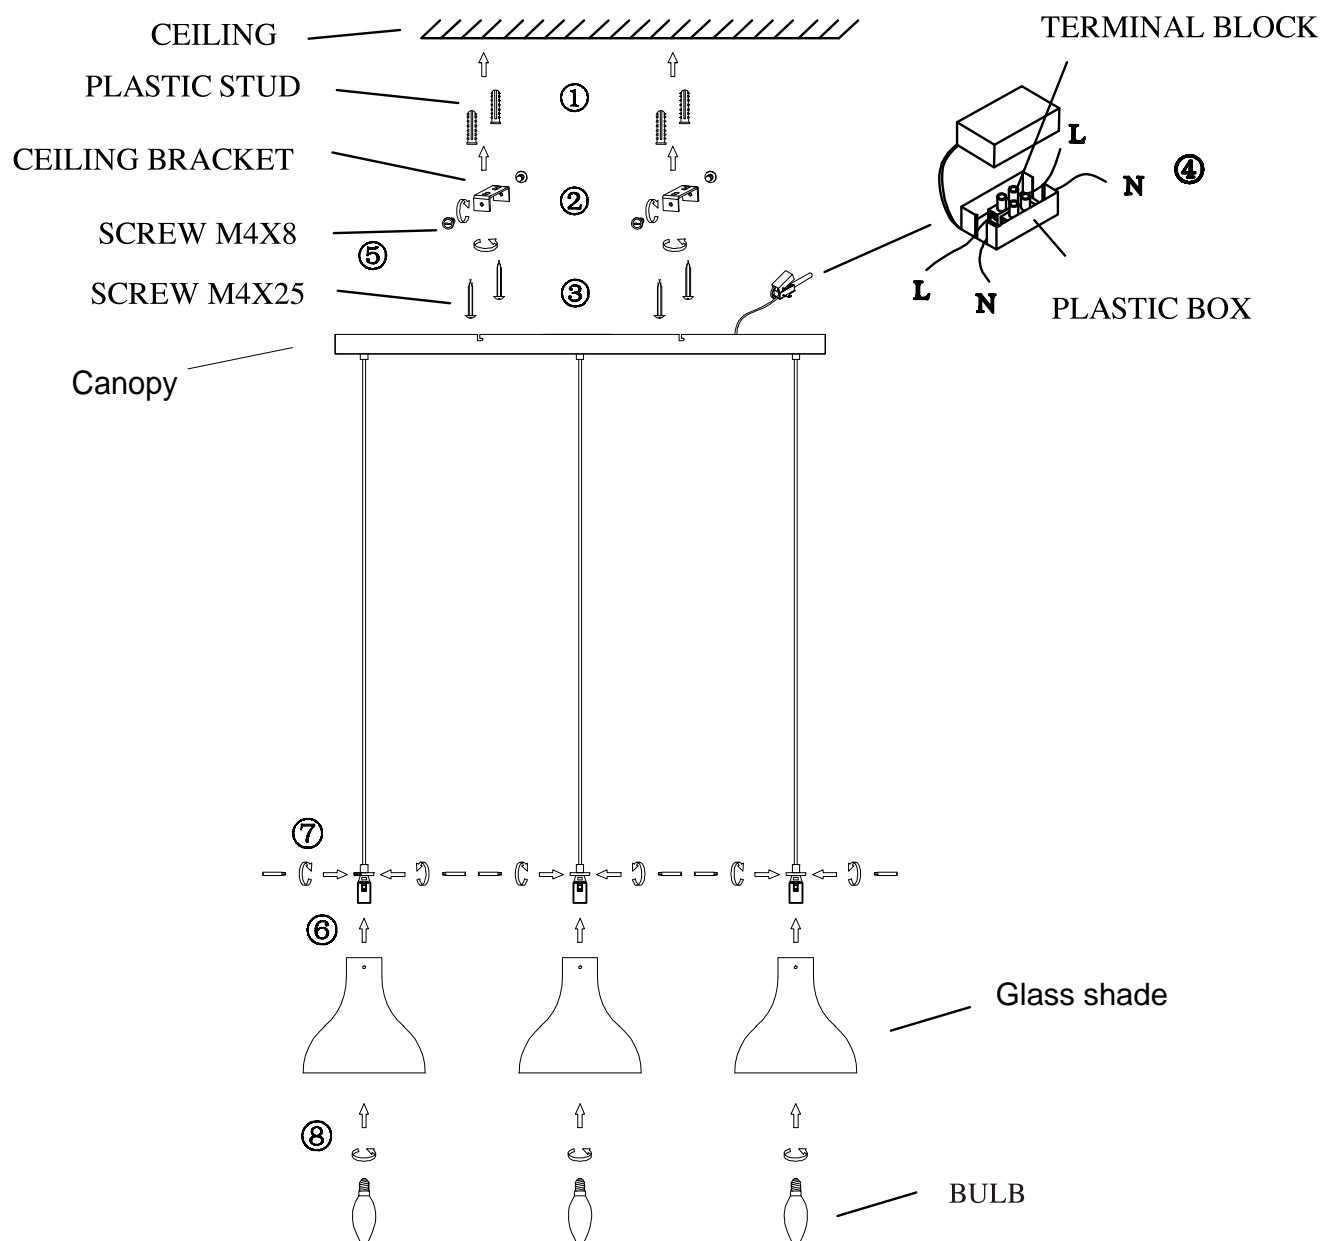

## ASSEMBLY PROCEDURE

1. Drill two holes at the ceiling where the lamp to be fixed.
2. Put two plastic studs into the holes.
3. Fix the ceiling bracket with two M4x25 screws to the plastic stud at the ceiling.
- 4&5. \*Please make sure that the main electricity supply from the net is cut off before connection\*.  
Connect the electricity supply wire to the terminal block inside the plastic box. Then close the plastic box and place it inside the canopy. Fix the canopy with the lamp to the bracket by fixing two screws M4x8 through the canopy to the bracket.
6. Fix the bulb to the lampholder.