
40min	x1	x2	x1



Ax4(m4x25)



Bx10(ø15x12)




Cx10(M6x45)



Dx14(ø8x30)



Ex3(ø3.5x35)



300mm

F=2 SET



Gx4  
(ø23x7-M8x25)




Hx32(ø4x14)



Lx8



Jx16



Kx16(M5x25)



Lx8(ø6x25)



Mx2



AAx4(ø3.5x16)



ABx4




ACx4(ø3.5x50)




ADx4




AEx2




(1)x1

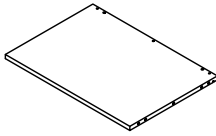


(2)x1




(3)x1



(4)x1

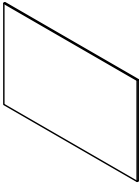


(5)x1

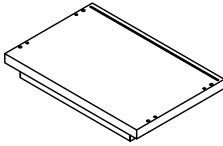

(6)x1



(7)x2

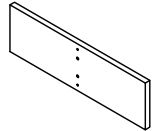

(8)x2




(10)x2




(11)x2




(12)x2




(13)x2

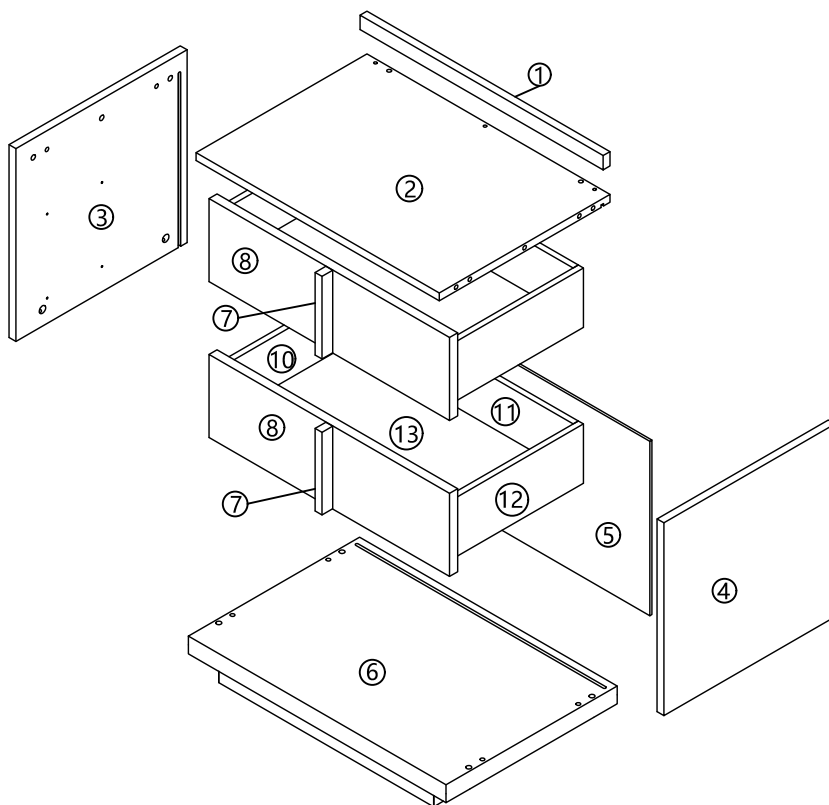


1

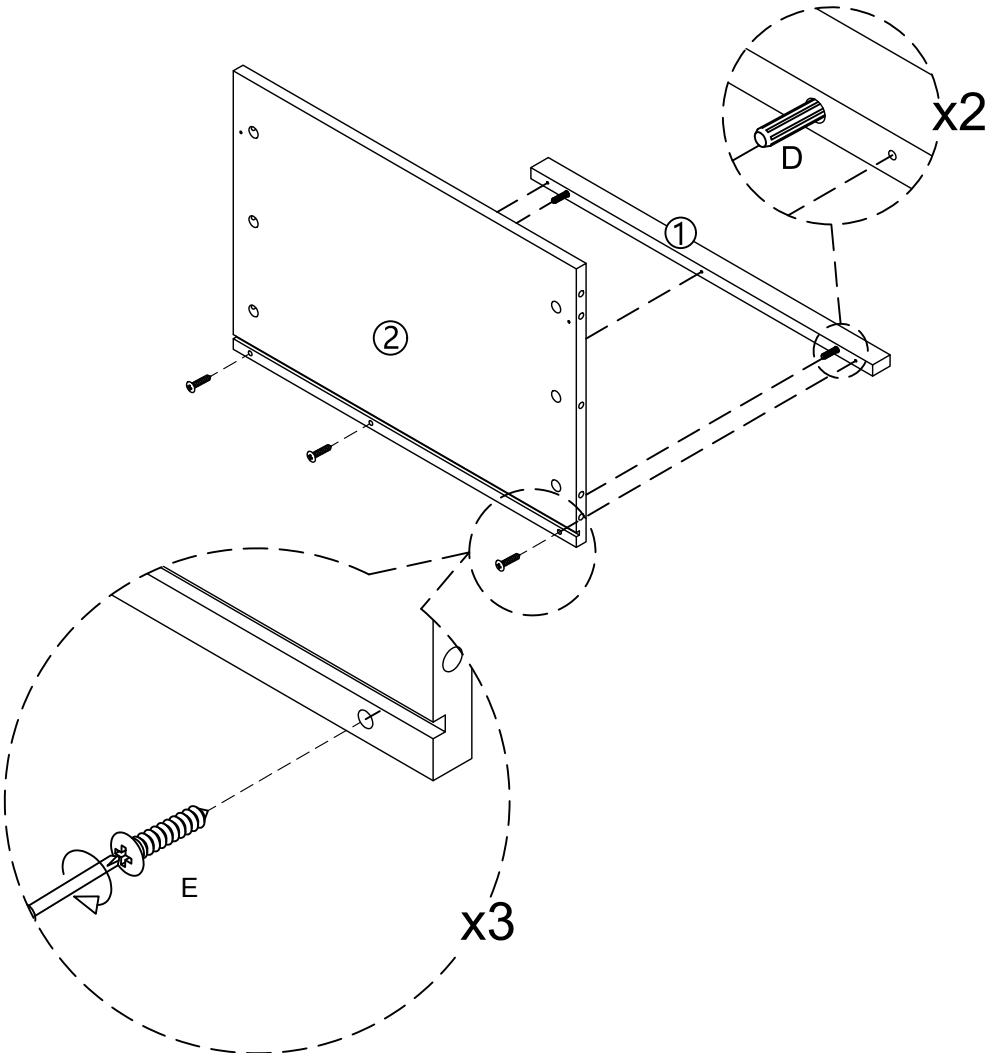

2

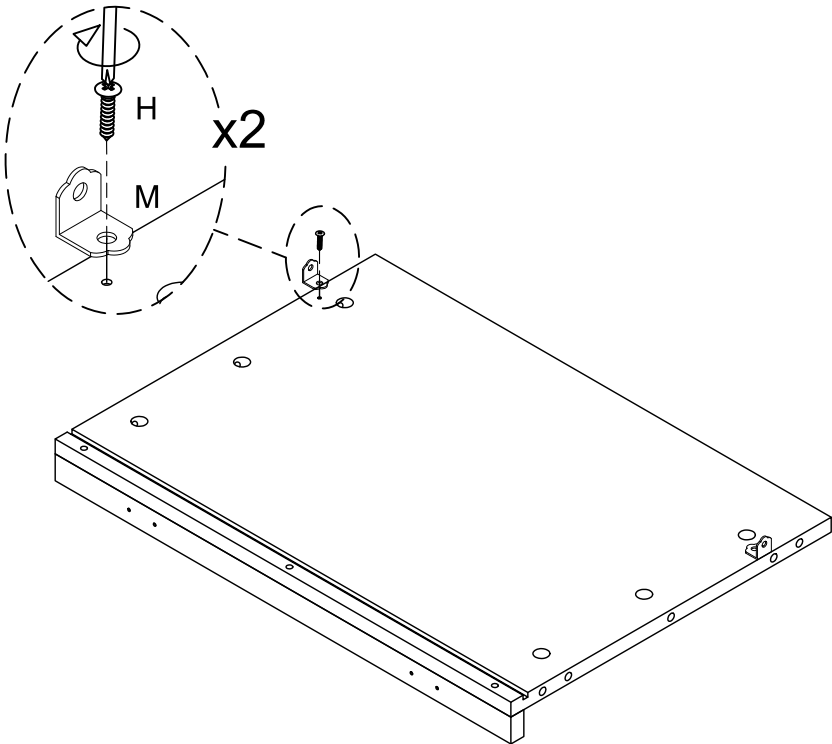


3

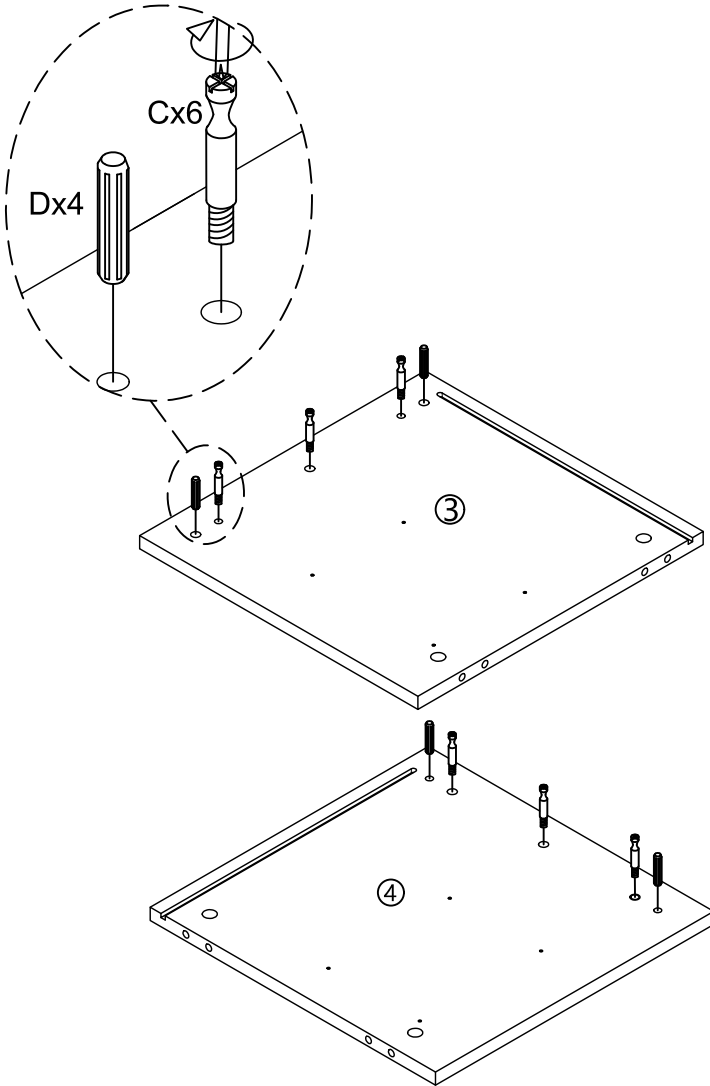





4

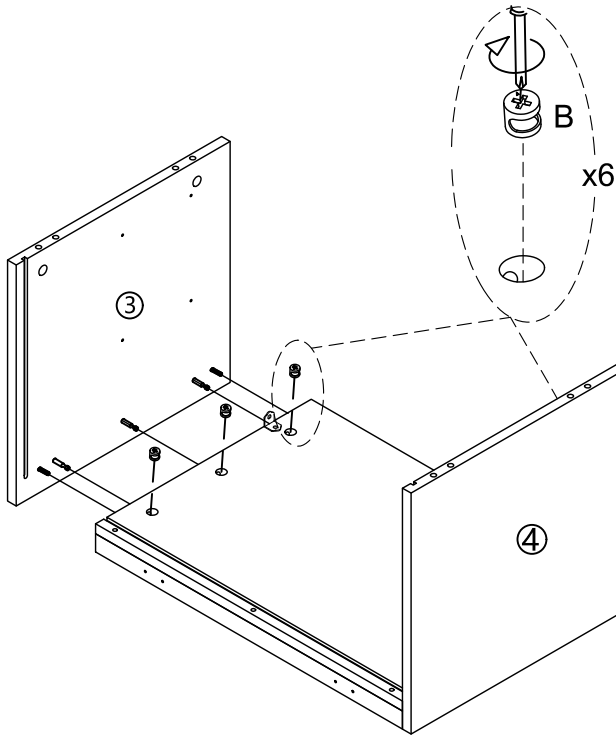


5

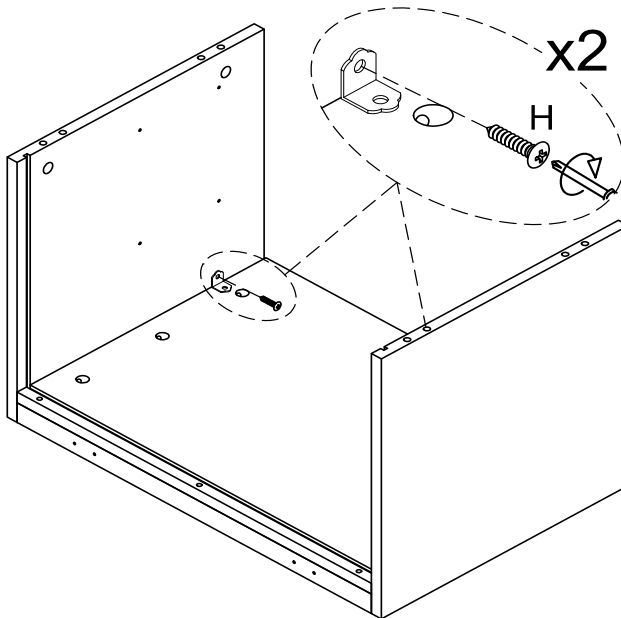


6

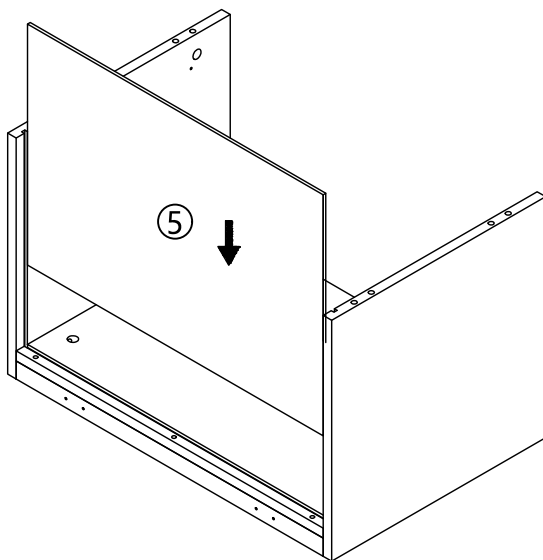


7

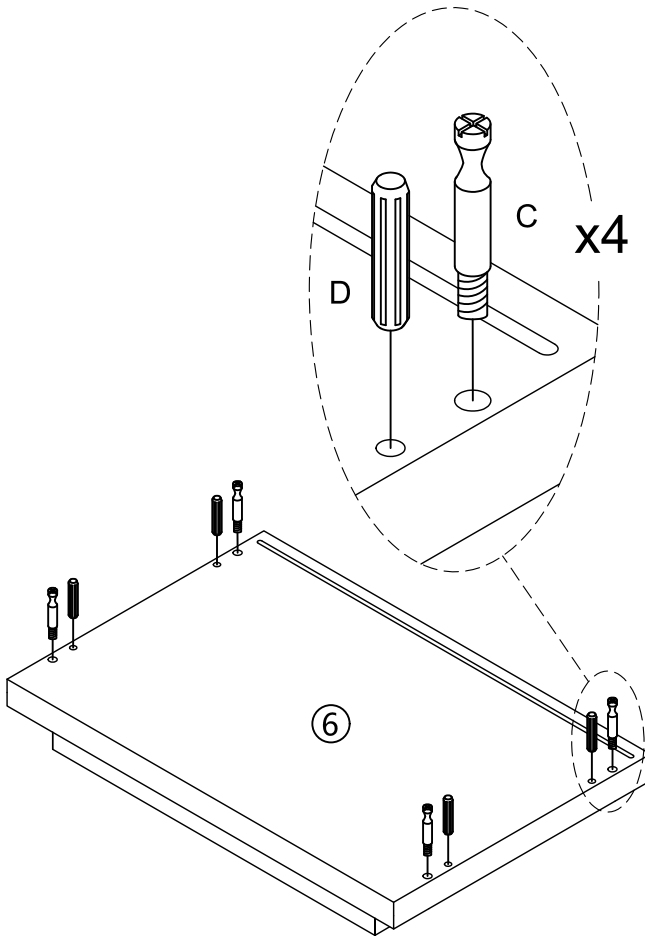


8

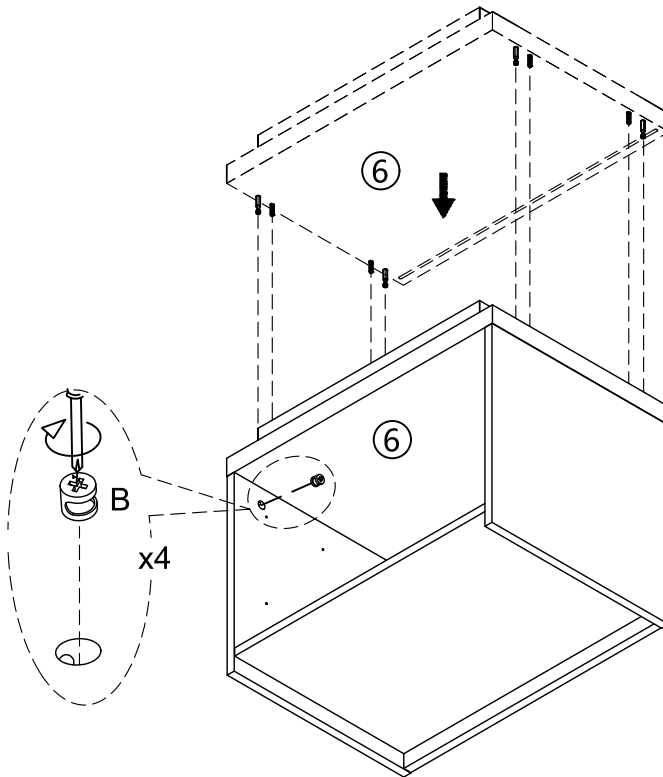

9

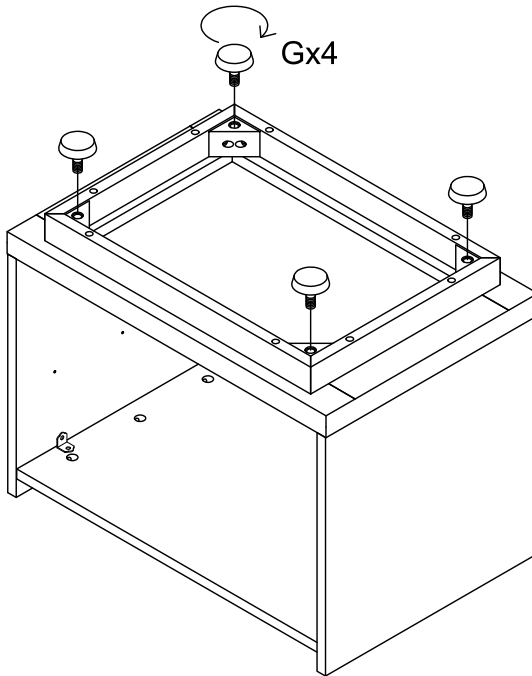


10

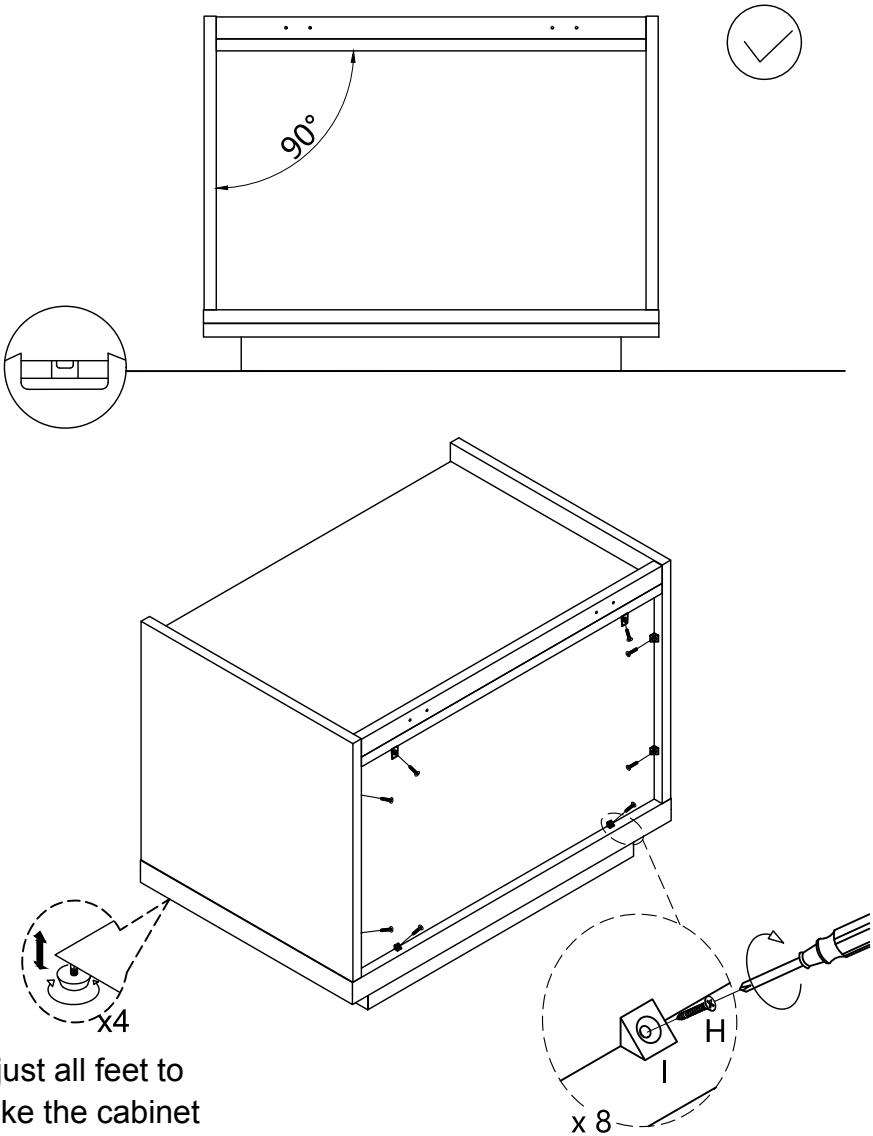


Adjust all feet to  
make the cabinet  
alignment

11


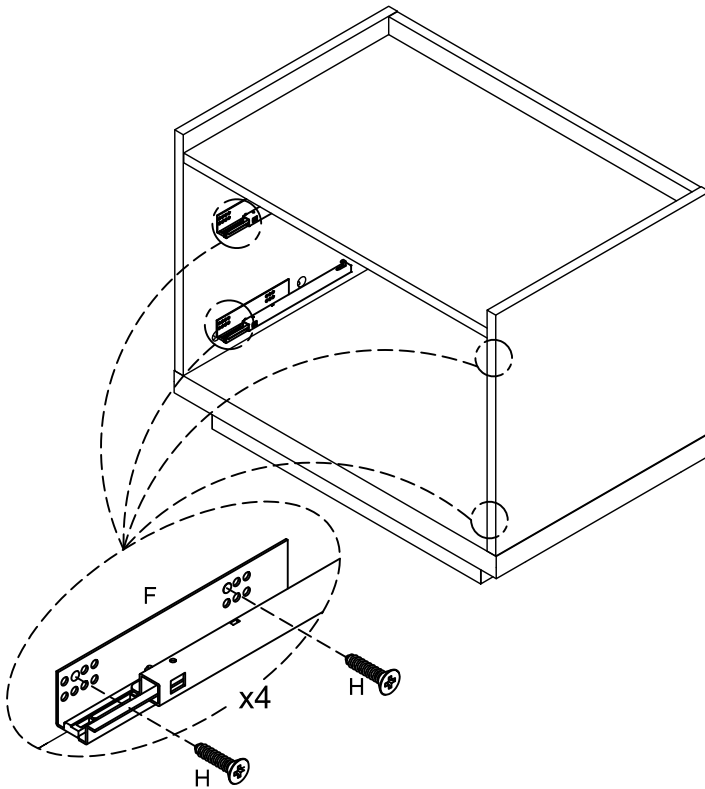





12

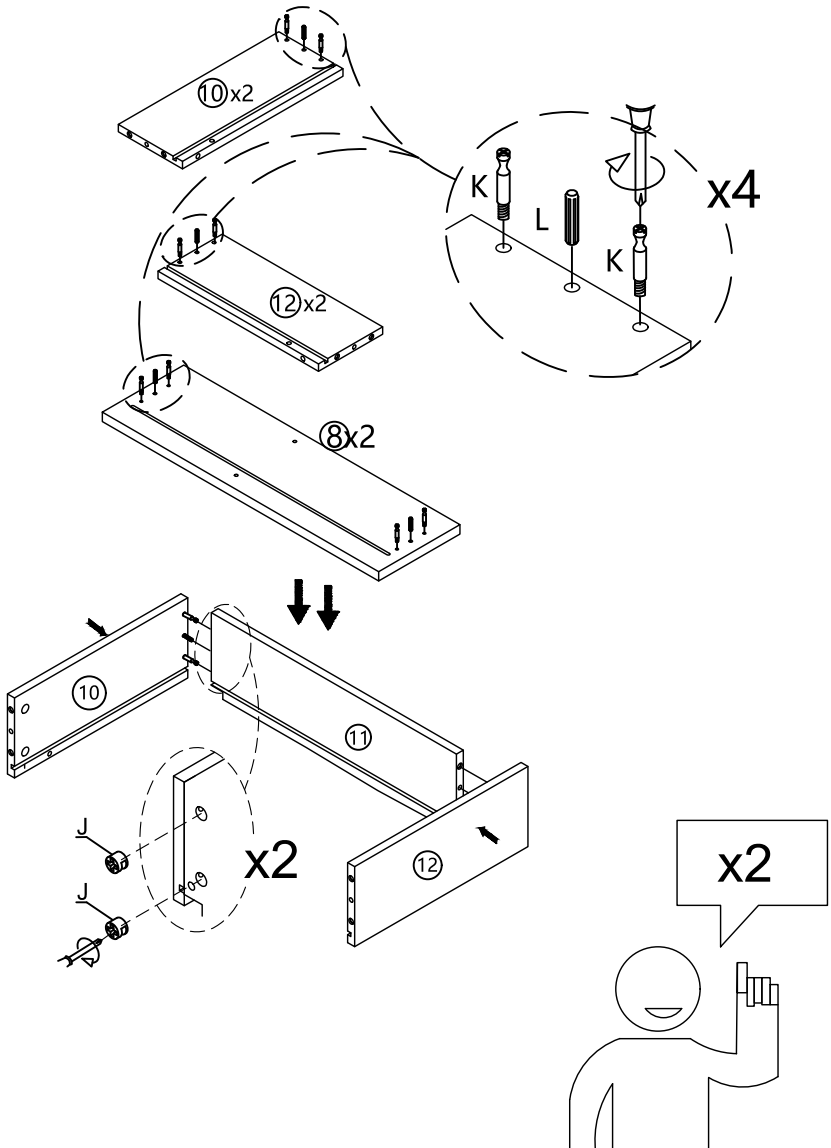


13

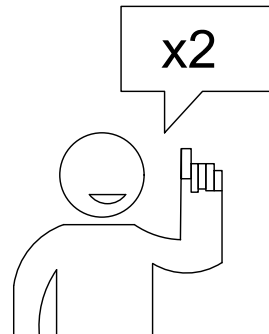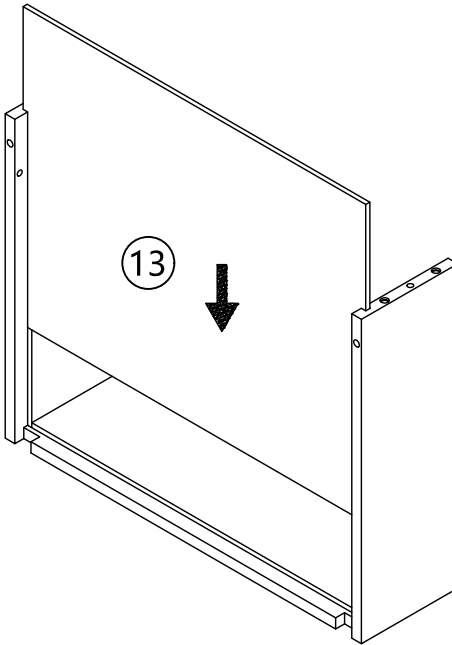


14

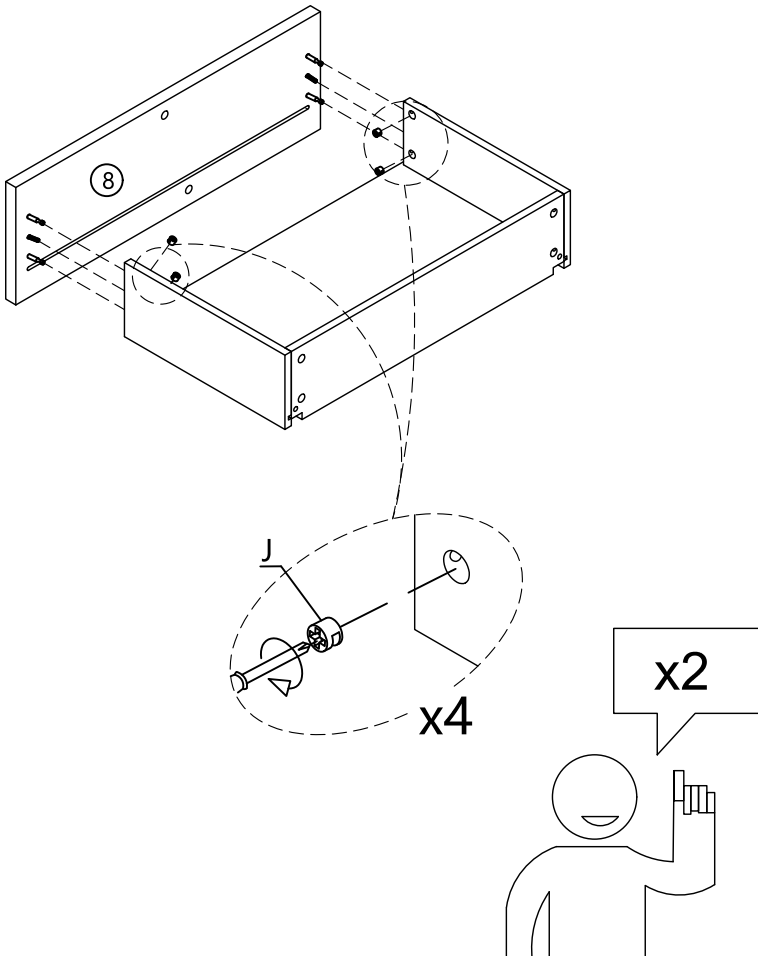


15

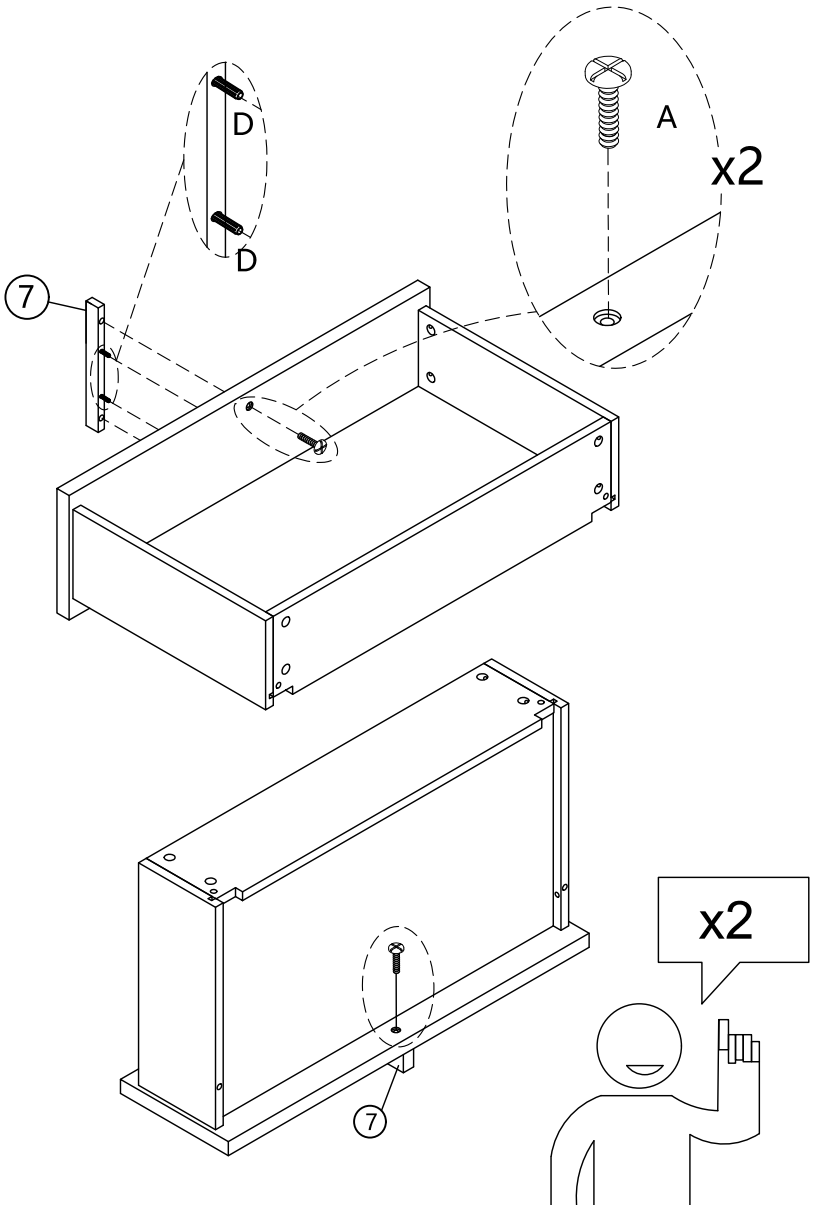


16

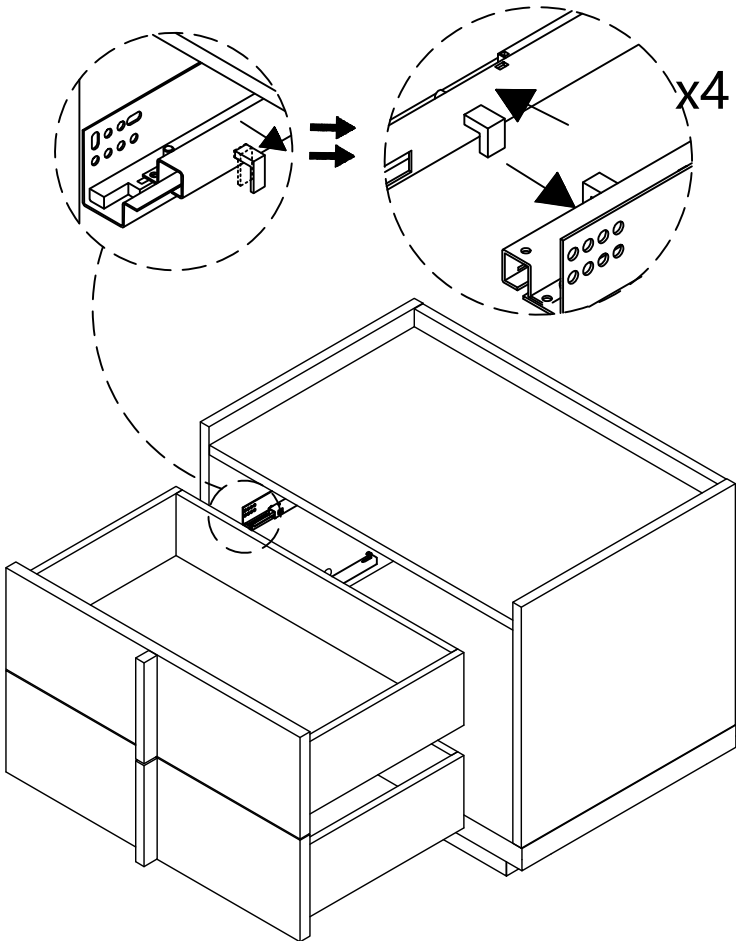


17

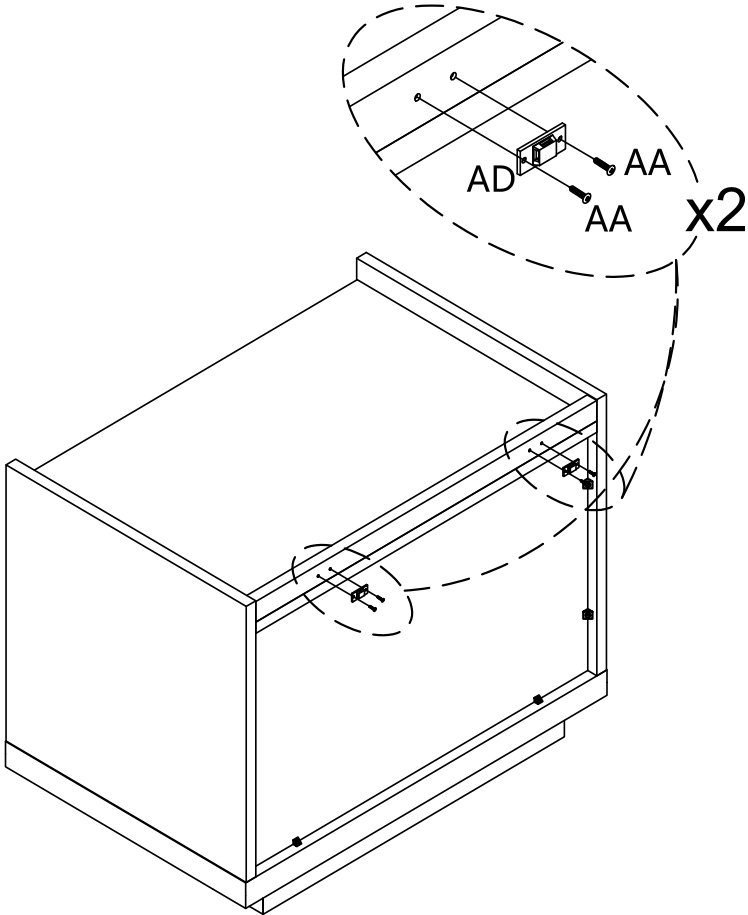



18

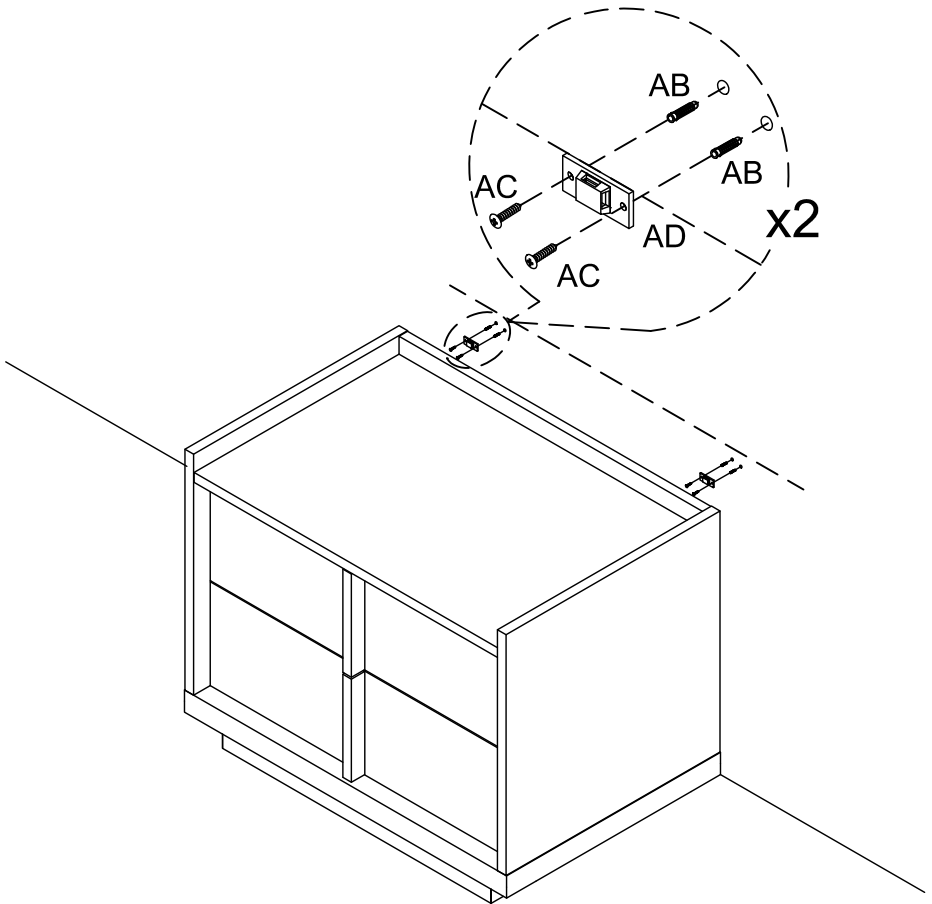

19

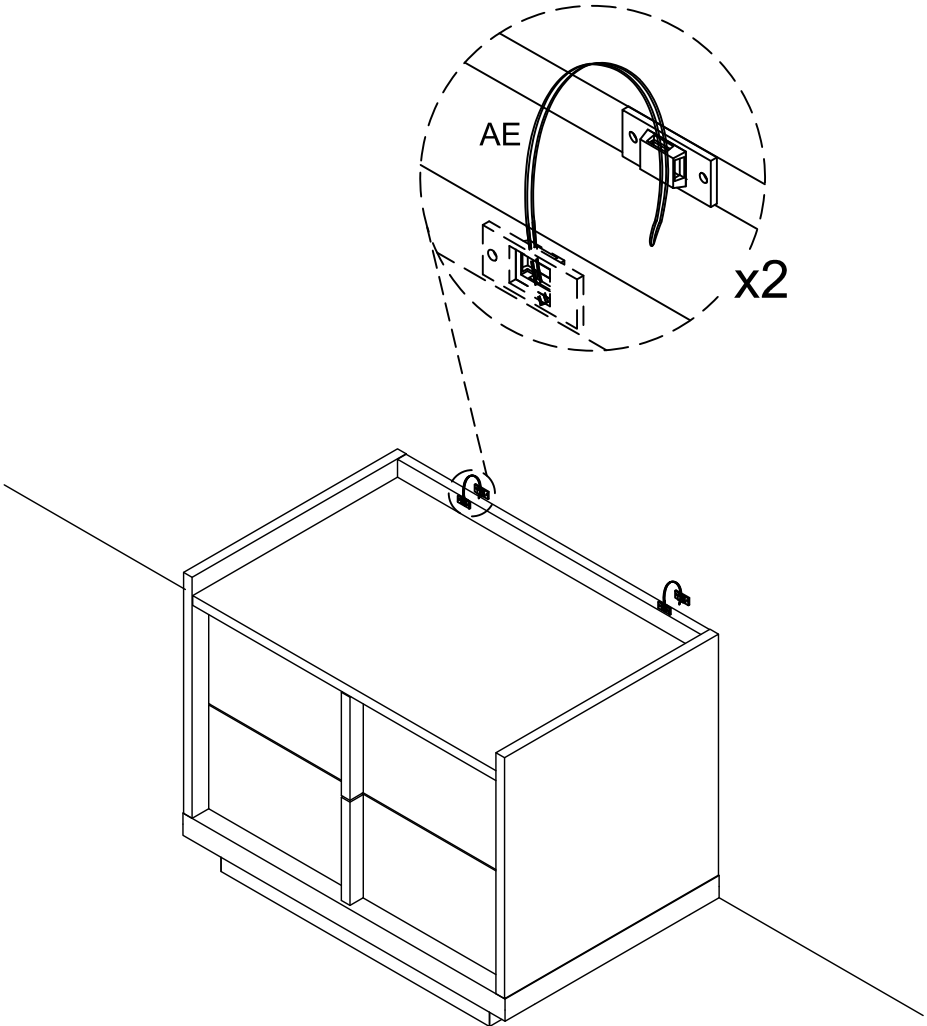



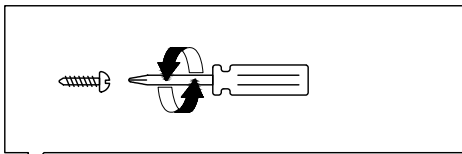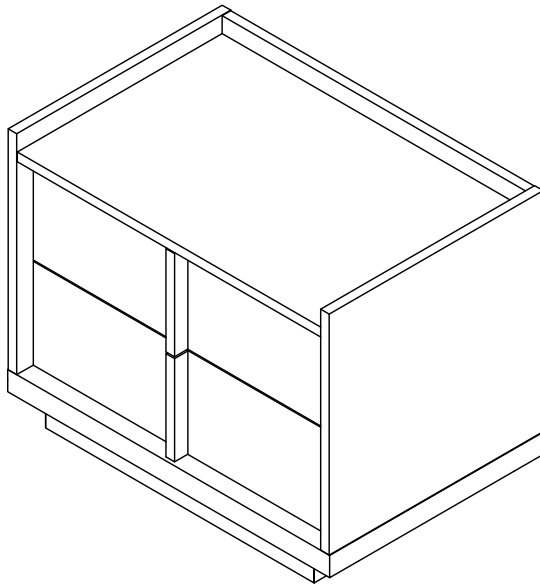







**THAT'S ALL FOLKS**

Share your style!

**#KaveHome**

