


6554

versionsnummer: 29.05.2025

Naturholz kann sich werkstoffbedingt verziehen. Durch das Montieren ziehen sich Teile wieder plan.

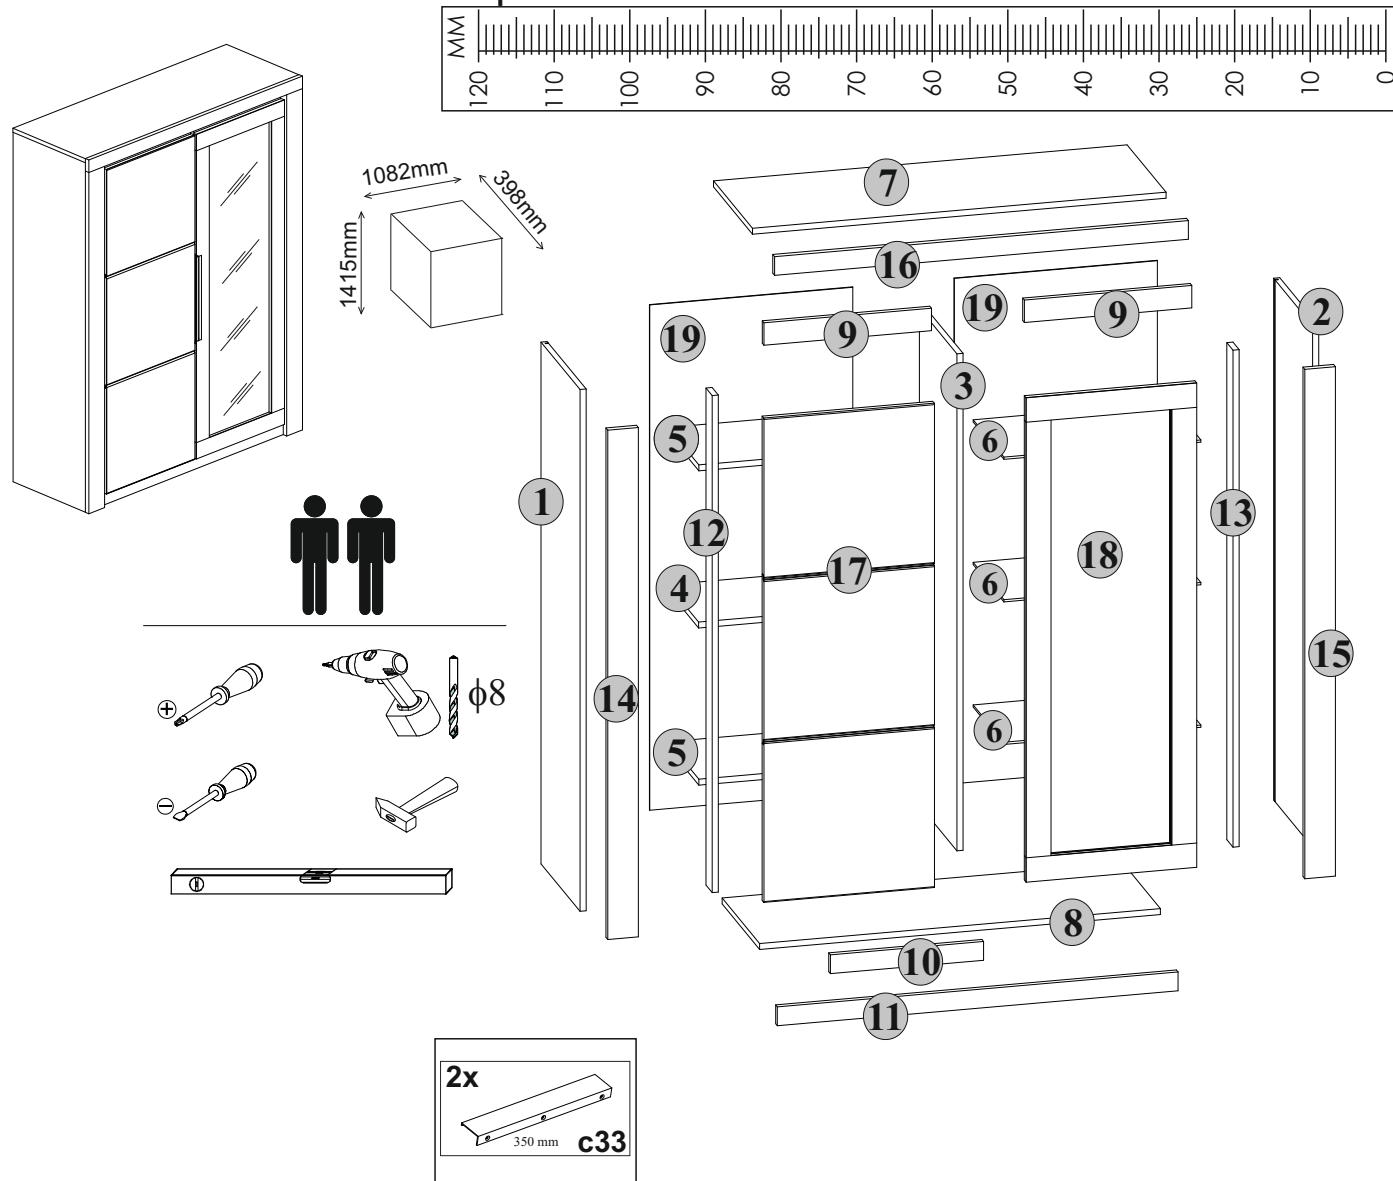









B1		B2		B3		B4
12x φ5x17 mm d3	48x φ15 #12.5 r1	2x φ6.5x50 mm e1		6x φ4.2x13 mm p38		
8x l2	8x k1	2x s1		6x l9	18x φ3.5x13 mm p1	
48x s2	8x φ5x17 mm d1	30x φ8x30 mm f1	10x 1x16 l1	6x φ4x30 mm p9	6x φ2x20 mm p27	
46x r16	2x r24	1x z1	1x φ8x50 mm f6	6x n27	6x φ6.3x13 mm e3	
						6x b1
						6x a2

I

16x
φ8x30 mm
f1



12x
r16

26x
φ15 #12.5
r1

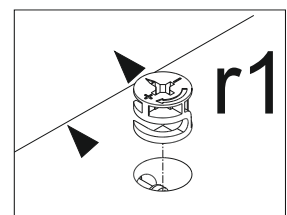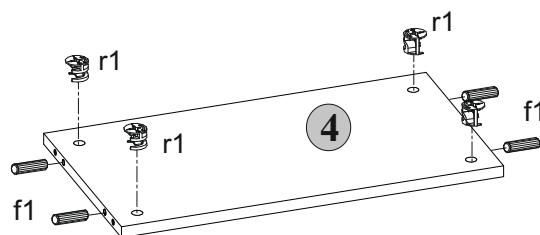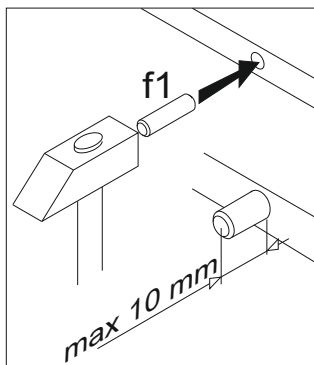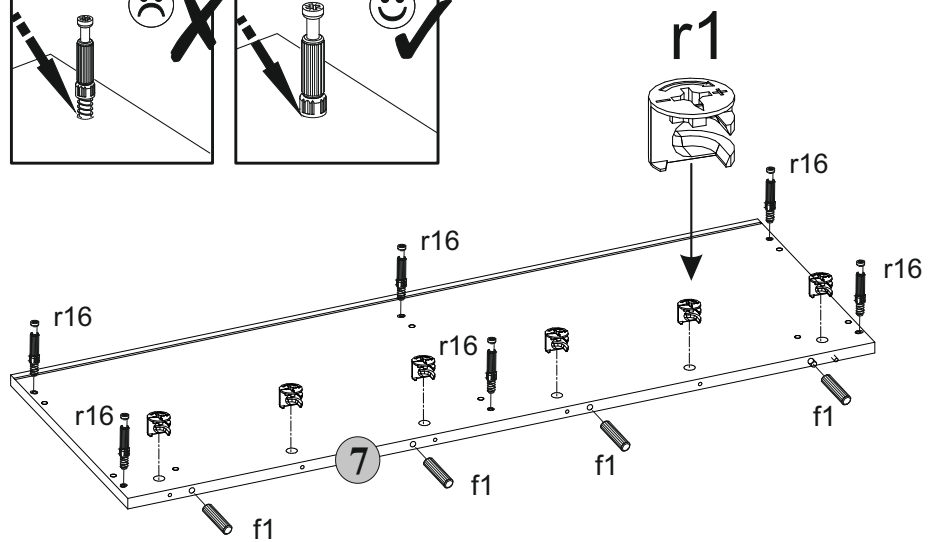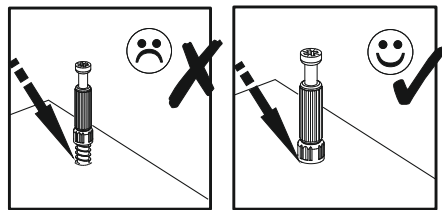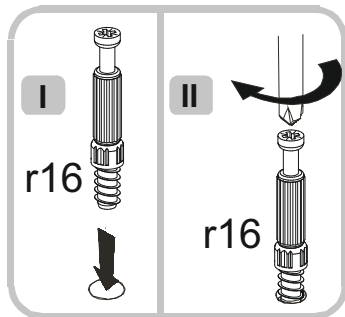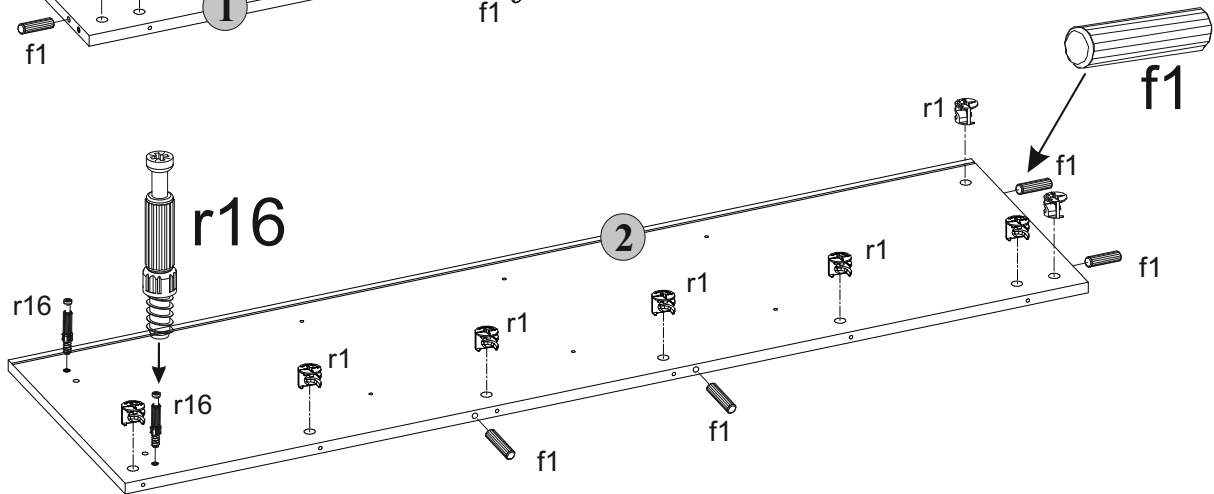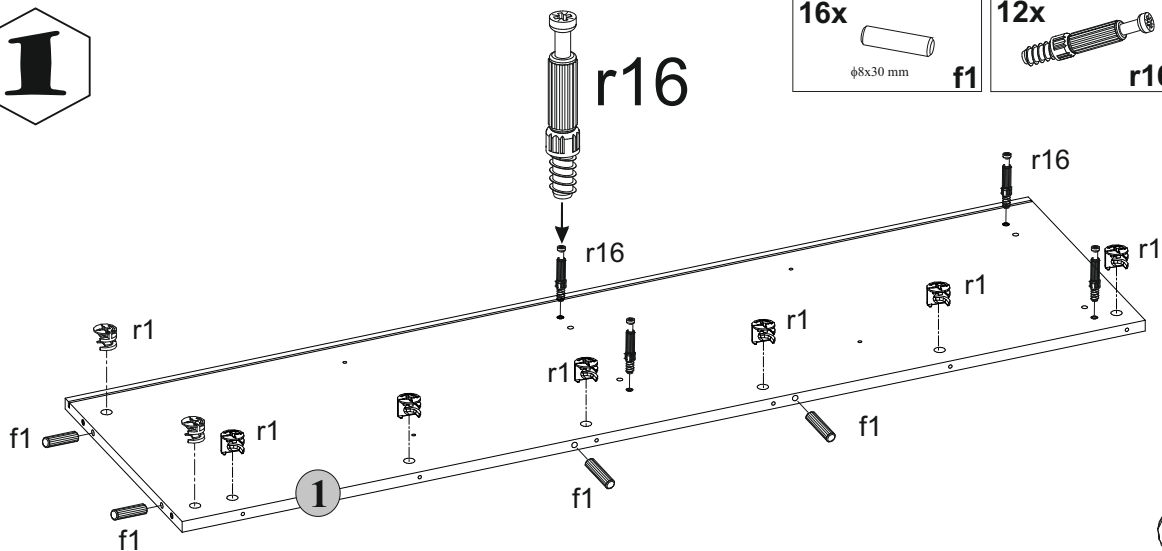

2

2




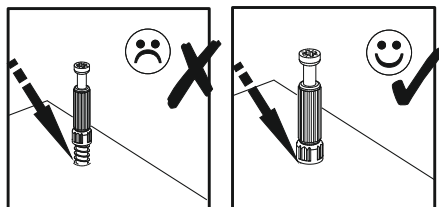
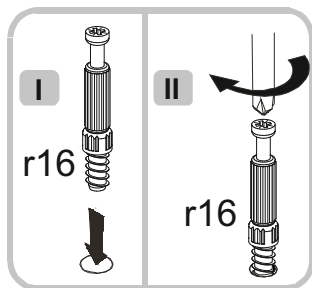


8x
 $\phi 15 \#12.5$ r1

10x
 r16

8x
 $\phi 8 \times 30 \text{ mm}$ f1

2x
 r24

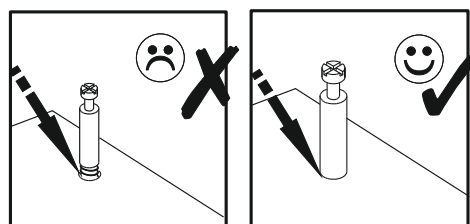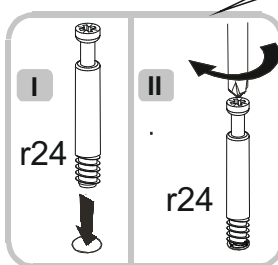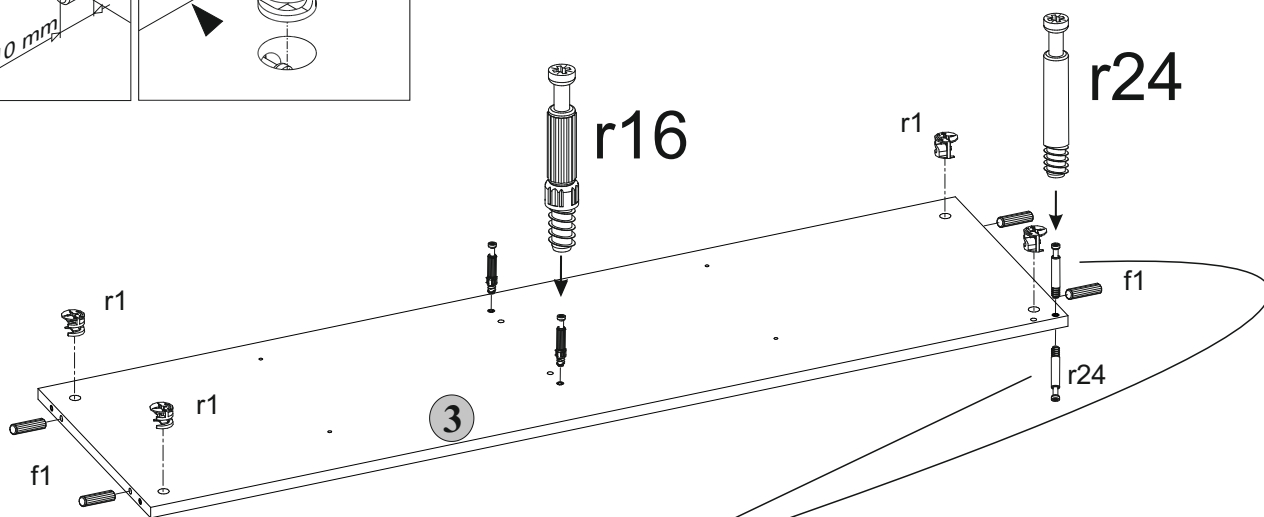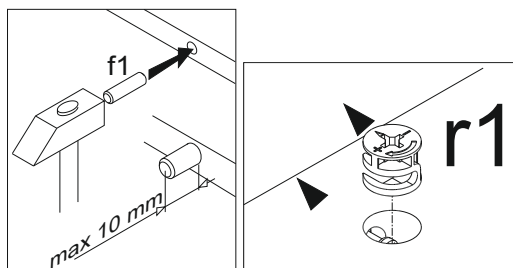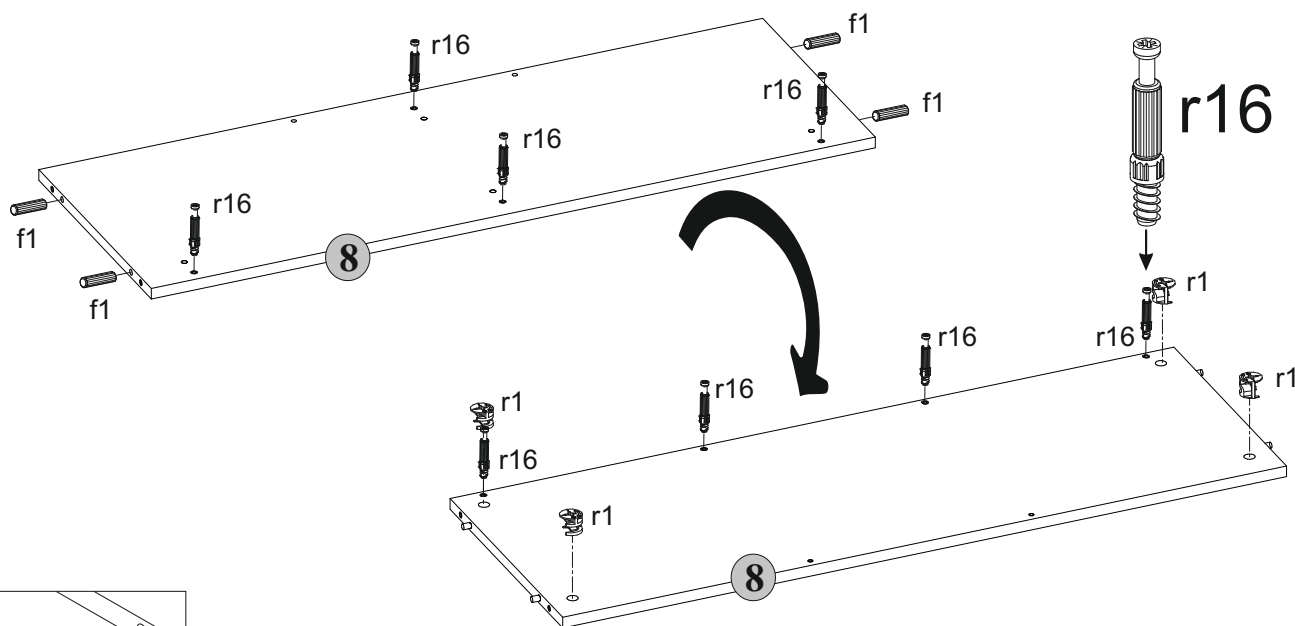








3

3

22x
r16


12x
r1
φ15 #12.5

2x
f1
φ8x30 mm

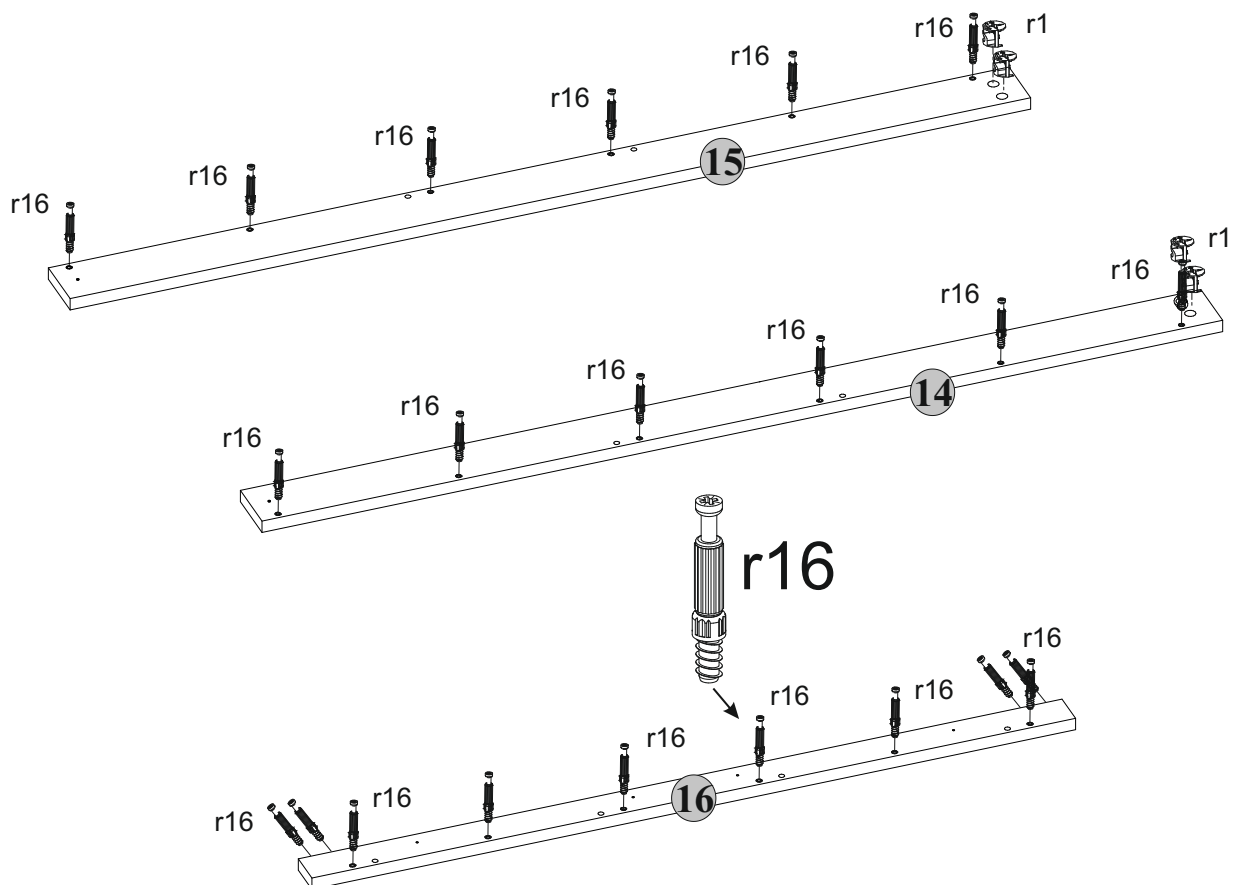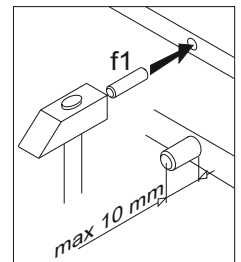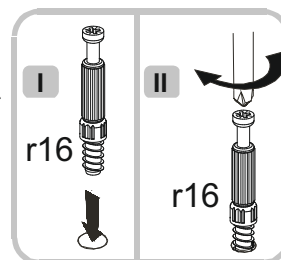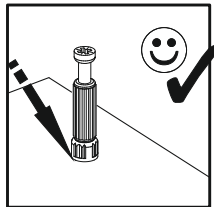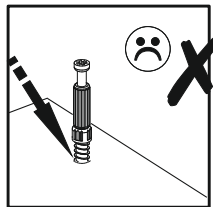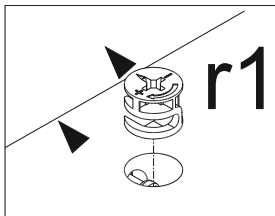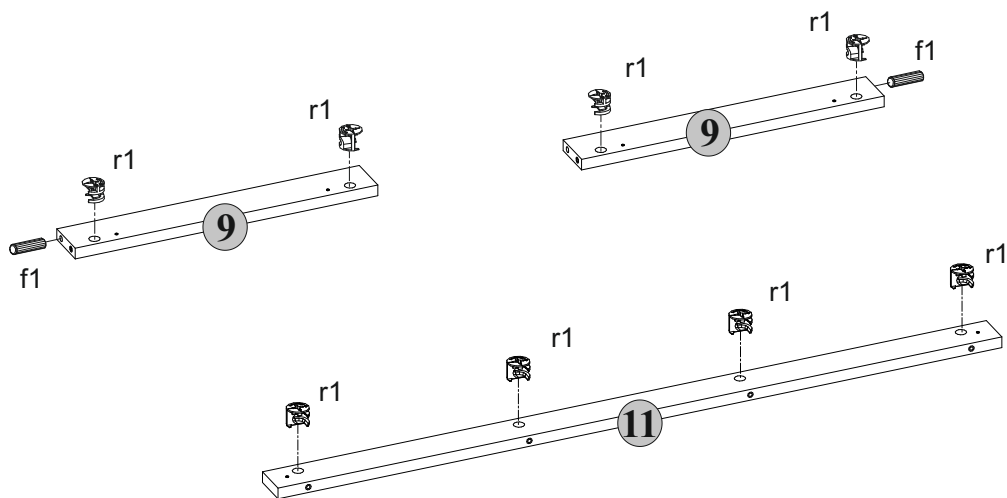


4

4




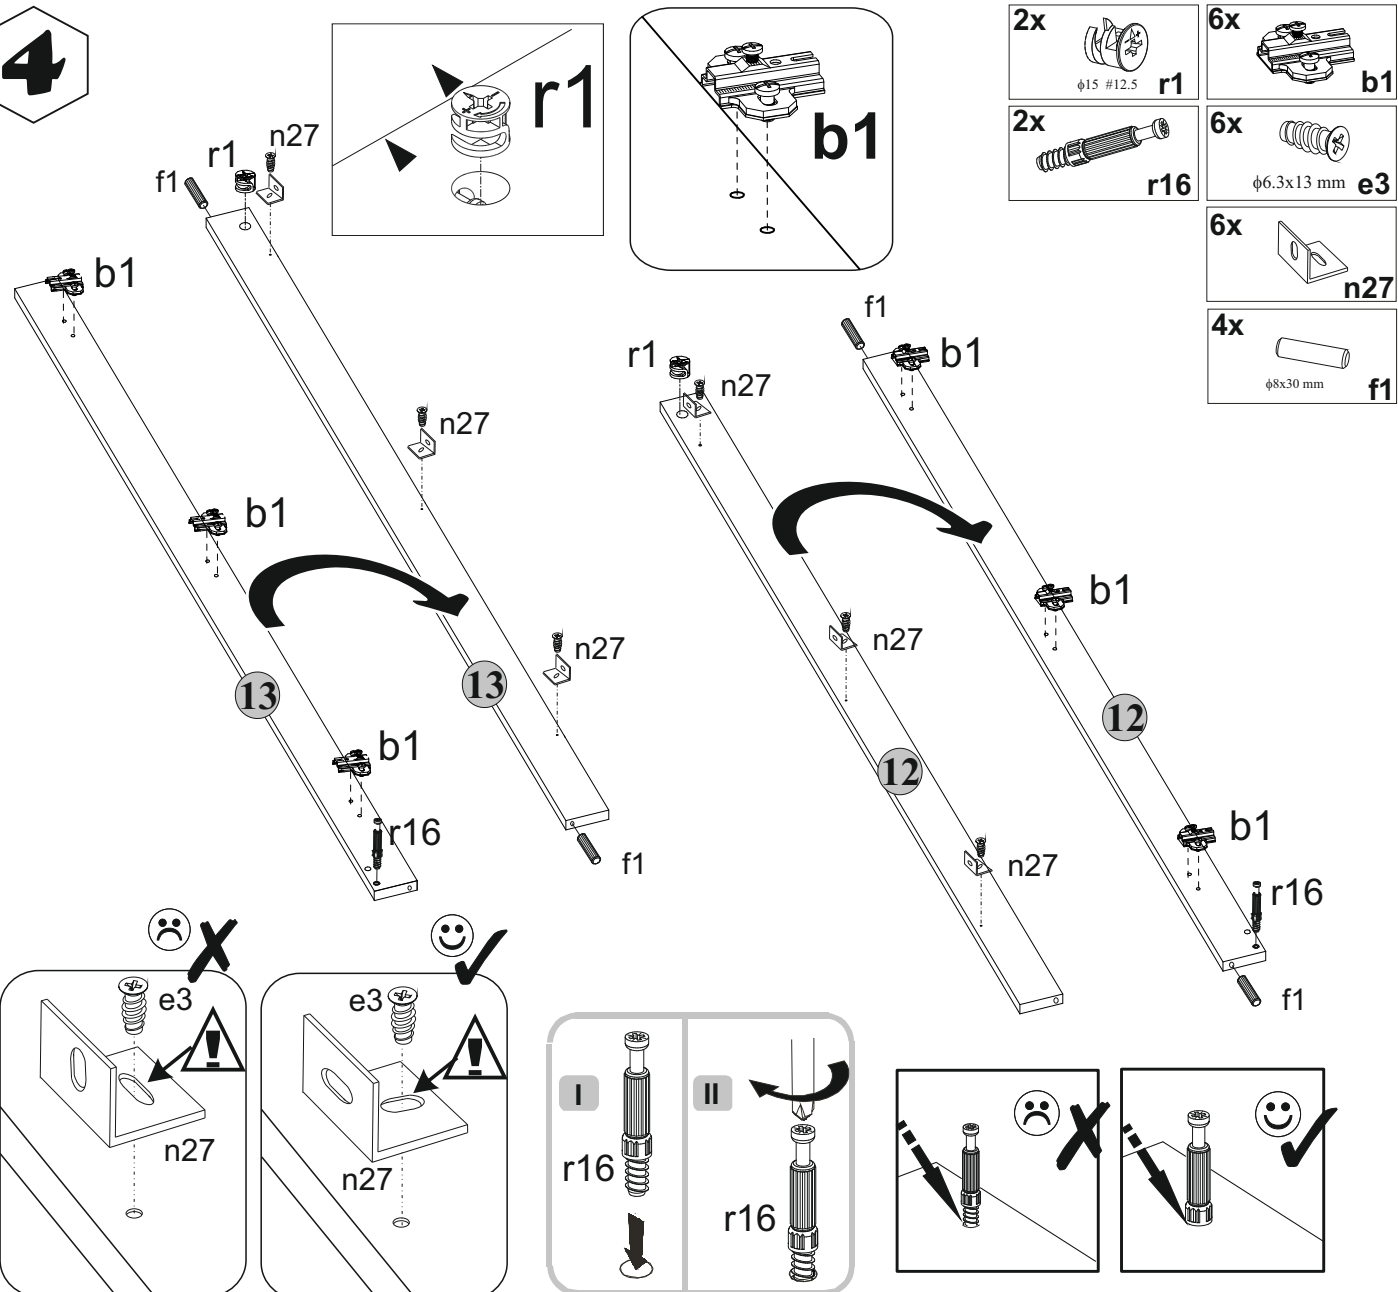


5






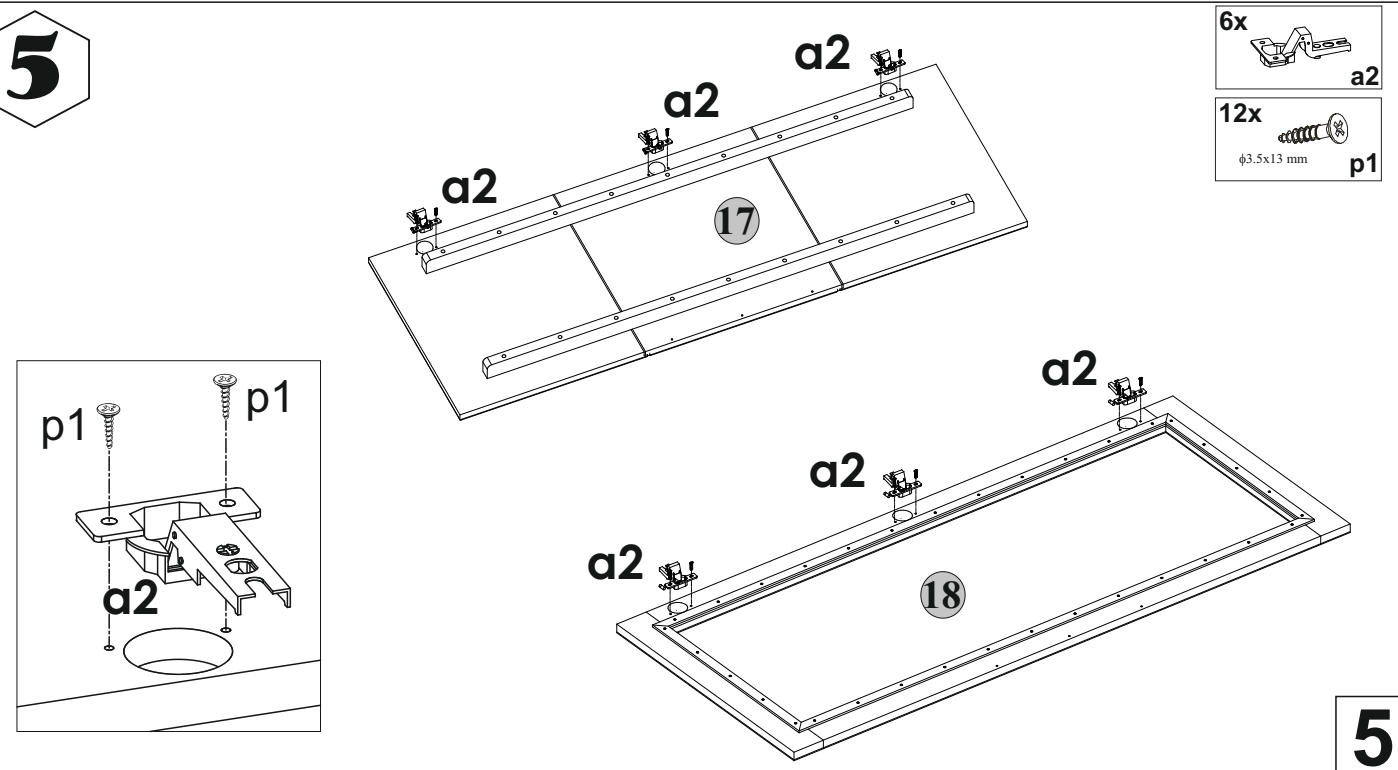


5



6

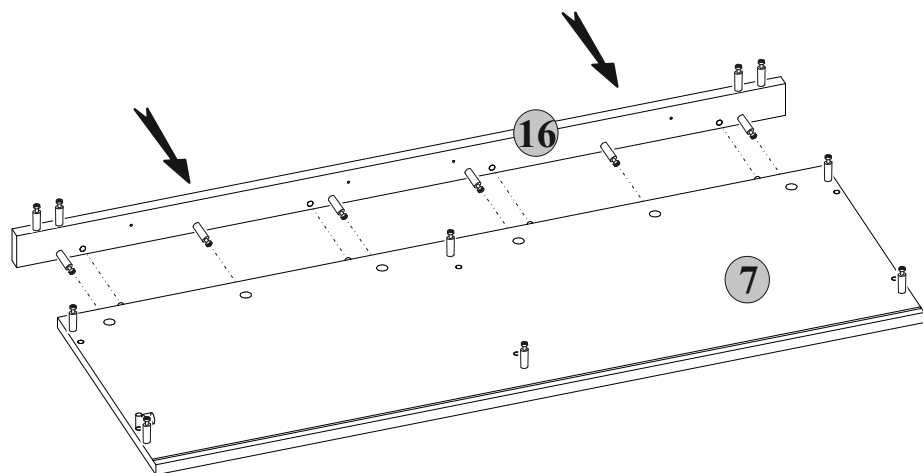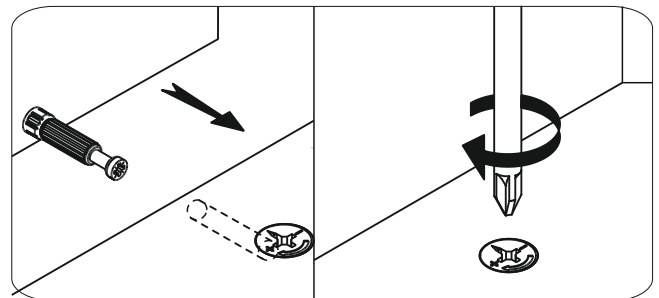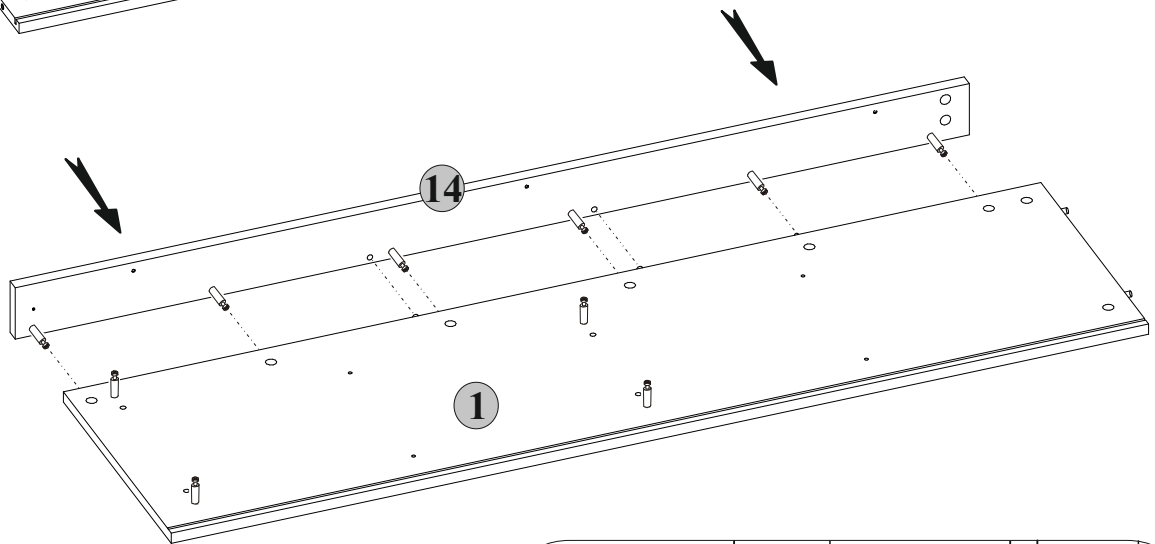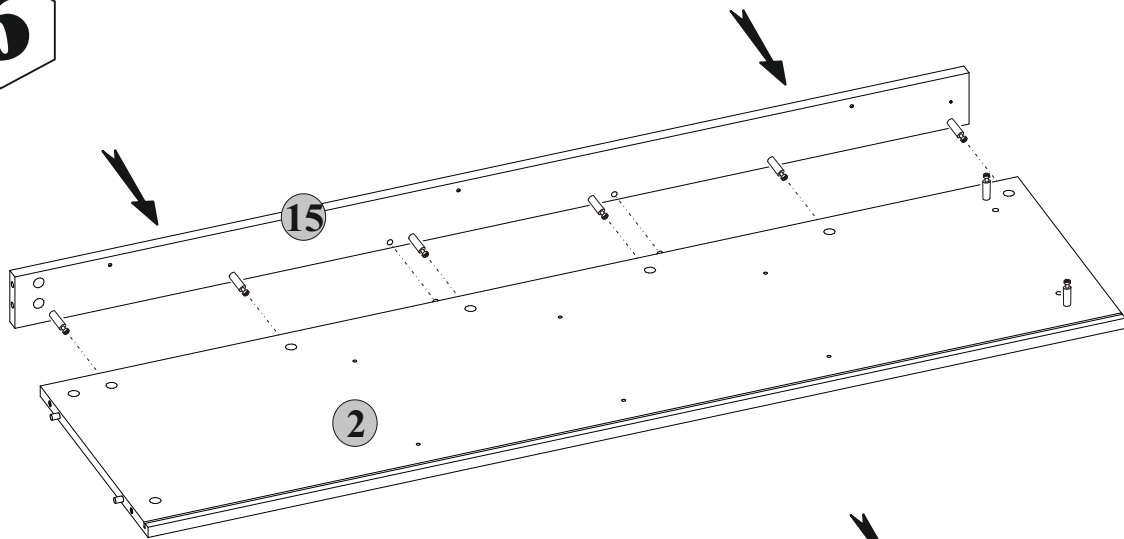

7

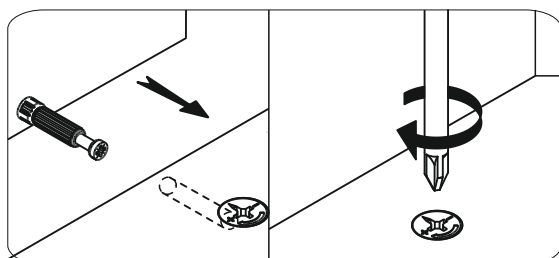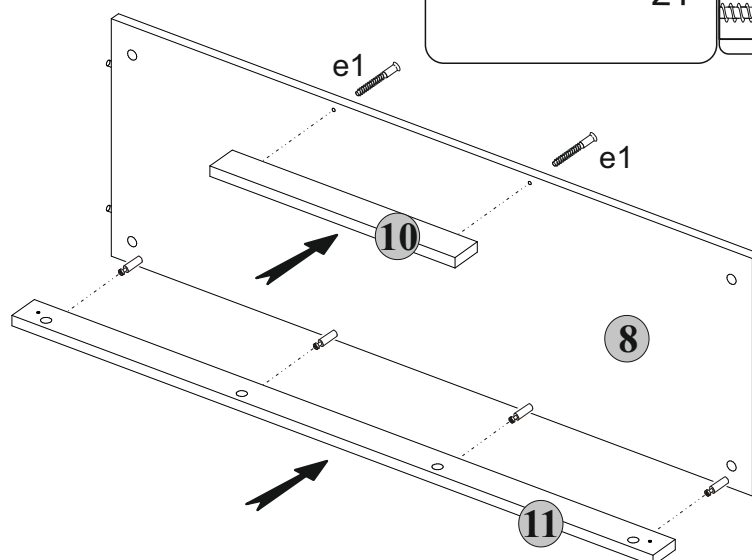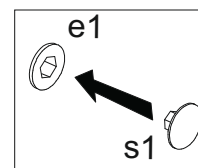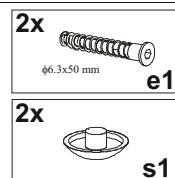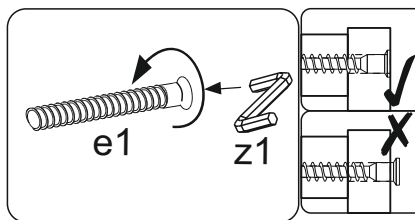


8

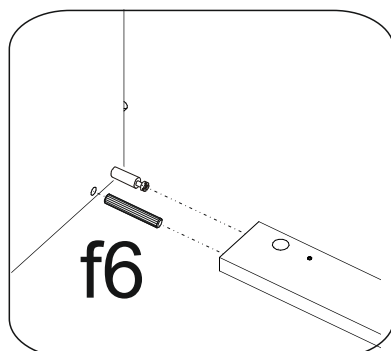
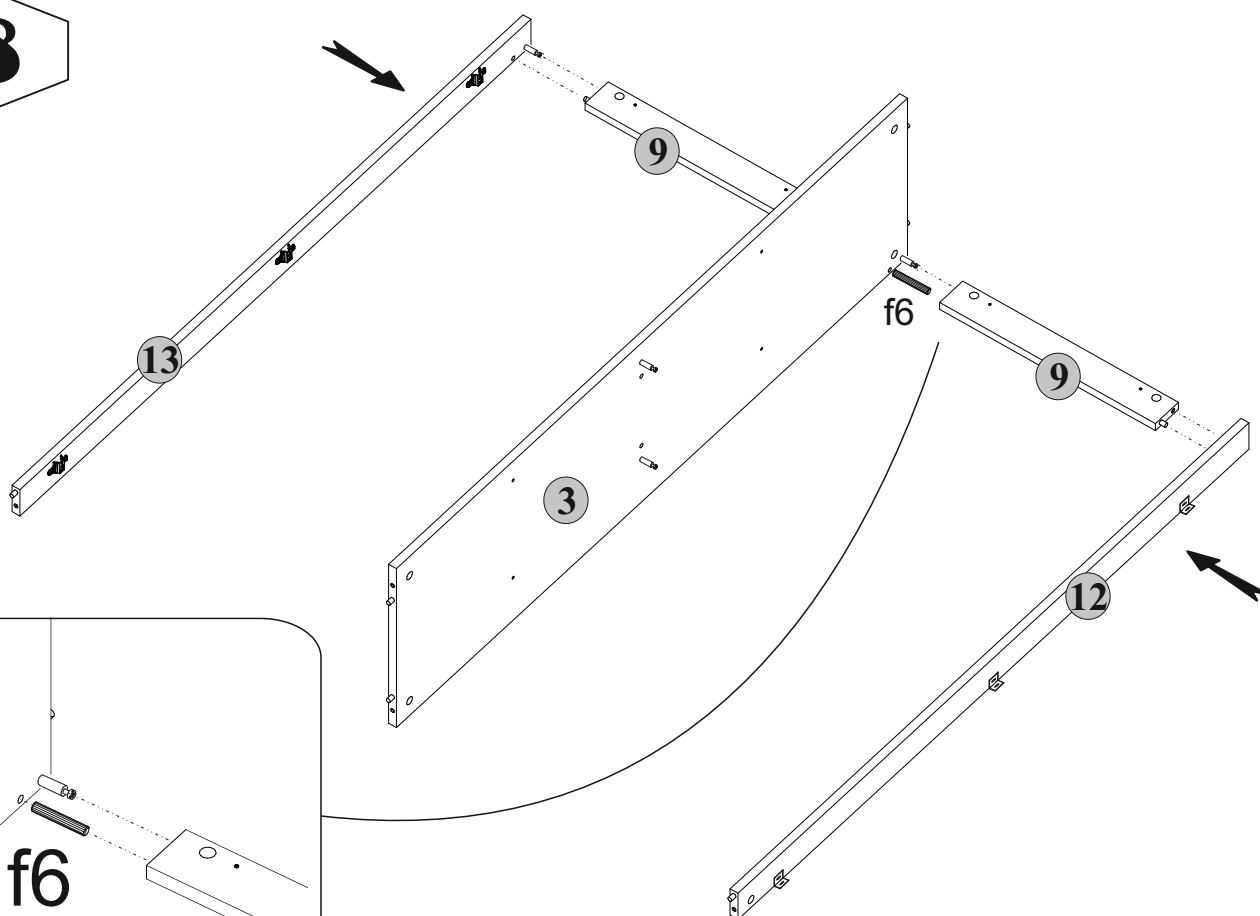


7

9


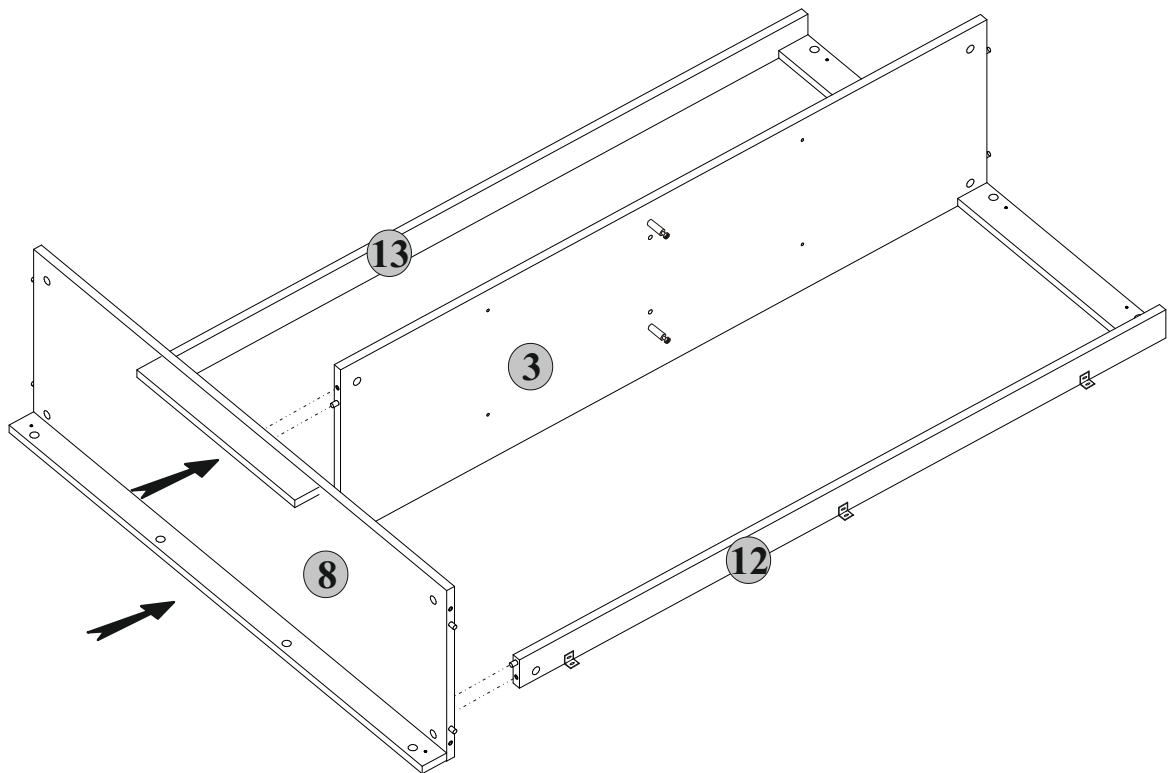


10





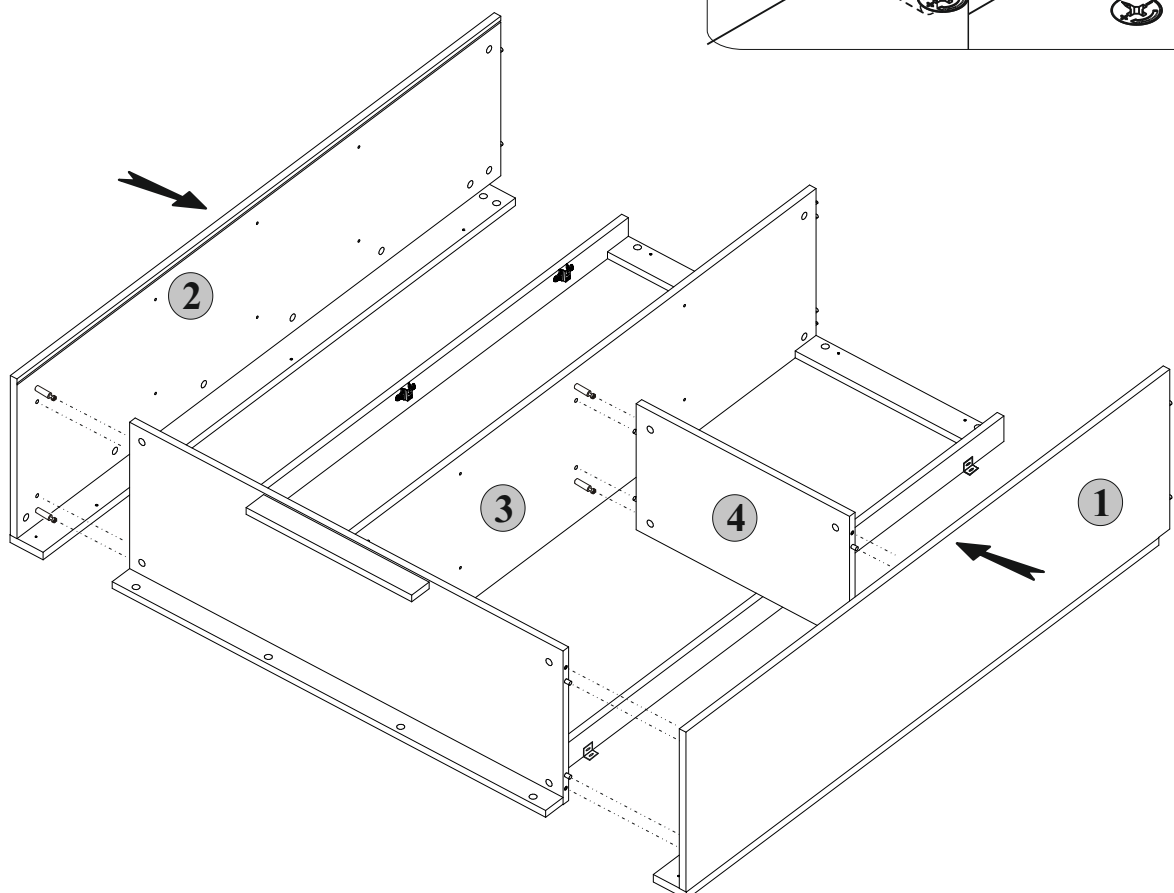
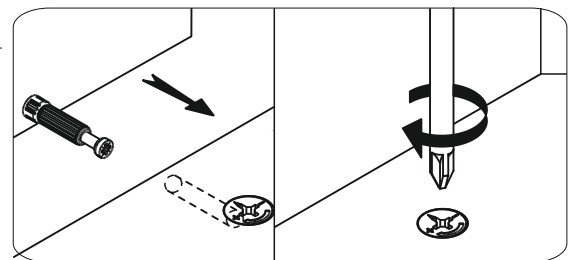


8

11

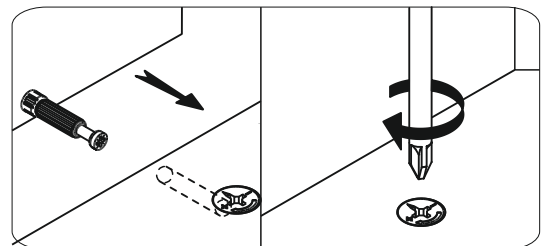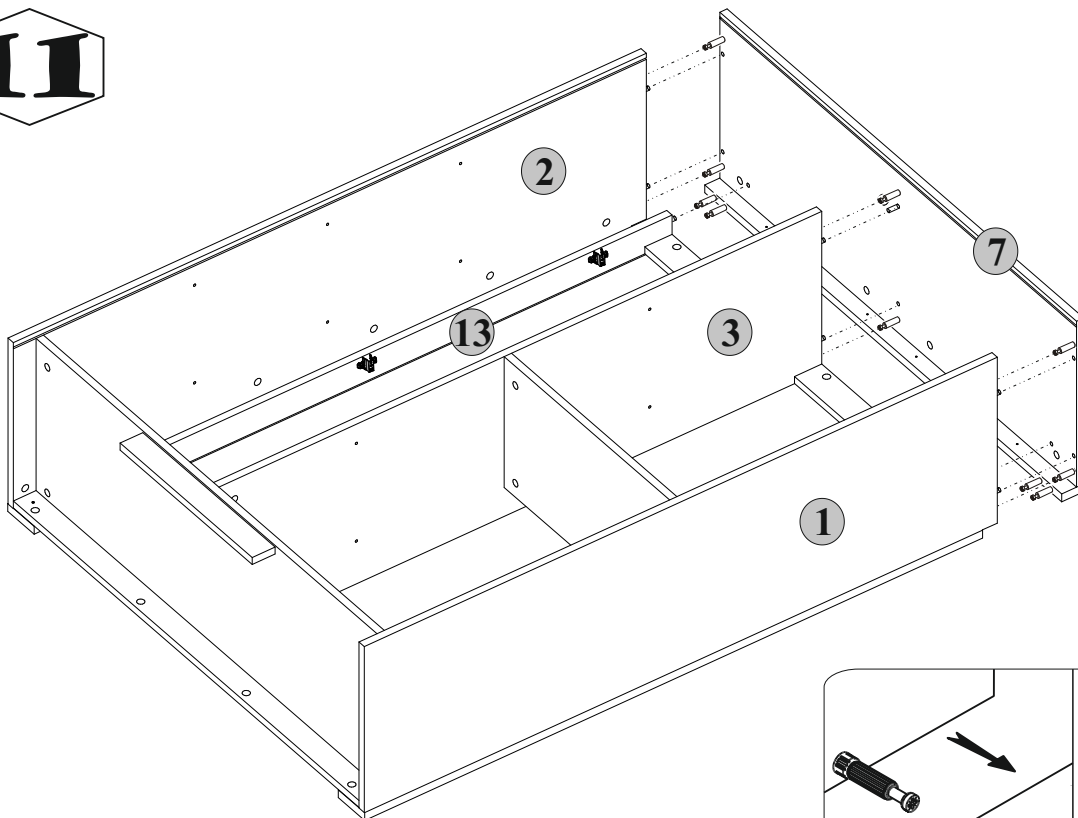

12

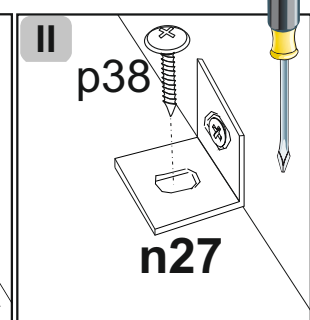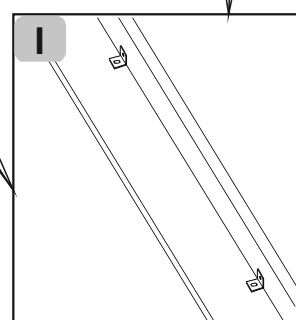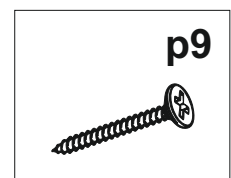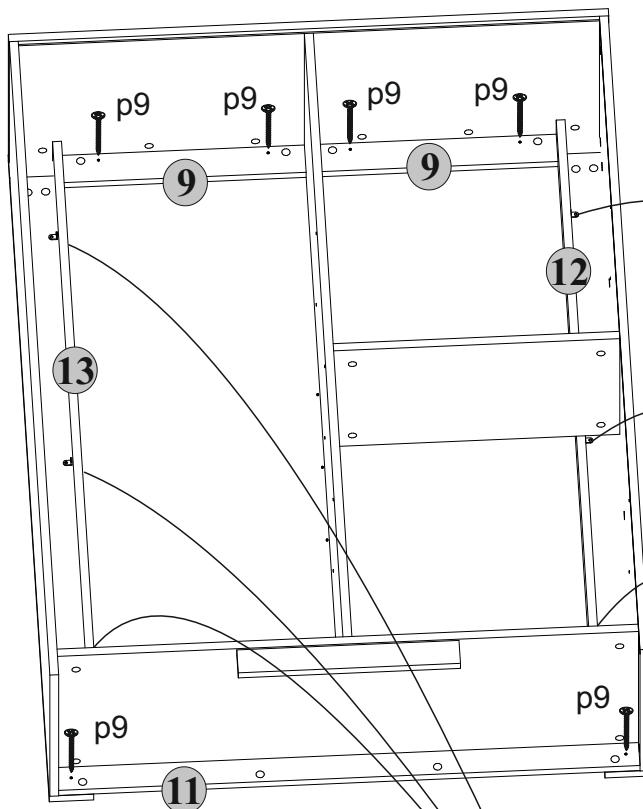

9

13

6x



p27
φ25/20 mm

8x



k1

6x



l9

10x




l1


8x





l2

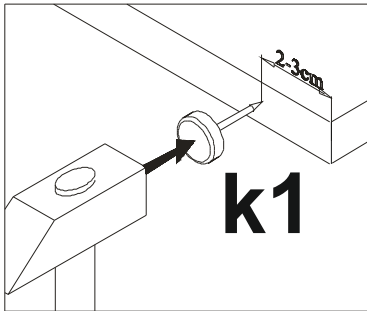

k1

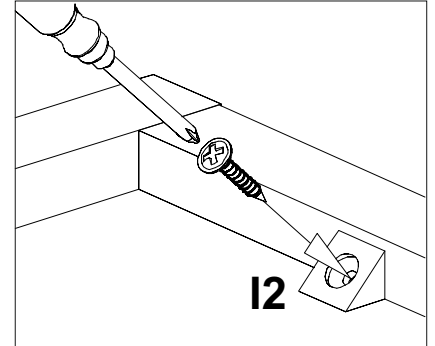


l2

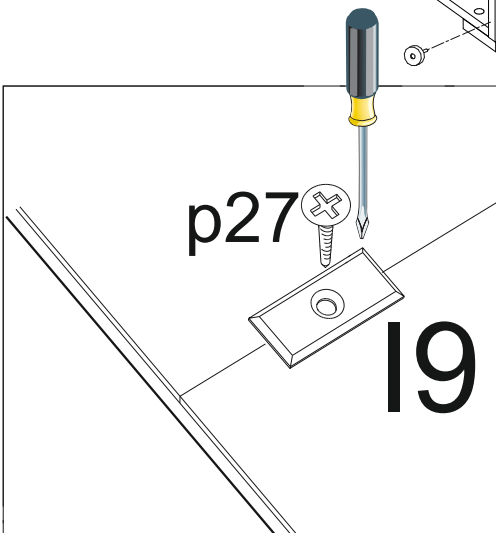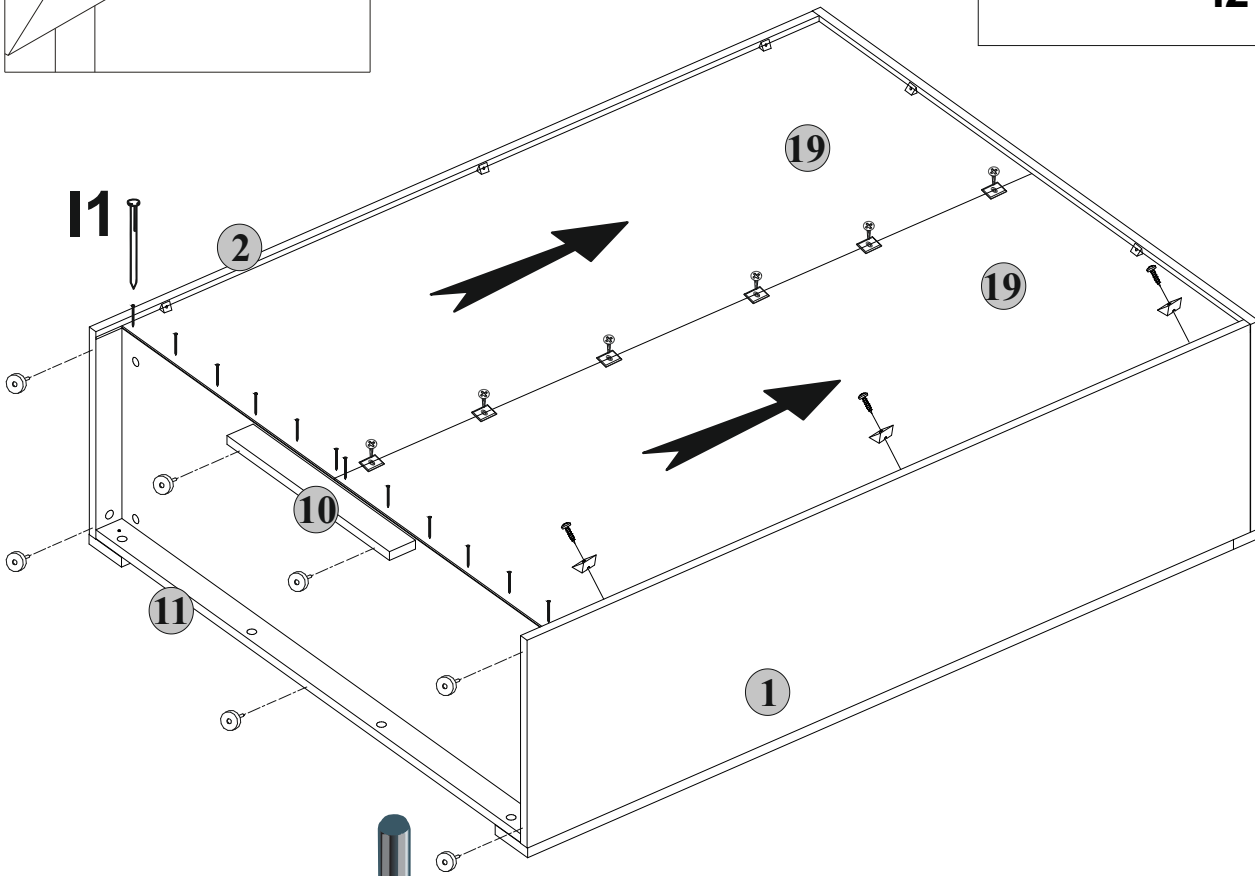


p27




l9

10

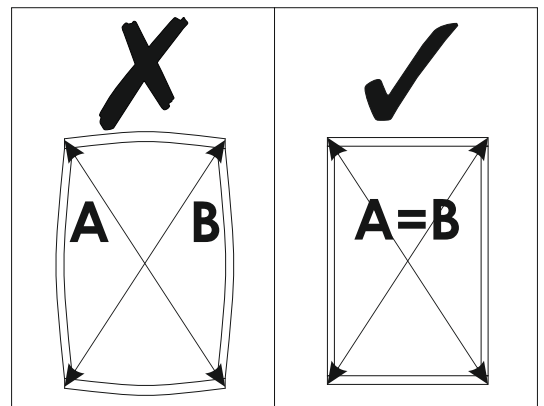





14

6x  $\phi 3.5 \times 13 \text{ mm}$ p1
2x  350 mm c33

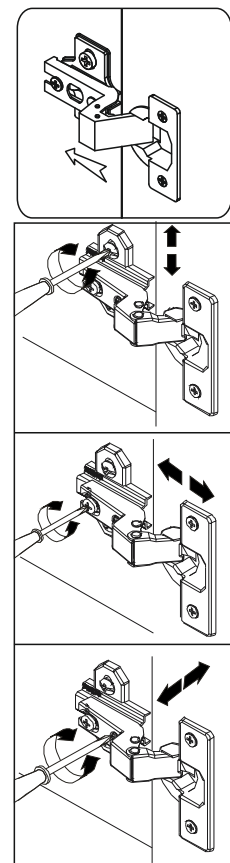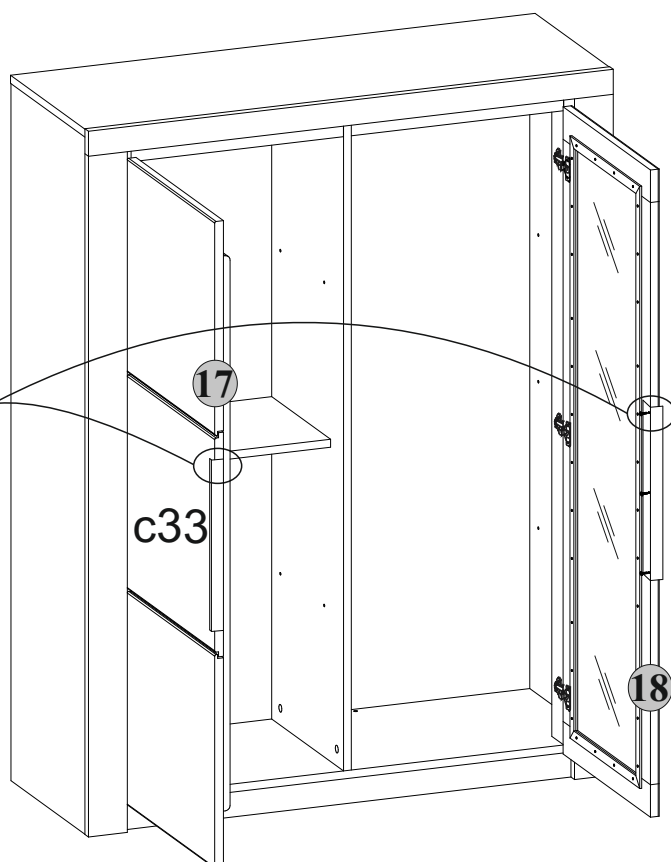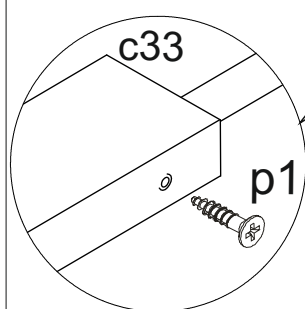

15

12x  $\phi 5 \times 17 \text{ mm}$ d3
8x  $\phi 5 \times 17 \text{ mm}$ d1
48x  s2

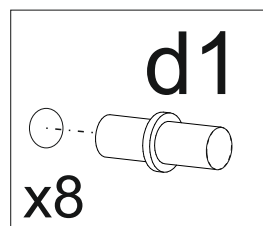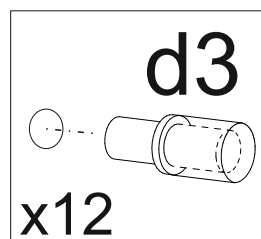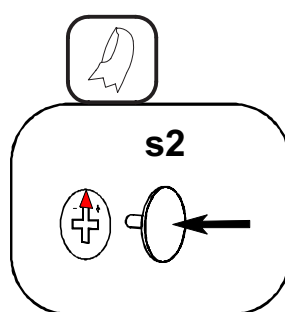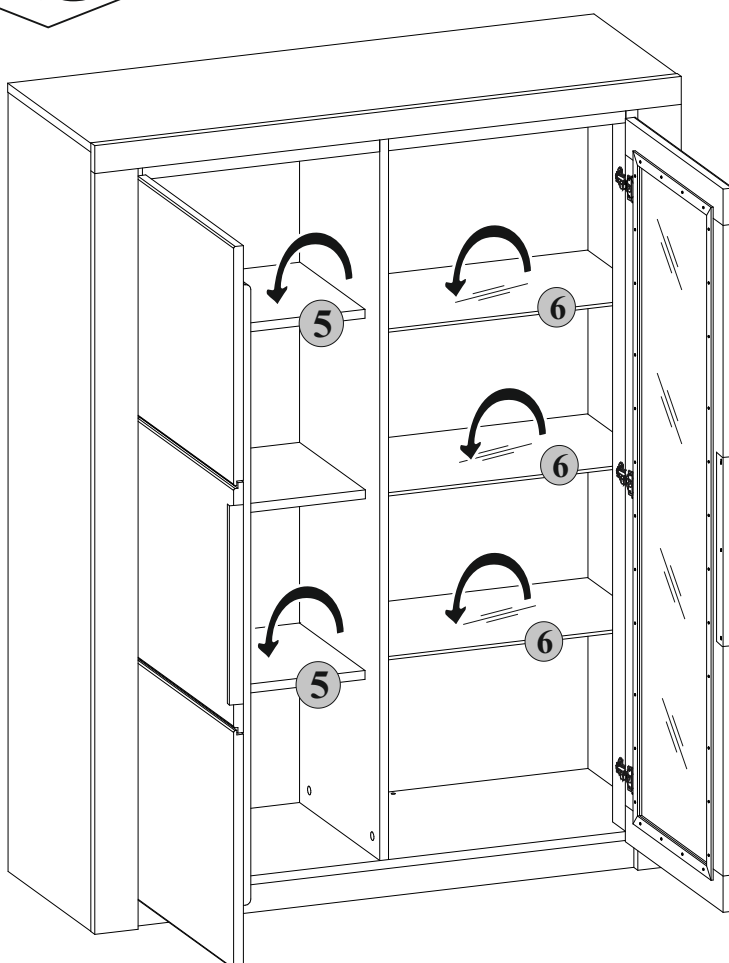

11