










JAPAN




ARMCHAIR


 30mn	 
4x 	1x 
12x 	4  1x

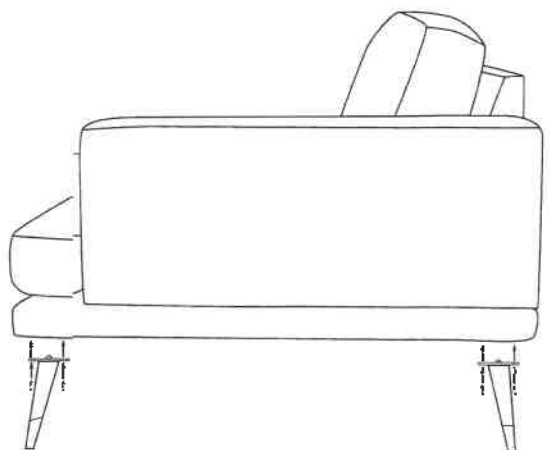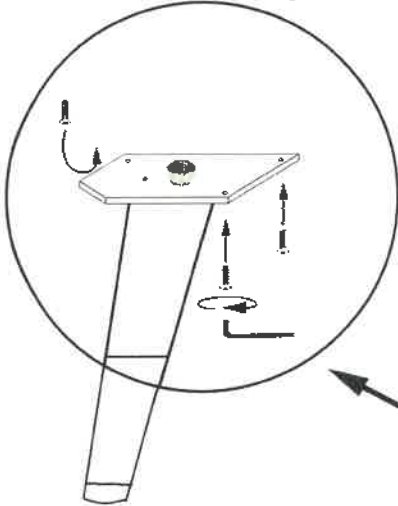


NB! First turn all 3 screws half way by hand and then continue with the Allen key.

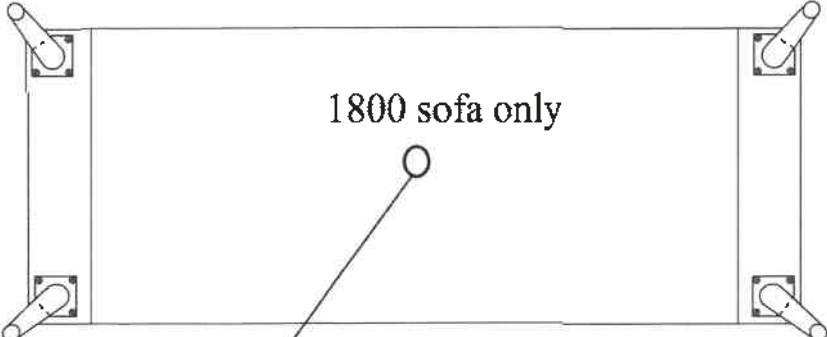

1800 sofa only

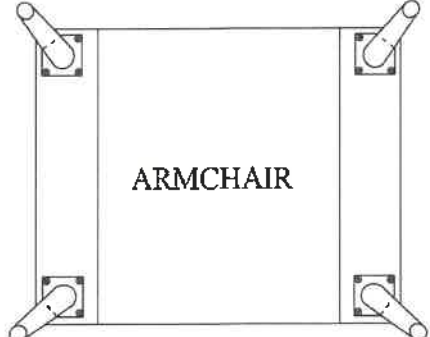

ARMCHAIR

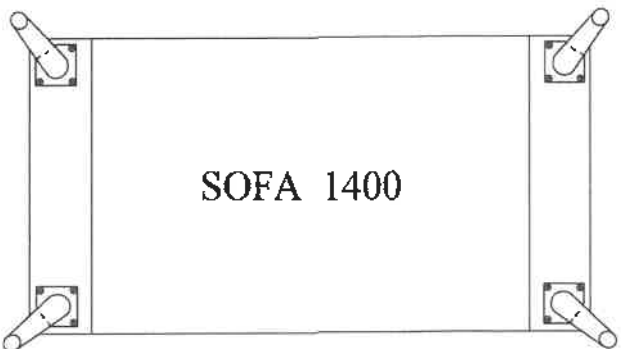

SOFA 1400

